




Energy Upstream

Harmony Enterprise™ 2019.3 Help – PDF

Last revised: January 28, 2020



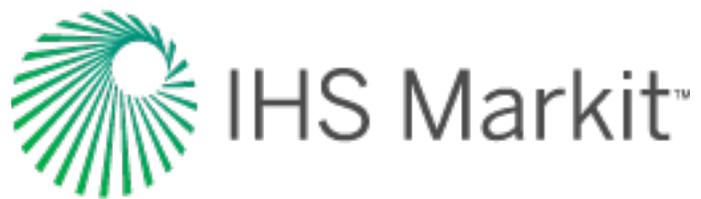

Copyright

© 1997 - 2020, IHS Markit and its affiliated and subsidiary companies, all rights reserved. No portion of this publication may be reproduced, reused, or otherwise distributed in any form without prior written consent of IHS Markit.

Trademarks

IHS Markit and the IHS Markit logo are trademarks of IHS Markit. Other trademarks appearing in this publication are the property of IHS Markit or their respective owners.

IHS Markit Global Headquarters

4th floor Ropemaker Place
25 Ropemaker Street
London EC2Y 9LY

Table of contents

About Harmony Enterprise™ 2019.3	53
Overview	54
Release notes	55
Harmony Enterprise 2019.3 Release Notes	55
Introducing Harmony Analytics	55
Trend ratios to forecast secondary fluids	55
Import enhancements	55
Introducing Harmony Optimize	56
Enhancements for multi-well models	56
Bulk rename analyses and worksheets	57
Typewell enhancements	57
Export and merge reserve analyses	57
End Date consistency in linked declines	57
Installer command line options	57
Resolved issues from Harmony Enterprise 2019.2	58
Harmony Enterprise 2019.2 Release Notes	58
Enhancements for Multi-well models	58
Performance improvements	58
Enhancements to deployment utilities	59
New role-based permission: Modify Editors	59
Model a destructive refrac	60
Typewell analysis linking	60
Condensate decline analysis	60
Eliminated the limit on number of custom calculated datasets	60
Comparison plot includes the source name	60
Liquid ratio units have been added for custom datasets	60



Resolved issues from Harmony Enterprise 2019.1	60
Harmony Enterprise 2019.1 Release Notes	61
Identify forecasts deviating from production	61
Restrict well access by group / user	61
Enhancements to the Unconventional Multi-well model	61
Interoperability with WellTest 2012v3 and later	62
Oil Material Balance	62
Import static pressures	62
Reduce data resolution during import	63
Globally specify defaults units	63
Specify classification consolidation aggregation behavior	63
Consolidate custom input attributes	63
Resolved Issues from Harmony Enterprise 2018.3	63
Harmony Enterprise 2018.3 Release Notes	64
Scenarios	64
Unconventional Multi-well model (beta)	64
Enhancements to the Conventional Multi-well model	65
Interoperability with Piper 2018.1 or later	65
Gauge Depth correction	65
Decline and Multi Segment decline enhancements	65
Enerdeq import new Completion and Production fields	65
Importing Numerical models from Harmony	66
Enhancements for Comparison plots	66
Gas Lift in DB Connection	66
Resolved issues from Harmony Enterprise 2018.2	66
Harmony Enterprise 2018.2 Release Notes	66
Multi-well model enhancements	66
Project Economics	67
Import PowerTools projects	67

Resolved issues from Harmony Enterprise 2018.1	67
Harmony Enterprise 2018.1 Release Notes	67
Bulk reporting	68
Bulk delete analyses / worksheets	68
Bulk export production	68
Multiphase URM and FMB	68
Group FMB and Typecurves	68
Vertical Multi-well model	68
Gas static material balance	68
Resolved issues from Harmony Enterprise 2017.3	69
Harmony Enterprise 2017.3 Release Notes	69
Database Connection: import performance improvement	69
Spatial Explorer	69
Gemalto Sentinel RMS	69
Resolved issues from Harmony Enterprise 2017.2	69
Harmony Enterprise 2017.2 Release Notes	70
Decline Autoforecast	70
Schedule Database Connection imports	70
Database Connection support for Property and Wellbore data	70
Well Query	70
Calculate sandface pressures during import	70
Resolved issues from Harmony Enterprise 2017.1	71
Harmony Enterprise 2017.1 Release Notes	71
Probabilistic hybrid analysis	71
Volumetrics	71
Active directory	71
CDF plot	71
Resolved issues from Harmony Enterprise 2016b	71
Active directory	73

Important considerations	73
User permissions in local folders	74
Database deployment	75
Database prerequisites	76
Set up a new database	76
Update an existing database	76
Defragment your database	77
Well Security	78
Enable role-based security (RBS)	79
Add groups or users to your database	80
Using the Database Manager utility	80
Using SQL Server Management Studio	80
Import well data (deployment)	82
Configuring well security	83
Troubleshooting	85
Licensing	87
Activating / deactivating licenses	88
Best practice	88
Activating / deactivating standalone licenses	88
Licensing dialog box	91
Standalone licensing	91
Network licensing	92
License Information dialog box	94
Licensing Settings dialog box	95
IHS Markit Online Activation dialog box	97
How to...	98
Connect to your data source	99
Connecting using the Data Source Manager	100
Connecting using a .dsn file	104

Get well data into Harmony Enterprise	105
Harmony Enterprise example files	105
Troubleshooting .Harmony and .hldb file imports	106
Import well data from a file	107
Plain-content files	107
Other files	109
Import well data from a database	110
Import / update from Enerdeq or IHDC	113
Enerdeq queries (US only)	114
Import from Piper forecasts	115
Import from PowerTools	116
Import from WellTest	117
Import Harmony data	118
Information on items that are imported to different locations	119
Import from an .hldb file	120
Custom groups	120
Preview well data	122
GIS well preview	122
Attributes well preview	123
Diagnostics well preview	123
Analyze well data	125
Selecting an entity for analysis	125
Analyzing an entity	125
View results	127
Grid view	127
Plot view	127
Export data	129
Export production data	130
Export forecasts	132

Export decline parameters	134
Export a file for use in Piper®	136
Export to WellTest	138
Export to an .hldb file	139
Exporting entities	139
Connecting to an .hldb file	140
Export to Harmony Analytics	142
Use workflows	143
Create a workflow	144
Modify a workflow	145
Apply a workflow	146
Create Workflow dialog box	148
Link / unlink analyses	149
Linking analyses	150
Unlinking analyses	153
Analysis types	155
Decline analysis	156
Analysis Parameters pane	156
Rate type	157
Forecast start date	159
Multiple segments	159
Analysis Parameters toolbar	161
Decline calculation methods	162
Line manipulation	164
Decline-line customization	166
Multi-segment decline analysis	167
Analysis Parameters pane	167
Line manipulation	168
Stretched exponential decline analysis	171

Analysis Parameters pane	171
Analysis Parameters toolbar	173
Line manipulation	173
Duong decline analysis	175
Analysis Parameters pane	175
Analysis Parameters toolbar	177
Line manipulation	177
Material Balance analysis	179
Gas material balance	180
Single well analysis	180
Group well analysis	180
Context menus	182
Analysis Parameters pane	182
Toolbar	182
GMB plots and parameters	184
Advanced GMB	186
Oil material balance	188
Analysis Parameters pane	188
Toolbar	188
Plot dashboard	189
Volumetrics analysis	190
Toolbars	190
Parameters	190
WOR analysis	192
Analysis Parameters pane	192
Analysis Parameters toolbar	193
Line manipulation	193
Analysis line customization	193
WOR options	193

Oil cut analysis	195
Analysis Parameters pane	195
Analysis Parameters toolbar	196
Line manipulation	196
Analysis line customization	196
WOR / oil cut forecast	197
Analysis Parameters pane	197
Ratio forecast	199
Ratio trend	200
Analysis Parameters pane	200
Multiple segments	202
Analysis Parameters toolbar	202
Line manipulation	203
Linking to a Decline analysis	204
Analysis-line customization	205
Custom forecast	207
Forecast consolidation	209
Typecurve analysis	211
Models	211
Methods	212
Sub-tabs	212
Plot	212
Toolbar	213
Forecast	213
Tables	214
Agarwal-Gardner typecurve method	215
Boundary-dominated match	215
Transient match	215
Blasingame typecurve method	217

Boundary-dominated match	217
Transient match	218
Compound linear typecurve method	219
Boundary-dominated match	220
Transient match	221
Skin	223
Fetkovich typecurve method	227
Boundary-dominated match	227
Transient match	228
Time reinitialization	228
NPI typecurve method	231
Boundary-dominated match	231
Transient match	231
Wattenbarger typecurve method	233
Boundary-dominated match	233
Transient match	233
Data filter dialog box	234
FMB analysis	236
Plot Options	236
FMB Model Options (Patent Pending)	238
Material Balance Options	238
Calculations	239
Plot toolbar	239
Filtering	240
Best fitting	240
Analyzing reservoirs with aquifer support	241
Including pressure-dependent permeability and formation compressibility	245
Accounting for adsorbed gas-in-place for shale gas plays	246
Accounting for changing oil properties	248



Data Filter dialog box	249
Unconventional reservoir analysis	251
Unconventional Reservoir pane	252
Parameters	252
Primary toolbar	254
Plot dashboard	255
Plot toolbar	255
Unconventional reservoir plots	256
Square root time	256
Line manipulation	257
Flowing material balance (FMB)	257
Typecurve	258
Forecast	259
Schematic	260
Allowable Ax vs Ad region	261
Fourth root time	262
Saturated filter	264
Data Filter dialog box	265
Analytical	267
Analytical Model pane	267
Primary toolbar	267
Secondary toolbar	268
Sub-tabs	269
Plots	269
Toolbar	269
Forecast	270
Toolbar	270
Forecast options	270
Forecast constraints	273

Forecast results	273
Tables	273
Forecasting gas condensate systems	275
Forecasting using wellhead pressure	277
Test design	279
Estimating expected production volumes	279
Evaluating the effect of various parameters	279
Test design example	279
Advanced analytical options	282
Accounting for fluid changes during reservoir depletion in oil analytical models	283
Anchoring	286
Constant-pressure boundaries	288
Injection	290
Using automatic parameter estimation	292
Specify data points to be used by APE	292
Specify parameters to vary	292
Run APE	293
Numerical	295
Numerical Model pane	295
Important parameter limits	296
Fluid type selection	296
Model geometry	297
Primary toolbar	299
Sub-tabs	300
Plots	300
Toolbar	300
Forecast	302
Toolbar	302
Forecast options	302

Forecast constraints	304
Forecast results	305
Tables	305
Advanced numerical model options	306
Adsorption option	307
Geomechanical option	308
Refracturing option	309
Changing skin option	311
Sparse data option	312
How sparse datasets are calculated	313
Adjusting gridding	314
Probabilistic analysis	316
Setup tab	316
Number of runs	317
Run simulation	317
Distribution cards	317
Normal	317
Log-Normal	318
Triangular	318
Uniform	319
APE	319
Dependencies tab	320
Results tab	322
Displaying results	324
Percentile calculations for input parameters, forecasts & EURs	326
Percentile (P10, P50, and P90) input parameters and OFIPs	326
Percentile (P10, P50, and P90) forecasts	326
Percentile (P10, P50, and P90) EURs	326
Tips: speeding up the probabilistic analysis	328



Base numerical model	328
APE	328
Changes that affect properties	328
Multi-well model	330
Conventional multi-well model	330
Model creation	331
Model geometry	331
Setting model parameters	333
Primary toolbar	333
Plots tab	335
Wells	335
Reservoir	338
Fluid type selection	339
Aquifer	340
Volumes	340
Options	341
Dashboard	342
Schematic plot	343
Context menu	345
Ratios plot	346
Well Rate Time plot	346
Total Rate / Cum Time plot	347
Forecast tab	347
Forecast Plot	347
Forecast Options	347
Forecast Injection	348
Toolbar	348
Tables tab	348
Unconventional multi-well model (beta)	349



Model creation	349
Primary toolbar	350
Plots tab	352
Wells	352
Geometry	355
Permeabilities	356
Advanced Completion Geometry	356
Vertical Resolution	356
Other parameters	357
Reservoir	357
Fluid type selection	359
Layers	359
Toolbar	360
Selected Layer section	360
Volumes	361
Options	363
Dashboard	365
Ratios plot	365
Well Rate Time plot	365
Total Rate / Cum Time plot	365
Schematic plot	366
Context menu	368
Forecast tab	368
Forecast Plot	368
Forecast Options	369
Forecast injection	369
Toolbar	370
Tables tab	370
Nodal analysis	371

Gas AOF / TPC	372
Diagnostics	373
Simplified C, n	375
Forchheimer deliverability method	377
Custom table deliverability method	378
Oil IPR / TPC	379
Outflow	380
Navigation	381
Clipboard	382
Menus	383
File	383
Import	383
Export	383
View	384
Tools	384
Help	385
Panes	386
Docking functionality	386
Pane options	387
Pin functionality	388
Selecting entities	390
Status Window	394
Status Window options	394
Message categories	395
Tabs	396
Toolbars	397
Main toolbar	397
Plot toolbars	399
Pane toolbars	401

Table toolbars	401
Components	403
Analysis Manager	404
Toolbar	404
Analysis type menu	405
Analysis tab	408
Attributes tab	409
Scenarios	411
Toolbars	411
Primary toolbar	411
Secondary toolbar	412
Context menus	412
Custom	413
Custom attributes	417
Custom-calculated numeric attributes	417
Custom-calculated text attributes	417
Create Custom Attribute dialog box	419
Equation Editor dialog box	420
Referencing other datasets / attributes	421
Best-fitting functionality	422
Changing the slope of the decline curve	423
Changing the historical match	423
Changing the initial rate	423
Changing the FSD	424
Changing initial cumulative production & final cumulative production	425
Changing the b value	425
Changing the b value & final cumulative production	426
Changing final cumulative production & decline rate	426
Changing the abandonment rate	426

Manipulating multiple segments	427
Manipulating a multi-segment decline	428
Bulk Editor dialog box	429
Icons	429
Exceptions	430
Database connection	431
Set Up Connection Settings dialog box	432
Assign Mapping dialog box	434
Errors and minimum requirements	436
Well Linking Criteria dialog box	437
Set Up Filters dialog box	439
Filter a Column dialog box	440
Select Wells to Import dialog box	441
Toolbar	441
Plot preview	441
Import Options dialog box	442
Updating Data Options	442
Production Data	442
Attributes & Properties	443
Analysis Data	443
Wellbore	444
Autocalc	444
Data Reduction Mode	444
Auto Import	444
Diagnostics tab	445
Toolbars	445
Primary toolbar	446
Secondary toolbar	446
Context menus	446

Save Template dialog box	447
Hall plot	448
Economics	450
Case	450
Toolbar	450
Discount Rate	451
Forecast	451
Price & Revenue	451
Capital Expenses	452
Operating Costs	452
Taxes & Royalties	453
Working Interest	453
Cumulative Net Cash Flow	453
Important metrics	454
Plot / grid	454
Y-axis icons	455
X-axis icons	455
Editors	456
Properties editor	457
Toolbars	457
Primary	457
Secondary	457
Plot	458
Selection tree	458
Gas properties	459
Additional properties for liquid-rich gas	460
Correlation selection for gas	461
PVT	461
Viscosity	462



Oil / condensate properties	463
Calibration properties for oil	464
Correlation selection for oil	465
PVT	465
Viscosity	466
Water properties	466
Gas lift properties	467
Adsorption properties	467
Geomechanical properties	468
Relative permeability properties	469
Water-gas section	470
Oil-gas section	470
Water-oil section	471
Wellbore editor	473
Toolbars	473
Primary	473
Schematic	475
Main pane	475
Schematic pane	478
Production editor	480
Toolbars	480
Primary toolbar	480
Secondary toolbar	482
Pressure for analysis	483
Pressure interpolation	484
Selection tree	485
Grid (table)	485
Create Custom Dataset dialog box	488
Equation Editor dialog box	489

Referencing other datasets / attributes	490
Dataset-specific functions	490
Static pressure editor	493
Depths	493
Header	493
Pressure data table	494
Column headers	495
Entity Viewer - Custom	496
Toolbar	496
Private groups tab	497
Shared groups tab	497
Work status icons	497
Context menu	498
Entity Viewer - Hierarchy	499
Toolbar	499
Work status icons	500
Hierarchy structure	501
Context menu	501
GIS	503
Toolbars	503
GIS Configuration pane	503
GIS toolbar	504
GIS design mode tools	505
Active analysis	505
GIS Configuration pane	505
Context menus	508
GIS map	510
Context menus	511
Layers	513

Shapefiles	514
Compatibility	515
Facility Annotation Editor dialog box	516
Bubble maps	517
Drainage area maps	524
Flags	525
Flag properties	525
Import functionality	528
Scheduling well updates	529
Troubleshooting	529
Windows Task Scheduler	530
Command line	531
Import Data dialog box	532
Toolbar	532
Import Options pane	532
Plot pane	533
Link Incoming Wells to Existing Wells dialog box	534
Updating existing wells	537
Data Reduction dialog box	539
Toolbar	540
Zoom	540
Buttons	541
Adding, resizing, and merging ranges	541
Harmony Analytics	543
Harmony Analytics dialog box	544
Well Selection pane	544
Data Set Selection pane	544
Attributes tab	544
Production tab	545



Properties tab	546
Results tab	546
Analyses tab	547
Template functionality	548
Data Source Selection	549
Spotfire	550
First-time connection to a database	550
After you have connected to a database	551
Monitor tab	552
Options dialog box	554
Importing	554
Updating Data	554
Autocalc Settings	556
Data Reduction	556
Well Linking	557
Analysis	557
Decline	557
Multi Segment Decline	559
Gas Defaults	559
Liquid Defaults	560
Best-Fit criteria	560
Typewell	560
Material Balance	560
Water Oil Ratio	560
URM	561
Optimize	561
IHS Connection	561
Unit Customization	561
Error Display and Handling	562

Shared Settings	562
Role-Based Security Settings	562
Enable / Disable	562
Role Definitions	562
Assignments	563
Database Connection Monitor	563
Piper export	565
Export Type dialog box	566
Type of export	566
File name and path	566
Analyses Selection dialog box	567
Well-Analysis Pairing Conflicts dialog box	568
Piper export logs	569
Calibration data	569
Forecast data	569
Plots	570
Plot components	571
Locks	571
Legend	571
Plot context menus	571
Axis options	572
Plot options	572
Plot types	574
Coordinate plots	574
Log-log plots	575
Log-X plots	575
Log-Y plots	576
Diagnostic line	578
Context menu	579

Line manipulation	580
Plot Selection pane	581
Project filters	582
Hierarchy tab	583
Shared and Private Group tabs	583
Importing with filters	584
Query Wells dialog box	585
Attributes pane	585
Main pane	586
Icons	586
Preview pane	587
Reference Dates dialog box	588
Toolbar	588
Grid columns	588
Results tab	589
Results Viewer sub-tab	589
Grid view	589
Plot view	590
Cross plot	590
CDF	591
Toolbar	592
Context menus (grid view)	593
Comparison plot sub-tab	593
Toolbar	594
Tab context menu	594
Plot context menu	595
Reporting sub-tab	596
Bulk modify decline analyses	600
Role-based security	603



Scenarios	606
Importing	606
Tables / grids	607
Context menus	608
Entire table	608
Columns	608
Worksheets	610
Decline worksheet	612
BOE	612
Typewell worksheet	614
Plot toolbar	614
Best fit	615
Plot Selection tab	616
Wells tab	617
Toolbar	619
Context menu	619
Analysis Manager tab	620
Volumetrics worksheet	621
Material Balance worksheet	622
WOR Analysis worksheet	623
Forecast worksheet	624
Custom worksheet	625
Reference materials	626
Analysis and theory	627
Analytical models theory	628
Choice of model	628
Model assumptions	629
Vertical model	629
Vertical with fracture model	629

Horizontal model	630
Horizontal multifrac enhanced fracture region model	631
General horizontal multifrac model	632
Decline analysis theory	634
Conceptual definition: decline analysis	634
Historical background	635
Practical decline analysis: key points	635
Decline theory	636
Exponential	637
Hyperbolic	638
Harmonic	640
Exponential decline rate: nominal vs. effective	642
Modified hyperbolic decline	644
Limited decline rate	644
Arps production decline equation summary	646
Goodness of fit	646
Flowing material balance (FMB) theory	648
Pseudo-steady state	648
Gas	649
Variable rate flowing p/Z^{**}	650
Agarwal-Gardner normalized rate	653
Productivity index	654
Advanced gas material balance techniques – p/Z^{**}	655
Oil	657
Static pressure data	662
Accounting for variation in oil properties	662
Multiphase flowing material balance (FMB) theory	666
Multiphase FMB equation	667
Important considerations	671

Publications	673
FMB model (patent pending) theory	675
Novelty of the FMB model	676
Reservoir group identification	678
Duong decline analysis theory	680
Hall plot theory	681
Material balance analysis theory	686
Overview	686
Summary of terms in the material balance equation	687
Application of material balance	689
Gas material balance	690
Advanced gas material balance	691
Overpressured reservoir	692
Water-drive reservoir	694
Schilthuis steady-state model	695
Fetkovich	695
Connected reservoir	696
Oil material balance	697
Havlena-Odeh (all reservoir types)	697
Havlena-Odeh diagnostics: F vs. Et (no initial gas cap)	699
Oil in place diagnostics (N vs. time)	703
Pressure diagnostics: P vs Np	704
Pressure vs. time	704
Synthetic reservoir pressure	705
Drive indices	707
Summary	707
Diagnostics	708
Diagnostics — Dake and Campbell	709
Dake	709

Campbell	710
Volatile oil — Walsh formulation	711
Nodal analysis theory	713
Gas AOF / TPC theory	714
Wellhead C, n deliverability	714
Wellhead, C	714
Wellhead, n	714
Sandface C, n deliverability	715
Sandface, C	715
Sandface, n	716
Understanding the curves displayed in the Wellbore Tuning plot	716
Sandface C calculation	718
Excluding liquid loading	718
Including liquid loading	719
Theory: using non-flowing side pressures to calculate well deliverability	719
Oil IPR / TPC theory	722
TPC	722
IPR	723
Straight line IPR	723
Vogel IPR	724
IPR with both single-phase and two-phase flow	725
Numerical model theory	726
Background	726
Analytical models	726
Numerical models	726
General formulation for the single-phase model	727
Well constraint considerations	729
Considerations when estimating fluid properties	730
Numerical model pseudo-pressure definition	731



Numerical model pseudo-pressure formulation	731
Modifications for the multiphase model	734
Advantages of using the pseudo-pressure formulation	735
Probabilistic theory	736
Probability distribution types	736
Normal distribution	737
Log-normal distribution	738
Triangular distribution	739
Uniform distribution	741
Calculation methods	742
Monte Carlo simulation	742
Latin hypercube sampling	743
Correlated sampling	744
Creation of correlated random variables	745
Auto-correction to user-input correlation coefficient matrix	745
Truncated distributions	745
Definitions and concept	746
Special case: truncated normal distributions	747
Stretched exponential decline theory	749
Typecurve theory	750
Agarwal-Gardner typecurve theory	751
Rate-cumulative production analysis	751
Dimensionless typecurves	751
Modifications in RTA	752
Data Preparation	752
Oil wells	752
Gas wells	753
Analysis	753
Oil wells	753



Gas wells	753
Rate-time production analysis	753
Dimensionless typecurves	753
Modifications in RTA	754
Data preparation	755
Oil wells	755
Gas wells	756
Analysis	756
Calculation of parameters	757
Radial typecurves	757
Oil wells	757
Gas wells	758
Fracture typecurves	759
Oil wells	759
Gas wells	760
Methodology: rate-cumulative	761
Blasingame typecurve theory	764
Background	764
Blasingame in RTA	764
Models	766
Methodology	767
Normalized rate	767
Oil	767
Gas	767
Rate integral	767
Oil	769
Gas	769
Rate integral derivative	769
Oil	770



Gas	770
Calculation of parameters	770
Boundary-dominated flow	771
Harmonic stem of decline curves	771
Data preparation	772
Oil	772
Gas	774
Transient typecurve matching equations	775
Radial	776
Oil	776
Gas	777
Infinite conductivity fracture	777
Oil	778
Gas	779
Finite conductivity fracture	779
Oil	781
Gas	781
Horizontal well	782
Oil	784
Gas	784
Elliptical flow typecurves	784
Calculation of parameters	785
Oil wells	785
Gas wells	787
Compound linear typecurve theory	789
Methodology	795
Data preparation	795
Pressure – time	795
Normalized pressure	795



Oil wells	795
Gas wells	795
Raw data derivative	795
Oil wells	795
Gas wells	796
Derivative	796
Oil wells	796
Gas wells	796
Square-root pressure derivative	796
Oil wells	796
Gas wells	796
Calculation of parameters	797
Oil wells	797
Gas wells	798
Rate – time	798
Normalized rate	799
Oil wells	799
Gas wells	799
Raw data derivative	799
Oil wells	799
Gas wells	799
Derivative	800
Oil wells	800
Gas wells	800
Square-root pressure derivative	800
Oil wells	800
Gas wells	800
Calculation of parameters	800
Oil wells	800

Gas wells	801
Boundary-dominated flow	802
Fetkovich typecurve theory	804
Typecurve derivation	804
Early-time curves	804
Late-Time Curves	808
Fetkovich typecurves – combined early and late-time portions	812
Typecurve calculations	813
Rate – time typecurves	813
Exponential	814
Hyperbolic	814
Harmonic	815
Oil	815
Gas	815
Cumulative – time typecurves	817
Oil	817
Gas	817
Typecurve equations	819
Cumulative typecurves	819
Exponential	820
Hyperbolic	820
Harmonic	820
Cumulative / derivative typecurves	820
Rate-integral typecurves	821
Matching equations (variable flowing pressure)	822
Oil	822
Exponential	823
Hyperbolic	824
Harmonic	825



Gas	825
Exponential	826
Hyperbolic	827
Harmonic	827
Matching equations (normalized data)	828
Normalized rate: oil	828
Normalized rate: gas	828
Normalized cumulative production: oil	829
Normalized cumulative production: gas	829
NPI typecurve theory	830
Methodology	831
Modifications in RTA	831
Data preparation	832
Normalized pressure	832
Oil wells	832
Gas wells	832
Normalized pressure integral	832
Oil wells	832
Gas wells	832
Pressure integral derivative	833
Oil wells	833
Gas wells	833
Analysis	833
Calculation of parameters	834
Radial typecurves	834
Oil wells	834
Gas wells	835
Fracture typecurves	836
Transient typecurve theory	837

Inverse pressure integral derivative	838
Data preparation	839
Normalized rate	839
Oil wells	839
Gas Wells	839
Analysis	840
Calculation of parameters: radial typecurves	840
Oil wells	840
Gas wells	841
Calculation of parameters: finite conductivity fracture typecurves	843
Definitions	843
Oil wells	844
Gas wells	845
Wattenbarger typecurve theory	847
Methodology	849
Data preparation	849
Normalized rate	849
Oil wells	849
Gas wells	849
Inverse of semi-log pressure derivative	850
Oil wells	850
Gas wells	850
Analysis	850
Calculation of parameters	850
Oil wells	850
Gas wells	852
Typewell theory	854
Unconventional reservoir theory	856
Production behavior of unconventional reservoirs	856

Constant flowing pressure	857
Duration of linear flow	858
Boundary-dominated flow	861
Variable flowing pressure	862
Superposition time	863
Using pseudo-time	865
Accounting for variation in rock and fluid properties in the oil URM	866
Application to horizontal wells	867
Applying this theory to Harmony Reservoir™	868
Using production data to identify the linear flow parameter	868
Interpreting the linear flow parameter for different completion types	870
Vertical – single frac model type	870
Horizontal Multifrac – effective k model type	871
Horizontal Multifrac – SRV model type	872
Most likely model	874
Part 1: identify the region that defines minimum & maximum values for A_x and A_d	875
Part 2: identify the functional relationship between A_x and A_d	876
Volumetrics theory	879
Oil reservoir calculations	879
Gas reservoir calculations	880
Free gas equations	880
Adsorbed gas equations – shale reservoirs	880
Adsorption saturation option	881
Calculations for liquid-rich gas reservoirs	881
WOR forecasting theory	883
Calculations & correlations	886
Annular diameters	887
Equivalent diameter	887
Hydraulic (wetted) diameter	888



Average reservoir pressure calculations	889
Oil wells	889
Gas wells	889
Capillary correlations	890
Capillary pressure correlations	890
Analytical	891
Water-oil system	891
Gas-oil system	891
Brooks Corey	892
Water-oil system	892
Gas-oil system	892
Flow rate calculations	894
Operated-day rate	894
Calendar-day rate	894
Time on-production	894
Load factor	894
Geomechanical correlations	895
Permeability correlations	895
Compressibility correlations	895
Liquid lift calculations	896
Gas calculations & correlations	897
Gas correlations	897
PVT	897
Viscosity	897
Gas type	898
Ovalle et al.'s correlation for Rv	898
Calculation of the vaporized oil ratio	899
Oil correlations	900
Oil / condensate correlations	900



PVT	900
Viscosity	901
Vasquez and Beggs (generally applicable)	901
Bubble point pressure	902
Solution gas oil ratio	902
Oil formation volume factor (FVF) – saturated	902
Oil FVF – undersaturated	902
Compressibility – saturated	903
Compressibility – undersaturated	903
Al-Marhoun (Middle East oil)	903
Bubble point pressure	903
Solution gas oil ratio	904
Oil FVF – saturated	904
Oil FVF – undersaturated	904
Beggs and Robinson	904
Viscosity	905
De Ghetto et al. (heavy and extra-heavy oils)	905
Heavy oils ($10^\circ < \text{API} < 22.3^\circ$)	905
Bubble point pressure	905
Solution gas oil ratio	906
Oil FVF – saturated	906
Oil FVF – undersaturated	906
Compressibility – saturated	906
Compressibility – undersaturated	906
Viscosity – dead oil	906
Viscosity – saturated	907
Viscosity – undersaturated	907
Extra heavy oils ($\text{API} < 10^\circ$)	907
Bubble point pressure	907



Solution gas oil ratio	907
Oil FVF – saturated	907
Oil FVF – undersaturated	908
Compressibility – saturated	908
Compressibility – undersaturated	908
Viscosity – dead oil	908
Viscosity – saturated	908
Viscosity – undersaturated	908
Glaso (North Sea oil)	909
Bubble point pressure	909
Solution gas oil ratio	909
Oil FVF – saturated	910
Oil FVF – undersaturated	910
Hanafy et al. (Egyptian oil)	910
Bubble point pressure	910
Solution gas oil ratio	911
Oil FVF – saturated	911
Oil FVF – undersaturated	911
Density – saturated	911
Density – undersaturated	911
Compressibility – saturated	911
Compressibility – undersaturated	911
Oil viscosity	912
Khan et al. (Saudi Arabian oil)	912
Oil viscosity	912
Ng and Egbogah	913
Dead oil	913
Live oil – saturated	913
Live oil - undersaturated	913



Petrosky and Farshad (Gulf of Mexico)	914
Bubble point pressure	914
Solution gas oil ratio	914
Oil FVF – saturated	914
Oil FVF – undersaturated	915
Compressibility – saturated	915
Compressibility – undersaturated	915
Standing (California oil)	915
Bubble point pressure	915
Solution gas oil ratio	915
Oil FVF – saturated	916
Oil FVF – undersaturated	916
Velarde et al. (reduced variable approach)	916
Bubble point pressure	916
Solution gas oil ratio ($p = p_b$)	916
Solution gas oil ratio ($p < p_b$)	917
Reduced variable approach	917
Oil FVF – saturated	918
Oil FVF – undersaturated	918
Correlation limits	919
Oil correlation limits	919
Pressure loss calculations	921
Single-phase flow	922
Density	922
Friction component	922
Hydrostatic component	924
Flow correlations	925
Multiphase flow	926
Flow fluid properties	927



Superficial Velocities	927
Mixture velocity	928
Slippage and the liquid holdup effect	928
In-situ volume fraction (liquid holdup with slip)	929
Input volume fraction (no-slip holdup)	929
Actual velocities	929
Density	930
Mixture density	930
No-slip density	930
Mixture viscosity	930
No-slip viscosity	931
Surface tension	931
Gas / oil interfacial tension	931
Gas / water interfacial tension	931
Friction component	932
Hydrostatic component	932
Flow correlations	933
Beggs and Brill correlation	934
Flow pattern map	934
Segregated	936
Intermittent	937
Distributed	938
Transition	939
Hydrostatic Pressure Difference	939
Segregated	939
Intermittent	940
Distributed	940
Transition	940
Beggs and Brill - Friction Pressure Loss	941

Gray Correlation	942
Gray – Hydrostatic Pressure Difference	943
Gray – Friction Pressure Loss	944
Hagedorn and Brown	945
Hagedorn and Brown - Hydrostatic Pressure Difference	946
Hagedorn and Brown - Friction Pressure Loss	950
Modification to the Hagedorn and Brown Correlation: the Griffith Correlation for Bubble Flow	950
Petalas and Aziz Mechanistic Model	951
Flow Pattern Map	952
Dispersed Bubble flow	952
Stratified Flow	953
Annular-Mist Flow	957
Bubble Flow	957
Intermittent Flow	958
Froth Flow	959
Recombination	960
Relative permeability correlations	961
Relative permeability correlations	961
2-phase models	961
3-phase models	961
Two-phase correlations	961
Corey	962
Water / oil system	962
Gas / oil system	962
Gas / Water System	963
Honarpour	963
Sandstone	963
Water wet	963
Intermediate wet	963

Any wettability	963
Limestone	964
Water wet	964
Intermediate wet	964
Any wettability	964
Generalized Corey	964
Gas / oil system	964
Gas / water system	965
Water / oil system	965
Three-phase correlations	965
Stone I	965
Stone II	966
Baker	966
Water correlations	967
Correlations	967
Meehan (generally applicable)	967
Compressibility	967
Gas-free water	967
Gas-saturated water	968
Saline solution	968
General concepts	969
Artificial lift	970
Pumping	970
Gas lift	972
Conventional gas lift	974
"Poor boy" gas lift	975
Properties of injected gas	975
Entering rates into the production editor	975
Automatic parameter estimation theory	977

Mead (Simplex)	978
Capillary pressure	979
Continuous time track	982
Example: demonstrating the effect of the Continuous Time Track option	982
Data diagnostics theory	984
Production data diagnostics	987
Outlier removal	987
Liquid loading in the wellbore	988
Single-phase flow in the reservoir	989
Consistency (correlation) between rate and pressure	989
Case studies	992
Case 1	993
Case 2	994
Case 3	995
Case 4	997
Case 5	998
Case 6	999
Case 7	1000
Case 8	1002
Case 9	1003
Data diagnostics flowchart	1005
Rate & pressure vs. time (Cartesian) plot	1011
Do step changes in pressure and rate correlate with each other?	1011
Is the general trend in the rate reflected in the pressure, and vice versa?	1012
Is the production rate and pressure data stable?	1013
Is the rate and pressure data smooth, continuous, and free of scatter?	1014
Turner rate	1015
Is the gas rate above the critical Turner rate?	1015
Do the casing and tubing pressures track one another?	1016

Log gas rate (log-log)	1017
Does the rate have a sharp decline when plotted on a logarithmic scale?	1017
WGR & water rate	1018
Are the water rate and WGR stable and relatively constant?	1018
Is the flow in the reservoir effectively single phase?	1019
Is there a rapid decrease in the WGR?	1020
Are there significant fluctuations in the WGR?	1020
Drawdown %	1022
Is the well producing under high drawdown conditions?	1022
Blasingame (log-log)	1025
Does the normalized rate continuously decline?	1025
Does the Blasingame plot have a single continuous stem?	1026
Are outliers being misinterpreted as boundary-dominated flow?	1026
NPI (log-log)	1027
Does the normalized pressure continuously increase?	1027
Does the NPI plot have a single continuous stem?	1027
Are outliers being misinterpreted as boundary-dominated flow?	1028
FMB rate (Cartesian)	1029
Does the normalized rate continuously decline?	1029
Does the FMB-Rate plot have a single continuous stem?	1029
FMB pressure (Cartesian)	1031
Does the normalized pressure continuously increase?	1031
Does the FMB-Pressure plot have a single continuous stem?	1031
Equivalence of constant rate and constant pressure solutions	1033
Fracture properties	1035
Fracture flow capacity (kfwf)	1035
Fracture half-length (xf)	1035
Geomechanical reservoir models	1037
Porosity and formation compressibility	1037

Hall	1038
Dobrynin	1038
Pressure-dependent permeability	1040
Yilmaz and Nur	1040
Dobrynin	1040
Geomechanical effects for oil analytical models	1041
Background	1042
Implementation notes: 2014v2 release	1042
GIS theory	1043
Cartesian	1043
Dominion land survey	1044
UWI format	1044
Location exception code	1045
Meridian	1045
Range	1045
Townships	1046
Sections	1047
Legal subdivision	1047
Event sequence	1048
Latitude / longitude	1048
National topographic map numbering system	1050
Series numbers	1052
Map areas	1052
Map sheets	1052
Blocks	1053
Units	1053
Quarter units	1053
Universal transverse mercator	1053
Interpolation theory	1054

Langmuir isotherm	1055
Adsorption	1055
Langmuir isotherm formulation	1055
Langmuir volume	1055
Langmuir pressure	1056
Isotherm variability	1057
Material balance time theory	1058
Constant compressibility fluids	1060
Material balance time for oil	1062
Material balance pseudo-time for gas	1065
Total compressibility	1066
Material balance equation	1066
Solving for total compressibility (ct)	1067
Solving for $\partial t_a / \partial p_p$	1068
Solving for $\partial p_p / \partial p$	1068
Solving for $\partial p / \partial t$	1069
Substitution	1070
Probabilistic	1072
Pseudo-pressure (y)	1073
Modification for geomechanical models	1074
Pseudo-time	1075
Development of pseudo-time	1075
Buildup pseudo-time	1076
Drawdown pseudo-time	1076
Corrected pseudo-time	1077
Modification for geomechanical models	1078
Relative permeability	1079
Relative permeability terms and equations	1079
Wettability	1080



Water-wet relative permeability curves (oil and water)	1080
Oil-wet relative permeability curves (oil and water)	1081
Gas-oil relative permeability curves	1082
Normalized relative permeability	1083
Reserve evaluation	1084
Purpose	1084
Reserve Classifications	1085
Reservoir flow	1088
Reservoir fluid properties	1091
Gas	1091
Gravity	1091
Compressibility factor	1091
Compressibility	1092
Formation volume factor	1093
Vaporized oil ratio (Rv)	1093
Viscosity	1093
Critical temperature	1094
Critical pressure	1094
Oil	1094
Gravity	1095
Formation volume factor	1095
Shrinkage	1097
Compressibility	1097
Solution gas-oil ratio	1098
Viscosity	1099
Bubble point pressure	1100
Water	1100
Water-specific gravity	1101
Salinity	1101



Viscosity	1101
Compressibility	1101
Formation volume factor	1102
Dissolved gas / water ratio	1102
Reservoir fluid types	1103
Black oils	1103
Volatile oils	1104
Condensate (retrograde gas)	1105
Wet gas (rich gas)	1106
Dry gas	1107
Reservoir properties	1109
Drainage area	1109
Expected ultimate recovery	1109
Formation compressibility	1109
Gas saturation	1110
Initial pressure	1110
Mid-point of perforations	1111
Net pay	1112
Oil saturation	1114
Original fluid-in-place	1114
Porosity	1114
Rock volume	1114
Pore volume	1114
Hydrocarbon pore volume	1114
Recovery factor	1115
Reservoir temperature	1115
Total compressibility	1115
Water saturation	1116
Wellbore radius	1116

Shale properties	1117
Conventional vs. tight / shale gas reservoirs	1117
Shale adsorption correction	1118
Terminal / limiting decline rate	1121
Terminal decline calculation methods	1122
Time-dependent skin	1126
Time to stabilization	1128
Water drive reservoir	1129
Schilthuis steady-state model	1130
Fetkovich	1130
Well linking logic	1132
General well linking logic	1133
Exceptions	1134
Harmony import logic	1136
Well Identifier special cases	1137
Production text imports	1137
Static pressure text imports	1137
Attribute text imports	1137
Enerdeq: split by Prod ID	1138
Enerdeq special case	1139
Enerdeq: not split by Prod ID	1140
Nomenclature	1141
References	1161
Contact us	1171
Training	1172
Resources	1172
Customized training	1172
Index	1173

About Harmony Enterprise™ 2019.3

These topics highlight key content in Harmony Enterprise™ to get you started:

About Harmony

- [Overview](#)
- [Active directory](#)
- [Licensing](#)
- [Navigation](#)
- [Components / modules](#)
- [User permissions in local folders](#)

Tip: For hands-on practice with Harmony Enterprise, browse to the Examples folder. The default directory is C:\Users\Public\Public Documents\Harmony Shared\Harmony Enterprise 2019.3.

How to...

- [Connect to your data source](#)
- [Get well data into Harmony Enterprise](#)
- [Preview well data](#)
- [Analyze wells](#)
- [View results](#)
- [Export data](#)
- [Use workflows](#)

Reference Material

- [Analysis method theory](#)
- [Calculations & correlations](#)
- [General concepts](#)
- [Nomenclature](#)

Overview

After installing Harmony Enterprise™ and launching the application, the License Type dialog opens. In this dialog box, you select between two versions: multi-user capable and single-user capable. (This dialog box only opens the first time you select your license type.)

The multi-user version is classified as the full version. You can have up to 100,000 wells in each project. All analysis work is centralized for better access, and multiple engineers can share one common project. In addition, you can import data once, which reduces the risk of duplicating wells and analyses.

The SE license is the single-user version of Harmony Enterprise, and has some restrictions.

You can manage up to 5,000 wells with a local database (.hldb) file. However, you cannot:

- import from or merge local databases
- connect to a SQL database (multi-user database)
- perform scheduled imports
- have role-based security

If you try to import a file that has more than 5,000 wells, or where the file total plus the existing well count exceeds 5,000, wells are imported up to the limit, and then a warning message is displayed in the Status Window.

Release notes

These release notes cover Harmony Enterprise versions 2019.3 – 2017.1. For prior release information, contact our customer care team: www.ihsmarkit.com/supportform

Harmony Enterprise 2019.3 Release Notes

This release has the following features:

Introducing Harmony Analytics

Harmony Analytics provides an interactive connection between Harmony Enterprise and TIBCO Spotfire®. You can send Harmony Enterprise data to Spotfire, or enhance existing Spotfire projects by pulling data from Harmony Enterprise, making this connector applicable to Harmony and non-Harmony users. Results or identified wells can also be sent back to Harmony Enterprise for further investigation.

Trend ratios to forecast secondary fluids

Use multi-segment linear trends on a log or coordinate scale to extrapolate ratio behavior. These Ratio Trends can be linked to a traditional decline analysis to create a secondary fluid forecast. For example, a GOR trend can be linked to an oil decline or gas decline to calculate a rate forecast of the other fluid.

Create Typewell worksheets of fluid ratios and apply a Ratio Trend to establish average ratio behavior for your groups. These trends can be copied and applied to individual wells.

When connecting to an ARIES database, time-based Ratio Trends connected to a decline analysis are imported. Ratio Trends that are linked to a traditional decline analysis can also be exported to a text file in an ARIES-readable format.

Import enhancements

- Added an option to discard all existing data during an import. For database imports, a look-back duration can be specified, only discarding the specified length of data starting at the most-recent date within the source database.
- Removed the requirement to map production data during a database import, so database imports of only attribute data are possible.

- Automatically include new wells added to your source database by selecting the option “All Present and Future Wells” within a database import. This is especially important when scheduling updates.
- The batch size can now be customized when importing *.harmony, *.hldb, or text files to support wells with higher frequency data.
- Improvements to well linking (merging) logic reduce the need for you to manually link wells:
 - You can customize which Entity Header attributes are used to merge incoming data with existing wells, including which attributes are used, and in what order. This customization is available when using the database connection, and for text, *.harmony, and *.hldb file imports.
 - Updated well-linking logic to handle null attributes and non-unique matches.
 - Added the Entity Header attributes Propnum and External Well Key. These attributes can be imported, used to merge incoming wells to existing, and used as the Display Name. When importing from an ARIES database, PropNum is mapped to both the External Key and PropNum fields by default.
 - An incoming attribute can be mapped to multiple Well Information fields in a database connection import. This is important when the incoming attribute is used as the Well Key and is used to populate the well header field.

Introducing Harmony Optimize

Our next-generation nodal analysis package has been branded as Harmony Optimize. This will be available upon request with the 2019.3 release for clients interested in trialing and sharing their feedback. When this module is licensable in 2020 it will also include Pressure Gradient and Advanced Forecasting capabilities. The 2019.3 release includes Gas AOF/TPC and Oil IPR/TPC analysis methods, which can be used to determine the expected operating point under different scenarios.

Enhancements for multi-well models

- **Ability to model Volatile Oil reservoirs:** both the conventional and unconventional multi-well models are applicable to volatile oil cases.
- **Fracture completion for the Conventional multi-well model:** you can model vertical fractured wells, along with vertical and horizontal wells.
- **Ability to modify gridding for the Conventional multi-well model:** you can modify some of the gridding parameters to increase speed or accuracy.
- **Push defaults button:** you can quickly set up a model by copying parameters from one well to another well, or to all other wells.

- **Additional parameters on the Shaded plot:** for conventional multi-well models, you can now display values for Net Pay, Porosity, and Permeability, as well as Pressure or Saturations.

Bulk rename analyses and worksheets

It is important to have consistent naming when exporting analyses, building visualizations outside of Harmony Enterprise, viewing results on a diagnostic map, etc. To quickly correct existing work, the Bulk Editor now supports changing analysis or worksheet names for multiple wells simultaneously.

Typewell enhancements

Cumulative production can be normalized by an attribute when on either the x- or y-axis.

Export and merge reserve analyses

Previously, the export to *.hldb and import of *.hldb files excluded analyses with reserves classifications. This included traditional decline analyses and forecast consolidations with a classification set. Now, the import / export of *.hldb files has been updated as follows:

- When exporting to *.hldb, all reference dates and the classified analyses associated with them are exported. The current user's active reference date is also set.
- When importing from *.hldb, the current user's active reference date and all associated classified analyses are imported.

End Date consistency in linked declines

When linking traditional declines of multiple fluid types, the primary fluid now determines the end of the forecast, and all other declines automatically update to maintain a consistent end date.

Installer command line options

The following settings and inputs can be specified as command line arguments when installing Harmony Enterprise:

- Application type: Harmony Enterprise vs. Harmony Enterprise SE.
- Universal and application licensing server URLs.
- For each license, specify the initial checkbox state to get a license during the application's startup.
- For each license, we provide the option to show / hide the checkbox used to automatically get a license during the application's startup.

Resolved issues from Harmony Enterprise 2019.2

- If the option to calculate sandface pressures was selected when updating production data for existing wells, sandface pressure calculations could be incorrect as the pdew = pbp condition was enforced after the sandface pressure calculations. This has been fixed.
- Resolved the crash that would occur when virtualizing the application with more than one user viewing Typecurves.
- Exclusive to 2019.2, a database constraint was removed, which previously prevented duplicate production records from being saved. This constraint has been reinstated.
- Fixed numerical model forecasting, which would stop when pressure dropped below atmospheric pressure.
- Fixed numerical model synthesis, which could prematurely end when using Ovalle.
- Harmony Enterprise no longer crashes if it does not have permission to update a scheduled database import task. If this occurs, an error is written to the log file.
- Fixed a defect where under certain conditions, multi-well models were failing to forecast gas injection when using pressure control.

Harmony Enterprise 2019.2 Release Notes

This release has the following features:

Enhancements for Multi-well models

- **Multiple layers for the unconventional model:** model several layers with unique reservoir properties per layer: net pay, saturations, porosity, and matrix permeability. Layers may communicate through fractures and stimulated reservoir volumes (SRVs) of the wells and/or through the matrix.
- **Simulate gas condensate:** for conventional and unconventional reservoirs.
- **Saturation distribution map:** display saturations in a convenient weighted-color scheme (red = gas, green = oil, blue = water).
- **Improved initialization of group properties:** property correlations and the gas type are initialized for a group based on the values you have specified for its constituent wells.

Performance improvements

The time to perform these tasks was reduced to increase productivity:

- Load / toggle between entities in the Analysis tab.
- Load / toggle between Decline / Typewell / Consolidation worksheets.
- View several Typewell operations: append forecast, color by attribute, daily resolution, and rate per attribute.
- View the Editors tab.
- Display production in the Diagnostics tab.
- View and edit large amounts of Attribute data.
- Create / modify a well filter.
- Delete wells.
- Delete custom datasets.
- Promote scenarios.
- Import *.harmony files that include custom datasets.

Enhancements to deployment utilities

- Installers have been built for the Well Security Manager application and the Database Manager application.
- Database Manager:
 - Includes a report listing the database changes between the current and previous version.
 - Supports SQL Server authentication.
 - Remains open after performing a task (for example, when creating a database).
 - Improved handling and error messaging, if sqlcmd.exe is not in the default location.
 - Added notification if a user does not have permission to create or upgrade a database.
 - Errors are logged to a file in the same directory as the application.

New role-based permission: Modify Editors

A Modify Editors role has been added to control which groups / users can change data in the Editors: Properties, Wellbore, Production, and Static Pressure. Note that when this role is not granted, and the Import / Update Wells role is granted, only the Database Connection is available for import.

Model a destructive refrac

Shrinking fractures can be modeled in the history or forecast of a numerical model by specifying a negative $\Delta(xf)$ Extension within the Refrac parameters section.

Typewell analysis linking

Typewell declines of different fluid types can now be linked (for example, oil and gas Typewell declines). Additionally, a ratio forecast can be applied to a Typewell decline in the Forecast worksheet.

Condensate decline analysis

Condensate decline worksheets have been added alongside other decline worksheets for ease of use.

Eliminated the limit on number of custom calculated datasets

The 2019.1 release introduced a custom dataset limit of 100 to improve performance. This limit remains for custom input datasets, while the number of calculated custom datasets is no longer limited.

Comparison plot includes the source name

When sending a plot to the Comparison Plot, if only one entity is selected, its name is set as the source.

Liquid ratio units have been added for custom datasets

Liquid ratio units have been added to the available list for custom datasets. Custom datasets with these units can be linked to default datasets with liquid ratio units.

Resolved issues from Harmony Enterprise 2019.1

- If duplicate production records exist for a well during import, previously all subsequent wells failed to import. Now, only the wells with duplicate records fail. The import also no longer continues to fail after the underlying data has been fixed.
- Fixed crashes that occurred when using a hierarchy structure based on at least two custom attributes.
- Fixed the hide disabled points option in the unconventional reservoir analysis. Now all four plots on the dashboard function correctly.
- Reduced the well batch size when importing *.harmony files to prevent large file imports from running out of memory.

- Fixed WOR analyses, which failed to import from *.harmony files.
- Resolved the crash during import if the database connection Sandface temperature is mapped, but not Wellhead temperature.
- Resolved the crash during import where the database connection's Sandface temperature was mapped, but the Wellhead temperature was not.
- Resolved the infrequent crash that occurred when importing plots from *.harmony files.
- Database upgrades no longer fail when a user has been removed from an active directory group, but still has access to the Harmony Enterprise database.
- When first specified, the input number of steps in a model's forecast persists.

Harmony Enterprise 2019.1 Release Notes

This release has the following features:

Identify forecasts deviating from production

Compare actual production with forecasted production for a batch of wells to quickly identify wells requiring attention. This feature calculates the deviation of cumulative volume over a user-specified period (that is, between 1 - 365 days). Reported results include:

- the difference between produced and forecasted cumulative volumes
- the percentage of actual production from forecasted volumes

All forecast and fluid types are supported. Results can be sorted, and custom groups created from the results table.

Restrict well access by group / user

Maintain the benefits of having all your company's wells in one database, while restricting which wells are accessible by active-directory group or user. Permissions are granted by a Security Administrator based on well attributes, ensuring new wells are properly assigned. Role-based security has also been enhanced to incorporate new security roles.

Enhancements to the Unconventional Multi-well model

- **Variable Landing Depths:** simulate staggered wells by landing them at different depths. In addition, fractures and stimulated reservoir volume (SRV) for each well do not have to extend through the entire net pay, allowing a portion of the net pay to be drained.

- **Overlapping SRVs and Fractures:** simulate communication between wells through overlapping SRVs and fractures, including scenarios where the child well is drilled within the SRV of the parent well. Various types of parent-child interactions can now be simulated.
- **Gridding options:** are now displayed.
- **Shaded plots:** are now available in side views (in addition to the existing top view). Permeability can now be displayed in the shaded plots.
- **Forecast:** the number of Time Steps for each forecast period can now be specified.

Interoperability with WellTest 2012v3 and later

Analyze buildups or drawdowns from your production database without re-entering this data by doing the following:

- Create an export file for use in WellTest 2016v2 or later
- Initialize or append wells in Harmony Enterprise by importing WellTest files from 2012v3 or later

The following data can be transferred:

- Well production
- Reservoir and fluid properties (excluding advanced properties such as relative permeability and custom property tables)
- The initial wellbore configuration profile
- Analytical models
- Hybrid models

Oil Material Balance

Analyze static pressure data for oil wells or groups to interpret the original oil in-place. With this analysis, you can account for pressure changes due to water encroachment, changes in formation compressibility, and volatile oil.

Import static pressures

Static pressures from a single well or multiple wells can be imported from text file sources (that is, *.csv, *.txt, *.xlsx, etc.).

Reduce data resolution during import

An arithmetic or logarithmic filter can be applied to each flow or build up period to reduce the data resolution when importing WellTest files, undefined text files (for example, *.csv), *.hldb's, or when using the database connection.

Globally specify defaults units

Build a custom unit set to be used when setting default display units. A mixture of metric and field units can be specified.

Specify classification consolidation aggregation behavior

An option has been added to configure the behavior of classified consolidations, to either include the fluid produced from all constituent wells / groups, or from only those matching the specified classification.

Consolidate custom input attributes

After merging several Harmony files into a Harmony Enterprise database, it is common for multiple duplicate custom attributes to exist. A utility has been added to consolidate multiple fields and their data into a single field (only available for input custom attributes). To prevent further duplicates, options are available to specify whether new custom fields should be added or discarded when importing.

Resolved Issues from Harmony Enterprise 2018.3

- Fixed an issue where customizing a second dataset in the Diagnostic tab applied this change to all datasets.
- Wellbore data is always imported for new wells, regardless of the selected import setting.
- Improved performance when selecting a filter in a database with many wells.
- Resolved a crash when running hybrid probabilistics caused by the weighted points.
- Rsoi can now be mapped and imported from a database connection import. However, if pbp is also mapped, it takes precedent.
- Fixed an issue to ensure that when forecast rates are exported, they are output as calendar rates.
- The database connection supports source tables / views regardless of case.

- Fixed a crash caused by using the defaults manager in the unconventional multi-well model when analyzing a single well.
- Restored persistence of typewell dataset customizations (for example, line thickness).
- Restored the ability to normalize rates in a typewell worksheet by a unitless attribute.

Harmony Enterprise 2018.3 Release Notes

This release has the following features:

Scenarios

Create alternate scenarios on wells using different well properties, wellbores, and calculated sandface pressures. Wells and their scenarios can be analyzed individually and their results and inputs compared. A scenario can be promoted to replace the primary well and become the official version. Harmony Enterprise saves the following information: scenario name, created by, last modified date, and last modified by.

Unconventional Multi-well model (beta)

With the Unconventional Multi-well model, history-match and forecast a group of wells with Horizontal Multifrac completions.

- **Requirement of symmetry:** for this release, all wells within the model are considered parallel, have the same horizontal wellbore length, and the same number of fractures.
- **Flexibility for completions:** you can model asymmetrical fractures (i.e., left fracture wing not equal to right), or define stimulated reservoir volume (SRV) that extends less than, or beyond fractures.
- **Clipboard functionality:** copy the multi-well model from one group to another.
- **Position Lines:** are used to indicate the progress during simulation, and can be moved after the simulation, so you can view spatial distribution of pressures or saturations at any desired date.
- **Ability to exclude wells:** specify whether a well is included during simulation to identify interference.
- **Water and gas injection:** this model supports injection. For example, injection can be used to simulate water injection during fracturing, and to match water rates during flow-back.

Enhancements to the Conventional Multi-well model

With the Conventional Multi-well model, you can history-match and forecast groups of wells that are vertical or horizontal. This release features the following enhancements:

- **Clipboard functionality:** you can copy the multi-well model from one group to another.
- **Position Lines:** are used to indicate the progress during simulation, and can be moved after the simulation, so you can view spatial distribution of pressures or saturations at any desired date.
- **Ability to exclude wells:** specify whether a well is included during simulation to identify interference.

Interoperability with Piper 2018.1 or later

Create export files for Piper with calibration data for building models, or analytical models for field forecasting. Wells are validated prior to exporting to ensure only complete and accurate information is imported to Piper. Well forecasts that have been created or updated in Piper 2018.1 or later can be imported into Harmony Enterprise for comparison and update purposes.

Gauge Depth correction

Convert gauge depth pressures (run depth pressures) to sandface pressures. This functionality is available for tubing, pumping, and casing flowpaths for configurations where the gauge and tubing are landed above datum (MPP).

Decline and Multi Segment decline enhancements

Enhancements include the following:

- **Undo:** revert analysis changes while making edits (e.g., line manipulation, parameter edits, best fit, etc.).
- **Change b and dlim as a bulk process:** the Bulk Edit Declines dialog box has been expanded to support changing the first segment's b value, or the dlim value for any segment.

Enerdeq import | new Completion and Production fields

Additional completion and production attributes now exist in the Harmony Enterprise database, and can be directly imported from Enerdeq. Attributes such as Lateral Length, Proppant Amount, IP Oil, and IP Gas have been added.

Importing Numerical models from Harmony

Numerical models created in Harmony are now migrated to Harmony Enterprise as analogous Hybrid models.

Enhancements for Comparison plots

Datasets in Comparison plots are now grouped to indicate that they originated from the same plot. This makes comparing results between different cases easier.

Gas Lift in DB Connection

The Valve Depth when using Gas Lift in the wellbore schematic can now be imported through the Database Connection.

Resolved issues from Harmony Enterprise 2018.2

- If an analysis has multiple fluids, the Typewell history + forecast now displays the correct forecast.
- Duplicate production rows are deleted when importing a well from a *.harmony file. Previously, the well was not imported, nor any groups the well belonged to.
- Fixed copying parameters between Analytical and Hybrid Fracture models.
- Fixed incorrect average pressure calculations for multiphase Hybrid models with adsorption.
- Fixed the scrolling issue with the Production editor. Previously, if you selected beyond the bottom of the Production editor, it scrolled to the top, which caused incorrect selections.
- If you use the database connection and have proprietary field names that match IHS Markit views, it is no longer mandatory to map these field names.
- The latest wellbore configuration data is always imported and used for the linear temperature profile, detailed temperature profile, and deviation survey

Harmony Enterprise 2018.2 Release Notes

This release has the following features:

Multi-well model enhancements

With the Multi-well model, you can history-match and forecast groups of wells while accounting for interference between wells. This release features the following enhancements:

- **Horizontal completions:** any well within a multi-well model can now have a vertical or horizontal completion type.
- **Aquifer support:** you can now model additional pressure support by connecting an aquifer to the reservoir. You can model an edge aquifer (connected to the reservoir boundary or a part of it) or a bottom aquifer (connected to the reservoir bottom or a part of it).
- **Water and gas injection:** the multi-well model supports injection. You can specify water and gas injection rates in the Production editor for individual wells to model injection during the history. You can also set up a forecast to model injection.
- **Display shapefile:** shapefiles that are available in the GIS tab can now be displayed on the schematic of the multi-well model. (This enables you to use a shapefile as a reference when creating or editing the reservoir boundary.)
- **Display Lat / Long:** the latitude and longitude of the current position of the mouse pointer are displayed in a model schematic and can be copied to the clipboard. (This functionality can be used to add a new infill well at the location you want).
- **Copy a Multi-well model:** use defaults manager to copy all the parameters of the existing multi-well model to a new one.

Project Economics

Perform project economics on traditional or rate transient analysis (RTA) forecasts, and compare cash flows and key performance indicators (KPIs) (e.g., net present value, internal rate of return, etc.).

Import PowerTools projects

Import well attributes and production data, along with the analyses associated with them, which includes declines, volumetrics and material balance analyses.

Resolved issues from Harmony Enterprise 2018.1

- Sandface pressures are now calculated correctly during import when production data is added using the “Append” option, and the pressure source is not explicitly set in the final row of the table.
- When migrating wells from *.harmony files (when the data is in an invalid state), pressure-loss-calculation settings are now set to default values.

Harmony Enterprise 2018.1 Release Notes

This release has the following features:

Bulk reporting

Create report sets to print one or multiple worksheets for a batch of wells. The report format is selected for each worksheet when printing, instead of upfront when the worksheet is created.

Bulk delete analyses / worksheets

View and delete analyses and worksheets for a selection of entities.

Bulk export production

Export historical production for a selection of wells for use in third party applications.

Multiphase URM and FMB

Now incorporates multiphase pseudo-pressure to account for simultaneous flow of oil / gas / water. The FMB can be used to model flowing pressure, rate, and average reservoir pressure. Additionally, the Productivity Index is available for oil.

Group FMB and Typecurves

Analyze total group production using FMB and Typecurves available on Hierarchy and Custom groups, and account for both production and injection.

Vertical Multi-well model

With the new Multi-well model, you can history-match and forecast groups of vertical wells. This model accounts for interference between wells, while the wells have individual reservoir and completion properties in each well region.

Gas static material balance

Estimate original gas-in-place (OGIP) for gas depletion drive and storage reservoirs using shut-in pressure data in a modified p/Z technique (p/Z^{**}). This technique enhances the conventional gas material balance method to include water drive, connected reservoir concept (composite permeability or layered), and geomechanical effected reservoirs by modifying Z to a Z^{**} formulation. This formulation is based on SPE paper 139428, "Advanced Gas Material Balance in a Simplified Format" by Moghadam, Jeje, and Mattar, first published in the January 2011 edition of the JCPT.

Resolved issues from Harmony Enterprise 2017.3

- The Typewell Wells pane now sorts consistently with the Entity Viewer.
- Fixed the issue where a subset of wells failed to update using the database connection, and the Status Window indicated the error: well is locked by current user.
- The Comments column is now correctly imported from text / Excel files.
- Wells no longer fail to import using the database connection when the well key includes leading or trailing spaces.
- All .harmony files are automatically unlocked before importing into Harmony Enterprise (a locked file would previously fail to import).
- Parsing of Aries declines has been updated to prevent unresponsiveness during updating when non-unique analysis names are produced. Previously imported Aries declines will not be updated following this change.

Harmony Enterprise 2017.3 Release Notes

This release has the following features and resolved issues.

Database Connection: import performance improvement

New well imports through the database connection are now approximately 15-18 times faster. Similar performance improvements can be realized when updating wells with the latest data by using the new option: "Overwrite Past 90 Days".

Spatial Explorer

To get more context for well locations, use map services, web map services (WMS), or Bing maps in the new Spatial Explorer tab.

Gemalto Sentinel RMS

With the Gemalto Entitlement Management System, clients have a self-service portal to manage their entitlements. This is a new licensing system with enhanced security measures.

Resolved issues from Harmony Enterprise 2017.2

- Calculated custom datasets are now computed for groups
- The auto-scale state persists when a Diagnostic template is added as a worksheet
- Diagnostic lines are always initialized and visible regardless of plot axis ranges

- Dataset customizations persist on plots (e.g., line thickness, color)
- Resolved the inability to remap a linked Access table within the IHS database connection
- Resolved failures when migrating *.harmony files
- Regardless of the number of series displayed in a comparison plot, the Deselect All Series icon is now responsive when clicked

Harmony Enterprise 2017.2 Release Notes

This release has the following features and resolved issues.

Decline Autoforecast

An automatic rigorous fit of an Arps' decline to a single or batch of wells. This initial best fit identifies the partition to fit to, excludes outliers, and minimizes b without sacrificing quality of fit.

Schedule Database Connection imports

Using the Windows Task Scheduler, specify the frequency for a scheduled database connection to run (daily, weekly, etc.). The update runs on the machine used to schedule this import. A license is required to set up / modify a scheduled update, but a license is not required when the update is running.

Database Connection support for Property and Wellbore data

The supported data types for the database connection now include almost all the inputs in the Properties and Wellbore editors. If the data is available, wells can be almost fully populated using the database connection.

Well Query

Build a group of wells by specifying attribute criteria, or providing a well list. Groups can be quickly updated by re-running the query.

Calculate sandface pressures during import

Sandface pressures can be calculated for all wells following an import / update, if this option is enabled.

Resolved issues from Harmony Enterprise 2017.1

- A model's parameter pane doesn't scroll when changing units.
- When importing unsupported Aries decline analyses, Harmony Enterprise no longer crashes.

Harmony Enterprise 2017.1 Release Notes

Probabilistic hybrid analysis

Specify a distribution for parameters with greatest uncertainty to understand the impact on the model forecast and EUR.

Volumetrics

Estimate the original hydrocarbon fluid volume in a reservoir or back-calculate well drainage area based on its EUR, recovery factor and certain reservoir and fluid properties.

Active directory


Manager user logins with Microsoft Active Directory

CDF plot

In addition to the cross plot, display attribute or analysis results using a CDF to understand parameter distribution

Resolved issues from Harmony Enterprise 2016b

- Resolved failure in database connection when both custom attributes or datasets were mapped and more than 50 wells were imported (either crash or data not imported)
- Wellbore deviation survey retained when updating well via import regardless of update option
- All references to custom attributes within a custom calculated attribute are persisted when imported using a *.harmony file
- Line manipulations on a typewell worksheets no longer affect the selected datasets
- When using a workflow, your typewell custom attributes are now retained
- Trailing spaces are now trimmed when comparing well keys using the database con-

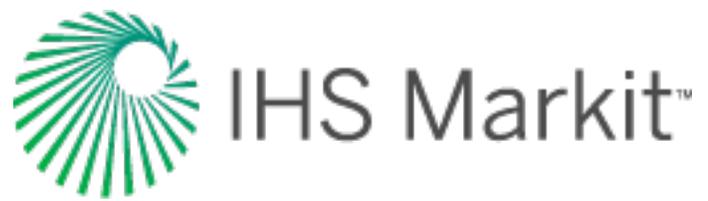

nection

- Fixed drag handle behavior when extending beyond end of screen

Active directory

Microsoft's active directory provides a variety of directory-based identity-related services. Harmony Enterprise pulls information from active directory for Status Window messaging, role-based security, and group assignments.

Note: Your database administrator (DBA) adds active-directory groups via the SQL Server Management Studio.

Important considerations

When DBAs set permissions, these items need to be considered:

- Individual permissions supercede group permissions. For example, if you have permission to import data and the group you are assigned to does not, you are still able to import data.
- Groups at the same level in the hierarchy, roll up / concatenate permissions. For example, if you belong to group ABC with import rights but no delete rights, and also belong to group 123 with delete rights, you have both import and delete rights.
- By default, individuals in a group receive all the same permissions as those set at the group level.
- If you remove all of the roles for an individual, they inherit the default roles. In order to have an individual inherit group permissions, you have to delete the user's login name.

Note: At this time, we support active directory groups that contain individuals, not other active directory groups.

User permissions in local folders

Harmony Enterprise saves and uses data in local folders throughout various processes while you work. If you do not have "write" permission to these folders, it can interfere with normal operations and negatively impact your projects. On startup, Harmony Enterprise checks for write access to the required paths. Ensure you are able to write to these locations for optimal use of Harmony Enterprise.

Logging directory: \Users\<>username>\AppData\Local\IHS_Inc\

This directory is used to store a running log file for Harmony Enterprise, including many software and database transactions. This log file is *not* the same as the Status Window log file.

"My documents" directories:

- \documents\fast
- \documents\fast\Core
- \documents\fast\Core_Attributes
- \documents\fast\AdvPropsCMDLL_GlobalImport
- \documents\fast\AdvPropsCMDLL_GasProperties
- \documents\fast\AdvPropsCMDLL_OilProperties
- \documents\fast\AdvPropsCMDLL_WaterProperties
- \documents\fast\AdvPropsCMDLL_GeoMechanical
- \documents\fast\AdvPropsCMDLL_RelativePermeability
- \documents\fast\HarmonyAnalysis
- \documents\fast\ImportData\ProductionEditor
- \documents\fast\EnterData\ProductionEditor
- \documents\fast\Database Connection
- \documents\fast\HarmonyEnterprise
- \documents\fast\HarmonyEnterprise 20XX.X\ScheduledImportLogs



Database deployment

Database deployment instructions apply to database owners (DBOs) or administrators.

- [Database prerequisites](#)
- [Enable role-based security](#)
- [Add groups / users to your database](#)
- [Import well data](#)
- [Configuring well security](#)
- [Troubleshooting](#)

Harmony Enterprise can import data from a relational database. [View definitions](#) (Excel file) can be used to help build a connection between Harmony Enterprise and the source database.

Database prerequisites

In order to get started, you need to set up a new database, or upgrade an existing one. If you want to grant access to your database, see [add groups or users to your database](#).

Set up a new database

To set up a new database with well security:

1. Navigate to Media\Deployment\DatabaseManager folder, and double-click the **Data-baseManager.exe** file.
2. In the Create Database tab, type the following information:
 - **Server Name** — the address of the server you are trying to connect to, typically <host-name>\<ServerInstanceName>.
 - **Server Port** — the port number your server is set up on. Leave this field blank to use the default setting.
 - Select **Windows Authentication** or **SQL Server Authentication** and type your Login ID and Password.
 - **Database Name** — the name of your database.
 - **Role Based Security** (checkbox) — select this option if you want [role-base security](#). You must enable this option if you want to use well security. If this option is deselected, all wells are available to all users.
 - **Additional Superuser** — if Role Based Security is enabled, you can opt to authorize a super user to modify roles for other users. The login for the additional super user is typically <Domain>\<Username>. If this field is blank, no super user is added.

Note: If you select the **Create DSN File** option, you can browse to a location where the DSN file is created.

3. Click the **Create Database** button.

A message confirms if the database has been created. The new database immediately attempts to upgrade itself to the latest version.

Update an existing database

When upgrading Harmony Enterprise to a new version, you must upgrade the linked database.

To upgrade your database:



1. Navigate to Media\Deployment\DatabaseManager folder, and double-click the **Data-baseManager.exe** file.
2. In the Upgrade Database tab, type the following information:
 - **Server Name** — the address of the server you are trying to connect to, typically <host-name>\<ServerInstanceName>.
 - **Server Port** — the port number your server is set up on. Leave this field blank to use the default setting.
 - Select **Windows Authentication** or **SQL Server Authentication** and type your Login ID and Password.
 - **Database Name** — the name of your database you are upgrading.
3. Click the **Upgrade Database** button.

A message confirms if the database has been updated.

Defragment your database

If you find that your database is running slowly, try defragmenting your database.

To defragment your database:

1. Navigate to Media\Deployment\DatabaseManager folder, and double-click the **Data-baseManager.exe** file.
2. In the Defrag Database tab, type the following information:
 - **Server Name** — the address of the server you are trying to connect to, typically <host-name>\<ServerInstanceName>.
 - **Server Port** — the port number your server is set up on. Leave this field blank to use the default setting.
 - Select **Windows Authentication** or **SQL Server Authentication** and type your Login ID and Password.
 - **Database Name** — the name of your database you are defragmenting.
3. Click the **Defrag Database** button.

A message confirms if the database has been defragmented.




Well Security

Before you can deploy Harmony Enterprise with well security, you need to have SQL Server 2016 or later.

Enable role-based security (RBS)

To enable RBS with an existing database:

1. Open Harmony Enterprise as a database owner, or user with the Harmony Security database role.
2. Connect to your existing database.
3. Click the **Options** icon () in the main toolbar and enable role-based security.

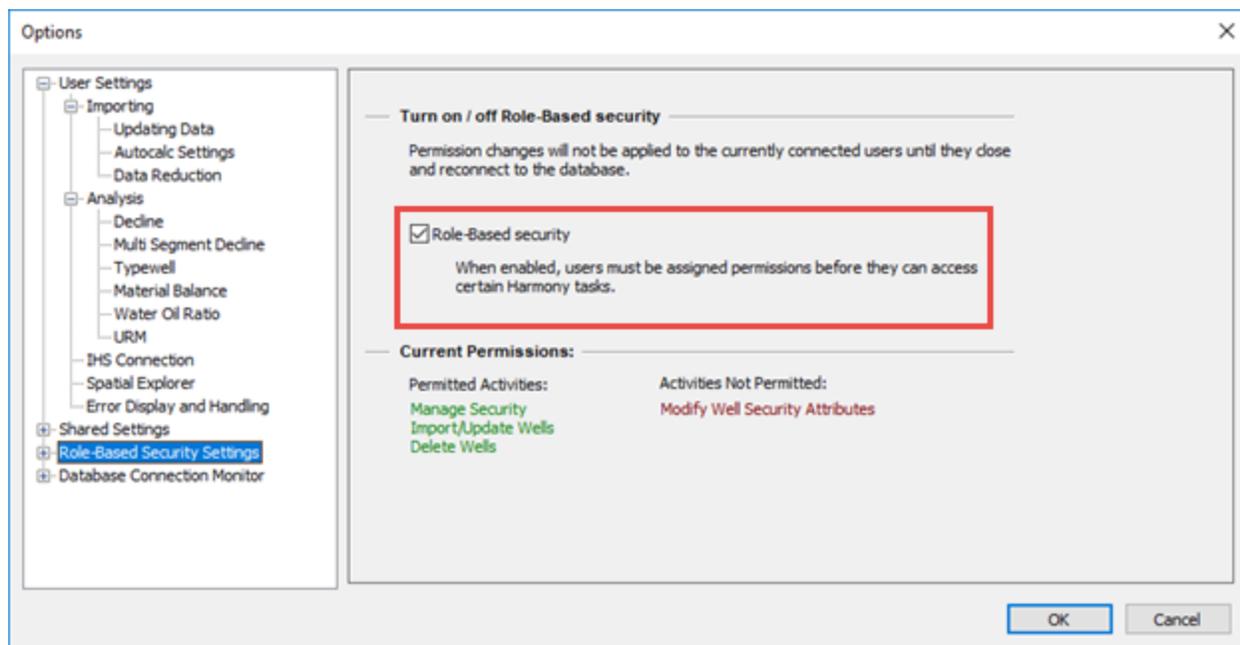

Add groups or users to your database

After you have created and upgraded your database, you need to grant access to the database. You can add groups or users to your database in two ways:

- via the Database Manager utility
- via SQL Server Management Studio

Using the Database Manager utility

To add groups or users to your database:

1. Navigate to the DatabaseManager folder and double-click the **DatabaseManager.exe** file.

The Database Manager utility opens.

2. Click the **Add Users and Groups** tab and type the following information:

- **Server Name** — type the name of your SQL server.
- **Server Port** — if you leave this field blank, the default port is used.
- Select **Windows Authentication** or **SQL Server Authentication** and type your Login ID and Password..
- **Database Name** — if you leave this field blank, you can only add a SQL server login.
- **Authentication** — select **Windows Authentication** from the drop-down list and type your Username / Group.

Or, select **SQL Server Authentication** from the drop-down list and type your Login ID and Password.

3. To add multiple users at the same time, click to enable the **Add Multiple Users** checkbox.

Then type your information separated by commas.

4. Click the **Add Users** button.

Using SQL Server Management Studio

To add groups or users to your database:

1. Open SQL Server Management Studio and connect to your server.

2. On the left-side, navigate to <your server>\Databases\<your database>\Security\ and right-click **Users**.
3. Click **New User**.
4. Navigate to the General page.
5. Set the User Type to Windows User.
6. Type a User Name and Login Name:
 - ensure these items match Windows login credentials, or the Active Directory group name.
 - credentials must already exist before they can be added to the newly created database.
 - the User Name and Login Name can be the same.
 - If you click the ... button, you can then click the **Check Names** button to verify that the credentials are entered correctly.
7. Set the Default Schema to **dbo** (without quotes).
8. Navigate to the Membership page and click the **HarmonyUser** role.
9. Click **OK**.

To assign additional users to be Harmony Enterprise Security administrators, you need to use Harmony's role-based security options to assign them the correct permissions. Assigning them the HarmonySecurity role using SQL Server Management Studio is not recommended, and at best only works temporarily.
10. Repeat these steps for as many users as needed.

Import well data (deployment)

To import well data for deployment purposes:

1. Open Harmony Enterprise.
2. Connect to the database you created using Windows authentication.
3. Import some wells.
4. (*Only needed for well security*) Click the **Attributes tab** and note the attributes that are set for the wells you imported.

You can use any of these attributes for well security: basin, battery, county, country, field, formation, operator, province / state, property, reservoir, and security.

5. Close Harmony Enterprise.



Configuring well security

These instructions are intended for database owners (DBOs) and administrators.

To configure well security:

1. Browse to the WellSecurityManager folder and double-click the **WellSecurityManage.exe** file.

The Harmony Enterprise Well Security Manager utility opens.

2. In the Connection Mode pane, select one of the options to connect to your database.
 - a. If you connected to a SQL server in the past, the Most Recently Used node displays content. Double-click a **Data Source Name** to open one of these connections.
 - b. In the Server and Database Names node, type all the required information, and then click **Connect to database**:

- **Server** — the name of your SQL server.
- **Database Name** — the name you assigned to your database.
- **User Name** and **Password** — type the credentials for the database.

To use your Windows login, click the **User Windows Authentication** checkbox.

- c. In the Data Source Name File Path node, click **Browse** and navigate to your .dsn file.
- d. In the Data Source Name List node, select the database you want to use. To use the ODBC Data Source Administrator dialog box, click **Open data source manager**.

The Group and Individual Users pane opens.

3. Ensure that Well Security is ON (); otherwise all users can access all wells.

4. In the Attribute Structure pane, drag attributes from the left box to the hierarchy on the right to create the attribute structure. You can select one-to-six attributes for security. Click **Continue**.

Note: If an attribute is a security attribute, it can only be edited in Harmony Enterprise by a DBO or a user with Manage Security permissions, or a user with Modify Well Security Attributes permissions.

5. Click a group (), user (), or security administrator () on the left-side, and select the attributes this user has access to. If you click the **All Present and Future Values** checkbox,

all new attributes under the parent node are granted to the selected user, if these new attributes are imported later.

Note: A security administrator is a database owner or they have the Manage Security role, which means they are able to access all of the wells.

To edit the attribute structure, click the **Edit** button in the top right

Important: . If you edit the security attributes, any security permissions previously set up are cleared.

6. When done, click **Save and disconnect**.

When you reconnect to your data source with Harmony Enterprise, deployment settings take effect.

Troubleshooting

If you experience difficulties with your deployment, we recommend reviewing these common error messages and their solutions prior to contacting Customer Care.

When I run the .exe, I see this error message: "There was an error with your input. Please ensure the server name and port you have provided are valid".

Verify that you entered in the correct server name and port.

These should be set up when you installed SQL Server and should be what you use to connect to the server when you start SQL Server Management Studio.

When I run the .exe file, I see this error message: "Database name already exists. Please try another database name".

The database name you have entered already exists as a database in your server. If you want to create a database with this name, either rename or delete the existing database first. To delete a database, right-click the selected database in SQL Server Management Studio and click Delete. You may have to select "Close existing connections", if there are any users connected to it at the moment. Note that as this step is IRREVERSIBLE, only do this if you have all your data backed up, and are completely sure you want to delete your database.

When I try to connect to the data source in Harmony, I see this error message: "cannot open the database; the login failed".

Did you remember to add this user to the newly created database?

For more information, see [add groups or users to your database](#). If you did add this user, verify that their information is correct. Also verify that your DSN is set up correctly.

- The driver should be "SQL Server Native Client 11.0"
- Ensure the SQL Server connected to is the same as the one you created your database on
- Ensure that SQL Server uses the integrated "Windows authentication" for the login ID
- The default database should be the name of the database that you created

I see this error: "Database is out of date. Please upgrade your database before connecting".

The Harmony Enterprise database is most likely out-of-date and needs to be upgraded. Double-click the DatabaseManager.exe file to upgrade the database to the latest version. This



error message can also be present if you run an older version of Harmony Enterprise, but try to connect to the latest version of the database.

Licensing

Harmony Enterprise is licensed on a per-module basis. A license for a given module grants you access to a set of analysis methods and features. For each module, there are two types of licenses available: standalone and network. At least one license is required to connect to a Harmony Enterprise database.

A standalone license is installed on your local machine. For information on standalone licensing, see [activating / deactivating licenses](#).

A network license is installed on a network server and Harmony Enterprise must request a seat from the network server. If you want to work offline, a network license can be checked out as a commuter, and is accounted for in the network license seat count. After you are finished working offline, you can check your commuter in, and release the seat. For information on setting up network licensing, see the [IHS Markit Installation Guide](#) and [License Manager help](#) (both links open in a new window / tab).

The Harmony Enterprise [startup screen](#) has a license icon for each module that indicates whether or not you have been granted a seat. For example, a green Harmony Forecast™ icon means that you have access to the Forecast module, while a grayed-out icon indicates that you do not have access. Clicking the **Forecast** icon, **Reservoir** icon, or **Optimize** icon opens the [Licensing dialog box](#).



Activating / deactivating licenses

For standalone licensing, you only need to install Harmony Enterprise.

To set up a network licensing system, you need to install the License Service on your server and the License Manager on one or more machines with connectivity to the server. For more information (including activation / deactivation information), see the [IHS Markit Installation Guide](#) (opens in a new window / tab).


Best practice

For network entitlements, activate / deactivate licenses through the License Manager. For standalone entitlements, activate / deactivate licenses through Harmony Enterprise. Do not activate licenses using the EMS Customer Portal unless instructed to do so by a customer care representative.


Activating / deactivating standalone licenses

To activate or deactivate standalone licenses:

1. Open your EMS - Entitlement Certificate email and copy your entitlement ID (EID).
2. Start Harmony Enterprise.
3. Open the [Licensing dialog box](#) by clicking either the **Forecast**, **Reservoir**, or **Optimize** icons in the startup screen.

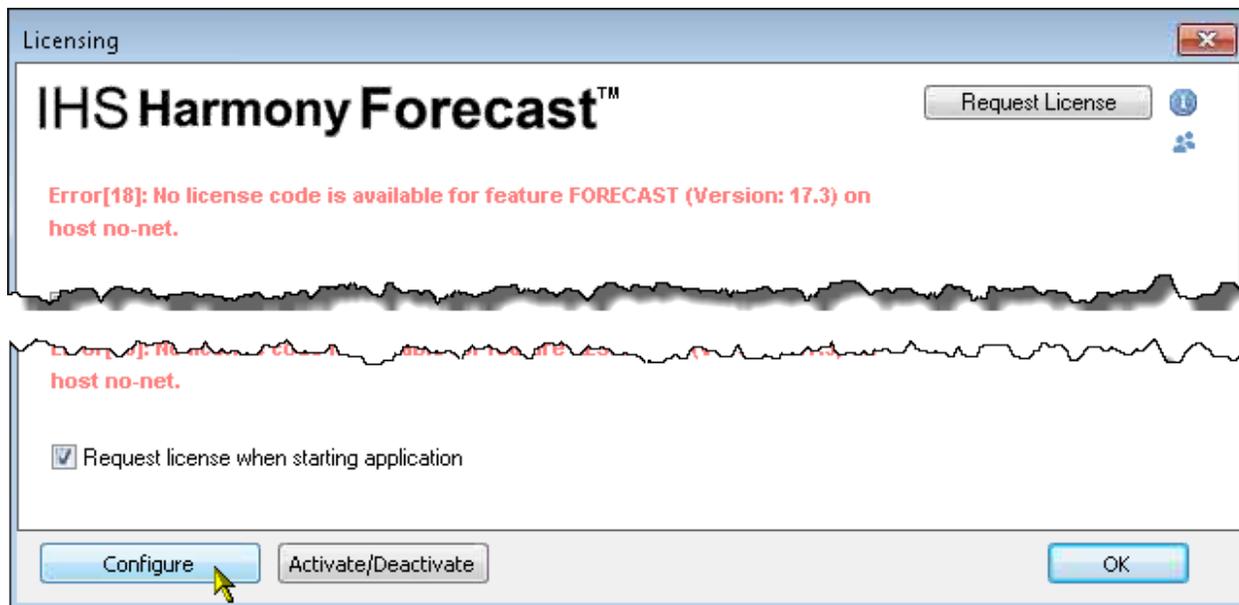

4. Click the **Activate / Deactivate** button.
5. Paste your EID (from the email) in the **Entitlement Id** field and click **Connect**.
6. To activate licenses, in the Activate tab, select the products you want to use and click the **Activate** button. For information on setting up licensing for IHS Markit software, click the **Online Help** button, which opens the [IHS Markit installation guide](#).

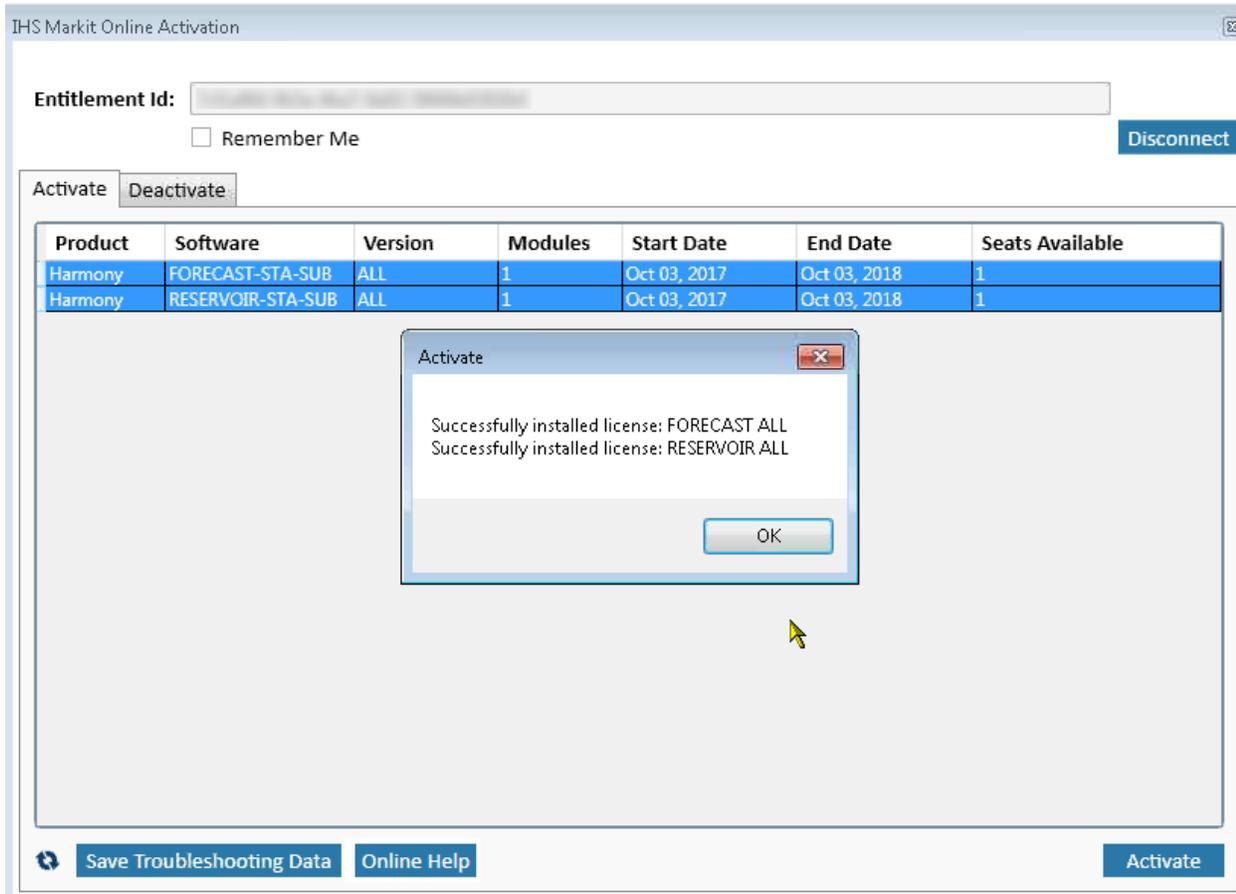

The screenshot shows the 'IHS Markit Online Activation' window. At the top, there is an 'Entitlement Id' text box and a 'Remember Me' checkbox. A 'Disconnect' button is on the right. Below this are 'Activate' and 'Deactivate' tabs. The 'Activate' tab is selected, showing a table with the following data:

Product	Software	Version	Modules	Start Date	End Date	Seats Available
Harmony	FORECAST-STA-SUB	ALL	1	Oct 03, 2017	Oct 03, 2018	1
Harmony	RESERVOIR-STA-SUB	ALL	1	Oct 03, 2017	Oct 03, 2018	1

An 'Activate' dialog box is open in the center, displaying the following text:

```

Activate
-----
Successfully installed license: FORECAST ALL
Successfully installed license: RESERVOIR ALL
-----
OK
  
```


At the bottom of the window, there are buttons for 'Save Troubleshooting Data', 'Online Help', and 'Activate'.

Your licenses are now active.

Note: You can also queue up renewed licenses as soon as you have received your new entitlement email. There is no need to remove your current license, or to wait until your current license expires.

7. To deactivate licenses, in the Deactivate tab, select the products you want to deactivate and click the **Deactivate** button.

The products are now displayed in the Activate tab and can be activated on a new machine.

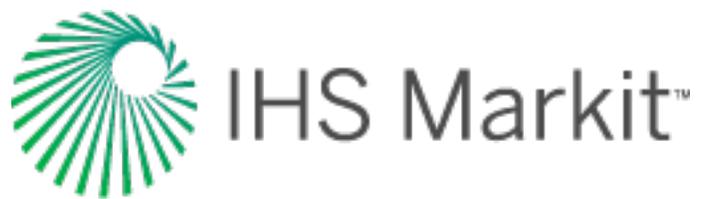

When the deactivation process completes, a dialog box opens indicating whether the process was successful or not. If the network experiences an interruption during the deactivation, a “Complete Partial Deactivation” button may appear. When the network is restored, clicking this button cleans up any artifacts caused by the interruption, and then the button disappears.

Licensing dialog box

This dialog box enables you to configure standalone or network licensing.

Standalone licensing




Active License -- Standalone — indicates that your license is ready for use. Note that if your license is not active, errors are displayed for troubleshooting purposes.

 **Information** icon — opens the [License Information dialog box](#).

Configure button — opens the [Licensing Settings dialog box](#) where you can configure your licensing (for example, you can install or uninstall a license that has already been activated).

Activate / Deactivate button — opens the [IHS Markit Online Activation dialog box](#) where you can activate and deactivate your licenses. For more information, see [activating / deactivating licenses](#).

Network licensing

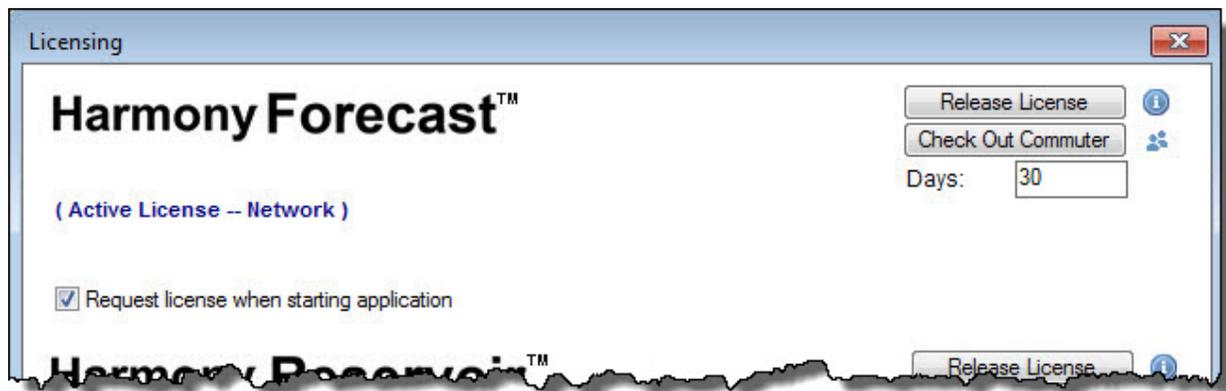

Active License -- Network — indicates that your license is ready for use. Note that if your license is not active, errors are displayed for troubleshooting purposes.

Request license when starting application checkbox — click this checkbox to automatically request your seat when Harmony Enterprise opens. If you click this checkbox before you have a network seat, a seat is requested. Note that this checkbox may be hidden by your administrator.

Release License button — releases your network seat. This button is only visible if you use a network license seat, and this button is only enabled if more than one seat is used, because Harmony Enterprise requires at least one seat to be used.

Note: A network license has a specific number of network seats, each of which allow one instance of Harmony Enterprise to run. In addition, a network seat can be commuted, which enables you to work offline.

Request License button — requests a network seat. Note that this button is only visible if you do not have a network license seat.

Check Out Commuter button — enables you to work offline by commuting a network seat. (This button is only visible if you have not checked out a commuter.)

Days field — use this field to set the number of days your commuter can exist offline. By default, you can check out the commuter for a maximum of 90 days. Note that this field is only visible when the Check Out Commuter button is displayed.

Check In Commuter button — click this button when you are finished working offline to check your commuter back in. (This button is only visible if you have checked out a commuter.)

 **Information** icon — opens the [License Information dialog box](#).

 **Current Users** icon — opens the Current Users dialog box, which lists all current users, machine names, start dates, and if users' licenses are commuters. (Commuter licenses enable you to work offline.) This list of current users can be useful if you are trying to track down a seat that could be made available. If the Commuter column lists "Yes", the user is likely away from the office.

Note that this icon may be hidden by your administrator.


Configure button — opens the [Licensing Settings dialog box](#) where you can configure your licensing (for example, you can set the name of your network license server).

Activate / Deactivate button — opens the [IHS Markit Online Activation dialog box](#) where you can activate and deactivate your licenses.

You need at least one license to run Harmony Enterprise; as a result, if only one license is active, the Release License option is grayed-out.

License Information dialog box

This dialog box is accessible from the [Licensing dialog box](#).

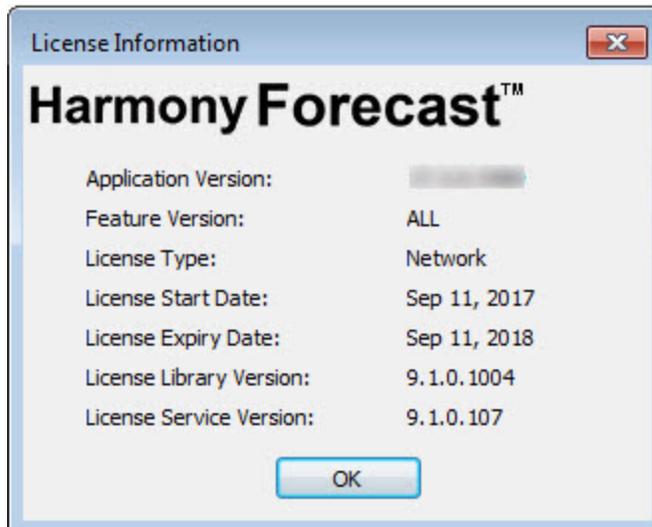


At the top, the name of your licensed module is displayed. Beneath this, the following information is displayed:

- **Application Version** — the build number for Harmony Enterprise
- **Feature Version** — indicates whether or not a license is version locked. A version of ALL indicates that a license is *not* version locked and can use any version of Harmony Enterprise compatible with the Gemalto licensing system. Version locked licenses (for example, perpetual licenses) have a version number, and can use all versions of Harmony Enterprise compatible with the Gemalto licensing system up to and including the version number specified.
- **License Type** — indicates a network or standalone license
- **License Start Date** — the first day the license can be used
- **License Expiry Date** — the last day the license can be used
- **License Library Version** — the build number for the license library
- **License Service Version** — the build number for the license server (only visible for network systems)

Licensing Settings dialog box

This dialog box is accessible from the [Licensing dialog box](#).

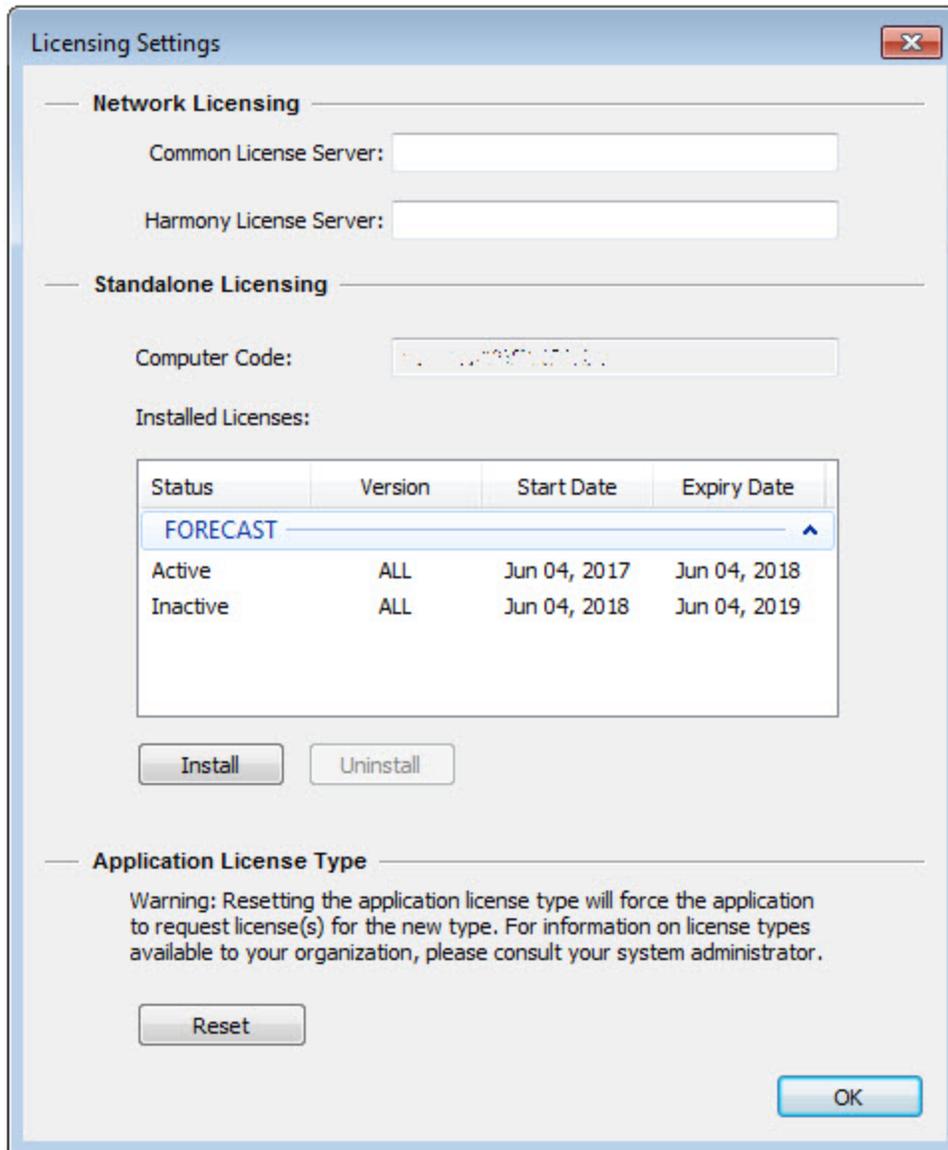

Network Licensing

Common License Server:

Harmony License Server:

Standalone Licensing

Computer Code:

Installed Licenses:

Status	Version	Start Date	Expiry Date
FORECAST			
Active	ALL	Jun 04, 2017	Jun 04, 2018
Inactive	ALL	Jun 04, 2018	Jun 04, 2019

Install Uninstall

Application License Type

Warning: Resetting the application license type will force the application to request license(s) for the new type. For information on license types available to your organization, please consult your system administrator.

Reset

OK

Network Licensing

Use this section to specify the location of your network license server. If you are hosting all of your IHS Markit network licenses (for applications using the Gemalto licensing system) on the same server, use the Common License Server field. If you have separate servers for Harmony Enterprise and other IHS Markit applications, use the Harmony License Server field.

Note: If you fill in both fields, the Harmony License Server field takes precedence.

Standalone Licensing

Computer Code field — this is the hardware footprint for your computer. It is only required if you need to activate a license using the customer portal. For computers with internet access, see [activating / deactivating licenses](#).

Installed Licenses — lists all of the standalone licenses currently activated. This section shows active licenses, as well as inactive licenses (expired or future licenses that are queued up).

Install button — click this button to install standalone licensing that you have activated using the customer portal.

Uninstall button — if you want to uninstall standalone licensing on your local computer, click this button. Note that standalone licenses that are uninstalled with this button are not available for activation on other computers. If you want to move a standalone license to another computer, it must first be deactivated, and then activated on the new computer. For more information, see [activating / deactivating licenses](#).

Application License Type

Reset button — if you have purchased the full version of Harmony Enterprise and want to switch from SE, click the Reset button. For more information, see [overview](#).

IHS Markit Online Activation dialog box

This dialog box is accessible from the [Licensing dialog box](#) and displays content after you connect to the Entitlement Management System (EMS). Click the **Activate** tab to activate products from the list, and click the **Deactivate** tab to deactivate products from the list. For more information, see [activating / deactivating licenses](#).

Entitlement Id — enter the entitlement ID (sent to you via email) and click **Connect**. This enables you to activate licenses or deactivate / move licenses from one machine to another.

Remember Me — if you click this checkbox, your entitlement ID is saved, so that you can quickly reconnect to the EMS

Activate tab — lists the products you can activate

Deactivate tab — lists the products you can deactivate

 **Refresh** icon — click this icon to refresh the product list in the table

Save Troubleshooting Data button — if you do not see the products you want in the list, Customer Care may ask you to click this button to generate a text file for troubleshooting purposes. If you need assistance, please [contact us](#). Note that this button only applies to the Activate tab.

Activate / Deactivate button — click this button to activate or deactivate products

How to...

These key procedures are essential to using Harmony Enterprise:

- [Connect to your data source](#)
- [Get well data into Harmony Enterprise](#)
- [Preview well data](#)
- [Analyze wells](#)
- [View results](#)
- [Export data](#)
- [Use workflows](#)
- [Link / unlink analyses](#)

Connect to your data source


Prior to connecting to your data source, you need to set up your database (SQL Server Express 2012 / 2014 / 2016, or SQL Server Enterprise 2012 / 2014 / 2016). This is a prerequisite for Harmony Enterprise.

When you launch Harmony Enterprise, the startup screen opens.



To connect to your data source:

1. Click **Connect to** and select from these options:
 - **SQL database** — for Harmony Enterprise (full version). Opens the Select Data Source dialog box.
 - **Existing .hldb file** — Browse to your existing local database file.
 - **New .hldb file** — Create an empty project to bring wells into.
2. In the Select Data Source dialog box, there are two ways to connect to an existing data source. Use option 1 or option 2.
 - **Option 1:** configure your data source through the Data Source Manager, and then connect to that data source.
 - **Option 2:** if you have a .dsn file that points to a particular data source, you can connect using the .dsn file.

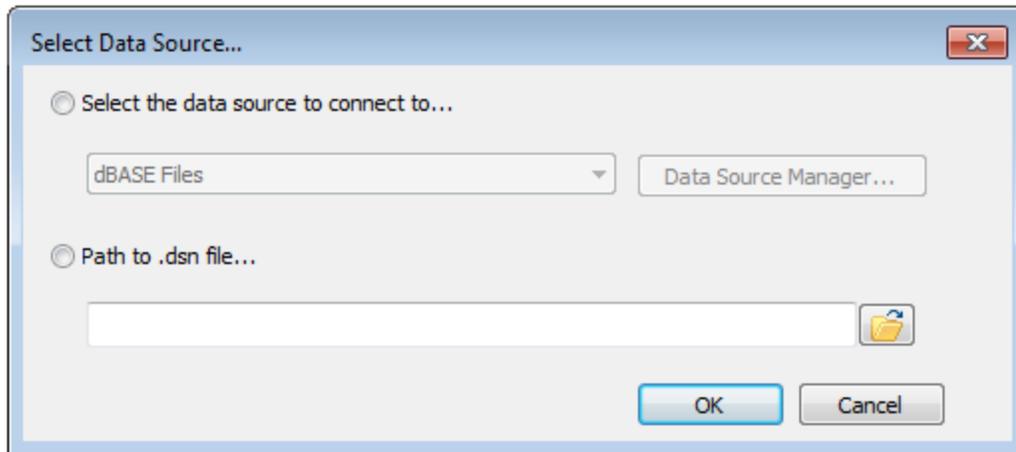


Connecting using the Data Source Manager

Harmony Enterprise requires a data source that uses the SQL server native client 11.0 driver.

To connect to your data source using the Data Source Manager:


1. In the Select Data Source dialog box, click **Select the data source to connect to**.
2. To provide information on how to connect to your data source, click **Data Source Manager**.
Select **SQL Server Client 11.0** when creating your DSN.
The ODBC Data Source Administrator dialog box opens.
3. Click the **System DSN** tab (*not* the User DSN tab), and then click the **Add** button to create a new data source.

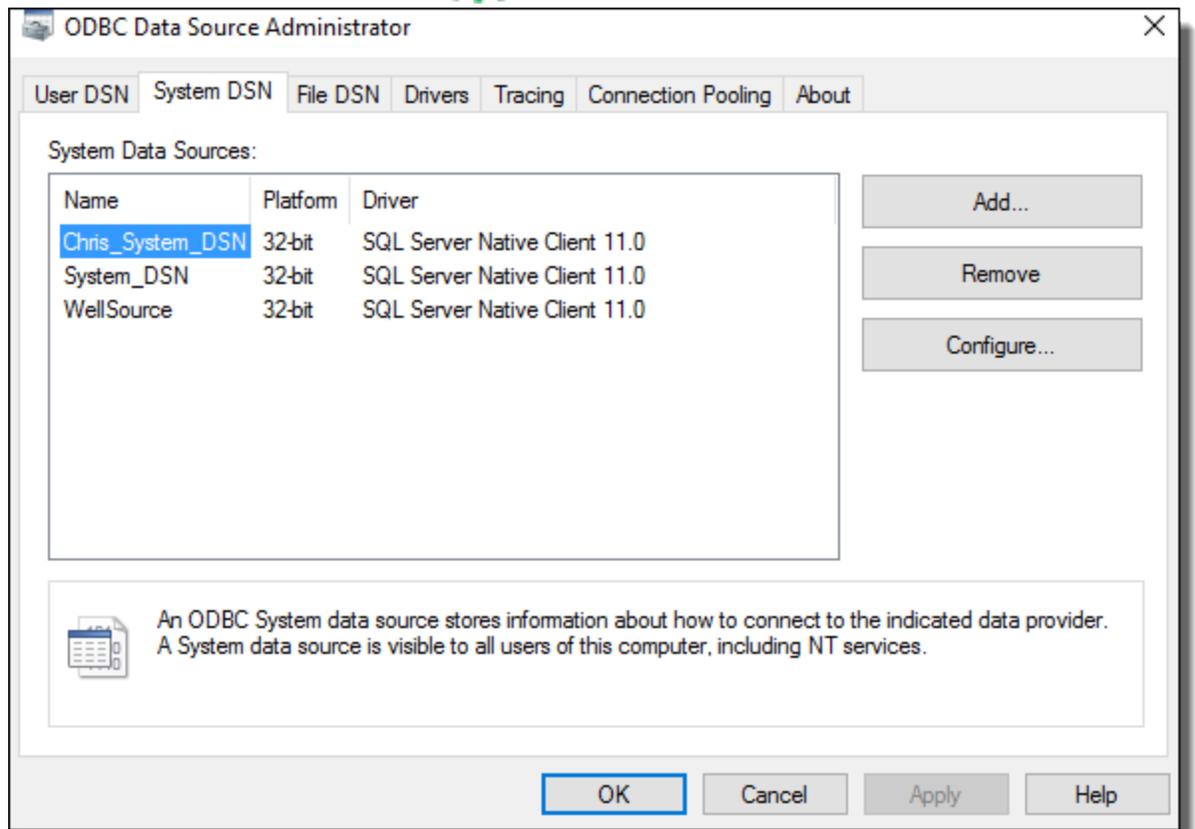


4. Select **SQL Server Native Client 11.0** from the list of drivers and click **Finish**.

The Create a New Data Source to SQL Server dialog box opens.


5. Type a name for your data source, select the server you want to connect to from the drop-down list, and click **Next**.

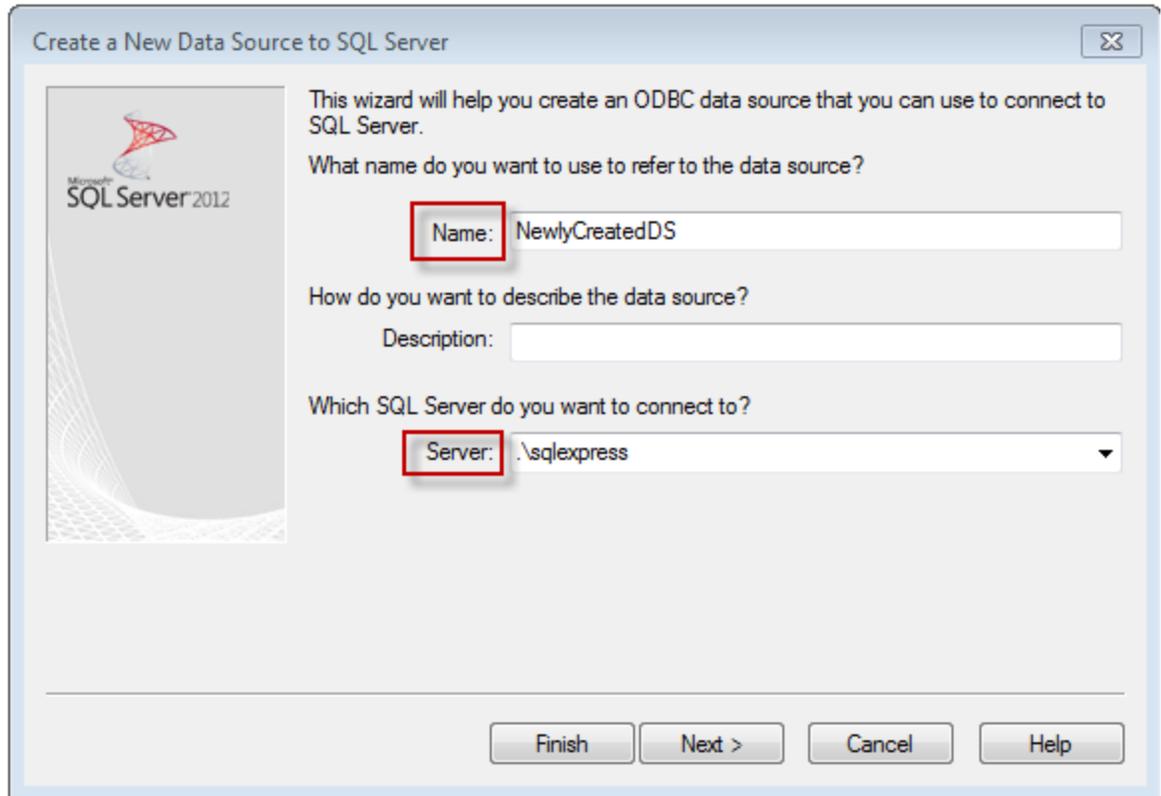

6. Click **Next** two more times. Then, select the database you want to connect to from the drop-down list.

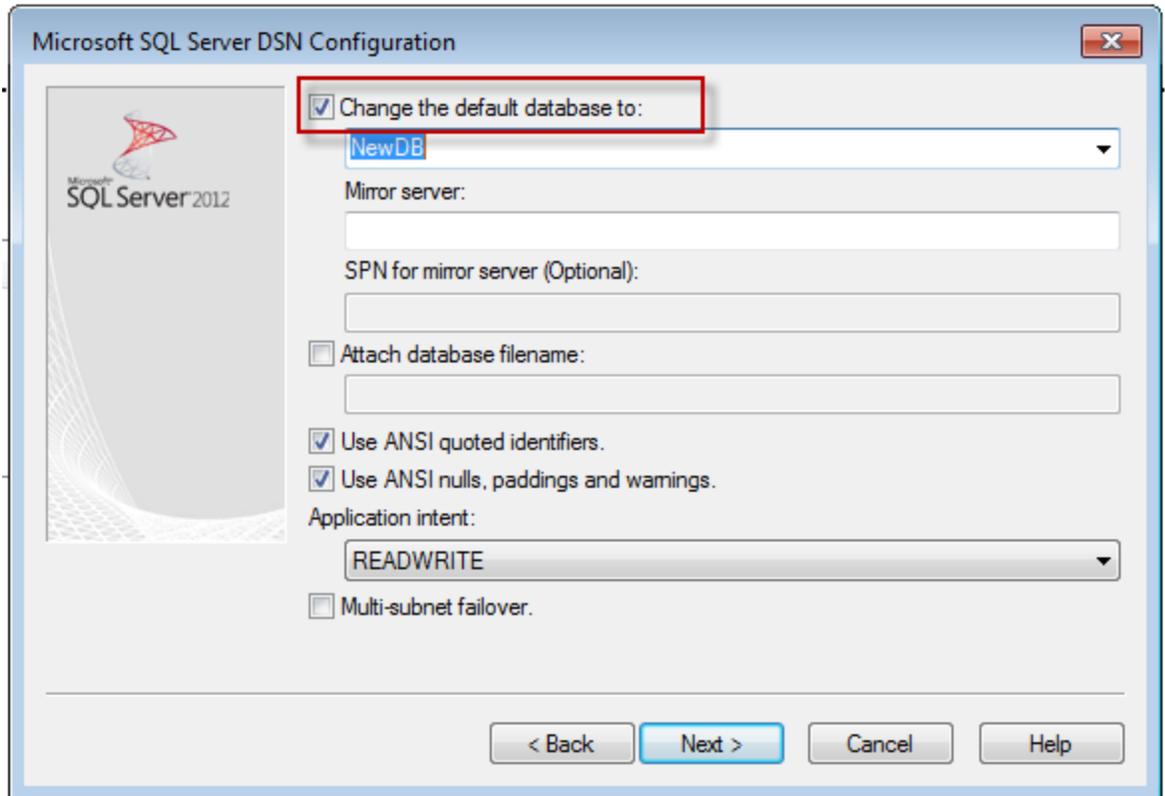

7. Click **Next** and then **Finish**. Close the ODBC Data Source Administrator dialog box.
8. Select your data source from the drop-down list and click **OK**.

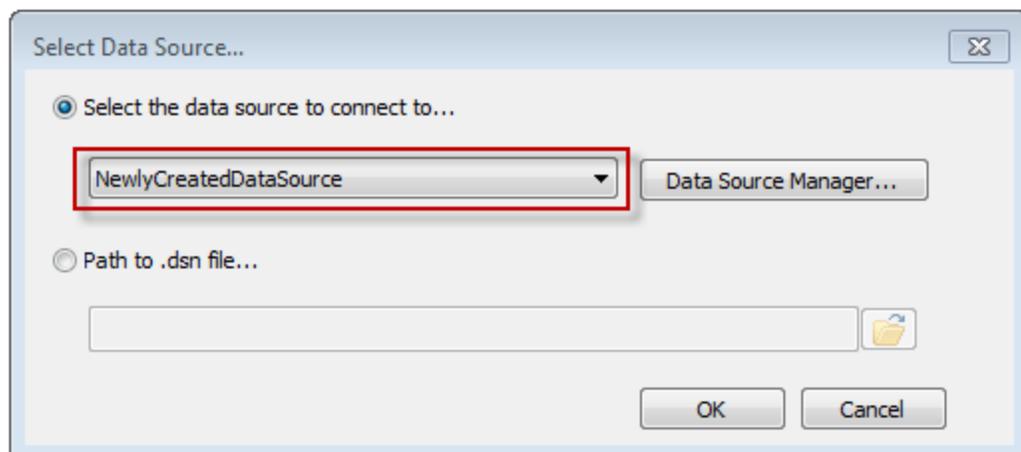


Your newly added data source is added to the drop-down list.

Connecting using a .dsn file

The .dsn file is a file that describes the data source, and it can be created by a database administrator.

To connect to your data source using a .dsn file:

1. In the Select Data Source dialog box, click **Path to .dsn file**.

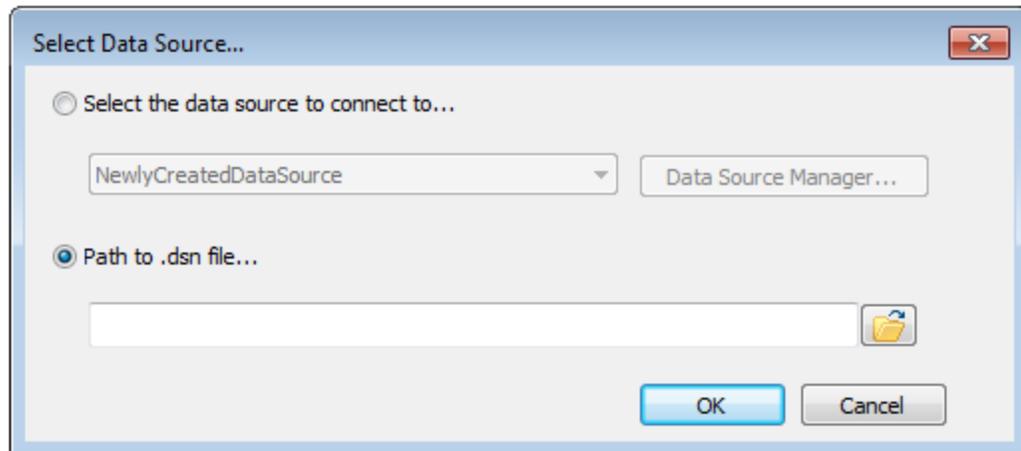

2. Type the full path to the .dsn file, or navigate to the file by clicking the **Browse** icon ().

Note: By default, clicking the Browse icon () opens the Documents folder. However, you can change this default location by setting a new default path with the **HARMONYDSN** environment variable.

Get well data into Harmony Enterprise

We recommend that you review your [updating data settings](#) prior to importing from Harmony. If you are importing into a Harmony Enterprise project where you expect to have duplicate wells (for the purpose of merging data), see [updating existing wells](#).

To get well data into Harmony Enterprise, you can:

- [import well data from a file](#)
- [import well data from a database](#)
- import / update from IHS:
 - [import from Enerdeq or information hub direct connect \(IHDC\)](#)
 - [import from Piper forecasts](#)
 - [import from PowerTools](#)
 - [import from WellTest](#)
- [import from Harmony](#)
- [import from an .hldb file](#)

Note: If you are updating a well that has been locked by another user (for example, Well1 is in the process of being merged with an existing Well1), this merged well cannot be imported into Harmony Enterprise while there is a lock in place.

To verify that import settings are set as you want, see the Importing node in the [Options dialog box](#).

Harmony Enterprise example files

Harmony Enterprise example files are saved within this directory:

Windows 7, 8, 10: C:\Users\Public\Public Documents\Harmony Shared\Harmony Enterprise 2019.3.

Tip: For hands-on practice with Harmony Enterprise, browse to the Examples folder (the default directory is C:\Users\Public\Public Documents\Harmony Shared\Harmony Enterprise 2019.3). In this directory, there are several different files that can be imported into your Harmony Enterprise project, including Merak (*.mer), LocalDB (*.hldb), and Harmony (*.harmony) example files.

Troubleshooting .Harmony and .hldb file imports

If you see this error message, **Error, Failed to import new Entity: [WellName]. Problems in:Analysis**, troubleshoot as indicated below.

This error occurs when you are trying to import a well from *.harmony or *.hldb files and the Analysis ID or Worksheet ID already exist for another well in your Harmony Enterprise database. This can happen when a well is imported and merged with an existing well, but in a later import, it is imported as a new well. In this case, the Well ID does not match, but the Analysis ID and Worksheet ID are identical. In order to resolve this conflict, either map the well to merge to the existing well with the matching Analysis ID, or delete the incoming analysis and worksheet with the conflict. The same Analysis ID and Worksheet ID cannot exist for multiple wells in Harmony Enterprise. For more information, see [general well linking logic](#) and [Harmony import logic](#).

Import well data from a file

With Harmony Enterprise, you can import plain-content files, such as .csv, .txt, and .xlsx, along with the following file types:

File Type	File Extension	Sources
Merak Note that you can import injection tubing pressure and it is displayed as Tubing Pressure in the Production editor.	.mer	Geoscout
Dwight dmp2	.dp2, .dmp2	IHS
Value Navigator (ValNav)	.vna	Accumap (IHS Accumap can save files in a ValNav format. Note that Harmony Enterprise cannot import .xml files from ValNav.)
Lasser Data	.pm	Lasser Data
Aries	.axp	Aries (IHS Accumap can save files in an Aries format.)
Geo Webworks	.mxp	Geo Webworks
298 98c	.98c	IHS
Recorder	.rec	

Plain-content files

When you import plain-content files, you need to select one of Production, Attributes, or Static Pressure; you cannot import more than one at the same time.

To import well data from plain-content files (for example, .csv, .txt, .xls, etc.):

1. Click the **Import** icon () in the main toolbar and select **File**.
Or, you can click the **Import** menu and select **File**.
2. Browse to your file and click **Open**.
3. In the Import Data Type dialog box, select **Production**, **Attributes**, or **Static Pressure**.

Note: If you are importing data from the Production editor, production data is imported, and the Import Data dialog box opens after you click **Open** in step 2. Note that it is not possible to save an import template.


4. In the Import Data dialog box, assign column headers by clicking the drop-down arrows at the top of each column.

- You must assign a Time and Date Time column (when using Production data), and a Well Identifier and a second column (when using Attribute data).
- If you select Production and a column is mapped to Well Identifier, Harmony Enterprise uses the name from the well identifier. This enables you to import one table or Excel worksheet containing multiple wells.
- If you are importing from an Excel file (with or without multiple worksheets), Harmony Enterprise uses the worksheet name for the well name. This enables you to import multiple wells by separating them into different worksheets. (You can also use the Apply To button to copy the column mapping to all worksheets.)
- If you are importing from a .csv or .txt file, and there is no column mapped to a well identifier, Harmony Enterprise uses the file name for the well name.

The Import Data utility assigns start and end rows to the dataset. The start row (the first entry populated in Harmony Enterprise's production or attributes table) is indicated by two arrows pointing down in the far left column. The end row (the last entry populated in Harmony Enterprise's production or attributes table) is indicated by two arrows pointing upwards in the far left column.


5. Verify that the correct rows are assigned as the start and end rows, and modify if necessary.

To modify a row, right-click the row and select **Set Start Row** or **Set End Row**.

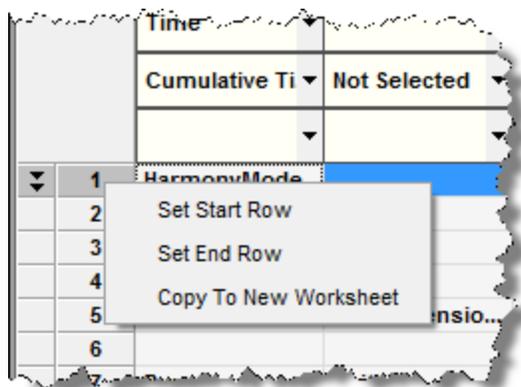

6. After you have assigned your column headings, click **OK**.

The Select Worksheets to Import dialog box opens.

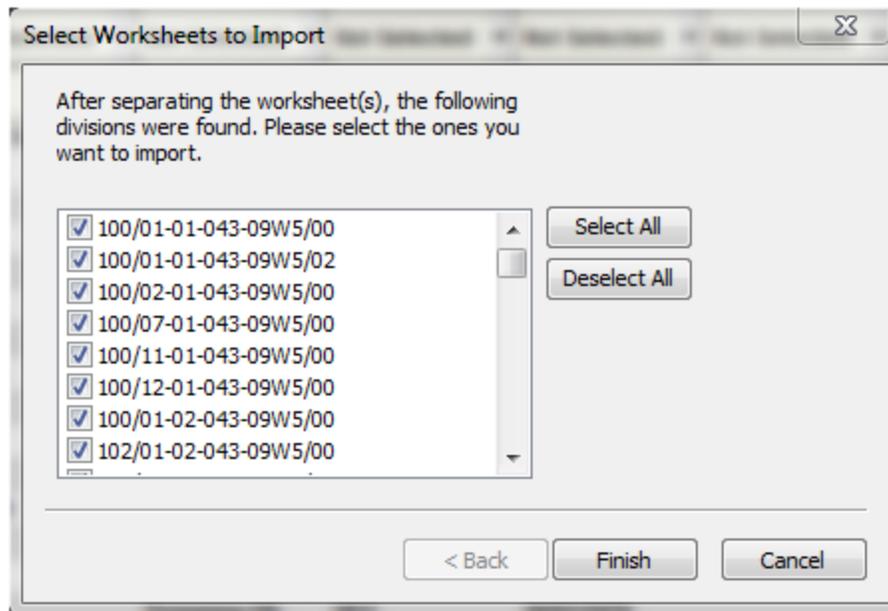

7. Click the checkboxes for the entities you want to import, and click **Finish**.

Harmony Enterprise imports the well data. After the import process is complete, the new wells are listed in the Entity Viewer - Hierarchy pane. (If you imported the wells as a group, they are displayed as a new custom group in the Entity Viewer - Custom pane.)

Other files

To import well data from the other supported file types:

1. Click the **Import** icon () in the main toolbar and select **File**.
Or, you can click the **Import** menu and select **File**.
2. Browse to your file and click **Open**.

Note: The import behavior for an incoming file, which contains well information about wells that are already in the database, is determined by the settings in the Options dialog box, under the Importing node.

Import well data from a database

You can import well production and reservoir data from your company's database into a Harmony Enterprise project. You can also import data from any open database compliant (ODBC) database.

Harmony Enterprise uses the [Database Connection Wizard](#) to facilitate importing well production and attributes, along with wellbore, fluid, and reservoir properties from your company's proprietary database into the Harmony Enterprise database.

Important: The Database Connection Wizard reads the data from your company's database, but does not write to it. Therefore, there is no danger that Harmony Enterprise can corrupt your database.

If you would like to view a video of the import database wizard, see [connecting to a database to import data in Harmony Enterprise](#) (opens a YouTube video in a new window).

To import well and production data from your database:

1. Click the **Import** icon () in the main toolbar and select **Database Connection**.
The Import Database Wizard opens.
2. In the Import Database - Harmony dialog box, read the welcome message and click **Next**.
3. In the Specify Connection Settings dialog box:
 - to create a new database connection, click **New Connection**.
 - to edit an existing database connection, select the connection, then click **Edit**.
 - to use an existing connection, select the connection, then click **Next**. Proceed to [step 9](#).
 - to delete an existing connection, select the connection, then click **Delete, Yes**.
 - to copy an existing connection, select the connection, then click **Duplicate**. This copies the existing database mappings in a connection to a new connection.
 - *(not applicable to SE licenses)* review your scheduled well updates (daily, weekly, or monthly). For more information, see [scheduling well updates](#).
4. In the [Set Up Connection Settings](#) dialog box, type / edit your connection name.

Your connection name, data source, connection credentials, and schema are saved for this database connection and can be used by others. Your user name and password are saved on a per-user basis.

Click **Access File** and browse to your Microsoft Access database (.mdb, .accdb files). Or, click **Data Sources** and select your data source from the drop-down list, or click **Add New**.

5. In the Specify Mapping dialog box (only applies to new database connections), select your initial mapping configuration (that is, Aries, IHS Views, Custom Mapping, Legacy Schema Mapping); click **Next**.

- **Aries** — We have provided a mapping based on the standard tables and columns available in an Aries database. Mapping is pre-configured for the default Aries data model.
- **IHS Markit Views** — If your DBA or other database support has already created a view in your database to map its content to Harmony Enterprise, select this option. Mapping comes from the SQL views or queries built within the data source.
- **Custom Mapping** — You can manually map the tables and columns in your database to recognized Harmony Enterprise data in the next part of the wizard.
- **Legacy Schema Mapping** — If you have a schema.csv file from Harmony, you can use this to import from your database.

6. In the Assign Mapping dialog box, set your initial mapping, or resolve any errors in the existing mapping as follows:

- a. In the left pane, tables are mapped by clicking the **Client Tables/Views (source)** cell. If you select a blank value, the table is not populated.
- b. In the left pane, select a table under Harmony Enterprise Views (destination). This populates the right pane with mapped columns for the selected table. In the right pane, select a cell under Client Column Name. This displays a drop-down list of available columns from the database you are importing.

Note: For well information, you can assign a field to more than one column. The Production History table does not have to be mapped.

7. To set your units, first resolve any errors in the right pane by clicking the **Client Column Name** cell, and selecting from the drop-down list. Then, click the **Units** cell, and select from the drop-down list. Click **Next**. (Errors are displayed in red text and warnings are displayed in orange text.)

Your source tables, source columns, and unit mappings are saved for this database connection, and are available for any user who connects to this source through the same Harmony Enterprise database.

8. In the Well Linking Criteria dialog box, select the attributes you want to use for linking wells; then click **Next**.

Note: The attributes you select for linking are saved for the current database connection only.

If there is no data in any of the columns you selected for well linking, the Entity Header Data Valuation dialog box opens, and it lists the columns with no data. You can change your mapping, change your well linking, or import anyway.

9. In the Set Up Filters dialog box, click **Add** to create a filter to restrict which wells are imported. If you do not enter any filters and click **Next**, all wells in the data source can be viewed and imported.

10. To create a filter, click **Add**. In the Filter a Column dialog box, select your filter from the **Filter Column** drop-down list, and then type / paste your values (lowercase or uppercase — filtering is case *insensitive*), or select from the checkboxes. Click **OK**; then click **Next**.

The validation of your filtering values is handled in the next step of the wizard, and your filters are saved for your database connection (not shared with others).

11. In the Select Wells to Import dialog box, a tree structure can be created to view available wells. To build a tree structure, click the **Tree Hierarchy** icon () and select attributes. By default, all wells are selected. To exclude wells from import, click the checkboxes to deselect them. To see a preview of the production data, click the well's *name*. Click **Next**.

The wells you selected for import are saved for your database connection.

Note: When importing data with an irregular frequency (for example, WellTest data or synthetic data with a logarithmic time track), or all shut-in periods reported, click the **Continuous Time Track** checkbox. For more information, see [continuous time track](#).

12. In the Select Analyses to Import dialog box, select the decline curves you want to import. Click **Next**.

13. In the Import Options dialog box, options are displayed for updating the data of existing wells, auto-calculating sandface pressures, reducing data, and scheduling well updates. To override the global settings on a one-time basis, select your data options from the drop-down lists. For more information on these options, see [updating data](#) (set in the Options dialog box). To automatically import data, see [scheduling well updates](#).

14. Click **Import** (or **Finish** in the case of scheduled imports).

The database wizard remembers your last database connection, and it is automatically selected the next time you run the wizard.


Import / update from Enerdeq or IHDC

You can import / update data well production data and directional survey data from IHS:

- Enerdeq (opens the Enerdeq web page in a new window) provides access to US well and lease production data.
- The Canadian Hub or IHDC (Information Hub Direct Connect) provides access to Canadian well production data. Note that wells must have DLS or NTS naming.

To import or update from IHS:

1. Click the **Import** icon () in the main toolbar and select **Enerdeq / IHDC**.
2. Select IHS Enerdeq (**US**) or IHDC (**Canada**).
Your options vary depending on your country.
3. Enter your IHS Enerdeq or IHDC credentials.
The dialog box options are now enabled.

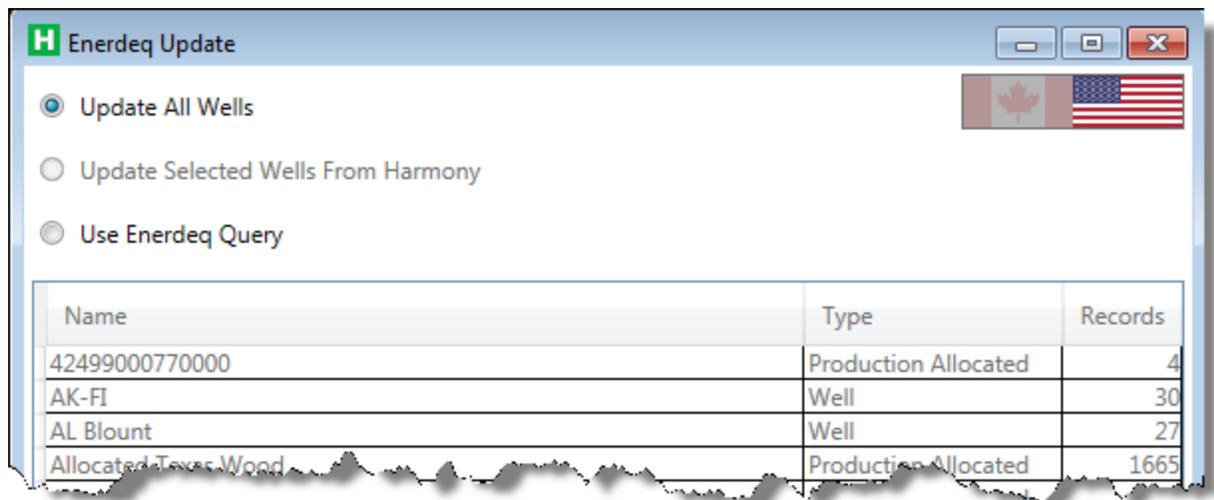

4. To update your wells from Enerdeq, click **Update All Wells**.
If you have multiple wells that are mapped to existing wells, the Link Imported Wells to Existing Wells dialog box opens.
5. If you selected wells in Harmony Enterprise before selecting **From Enerdeq / IHDC**, the Update Select Wells from Harmony option is enabled. Click **Update**.


The wells in Enerdeq are updated with your Harmony Enterprise data.

6. (US only) To import wells / production data from API numbers obtained by running an Enerdeq query, click **Use Enerdeq Query** and then click **Import**.
Or, double-click a row in the table.

Enerdeq queries (US only)

In the Enerdeq Update dialog box (see above), selecting the **Use Enerdeq Query** option displays queries currently saved in your Enerdeq account. Note that unallocated production is not imported — unallocated queries are not displayed in the table.

This table shows the query type (allocated production or well), and lists the number of records that the query currently returns. (The table can be sorted by clicking the column headers.) If you have set your import option to combine records with the same API (some wells have multiple production IDs), the number of wells imported to Harmony may differ from the number of records listed in the table.

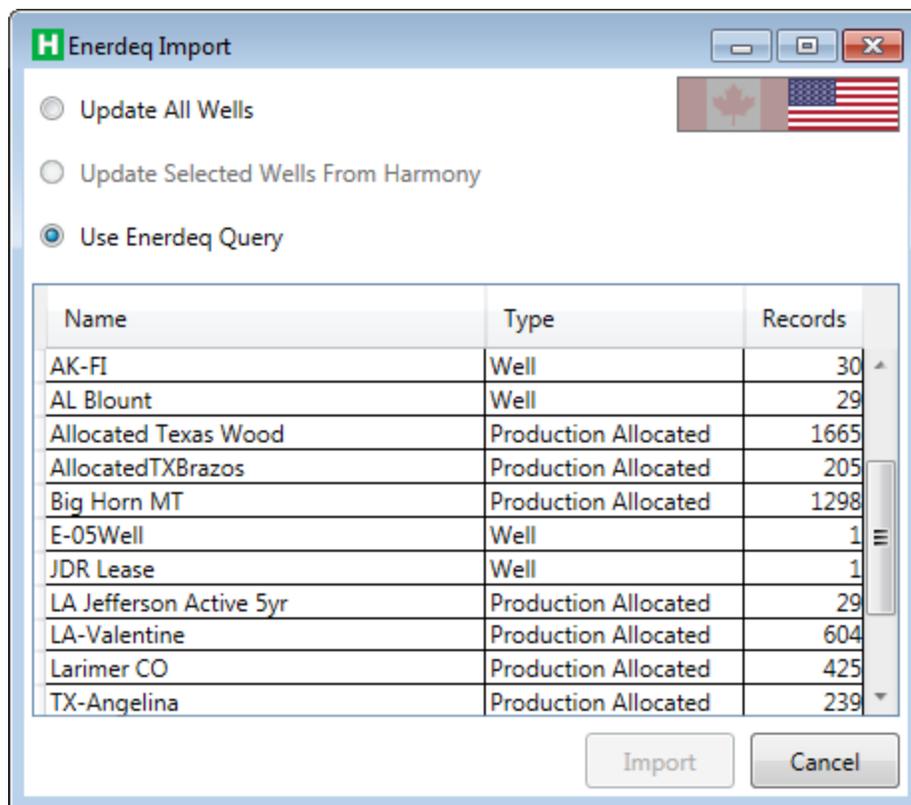

Import from Piper forecasts

If you have forecasts in Piper®, you can import them into Harmony Enterprise.

To import from Piper:

- Click the **Import** menu and select Piper Forecasts.
- Or, click the **Import** icon () in the main toolbar and select Piper Forecasts.

Note: Incoming Piper wells are merged with existing wells in Harmony Enterprise. When wells exist in the Piper .fdb file, but do not exist in the Harmony Enterprise project, they are not added.



Import from PowerTools

If you have US well production with reservoir and economic analyses in PowerTools, you can import this data into Harmony Enterprise as long as you have access to these files:

- Access database file (.mdb) — this Microsoft database file must be from PowerTools 9.3 or later.
- cache folder (with .98c files) — each .98c file represents a single well's data.

Note: Decline analyses in PowerTools are imported with a maximum b value of five. In addition, imported files do not include economics or Field Direct data.

To import from PowerTools:

1. Click the **Import** menu and select **PowerTools**.

Or, in the main toolbar, click the **Import** icon () and select **PowerTools** ()

The PowerTools File Import dialog box opens.

2. Browse to your .mdb PowerTools file.
3. *(Optional)* Browse to the folder where your .98c cache files reside.

Note: If your cache files are stored elsewhere, you can import this data later via an Enerdeq update. Make sure that your .98c files match your .mdb file, so that the production data is synchronized.

4. Click the **Import** button.

If there are no .98c files that match the .mdb file, the .mdb file imports its data, and then a dialog box opens stating that none of the .98c files were imported.

Note: If you have missing static pressures in your PowerTools project (Access database file) or .98c file, your material balance is not brought over.

Import from WellTest

WellTest files can be imported to Harmony Enterprise. You can transfer the following data:

- Production Editor data
- Properties data — excluding advanced properties, such as relative permeability and custom property tables.
- Wellbore Parameters — WellTest has one wellbore and uses the Physical Wellbore / Initial configuration in Harmony Enterprise.
- Analytical and Numerical (Hybrid) models — only these models are supported. (CBM and Numerical models are not supported.)

To import from WellTest:

Click the **Import** menu and select **WellTest** ()

Harmony Enterprise opens .fkt files for the WellTest import.

Note: WellTest version 2012v3 and later is supported by Harmony Enterprise.

Import Harmony data

When you import a project from single-user Harmony, be aware of the items that are imported and not imported:

Imported	Not imported
Entity hierarchy structure and custom groups	Custom group tabs
Attributes (including custom attributes)	Surveillance groups
Properties	GIS layers (shape, image, bubble, annotations, flags)
Wellbore (excluding scenario wellbores)	Comparison plots
Production (including custom datasets)	Layers from multilayered wells
Static pressures	
Reference dates	
Worksheets and analyses (excluding items listed to the right with a *)	*Voidage Replacement Ratio analyses
	*Probabilistic or sensitivity analyses
	*CBM analyses
	*VirtuWell analyses
	*Analytical models: water drive and multilayer

Note: When importing .Harmony files, we support Harmony 2014.1 and later.

Numerical models are converted as best as possible to equivalent numerical models in Harmony Enterprise. Since options, templates, and workflows are user-specific and saved on your workstation, these items are not imported.

To import from Harmony:

1. Click the **Import** menu and select **.Harmony file**.

Or, you can click the **Import** icon () and select **.Harmony file**.

2. Browse to your .harmony file and click **OK**.

Your Harmony project can now be used in Harmony Enterprise.

Information on items that are imported to different locations

As a general rule, any data and analysis types that do not exist in Harmony Enterprise are not imported from a .harmony file. However, there are some special import rules for some items:

- Legacy numerical models are converted to our current numerical model
- Custom groups in Harmony are imported into the Shared Groups tab (Entity Viewer - Custom) in Harmony Enterprise
- Production Editor data:
 - Run Depth Pressure is imported as Imported Sandface Pressure
 - Injection Tubing Pressure — is imported but it is displayed as Tubing Pressure in the Production editor. If both Tubing Pressure and Injection Tubing Pressure exist in the .harmony file, then only the Tubing Pressure is imported.
- Wellbore Editor data:
 - If a well has multiple deviation surveys in the wellbore, only the first-populated survey is imported
 - If a well has multiple temperature profiles, only the last-populated profile is imported

Import from an .hldb file

In place of SQL Server databases, Harmony Enterprise provides an option to create or export to an .hldb file. These files can be imported into SQL databases or other .hldb files in order to merge or replace your work.

Whether or not information is overwritten, appended, or merged into the existing database, is dictated by the Options dialog box. Wells and groups that were originally extracted from Harmony Enterprise have an ID that requires them to be merged back to the original. Analyses that have been modified from the original are overwritten, and new analyses are appended. Wellbore configurations are only imported, if the original wellbore configuration is empty.

Note: With an SE license, you cannot import entities from an .hldb file.

The following items are not imported:

- GIS layers (shape, image, bubble, annotations, flags)
- Comparison plots
- Classified analyses not associated with the active reference date
- Report sets
- Monitor results

Since options, templates, and workflows are user-specific and saved on your workstation, these items are not imported.

To import from an .hldb file:

- Click the **Import** icon () and select **.hldb file**.
- Browse to your .hldb file and click **Open**.

Your imported entities are brought into your existing database from the entities in the .hldb file.

Custom groups

If you import an .hldb file with a custom group that has the same name and ID as one found in the database, the custom group is merged in the database.



If you import an .hldb file with a custom group that has the same name but a different ID from one in the database, a new custom group is created with a filename appended by a numeric (for example, <custom_group>(1), <custom_group>(2), etc).

Preview well data


When you click various tabs, a different subset of information is displayed in the main pane for the selections in the Entity Viewer (Hierarchy or Custom). The geographic information system (GIS) tab displays the location of the entities on a world map, if the location attribute fields are populated, while the Attributes tab displays the meta-data associated with the selected entities. Datasets associated with the selected entities can be viewed from the Diagnostics tab.

The following examples describe how you can preview wells, or groups of wells, on these tabs: GIS, Attributes, and Diagnostics.

GIS well preview

To preview a well in the GIS tab:

1. Select the well in the Entity Viewer (Hierarchy or Custom).
2. Right-click the well and select **Go to**.

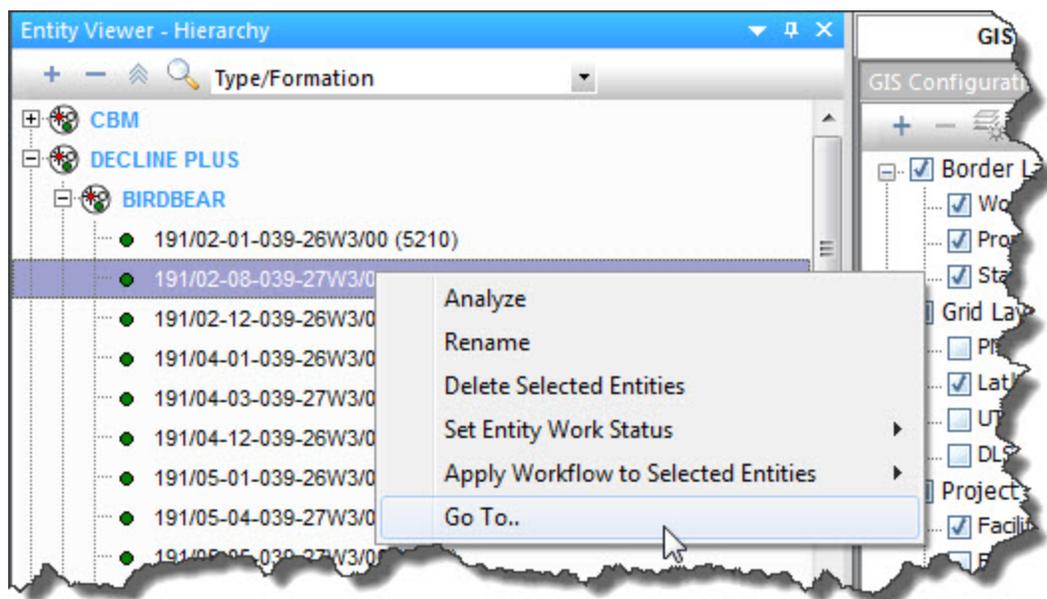

The GIS zooms in towards the selected well and highlights it.

Note: Entities that do not have values recorded for their location attributes are not displayed in the GIS.


Attributes well preview

To preview well attributes:

1. Select the well (or multiple wells) in the Entity Viewer (Hierarchy or Custom).
2. Click the **Attributes** tab.

By default, the auto template displays the following attributes: Display name, Entity Name, API Number, Entity No, Current Status, Primary Fluid, Country, Province / State, Field, Reservoir, and Unit.

3. Select the attributes you want to view from the Attributes Properties tree structure by clicking the checkboxes next to the attribute. (Selecting a category displays all of the attributes in the category.)

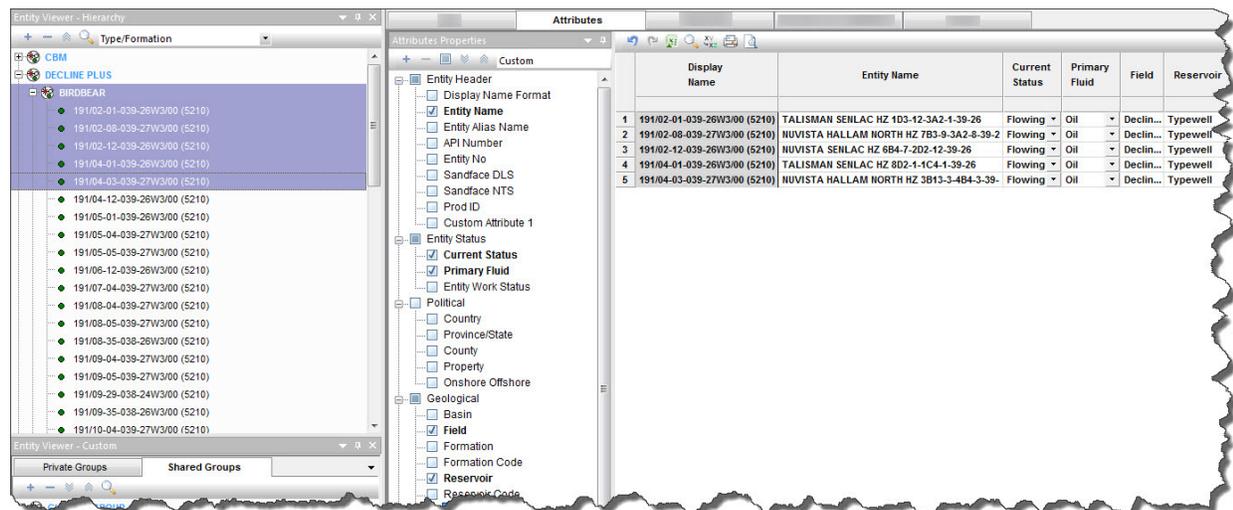

	Display Name	Entity Name	Current Status	Primary Fluid	Field	Reservoir
1	191/02-01-039-26W3/00 (5210)	TALISMAN SENLAC HZ 103-12-3A2-1-39-26	Flowing	Oil	Declin...	Typewell
2	191/02-08-039-27W3/00 (5210)	NUVISTA HALLAM NORTH HZ 7B3-9-3A2-8-39-2	Flowing	Oil	Declin...	Typewell
3	191/02-12-039-26W3/00 (5210)	NUVISTA SENLAC HZ 6B4-7-202-12-39-26	Flowing	Oil	Declin...	Typewell
4	191/04-01-039-26W3/00 (5210)	TALISMAN SENLAC HZ 802-1-1C4-1-39-26	Flowing	Oil	Declin...	Typewell
5	191/04-03-039-27W3/00 (5210)	NUVISTA HALLAM NORTH HZ 3B13-3-4B4-3-39-	Flowing	Oil	Declin...	Typewell

Note: Attributes are not displayed for groups; therefore, a selection that includes both groups and wells only displays the well attribute data.


Diagnostics well preview

To preview well production data:

1. Select the wells and/or groups in the Entity Viewer (Hierarchy or Custom).
2. Click the **Diagnostics** tab.

By default, the auto template selects the gas, oil, and water-rate datasets, if they are populated, and plots them.

3. Select the datasets you want to view in the Data Viewer Properties tree structure by clicking the checkboxes next to the dataset.

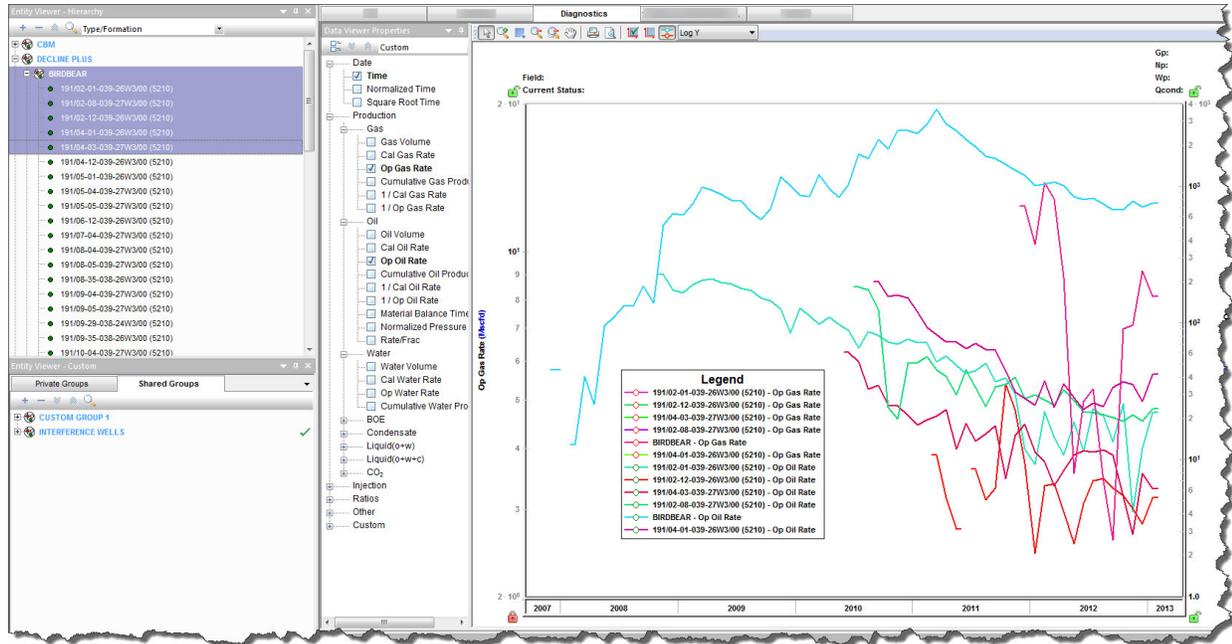

Note: Selecting a group displays the aggregate production data of the constituent wells in the group, while selecting multiple wells displays the production data of the individual wells.

Analyze well data

In order to analyze well data in Harmony Enterprise, you need to select an entity (for example, a well, scenario, or group), and then click the Analysis tab.

Selecting an entity for analysis

To select an entity for analysis, follow the steps in the table below.

Location	Method of Selecting	Notes
Entity Viewer (Hierarchy or Custom)	<ul style="list-style-type: none"> ■ Click an entity (well or group) name. ■ Click the Analysis tab. 	You can select any entity that exists in the viewer.
GIS map	<ul style="list-style-type: none"> ■ Click an entity on the map. ■ Click the Analysis tab. 	You can only select a well from the GIS map.
Analysis tab	<ul style="list-style-type: none"> ■ Click the Analysis tab ■ Click an entity in the Entity Viewer (Hierarchy or Custom) 	You can select any entity that exists in the viewer.

After you have selected an entity for analysis, that entity is locked until you select another entity. In other words, the lock is released when you click another entity. If another user tries to open the same entity for analysis while the lock is in place, a message is displayed in the main pane and the Status Window. There is no way to force the release of the well, but the username with the locked well is displayed in the Status Window.

Note: The editors are also locked when you are performing an analysis.

Analyzing an entity


To analyze an entity:

1. Select an entity for analysis.

The New Worksheet tab opens. Or, if one or more worksheets exist, one of these opens.


2. Add a gas decline worksheet. (You must add a worksheet before you can analyze an entity.)

Click a worksheet image, and if applicable, select a worksheet type from the submenu.

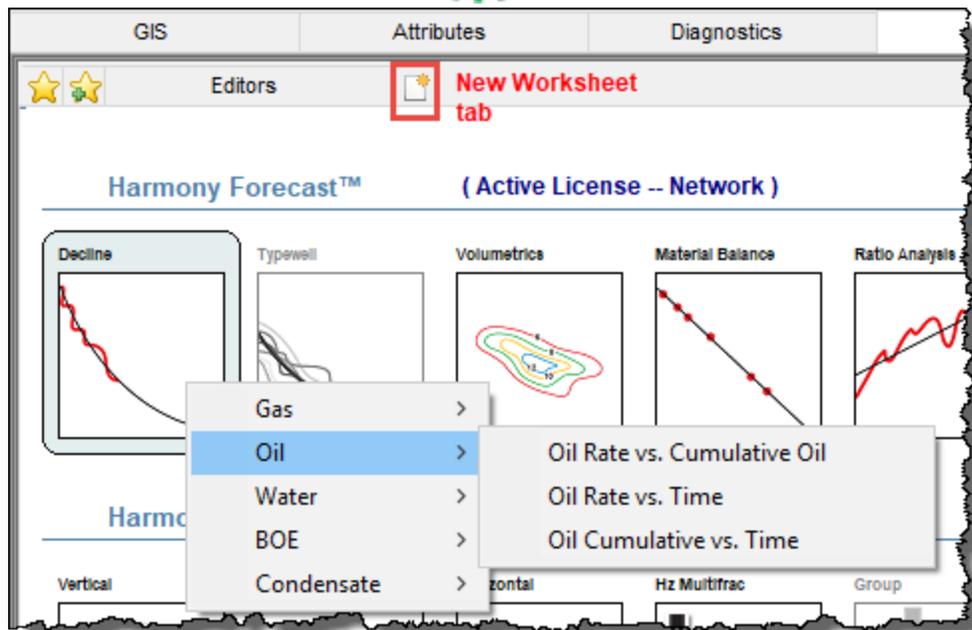

The worksheet is added.

3. Add an analysis by clicking the + icon on the Analysis Manager toolbar and selecting an analysis type. A decline analysis is shown as an example.

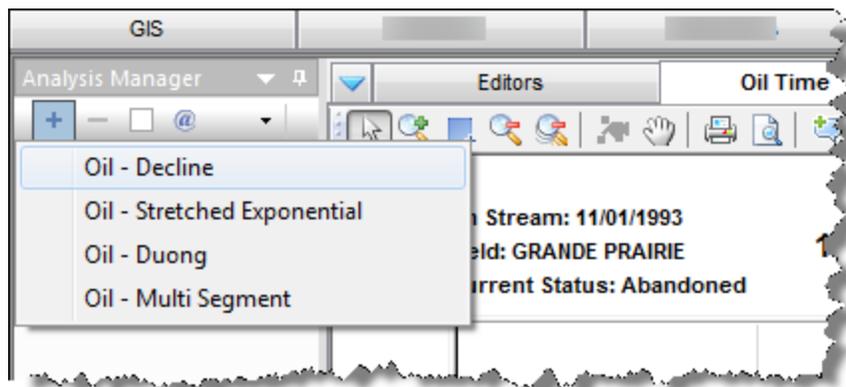

The analysis is added to your worksheet. For more information on analyses, see [analysis types](#).


View results

After you perform an analysis, you can view the results of multiple analyses from one or more wells on the Results tab. These results can be viewed in a tabular format using the grid view, or graphically in a cross plot using the plot view. Well attributes can also be displayed in conjunction with the analysis results in both views.

Grid view

To view your results in grid view:

1. Select one or more wells or groups from the Entity Viewer (Hierarchy or Custom pane), or the GIS tab, and then click the **Results** tab.
2. Click the **Grid View** navigation button at the bottom of the Result Viewer pane.
3. Select the parameters you want to display by selecting the appropriate checkboxes in the Results Viewer pane (tree structure).

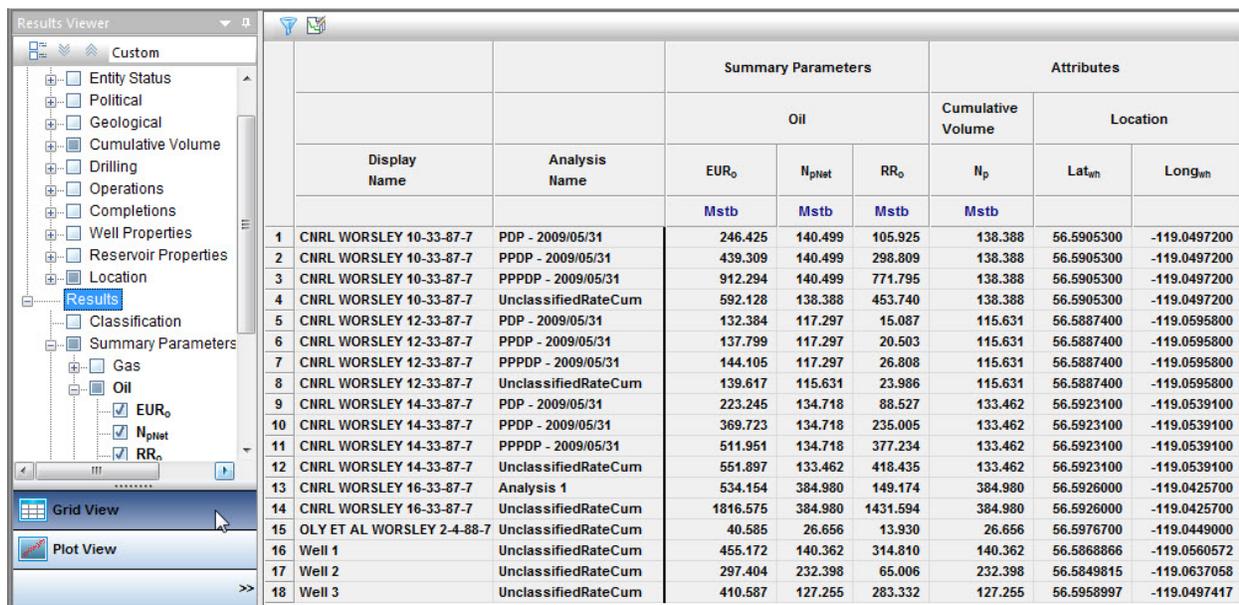


Display Name	Analysis Name	Summary Parameters			Attributes		
		Oil			Cumulative Volume	Location	
		EUR _o	N _{pnet}	RR _o		Lat _{wh}	Long _{wh}
		Mstb	Mstb	Mstb			
1 CNRL WORSLEY 10-33-87-7	PDP - 2009/05/31	246.425	140.499	105.925	138.388	56.5905300	-119.0497200
2 CNRL WORSLEY 10-33-87-7	PPDP - 2009/05/31	439.309	140.499	298.809	138.388	56.5905300	-119.0497200
3 CNRL WORSLEY 10-33-87-7	PPDP - 2009/05/31	912.294	140.499	771.795	138.388	56.5905300	-119.0497200
4 CNRL WORSLEY 10-33-87-7	UnclassifiedRateCum	592.128	138.388	453.740	138.388	56.5905300	-119.0497200
5 CNRL WORSLEY 12-33-87-7	PDP - 2009/05/31	132.384	117.297	15.087	115.631	56.5887400	-119.0595800
6 CNRL WORSLEY 12-33-87-7	PPDP - 2009/05/31	137.799	117.297	20.503	115.631	56.5887400	-119.0595800
7 CNRL WORSLEY 12-33-87-7	PPDP - 2009/05/31	144.105	117.297	26.808	115.631	56.5887400	-119.0595800
8 CNRL WORSLEY 12-33-87-7	UnclassifiedRateCum	139.617	115.631	23.986	115.631	56.5887400	-119.0595800
9 CNRL WORSLEY 14-33-87-7	PDP - 2009/05/31	223.245	134.718	88.527	133.462	56.5923100	-119.0539100
10 CNRL WORSLEY 14-33-87-7	PPDP - 2009/05/31	369.723	134.718	235.005	133.462	56.5923100	-119.0539100
11 CNRL WORSLEY 14-33-87-7	PPDP - 2009/05/31	511.951	134.718	377.234	133.462	56.5923100	-119.0539100
12 CNRL WORSLEY 14-33-87-7	UnclassifiedRateCum	551.897	133.462	418.435	133.462	56.5923100	-119.0539100
13 CNRL WORSLEY 16-33-87-7	Analysis 1	534.154	384.980	149.174	384.980	56.5926000	-119.0425700
14 CNRL WORSLEY 16-33-87-7	UnclassifiedRateCum	1816.575	384.980	1431.594	384.980	56.5926000	-119.0425700
15 OLY ET AL WORSLEY 2-4-88-7	UnclassifiedRateCum	40.585	26.656	13.930	26.656	56.5976700	-119.0449000
16 Well 1	UnclassifiedRateCum	465.172	140.362	314.810	140.362	56.5868866	-119.0560572
17 Well 2	UnclassifiedRateCum	297.404	232.398	65.006	232.398	56.5849815	-119.0637058
18 Well 3	UnclassifiedRateCum	410.587	127.255	283.332	127.255	56.5958997	-119.0497417

Plot view

To view your results in plot view:

1. Select one or more wells or groups from the Entity Viewer (Hierarchy or Custom pane), or the GIS tab, and then click the **Results** tab.
 2. Click the **Plot View** navigation button at the bottom of the Result Viewer pane.
 3. Select the parameters you want to display by selecting the appropriate checkboxes in the Results Viewer pane (tree structure).
- Or, you can drag-and-drop the parameters to the plot.

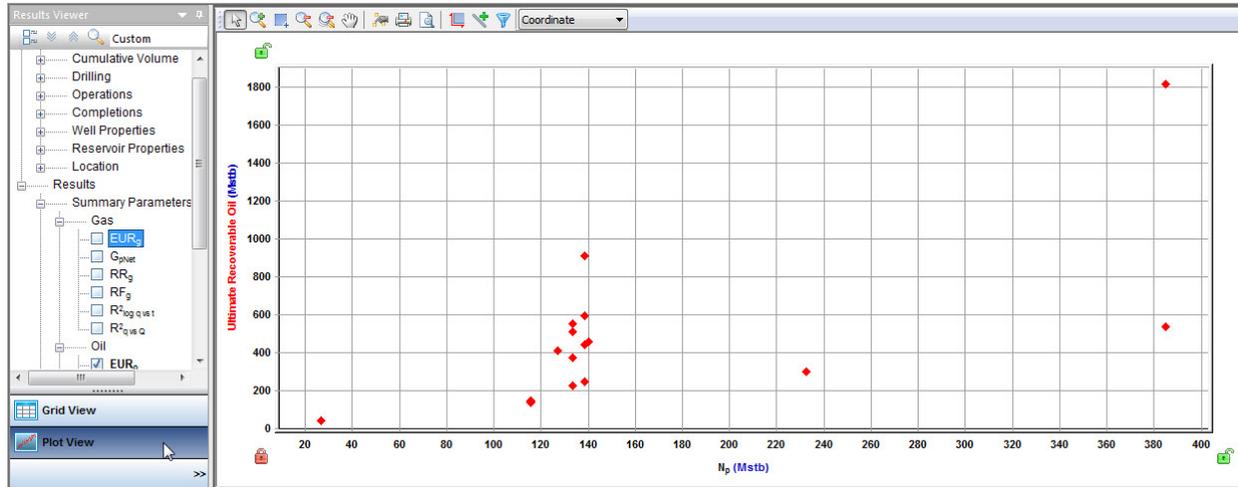

Export data

You can export these data types using an export wizard:

- [Production data](#)
- [Forecasts](#)
- [Decline parameters](#)

You can export wells and well-and-analysis pairs for:

- use in Piper® by using the [Piper Export wizard](#)
- [use in WellTest](#)

In addition, you can export the following:

- [Export to an .hldb file](#)
- [Export to Harmony Analytics](#)


Export production data

Exporting production data includes all the datasets in the Production editor.

To export production data:

1. Click the **Export** icon () in the main toolbar and select **Production Data, Forecasts, or Decline Analyses**.

The export wizard opens.

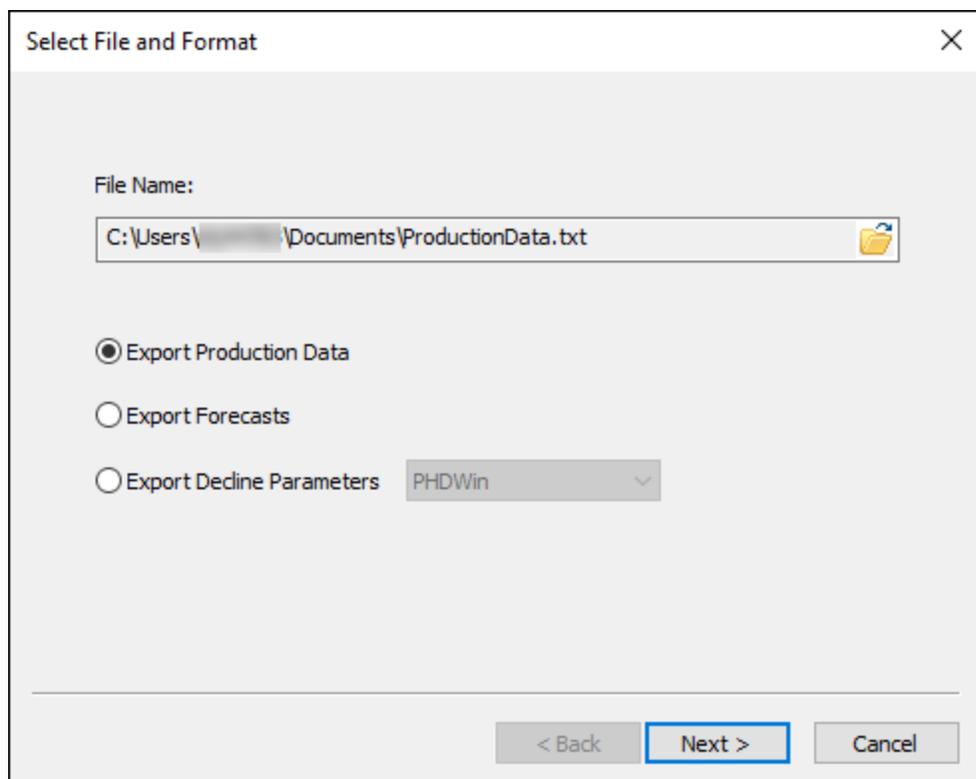

2. In the Select File and Format dialog box, browse to the location where your text file is to be saved. Click **Export Production Data** and then click **Next**.
3. In the Select Entities dialog box, select the entities you want to export from the three tabs: Hierarchy, Shared Groups, and Private Groups. Click **Next**. Note that you can search for entities by name by clicking the **Search** icon.
4. In the Select Output Data dialog box, click the checkboxes for the attributes and fluid rates / volumes you want to export. Click **Next**.

5. In the Export Preview dialog box, apply the sampling rate you want to export the data in. To re-sample the data to be daily, monthly, or yearly, click the **D**, **M**, or **Y** icons. To maintain the original sampling rate of the data, click the actual (**A**) icon.
6. Review your selections, and then click **Finish**. Note that the export can be customized as follows:
 - The format for the date columns (and the units and precision for numeric columns) can be changed by right-clicking the green column headers.
 - The order of the columns can be customized by dragging-and-dropping the column headers.

Note: Custom datasets are not included when you export your production data.

Export forecasts

These forecasts can be exported:

- Decline
- Multi-segment decline
- Water-oil ratio (WOR) total fluid forecast
- Oil cut total fluid forecast
- Ratio forecast
- Custom forecast
- Forecast consolidation
- Numerical model forecasts
- Analytical model forecasts
- Unconventional reservoir forecasts
- Typecurve forecasts

To export forecasts:

1. Click the **Export** icon () in the main toolbar and select **Production Data, Forecasts, or Decline Analyses**.

The export wizard opens.

2. In the Select File and Format dialog box, browse to the location where your text file is to be saved. Click **Export Forecasts** and click **Next**.
3. In the Select Entities dialog box, select the entities you want to export from the three tabs: Hierarchy, Shared Groups, and Private Groups. Click **Next**. Note that you can search for entities by name by clicking the **Search** icon.
4. In the Select Analyses dialog box, click the checkboxes for the analyses (including consolidations) you want to export, and then click **Next**.
5. In the Select Attributes dialog box, click the checkboxes for the attributes and fluid rates / volumes you want to export. Clicking the **Include Historical Data** checkbox appends the historical production from the entity to each forecast until the forecast start date (this does not apply to declines from typewell worksheets). Click **Next**.

6. In the Export Preview dialog box, review your selections, and then click **Finish**. Note that the export can be customized as follows:

- The format for the date columns, and the units and precision for numeric columns, can be changed by right-clicking the green column headers.
- The order of the columns can be customized by dragging-and-dropping the column headers.

The file is saved with a message in the Status Window and the wizard closes.

Export decline parameters

These decline parameter formats can be exported:

- Aries
- Decline parameters (Mosaic, other)
- PHDWin
- Energy Navigator

Note: You can set a classification for your data in the [Analysis Manager](#).

To export decline parameters:

1. Click the **Export** icon () in the main toolbar and select **Production Data, Forecasts, or Decline Analyses**.


The export wizard opens.

2. In the Select File and Format dialog box, browse to the location where your file is to be saved.

Click **Export Decline Parameters** and select your export format, and then click **Next**.

- **Aries** — exports gas, oil, water, and condensate decline analyses. Includes decline analyses at the entity, hierarchy, or custom-group level. Includes Decline and Multi-Segment analyses. The output format is a .txt file. When exporting to Aries, the display name used for each well is based on the data available. If Propnum is populated, it is used; otherwise, API is used. If neither of these is available, the display name is used.
- **Energy Navigator** — only exports reserve-classified gas and oil decline analyses. Includes decline analyses at the entity and hierarchy level. Includes Decline and Multi-Segment analyses. The output format is an .xml file.
- **PHDWin** — exports gas, oil, water, and condensate decline analyses. Includes decline analyses at the entity, hierarchy, or custom-group level. Includes Decline and Multi-Segment analyses. The output format is a .csv file.
- **MOSAIC** — exports decline and multi-segment decline analyses in a MOSAIC format. Includes decline analyses at the entity, hierarchy, or custom-group level. Exports decline parameters in a generic format to a .xlsx file. Files exported using this option can be imported to Entero MOSAIC (version 2015.5 and later).

If you try to export a linked analysis containing any invalid analysis types, it does not export.

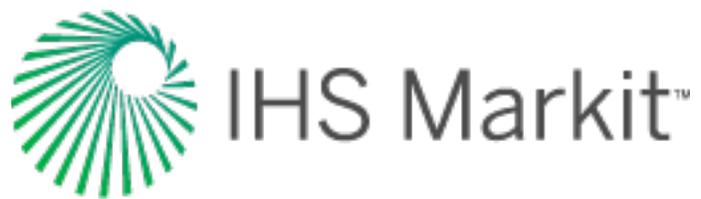

3. In the Select Entities dialog box, select the entities you want to export from the three tabs: Hierarchy, Shared Groups, and Private Groups. Click **Next**. Note that you can search for entities by name by clicking the **Search** icon.
4. In the Select Analyses dialog box, click the checkboxes for the analyses (including consolidations) you want to export, and then click **Next**.
The file is saved with a message in the Status Window and the wizard closes.

Export a file for use in Piper®

You can export wells for building and calibration purposes, and well-and-analysis pairs for forecasting purposes.

To export a .hmy2pip file from Harmony Enterprise to use in Piper:

1. Click the **Export** icon () in the main toolbar and select **To Piper**.
The Piper export wizard opens.
2. In the Welcome dialog box, read the message and click **Next**.
3. In the Piper Export | Export Type dialog box, click **Building and Calibration** or **Forecasting**.
Note that you must calibrate your data prior to forecasting.

If you select **Building and Calibration**, the following data is exported: well locations, attributes, as well as rates and pressures on the effective / calibration date.

If you select **Forecasting**, analytical wells are exported with their paired analytical analysis / model. Each well is paired with an analysis.

4. Browse to the location where your .hmy2pip file is to be saved. Click **Next**
5. In the Piper Export | Select Entities dialog box, select the wells you want to export in one of the tabs (Hierarchy, Shared Groups, or Private Groups). Note that you do not see the Private Groups tab if you are using an .hldb file.
6. *(For Building and Calibration)* Click **Export**.
7. *(For Forecasting)* Click **Next**.
8. *(For Forecasting)* In the Piper Export | Analyses Selection dialog box, select the analyses you want to export. Click **Next**.
9. *(For Forecasting)* If more than one analysis has been paired with a well, the Piper Export | Well-Analysis Pairing Conflicts dialog box opens.
For each well with a conflict, select an analysis or exclude the well from the export by selecting from the drop-down list. Click **Next**.
10. *(For Forecasting)* In the Piper Export | Preview dialog box, review your well-and-analysis pairings. If no corrections are needed, click **Export**.
If you need to make corrections, click **Back** to return to the previous dialog box.

The Piper Export | Summary dialog box opens, which outlines what happened with the export. If you want additional information, click the **View export log file** link. For more information, see the [example export logs](#).

Piper requires tubing data, so if a well in Harmony Enterprise is using a casing flow path, when the well is exported, the casing internal diameter is saved into the tubing internal diameter field in the .hmy2pip file. When imported into Piper, the well has a tubing flow path, where the tubing internal diameter is equal to the casing internal diameter in the Harmony project.

Note: Gas lift data requirements in Harmony Enterprise are different than gas lift requirements in Piper. If a well in Harmony Enterprise has a Gas Lift flow path, when imported into Piper, the well has a tubing flow path. You must set the gas lift flow path with required gas lift data inputs in Piper's Wellbore Descriptions editor. For more information, see [modeling wellbores](#) (opens the Piper help in a new window).

11. Click **Done**.

Important: If sandface pressures are not calculated in Harmony Enterprise, they are calculated for the Piper export. These calculations are not written to the Harmony Enterprise project database.

Export to WellTest

Only Analytical and Numerical models are exported. You can select groups, and all child wells are exported. Note that the following items are not exported:

- Scenarios
- Prior production with production data
- Numerical models without fractures

To export a .hmexp file from Harmony Enterprise to use in WellTest:

1. Select the wells you want to export in the Entity Viewer - Hierarchy or Custom.
2. Click the **Export** icon () in the main toolbar and select **To WellTest**.
3. Browse to the location where you want to save your .hmexp file.

Your files are ready to use in WellTest.

Export to an .hldb file

If you want to perform some work outside of the database (for example, if you want to test some analyses without modifying the existing work in your current project database), then you can export wells, scenarios, or groups into a separate project. This work can remain in a separate project, or you can import this data back into the source project later. For more information, see [import from an .hldb file](#).


Exporting entities from a Harmony Enterprise database is a process that creates an .hldb file from the entities using Microsoft SQL LocalDB. You can connect to the .hldb file with Harmony Enterprise, as long as the LocalDB is installed on your computer. Or, you can import the .hldb file into a Harmony Enterprise SQL database (not applicable to SE licenses). You can transfer wells from one database to another, work on a subset of wells offline, or send your work to technical support.

Harmony Enterprise only supports LocalDB 2012 or 2014. For your convenience, Microsoft SQL LocalDB 2014 is included in the Harmony Enterprise installation.

Exporting entities

To export entities from a database:

1. Select the entities you want to export in the Entity Viewer (Hierarchy or Custom Groups pane). This can include wells or groups, but selections cannot be made in the Hierarchy and Custom Groups at the same time.
2. Click the **Export** icon () in the main toolbar and select **To .hldb file**.
3. Specify a location and filename, and save your .hldb file.

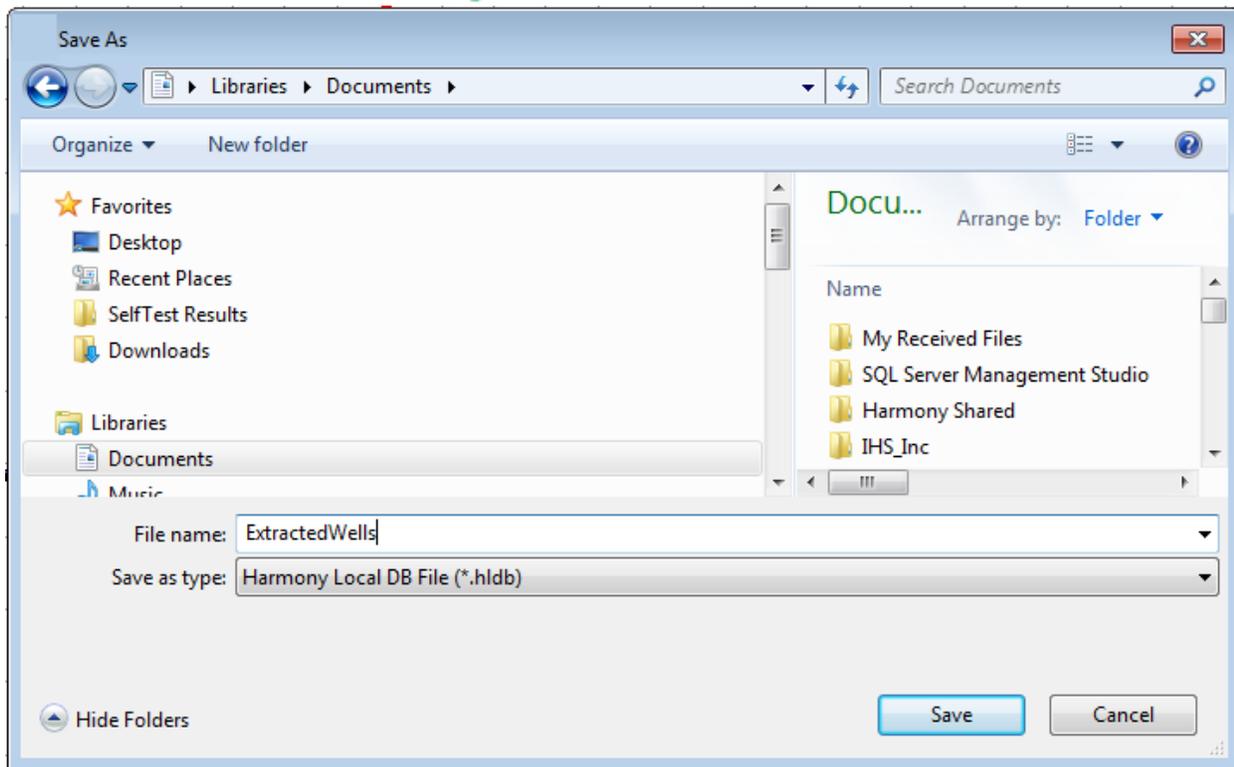

Connecting to an .hldb file


To connect to an .hldb file that was exported from Harmony Enterprise (by you or another user):

1. Click **Connect to, Existing .hldb file** in the Harmony Enterprise startup screen (opens when you launch Harmony Enterprise).



2. Browse to the location of the .hldb file and click **Open**.

Your exported wells are now treated as a new Harmony Enterprise database, and any changes you make in Harmony Enterprise are saved in the .hldb file.

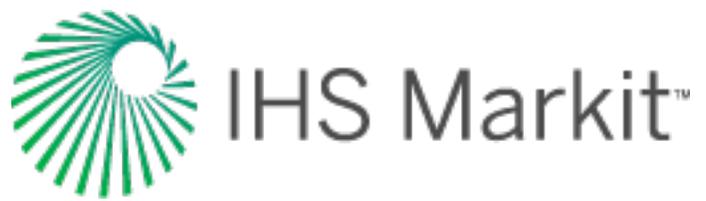

Tip: When you connect to a local database, private groups (in the Entity Viewer - Custom) are converted to shared groups.

Export to Harmony Analytics

To export to Harmony Analytics:

Click the **Export** menu and select **To Harmony Analytics**, then:

- **New** — opens the Harmony Analytics dialog box.
- **Existing** — browse to your Spotfire template file (.dxp extension).

Use workflows

A workflow is a collection of worksheets and analyses that can be applied to an entity as a set. Using a workflow eliminates the need to create the same worksheets and analyses for every entity with similar characteristics. Workflows also maintain worksheet and analysis customizations (for example, names, colors, axis ranges, etc.).

When an entity is selected for analysis, it is locked, so you are not able to apply a workflow to this entity while the lock is in place.

Tip: All workflows are user-specific. Therefore, any workflows you create are not seen by other users in a multi-user environment.

These items apply to workflows:

- [create a workflow](#)
- [modify a workflow](#)
- [apply a workflow](#)
- [Create Workflow dialog box](#)

You can *rename* or *remove* a workflow by clicking the **Launch Workflow** icon () and then right-clicking the workflow.

The following analyses cannot be included in workflows because they require user input in order to be created:

- ratio forecasts
- WOR / oil cut fluid forecasts
- consolidations
- custom forecasts
- nodal analyses

Create a workflow

To create a workflow:

1. Select an entity and click the **Analysis** tab. Create the worksheets and analyses to be included in the workflow, including any customizations for the plot.


Note: If a custom dataset does not exist when a template is applied, the dataset is not added to the plot.

2. Click the **Create Workflow** icon () on the main pane's toolbar.

The Create Workflow dialog box opens.

3. Click **New** and type a name for your workflow; click **OK**.
4. Click **Save**.

Your workflow is saved and can be viewed by clicking the **Launch Workflow** icon () on the main pane's toolbar.

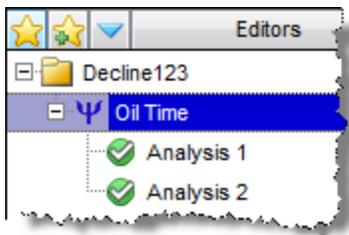

Modify a workflow

To modify a workflow:


1. Select an entity for analysis (or group), and create or modify the worksheets and analyses you want to include in the new version of the workflow.
2. Click the **Create Workflow** icon () on the main pane's toolbar.
The Create Workflow dialog box opens.
3. Select the workflow name you want to replace in the **Workflow** drop-down list.
4. Click **Save**.

Apply a workflow

After you create a workflow, you can apply it to entities and groups.


To apply a workflow:

1. Select one or more entities in the Entity Viewer (Hierarchy or Custom).
2. Right-click and select **Apply Workflow to Selected Entities**; then select a workflow.

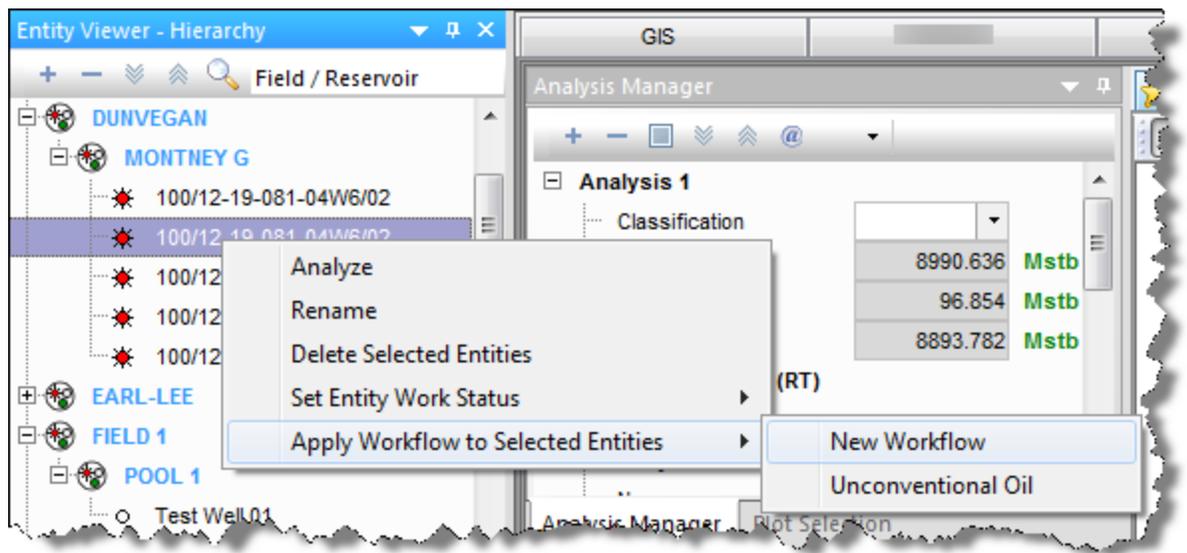


Note: If you right-click a selection when no workflows exist, (No Workflows Exist) is displayed in the context menu. Also, if you attempt to apply a workflow to an empty group, an error message opens stating that workflows cannot be applied to groups that do not contain any wells.

Alternatively, you can select an entity for analysis (or group), and then click the **Launch Workflow** icon (★) on the main pane's toolbar. Then either double-click the workflow, or click the blue arrow to the right of the workflow.

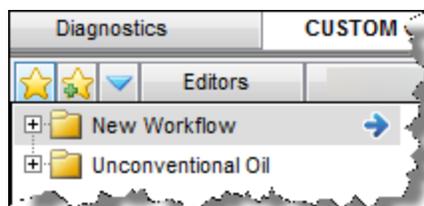

A dialog box opens where you confirm your intention to apply the workflow.

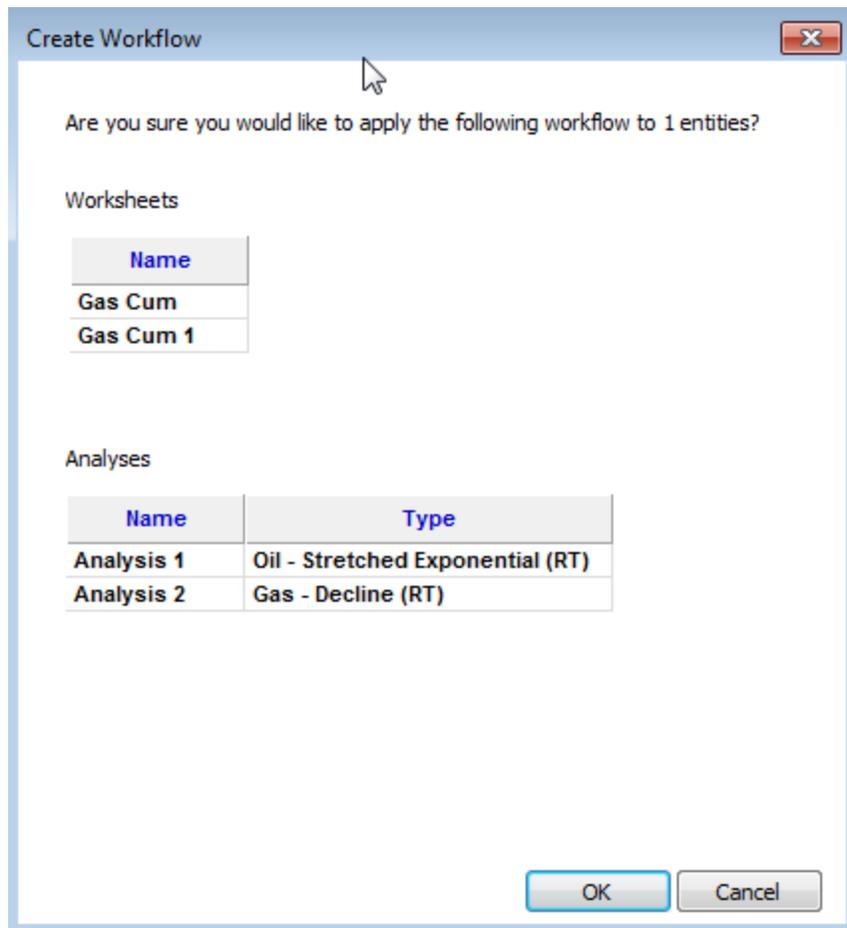

The Status Window displays messages for the following:

- If your workflow is applied to the entities you selected.
- If your workflow could not be applied to all of the entities.
- If there are any analysis errors (for example, the data could not be "best fit").

Create Workflow dialog box

This dialog box is commonly used when you create or modify a workflow.

- **Workflow** drop-down list — select your previously created workflow from the drop-down list. If you have not created a workflow, this list is blank.
- **New** button — opens the Workflow Name dialog box where you type a name for your workflow.
- **Worksheets** — click the checkboxes to select or deselect the worksheets for your workflow.
- **Lock Scaling** — keeps the x- and y-axis scale from the worksheet you are applying to your workflow.
- **Analyses** — click the checkboxes to select or deselect the analyses for your workflow.

Link / unlink analyses

By linking analyses you can combine multiple analyses in order to enforce consistency or generate calculated results. For example, you can link a Ratio Trend with a Decline analysis to calculate a rate forecast. Only Harmony Forecast analysis types can be linked, but the analyses must be of different types. When analyses are linked, they are displayed in the Analysis Manager under a single analysis name.

When analyses are linked, some analysis types permanently overwrite the results obtained by the other analysis. A summary of the order of precedence is listed below:


Parameter	Order of analysis type precedence
Original Oil in Place (OOIP) / Original Gas in Place (OGIP)	<ol style="list-style-type: none"> 1. Material Balance 2. Volumetrics
EUR (Expected Ultimate Recovery)	<ol style="list-style-type: none"> 1. Decline 2. Water-Oil Ratio 3. Material Balance 4. Volumetrics

Unlinking analyses does *not* restore the results of that analysis. For example, unlinking a Volumetrics analysis from a Material Balance analysis does *not* revert the OGIP of the Volumetrics analysis.


Linking analyses

To link analyses:


1. Create two analyses that can be linked.
2. Do one of the following:
 - Drag one analysis onto the name of the other analysis. (This option removes the selected analysis from the Analysis Manager.)

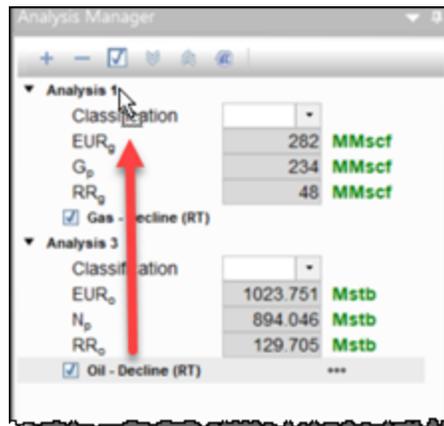


- Click the ... button for an analysis type, select **Move to**, and then select the name of the analysis to be linked. (This option removes the selected analysis name from the Analysis Manager.)

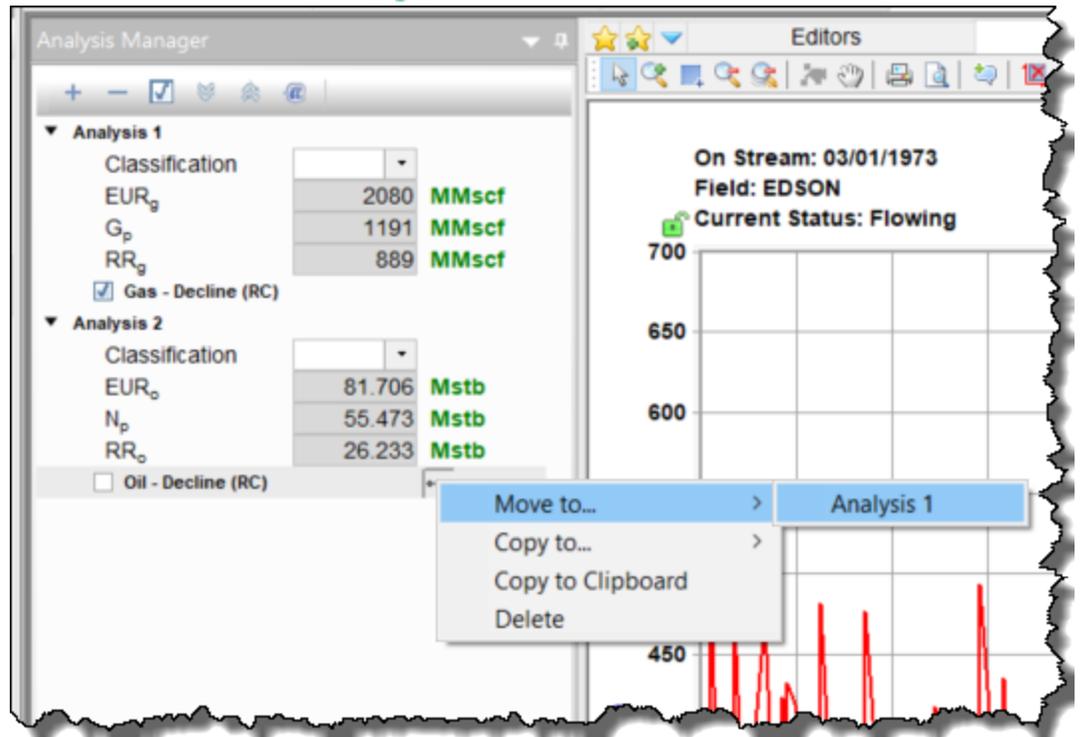

- Click the ... button of an analysis type, select **Copy to**, and then select the name of the analysis to be linked. (This option leaves the selected analysis in the Analysis Manager and merges a copy with the linked analysis.) If you duplicate an analysis, you can link it to multiple other analyses.

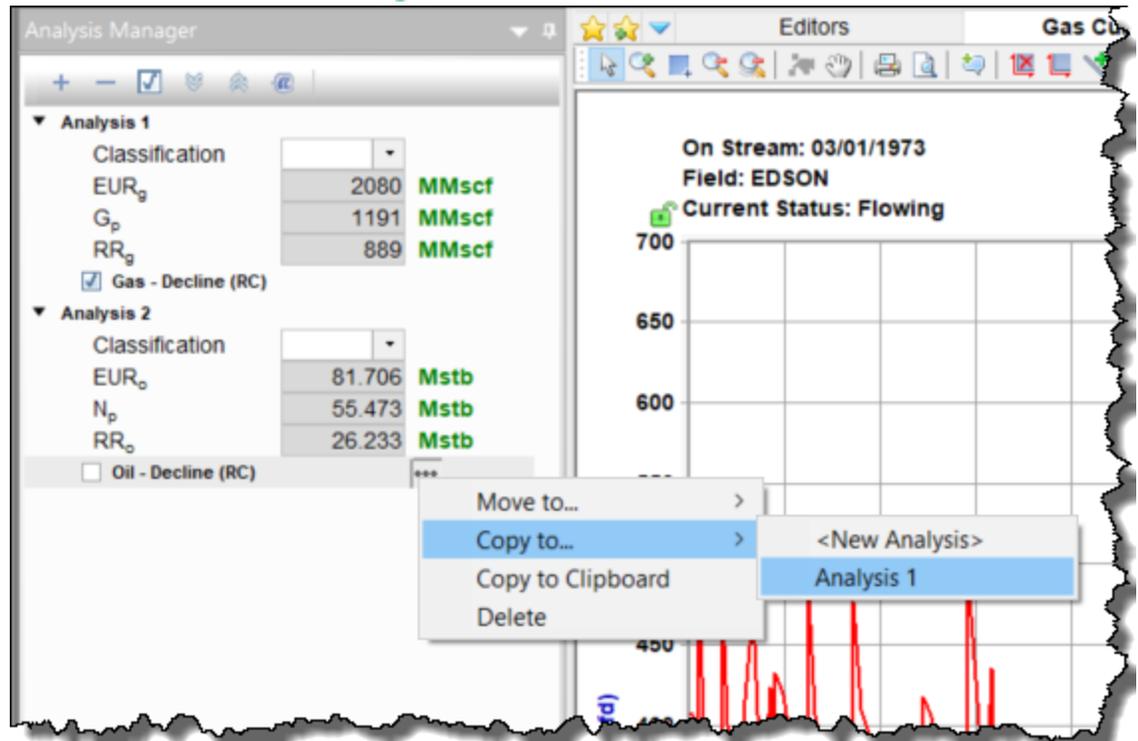

The two analyses are displayed in the Analysis Manager as a single combined analysis.

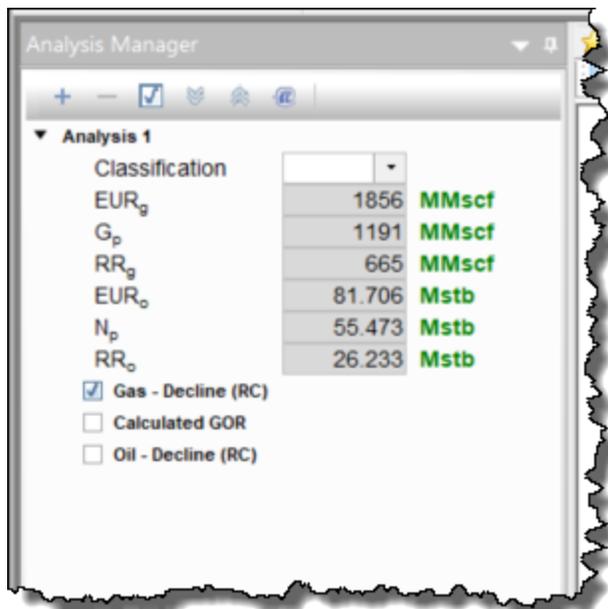


The new combined analysis can be compared to other analyses to strengthen confidence in their results, or as a diagnostics tool to discover where inaccuracies are.

Unlinking analyses

To unlink the analyses, do one of the following:


- Drag one of the analyses into an empty portion of the Analysis Manager.

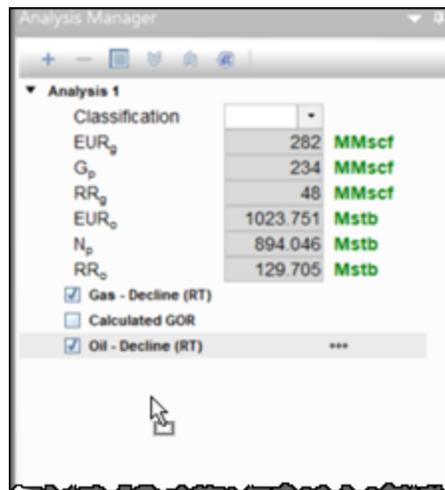

- Click the ... button of an analysis type; select **Move to**, and then select **<New Ana-**



ysis>.

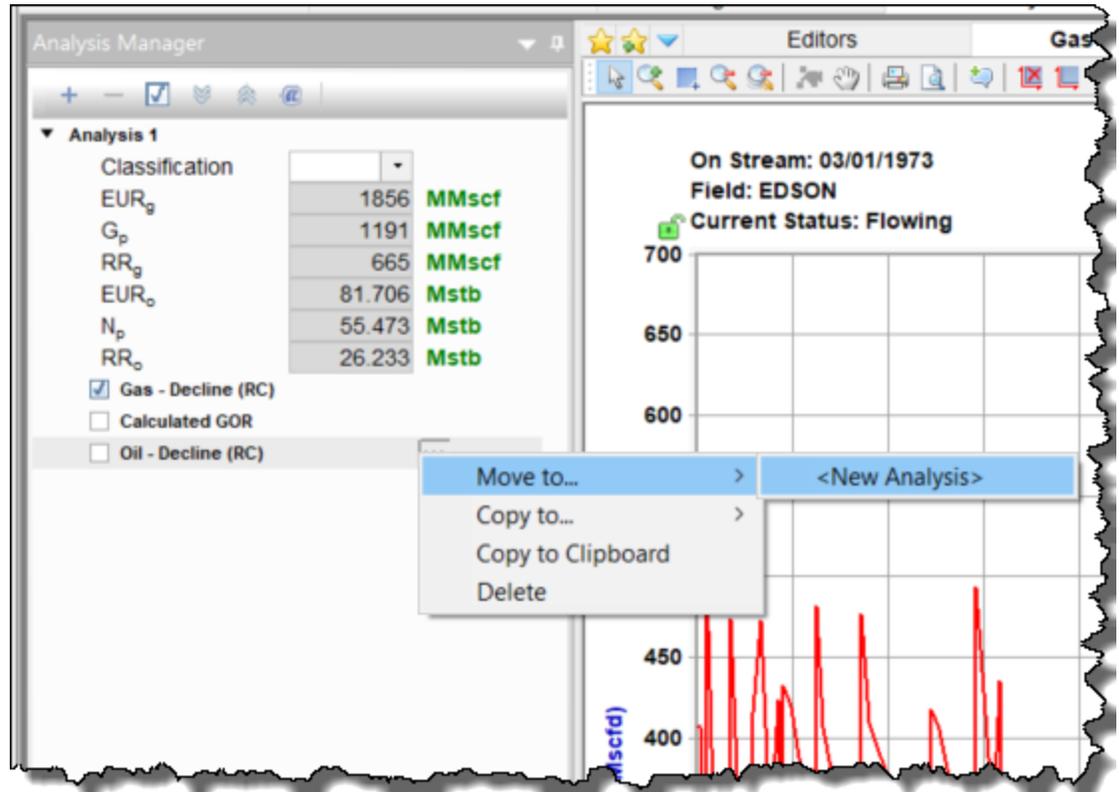



Analysis types

After you have added a worksheet, you can create an analysis. Harmony Enterprise supports the following analysis types:

With a Forecast license	With a Reservoir license	With an Optimize license
Decline analyses:	<u>Typecurve</u>	<u>Nodal</u>
<u>Decline</u> (Arps decline)	<u>FMB</u>	
<u>Multi-segment</u>	<u>URM</u>	
<u>Stretched exponential</u>	<u>Analytical model</u>	
<u>Duong</u>	<u>Numerical model</u>	
Typewell (the above decline analyses can be added to the <u>typewell worksheet</u>)	<u>Probabilistic</u>	
	<u>Multi-well model</u>	
<u>Material Balance</u> analyses		
<u>Volumetrics</u> analyses		
Ratio analyses:		
<u>WOR (water-oil ratio)</u>		
<u>Oil cut</u>		
<u>Ratio trend</u>		
Production forecasts:		
<u>WOR / oil cut forecast</u>		
<u>Ratio forecast</u>		
<u>Custom forecast</u>		
<u>Forecast consolidation</u>		


Decline analysis

The decline analysis uses the conventional Arps' decline method and generates forecasts of future production rates, and the estimated ultimate recovery (EUR) of reserves. For additional information on the theory and concepts, see [decline analysis theory](#). When you add a decline analysis (see [analyzing an entity](#)), Harmony Enterprise automatically selects the best subset of your data (90% of your data points) for an initial best fit.

Note: This analysis works with your Harmony Forecast™ license.

Analysis Parameters pane

After you add your decline analysis, the selected analysis (highlighted in purple) has its detailed parameters displayed in the Analysis Parameters pane located below the [Analysis Manager](#) pane (the default setting).

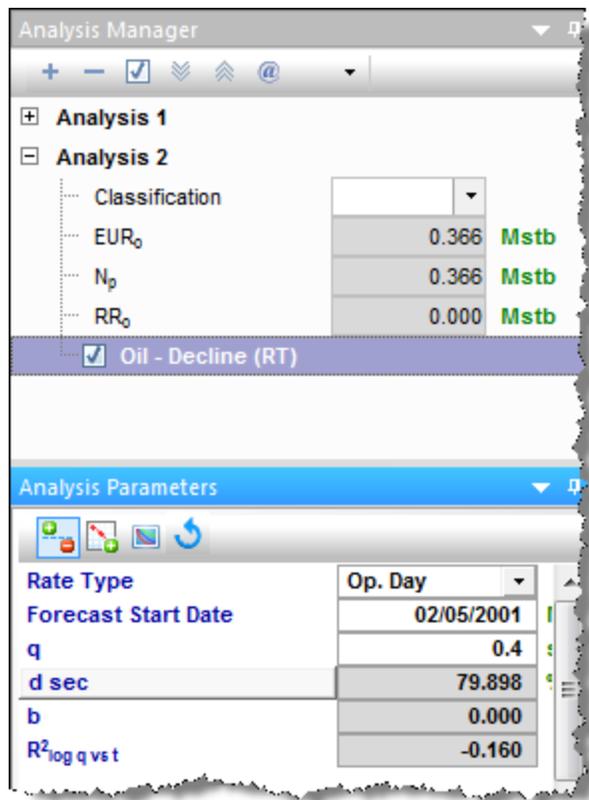

The screenshot shows the 'Analysis Manager' pane with a tree view containing 'Analysis 1' and 'Analysis 2'. Under 'Analysis 2', there are four rows: 'Classification', 'EUR₀', 'N_p', and 'RR₀', each with a value and 'Mstb' unit. Below this is a checked item 'Oil - Decline (RT)'. The 'Analysis Parameters' pane below shows a table of parameters for the selected analysis.

Parameter	Value	Unit
Classification		
EUR ₀	0.366	Mstb
N _p	0.366	Mstb
RR ₀	0.000	Mstb
Oil - Decline (RT)		
Rate Type	Op. Day	
Forecast Start Date	02/05/2001	
q	0.4	
d sec	79.898	
b	0.000	
R ² _{log q vs t}	-0.160	

Harmony Enterprise automatically fits (best fits) your decline curve based on:

- recent trends.
- rate data. It is able to handle shut-ins, and exclude these data points from the best fit.
- If you have anomalies in your data, a local outlier factor algorithm is used to determine which data points are considered outliers to be excluded from the initial best fit.

In order for the auto-fit algorithm to work, at least six months of data is required. If there is not enough data, all of the data points are selected, and a decline curve is generated based on the data that is available. Harmony Enterprise automatically selects the best subset of your data for an initial best fit.


In this pane, you can specify / view the following settings and parameters:

(The parameters that are displayed depend on if the analysis was created on a rate-time (RT) or rate-cumulative (RC) production plot.)


- **Rate Type** — select calendar rate (**Cal. Day**) or operator rate (**Op. Day**) from the drop-down list. For more information, see [rate type](#).
- **Forecast Start Date** — the decline curve in Harmony Enterprise includes a "best fit" of historical data followed by a forecast section. The Forecast Start Date (FSD), highlighted by a small green triangle, defines the beginning of the forecast. For more information, see [forecast start date](#).
- **q** — the production rate at the *FSD*.
- **d_{sec}** — the effective decline rate at the *FSD*. It can be toggled to d_{tan} , or a nominal decline rate.
- **b** — the decline exponent at the *FSD*.
- **R²** — an indication of the precision of the history match. It is reported as $R^2_{log q vs t}$ on a rate-time (RT) plot, and $R^2_{q vs Q}$ on a rate-cumulative (RC) production plot.

Rate type

The rate type can be either calendar rate or operated rate, which you can select from the drop-down list at the top of Analysis Parameters pane. However, you first need to select the rate type you want from the Plot Selection tab, which is located next to the Analysis Manager tab (by default).

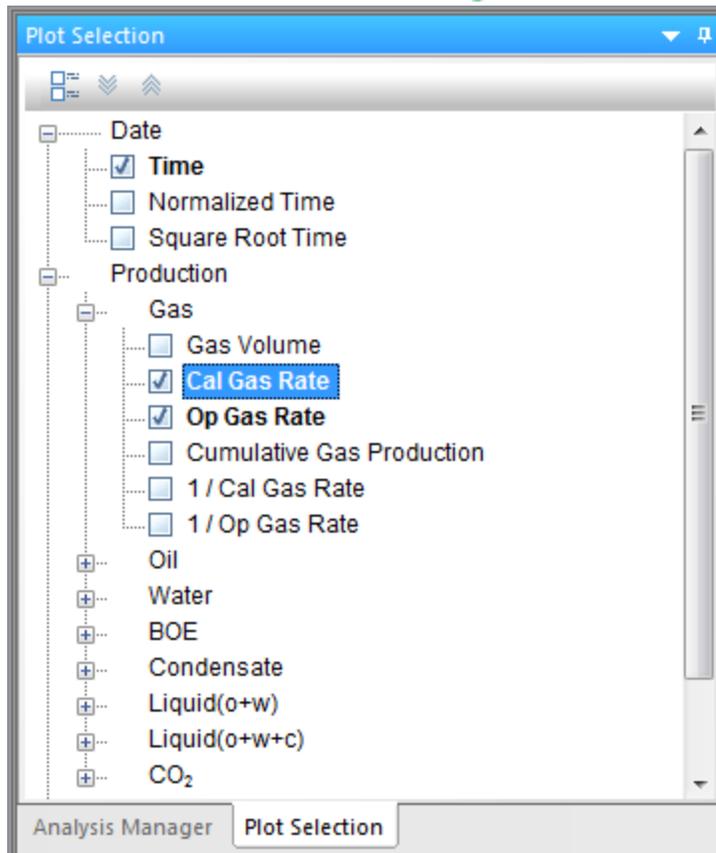

Note that if you select both the *calendar rate* (for example, *Cal Gas Rate*) and *operated rate* (for example, *Op Gas Rate*), they appear as separate axes on your plot. After you select the rate type to place your decline analysis on, the decline curve is placed on that rate history. The decline parameters do not change, but the precision of your match, indicated by R^2 , does consequently change. Also, the point selection tool for best-fitting () is only active on the selected axis.

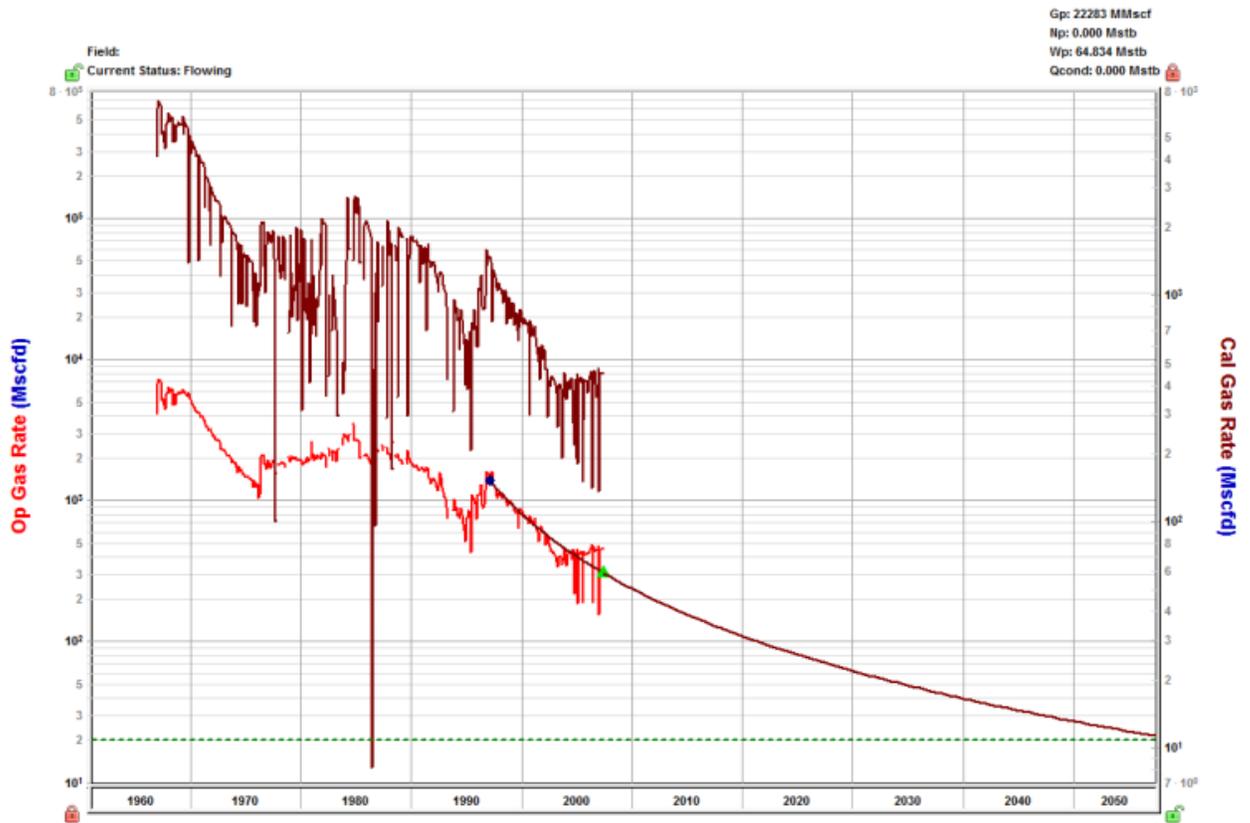

Forecast start date

The forecast start date (FSD) defaults to the last data point in the production history (or the active reference date, if it is set to an earlier time). However, you can change this date, which updates the corresponding rate (q), effective decline rate (d_{sec}), and the decline exponent (b) reported below that date.

Multiple segments

You can add multiple segments (see analysis parameters toolbar) to your decline analysis, and under each segment, you can change parameters and the calculation method for that segment.

Segment 1		
Calc Method	Δt Q_r	
Start Date	03/21/2007	MM/DD/YYYY
q_i	134.9	Mscfd
Δt	85.674	month
d_i sec	32.127	%/year
b	0.800	
q_r	27.2	Mscfd
End Date	05/10/2014	MM/DD/YYYY
Q_r	165.493	MMscf

Under each segment's tab, you can specify / view the following parameters:

- **Calc Method** — select the decline parameters you want to enter as inputs, and the parameters to be calculated by Harmony Enterprise. For more information, see [decline calculation methods](#).
- **Start Date** — sets the onset of the decline in a segment. For the first segment, it is defined by the time of the historical (best fit) portion when the decline curve begins.
 - In each best fit of production data, the *Start Date* defaults to the first selected point, and is highlighted by a small blue square. By default, Harmony Enterprise selects the last 50% of the data for curve-fitting, but you can change this percentage by clicking the **Point Selection Tool** icon ().
- q_i — the initial production rate and is reported / specified at the *Start Date*.
- d_i sec — the initial effective decline rate and is reported / specified at the *Start Date*. You can toggle this parameter to show either d_{itan} or a_i (nominal decline rate).
- Δt — the duration of the decline segment.
- q_f — the final forecast rate (abandonment rate), and is initialized from the settings defined in the Options dialog box (see [decline options](#)). However, you can manually modify this rate by entering a new value. When a decline is added to a group, the abandonment rate uses the value in the Options dialog box multiplied by the number of producing wells.
- b — the decline component. The initially reported b value results from the best fit of the selected historical data to a hyperbolic decline, unless a fixed b value is defined in the Options dialog box.
 - The b value can be automatically updated each time you change the historical portion of the fit, if you have the yellow lock icon () open. If this icon is in a locked position (), your b value is locked and changing the selected history does not impact the reported b value.

Analysis Parameters toolbar

The Analysis Parameters toolbar has the following key icons:

-  **Show / Hide Results Line** — shows (default setting) or hides the dashed line on the plot that represents the abandonment rate for the decline analysis and the d_{im} transition.
-  **Add / Remove Segment** — adds a new segment to the end of the existing decline forecast, or removes the last segment. When you add a new segment, this is how Harmony Enterprise *initializes* that segment:
 - **Nominal decline rate (a)** — the beginning of the new segment and the end of preceding segment are equal.
 - q_i of the new segment is set to q_f of the preceding segment.
 - The **b** value of the new segment is the same as that of the preceding segment, and a duration of *60 months* is initially applied.
-  **Fit Decline to Forecast and Selected Production Points** — clears your historical data selections (the decline "best fit") and uses the data points for the forecast you select. Any additional points you manually select are included in the "best fit" as well. If you select None from the drop-down list, your forecast data is not included in best fits.

Tip: This option works on these forecast types: stretched, Duong, WOR total fluid, custom, ratio, typecurve, analytical, numerical, and the unconventional reservoir model. When best-fitting data, you can control when the b value (slope) should be minimized. For more information, see [b value minimization](#) in the [Options dialog box](#).
-  **Reinitialize Segment** — for reinitialization of a segment, you can select one of the following options from the drop-down menu:
 - **Reinitialize Segment** — the *nominal decline rate (a)* at the beginning of a new segment and end of its preceding segment are set to be equal to

ensure there is a smooth transition between the two segments. Also, q_i of the new segment, and q_f of the preceding segment, are set to be equal. If you have more than two segments, this reinitialization rule applies to all of the segments.

- Reinitialize Segment q_i** — only the q_i of new segments, and the q_f of their preceding segments, are set to be equal to attach the segments together.

- Reset decline to initial state** — resets the plot to the default best fit (initial auto fit). Note that if you changed the dlim Exp field in the Options dialog box, clicking this icon resets the plot to the current value in this field.

Decline calculation methods

After you have created your decline analysis, you can modify the parameters by entering new values. As the parameters are changed, calculated values and the forecast line on the plot are updated. To change which parameters are specified, you can change your *calc method*.

The table below lists which values are specified (denoted by S), and which are calculated (denoted by C), in different calc methods. For special parameters or calc methods, some parameters are marked as not applicable (n/a).

Calc Method	q_i	Δt	d_i	b	q_f	Q_f	$dlim$
Δt Q_f	S	C	S	S	S	C	n/a
Δt d_i	S	C	C	S	S	S	n/a
Δt q_f	S	C	S	S	C	S	n/a
q_f Q_f	S	S	S	S	C	C	n/a
d_i Q_f	S	S	C	S	S	C	n/a
d_i q_f	S	S	C	S	C	S	n/a
d_i b	S	S	C	C	S	S	n/a
Fixed Rate	S	S	n/a	n/a	n/a	C	n/a


dlim - Δt Qf	S	C	S	S	S	C	S
dlim - qf Qf	S	S	S	S	C	C	S
dlim - Δt qf	S	C	S	S	C	S	S
Inclining Rate	S	C	S	n/a	S	C	n/a

- **Fixed rate** — this calculation method can be used to create a constant rate forecast. When you switch to this *calc method*, the previous q_i and Δt are maintained. These are the only parameters that can be changed for this forecast type.
- **d_{lim}** — when a decline forecast has a b value greater than 0, the decline rate (or slope at a given point on the curve) decreases through time. The decline rate can become very small, resulting in a very long forecast and sometimes an unreasonable EUR. The d_{lim} calc method provides a way to limit this by setting a minimum decline rate (d_{lim}). After this minimum decline rate is reached, the forecast proceeds with a b of 0 (a constant decline rate, or exponential decline), and a vertical dashed-green line displays the transition between the two decline regimes.
 - The limiting effective decline rate can be toggled between exponential ($d_{lim\ exp}$) and hyperbolic ($d_{lim\ hyp}$). This defines whether the nominal decline rate (at the time of transition from the hyperbolic decline to the exponential decline) should be calculated using the b value of the hyperbolic, or exponential decline regimes.
- **Inclining rate** — this method can be used to create a segment with an increasing rate. The b value is forced to remain at 0. The q_i , d , and q_f are specified. By default, when you switch to this calc method, the q_i is maintained, and the d_i is converted to a negative value (an inclining rate rather than a declining rate). A q_f is initially calculated to set the Δt to 60 months.

Line manipulation

Line manipulations are initiated by clicking (sometimes while pressing the **Ctrl** or **Shift** keys) the line itself, or one of the manipulation points for a given segment (start date, forecast start date, or end date). You can cancel your line manipulation by pressing the **Esc** key. Specific line manipulations are described below.

Tip: Any time you see "click", this means to left-click your mouse. Right-click actions are specifically mentioned.

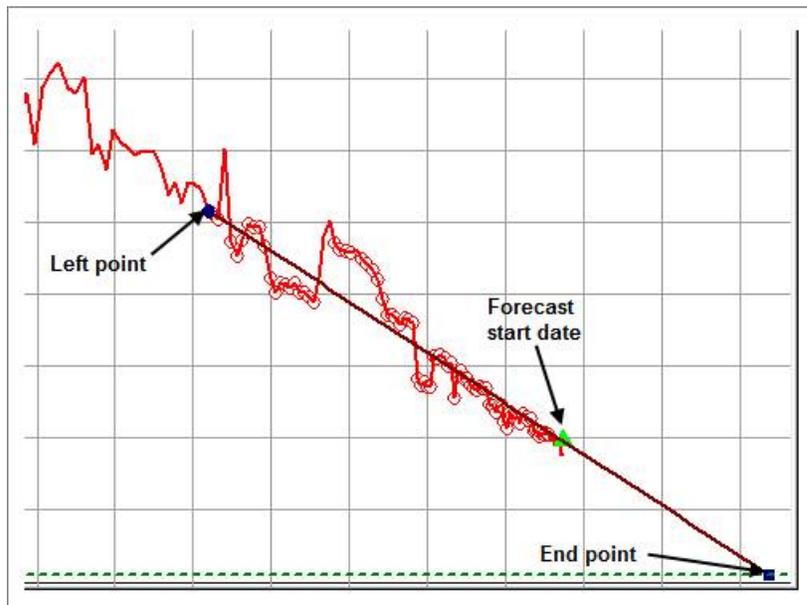


Left point: any historical point (The selection between the left point and the FSD is not included in the forecast; it is only used to show historical production.)
Forecast start date (FSD): the middle point of the line
End point: the expected ultimate recovery

- **Forecast Start Date, FSD** (indicated by a green triangle on the decline line)
 - **Click, grab-and-drag** — maintains the shape of the decline line and the b and d values. Enables vertical shifting of the decline line, which results in changes to q and q_f .
 - The segments after the segment containing the FSD are also affected because they are shifting in time / cumulative production.
 - **Shift key** — pressing the **Shift** key while dragging enables you to position the FSD along the decline curve, while maintaining the shape of the decline. This changes your Q_f (only on a rate-time Decline worksheet).

- **Ctrl key** — visually similar to the grab-and-drag functionality for the end date, but the b value can change with the Ctrl-key functionality.
- **Any point on the forecast decline curve** (activated when the decline segment turns orange)
 - **Click, grab-and-drag** — If the segment contains the FSD, that segment is anchored to the FSD and rotates around while the b value and q_f are maintained.
 - On a segment that does not contain FSD, the decline is anchored to the *start date* of the segment.
 - If you accidentally place the FSD at the end date of a segment, the decline is anchored to the *end date* of the segment.
 - **Ctrl key** — the curvature of the line (the b value) changes.

Decline-line customization

You can customize the width and color of your decline line / curve by right-clicking it.

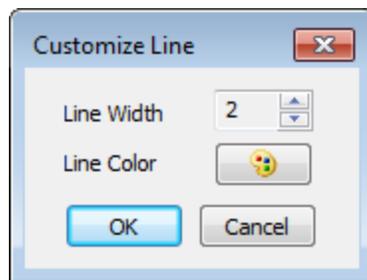

After you customize your decline line / curve, the modifications are saved and applied to every worksheet that displays this decline.

Multi-segment decline analysis

You can add a multi-segment decline analysis to a decline worksheet (see [analyzing an entity](#)).

Note: This analysis works with your Harmony Forecast™ license.

When you add a multi-segment decline analysis to your worksheet, Harmony Enterprise initializes your analysis with a two-segment decline analysis, based on the initialization settings specified in the [Options dialog box](#). You can add as many decline segments as you want to the first two segments, by clicking the **Add Segment** icon on the Analysis Parameters toolbar.

Note: Segments can only be added or removed after the first two (fixed) segments, and these segments follow the [Arps' decline analysis](#).

Multi-segment decline analyses have these properties:

- The *first segment's* decline starts at either the *initial production date*, or the date corresponding to the historical *peak rate*, based on your multi-segment decline options.
- The *nominal decline rate* (a) at the end of the *first segment* is equivalent to the *nominal decline rate* at the beginning of the *second segment*, in order to enforce a smooth transition between these two segments.
- The q_i (initial production rate) of the *second segment* is set to the q_f (final production rate) of the *first segment*.
- After you add a *secondary segment* (to these two initial segments), q_i of the *secondary segment* is set to the q_f of the preceding segment. Also, the *nominal decline rate* (a) at the beginning of the new segment and end of the preceding segment are set to be equal. For information on how a new segment is initialized, see [decline initialization](#).
 - For a new segment, you can specify your [calc method](#), but the default method is q_f / Q_f . This method enables you to enter the initial rate (q_i), initial effective decline rate (d_i), b value, and time; the calc method calculates the final rate (q_f), and cumulative production (Q_f).
 - The b value defaults to the value from the preceding segment, and a duration of *60 months* is initially applied.

Analysis Parameters pane

For a description of general parameters and options, see the [decline: Analysis Parameters pane](#) and [decline: Analysis Parameters toolbar](#).

The differences between multi-segment and Arps' decline analyses are described below.

Analysis Parameters		
Rate Type	Op. Day	
Forecast Start Date	01/01/2004	MM/DD/YYYY
Q	983.6	Mscfd
d,sec	6.961	%/year
b	1.000	
R _{lim}	0.918	
Segment 1		
Start Date	11/17/1997	MM/DD/YYYY
Q	1814.6	Mscfd
Δt	12.000	month
d,sec	12.129	%/year
b Method	Input	
b	1.000	
Q _e	1584.5	Mscfd
End Date	11/17/1998	MM/DD/YYYY
Q _e	728.711	MMscf
Constraints		
Δ _{max} Method	Input	
Δ _{max}	12.000	month
Q _{lim}		Mscfd
(d,sec) _{lim}		%/year
ΔQ _{max}		MMscf
Segment 2		
Start Date	11/17/1998	MM/DD/YYYY
Q	1584.5	Mscfd
Δt	6000.000	month
d,sec	19.817	%/year
b Method	Input	
b	1.000	
d _{lim exp}		%/year
Q _e	25.9	Mscfd
End Date	11/29/2499	MM/DD/YYYY
Q _e	29518.904	MMscf

- For the initial (segment #1 and segment #2) decline segments, a calc method cannot be specified.
- You can choose for your b value to be manually *input*, or selected from a custom attribute, under the **b Method** drop-down list.
- You can modify the constraints for your first decline segment under segment 1. For additional information, see constraints.
- For the second segment, you cannot specify a calc method, but you can define a limiting decline rate (both exponential and hyperbolic) by toggling **d_{lim exp}** / **d_{lim hyp}** and entering a value.

Line manipulation

Most of the line manipulation from the decline analysis is the same. However, some of the functionality is slightly different for the initial and secondary segments of your decline.

1. Since the initial decline rate at the beginning of the second segment is forced to be equivalent to the decline rate at the end of the first segment, you cannot use the *Ctrl* key to change the curvature, and hence the *b* value of the second segment. However, you can still use this functionality on any other secondary segment.
2. For the purpose of maintaining a smooth transition between the two segments, you cannot "click, grab-and-drag" the second segment and tilt your decline.

Line manipulations are initiated by clicking (sometimes while pressing the **Ctrl** or **Shift** keys) the line itself, or one of the manipulation points for a given segment (start date, forecast start date, or end date). You can cancel your line manipulation by pressing the **Esc** key.

Tip: Any time you see "click", this means to left-click your mouse. Right-click actions are specifically mentioned.

- **Forecast Start Date, (FSD)** (indicated by a green triangle on the decline line)
 - **Click, grab-and-drag** — moves the FSD along the decline curve, but does not change the decline itself. The *FSD* and consequently the production rate (q), and the effective decline rate (d_{sec}) are updated.
 - If you position the *FSD* anywhere beyond the historical production data on a rate-time plot, it simulates a shut-in. Note that you cannot locate the *FSD* beyond the historical production data on a rate-cumulative plot.
 - If you move the *FSD* to the first segment and then grab-and-drag, the decline line shifts vertically when you move your mouse up and down. The shape of the decline (b and d) is preserved, and q and q_i get updated.
 - **Shift key** — the effect of the Shift key on FSD depends on where the FSD is located:
 - If the *FSD* is located in the *second segment* (the default position), pressing the **Shift** key results in behavior similar to "click, grab-and-drag".
 - If you move the *FSD* to the *first segment* of the decline, pressing the **Shift** key enables you to move the FSD along the decline curve.
 - **Ctrl key** — if the *FSD* is located in the *second segment*, pressing the **Ctrl** key results in behavior similar to "click, grab-and-drag". However, if FSD is on the *first segment*, pressing the **Ctrl** key enables you to translate the decline in time.
- **Start Date** (indicated by a blue circle)
 - For any segment excluding the second segment, all three line functions (1. click, grab-and drag, 2. Shift key, 3. Ctrl key) behave the same as the default "click, grab-and-drag" behavior for the Start Date.
 - For the *Start Date* of the *second segment*, all three line functions behave the same and enable you to reposition the point along the decline curve. The Start Date adjusts the transition point by setting the time constraint to the current position and clearing the other constraints.
- **End Date** (indicated by a blue square)
 - For the *first segment* and *second segment*, all three line functions behave the same. They extend your forecast forward in time and decrease your abandonment rate (q_f). The final cumulative production (Q_f) increases, but none of the decline parameters change.



- For any additional segments, line functions performed on the end date behave the same as the default end-date line functions.
- **Any point on the forecast decline curve** (activated when the decline segment turns orange)
 - All line functions remain the same as the default "any point" line functions, when you adjust the *first segment* or any *added segments*.
 - You cannot manipulate the *second segment*.

Note: To customize your decline line, see [decline-line customization](#).

Stretched exponential decline analysis

The stretched exponential decline method is a variation of the traditional Arps method, but is better suited for unconventional reservoirs due to its bounded nature. For more information, see stretched exponential decline theory.

Note: This analysis works with your Harmony Forecast™ license.

Analysis Parameters pane

After you add your decline analysis (see analyzing an entity), the selected analysis (highlighted in purple) has its detailed parameters displayed in the Analysis Parameters pane located below the Analysis Manager pane (the default setting).



The screenshot shows the 'Analysis Manager' window. At the top, there are navigation icons. Below that, a tree view shows 'Analysis 1' with sub-items: EUR₀ (0.004 Mstb), N_p (0.004 Mstb), and RR₀ (0.000 Mstb). A checkbox for 'Oil - Stretched Exponential (RT)' is checked. Below this is a 'Plot Selection' tab labeled 'Analysis Manager'. The main area is titled 'Analysis Parameters' and contains a table of settings:

Rate Type	Op. Day	
Calc Method	Δt	
Start Date	05/01/2010	MM/DD/YYYY
q _i	0.0	stb/d
Δt	13.610	month
q ₀	0.3	stb/d
n	0.500	
τ	0.66	month
q _r	0.0	stb/d
End Date	06/19/2011	MM/DD/YYYY
Q _r	0.004	Mstb
EUR ₀ Infinite	0.011	Mstb
R ² _{log q vs t}		

In this pane, you can specify / view the following settings and parameters:

(The parameters that are displayed depend on if the analysis was created on a rate-time (RT) or rate-cumulative (RC) production plot.)

- **Rate Type** — select calendar rate (**Cal. Day**) or operator rate (**Op. Day**) from the drop-down list. For more information, see [decline analysis: rate type](#).
- **Calc Method** — select the method by which the decline analysis is calculated (for example, Δt or q_r) from the drop-down list.

- **Start Date** — the end of production data and the date of the forecast start, represented by the middle point of the analysis line.
- q_i — the initial gas / oil production rate for the forecast.
- Q_i — the cumulative production at the start of the forecast.
- Δt — the duration of the decline segment.
- q_o — a stretched exponential q_o term. (The initial rate at the start of production. Not to be confused with q_i , which is the initial rate at the start of the forecast.)
- n — a stretched exponential n term; it must be between 0 and 1.
- τ — a stretched exponential t term; it must be positive.
- q_f — the gas / oil production rate at the end of the forecast.
- **End Date** — the date the forecast ends.
- ΔQ — the cumulative production that occurs during the forecast period.
- Q_f — the cumulative production at the end of the forecast — expected ultimate recovery (EUR).
- **EUR₀ Infinite** — the EUR if the abandonment rate = 0.
- R^2 — an indication of the precision of the history match. It is reported as $R^2_{\log q \text{ vs } t}$ on a rate-time (RT) plot, and $R^2_{2q \text{ vs } Q}$ on a rate-cumulative (RC) production plot.

Analysis Parameters toolbar

The Analysis Parameters toolbar has the following icon:



Show / Hide Results Line — shows (default setting) or hides the dashed-green line on the plot that represents the abandonment for the stretched decline analysis..

Line manipulation

Line manipulations are initiated by clicking (sometimes while pressing the **Ctrl** or **Shift** keys) the line itself, or one of the manipulation points for a given segment (start date, forecast start date, or end date). You can cancel your line manipulation by pressing the **Esc** key. Specific line manipulations are described below:

Tip: Any time you see "click", this means to left-click your mouse. Right-click actions are specifically mentioned.

- **Start Date** (indicated by a blue circle)
 - **Click, grab-and-drag** — moves the decline line vertically to change the q_i of the segment. However, it does not change the *start date* or *Forecast Start Date (FSD)*. The shape of the decline (b and d) line is preserved.
 - Both q_i and q for the segment being manipulated get modified, and all segments following this segment are shifted in time / cumulative production, accordingly.
 - **Shift key** — pressing the **Shift** key while dragging extends your forecast back into the historical production. The *start date*, q_i , and d_i change, but the b value is not impacted.
 - This Shift-key functionality does not apply to a *secondary* segment.
 - **Ctrl key** — pressing the **Ctrl** key while dragging translates the curve along the x -axis. The *start date*, *FSD*, and *forecast end date* advance in time for the first segment.
 - This Ctrl-key functionality does not apply to a *secondary* segment.
- **End Date** (indicated by a blue square)
 - **Click, grab-and-drag** — enables you to move the *end date* in time, anchoring to the start date and maintaining the q_f . The b value is maintained, but d_i is updated. If the FSD is contained within the segment, then q and d update as well.
 - **Shift key** — pressing the **Shift** key while dragging extends your forecast forward in time, and decreases your final rate (q_f). Your final Q_f increases, but none of the decline parameters change.
 - **Ctrl key** — visually similar to the grab-and-drag functionality for the end date, but the b value can change with the Ctrl-key functionality.
- **Any point on the forecast decline curve** (activated when the decline segment turns orange)
 - **Click, grab-and-drag** — If the segment contains the FSD, that segment is anchored to the *FSD* and rotates around while the b value and q_f are maintained.
 - On a segment that does not contain FSD, the decline is anchored to the *start date* of the segment.
 - If you accidentally place the FSD at the end date of a segment, the decline is anchored to the *end date* of the segment.
 - **Ctrl key** — the curvature of the line (the b value) changes.

To customize your line, right-click it. For more information, see [decline-line customization](#).


Duong decline analysis

The Duong analysis was developed specifically for unconventional reservoirs with very low permeability. For more information, see [Duong decline theory](#).

Note: This analysis works with your Harmony Forecast™ license.

Analysis Parameters pane

After you add your decline analysis (see [analyzing an entity](#)), the selected analysis (highlighted in purple) has its detailed parameters displayed in the Analysis Parameters pane located below the Analysis Manager pane (the default setting).

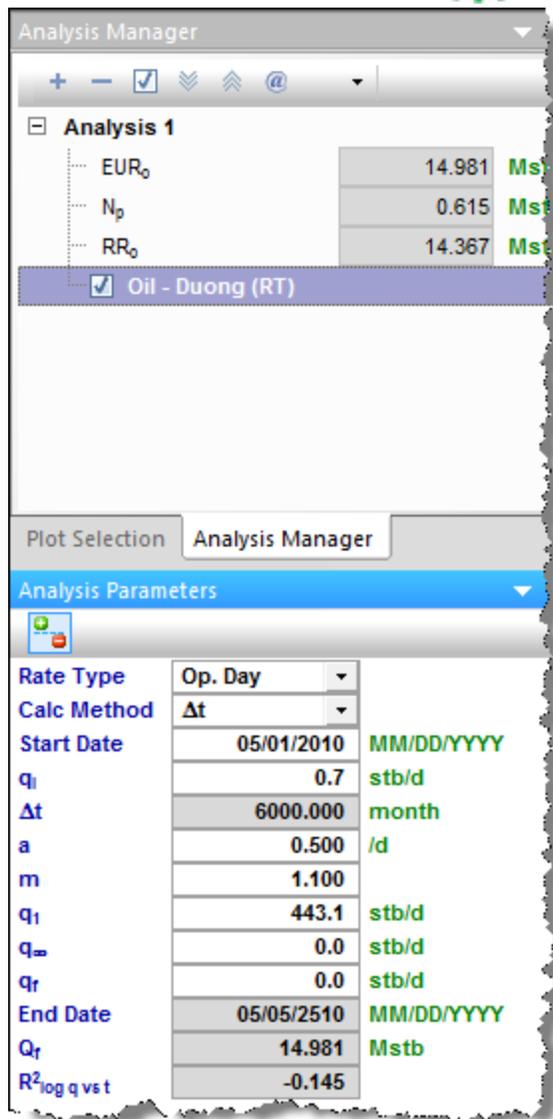

In this pane, you can specify / view the following settings and parameters:

(The parameters that are displayed depend on if the analysis was created on a rate-time (RT) or rate-cumulative (RC) production plot.)

- **Rate Type** — select calendar rate (**Cal. Day**) or operator rate (**Op. Day**) from the drop-down list. For more information, see [decline analysis: rate type](#).
- **Calc Method** — select the method by which the decline analysis is calculated (for example, Δt or q_f) from the drop-down list.
- **Start Date** — the end of production data and the date of the forecast start, represented by the middle point of the analysis line.

- q_i — the initial gas / oil production rate for the forecast.
- Δt — the duration of the decline segment.
- $t_{(a,m)}$ — the time function based on the coefficients a and m .
- t_{max} — the time at which the maximum flow rate occurs.
- a — the straight-line intercept of a $\log(q/N)$ vs. $\log(t)$ plot.
- m — the negative of a straight-line slope of a $\log(q/N)$ vs. $\log(t)$ plot.
- q_t — rate.
- Q_t — cumulative.
- q_1 — the rate at day one estimated from the slope of a plot of q vs. $t_{(a,m)}$.
- q_∞ — the rate at infinite time estimated from the intercept of a plot of q vs. $t_{(a,m)}$.
- q_f — the gas / oil production rate at the end of the forecast.
- q_{max} — the maximum flow rate.
- **End Date** — the date the forecast ends.
- Q_f — the cumulative production at the end of the forecast — expected ultimate recovery (EUR).
- R^2 — an indication of the precision of the history match. It is reported as $R^2_{\log q \text{ vs } t}$ on a rate-time (RT) plot, and $R^2_{2q \text{ vs } Q}$ on a rate-cumulative (RC) production plot.

Analysis Parameters toolbar

The Analysis Parameters toolbar has the following icon:



Show / Hide Results Line — shows (default setting) or hides the dashed-green line on the plot that represents the abandonment for the stretched decline analysis..

Line manipulation

Line manipulations are initiated by clicking (sometimes while pressing the **Ctrl** or **Shift** keys) the line itself, or one of the manipulation points for a given segment (start date, forecast start date, or end date). You can cancel your line manipulation by pressing the **Esc** key. Specific line manipulations are described below:

Tip: Any time you see "click", this means to left-click your mouse. Right-click actions are specifically mentioned.

- **Start Date** (indicated by a blue circle)

- **Click, grab-and-drag** — moves the decline line vertically to change the q_i of the segment. However, it does not change the *start date* or *Forecast Start Date (FSD)*. The shape of the decline (b and d) line is preserved.
 - Both q_i and q for the segment being manipulated get modified, and all segments following this segment are shifted in time / cumulative production, accordingly.
- **Shift key** — pressing the **Shift** key while dragging extends your forecast back into the historical production. The *start date*, q_i , and d_i change, but the b value is not impacted.
 - This Shift-key functionality does not apply to a *secondary* segment.
- **Ctrl key** — pressing the **Ctrl** key while dragging translates the curve along the x-axis. The *start date*, *FSD*, and forecast *end date* advance in time for the first segment.
 - This Ctrl-key functionality does not apply to a *secondary* segment.
- **End Date** (indicated by a blue square)
 - **Click, grab-and-drag** — enables you to move the *end date* in time, anchoring to the start date and maintaining the q_f . The b value is maintained, but d_i is updated. If the FSD is contained within the segment, then q and d update as well.
 - **Shift key** — pressing the **Shift** key while dragging extends your forecast forward in time, and decreases your final rate (q_f). Your final Q_f increases, but none of the decline parameters change.
 - **Ctrl key** — visually similar to the grab-and-drag functionality for the end date, but the b value can change with the Ctrl-key functionality.
- **Any point on the forecast decline curve** (activated when the decline segment turns orange)
 - **Click, grab-and-drag** — If the segment contains the FSD, that segment is anchored to the *FSD* and rotates around while the b value and q_f are maintained.
 - On a segment that does not contain FSD, the decline is anchored to the *start date* of the segment.
 - If you accidentally place the FSD at the end date of a segment, the decline is anchored to the *end date* of the segment.
 - **Ctrl key** — the curvature of the line (the b value) changes.

To customize your line, right-click it. For more information, see [decline-line customization](#).



Material Balance analysis

The material balance analysis is an interpretation method used to determine original fluids-in-place (OFIP) based on production and static pressure data. For more information, see [material balance theory](#).

Note: This analysis works with your Harmony Forecast™ license.

Harmony Enterprise supports:

- [gas material balance \(GMB\)](#)
- [oil material balance \(OMB\)](#)

Gas material balance


With the gas material balance (GMB) analysis, you can select: **Pressure-Function vs. Cumulative Gas** or **Pressure vs. Time** for a single well, or a group of wells.

The analysis line for GMB determines the original gas-in-place (OGIP). The expected ultimate recovery (EUR) can be determined using a recovery factor (RF) or abandonment pressure (P_{ab}). Note that the default calculation for EUR is the Auto option. For more information, see the Analysis Parameters pane below.

Tip: On a p/Z plot, the analysis trend is linear, and the line can be manipulated manually, or by changing the point selection for the best fit. On a Pressure vs. Time plot, the analysis is not a linear trend, and the only way to manipulate the analysis is through point selection.


Single well analysis

The well's static pressures are displayed as a letter. For a single-well analysis, the same letter is used for all pressures.

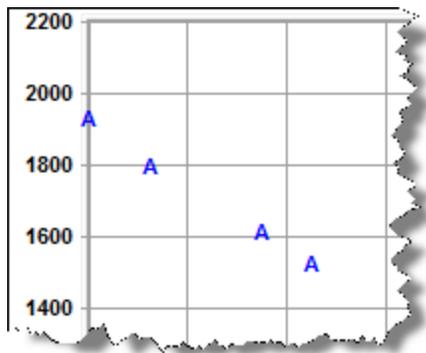


Group well analysis

When a group is analyzed, each well is represented by a different letter.

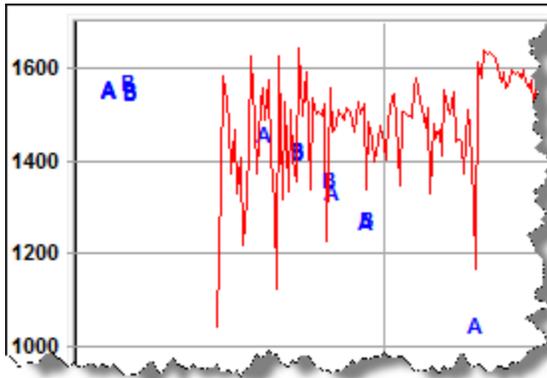

In addition, there is a Material Balance Wells tab / pane where you can select various wells.

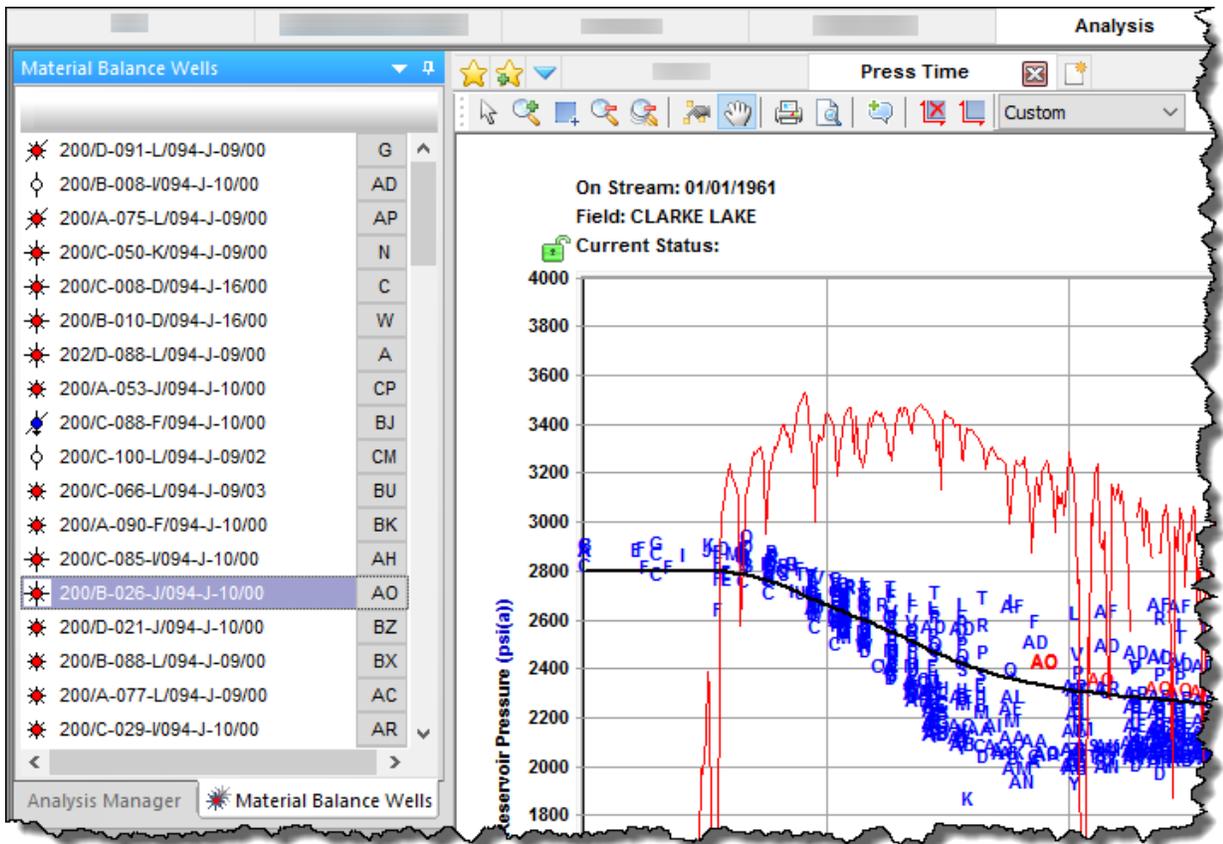

As you hover over various wells in the main pane, their analysis line and well letter is displayed in bold.

Context menus

Right-clicking a well in the Material Balance Wells pane lists these options:

- **Duplicate Selected into Shared Custom Group** — copies the selected entities into the shared custom group you select from the submenu.
- **Duplicate Selected into Private Custom Group** — copies the selected entities into the private custom group you select from the submenu.
- **Move Selected into Shared Custom Group** — moves the selected entities into the shared custom group you select from the submenu.
- **Move Selected into Private Custom Group** — moves the selected entities into the private custom group you select from the submenu.

For more information, see [shared](#) and [private custom groups](#).

Analysis Parameters pane

This pane has the following items that you can adjust:

- **Lock p_i** — select Yes or No.
- **p_i** — type your initial reservoir pressure.
- **Abd Calc** — select from the drop-down list:
 - **Auto** — estimates the depth by dividing the initial pressure by the water gradient (0.433 psi/ft). The abandonment pressure is then 35 psi plus 35 psi for every 1,000 ft of depth.
 - **Specify P_{ab}** — you can specify a final reservoir pressure that is used to calculate the corresponding production at this pressure and the recovery factor for gas (RF_g).
 - **Specify RF** — you can specify a percentage of the original gas in-place (OGIP) from the analysis, and the corresponding abandonment pressure is calculated.
 - **None** — RF and P_{ab} are left blank; therefore, expected ultimate recovery (EUR) and remaining recoverable (RR) are not calculated.

Toolbar

The Analysis Parameters toolbar has the following icons:

-  **Show / Hide Abandonment Line** — toggle this line on or off. This line represents the abandonment pressure in terms of p/Z or p/Z^{**} , and the expected ultimate recoverable reserves.
-  **View data for the current analysis and adjust data point selection** — opens the Material Balance Data Point Selection dialog box where you can view, print, preview, and export your data to a .csv file.
-  **Open advanced options for this analysis** (if applicable) — applies to advanced GMB analyses, but in some cases, these options can be applied to non-advanced GMB analyses. Opens the Advanced Material Balance Options dialog box where you can adjust four areas of your GMB: producing reservoir, geopressured, water drive, and connected reservoir.
-  **Show GMB diagnostics grid** — opens the Material Balance Data dialog box where you can view, print, preview, and export your calculated and synthetic data to a .csv file.

GMB plots and parameters


Gas material balance (GMB) analyses can use a pressure function vs. cumulative gas, or pressure vs. time.

The pressure function depends on the type of analysis:


- GMB uses p/Z
- Advanced GMB uses p/Z^{**} (including aquifer effects, but excluding desorption effects)

In order for data to be displayed on the worksheet, the well or group being analyzed must have at least one static pressure value in the Static Pressure editor. Gas gravity, or gas composition and reservoir temperature must be provided in the Properties editor.

Data points in the plot can be turned on or off by selecting / deselecting checkboxes in the **Use in Analysis** column of the Static Pressure editor.

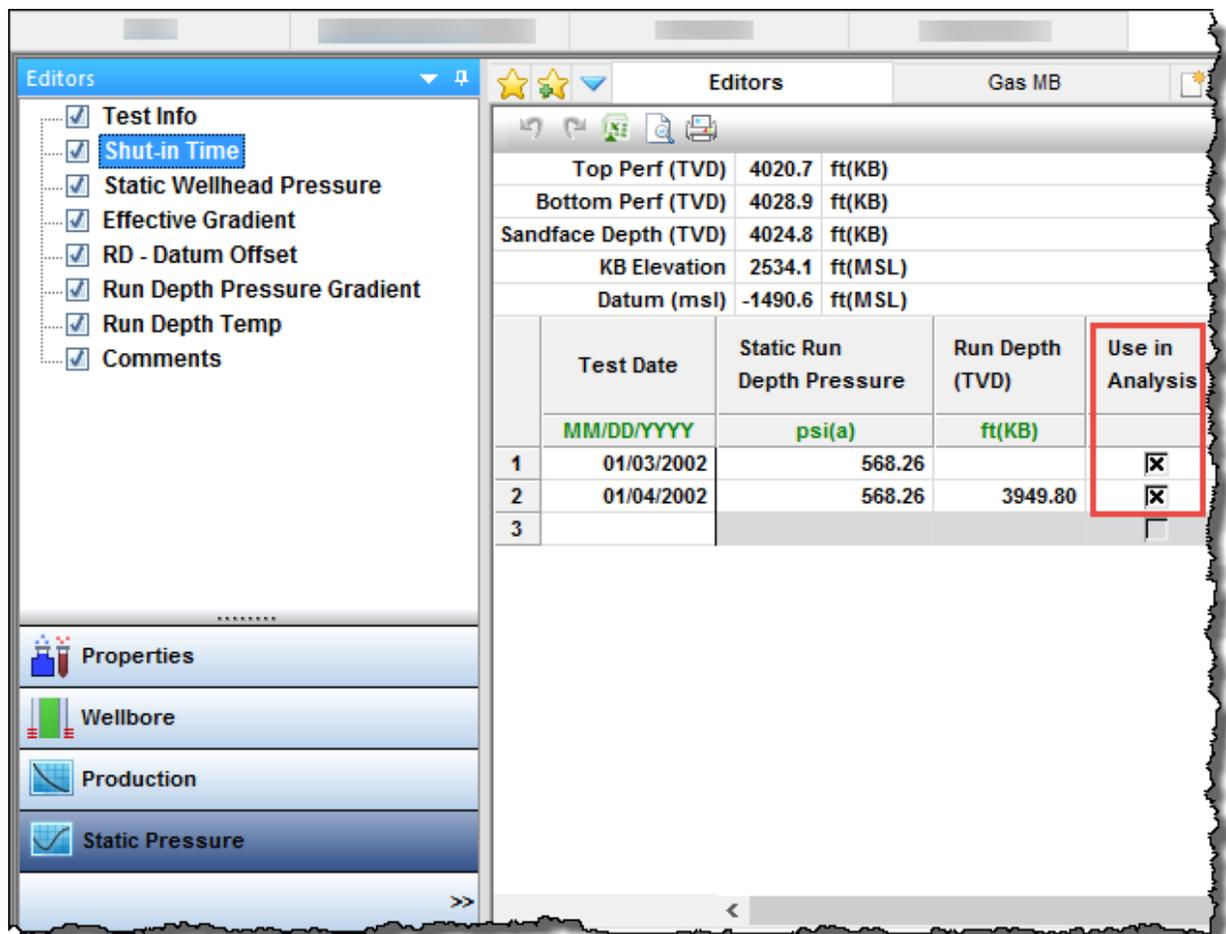

Test Date	Static Run Depth Pressure	Run Depth (TVD)	Use in Analysis
MM/DD/YYYY	psi(a)	ft(KB)	
1	01/03/2002	568.26	<input checked="" type="checkbox"/>
2	01/04/2002	568.26	3949.80 <input checked="" type="checkbox"/>
3			<input type="checkbox"/>

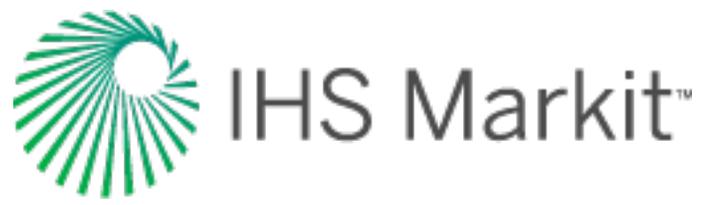


Advanced GMB

You can add an advanced gas material balance (GMB) analysis to an existing GMB worksheet by clicking the **Open advanced options** (🔧) icon in the Analysis Parameter pane's toolbar.

Or, you can add an advanced GMB analysis to a new worksheet by clicking the **Add an analysis** (+) icon in the Analysis Manager's toolbar and selecting **Gas - Advanced Material Balance**.

In both cases, the Advanced Material Balance Options dialog box opens.

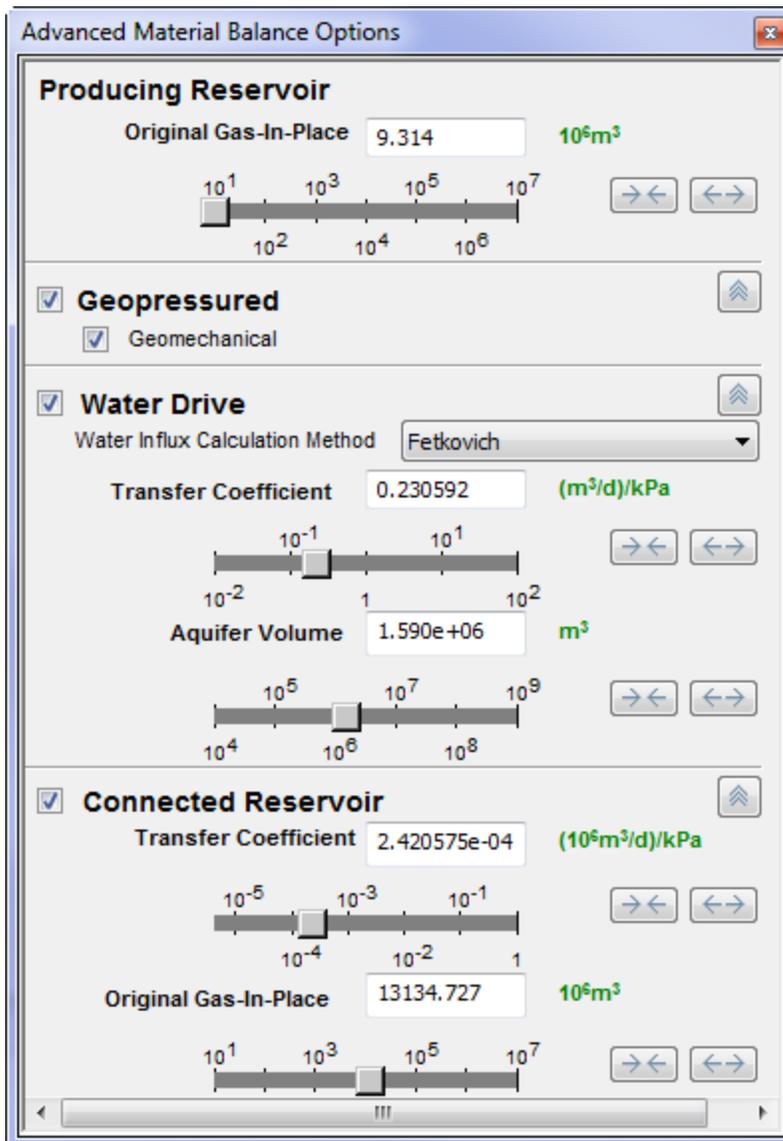

Advanced Material Balance Options

Producing Reservoir

Original Gas-In-Place 10^6m^3

Geopressured

Geomechanical

Water Drive

Water Influx Calculation Method

Transfer Coefficient $(\text{m}^3/\text{d})/\text{kPa}$

Aquifer Volume m^3

Connected Reservoir

Transfer Coefficient $(10^6 \text{m}^3/\text{d})/\text{kPa}$

Original Gas-In-Place 10^6m^3

Select the options you want to use:

- **Geopressured** — this model does not have parameters in the GMB worksheet. In the Properties editor in the Geomechanical node, a correlation for formation compressibility can be set. This is what is used with the geopressured model to account for formation compressibility in the analysis. The additional reservoir properties that are required for the correlation are initial pressure and porosity.
- **Water Drive** — these models have parameters in the Advanced Material Balance Options dialog box to match the analysis.
- **Connected Reservoir** — these models have parameters in the Advanced Material Balance Options dialog box to match the analysis.

For the water drive and connection reservoir models, the Pressure vs. Time worksheet is often easier to use for matching the analysis. First, match the initial decline trend using the standard GMB analysis, then add the water drive or connected reservoir advanced model. Start the parameters with a low connected aquifer / gas reservoir, then increase the transfer coefficient to a region where the pressure data is very sensitive to a changing transfer coefficient. The transfer coefficient is used to match the initial pressure support trend, and the connected volume is used to match later pressure data. You may need to manipulate one parameter and then the other, back and forth, until you are satisfied with the match. Because two parameters are used in a single equation for the match, the solution is not unique. It is better to stick with a smaller connected volume, unless other indications of a large connected volume (geology, etc.) are present.

Oil material balance

With the oil material balance (OMB), you can analyze static pressure data for oil wells or groups to interpret the original oil in-place. With this analysis, you can account for pressure changes due to water encroachment, changes in formation compressibility, and volatile oil.

OMB equations are very sensitive to data quality. When performing an OMB analysis, it is important to remember that a lot of the parameters cannot be measured, so they are based on estimates.

Analysis Parameters pane

This pane has the following items that you can adjust:

- **Geomechanical** — click this checkbox to enable this option. Note that you must enter Geomechanical values in the Properties editor.
- **Water Drive** — click this checkbox to enable this option.
- **Volatile Oil** — click this checkbox to enable this option. Note that you must have liquid-rich gas values in the Properties editor.
- **OOIP** — original oil in-place is both the main analysis result and one of the parameters that can be adjusted.
- **m** — type your gas cap oil leg ratio.
- **OGIP_F** — (required) type your original gas in-place.
Note: Both **m** and **OGIP_F** represent free gas in-place, and you can best-fit on OGIP_F, type a value for OGIP_F, or type a value for m.
- **RF_o** — type your oil recovery factor.

When you click various checkboxes in the Parameters and Results section (for example, OOIP, OGIP_F), this influences which parameters are adjusted when using point selection to best-fit pressure data.

Toolbar

The Analysis Parameters toolbar has the following unique icons:

-  **Injection Gas Properties** — opens a dialog box where you type a custom Formation Volume Factor table for injected gas.

-  **Results Grid** — opens the Oil Material Balance Results Grid dialog box where you can view OMB results in a tabular format.

Plot dashboard

The Generalized Havlena-Odeh Analysis plot is displayed in the top left corner of your dashboard. By default, the other three plots that are displayed are Havlena-Odeh, N vs Time, and Pressure History Match.

Important: You can switch which plot is displayed by clicking the **Change Plot** button in all of the plots' toolbars (that is, Campbell, Dake, Drive Indices, Havlena-Odeh, N vs Time, Pressure History Match, and Pressure vs. N_p). For more information, see [OMB theory](#).

Volumetrics analysis

The volumetrics analysis is used to estimate the original hydrocarbon fluid volume in a reservoir. This analysis requires knowledge of reservoir rock properties, as well as fluid saturations and properties. A volumetric analysis can be conducted at any point in the production history, but it is most often used early in the life of the reservoir. For more information, see [volumetrics theory](#).

Note: This analysis works with your Harmony Forecast™ license.

Toolbars

For information on the primary toolbar (and context menu), see the [Analysis Manager](#).

The secondary toolbar is located in the analysis tab and includes the following important icon:

 **Defaults** — copies parameters from the [Properties editor](#).

For information on common icons, see [plot toolbars](#).

Parameters

Enter (or edit) the parameters in the worksheet. As values are calculated, the summary values in the Analysis Manager are also populated.

- **Reservoir Properties** — these parameters are pre-populated from the Properties editor. However, you can amend parameters to see how variation in reservoir properties affects results. To re-populate all of the parameters from the Properties editor, click the **Defaults** icon (). To re-populate a specific parameter from the Properties editor, click the **Defaults and Limits** button () to the right of the parameter.
- **Oil / Gas Properties** — these parameters are pre-populated from the Properties editor, but you can change some of them. Volumetric calculations use the properties specified in the volumetric analyses.
- **Formation Volume Factor** — you can enter a formation volume factor (B_{gi} or B_{oi}), or click the checkbox to let Harmony Enterprise automatically calculate this value.
- **Adsorption** (intended for shale gas) — you can enter adsorption values to calculate $OGIP_A$. (The default values are those set in the Adsorption section of the Properties editor.)

- **Volume Parameters** — Since reservoir area, rock volume, pore volume, and hydrocarbon pore volume are all linked to each other, OFIP can be calculated based on any of these inputs. Click the option  for the parameter you want to enter. You can also set Dimensions (reservoir length x_e and reservoir width y_e). In this case, the reservoir area is calculated based on given dimensions, and this area is used to calculate the remaining volume parameters. Or, you can calculate OFIP based on the RF and EUR, by clicking the EUR option  .
- In a gas analysis, a surface loss parameter (SL) is available. When SL is entered, the Sales EUR parameter is calculated (if EUR_g exists).

Note: The gas volume analysis has different parameters depending on whether the well is a dry / wet gas well, or a liquid-rich gas well. In the case of a liquid-rich gas well, a volumetric analysis calculates and displays $OGIP_d$ (original dry gas-in-place), as well as $OGIP_r$ (original recombined gas-in-place). Additionally, OCIP (original condensate-in place) is calculated. When displaying volumetric analysis results in the Results Viewer, gas summary parameters ($OGIP$, EUR_g , Gp_{Net} , RR_g , and RF_g) are displayed in terms of dry gas, *not* in terms of recombined gas. For more information on calculations for liquid-rich gas wells, see volumetrics theory.


WOR analysis

The water-oil ratio (WOR) analysis is an empirical method for trending water and oil production. For additional information on theory and concepts, see [WOR forecasting theory](#). When a WOR analysis is added, it is initialized using a best fit.

Note: This analysis works with your Harmony Forecast™ license.

Analysis Parameters pane

A WOR analysis can be added or displayed in an open worksheet while Cumulative Oil is on the x-axis, and at least one of the following is on the y-axis: WOR, WOR+1, or Water Cut. After you add a WOR analysis (see [analyzing an entity](#)), the selected analysis has its detailed parameters displayed in the Analysis Parameters pane.

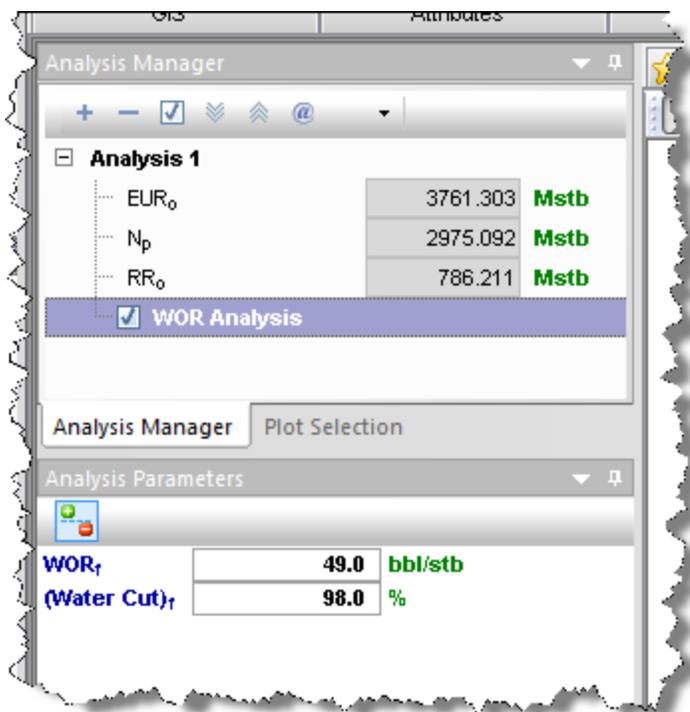

In this pane, you can specify / view the following parameters:

- **WOR_f**— the final / abandonment water-oil ratio. It is initialized from the settings defined in the Options dialog box (see [WOR options](#)). This value is calculated when **(Water Cut)_f** is specified, and this value must be in the range (0, ∞).

- **(Water Cut)_f** — the final / abandonment water cut. It is initialized from the settings defined in the Options dialog box (see WOR options). This value is calculated when **WOR_f** is specified, and the value must be in the range (0, 100).

Analysis Parameters toolbar

The Analysis Parameters toolbar has the following icon:

-  **Show / Hide Results Line** — shows (default setting) or hides the dashed-green line on the plot that represents the abandonment for the WOR analysis. It is initialized from the settings defined in the Options dialog box (see WOR options).


Line manipulation

Line manipulations are initiated by clicking-and-dragging:

- **Line** — changes the slope of the trend line about the manipulation point.
- **Manipulation point** () — translates the line vertically or horizontally while maintaining the slope.

Analysis line customization

To change the line width and color of your analysis line, right-click the WOR analysis line and select **Customize Line**.

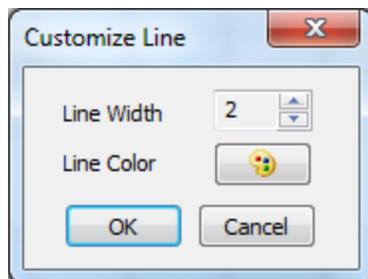


After you customize your line, the modifications are saved and applied to every worksheet that displays this analysis.

WOR options

WOR analysis options are accessed by clicking the **Options** icon () on the main toolbar, or by clicking the **Tools** menu and selecting **Options**. In the Options dialog box, click **Water Oil Ratio**

under the User Settings>>Analysis node.

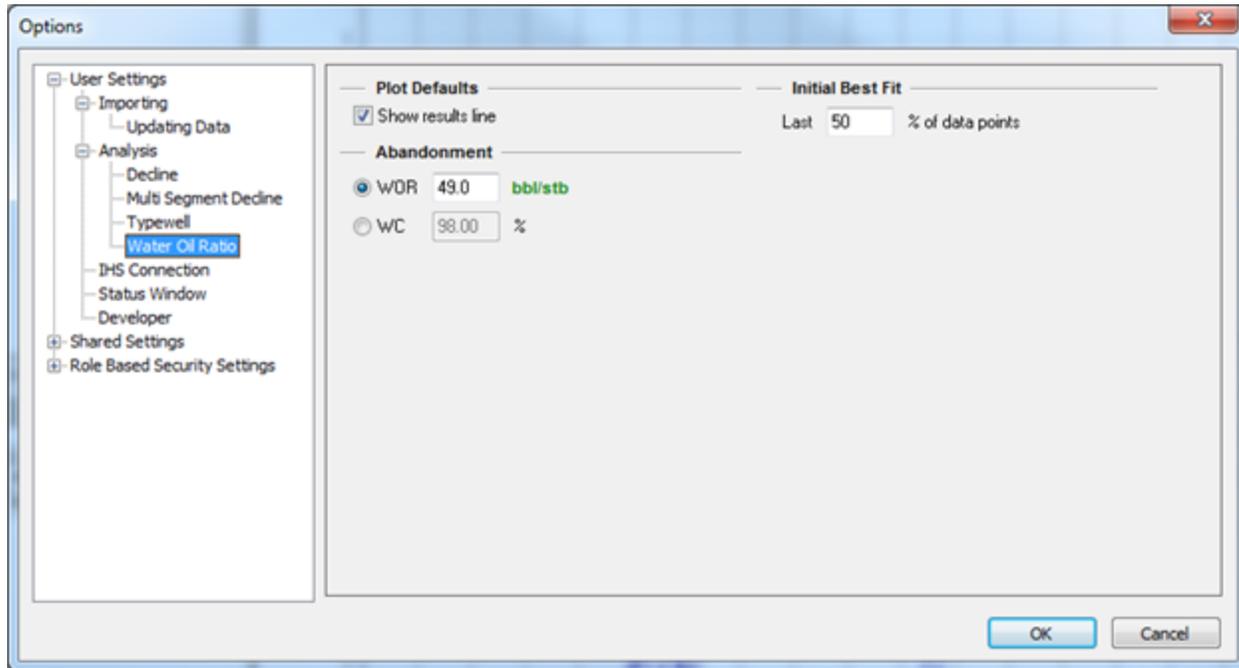

You can set the parameters that initialize water-oil ratio (WOR) analyses in Harmony Enterprise. These inputs can be overridden with each analysis, and the Options dialog box inputs are only used when the analysis is created. The WOR parameters and settings are as follows:

- **Show results line** — shows / hides the green-dashed line for abandonment on your plot.
- **WOR** — sets the abandonment WOR. Harmony Enterprise uses 49 bbl/stb as the default.
- **WC** — sets the abandonment water cut (WC). Harmony Enterprise uses 98% as the default.
- **Initial Best Fit** — specifies the percentage of your historical data that you want to be included in the initial best fit.


Oil cut analysis

The oil cut analysis is an empirical method for trending water and oil production. When an oil cut analysis is added, it is initialized using a best fit. Since time is on the x-axis, an EUR is not determined.

Note: This analysis works with your Harmony Forecast™ license.

Analysis Parameters pane

An oil cut analysis can be added / displayed on an open worksheet while time is on the x-axis, and oil cut is on the y-axis. After you add an oil cut analysis (see [analyzing an entity](#)), the selected analysis has its detailed parameters displayed in the Analysis Parameters pane.

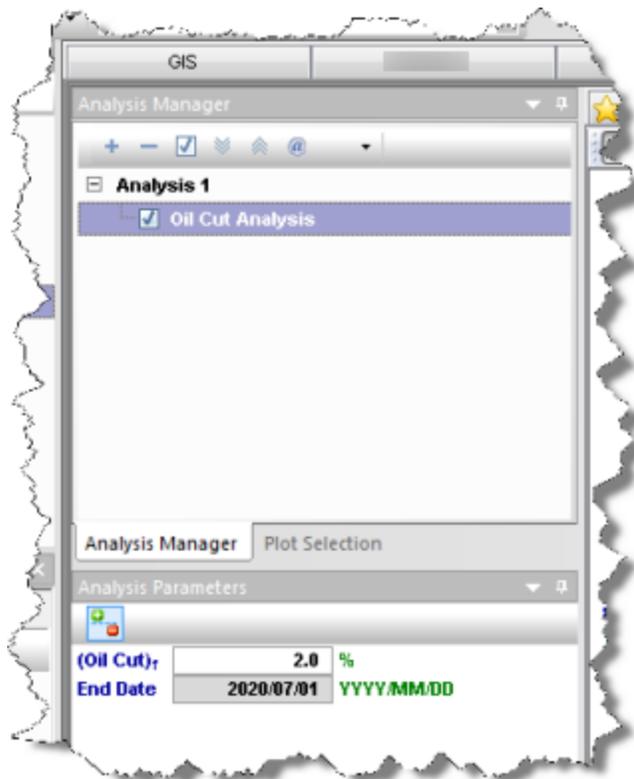

In this pane, you can specify / view the following parameters:

- **(Oil Cut)_f** — the final / abandonment oil cut. Initialized as 100-WC from the WC value defined in the Options dialog box (under the Water Oil Ratio node). The value must be in the range (0, 100).
- **End Date** — the corresponding date at the oil cut abandonment value.

Analysis Parameters toolbar

The Analysis Parameters toolbar has the following icon:

 **Show / Hide Results Line** — shows (default setting) or hides the dashed-green line on the plot that represents the abandonment for the oil cut analysis. It is initialized from the settings defined in the Options dialog box, under the Water Oil Ratio node.


Line manipulation

Line manipulations are initiated by clicking-and-dragging:

- **Line** — changes the slope of the trend line about the manipulation point.
- **Manipulation point** () — translates the line vertically or horizontally while maintaining the slope.

Analysis line customization

You can customize your analysis line's width and color by right-clicking and selecting **Customize Line**.

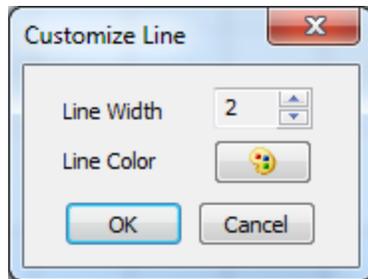


Your modifications are saved and applied to every worksheet that displays this analysis.

WOR / oil cut forecast

By associating a water-oil ratio (WOR) / oil cut forecast (total fluid forecast) with a WOR or oil cut analysis, Harmony Enterprise calculates oil and water forecasts that update as the WOR / oil cut analysis is modified.

Note: This forecast works with your Harmony Forecast™ license.

You can add this analysis by selecting a WOR or Oil Cut analysis while on a Forecast worksheet, or by selecting **WOR / Oil Cut Forecast** from the Analysis Manager after clicking the + icon. Using either method opens the Initialize Total Fluid Forecast dialog box.

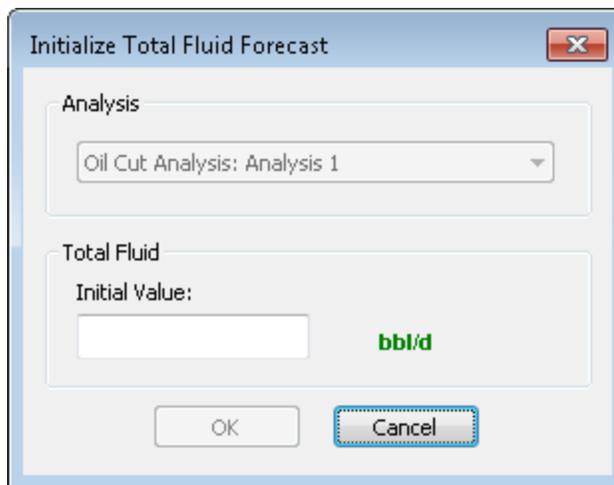


- **Analysis** — select the WOR or oil cut analysis to be used with the total fluid forecast.
- **Total Fluid Initial Value** — the specified value is a constant to initialize the total fluid forecast ($q_o + q_w$). The total fluid rate can be defined through time by entering values in the $q_{\text{Liquid}(o+w)}$ column in the Forecast worksheet.

Clicking **OK** after providing the required inputs, adds an oil and water forecast with the specified analysis, starting at the end of historical production.

Analysis Parameters pane

After you add a WOR / Oil Cut Forecast, selecting the oil or water forecast displays its detailed parameters in the Analysis Parameters pane.

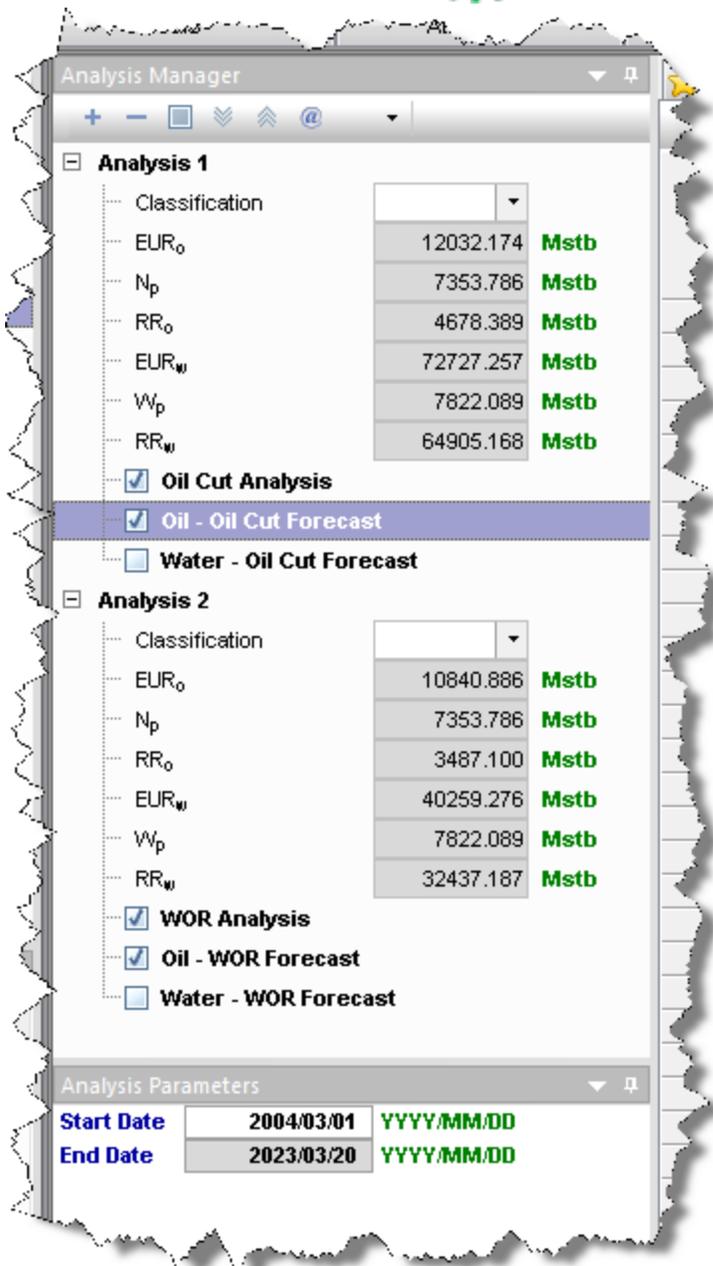

In this pane, you can specify / view the following parameters:


- **Start Date** — the start of the total fluid forecast. It is initialized as the end of historical production. Specifying a value beyond the end of production does not adjust the trend of the associated WOR / Oil Cut analysis.
- **End Date** — the date at abandonment controlled by the associated WOR / Oil Cut analysis (WOR_f, (Water Cut)_f, or (Oil Cut)_f).

Ratio forecast

Ratio forecasts are used to apply a user-input ratio to an existing forecast in order to calculate another fluid's forecast. As a prerequisite, you must have an existing forecast, and you can only add ratio forecasts to analyses that are forecasts.

Note: This forecast works with your Harmony Forecast™ license.

After you open your existing forecast, you can add a ratio forecast (see [analyzing an entity](#)) and initialize this forecast using a constant ratio value.

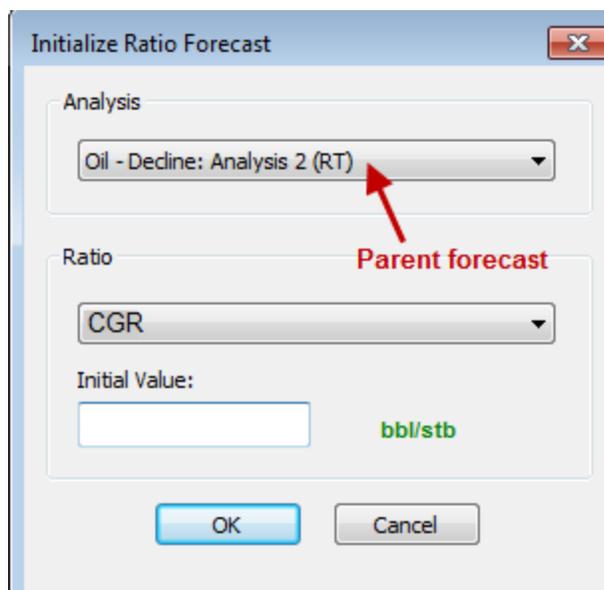

The ratio forecast is a child forecast, so if you update, move, or delete the parent forecast, the child is updated automatically. Note that the child forecast does not affect the parent.

Changes from the constant value ratio can be made by typing or pasting the ratio column of the Forecast worksheet.

The initial value for the ratio forecast can be updated, but the duration is set by the parent forecast (for example, the decline). If you extend the range of the parent forecast, the ratio forecast automatically extends its initial value to match the new end date. If you truncate the range of the parent forecast, the unnecessary rows in the ratio forecast are automatically deleted.

You can change your table resolution by clicking the **D** (day), **M** (month, the default setting), or **Y** (year) icons on the toolbar. For a description of common icons, see [toolbars](#).

Ratio trend

Click to see subtopics:

The ratio trend is used to create linear forecasts of fluid ratios vs time. These can be linked to decline analyses to create rate forecasts in place of analyzing secondary fluids independently. The ratio trend is not based on a model or equation, and you should consider the fluid properties of a reservoir in order to constrain forecasts.

The supported ratios include gas-oil ratio (GOR), water-oil ratio (WOR), condensate-gas ratio (CGR), and water-gas ratio (WGR). On a worksheet that includes one of these ratios plotted against date time or cumulative time, the corresponding ratio trend is available to add in the Analysis Manager by clicking the + icon.

Note: This analysis works with your Harmony Forecast™ license.

Analysis Parameters pane

After you add your ratio trend, the selected analysis (highlighted in grey) has its detailed parameters displayed in the Analysis Parameters pane located below the Analysis Manager pane. (This is the default setting.)

Analysis Manager

Exponential RC
 Exponential RT
 Analysis 1

GOR Ratio Trend

Analysis Manager | Plot Selection

Analysis Parameters

Ratio Axis Type: **Log**

[- Segment 1 -]

Manipulation Method	Variable Ra...	
Start Date	03/26/2001	MM/DD/YY
End Date	10/29/2022	MM/DD/YY
Δt	259.1	month
GOR_i	329.7	scf/bbl
GOR_f	480.8	scf/bbl
GOR/Time Slope	632.2	scf/bbl/n

[- Segment 2 -]

Lock To Previous Segment

Manipulation Method	Constant R...	
Start Date	10/29/2022	MM/DD/YY
End Date	04/22/2045	MM/DD/YY
Δt	269.8	month
GOR	480.8	scf/bbl

Harmony Enterprise initially best fits your ratio trend based on all the production history of the ratio.

In this pane, you can view the following setting:

Ratio Axis Type—displays Log or Coordinate, depending on the axis type you set for the ratio on the worksheet when you created the ratio trend. The ratio trend can be displayed on the other axis type, but it will appear in grey, as a display-only analysis that cannot be

modified. It does not appear as a straight line when the axis type is switched, as it is linear only on the axis type it is created on.

Multiple segments

You can add multiple segments (see [Analysis Parameters toolbar](#)) to your ratio trend, and under each segment, you can change parameters and the manipulation method for that segment.

Under each segment's tab, you can specify / view the following parameters:

- **Manipulation Method** — select Variable Ratio for linearly increasing or decreasing ratios, and select Constant Ratio for a fixed value. The default settings is Variable Ratio.
- **Start Date** — the start of the ratio trend is indicated by a left square on the analysis line.
- **End Date** — the end of the ratio trend is indicated by a right square on the analysis line.
- **Δt** — the duration of the ratio trend from the start date to the end date.
- **Initial Ratio** — the initial ratio value at the start of the ratio trend. This is displayed as a ratio acronym (such as GOR) with the subscript 'i' and is only applicable to the Variable Ratio.
- **Final Ratio** — the final ratio value at the end of the ratio trend. This is displayed as a ratio acronym (such as GOR) with the subscript 'f' and is only applicable to the Variable Ratio.
- **Slope** — for the Variable Ratio trend, this is the difference between the final and initial ratio divided by the duration.
- **Ratio** — a Constant Ratio trend shows the ratio value used over its duration with a ratio acronym (such as GOR).
- **Lock To Previous Segment** — on secondary segments, when this option is on the initial ratio, it is locked to the final ratio of the previous segment, and both remain synchronized through any analysis modifications.

Analysis Parameters toolbar


The Analysis Parameters toolbar has the following key icons



Add Segment / Remove Segment — adds a new segment to the end of the existing ratio trend, or removes the last segment. When you add a new segment, it initializes as a Variable Ratio with the same starting value and slope of the previous segment. The duration of new segments is 60 months (5 years).

Line manipulation

Line manipulations are initiated by clicking the line itself, or one of the manipulation points for a given segment (start date or end date). Specific line manipulations are described below.

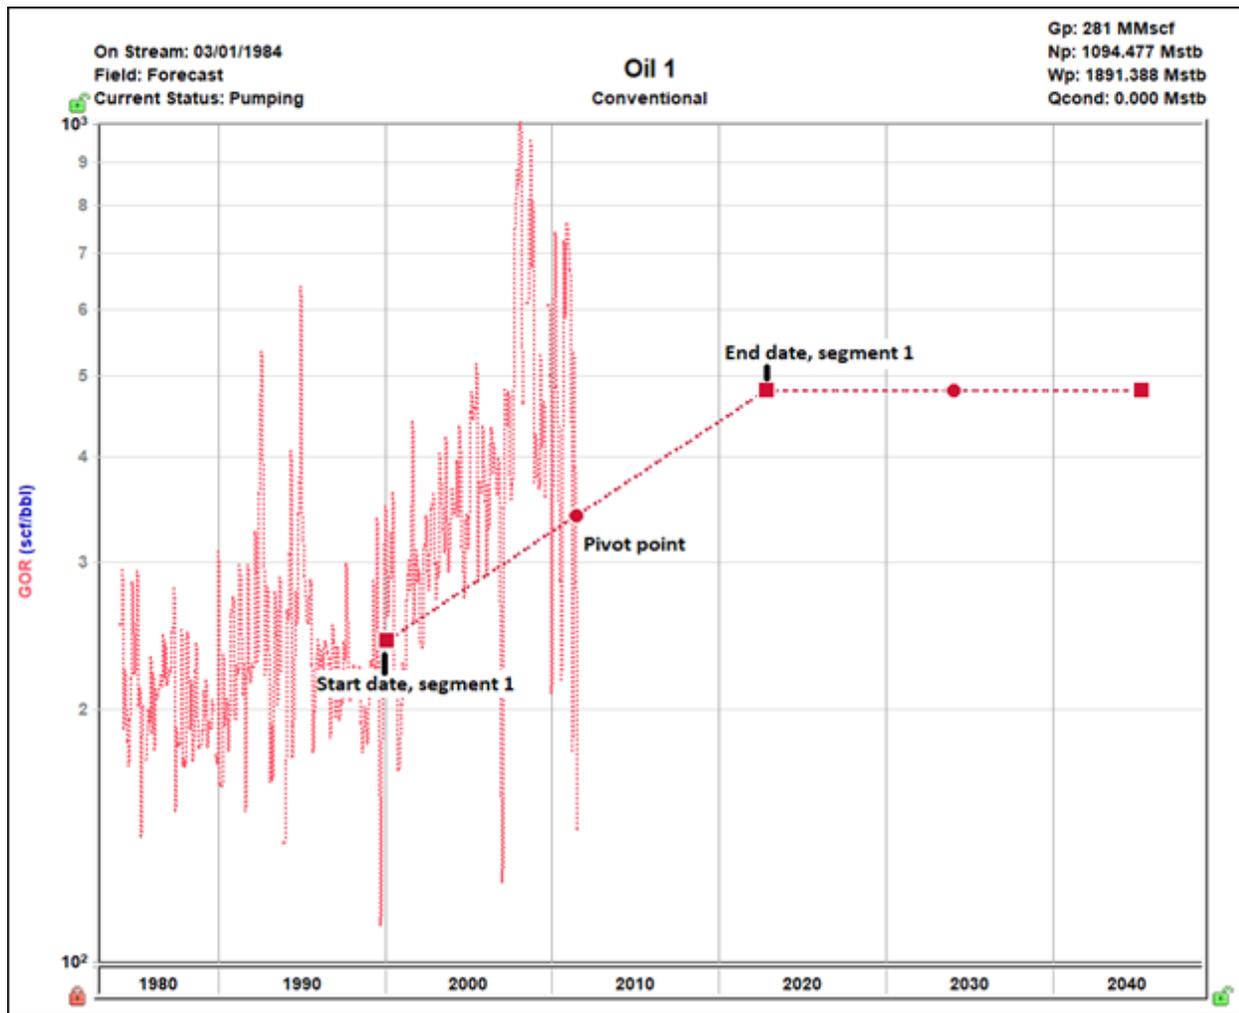

Start Date (indicated by a left square)

- **Click, grab-and-drag** — moves the line vertically and horizontally (4-direction pan) to change the start date and the initial ratio. The slope is changed, but the end-date point stays fixed.
 - On a Constant Ratio segment, this only moves horizontally and changes the start date.

End Date (indicated by a right square)

- **Click, grab-and-drag** — moves the line vertically and horizontally (4-direction pan) to change the end date and the final ratio. The slope is changed, but the start-date point stays fixed.
 - On a Constant Ratio segment, this only moves horizontally and changes the end date.

Any point on the line (activated when the segment turns orange)

- **Click, grab-and-drag** — rotates the line about the pivot point. Both initial and final ratios are changed, but the start and end dates are fixed. This is not available for Constant Ratio segments.

Pivot point (indicated by a circle)


- **Click, grab-and-drag** — moves the line vertically while the slope is maintained. The pivot point can also move along the line to change its position.

Linking to a Decline analysis

After you have created a Ratio Trend, you can link it to a decline analysis to calculate a rate forecast. For example, linking a GOR and oil decline calculates a gas rate forecast. This can be done by clicking the ... button next to the analysis in the Analysis Manager. For more information, see [Analysis type menu](#).

For each ratio, either fluid can be linked to calculate the other, but only traditional and multi-segment declines are used. Duong, Stretched Exponential, and other forecast types do not generate a rate forecast with a ratio trend. The rate forecast is calculated from the decline's Forecast Start Date to End date. If the Ratio Trend does not extend over the same duration, a fixed value of the ratio is extrapolated to fill the gap.

The calculated rate appears as an item in the Analysis Manager (selected below) that can be displayed on a worksheet with its rate, or on the Forecast worksheet.

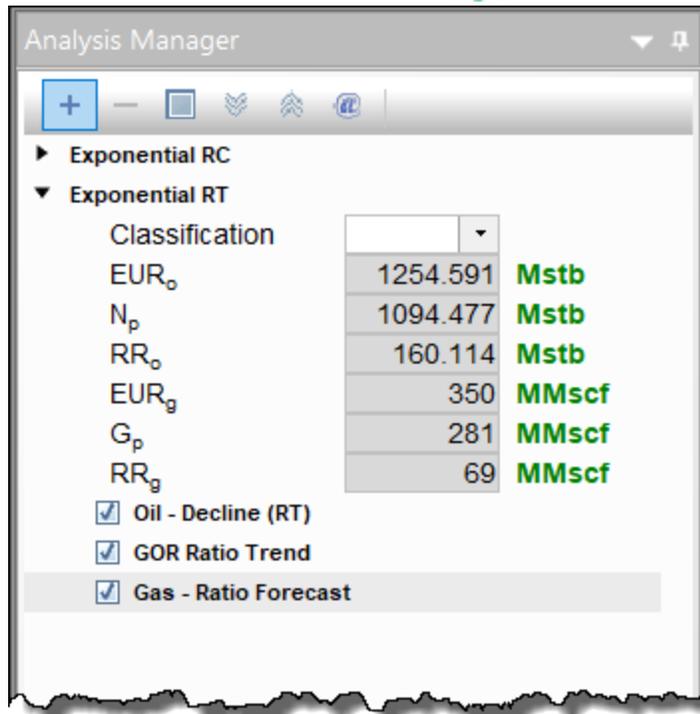

If the decline or ratio trend is removed from the parent analysis or deleted, the rate forecast is deleted. Another analysis that generates a rate forecast of the same fluid type cannot be linked to the analysis after the rate forecast is created.


The rate forecast can be exported. For more information, see [export forecasts](#). When the ratio trend is linked to an appropriate decline, it can also be exported to ARIES. For more information, see [export decline parameters](#).

An ARIES export supports the following combinations:

- GOR + oil decline
- GOR + gas decline (exported as OGR)
- WOR + oil decline
- CGR + gas decline
- WGR + gas decline

Analysis-line customization

You can customize the width and color of your decline line / curve by right-clicking it.

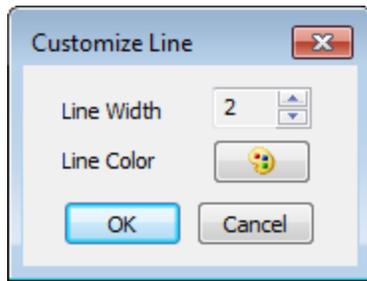

After you customize your decline line / curve, the modifications are saved and applied to every worksheet that displays this decline.

Custom forecast


Custom forecasts are used to bring third-party forecasts into Harmony Enterprise.

Note: This forecast works with your Harmony Forecast™ license.

Custom forecasts are created by importing a third-party forecast (for example, Excel, IHS Piper) for various fluid types into a Forecast worksheet (see [analyzing an entity](#)). The files types we support are: .csv, .txt, or .xls /.xlsx.

Only one forecast can be brought in at a time and column headers must be assigned to the data to be imported in the Import Data dialog box, and either a Cumulative Time or Date Time must be specified.

If Date Time is used, the Start and End Dates are read from the import file. The End Date is one day after the last record in the import file for daily forecasts, and one month for monthly forecasts. The End Period can be used to extend the forecast past the final date in the import file by a specified number of days.

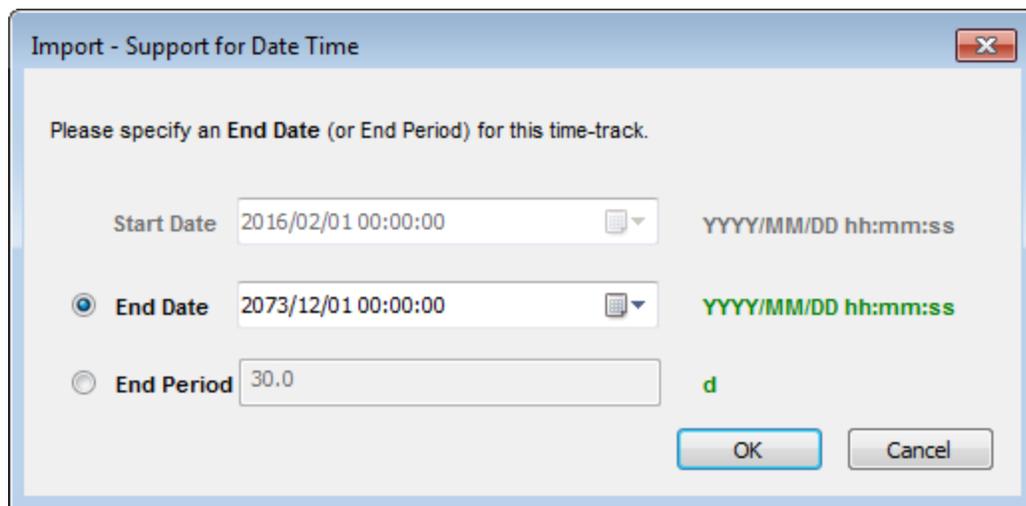

Import - Support for Date Time

Please specify an End Date (or End Period) for this time-track.

Start Date 2016/02/01 00:00:00 YYYY/MM/DD hh:mm:ss

End Date 2073/12/01 00:00:00 YYYY/MM/DD hh:mm:ss


End Period 30.0 d

OK Cancel

If Cumulative Time is used, a Start and End Date can be specified. If the host entity contains production data, the Start Date defaults to the end-of-production. If the host entity does not contain production data, the Start Date defaults to midnight of the current day on the machine that is running Harmony Enterprise.

Changing the Start Date changes the End Date, but changing the End Date results in the forecast being truncated or extended.

The End Period can be used to extend the forecast past the final date in the import file by a specified number of months.

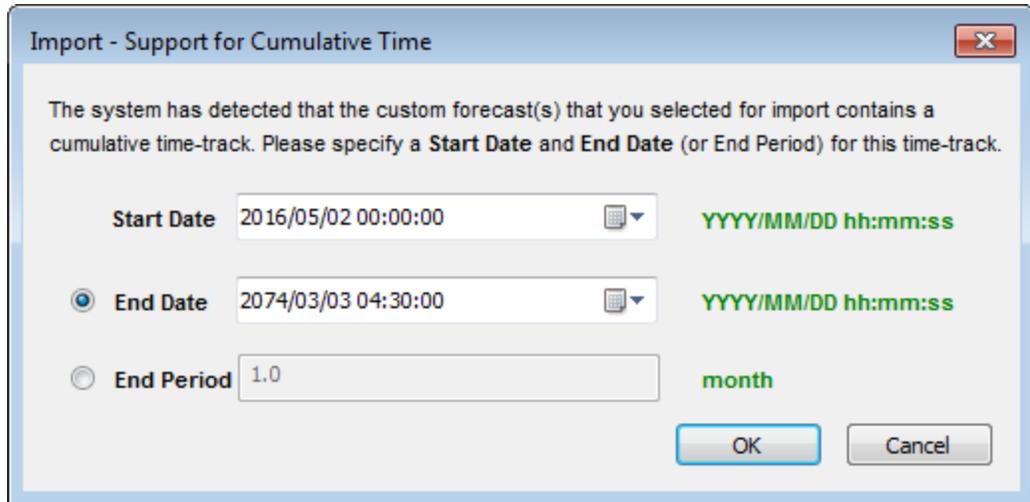

Import - Support for Cumulative Time

The system has detected that the custom forecast(s) that you selected for import contains a cumulative time-track. Please specify a **Start Date** and **End Date** (or End Period) for this time-track.

Start Date 2016/05/02 00:00:00 YYYY/MM/DD hh:mm:ss

End Date 2074/03/03 04:30:00 YYYY/MM/DD hh:mm:ss

End Period 1.0 month

OK Cancel

Forecast consolidation


A consolidation is a summation of forecasts from constituent wells (historical data is aggregated). This analysis type can only be created at the group level, and is used to sum up forecasts within the group. Therefore, when creating a forecast consolidation for a set of wells, it must be created from a hierarchical group, or from a custom group (excluding reserve classification consolidations).

If you want to consolidate classified decline analyses, *and have the unclassified decline analyses produced fluid included*, you need to change a default setting in the Options dialog box. For more information, see classified consolidations.

Note: This forecast works with your Harmony Forecast™ license.

Note that classified consolidations have an additional field for the reference date.

When you add a forecast consolidation (see analyzing an entity), you can consolidate by reserve classification or forecast name.

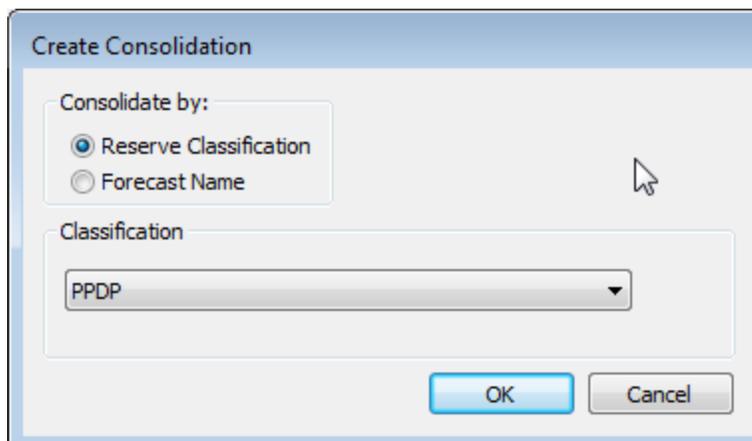

- **Reserve Classification** — when selected, the Classification drop-down list is enabled. Note that classified consolidations only include classified forecasts with active reference dates.
- **Forecast Name** — when selected, the Name drop-down list is enabled.
- **Classification** — select your reserve classification from the drop-down list. There are two types of classified consolidations: proved (P) and total (T). There are nine P consolidations: PNP, PPNP, PPPNP, PDP, PPDP, PPPDP, PUD, PPUD, and PPPUD. The T consolidations are aggregates of the Ps, so TP = PNP + PDP + PUD. TPP = PPNP + PPDP + PPUD. TPPP = PPPNP + PPPDP + PPPUD. For more information on classifications, see reserve classification.



- **Name** — select your analysis from the drop-down list. Note that named classifications are case sensitive. For example, Analysis 1 and ANALYSIS 1 cannot appear in the same consolidation.

Note: Consolidations can be done on ratio forecasts, water-oil ratio (WOR) / oil cut forecasts, and custom forecasts. If forecasts do not have the same forecast start date (FSD), the consolidation begins at the earliest FSD, and historical production is used for wells whose FSD starts later. Note that you cannot edit consolidation plots or results because they are directly governed by the forecasts of the constituent wells of the group.

Typecurve analysis

With the typecurve worksheet, flowing pressures must be provided at the same frequency as rates in the Production editor (not required for a Fetkovich analysis), and reservoir / fluid parameters must be entered in the Properties editor. If this data is not provided, the typecurve worksheet remains accessible, but the data is not displayed on the plot.

Note: This analysis works with your Harmony Reservoir™ license.

When creating a typecurve worksheet, select your fluid type, model, and then method (for example, Gas, Fracture, Blasingame).

If you analyze a group of wells, you can change which well is displayed by selecting your well from the **Primary Well** drop-down list. Note that there is no interpretation for these well completion parameters: skin and fracture half length.

Models

Harmony Enterprise supports the following models:

- **Vertical** — a cylindrical reservoir with a vertical well in the center.
 - **Radial** — a cylindrical reservoir with a vertical well in the center.
 - **Water Drive** — a cylindrical reservoir with a concentrically cylindrical aquifer. This model is based on a radial composite model, with the outer region representing the aquifer, characterized by several different levels of aquifer mobility, relative to the reservoir. The mobility ratios range from zero (no aquifer) to 10 (effectively constant-pressure boundaries). The aquifer model assumes a water zone of infinite extent.
- **Vertical with Fracture** — a cylindrical or rectangular (Fetkovich) reservoir with an infinite conductivity fracture in the center.
 - **Finite Conductivity Fracture** — a cylindrical reservoir with a finite conductivity fracture in the center.
- **Horizontal** — a square reservoir with a horizontal well in the center. There are actually nine different horizontal well models. Each model represents a different penetration ratio " $L_e / 2x_e$ " (ratio of effective wellbore length to reservoir length) and dimensionless wellbore radius " r_{wD} " (ratio of effective wellbore radius to effective wellbore length).
- **Hz Multifrac** — a horizontal reservoir with multiple vertical fractures.

Compound Linear — an infinite reservoir with a horizontal well and multiple hydraulic fractures (you must specify n_f and L_e).

Methods

Harmony Enterprise supports the following methods:

- [Agarwal-Gardner](#)
- [Blasingame](#)
- [Compound Linear](#)
- [Fetkovich](#)
- [NPI](#)
- [Wattenbarger](#)

Sub-tabs

There are three sub-tabs: plot, forecast, and tables.

Plot

The Plot sub-tab displays sets of typecurves that can be viewed together or separately depending on which checkboxes you click in the Plot Options section.

1. Normalized Rate
2. Integral
3. Raw Data Derivative
4. Derivative
5. Beta-Derivative (in the Fracture model)

The objective of the typecurve analysis is to move data over top of the family of typecurves (click the [Reposition icon](#)) until the data points match one of the typecurves as closely as possible. After you know which typecurve matches your data best, you can select the appropriate parameter from the **Parameter Value** drop-down list.

We recommend beginning the match with normalized rate data and typecurves. To add further confidence in the match, use the derivative, integral and derivative, or cumulative production (Fetkovich) options to provide a more unique analysis.

Note: When one of the typecurve sets is disabled, both the data points and associated typecurves are removed from the plot.

Toolbar

This toolbar has the following unique icons:

-  **Tools to Select Data Points for Filtering** — opens an additional toolbar with [point-selection options](#).
Tip: Selection of filtered-out (disabled) points is shared between all typecurve, unconventional reservoir, and FMB analyses for the same fluid type. In addition, these selections are saved when you export to a local database, or import from a local database.
-  **Reposition Data on Plot** — drag data across the screen.
-  **Reset Plot Attributes** — resets your plot attributes to default settings.
-  **Fully Automatic** — removes the outliers in your data by applying a median filter.
-  **Enable / Disable Square Log-Log Plot** — when enabled, the current plot is made proportional for comparison purposes. Clicking the icon again disables this feature.
-  **Single Annotation** — adds a single annotation to a specific point on your typecurve.
-  **Linked Annotations** — synchronizes your annotation across your typecurve, FMB, unconventional reservoir, and data filter plots. For example, if you move your annotation on one plot using the keyboard arrow keys, the arrow is synchronized on the other plots.
-  **Data Filter** — opens the Data Filter dialog box where you can select points to hide from typecurve matching.
-  **Options** — opens the Typecurve Options dialog box where you can set your derivative options, typecurve settings, and rate options.

For information on common plot icons, see [plot toolbars](#).

Forecast

The Forecast sub-tab displays your forecast: results, options, and constraints. You can send your plot to a comparison plot, by right-clicking it and selecting **Send Plot to Comparison Plot**. For

information on other options, see [plot options](#).

The forecast toolbar has the same common icons described in [plot toolbars](#).

Tables

The Tables sub-tab displays your forecast data in a tabular format.

Agarwal-Gardner typecurve method

The Agarwal-Gardner method (SPE 057916, 1998) is a practical tool that can estimate the gas (or oil) in-place, as well as reservoir permeability, skin effect, and fracture half-length (for hydraulically fractured wells). The accuracy of this method has been verified through numerical simulations. These modern decline typecurves represent advancement over Blasingame typecurves because a clearer distinction can be made between transient and boundary-dominated flow periods. This method also features curves containing derivative functions, similar to those used in the pressure transient literature, to aid in the matching process. The raw data derivative can also be used to assist in flow regime interpretation.

Note: For information on the Agarwal-Gardner typecurve theory and equations, see [Agarwal-Gardner typecurve theory](#).

The Agarwal-Gardner typecurve method uses the following models:

- **Radial**
- **Fracture** (cylindrical)
- **Water Drive**

Boundary-dominated match

To obtain information about reserves and drainage areas, we recommend that you focus on the boundary-dominated (depletion) stems of the typecurves. These are located on the right-side of the plot, where each set of typecurves converges to a single line. The Agarwal-Gardner typecurve method does not require hyperbolic exponent values. Instead, the data is matched on the single depletion stem. As the data is moved about the plot, the OGIP / OOIP is continuously updated on the Analysis tab.

For gas reservoirs whose fluid properties are strongly a function of pressure, the data points appear to "stretch" and "contract" as they are moved around the screen. This is because of the pseudo-time effect. Harmony Enterprise recalculates gas properties at average reservoir pressures based on the calculated OGIP from the typecurve match. As the match is modified, OGIP, average reservoir pressure, and material balance pseudo-time are automatically recalculated, and the data points are repositioned accordingly.

Transient match

To obtain information about permeability and skin, we recommend that you focus on the transient stems of the typecurves. On the Agarwal-Gardner typecurve plot, these appear on the left-side of the

plot as a “fan” of different r_{eD} values for the radial and water-drive models, r_e / x_f values for the fracture model. Select the typecurve that best matches the data; this provides an associated r_{eD} (or r_e / x_f) value.

From the selection, Harmony Enterprise calculates:

- skin for a radial model.
- fracture half-length for a fracture model.
- mobility ratio and skin for a water-drive (transient) model.

Blasingame typecurve method

Blasingame represents the first of the modern typecurve methods (SPE 028688, 1994). It features pressure normalized rates, and introduces the concept of material balance time (that is, boundary-dominated superposition time) to generate fully analytical constant rate typecurves featuring a single depletion stem, regardless of the reservoir structure (shape and size) or drive mechanism. Blasingame analysis results include skin factor, formation permeability, in-place fluid volumes, and reservoir drainage area. The flow-rate integral and flow-rate integral derivative functions allow for more accurate decline typecurve matches than would be possible using flow-rate data alone. These integral functions also eliminate problems associated with the analysis of field production data with erratic production rate and sandface pressure behavior. The Blasingame method is particularly useful in the modeling of suspected elliptical drainage patterns and open-hole horizontal wells, which have transitioned into boundary-dominated flow.

Note: For information on the Blasingame typecurve theory and equations, see [Blasingame typecurve theory](#).

The Blasingame typecurve method uses the following models:

- **Radial**
- **Fracture** (cylindrical)
- **Water Drive**
- **Horizontal**
- **Finite Conductivity Fracture** (cylindrical)

Boundary-dominated match

To obtain information about reserves and drainage area, we recommend that you focus on the boundary-dominated (depletion) stems of the typecurves. These are located on the right-side of the plot, where each set of typecurves converges to a single line. The Blasingame typecurve analysis does not require hyperbolic exponent values. Instead, the data is matched on the single depletion stem. As the data is moved about the plot, the OGIP / OOIP is continuously updated on the Analysis tab.

For gas reservoirs whose fluid properties are strongly a function of pressure, the data points appear to "stretch" and "contract", as they are moved around the screen. This is because of the pseudo-time effect. Harmony Enterprise recalculates gas properties at average reservoir pressures based on the calculated OGIP from the typecurve match. As the match is modified, OGIP, average reservoir pres-

sure, and material balance pseudo-time are automatically recalculated, and the data points are repositioned accordingly.

Transient match

To obtain information about permeability and skin, you should focus on the transient stems of the type-curves. On the Blasingame typecurve plot, these appear on the left-side of the plot as a “fan” of different r_{eD} values for the radial and water-drive models, r_e / x_f values for the fracture and finite conductivity fracture models, and L_D for the horizontal model. You can select the best matching type-curve, which provides an associated r_{eD} (or r_e / x_f , L_D) value.

From the selection, Harmony Enterprise calculates:


- permeability and skin for the radial model.
- permeability and fracture half-length for the fracture model.
- mobility ratio, permeability, aquifer permeability, and skin for the water-drive (transient) model.
- vertical and horizontal permeability, and skin for the horizontal model.
- permeability, fracture half-length, and fracture-equivalent skin for the finite conductivity fracture model.

Compound linear typecurve method

Compound linear typecurves are useful for analyzing horizontal multifrac wells producing from tight gas or shale wells.

Note: For more information on Compound Linear typecurve theory and equations, see [compound linear typecurve theory](#).


This method uses the horizontal multifrac model.

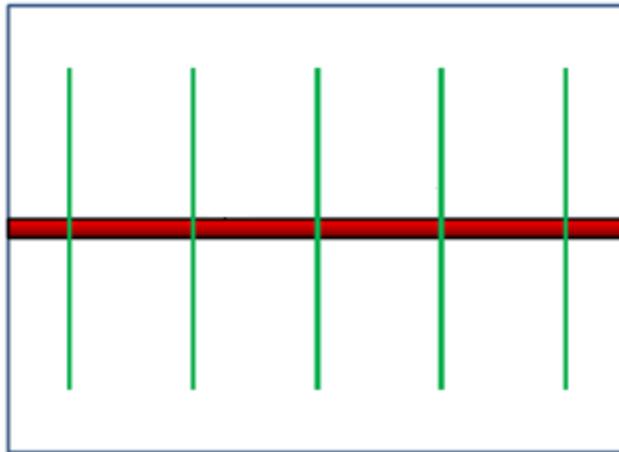

There are two sets of compound linear typecurves:

1. Pressure-time — uses normalized pressures: the constant rate solution
2. Rate-time — uses normalized rates: the reciprocal of the constant rate solution

Rate-time and pressure-time are reciprocals of one another, and simply plot the data on the typecurves differently.

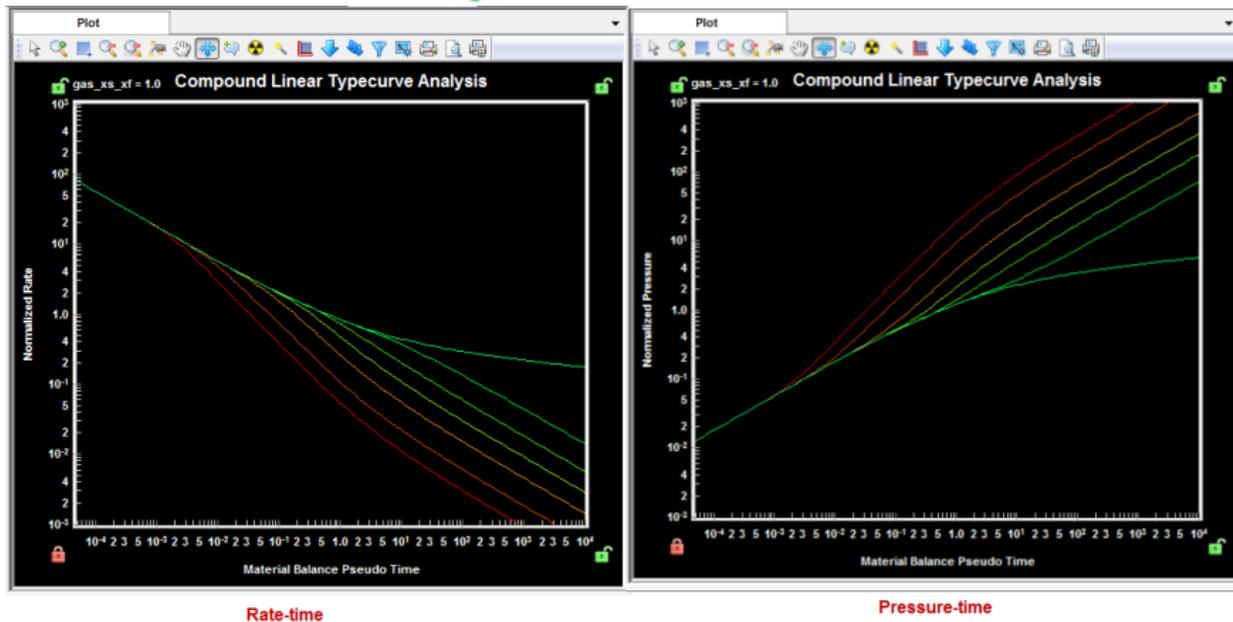


Boundary-dominated match

As the compound linear typecurves were developed using an infinitely large reservoir, there is no boundary-dominated flow stem. However, entering a value for either Y_e or Area (A), will produce a dashed boundary-dominated flow line that intersects the selected typecurve.


Note: A typecurve must be selected before the boundary-dominated line is plotted.

If boundaries have been reached, the production data deviates from the compound linear typecurve on to the boundary-dominated line.

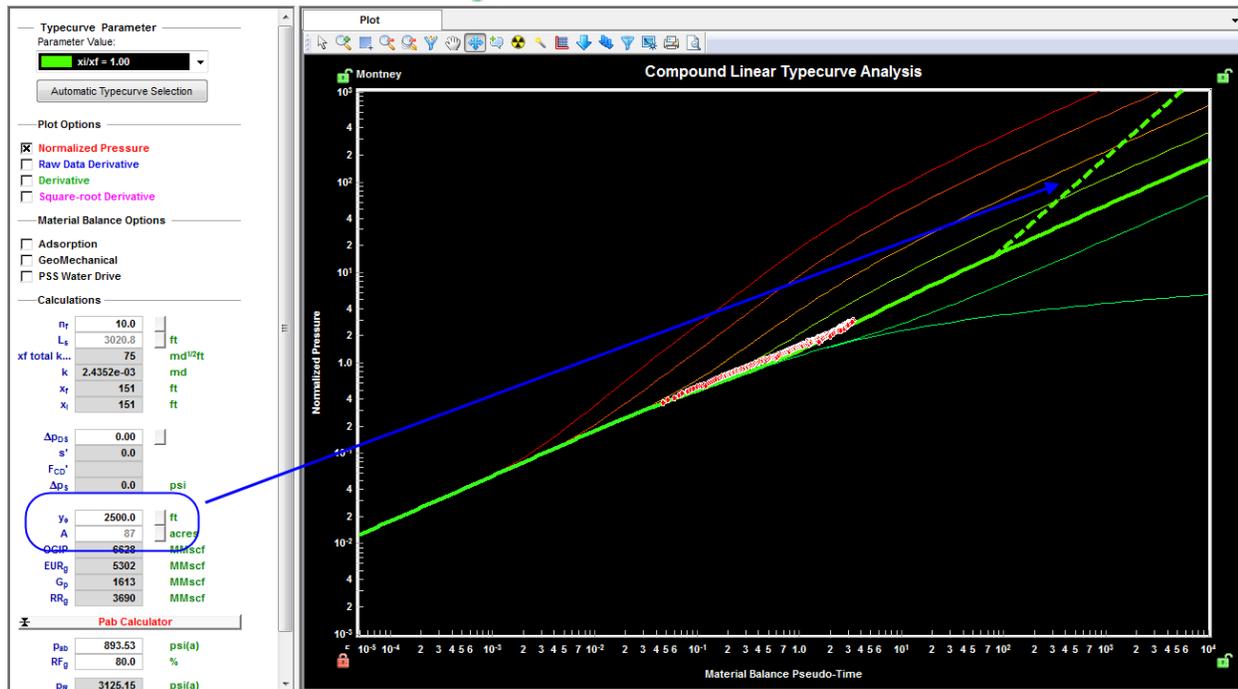


Transient match

Compound linear typecurves were developed for a horizontal, multfrac well in an infinite reservoir. The first half slope indicates linear flow into the fractures, while the second half slope indicates linear flow into the fractured region. The two half slopes are connected by a transition period. Most production data is expected to fall in the transition zone.

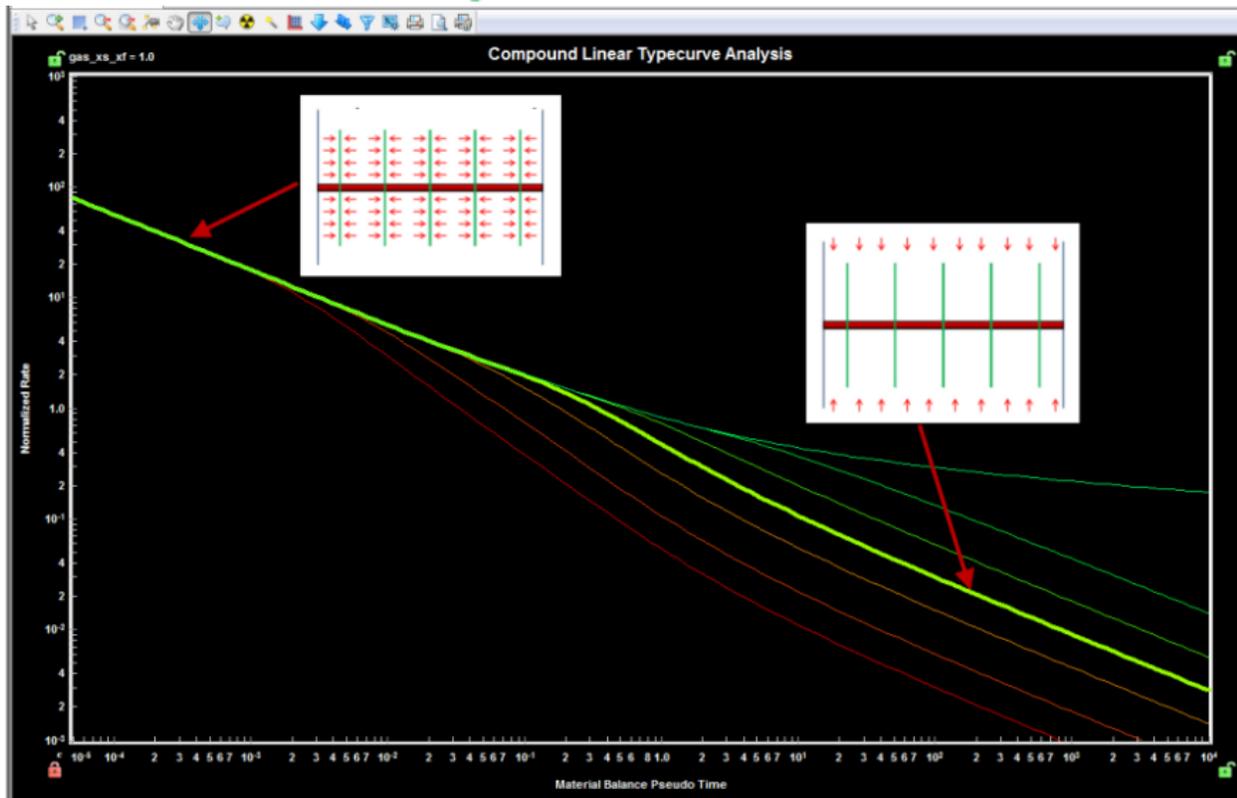

Selecting the "Square Root Derivative" plot displays the linear flow periods as flat lines, which may be helpful for matching data.

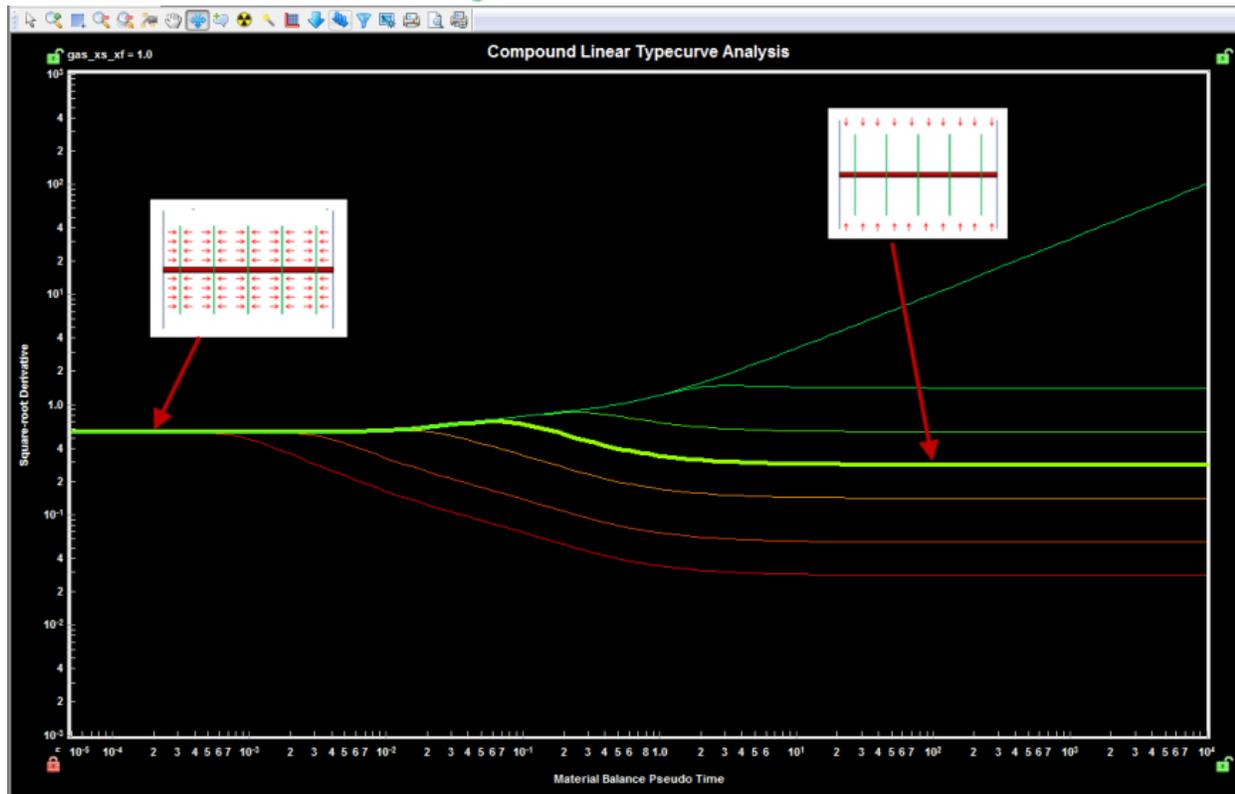

Matching data to a typecurve gives the x_i / x_f ratio. Entering a value for number of fractures (n_f) calculates the following values:

- L_s
- $x_f \sqrt{k_{SRV}}$
- X_f
- X_i

Note: Entering a value for L_s calculates n_f .


Skin

Generally, skin effects impact the first linear flow period, causing the data to deviate from the ideal typecurve.


To correct for skin effects on the Normalized Pressure or Rate curves:

1. Match the later part of the data to a typecurve.
2. Select the typecurve that matches the data most closely.


3. Enter the number of fractures (n_f) or Ls.

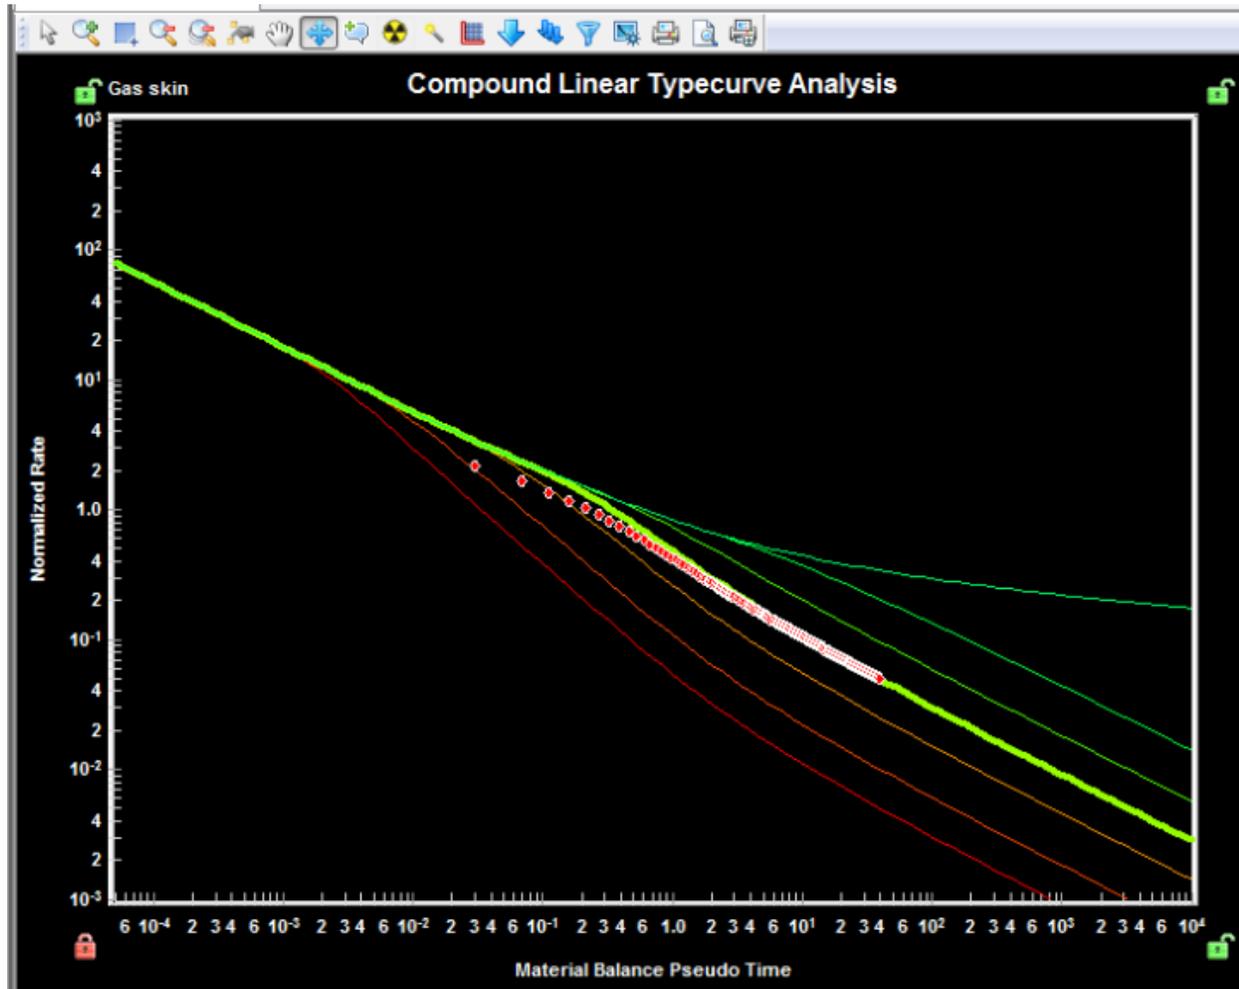

4. Right-click the plot and hold your mouse button. This highlights the data point closest to the top left corner for Rate-Time (bottom left for Pressure-Time), and the cursor changes to a triangle.

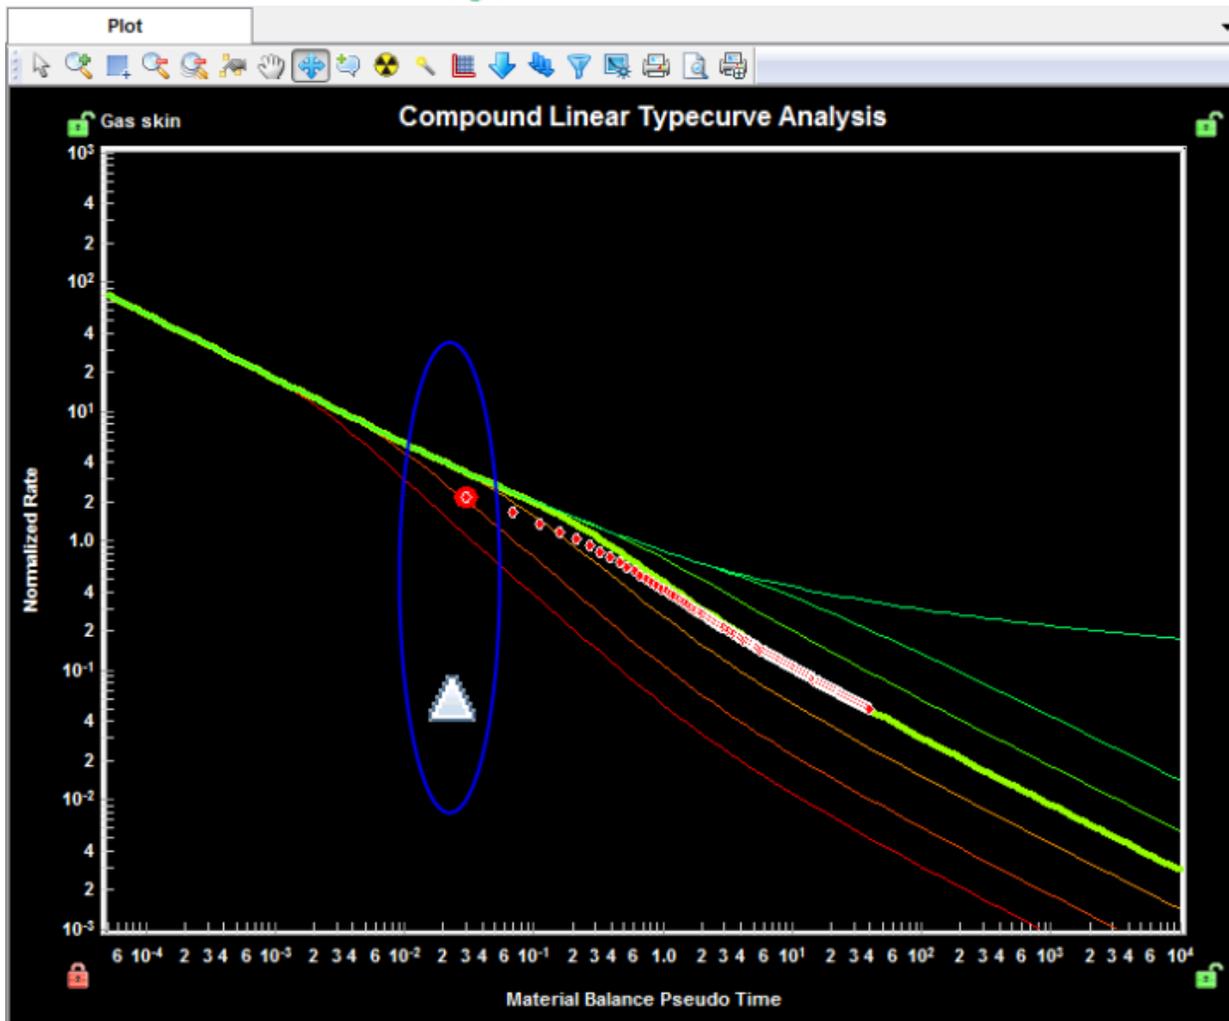

5. While continuing to hold the right-mouse button, move the cursor up or down until the early portion is matched on the typecurve.

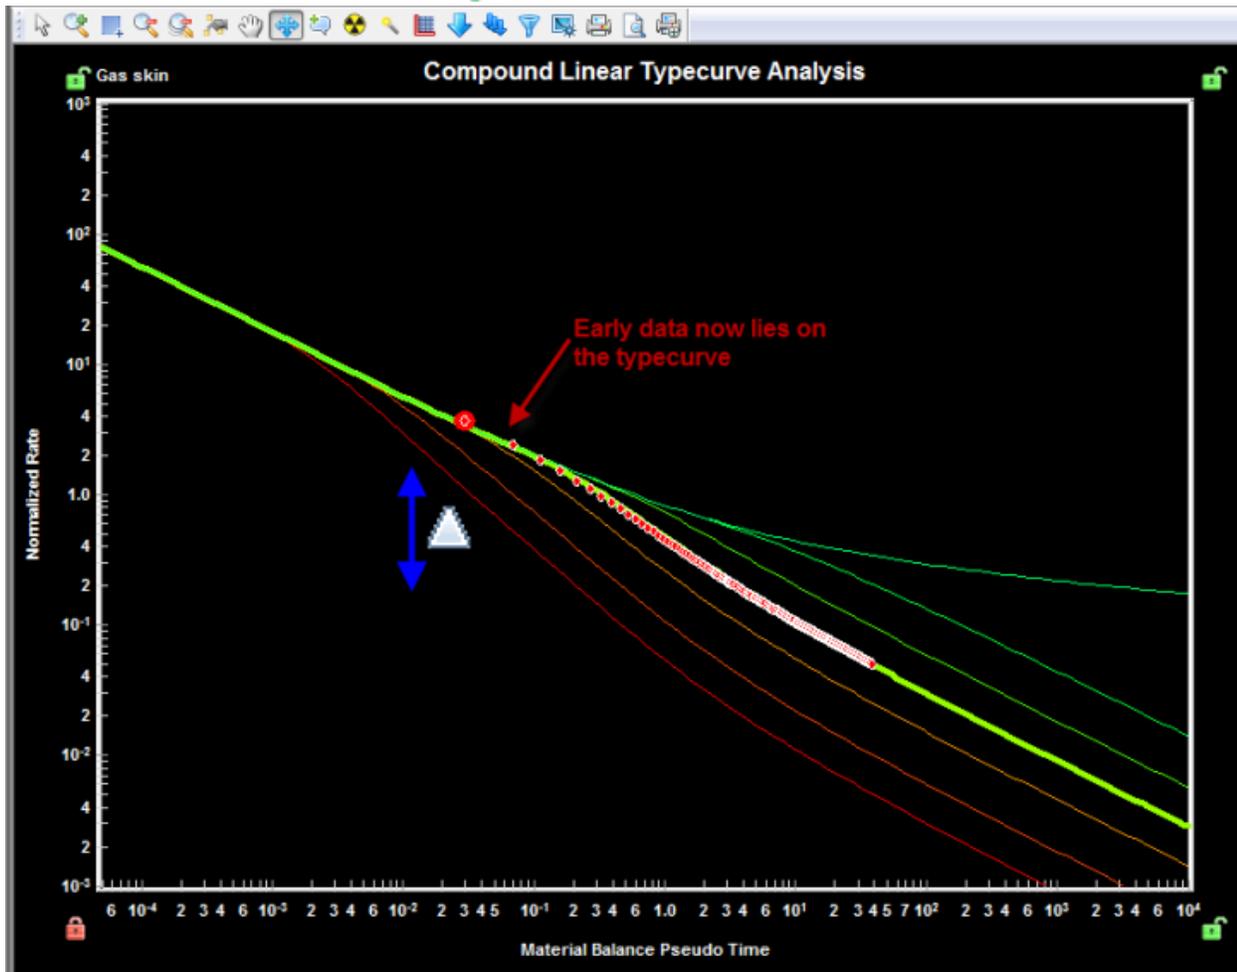

Moving the data in this manner populates the Δp_{DS} cell. This value is then used to convert the dimensionless pressure drop into an equivalent apparent skin, apparent fracture conductivity, and dimensional pressure drop.

For more details on the calculations, see [compound linear typecurve theory](#).

Fetkovich typecurve method

The Fetkovich typecurve method (SPE 004629, 1980) was the first analysis method to use analytical typecurve matching for production data. It is a semi-analytical approach in that typecurves are generated from analytical solutions of transient (infinite) radial systems at constant flowing pressure, while the boundary-dominated flow period is defined using hyperbolic decline typecurves, originally developed by Arps. In addition to reserves, calculated from the depletion stem (b-value) match, this analysis provides diagnostic power through the determination of reservoir permeability and wellbore skin factor. Rate normalization (SPE 012179, 1984) has been included to account for changing operating conditions (that is, changes in flowing pressures) to more reliably determine permeability and skin. With reinitialization, you can analyze the transient production data signature of post-buildup production to diagnose permeability and skin. A clear advantage of this method over modern typecurve methods is that it does *not* plot data using superposition time functions, which may bias the interpretation. It remains a popular technique for the analysis of conventional vertical oil and gas wells. Fetkovich plots are even used to describe the behavior of unconventional well production data (for example, Bakken oil wells). The limitation of this technique is that the transient typecurves are restricted to radial flow systems, and the method does not directly calculate original-hydrocarbons-in-place (as is the case in modern methods); it is estimated through simple material balance.

Note: For information on the Fetkovich typecurve theory and equations, see [Fetkovich typecurve theory](#).

The Fetkovich typecurve method uses the following models:

- **Radial**
- **Fracture** (rectangular)

Boundary-dominated match


To obtain information about reserves and drainage areas, we recommend that you focus on the boundary-dominated (depletion) stems of the typecurves. These are located to the right of where the Rate vs. Time and the Cumulative Production vs. Time typecurves intersect. Each of the depletion stems represents a different b value, identical to the b values used in the hyperbolic Arps analysis. After a b value has been selected, Harmony calculates recoverable reserves and expected ultimate recovery. If a sandface flowing pressure is specified on the Analysis tab, Harmony also calculates drainage area and original gas-in-place.

Transient match

To obtain information about permeability and skin, we recommend that you focus on the transient stems of the typecurves. These are located to the left of where the Rate vs. Time and the Cumulative Production vs. Time typecurves intersect. Each of the transient stems represents a different r_{eD} value. Once a r_{eD} value has been selected and a sandface flowing pressure is specified, Harmony calculates permeability and skin.

Time reinitialization


The fundamental assumption in a Fetkovich transient analysis is a constant sandface flowing pressure. Although an ideal case, this assumption is rarely representative of true operating conditions, particularly in early (transient) production. A well may be subject to shut-ins or operational changes during its life. When a well is shut in, or undergoes a change in operating conditions, the constant sandface flowing pressure assumption is no longer valid. When the well resumes production, a new additional transient effect is introduced to the wellbore. Additional transient effects in the wellbore are indicated by the green arrows in the screenshot below.

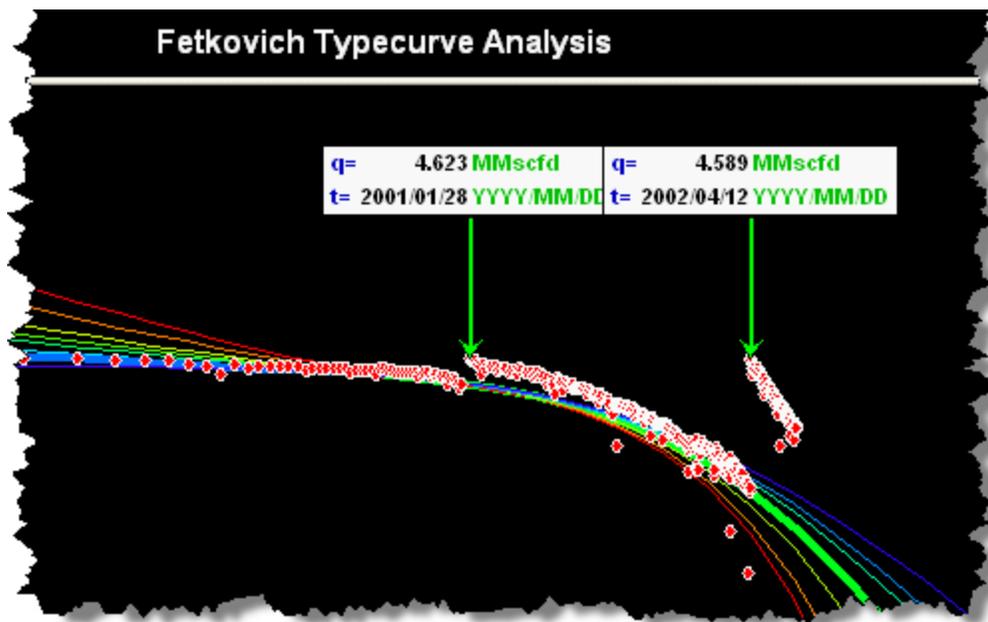

Fetkovich suggested a method called "time reinitialization" to analyze a dataset with multiple transient effects. This method resets the time at the start of each additional transient effect to zero, allowing you to specify additional transient effects on the typecurve plot. Once specified, the time associated with the first rate of each new transient flow period is reset to zero. As a result, the dataset is smoothed on the typecurve, allowing you to continue with the Fetkovich typecurve match.

To perform a Fetkovich time reinitialization:


1. Identify the beginning of each additional transient flow period either from Fetkovich or the Raw Data plot.
2. Click the **Add Reinitialization Arrow** icon () on the Fetkovich plot tool bar.
3. Click the data point representing the beginning of the additional transient flow period. The green reinitialization arrow is displayed at that point.

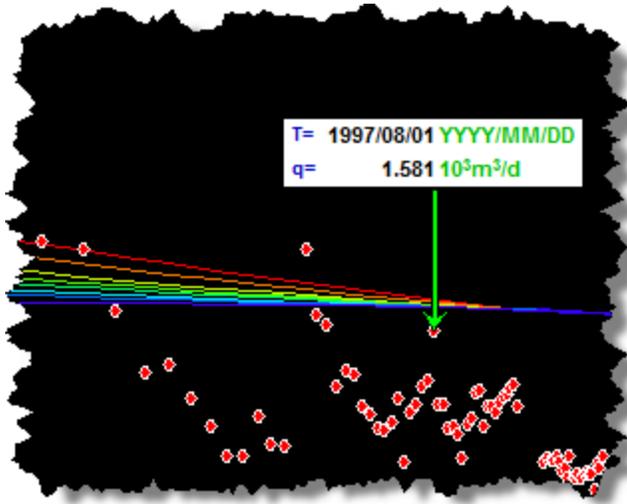

- Move the arrow left and right using the arrow keys on the keyboard.
- Remove the arrow by clicking the arrow's annotation box, and then pressing the **Delete** key on the keyboard.

Note: To create multiple additional transient periods, click the **Add Reinitialization Arrow** icon again, then repeat the process explained above. (The maximum number of additional transient periods permitted in Harmony is ten.)

4. Select the **Reinitialize** option under Material Balance Options in the parameters pane.

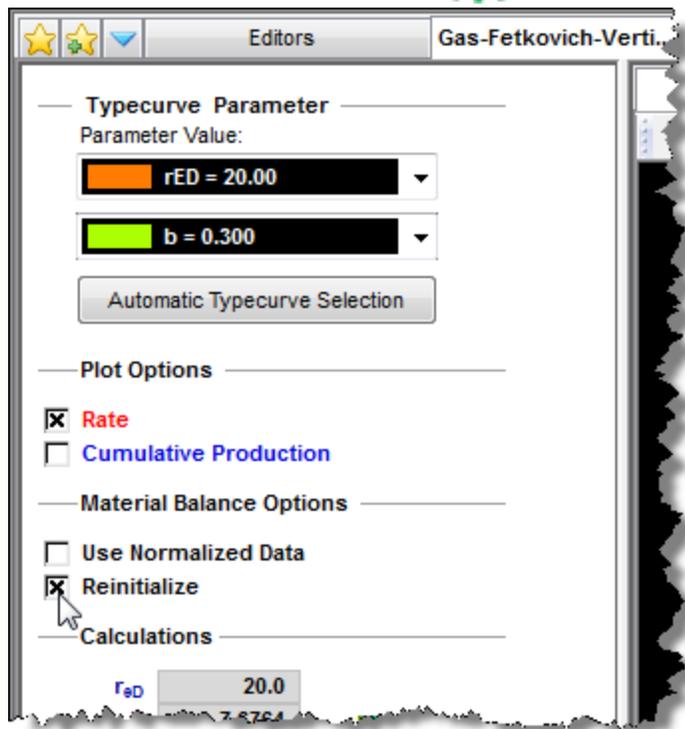

5. Continue with the Fetkovich typecurve matching method.

NPI typecurve method

Normalized pressure integral (NPI) typecurves are the inverse of Agarwal-Gardner typecurves. The NPI method is often preferred by those who come from a pressure transient analysis domain, and are accustomed to seeing log-log plots using normalized pressure, instead of normalized rates.

Note: For information on the NPI typecurve theory and equations, see [NPI typecurve theory](#).

The NPI typecurve method uses the following models:

- **Radial**
- **Fracture** (cylindrical)
- **Water Drive**

Boundary-dominated match

To obtain information about reserves and drainage areas, we recommend that you focus on the boundary-dominated (depletion) stems of typecurves. These are located on the right-side of the plot, where each set of typecurves converge to a single line. The NPI typecurve method does not require hyperbolic exponent values. Instead, the data is matched on the single depletion stem. As the data is moved about the plot, the OGIP / OOIP is continuously updated on the Analysis tab.

For gas reservoirs whose fluid properties are strongly a function of pressure, the data points appear to "stretch" and "contract" as they are moved around the screen. This is because of the pseudo-time effect. Harmony Enterprise recalculates gas properties at average reservoir pressures based on the calculated OGIP from the typecurve match. As the match is modified, OGIP, average reservoir pressure, and material balance pseudo-time are automatically recalculated, and the data points are repositioned accordingly.

Transient match

To obtain information about permeability and skin, you should focus on the transient stems of the typecurves. On the NPI typecurve plot, these open on the left-side of the plot as a "fan" of different r_{eD} values for the radial and water-drive models, r_e / x_f values for the fracture model. You can select the best matching typecurve, which provides an associated r_{eD} (or r_e / x_f) value.

From the selection, Harmony Enterprise calculates:



- permeability and skin for the radial model.
- permeability and fracture half-length for the fracture model.
- mobility ratio, permeability, aquifer permeability, and skin for the water-drive (transient) model.

Wattenbarger typecurve method

Wattenbarger typecurves are used for analyzing linear flow. They are particularly useful in the analysis of shale gas wells, which tend to exhibit long-term linear flow followed by a transition towards boundary-dominated flow.

Note: For information on the Wattenbarger typecurve theory and equations, see [Wattenbarger typecurve theory](#).

The Wattenbarger typecurve method uses the **Vertical with Fracture** (rectangular) model.

Boundary-dominated match

To obtain information about reserves and drainage areas, we recommend that you focus on the boundary-dominated (depletion) stems of typecurves. These are located on the right-side of the plot, where each set of typecurve converges to a single line. The Wattenbarger typecurve method does not require hyperbolic exponent values. Instead, the data is matched on the single depletion stem. As the data is moved about the plot, the [OGIP / OOIP](#) is continuously updated on the Analysis tab.

For gas reservoirs whose fluid properties are strongly a function of pressure, the data points appear to "stretch" and "contract", as they are moved around the screen. This is because of the pseudo-time effect. Harmony Enterprise recalculates gas properties at average reservoir pressures based on the calculated OGIP from the typecurve match. As the match is modified, OGIP, average reservoir pressure, and material balance pseudo-time are automatically recalculated, and the data points are repositioned accordingly.

Transient match

To obtain information about fracture half length, reservoir size, and well location in the reservoir, you should focus on the transient stems of typecurves. On the Wattenbarger typecurve plot, these appear on the left-side of the plot as different y_e / y_w values for the dimensionless channel model. You select the best fitting typecurve, which provides an associated y_e / y_w value.

From the selection and the permeability you define, Harmony Enterprise calculates:


- fracture half length
- reservoir width
- reservoir length
- well location

Data filter dialog box

This dialog box is commonly used when you click the filter data for an FMB, typecurve, or unconventional reservoir analysis.

This dialog box has the following important icons:

- **Tools to Select Data Points for Filtering**  — opens an additional toolbar with point-selection options.
 - **spray gun** — selects points when you left-click, and deselects points when you right-click. The mouse wheel can be used to change the spread-tool's size.
 - **select all data points** — selects all the data points on the plot.
 - **deselect all data points** — deselects all the data points on the plot.
 - **lasso** — select points by clicking-and-dragging a shape around your data points. Deselect points by right-clicking-and-dragging a shape around the data points you do not want.
- **Fully Automatic**  — select one of these options:
 - **Median Filter** — used to make data less noisy by deselecting data points that are far from the rest of the data (those points are likely to be outliers). Note that the dataset needs to have at least 20 points for this filter to be applicable.

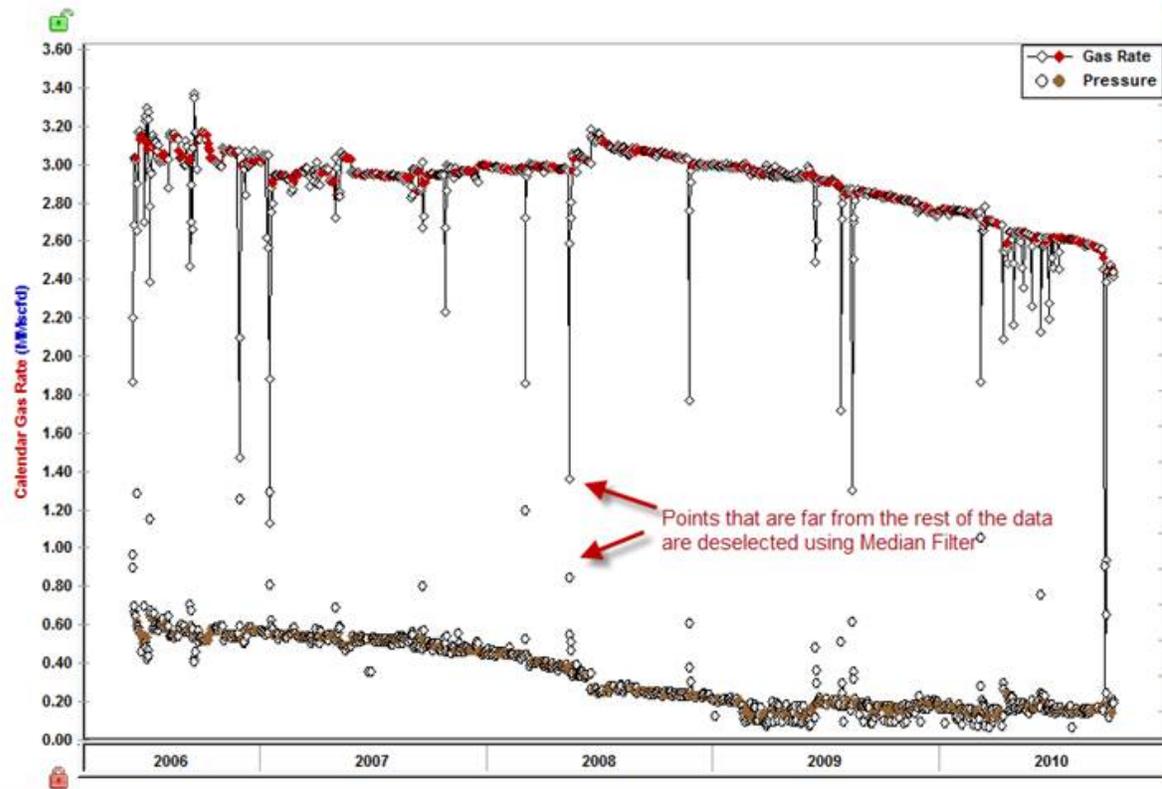

- **Liquid Load Filter** — in some cases, flowing pressures are not measured at sandface; instead they are measured at the wellhead, and Harmony Enterprise calculates sandface pressures (see [pressure loss calculations](#)) based on given wellhead pressures in the [wellbore editor](#). If the well is experiencing liquid loading, calculated sandface pressures may be inaccurate. Therefore, you may want to exclude corresponding data points from the analysis. With this filter, you can deselect data points where the well is experiencing liquid loading. For more information, see [liquid lift calculations](#).
- **Saturated Filter** — used to identify the portion of the data where flowing pressure is below the bubble point pressure (oil and gas flowing in the reservoir). For more information, see [saturated filter](#).

For information on common plot icons, see [plot toolbars](#).

FMB analysis

You can use the flowing material balance (FMB) analysis as a practical technique to estimate hydrocarbons-in-place from production rates and pressures. It uses precisely the same principles as a classical material balance analysis, but requires no shut-in data. It is designed for wells that have reached boundary-dominated flow, but can also be used to identify minimum original gas / oil in place (OGIP / OOIP) in transient cases. For additional information, see [FMB theory](#).

After an FMB analysis is created, data points are displayed on the plot. A portion of the data representing boundary-dominated flow should follow a straight line. Locate the analysis line that goes through the boundary-dominated (late) portion of the data. The original fluid in-place (OGIP, OOIP, or OWIP) is calculated based on the position of the analysis line.

Note: This analysis works with your Harmony Reservoir™ license.

If you analyze a group of wells, you can change which well is displayed by selecting your well from the **Primary Well** drop-down list. Note that there is no interpretation for these well completion parameters: skin and fracture half length.


Plot Options

Plot options define which datasets are displayed on the plot.

For Gas FMB:

- **AG FMB** — Agarwal-Gardner FMB plots normalized rate versus Normalized Cumulative Production. The underlying calculation is described in [Agarwal-Gardner normalized rate](#).
- **Static Pressure Data** — if [static pressures](#) are available, you can use this data as an independent confirmation of the OGIP:
 - in single-phase mode (when the **Multiphase (Pseudo-Pressure)** option is deselected) — Static p/Z^{**} is plotted against Cumulative Gas production. A straight line drawn through this data defines OGIP. Estimates of OGIP based on flowing pressures and static pressures should be consistent.
 - in multiphase mode (when the **Multiphase (Pseudo-Pressure)** option is selected) — static pressure is plotted against date. If the estimate of OGIP is correct, average pressures are calculated using FMB Model Options / Average Pressures, and static pressures should be consistent.

Click to show / hide an example screenshot

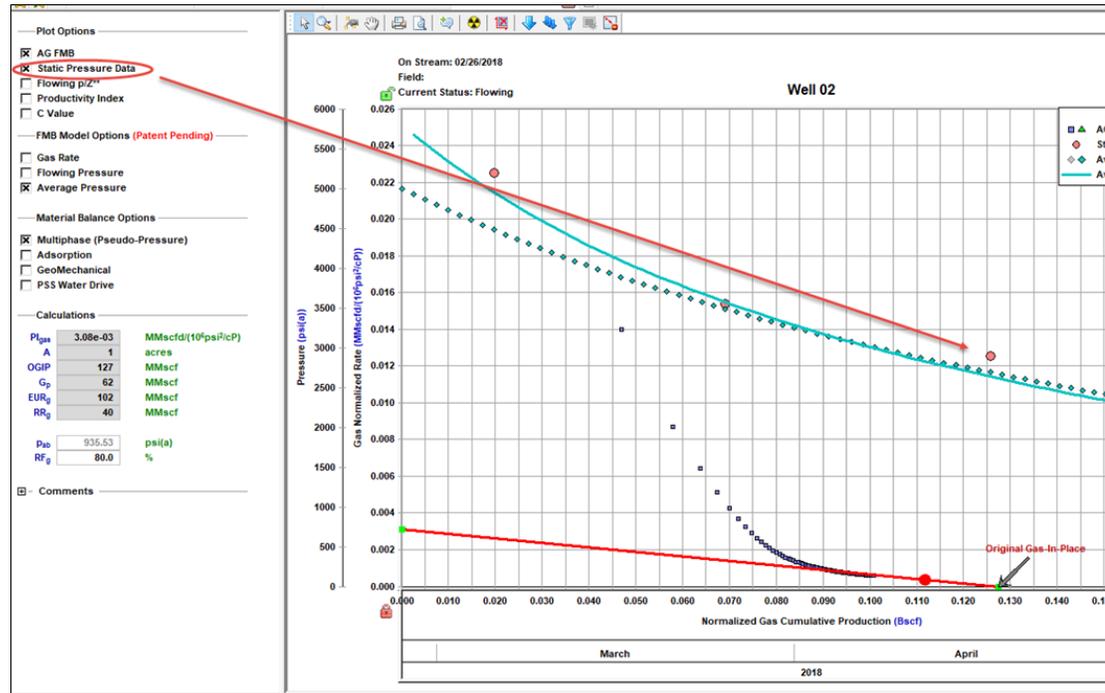

- **Flowing p/z^{**}** — plots flowing p/z^{**} versus Cumulative Gas Production. The underlying calculation is described in [variable rate flowing \$p/Z^{**}\$](#) .
 - **Productivity Index** — plots the productivity index versus Cumulative Gas Production. If the correct OGIP is calculated from the material balance analysis, the productivity index for the boundary-dominated portion of the data should plot as a flat line. A downward sloping line can be an indication that the calculated volume is too large, while an upward sloping line can indicate that the calculated volume is too small. Productivity indexes that fall off a flat line can also be an indication of operational issues with the well. The underlying calculation is described in [productivity index](#).
- Note:** AG FMB, Flowing p/Z^{**} , and the Productivity Index plots are different ways to display the same set of production data; therefore, the results of these three analyses should be in agreement. That is why the analysis lines for these three plots are linked to each other and always give the same OFIP.
- **Flowing Pressure** — flowing pressure points are not used in the analysis, but can be displayed as a reference.
 - **Gas Rate** — gas rates are not used in the analysis, but can be displayed as a reference.
 - **C Value** — coefficient values in the simplified absolute open flow (AOF) equation are not used in the analysis, but can be displayed as a reference.

For Oil FMB:

- **Oil FMB** — plots normalized rate versus Normalized Cumulative Production. The underlying calculation is described in [oil theory](#).
- **Static Pressure** — if [static pressures](#) are available, you can use this data as an independent confirmation of the OOIP:
 - in single-phase mode (when the **Multiphase (Pseudo-Pressure)** option is deselected) — static pressure is plotted against

$$\text{Adjusted Normalized Oil Cumulative Production} = \frac{E}{B}$$

A straight line drawn through this data defines OOIP. Estimates of OOIP based on flowing pressures and static pressures should be consistent.

- in multiphase mode (when the **Multiphase (Pseudo-Pressure)** option is selected) — static pressure is plotted against date. If the estimate of OOIP is correct, average pressures are calculated using FMB Model Options / Average Pressures, and static pressures should be consistent.
- **Gas-Oil ratio** — are not used in the analysis, but can be displayed as a reference.

FMB Model Options (Patent Pending)

FMB model options include the following:

- **Oil Rate** — uses the measured flowing pressure to calculate a synthetic oil rate, and compares the synthetic and measured oil rates. Modifies the productivity index and the original-oil-in-place, N, until an acceptable history-match of the oil rates is obtained.
- **Flowing Pressure** — uses the measured oil rate to calculate a flowing pressure, and compares the synthetic and measured flowing pressures. Modifies the productivity index and the original-oil-in-place, N, until an acceptable history-match of the flowing pressures is obtained.
- **Average Pressure** — uses the measured flowing pressure and the flowing oil rate to calculate a synthetic average reservoir pressure. Modifies the productivity index and the original-oil-in-place, N, until an acceptable history-match of the average pressure is obtained.

Material Balance Options

Material balance options include the following:

- **Multiphase (Pseudo-Pressure)** — accounts for the variation of oil properties with pressure. For more information, see [accounting for changing oil properties](#).

- **Adsorption (for Gas FMB)** — corrects the data to include adsorbed gas. For more information, see [accounting for adsorbed gas-in-place](#).
- **GeoMechanical (for Gas FMB and Oil FMB)** — accounts for the variation in rock properties (permeability and formation compressibility) with pressure. For more information, see [including pressure-dependent permeability and formation compressibility](#).
Note: For the Oil FMB analysis, this option is only available if the Changing Properties (Pseudo-Pressure) option is selected.
- **PSS Water Drive (for Gas FMB and Oil FMB)** — accounts for water drive (additional water drive analysis parameters are displayed). For more information, see [analyzing reservoirs with aquifer support](#).

Calculations

Harmony Enterprise calculates the original fluid in-place based on the position of the analysis line. This value is displayed in the Calculations section, along with some additional parameters.

Calculations		
PI_{gas}	0.530	MMscfd/(10 ⁶ psi ² /cP)
A	179	acres
OGIP _F	2306	MMscf
OGIP _{RS}	116	MMscf
OGIP	2422	MMscf
G _p	1153	MMscf
EUR _g	1864	MMscf
RR _g	712	MMscf
P_{ab}	109.10	psi(a)
RF _g	77.0	%

Plot toolbar

This toolbar has the following important icons:

-  **Single Annotation** — adds a single annotation to a specific point on your dataset.
-  **Linked Annotations** — synchronizes your annotation across all plots for FMB, URM, and typecurve analyses. For example, if you move your annotation on one plot using the keyboard arrow keys, the arrow is synchronized on the other plots.
-  **Data Filter** — opens the Data Filter dialog box where you can apply a data filter. For more information, see [filtering](#).

-  **Rate Type Option** — select either Calendar Rate or Operated Rate.
-  **Hide / Show Disabled Points** — toggle between hiding and showing data points that have been disabled.

For information on common plot icons, see [plot toolbars](#).

Filtering

If you believe some of the production data points are of poor quality, or are outliers, you can filter them out (disable these points). To do this, click the **Data Filter** icon () in the FMB plot toolbar. Then, click the **Tools to Select Data Points for Filtering** icon () in the [Data Filter dialog box](#) (opens when you click the Data Filter icon) to select and deselect the data points you want. Click to select points, and right-click to deselect points.

Filtered-out (disabled) points are displayed in gray in the FMB plot. (You can hide these points by clicking the **Hide / Show Disabled Points** icon ().)


Tip: Selection of filtered-out (disabled) points is shared between all FMB, unconventional reservoir, and typecurve analyses for the same fluid type. In addition, these selections are saved when you export to a local database, or import from a local database.

Best fitting


When you use the [spray gun icon](#) () to select data points, you are selecting data points for best fitting (with a normal, or 10% weighting). The analysis line is redrawn to best-fit through the points you selected. If you move the best-fit line (for example, by dragging and dropping), the best-fit selection resets. You can have different selections for best fitting different analysis, and your best-fit selection is saved when you export to a local database, or import from a local database. For more information, see [export data](#) and [import from an .hldb file](#).

Analyzing reservoirs with aquifer support

The flowing material balance (FMB) analysis provides the capability to analyze reservoirs with aquifer support. FMB handles water drive in a similar manner to static material balance. For additional information, see [water-drive reservoir](#). A well displaying water drive tends to display an upward departure from the linear trend later in production when the pressure support from the aquifer begins to have an influence.

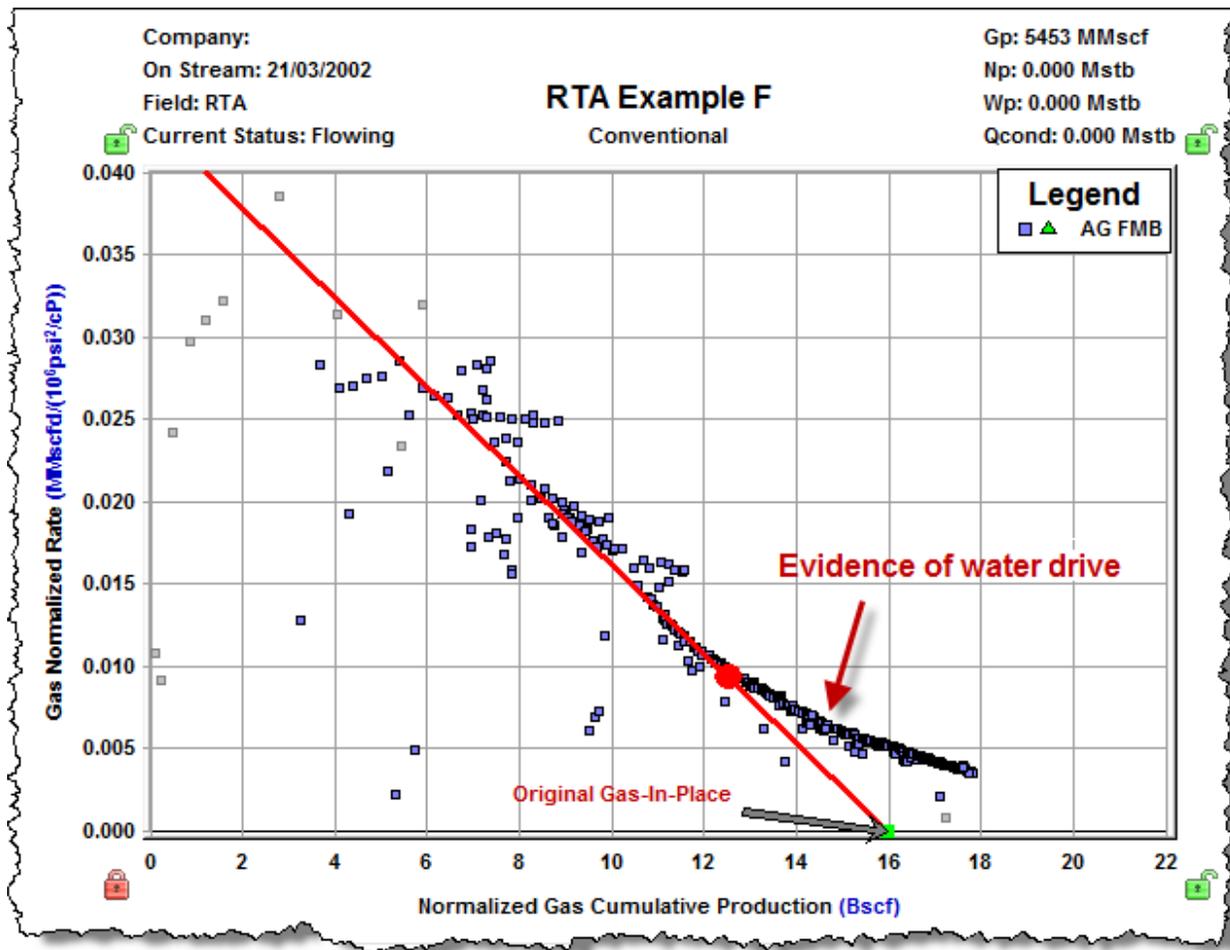

Position the analysis line through the straight portion of the early data. It is assumed that aquifer support is not felt until later in production; therefore, the trend of the early data is the true indication of original volume in place.

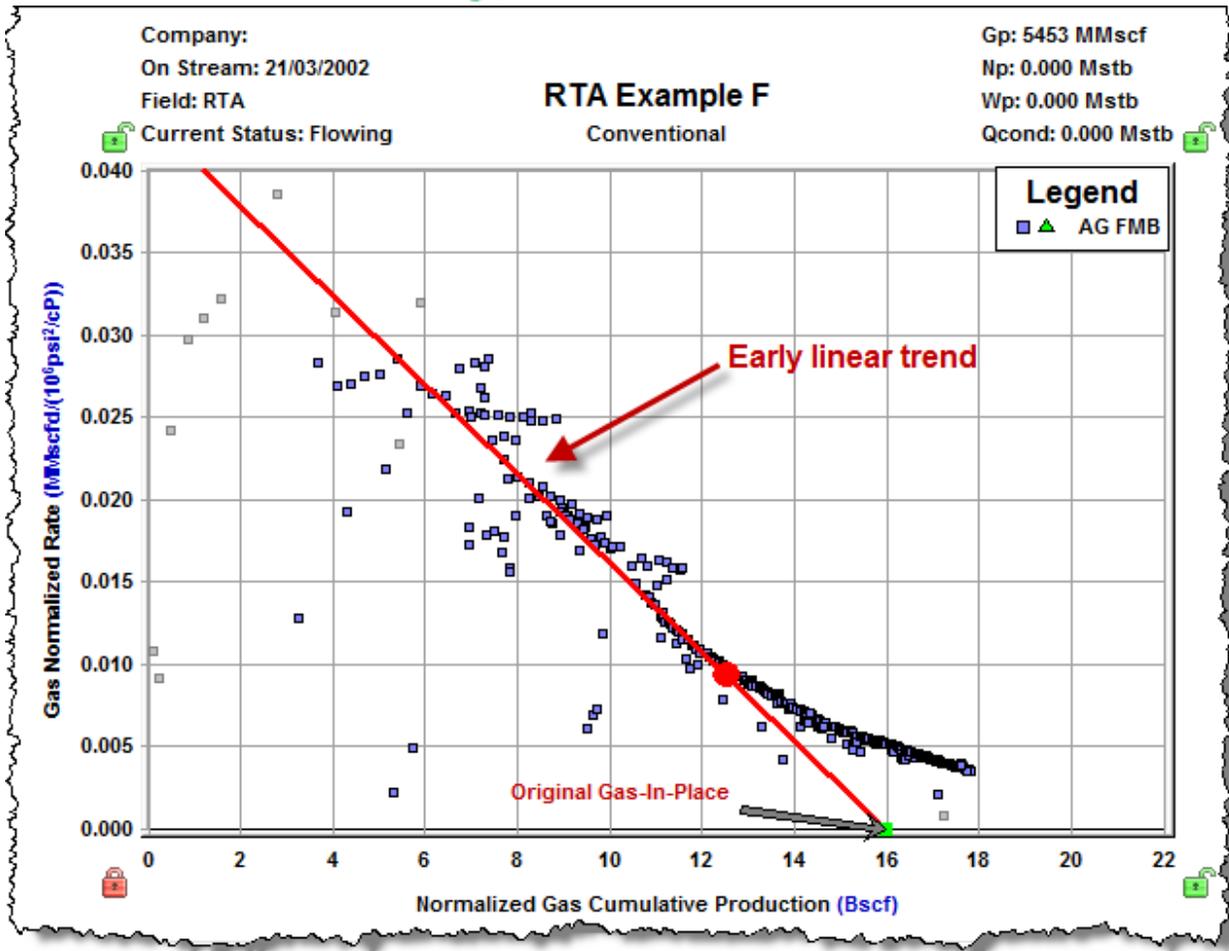

In the Material Balance Options section, click the **PSS Water Drive** checkbox, which displays the Water Drive Analysis parameters.



Material Balance Options

Adsorption
 GeoMechanical
 PSS Water Drive

Calculations

PI _{PSS}	0.043	MMscfd/(10 ⁶ psi ² /cP)
A	190	acres
OGIP	15969	MMscf
G _p	5453	MMscf
EUR _g	12775	MMscf
RR _g	7322	MMscf
P _{ab}		psi(a)
RF _g	80.0	%

Water Drive Analysis

OWIP	222.215	MMstb
PI _{Aq}	0.123	(bbl/d)/psi

Initial Water in Place


Aquifer productivity index

Adjust the Initial Water in Place and Aquifer productivity index either by entering values into the appropriate fields, or by using the sliderbar.

Note: The limits of the sliderbar can be adjusted by placing the gray slider box at the end of the bar. Then, use your scroll button on your mouse. Double-clicking the gray slider box positions the sliderbar in the middle of the scale.

Continue adjusting both parameters (that is, Initial Water in Place and Aquifer productivity index) until the production data becomes a straight line.

Important: The results of this analysis are not unique, because many different combinations of OWIP, OGIP, and the productivity index can result in a linear trend.

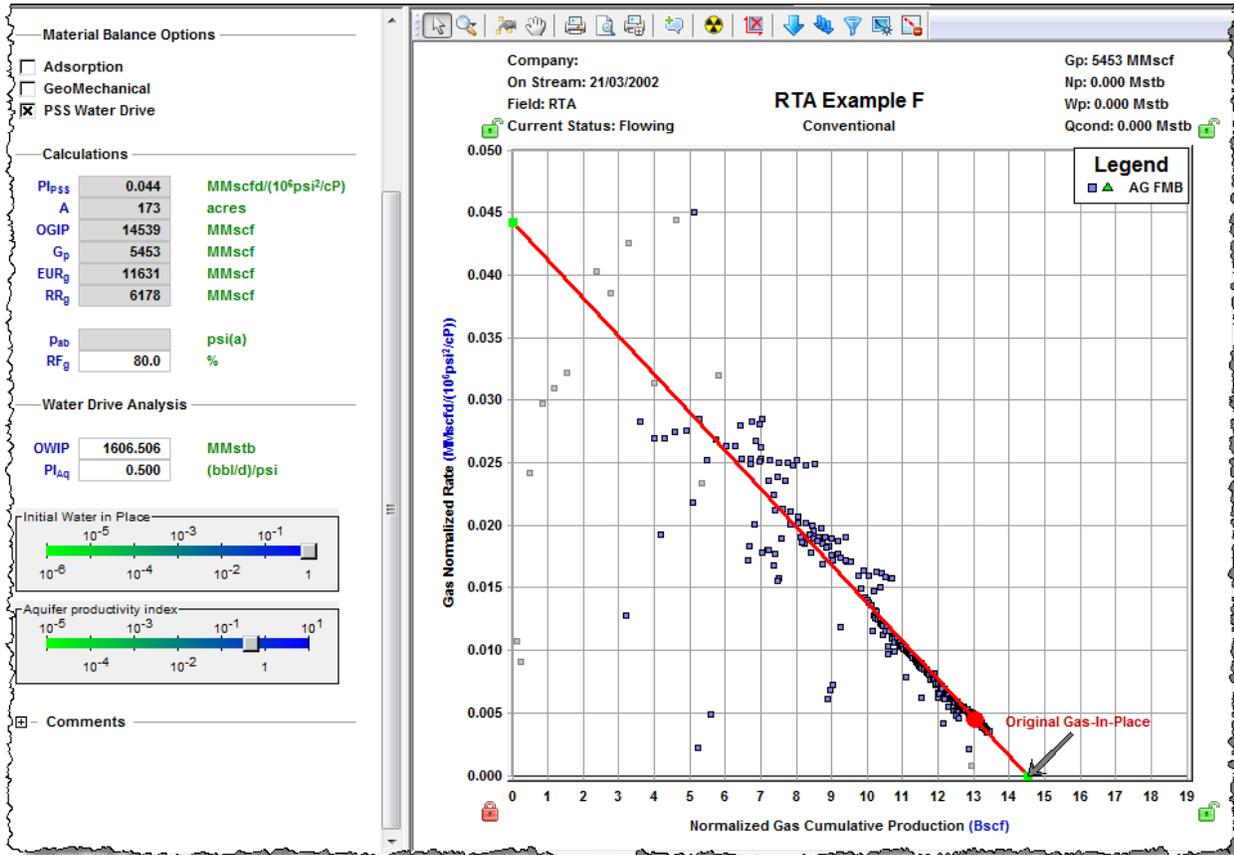

Including pressure-dependent permeability and formation compressibility

The flowing material balance (FMB) analysis provides the capability to include pressure-dependent permeability and rock compressibility in the analysis.

In the Plot Options section, click the **AG FMB** checkbox.

In the Material Balance Options section, click the **GeoMechanical** checkbox. This enables the geomechanical correction (see [geomechanical reservoir models](#)), which uses inputs from the [Properties editor](#) (under Formation / Rock Properties -> Geomechanical).


Note: For the Oil FMB analysis, this option is only available if the Changing Properties (Pseudo-Pressure) option is selected.

Accounting for adsorbed gas-in-place for shale gas plays


The flowing material balance (FMB) analysis provides the capability to account for adsorbed gas-in-place (GIP) for shale gas plays.

In the Material Balance Options section, select **Adsorption**. This corrects the data to include adsorbed gas, and shifts the data points up.

Note: When the Adsorption checkbox is selected, and after you have opened an FMB analysis, your Langmuir Volume (V_{LS}) and Pressure (P_{LS}) values are used. (You need to enter values for the Langmuir Volume (V_{LS}) and Pressure (P_{LS}) in the Properties editor (under **Formation / Rock, Adsorption**.)

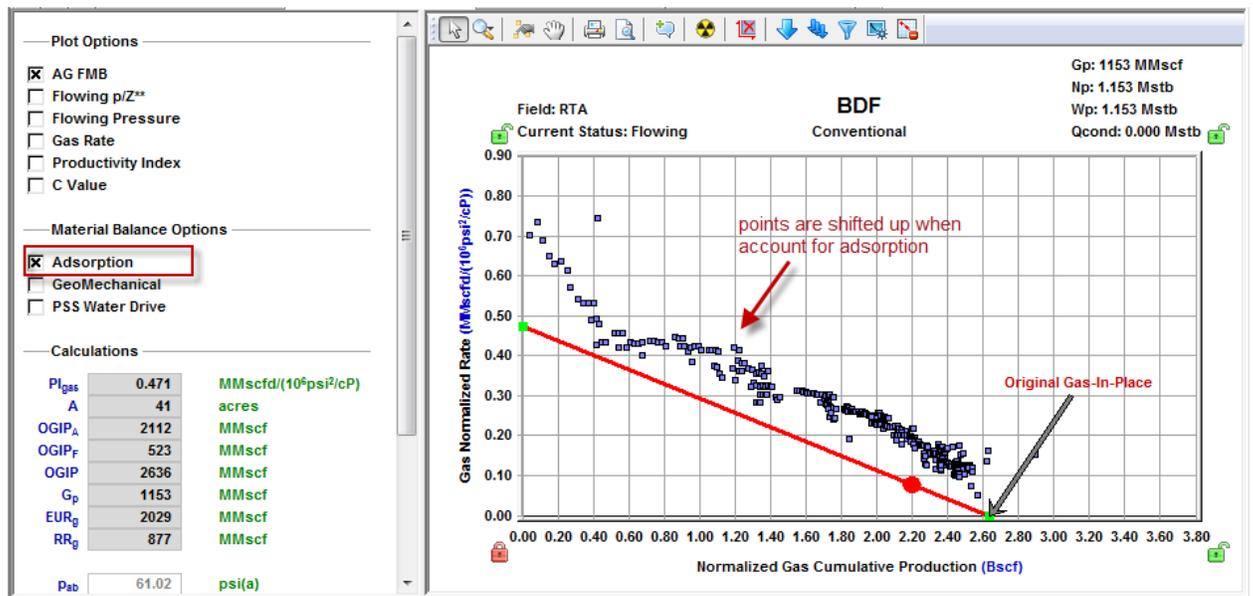

Reposition the analysis line through the data points. The calculated OGIP now includes an adsorbed volume ($OGIP_A$).

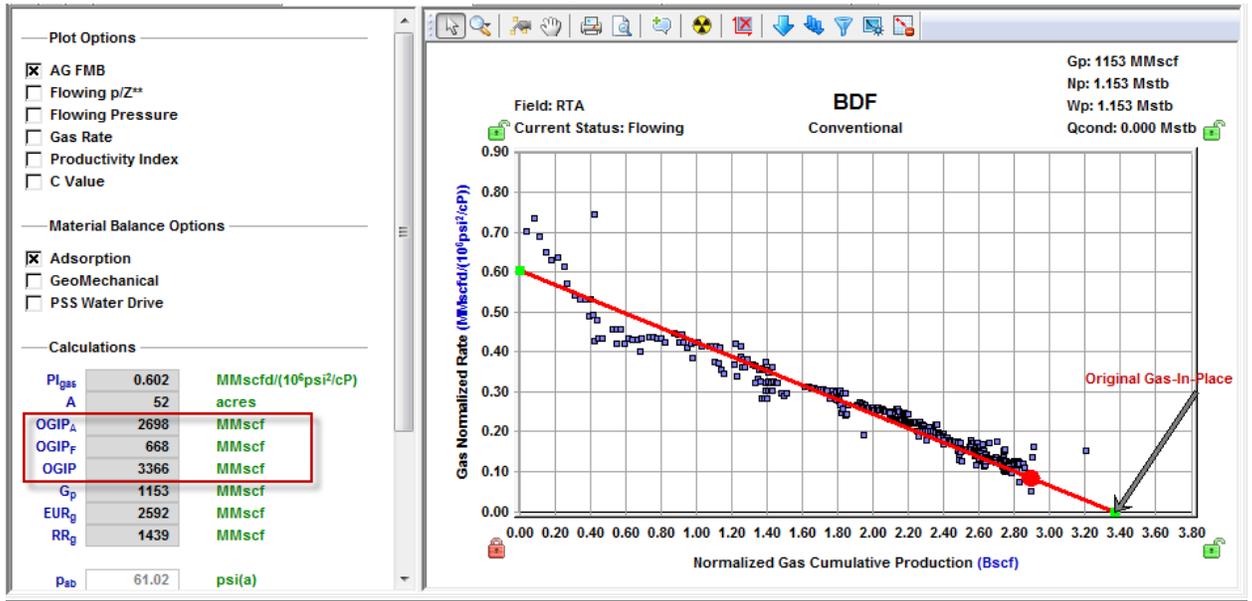


Accounting for changing oil properties

The classical flowing material balance (FMB) analysis is performed under the assumption that the variation of oil properties (compressibility, viscosity, formation volume factor) with pressure is negligible; therefore this variation is not taken into account.

To account for the variation of oil properties with pressure, select the **Multiphase (Pseudo-Pressure)** option. Calculations performed when this option is selected are based on using oil pseudo-pressure and are described in [accounting for variation in oil properties](#). Calculations use the oil properties that are set in the [Properties editor](#).

If you chose to account for the variation in oil properties, you can also account for variation in rock properties (permeability and formation compressibility) with pressure. To do this, select the **GeoMechanical** option. Note that for the Oil FMB analysis, this option is only available when the Multiphase (Pseudo-Pressure) option is selected. Calculations use the rock properties that are set in the Geo-mechanical section of the Properties editor.

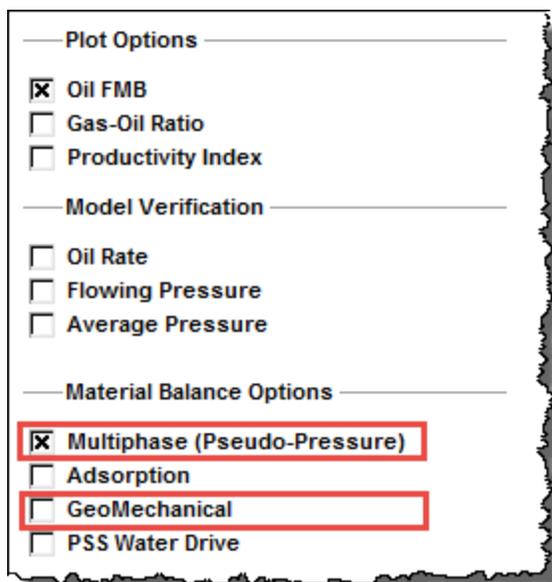

— Plot Options —

- Oil FMB
- Gas-Oil Ratio
- Productivity Index

— Model Verification —

- Oil Rate
- Flowing Pressure
- Average Pressure

— Material Balance Options —


- Multiphase (Pseudo-Pressure)
- Adsorption
- GeoMechanical
- PSS Water Drive

Data Filter dialog box

This dialog box is commonly used when you click the filter data for an FMB, typecurve, or unconventional reservoir analysis.

This dialog box has the following important icons:

- **Tools to Select Data Points for Filtering**  — opens an additional toolbar with point-selection options.
 - **spray gun** — selects points when you left-click, and deselects points when you right-click. The mouse wheel can be used to change the spread-tool's size.
 - **select all data points** — selects all the data points on the plot.
 - **deselect all data points** — deselects all the data points on the plot.
 - **lasso** — select points by clicking-and-dragging a shape around your data points. Deselect points by right-clicking-and-dragging a shape around the data points you do not want.
- **Fully Automatic**  — select one of these options:
 - **Median Filter** — used to make data less noisy by deselecting data points that are far from the rest of the data (those points are likely to be outliers). Note that the dataset needs to have at least 20 points for this filter to be applicable.

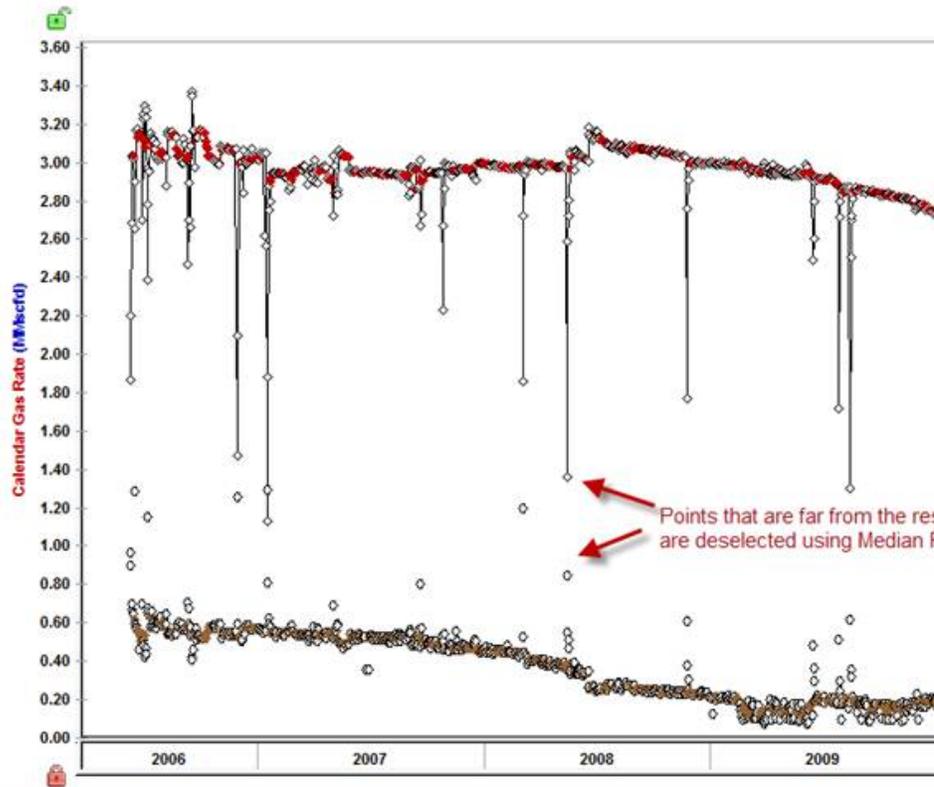

- **Liquid Load Filter** — in some cases, flowing pressures are not measured at sandface; instead they are measured at the wellhead, and Harmony Enterprise calculates sandface pressures (see [pressure loss calculations](#)) based on given wellhead pressures in the [wellbore editor](#). If the well is experiencing liquid loading, calculated sandface pressures may be inaccurate. Therefore, you may want to exclude corresponding data points from the analysis. With this filter, you can deselect data points where the well is experiencing liquid loading. For more information, see [liquid lift calculations](#).
- **Saturated Filter** — used to identify the portion of the data where flowing pressure is below the bubble point pressure (oil and gas flowing in the reservoir). For more information, see [saturated filter](#).

For information on common plot icons, see [plot toolbars](#).

Unconventional reservoir analysis

The unconventional reservoir model (URM) analysis is used to identify linear and/or boundary-dominated flow regimes within your data. Additionally, this analysis generates production forecasts for shale or tight oil / gas wells. This analysis requires sandface flowing pressures, production rates, and reservoir / fluid parameters. If the required pressures, rates, and properties are not filled in, the parameters pane of the analysis is disabled. For more information on the calculations, see [unconventional reservoir theory](#).

Note: This analysis works with your Harmony Reservoir™ license.

This analysis has the following solution options:

- **Constant Pressure** — the constant pressure solution for a basic linear flow model. An analysis line is fit to the data on a Reciprocal Rate vs Square Root Time plot. The slope and y-intercept of the analysis line are used to determine the linear flow parameters, along with apparent skin or apparent fracture conductivity, respectively.
- **Variable Pressure** — the constant rate solution for a basic linear flow model. An analysis line is fit to the data on a Normalized Pressure vs Square Root Time plot. This accounts for changing flowing pressures when interpreting the slope of the square-root time plot. The slope and y-intercept of the analysis line are used to determine the linear flow parameters, along with apparent skin or apparent fracture conductivity, respectively.
- **Superposition Time** — the superposition of the constant rate solution for a basic linear flow model applied over time to account for variations of rate over time. An analysis line is fit to the data on a Normalized Pressure vs Linear Superposition Time plot, or Material Balance Time plot, depending on the time option selected in the parameters pane. The slope and y-intercept of the analysis line are used to determine the linear flow parameters, along with apparent skin or apparent fracture conductivity, respectively.
- **Deterministic** — creates an analysis based on known parameters.
- **Most Likely** — creates an analysis based on a range of values, and produces "most likely" values that can be used to estimate model parameters.

Note: The production forecast for the variable pressure and superposition worksheets is estimated using constant sandface pressure (p_{wff}).

Tip: For a multiphase oil URM analysis, pseudo-pressure is used instead of pressure. This may impact your data-point selection, if you manually best fit your data points with Harmony

Enterprise 2017.3 or earlier, and selected the **Changing Properties (Pseudo-Pressure)** checkbox. It is now called the Multiphase (Pseudo-Pressure) checkbox.


Unconventional Reservoir pane

In the Unconventional Reservoir pane, enter the required parameters and select your options.

Parameters

Parameters include the inputs you specify, or the default Harmony Enterprise values and calculated values from the plot interpretations.

Additional gas options for adsorption and geomechanical models can be used by clicking their checkboxes. These model options require that the Langmuir isotherm and permeability and/or compressibility ratio correlations be entered in the [Properties editor](#).

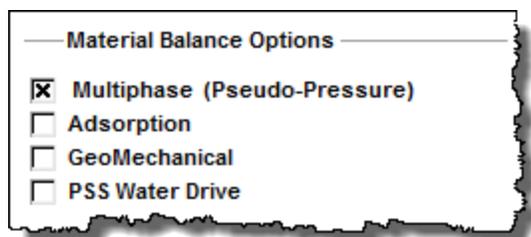

- **Multiphase (Pseudo-Pressure)** — accounts for the variation of oil properties with pressure. Calculations use the Oil properties that are set in the [Properties editor](#).
- **Adsorption** — includes the effect of adsorbed gas.
- **GeoMechanical** — accounts for the variation in rock properties (permeability and formation compressibility) with pressure. Calculations use the rock properties that are set in the Geomechanical section of the Properties editor. Note that for the Oil URM analysis, this option is only available when the Multiphase (Pseudo-Pressure) option is selected.
- **PSS Water Drive** — accounts for pseudo-steady state (PSS) water drive (additional water drive analysis parameters are displayed).

The flowing pressure inputs in the Forecast parameters section are used with the slope of the Square Root Time plot to determine $xf\sqrt{k}$. You can enter the drainage area, or area of SRV, but by default, these values come from the OOIP / OGIP on the flowing material balance (FMB) plot. Changes to the location of the end of linear flow line (t_{eif}) on the Square Root Time plot updates the OOIP / OGIP. The decline exponent, b , and the final gas rate are used to calculate the hyperbolic decline forecast. The start date is the end of production data for the well. The Δt is set based on the forecast duration to

reach the final rate, and corresponds to the end date. Either q_f or Δt can be entered, and the other value is calculated.

Forecast Parameters		
p_{wf}	Required	psi(a)
A_{SRV}	227	acres
b	0.000	
q_f	5.0	stb/d
Start Date	03/25/2011	MM/DD/YYYY
Δt		month
End Date		MM/DD/YYYY

The second half of the parameters pane displays calculated values from the interpretations:

- The x_f/\sqrt{k} is determined from the slope of the analysis line on the Square Root Time plot.
- The time to reach the end of linear flow (t_{eif}) is determined from the position of the t_{eif} line on the Square Root Time plot.
- The OOIP / OGIP displayed is related to the area used.
- The EUR and RR come from the boundary-dominated flow Forecast plot.

Calculations		
Model Type: Hz - Multi Frac - SRV		
$A_c k_{SRV}^{1/2}$	92525.854	md ^{1/2} ft ²
$x_{f\ total} k_{SRV}^{1/2}$	462.629	md ^{1/2} ft
F_{CD}'	225.5	
L_g	15000.0	ft
n_f	15	
k_{SRV}	0.0109	md
x_f	295	ft
A_c	8.86e+05	ft ²
t_{eif}	380	d
OOIP	3251.3	Mstb
EUR ₀	397.030	Mstb
N_p	329.515	Mstb
RR ₀	67.515	Mstb

In the Model Type drop-down list, you can apply a vertical single fracture model to your well, or horizontal well models. The horizontal well includes two options: Effective k or SRV. The analysis pro-

cedure is the same for both well types; however, the calculation inputs for horizontal well models are used differently.

In the Effective k model, the stimulated region is treated as a region of higher effective permeability, and the horizontal well is treated as a single fracture. The $[Le^*(2x_f)]$ value is entered, and the effective permeability is calculated.

The SRV model considers bi-wing fractures extending from the horizontal well, and the area of the stimulated region is based on the FMB interpretation. After you enter the horizontal well length (L_e), Harmony Enterprise calculates the fracture half-length (x_f) from the area (A_{SRV}). The permeability in the SRV can then be determined from the total fracture half-length.

Note: None of the inputs in the Calculations section are required, but they can provide additional information about the model used for forecasting.

Primary toolbar

The primary toolbar is located in the Unconventional Reservoir pane and has these icons:

-  **Apply Defaults** — copies [parameters](#)¹ from the [Properties editor](#) or other IHS Reservoir worksheets.
-  **Change Top Left View** — select a plot to be displayed in the top left of your dashboard.
-  **Change Top Right View** — select a plot to be displayed in the top right of your dashboard.
-  **Change Bottom Left View** — select a plot to be displayed in the lower left of your dashboard.
-  **Change Bottom Right View** — select a plot to be displayed in the lower right of your dashboard.
-  **Float a New View** — select a plot to be displayed in a new floating window.

¹These parameters can be copied from one unconventional analysis to another: -fracture height min & max - model type (fracture mode) -changing properties options: geomechanical, changing oil saturation, use pseudo-time -material balance options: adsorption, geomechanical -superposition time options: (superposition time type) -forecast parameters: b, qf -typecurve options: raw derivative status, derivative status

-  **Save or Erase Default Dashboard** — select either save (to save your current dashboard configuration as the default setting), or reset (to reset the dashboard to its original settings).
-  **Show / Hide Disabled Points** — toggle between showing / hiding disabled points on your plot.

For a description of common toolbar icons, see [toolbars](#).

Plot dashboard

The plot dashboard displays your four favorite plots.

Note: For the FMB plot on the dashboard, the OGIP is anchored to the x-axis as a pivot point, and you can move the y-axis intercept by clicking-and dragging the green square. The anchored point on the x-axis is dictated by the t_{eff} line on the Square Root / Superposition Time plot.

Plot toolbar

The icons displayed in the plot toolbar vary depending on the type of plot that you have displayed. The important icons are described below.

-  **Single Annotation** — adds an annotation arrow to the data point you click.
-  **Linked Annotations** — synchronizes your annotation arrows across unconventional reservoir plots. For example, if you move your annotation on one plot using the keyboard arrow keys, the arrow is synchronized on the other plots. The values vary as you move from the displayed date for one date / time row in the Production editor to the other.
-  **Data Filter** — opens the Data Filter dialog box where you can apply a data filter. For more information, see [saturated filter](#).
-  **Boundary Dominated Curve** — applies a boundary-dominated curve to your plot.
-  **Typecurve Options** — opens the Typecurve Options dialog box where you can toggle the Raw Data Derivative and Beta Derivative options, as well as select your derivative type (Standard, Bourdet, or Difference) and derivative cycles. For bilinear flow, the beta-derivative is 0.25; for linear flow, it is 0.5; for boundary-dominated flow, it is 1.0.

For a description of common plot icons, see [plot toolbars](#).

Unconventional reservoir plots


Unconventional reservoir plots include the following:

- [Square Root Time](#)
- [Flowing Material Balance](#)
- [Typecurve](#)
- [Forecast](#)
- [Schematic](#)
- [Allowable Ax vs Ad Region](#)
- [Fourth Root Time](#)

All of these plots can be sent to the comparison plot in the [Results Viewer](#) by right-clicking the plot and selecting **Send to Comparison Plot**. For more information, see [comparison plot](#).

Square root time

This plot displays normalized pressure vs square-root time, and displays an automatic best fit of the data. The slope of the best fit line is used to determine the $x_r\sqrt{k}$, while the y-intercept is used to determine the apparent skin or apparent fracture conductivity.

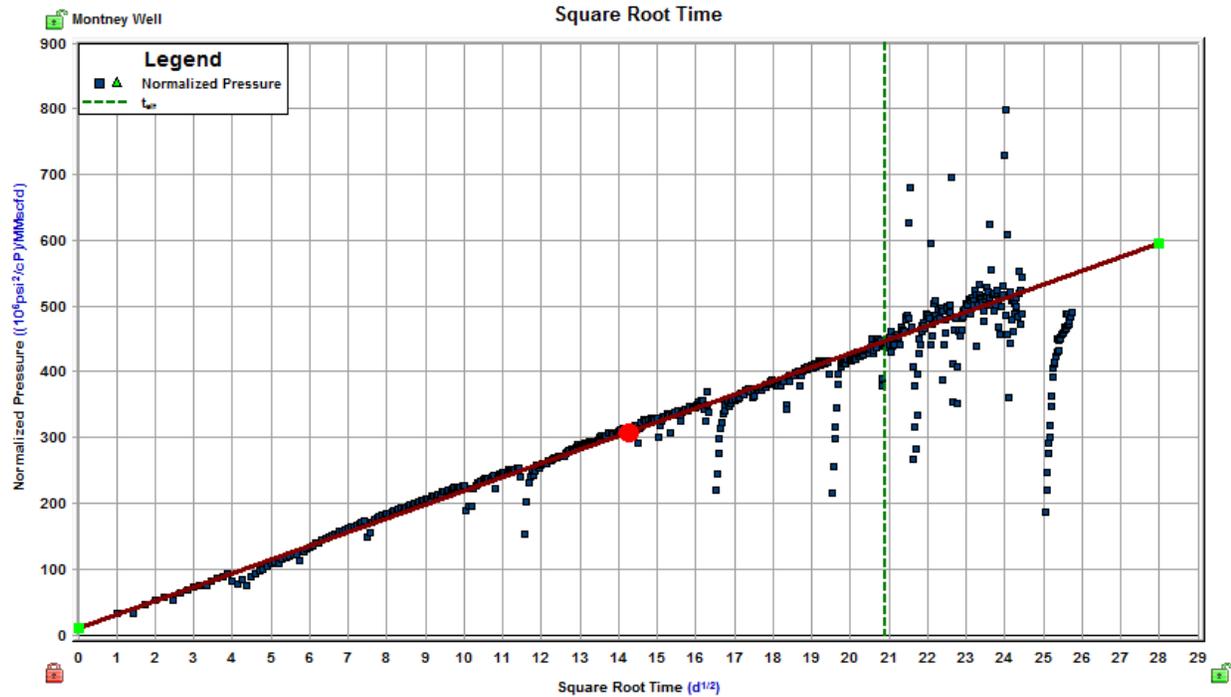

Note: On constant / variable pressure worksheets, Harmony Enterprise can calculate "b" according to your adjustments, if you click the **Boundary Dominated Curve** icon () and move the red analysis line on the plot manually.


Line manipulation

The best-fit line for this plot has the following properties:

- The line has an infinite length to the right.
- The line always has a manipulation point on the left-side on the y-axis.
- The line translates up and down when dragged by the left point.
- You can rotate the line around the center point by dragging the line itself.

Flowing material balance (FMB)


This plot shows the OOIP / OGIP, as well as the area of the stimulated reservoir volume (SRV). In addition, this plot displays an automatic best fit of the data.

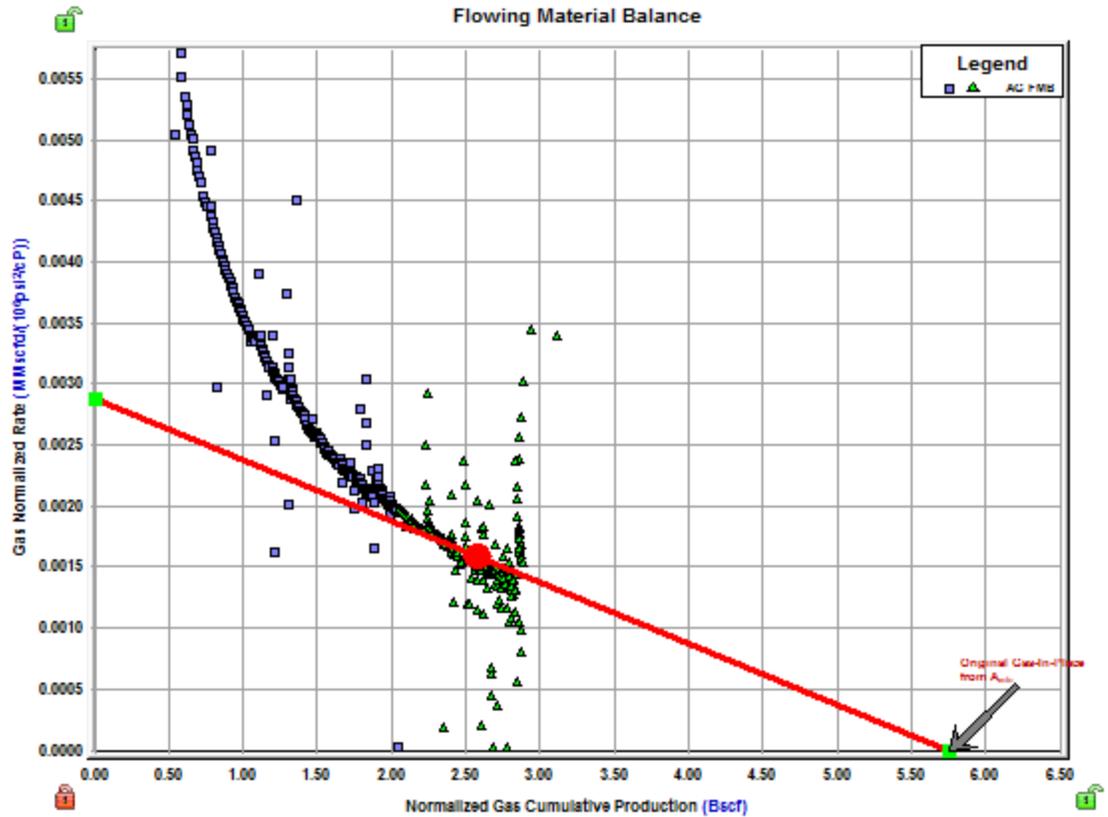

Note: By default, the flowing pressure to be used in the analysis is populated from the last portion of pressure data in the production history.


Typecurve

This plot indicates the flow regime. The red line indicates infinite-acting linear reservoir behavior; the green line indicates bounded reservoir behavior.

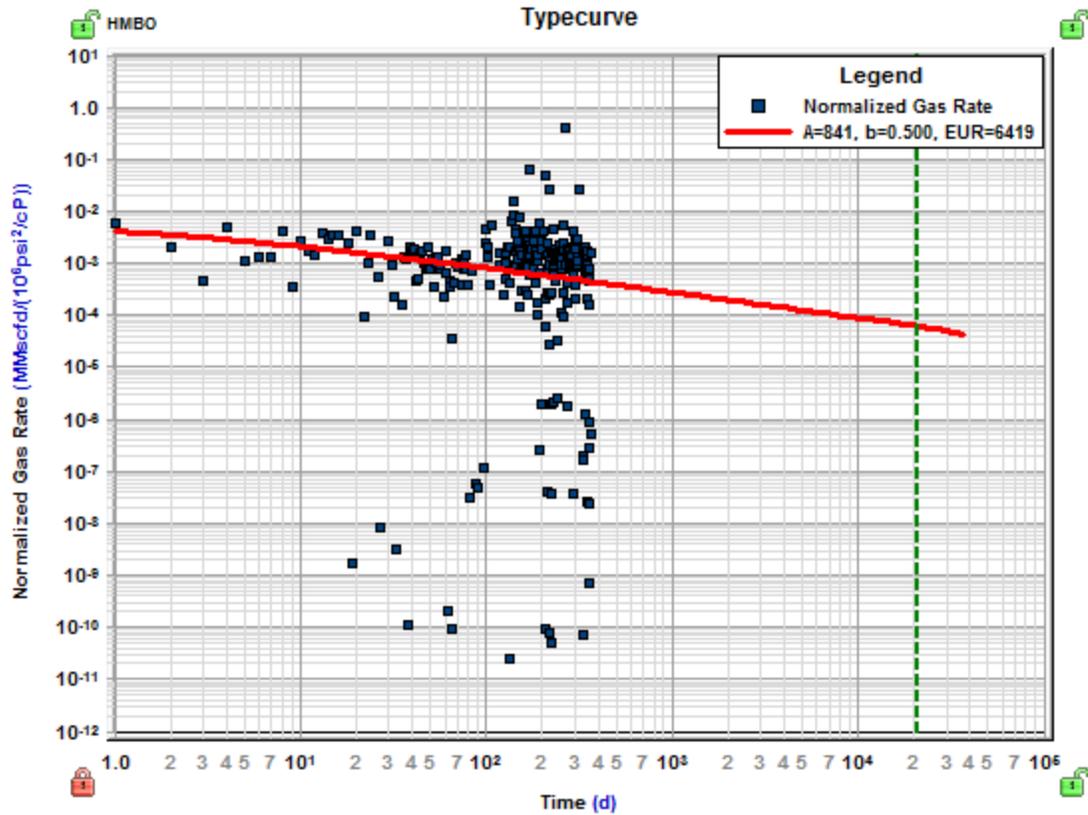


Forecast

This plot displays the forecast rate. The red line indicates infinite-acting linear reservoir behavior; the green line indicates bounded reservoir behavior.

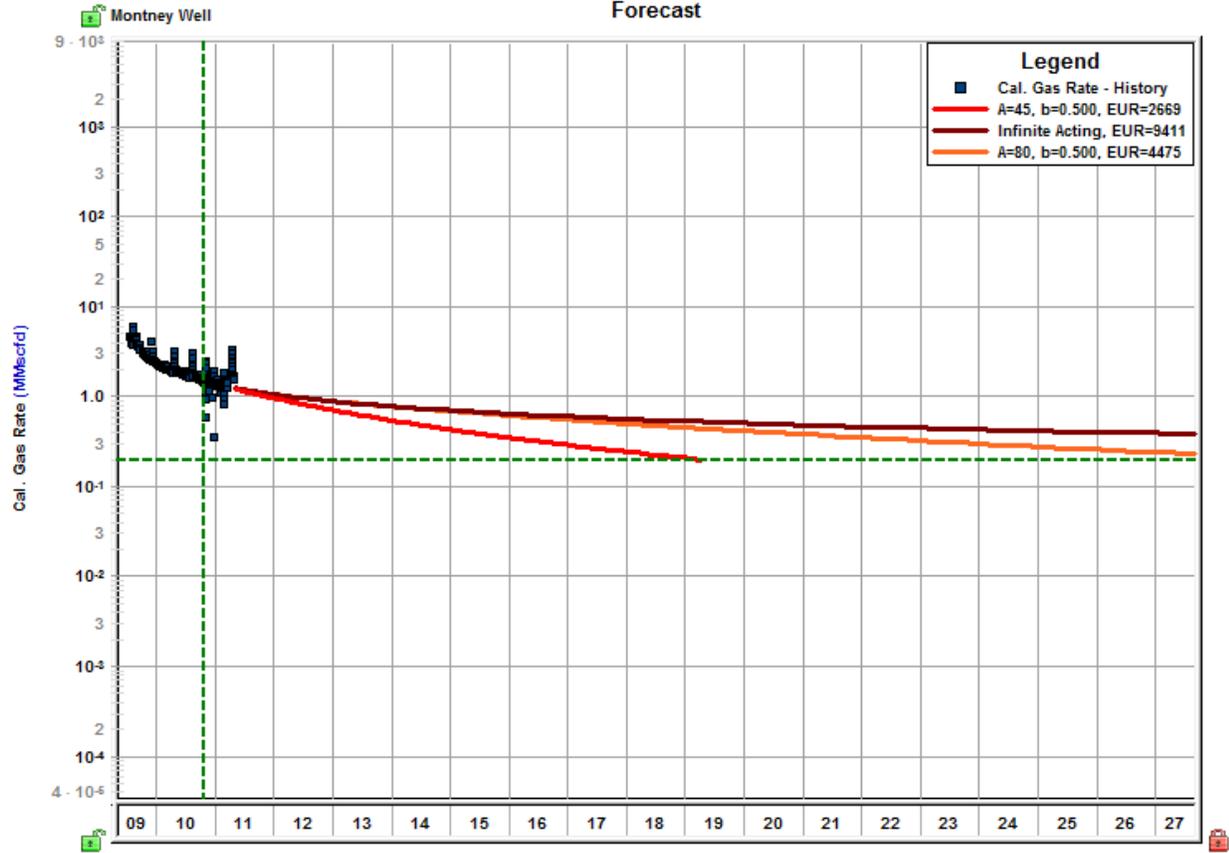


Schematic

In the "most likely" model, the schematic is based on the most likely SRV configuration on the Allowable A_d vs A_x Region plot. In the deterministic model, the schematic is based on the parameters you have entered.

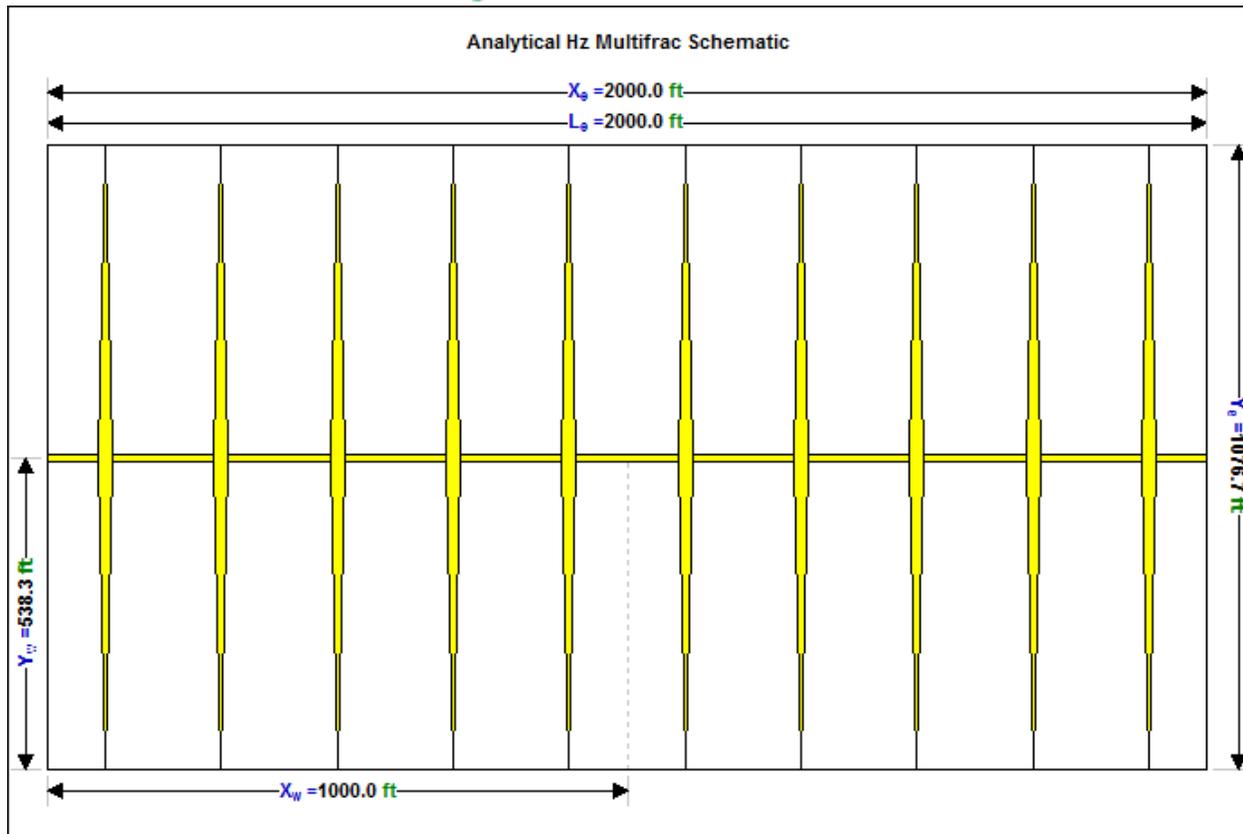


Allowable A_x vs A_d region

This plot defines a region that contains the full set of possible SRV configurations. The point at the center of the mass is used as the "most likely" values. (This plot is only available in the Most Likely model.)

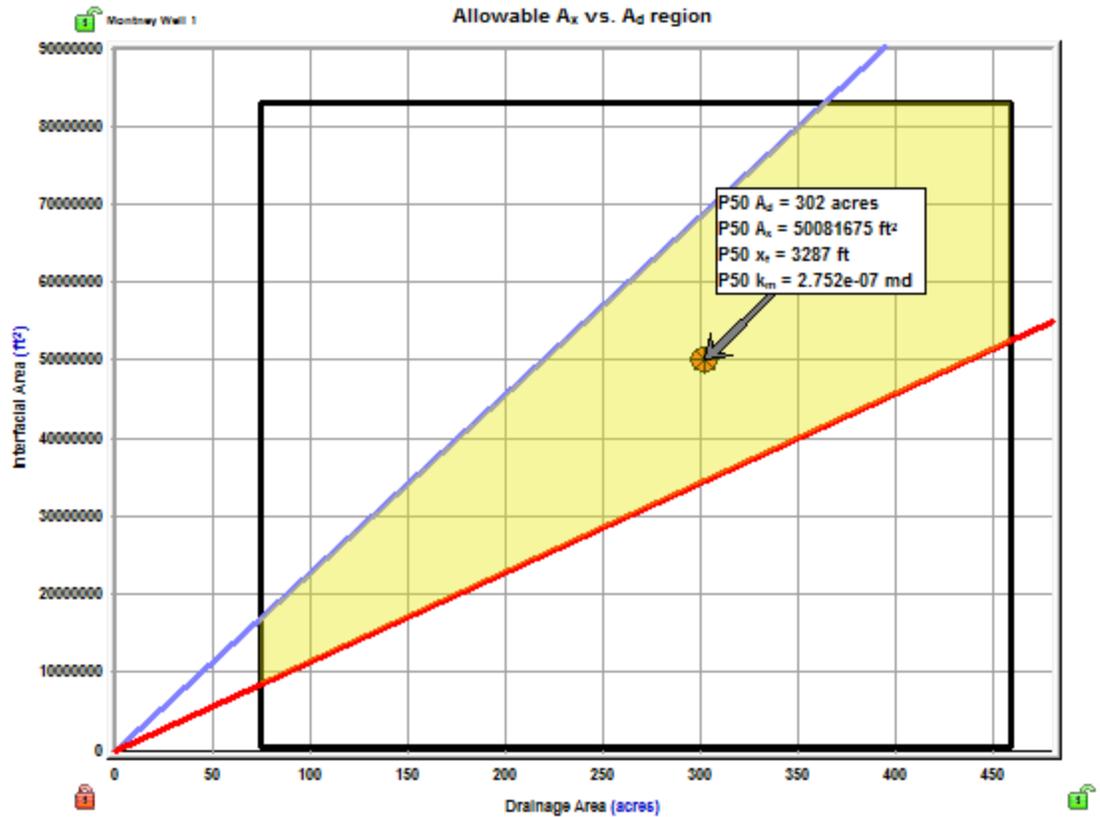

Fourth root time

This plot displays normalized pressure vs fourth-root time, and displays an automatic best fit of the data, as well as calculating values based on bilinear flow equations.

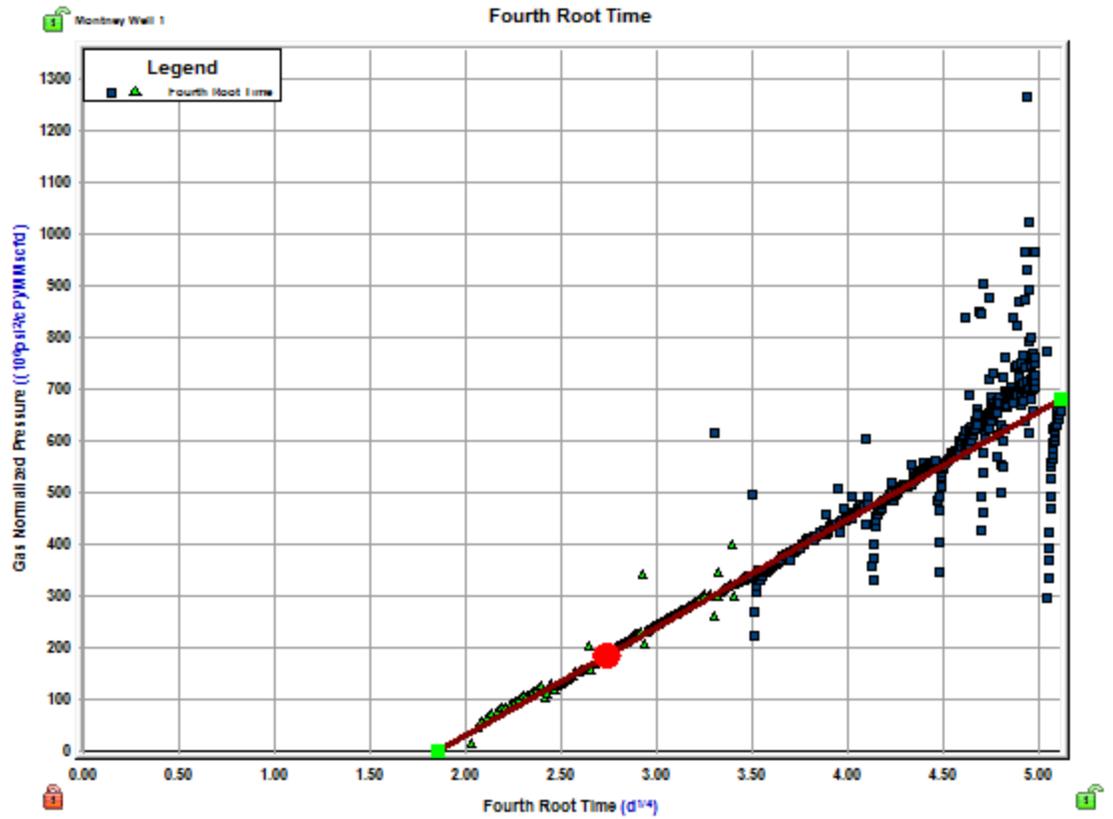


Saturated filter

The unconventional reservoir model (URM) analysis is a single-phase analysis; therefore you should be cautious when applying it to cases where a well exhibits two-phase flow. For oil wells, we can expect two-phase flow after the flowing pressure drops below the oil bubble point pressure. The Saturated Filter option can be used to identify the portion of the data where flowing pressure is below the bubble point pressure (oil and gas flowing in the reservoir).

To use this option:

Click the **Data Filter** icon on a Square Root Time or FMB plot; then click the **Fully Automatic** icon on the Data Filter plot.

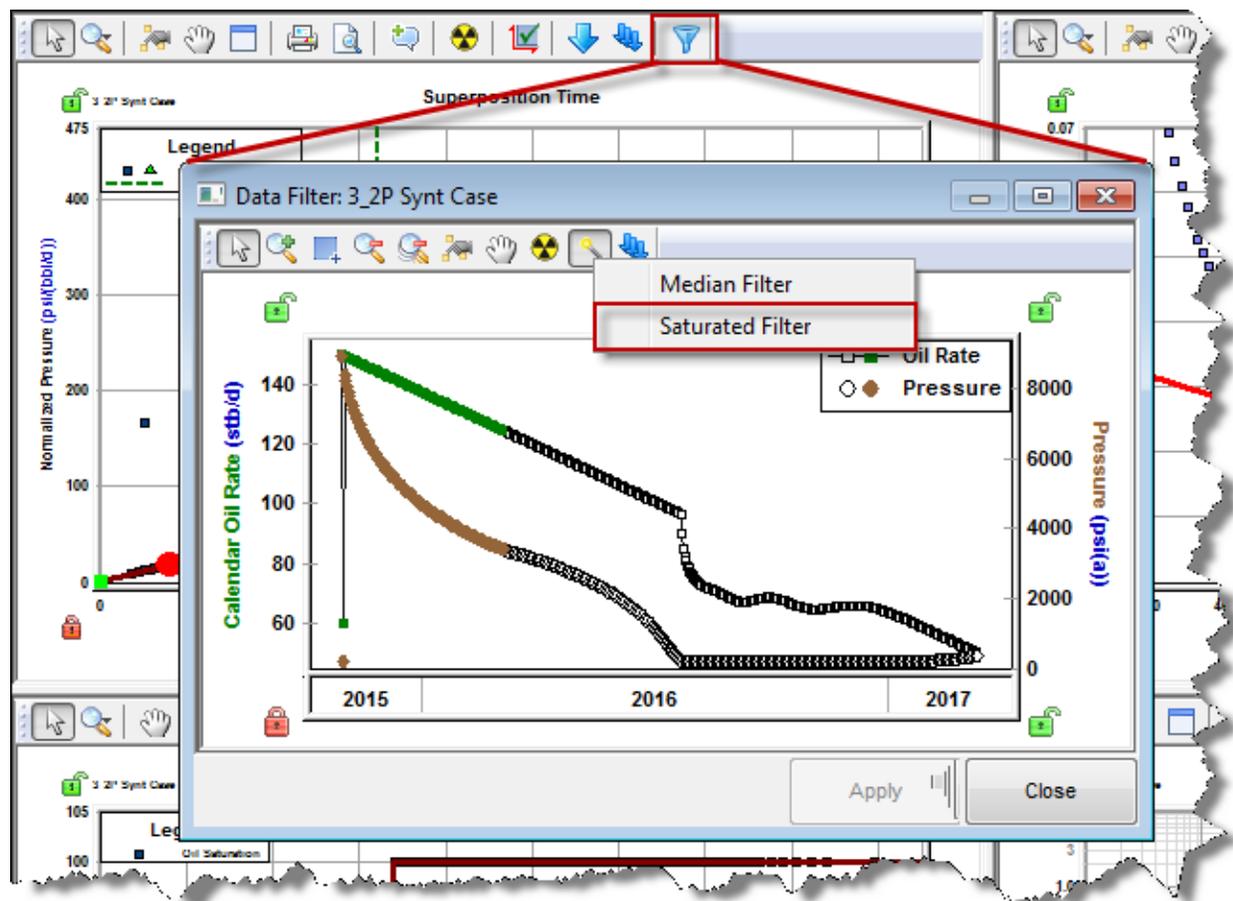


Note: The saturated filter uses the oil bubble point pressure set in the Properties editor; therefore, it is important to set it accurately.

Data Filter dialog box

This dialog box is commonly used when you click the filter data for an FMB, typecurve, or unconventional reservoir analysis.

This dialog box has the following important icons:

- **Tools to Select Data Points for Filtering**  — opens an additional toolbar with point-selection options.
 - **spray gun** — selects points when you left-click, and deselects points when you right-click. The mouse wheel can be used to change the spread-tool's size.
 - **select all data points** — selects all the data points on the plot.
 - **deselect all data points** — deselects all the data points on the plot.
 - **lasso** — select points by clicking-and-dragging a shape around your data points. Deselect points by right-clicking-and-dragging a shape around the data points you do not want.
- **Fully Automatic**  — select one of these options:
 - **Median Filter** — used to make data less noisy by deselecting data points that are far from the rest of the data (those points are likely to be outliers). Note that the dataset needs to have at least 20 points for this filter to be applicable.

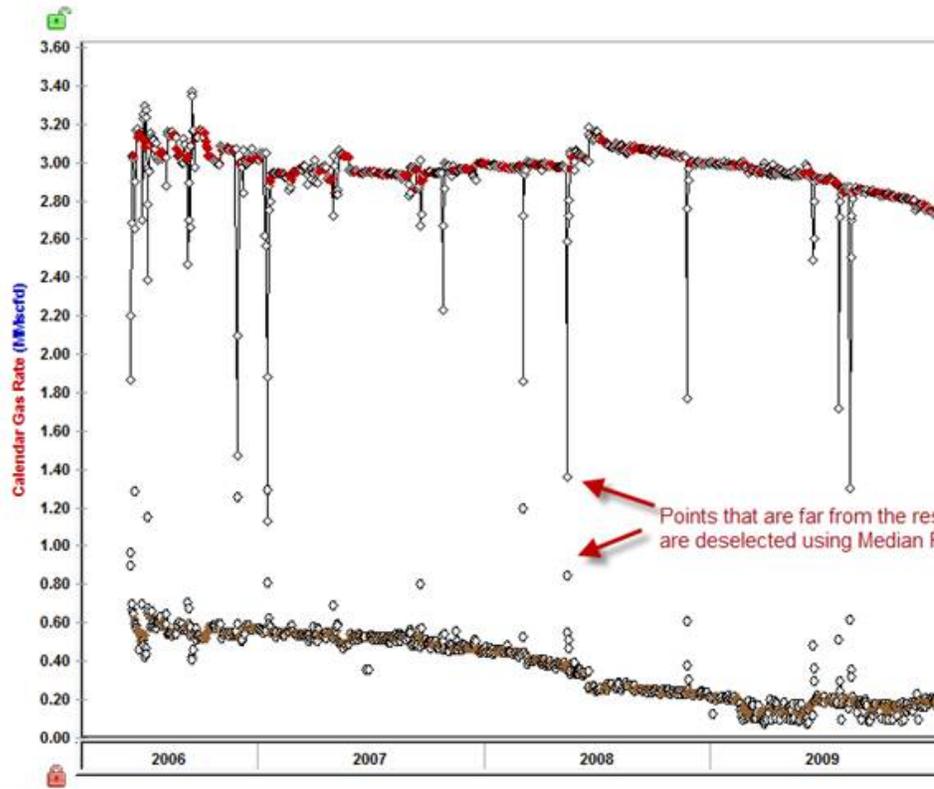

- **Saturated Filter** — used to identify the portion of the data where flowing pressure is below the bubble point pressure (oil and gas flowing in the reservoir). For more information, see [saturated filter](#).

For information on common plot icons, see [plot toolbars](#).

Analytical

Analytical models are used to validate interpretations and provide production forecasting. For more information, see [analytical models theory](#). Analytical models assume single-phase flow in the reservoir and are available for gas, oil, and water production with the following options:

- Vertical
- Vertical with Fracture
- Horizontal
- Hz Multifrac: Enhanced Frac Region
- Hz Multifrac: General Multifrac

Note: This analysis works with your Harmony Reservoir™ license.

Before you start, make sure that all required information is added to the Harmony Enterprise project. Well production data (rates and sandface pressures) should be populated in the [Production editor](#), and reservoir and fluid properties should be specified in the [Properties editor](#).

We recommend that you perform an analysis prior to using the analytical model because this gives you an idea about which values to use. For example, for conventional wells, a flowing material balance ([FMB](#)) gives an estimate for original fluid in-place, and the use of a [typecurve](#) analysis provides insight about permeability, skin, reservoir shape / size, and fracture properties. For unconventional wells, an [unconventional reservoir analysis](#) can be used to estimate permeability, fracture length, apparent conductivity, and the size of the stimulated reservoir volume.

Analytical Model pane

In the Analytical Model pane, enter the required parameters, and select your calculation method from the primary toolbar (CalcP, CalcR, or CalcBoth).

Primary toolbar

There are four toolbars: primary, secondary, [Plots sub-tab](#), and [Forecast sub-tab](#).

The primary toolbar has the following important icons:

-  **Defaults** — copies parameters from the [Properties editor](#) or other IHS Reservoir worksheets.

Or, if you want to copy only one parameter from the analysis, click the **View Defaults and Limits** button to the right of the field in the Analytical Model pane.

Note: Parameters copied from the reservoir or another analysis are displayed in a gray font. This indicates that they match the default. You can type new values for any parameter, or change values for some parameters by moving elements of the schematic. Parameters, which do not match the default, are shown in a black font.

-  **Automatic Parameter Estimation (APE)** — while APE is running, selected parameters are automatically varied to minimize the error between the simulated pressure / rate and the actual pressure / rate depending on the calculation method (see CalcP, CalcR, and CalcBoth below). The updated simulated pressure / rate is shown on the plots while the calculation is running. For more information, see [using APE](#).

Important: The purpose of history matching is to get the calculated pressures / rates to reproduce actual pressures / rates as closely as possible by changing the model's parameters. You can vary model parameters manually, or use APE.


-  **AutoCalc** — recalculates automatically each time you change model parameters.
-  **Synthesize** — if you do not click the AutoCalc icon, you must click this icon every time you want to recalculate the model.
-  **CalcP** — calculates the sandface flowing pressure based on measured rate. The pressure is calculated and minimized.
-  **CalcR** — calculates the rate based on given sandface flowing pressures. The rate is calculated and minimized.
-  **CalcBoth** — calculates CalcP and CalcR. Both pressure and rate are calculated and minimized.
-  **Derivative Options** — opens the Options dialog box where you can select Standard (points), Bourdet (cycles), or Difference.
-  **Copy to / Paste from the Clipboard** — copies and pastes data from the [clipboard](#).

For a description of common icons, see [toolbars](#).

Secondary toolbar

By default, the secondary toolbar is located to the far right of the primary toolbar. (You can move the icons in the secondary toolbar by clicking the dotted line to the left of the icons.)

By default, the Analytical Model Dashboard displays model schematics and three plots with measured and calculated data. You can change this display (that is, switch plots and their positioning) by clicking one of the **Add an Available View** icons (upper left, upper right, lower left, lower right) and selecting the plot you want.

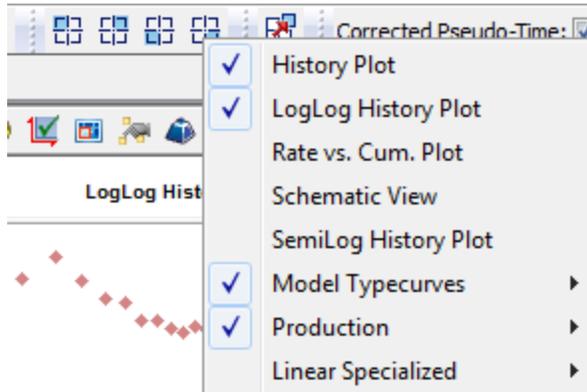

-  **Add Floating View** — opens the plot you select from the drop-down list in its own window.
- **Corrected Pseudo-Time** — toggles corrected pseudo-time on or off.

Sub-tabs

There are three sub-tabs: Plots, Forecast, and Tables.

Plots

This sub-tab displays your analytical model dashboard, which you can customize using the secondary toolbar. For information on a plot's context menu, see plot options.

Toolbar

This toolbar is located on the Plots sub-tab and has the following important icons:

-  **Reset Plot Attributes** — resets your plot attributes to default settings.
-  **Enable / Disable Square LogLog Plot** — changes the range of the x- and y-axes, so that the resolution of a log cycle is consistent between the axes (for example, a log cycle equals 200 pixels on both axes).

-  **Weigh Data Points** — used to emphasize matching to specific data points when using APE (for example, the last part of the production). The cursor changes to a spray gun when clicked. Weighted data points are displayed in a brighter color and are given a 100% weighting; unweighted points are given a 10% weighting. (The weighting is displayed when you hover over the data point.)
-  **Copy** — copies plot data.
-  **Select Anchor Point** — attempts to initialize the anchor to the first measured pressure. If this fails, click the location you want within the plot to set the anchor location. An annotation is shown at the anchor location while this functionality is enabled. Dragging the annotation arrow to a different point updates the calculations. For more information, see anchoring.

Tip: The Anchor option is currently only available for analytical models in Calculate Pressure (CalcP) mode.
-  **Hide the Toolbar** — hides the toolbar. If you want the toolbar displayed, right-click the plot and select **Show Toolbar**.

For information on common plot icons, see plot toolbars.

Forecast

This sub-tab has a toolbar, and displays your forecast: options, constraints, and results.

After the model has been populated (either by entering values, or by clicking the Defaults icon) and calibrated to the production and pressure data through history matching (click the Automatic Parameter Estimation icon), production forecasts can be created and compared under a variety of different constraints.

Toolbar

This toolbar is located on the Forecast sub-tab and has the same common icons described in plot toolbars.


Forecast options

The Forecast Options section is where forecast periods are defined according to either durations (for example, months), or dates.


- Setting the forecast time method to **Duration** begins a forecast at a specified start date. Forecast periods are then defined in the forecast table according to a length of

time (the default is months). For each forecast period, different operating conditions can be specified.


- Setting the forecast time method to **Start Date** creates a forecast of a specified length of time (the default is months). Forecast periods are then defined in the forecast table according to calendar dates.

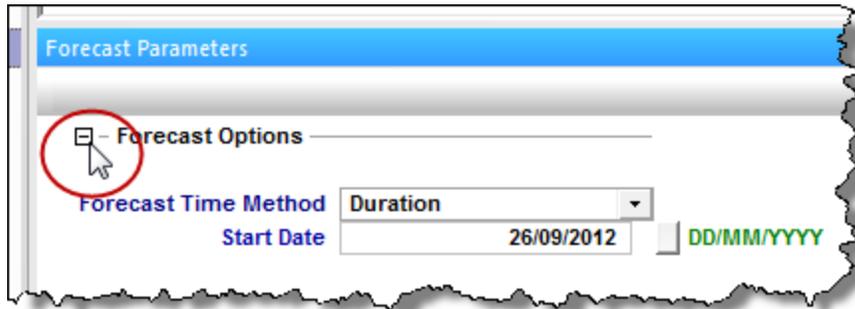

If you select **Duration** from the Forecast Time Method drop-down menu, the Start Date is automatically populated. (You can change this date later, if needed.)

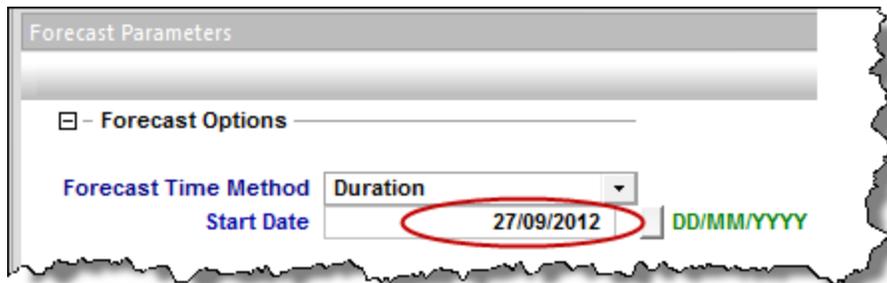

If you select **Start Date** from the Forecast Time Method drop-down menu, enter a value for Duration (that is, the total length of the forecast).

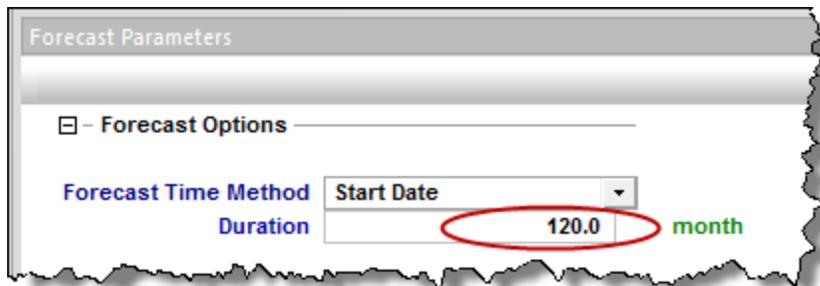

Forecast Flowing Pressure — when controlling the pressure for forecasting, select whether sand-face or wellhead pressure is specified. For more information, see [forecasting using wellhead pressure](#).



Allow Injection — a negative control rate (to forecast as injection) can only be specified when this checkbox is selected. If this option is deselected, the forecast stops if the average pressure intersects flowing pressure.

Further details about each forecast period are entered in the forecast options table.

	Time			Control		Sandface Pressure	
	Step Type	Duration	# of Steps	Interpolation Method	Control Type	Initial	Final
		month				psi(a)	psi(a)
1	Arithmetic	Required	Required	Step	Pressure	1626.85	

Each row of the table above represents a forecast period. An additional forecast period can be added each time an operational change is encountered (for example, the flowing pressure decreases when a compressor is added). The forecast options table has the following sections:

- **Time** — defines the length of each forecast period and each timestep, and has the following columns:
 - **Step Type** — sets the spacing of the timesteps, and can be set to either Arithmetic or Logarithmic. The Arithmetic step type spaces the number of timesteps equally over the total duration of the period, whereas the Logarithmic step type spaces the number of timesteps logarithmically (that is, increased density near the beginning of the forecast).
 - **Forecast Time Method (Duration / Start Date)** — sets the length of the forecast period. If the Forecast Time Method is set to Duration, this column shows Duration. If the Forecast Time Method is set to Start Date, this column show Start Date.
 - **# of Steps** — sets the number of timesteps in the forecast period.

- **Control** — defines how the operating conditions change over the forecast period, and has the following columns:
 - **Interpolation** — can be set to either Step or Ramp. "Step" keeps the control type constant over the forecast period. "Ramp" varies the control type linearly from an initial value to a final value.

- **Control Type** — sets what is used to calculate the forecast. For the analytical model, the forecast can be run using either flowing pressure, or the rate being analyzed.
- **Sandface Pressure** — if the Control Type is set to Pressure, the Sandface / Wellhead Pressure column is displayed (depending on the Forecast Flowing Pressure option), and it is used to set the flowing pressure for the forecast period. If Interpolation is set to Step, only the initial pressure is specified. If Interpolation is set to Ramp, initial and final pressure are specified.
- **Gas Rate** — if the Control Type in a period is set to Gas Rate, this column is displayed, and it is used to set the rate for the forecast period. If Interpolation is set to Step, only the initial rate cell is editable. If Interpolation is set to Ramp, initial rate and final rate are editable.

Forecast constraints

The Forecast Constraints section is where maximum rate and abandonment rate conditions for the forecast can be entered. The available constraints depend on the fluid type, and could include the following:

- p_{\min} — specifies the minimum sandface / wellhead pressure based on the Forecast Flowing Pressure option.
- $(q)_{\max}$ — sets a maximum rate during the forecast. In order to maintain the maximum rate constraint, flowing pressure is adjusted.
- $(q)_{\text{ab}}$ — sets the abandonment rate for the forecast. When the abandonment rate is reached, the forecast ends.


Forecast results

The Forecast Results section is where the results of the forecast are summarized. Available results depend on the fluid type, and could include the following:

- EUR — expected ultimate recovery.
Note: For wells with historical data, EUR is defined as the cumulative of the historical data up to the beginning of the forecast, after which time, the synthetic cumulative calculated from the model is used until the end of the forecast.
- RR — remaining recoverable.

Tables

The sub-tab displays your history match (after you use the [synthesize](#) or [APE](#) functionality) and forecast data (after you populate all the required values on the Forecast tab) in a tabular format. For more

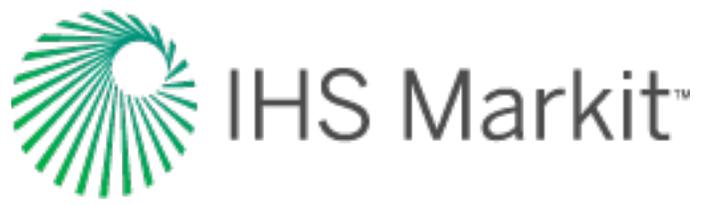

information, see [tables](#).

Forecasting gas condensate systems

Analytical models in Harmony Enterprise can only analyze single-phase systems. For condensate systems, gas and condensate rates measured at the surface are recombined into a single-phase rich gas for analytical modeling. When forecasting, however, the recombined gas rate must be split back out into gas and condensate rates for estimating production measured at the surface. The main procedure to split the recombined condensate-rich gas into separator gas and condensate is as follows:

- Calculate the recombined gas rate factor (RGRF), which is dependent on the instantaneous value of the condensate gas ratio (CGR).
- $q_{\text{sep gas}} = q_{\text{rec}} / \text{RGRF}$
- $q_{\text{cond}} = q_{\text{sep gas}} \times \text{instantaneous CGR}$


Note: RGRF is calculated from separator conditions, condensate gravity, gas gravity, and CGR.

- q_{rec} = recombined gas rate (rich gas rate); $q_{\text{sep. gas}}$ = separator gas rate (dry gas rate); q_{cond} = condensate rate

There are two options that control how CGR is calculated over the forecast period:

1. CGR changes with time:

- In the Properties editor, select **Gas Condensate / Recomb** from the Gas Type dropdown menu.
- In the Forecast tab, under Forecast Options, select the **Separate Recombined Gas** checkbox.

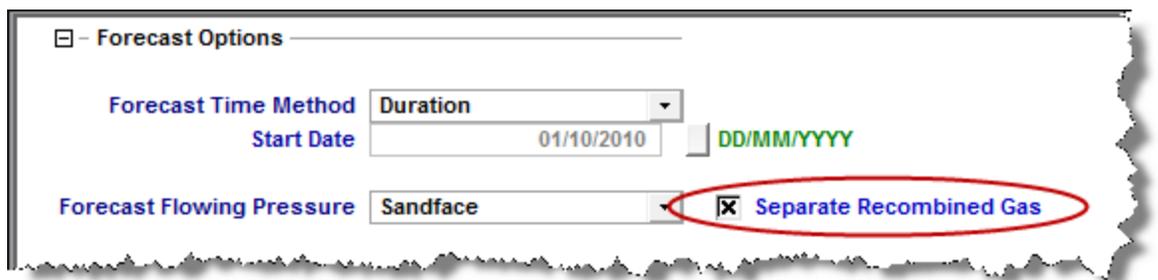

This results in additional columns (that is, Initial CGR and Final CGR) being added to the Ratios section of the forecast table.

	Time			Control		Sandface Pressure		Ratios		
	Step Type	Duration	# of Steps	Interpolation	Control Type	Initial	Final	Ratio Interpolation	Initial CGR	Final CGR
		month				psi(a)	psi(a)		bbl/MMscf	bbl/MMscf
1	Arithmetic			Step	Pressure			Step		

- Fill in the required inputs in the forecast table. The CGR automatically defaults to the value that was entered in the Properties Editor. However, this value can be edited.
- To enter a CGR that varies linearly over the forecasted period, select **Ramp** for the Ratio Interpolation method, then enter a Final CGR value.

	Time			Control		Wellhead Pressure		Ratios		
	Step Type	Duration	# of Steps	Interpolation	Control Type	Initial	Final	Ratio Interpolation	Initial CGR	Final CGR
		month				psi(a)	psi(a)		bbl/MMscf	bbl/MMscf
1	Arithmetic	Required	Required	Step	Pressure	Required		Ramp	Required	Required
2	Arithmetic			Step	Pressure			Ramp		

2. CGR changes with flowing pressure according to the Rv correlation:

- In the Properties Editor, select **Gas Liquid Content / Rv** from the **Gas Type** drop-down menu.
- In the Forecast tab, select the **Separate Recombined Gas** checkbox to split the calculated rich-gas rate into separator gas and condensate using the Rv functionality that controls the rate by sandface flowing pressure.

The resulting forecast graph and table show recombined gas, gas (dry), and condensate rates.

In splitting the forecast of analytical models, the assumption is that these effects / properties in the reservoir can be ignored:

- liquid drop-out on material balance
- liquid drop-out on skin
- liquid drop-out on gas composition (that is, recombined gas-specific gravity)
- liquid drop-out on fluid properties that change (that is, viscosity, compressibility, and the compressibility factor)


Note: The effect of liquid blockage on well productivity can be modeled by increasing skin with time.

Forecasting using wellhead pressure

By default, analytical models use sandface pressures for forecasting. When the Control Type is set to Pressure, analytical models calculate production rates based on sandface flowing pressure. When the Control Type is set to Rates, models calculate sandface flowing pressure based on rates.

With analytical models, you can forecast production rates from wellhead flowing pressure. When the Wellhead Flowing Pressure option is selected, and the Control Type is set to Pressure, analytical models calculate production rates based on wellhead flowing pressure.

After you have defined your wellbore in the [Wellbore editor](#), and created an analytical model, click the **Forecast** tab and make sure that **Wellhead** is selected from the Forecast Flowing Pressure drop-down menu.

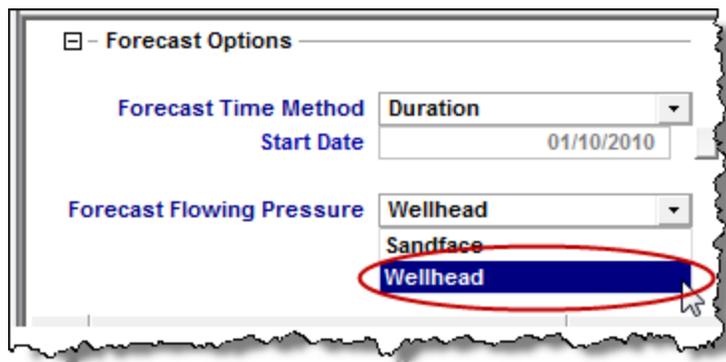

For the Control Type:

- If Pressure is selected, enter the wellhead flowing pressure.
- If Rate is selected, both sandface and wellhead flowing pressures are calculated during the forecast; however, only sandface flowing pressures are displayed on the Results plot. Both the sandface (p_{wf}^{calc}) and wellhead flowing pressures (p_{tf}^{calc}) are displayed in the Tables tab.

When multiple phases are present in the wellbore, pressures should be calculated based on the multiphase flow rates. To enable multiphase wellbore calculations, the fluid ratio must be defined over the forecast period. Fluid ratios are defined as follows:

- Under Forecast Options, select the appropriate fluid ratio. This results in additional columns being added to the forecast table under the Ratios section.

Forecast Options

Forecast Time Method: Duration
 Start Date: 15/02/2002 (DD/MM/YYYY)

Forecast Flowing Pressure: Wellhead

Use WOR Use GOR

Note: Available fluid ratios depend on the analysis type. Gas wells show WGR, while oil wells show WOR and GOR.

- Set the ratio interpolation method as either Step (default setting) or Ramp. "Step" defines a constant ratio value over the forecast period, while Ramp allows the ratio value to vary linearly over the forecast period.

Forecast Options

Forecast Time Method: Duration
 Start Date: 24/10/2012 (DD/MM/YYYY)

Forecast Flowing Pressure: Wellhead

Use WOR Use GOR

	Time			Control		Wellhead Pressure		Ratios		
	Step Type	Duration	# of Steps	Interpolation	Control Type	Initial	Final	Ratio Interpolation	Initial WOR	Final WOR
1	Arithmetic	month		Step	Pressure	psi(a)	psi(a)		bbl/stb	bbl/stb

Forecast Constraints

p_{min} psi(a) $(q_o)_{max}$ stb/d $(q_o)_{sp}$ stb/d

- Specify values for the ratio over the forecast period. If Step was selected as the interpolation method, enter an Initial value. If Ramp was selected, enter Initial and Final values.

Note: When the Wellhead Flowing Pressure option is selected, the p_{min} forecast constraint is the minimum wellhead pressure (as opposed to minimum sandface pressure when the Sandface Pressure option is selected).

Default values for fluid ratios (for example, WGR, WOR, and GOR) are calculated based on the reported production rates at the last historical date.

Note that multiphase flow rates are only used in the wellbore calculation, which does the conversion between sandface and wellhead pressures. Multiphase flow rates are not used for any reservoir calculation.

Test design

Test design also uses the same Forecast tab, but its purpose is different. Test design is usually performed for green fields without any production data, and is used to:


- get an estimate of expected production volumes
- see the effect of various reservoir and completion parameters

To start a test design, you need to create a new well (in the Entity Viewer) and fill in the required properties in the Properties editor.

Estimating expected production volumes

In the Forecast tab, set the forecast duration, # of steps, and forecast control.

Your forecast is calculated and displayed on the Results plot. Expected ultimate recovery (EUR) is displayed in the Forecast Results section.

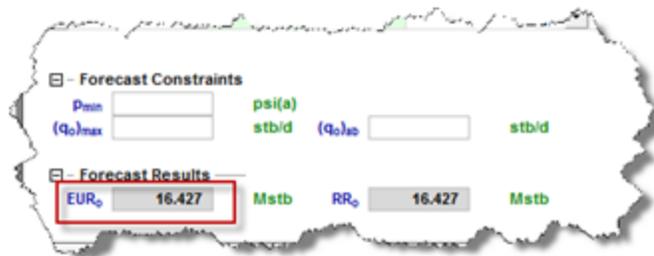

Evaluating the effect of various parameters

To have a better idea of possible outputs (for example, expected production volume estimates), you may want to see how results differ when you change some of the model parameters. This can be best illustrated with an example.


Test design example

Assume you have one model with a horizontal multifrac completion with a test design, and you want to see the effect of changing the number of fractures (n_f).

1. Create an analytical model of the same type.
2. Copy all the parameters from the existing model to the new one by clicking the **Defaults** icon () , and then change the number of fractures (n_f) for the new model.

3. Fill in all the Test Design parameters in the same way as the original model.
4. Right-click the analysis tab for both analyses to rename them, so they are easily identified.
5. Compare forecasts for both models using the [comparison plot](#).
Or, create a Rate Vs. Time analysis, and select the checkboxes to compare both models on a plot.

The plot below compares forecasts for models with 10 and 12 fractures. This plot illustrates that the model with 12 fractures has higher initial production, but later the rate for the model with 10 fractures becomes higher. Expected ultimate recoveries (EURs) are shown as well.

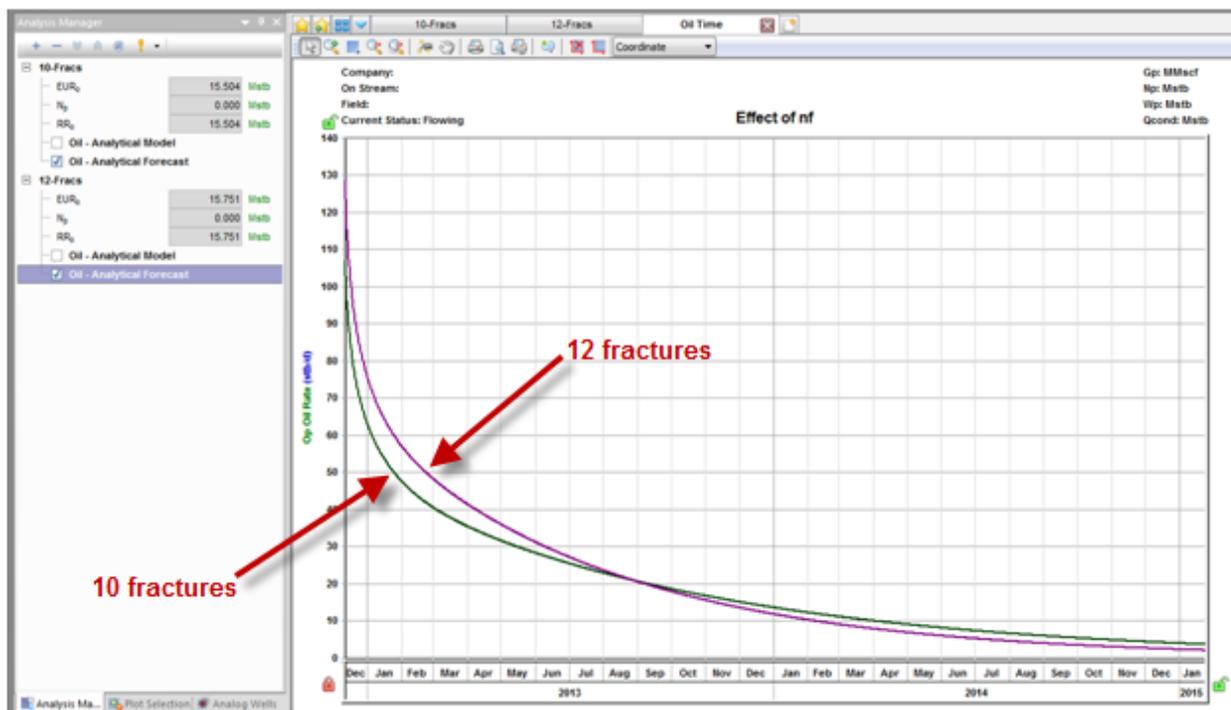

Following the same steps, you can add more models to compare the effect of various parameters.

If you have many models, and want to compare the summary parameters (that is, EUR, or recovery factors), use the [Results Viewer](#).



The screenshot shows the 'Results Viewer' window in IHS Markit software. The window has a menu bar with 'Results Viewer', 'Comparison Plot', and 'Reporting'. Below the menu bar, there are buttons for 'Export Tables', 'Export Forecasts', and 'Global Edits'. The left pane shows a tree view with the following structure:

- Custom
 - Classification
 - Summary Parameters
 - Gas
 - Oil
 - OOIP
 - EUR_o
 - N_{pvt}
 - RR_o
 - RF_o
 - Water
 - Condensate
 - RR_{wc}

The right pane displays a table titled 'Summary Parameters' with the following data:

Summary Parameters				
Oil				
Display Name	Analysis Name	Ultimate Recoverable Oil	Oil Recovery Factor	
		Mstb	%	
1	Effect of nf	10-Fracs	15.504	3.073
2	Effect of nf	12-Fracs	15.751	3.122

Advanced analytical options

Advanced analytical options include:

- Accounting for fluid changes
- Anchoring
- Constant-pressure boundaries
- Injection
- Using automatic parameter estimation

Accounting for fluid changes during reservoir depletion in oil analytical models


Fluid properties (such as compressibility, viscosity etc.) depend on pressure; therefore, while a reservoir is being depleted, fluid properties change.

For gas analytical models, pseudo-pressure and pseudo-time are used to account for the change in gas properties.

For oil analytical models, fluid properties are assumed to be constant: properties are estimated at the initial pressure using correlations or tables set in the Properties editor, and these properties are used for calculations throughout the production history and the forecast.

$$\begin{array}{l} B_{oi} = B_o(p_i) \\ c_{oi} = c_o(p_i) \\ \mu_{oi} = \mu_o(p_i) \end{array} \quad \left. \vphantom{\begin{array}{l} B_{oi} = B_o(p_i) \\ c_{oi} = c_o(p_i) \\ \mu_{oi} = \mu_o(p_i) \end{array}} \right\} \text{ used for calculations}$$

This assumption is acceptable if the pressure in the reservoir remains above the bubble point, since the variations for under-saturated oil properties with pressure are negligible. However, if the pressure drops below the bubble point, oil properties (in particular – oil compressibility) change significantly.

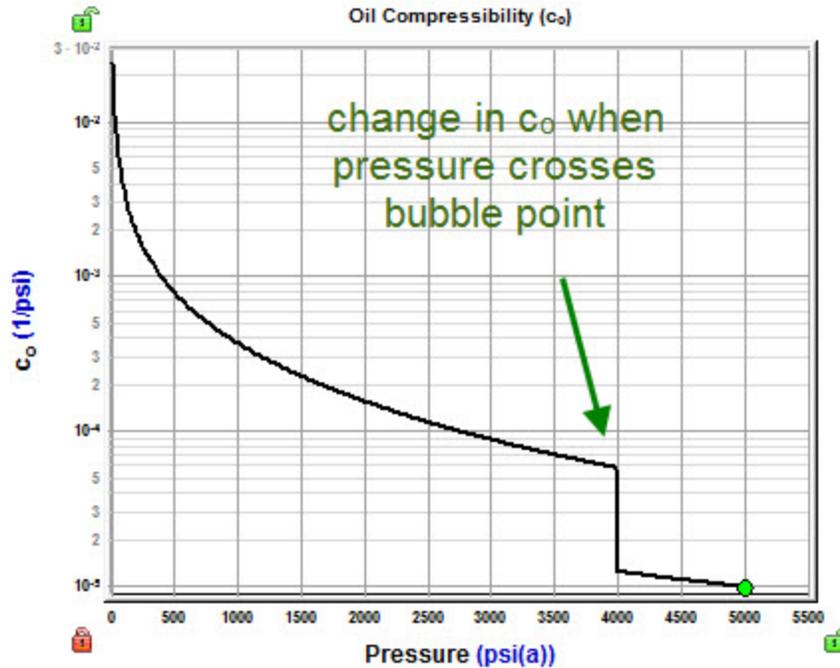

As a result, numerical models are recommended for forecasting in under-saturated oil reservoirs, or for history matching in saturated oil reservoirs. However, analytical models can be used to history match a brief portion of data, such as a buildup, in saturated oil reservoirs because the properties aren't changing significantly during the segment being analyzed. Although oil analytical models do not honor varying oil properties, it is possible to use (constant) oil properties corresponding to the depleted reservoir conditions.

Example: Consider an under-saturated oil reservoir with: $p_i = 5000$ psi and $p_{bp} = 4500$ psi.

The well was producing at a constant rate (drawdown) and then was shut in (buildup). During the drawdown, reservoir pressure dropped to 4,400 psi; therefore, during the buildup, the reservoir was filled with saturated oil. As a result, saturated oil properties should be used to history match the buildup.

To do this in an analytical model:

1. Select the **PVT Pressure** option in the Analytical Model pane.
2. Expand the **PVT Pressure** group and set p_{prop} to 4,400 psi.



In this case, the properties used for calculations are evaluated at p_{prop} .


$$\left. \begin{aligned} B_o &= B_o(p_{prop}) \\ c_o &= c_o(p_{prop}) \\ \mu_o &= \mu_o(p_{prop}) \end{aligned} \right\} \text{ used for calculations}$$

Note: With this approach, the drawdown portion of the data is not matched. However, matching just the buildup portion of the data is useful, as it helps to estimate current reservoir and completion properties.

Anchoring


Anchoring is a technique for improving the efficiency of the history-matching process when the initial pressure is unknown. You can specify a measured pressure and Harmony Enterprise calculates the initial synthetic pressure, which results in the model's analysis line going through that specified pressure. This specified measured pressure is known as the anchor point.

To add an anchor point, click the **Anchor** icon on the History Plot toolbar of any analytical model.

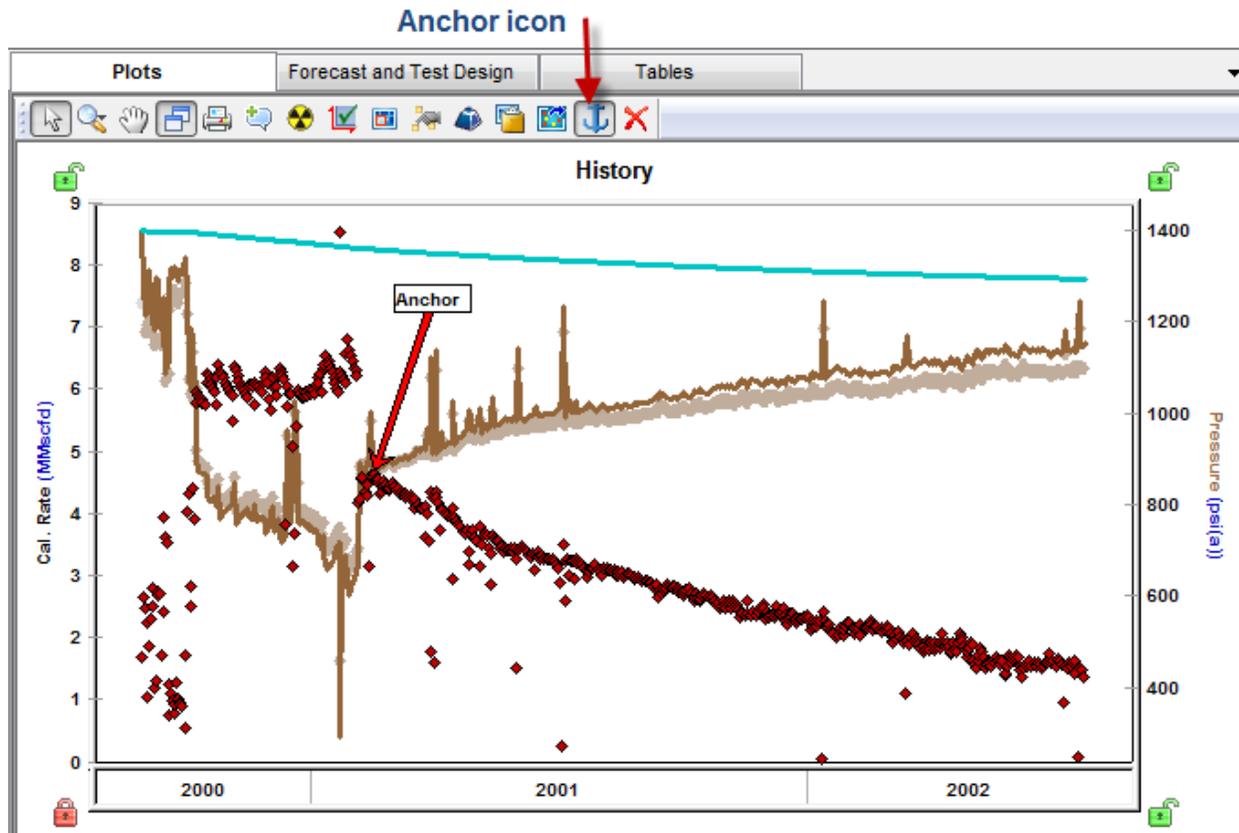

Clicking the Anchor icon automatically places an anchor arrow on the first-measured pressure. In addition, the mouse pointer changes to an anchor, so that you can relocate the anchor from the default position by clicking any measured pressure on the history plot. The anchor point is annotated with an arrow, and if you change the position of the anchor arrow, the model automatically recalculates.

When anchoring is enabled, the initial pressure is calculated and the input cell is read-only. When anchoring is disabled, the initial pressure cell is editable.

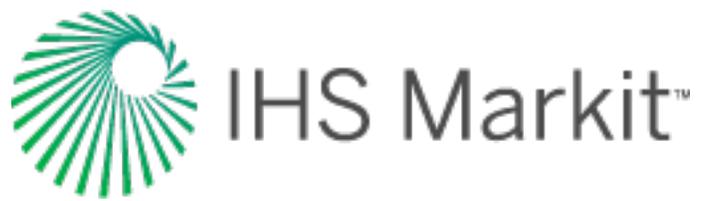

Note: The Anchor option is currently only available for analytical models in Calculate Pressure mode.

Constant-pressure boundaries

A constant-pressure boundary is a boundary that provides pressure support, and this kind of boundary can be used to model reservoirs with aquifer support or waterflooding.

You can introduce constant-pressure boundaries for the following analytical models:


- Vertical
- Vertical with fracture
- Horizontal
- General horizontal multfrac

To model constant-pressure boundaries:

1. Expand the **Boundary Type** section in the Analytical Model pane.

The boundary types for North, West, South, and East boundaries are listed.

2. Click the drop-down lists to change the boundary type to **Constant Pressure** for any of the boundaries.
3. If you set any of the boundaries to be a constant-pressure boundary, the model schematics and calculations change accordingly. No-flow boundaries are displayed in black, and constant-pressure boundaries are displayed in red.

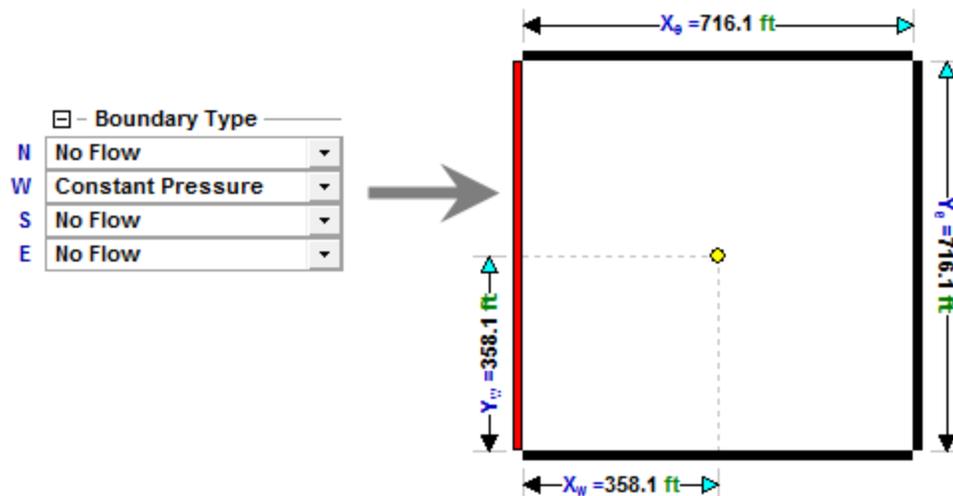




You can switch between boundary types by changing values in the drop-down lists, or by clicking boundaries in the schematics.

Injection

Analytical models can be used to simulate injection. To history match data from a well that has production as well as injection, import both the production and injection data (see [get well data into Harmony Enterprise](#)) into the Production editor.

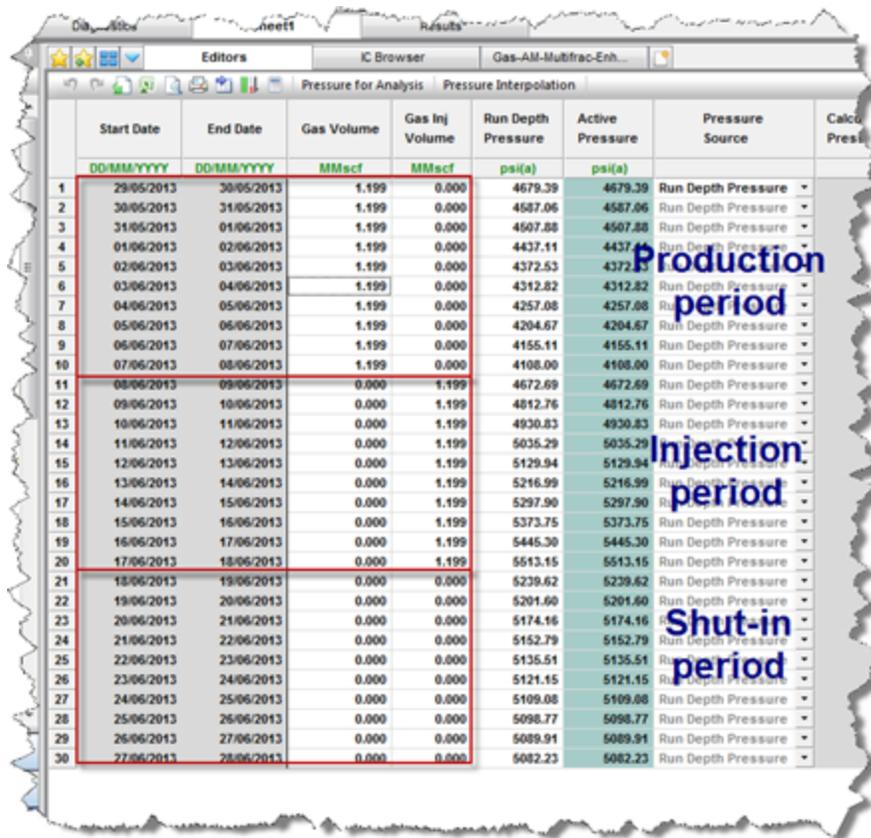

	Start Date	End Date	Gas Volume	Gas Inj Volume	Run Depth Pressure	Active Pressure	Pressure Source	Calculated Pressure
	DD/MM/YYYY	DD/MM/YYYY	MMscf	MMscf	psi(a)	psi(a)		
1	29/05/2013	30/05/2013	1.199	0.000	4679.39	4679.39	Run Depth Pressure	
2	30/05/2013	31/05/2013	1.199	0.000	4587.06	4587.06	Run Depth Pressure	
3	31/05/2013	01/06/2013	1.199	0.000	4507.88	4507.88	Run Depth Pressure	
4	01/06/2013	02/06/2013	1.199	0.000	4437.11	4437.11	Run Depth Pressure	
5	02/06/2013	03/06/2013	1.199	0.000	4372.53	4372.53	Run Depth Pressure	
6	03/06/2013	04/06/2013	1.199	0.000	4312.82	4312.82	Run Depth Pressure	
7	04/06/2013	05/06/2013	1.199	0.000	4257.08	4257.08	Run Depth Pressure	
8	05/06/2013	06/06/2013	1.199	0.000	4204.67	4204.67	Run Depth Pressure	
9	06/06/2013	07/06/2013	1.199	0.000	4155.11	4155.11	Run Depth Pressure	
10	07/06/2013	08/06/2013	1.199	0.000	4108.00	4108.00	Run Depth Pressure	
11	08/06/2013	09/06/2013	0.000	1.199	4672.69	4672.69	Run Depth Pressure	
12	09/06/2013	10/06/2013	0.000	1.199	4812.76	4812.76	Run Depth Pressure	
13	10/06/2013	11/06/2013	0.000	1.199	4930.83	4930.83	Run Depth Pressure	
14	11/06/2013	12/06/2013	0.000	1.199	5035.29	5035.29	Run Depth Pressure	
15	12/06/2013	13/06/2013	0.000	1.199	5129.94	5129.94	Run Depth Pressure	
16	13/06/2013	14/06/2013	0.000	1.199	5216.99	5216.99	Run Depth Pressure	
17	14/06/2013	15/06/2013	0.000	1.199	5297.90	5297.90	Run Depth Pressure	
18	15/06/2013	16/06/2013	0.000	1.199	5373.75	5373.75	Run Depth Pressure	
19	16/06/2013	17/06/2013	0.000	1.199	5445.30	5445.30	Run Depth Pressure	
20	17/06/2013	18/06/2013	0.000	1.199	5513.15	5513.15	Run Depth Pressure	
21	18/06/2013	19/06/2013	0.000	0.000	5239.62	5239.62	Run Depth Pressure	
22	19/06/2013	20/06/2013	0.000	0.000	5201.60	5201.60	Run Depth Pressure	
23	20/06/2013	21/06/2013	0.000	0.000	5174.16	5174.16	Run Depth Pressure	
24	21/06/2013	22/06/2013	0.000	0.000	5152.79	5152.79	Run Depth Pressure	
25	22/06/2013	23/06/2013	0.000	0.000	5135.51	5135.51	Run Depth Pressure	
26	23/06/2013	24/06/2013	0.000	0.000	5121.15	5121.15	Run Depth Pressure	
27	24/06/2013	25/06/2013	0.000	0.000	5109.08	5109.08	Run Depth Pressure	
28	25/06/2013	26/06/2013	0.000	0.000	5098.77	5098.77	Run Depth Pressure	
29	26/06/2013	27/06/2013	0.000	0.000	5089.91	5089.91	Run Depth Pressure	
30	27/06/2013	28/06/2013	0.000	0.000	5082.23	5082.23	Run Depth Pressure	

Both production and injection data are honored by the analytical model. If a certain time period has both production and injection data, Harmony Enterprise calculates the difference between the produced and injected volumes, and this calculated net production is used for modeling.

Running forecasts or test designs is similar for injection and production wells, but for injection wells:

- the Allow Injection checkbox must be selected.

[-] Forecast Options

Forecast Time Method: Duration

Start Date: 28/05/2013 DD/MM/YYYY

Forecast Flowing Pressure: Sandface

Allow Injection

Separate Recombined Gas

- injection rates are denoted using negative values.

Forecast Flowing Pressure: Sandface

Allow Injection

	Time			Control		Sandface Pressure		Gas Rate	
	Step Type	Duration	# of Steps	Interpolation	Control Type	Initial	Final	Initial	Final
		d				psi(a)	psi(a)	MMacfd	MMacfd
1	Arithmetic	20.0	10	Step	Gas Rate			-1.000	
2	Arithmetic			Step	Pressure				

Note: Since wellhead forecasting is not yet available for injection, if Wellhead is selected from the Forecast Flowing Pressure drop-down list, the Allow Injection checkbox is grayed-out.

Using automatic parameter estimation

Automatic parameter estimation (APE) is used to perform history matching. The steps to do this are: specify the data points to be used, specify the parameters to vary, and run APE.

Specify data points to be used by APE

By default, all data points are selected to be used by APE, except for the points that were filtered out using the filtering option within one of the analyses you created for that well previously. (Filtering can be performed within FMB, unconventional reservoir, or typecurve analyses.) Filtered-out points are treated as outliers, and are not honored by the APE algorithm. These points are displayed in gray in the History plot.

Additionally, you can deselect more data points by clicking the **Tools to Select Data Points for Best Fitting** icon from the History plot toolbar. (Click to select points, and right-click to deselect points.)




The data points you deselect are not necessarily outliers. They are simply points you do not want to use for history matching in this particular model (for example, if you want to only match the later portion of the production data). Points that are deselected for best fitting are also not honored by the APE algorithm, and are displayed as hollow points (0% weighting) in the History plot.


If it is important to match some specific portion of the data (for example, the last part of the production), you can weight these data points by clicking the **Weight Data Points** icon (). Weighted data points are displayed in a brighter color and are given a 100% weighting. (The weighting is displayed when you hover over the data point.)

Specify parameters to vary

To specify which parameters to vary, click the **Automatically calculate variable** checkbox to the right of the parameter's field.

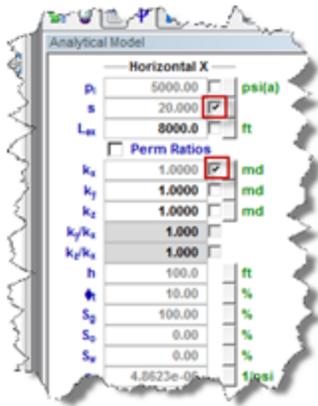


To vary a certain parameter within given limits, click the **View Defaults and Limits** button to the right of the field. Enter the appropriate values, and then click the **Accept** button.

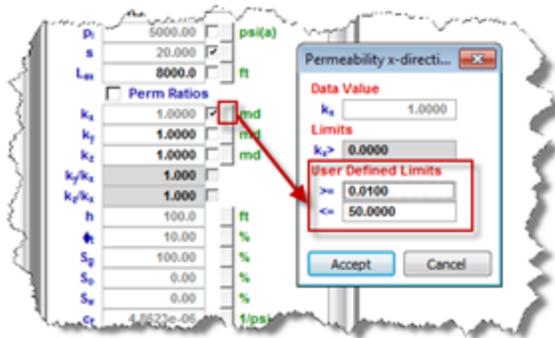

Run APE

To run automatic parameter estimation (APE), click the **APE** icon ().

While APE is running, selected parameters are automatically varied to minimize the error between the simulated pressure and the actual pressure. The updated simulated pressure is shown on the plots right away, and the **Rotating Gear** icon () on the header of the tab indicates that APE is running.

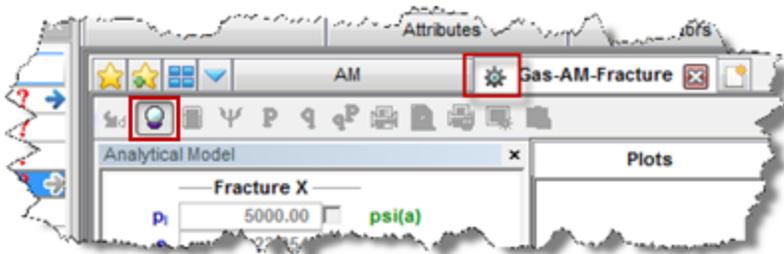



While APE is running, you can wait until it finishes, or if the history match looks good, you can stop the process by clicking the **APE** icon ().

After you have achieved your desired result in CalcP mode, we recommend that you switch to CalcR mode and verify if the calculated rate matches the actual rate. If these rates are not close, additional history matching should be done.

Numerical

The numerical model has been modified from Harmony to significantly reduce computation time, so that it is almost as fast as an analytical model. For more information, see [numerical model theory](#).

Note: This analysis works with your Harmony Reservoir™ license.

Before you start using the numerical model, make sure that all required information is added to the Harmony Enterprise project. Well production data (rates and sandface pressures) should be populated in the [Production editor](#), and reservoir and fluid properties should be specified in the [Properties editor](#). When you create a new numerical model, reservoir properties are automatically applied.

We recommend that you perform an analysis prior to using the numerical model as a starting point for other model parameters. For example, for conventional wells, a flowing material balance (FMB) gives an estimate for original fluid in-place, and the use of a [typecurve](#) analysis provides insight about permeability, skin, reservoir shape / size, and fracture properties. For unconventional wells, an [unconventional reservoir analysis](#) can be used to estimate permeability, fracture length, apparent conductivity, and the size of the stimulated reservoir volume.

You can [history match](#) your data using two methods (automatic parameter estimation (APE) and synthesize), but there are important differences.

APE — you can select one or more parameters, and the numerical model keeps the other parameters constant while the parameters being varied are adjusted to reduce the average error between the production history and the model's results.

Synthesize — does not change parameters, but rather all historical data and the parameters in the table are used to run the model. The "match" is what is displayed after the model has been run.

For more information, see the [primary toolbar](#) where both of these icons are described.

Numerical Model pane

In the Numerical Model pane, enter the required parameters, and select your calculation method. You can use the rates of any of the fluids displayed in the model to calculate rates for the remaining fluids, and the sandface flowing pressure. Or, you can use the sandface flowing pressure to calculate rates for all the fluids displayed in the model.

Numerical Model		
A_{SRV}	39	acres
$OGIP_F$		MMscf
$OGIP_A$		MMscf
	1431.467	
OOIP	1945.9	Mstb
OWIP	1114.7	Mstb
$OGIP_{SRV}$	668	MMscf
$OOIP_{SRV}$	908.1	Mstb
$OWIP_{SRV}$	520.2	Mstb
r_w	0.350	ft
<input checked="" type="checkbox"/> - Chg. Skin <input type="checkbox"/>		
Calculation Method:		
<input type="radio"/>	Use Gas Rate	
<input checked="" type="radio"/>	Use Oil Rate	
<input type="radio"/>	Use Water Rate	
	$p \geq$	14.7 psi(a)
<input type="radio"/>	Use Pressure	
	$q_g \leq$	MMscfd
	$q_o \leq$	bbl/d
	$q_w \leq$	bbl/d

For information on the numerical model's options, see [advanced options](#).

Important parameter limits

Note that these parameter limits apply:

- $k_x, k_y > 0$
- skin: $-8 \leq s < 200$
- s_{lim} (located within the Chg Skin section): $-8 \leq s_{lim} < 200$
- $MinXY / 2 < X_w < X_e - MinXY / 2$
- $MinXY / 2 < Y_w < Y_e - MinXY / 2$

Fluid type selection


With numerical worksheets, you can select these fluid types based on the fluid behavior you want to simulate:

- **Gas + Immobile Water** — used to create a single-phase model. Only gas flow is modeled in this case; water is considered immobile. If you create a Gas+Immobile Water numerical model for a liquid-rich gas well, the model is calculated in terms of recombined gas (see [recombination](#)).
- **Black Oil** — accounts for gas dissolved in liquid, but does not account for liquid vaporized in gas; therefore, you should not create a Black Oil model for liquid-rich gas wells. Oil and water phases can be turned off within the model.
- **Gas Condensate** — used to create a multiphase model that accounts for liquid vaporized in gas. This model should only be used for liquid-rich gas wells. Condensate and water phases can be turned off within the model.
- **Volatile Oil** — used to create a multiphase model that accounts for liquid vaporized in gas. The water phase can be turned off within the model.


Model geometry

Harmony Enterprise supports the following:


- **Vertical** — this model contains a vertical well located anywhere within a rectangular-shaped homogeneous reservoir.

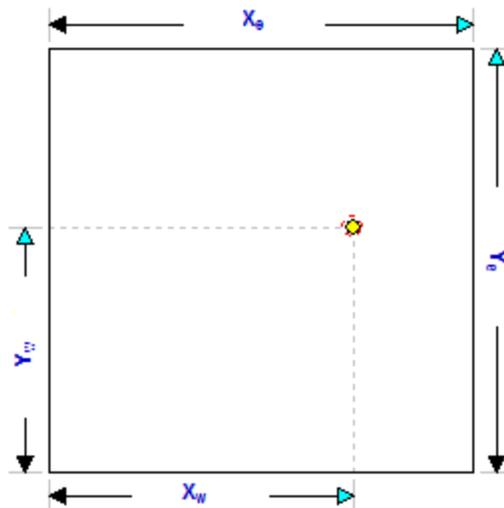

- **Vertical with Fracture** — this model contains a hydraulically fractured vertical well located in the center of a rectangular reservoir. The fracture is surrounded by a symmetrical region of higher permeability.

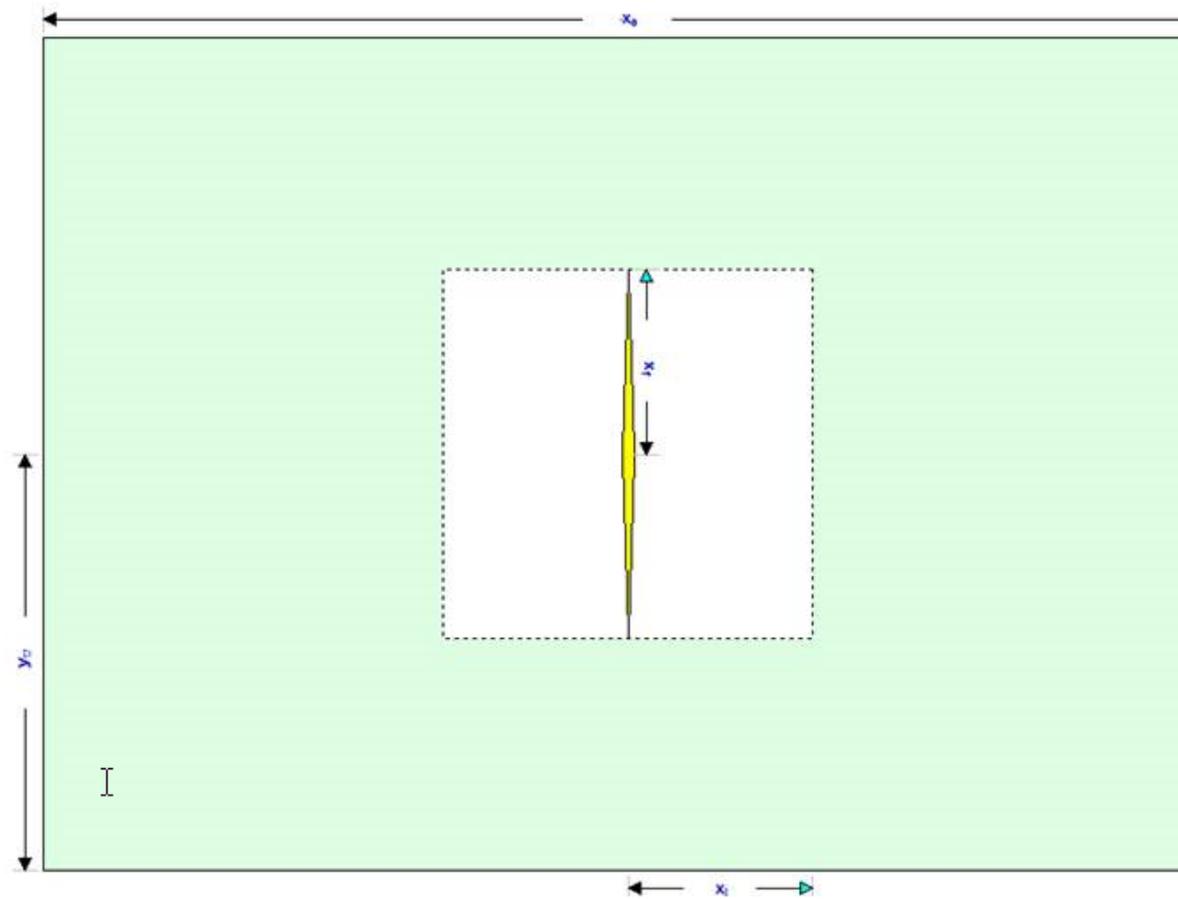

- **Horizontal Multifrac** — this model enables you to specify an enhanced permeability in a region around each fracture. It contains an inactive horizontal well fed by multiple identical, and equally spaced, transverse fractures. The length of the reservoir is defined by the horizontal well. The extent of the enhanced region in the y-direction is defined by the fracture length.

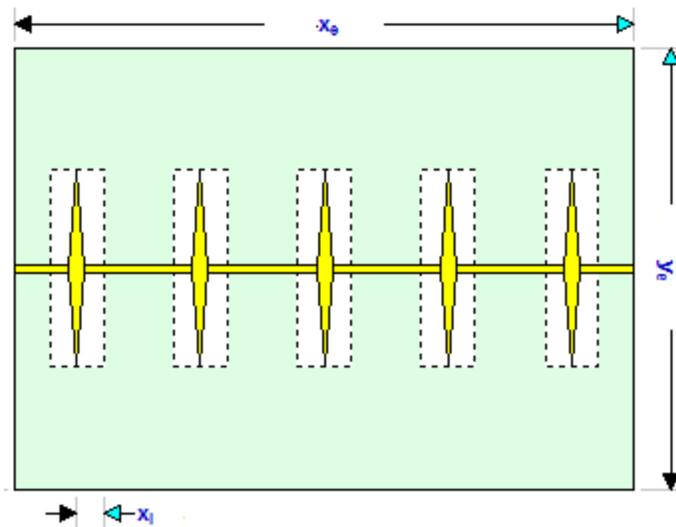

Primary toolbar

There are three toolbars: primary, Plots sub-tab, and Forecast sub-tab.

The primary toolbar has the following icons:

- 
Defaults — copies parameters from the Properties editor or other Reservoir worksheets. If you have any analytical gas horizontal multifrac model created for the same well, we recommend that you use it to populate the numerical model's parameters.

Or, if you want to copy only one parameter from an analysis, click the **View Defaults and Limits** button to the right of the field in the Numerical Model pane.

Note: Parameters copied from the reservoir or another analysis are displayed in a gray font. This indicates that they match the default. You can type new values for any parameter, or change values for some parameters by moving elements of the schematic. Parameters, which do not match the default, will be shown in a black font.

- 
Automatic Parameter Estimation (APE) — while APE is running, selected parameters are automatically varied to minimize the error between the simulated pressure / rate and the actual pressure / rate depending on the calculation method (rate or pressure calculation method — for additional information, see the numerical model pane). The updated simulated pressure / rate is shown on the plots while the calculation is running. While APE is running, the icon appears selected. To stop APE, click the icon again and it no longer appears selected. The model remains at the last parameter set and the history matching finishes calculating for the model. For more information, see using APE (same functionality as with the analytical worksheet).

Important: The purpose of history matching is to get the calculated pressures to reproduce actual pressures as closely as possible by changing the model's parameters. You can vary model parameters manually, or use APE.

-  **AutoCalc** — recalculates the history match and forecast automatically each time you change model parameters.
-  **Synthesize** — if you do not click the AutoCalc icon, you must click this icon every time you want to recalculate the model.
-  **Stop Synthesize** — stops the model's synthesize calculations.
-  **Use Sparse Production Data** — opens the Use Sparse Production Data dialog box where you specify the number of timesteps for simulation. This enables you to run simulations with a smaller number of timesteps in order to speed up calculation times. For more information, see [sparse data](#).

You can switch which plots are displayed in the dashboard by clicking the Add an available view icons (to the far right of the other icons on the primary toolbar).

-  — select a plot to be displayed in the top right corner of your dashboard.
-  — select a plot to be displayed in the lower right corner of your dashboard.

Sub-tabs

There are three sub-tabs: Plots, Forecast, and Tables.

Plots

This sub-tab displays a schematic and plot from your well data.

Toolbar

This toolbar has the following important icons:

-  **Reset Plot Attributes** — resets your plot attributes to default settings.
-  **Picture in Picture** — opens the Zoomed View popup where you can get a closeup view of your datasets.
-  **Weight Data Points** — used to emphasize matching to specific data points when using APE (for example, the last part of the production). The cursor changes to a [spray](#)

gun when clicked. Weighted data points are displayed in a brighter color and are given a 100% weighting; unweighted points are given a 10% weighting. (The weighting is displayed when you hover over the data point.)

-  **Copy** — copies plot data.
-  **Hide the Toolbar** — hides the toolbar. If you want the toolbar displayed, right-click the plot and select **Show Toolbar**.

After you click the **Synthesize** icon () in the primary toolbar and the calculations are complete, the icons listed below are enabled in your color-shading plots (vertical, vertical fracture, horizontal, horizontal multifrac). With these playback icons, you can see how pressures or saturations change through time. A schematic for your color-shading plot is displayed as long as you specify reservoir dimensions, and the schematic is updated as you change reservoir parameters (for example, X_e , Y_e). A tooltip displays your value and unit, as well as your cursor's x- and y-position within the model as you hover over your color-shading plot.

-  **Skip to Beginning** — resets the display to how things were prior to clicking the Synthesize icon.
-  **Step Back One Frame** — view calculations in reverse one frame at a time.
-  **Play in Reverse** — view calculations in reverse. You can click this icon multiple times to increase the speed of the playback.
-  **Stop** — stops the playback process.
-  **Play** — view calculations from start-to-finish. You can click this icon multiple times to increase the speed of the playback.
-  **Step Forward One Frame** — view calculations one frame at a time.
-  **Skip to End** — shows the last calculation.

For information on common plot icons, see [plot toolbars](#).

As the numerical model is calculating results, the color-shading plots update every 100 ms. These intervals are maintained in the steps that are available to play as an animation. When a model calculates very quickly, fewer steps are available, resulting in large jumps for the timesteps displayed.

Forecast

This sub-tab has a toolbar, and displays your forecast: options, constraints, and results.

After the model has been populated and calibrated to the production and pressure data through history matching, production forecasts can be created and compared under a variety of different constraints. This can also be used to create a production forecast for wells with no production history.


Toolbar

This toolbar has the same common icons described in [plot toolbars](#).


Forecast options

The Forecast Options section is where forecast periods are defined according to either durations (for example, months), or dates.

- Setting the forecast time method to **Duration** begins a forecast at a specified start date. Forecast periods are then defined in the forecast table according to a length of time (the default is months). For each forecast period, different operating conditions can be specified.
- Setting the forecast time method to **Start Date** creates a forecast of a specified length of time (the default is months). Forecast periods are then defined in the forecast table according to calendar dates.

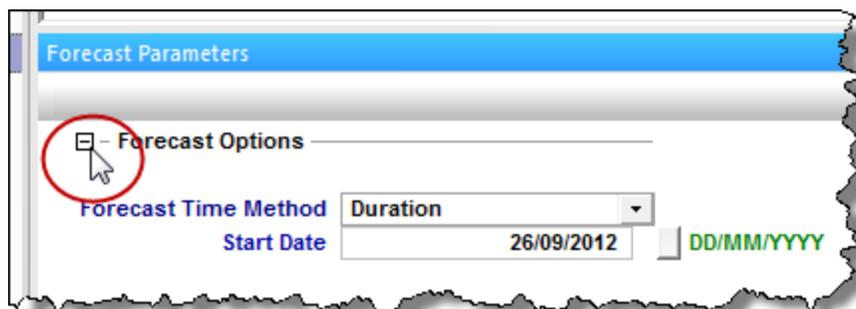

If you select **Duration** from the Forecast Time Method drop-down menu, the Start Date is automatically populated. (You can change this date later, if needed.)

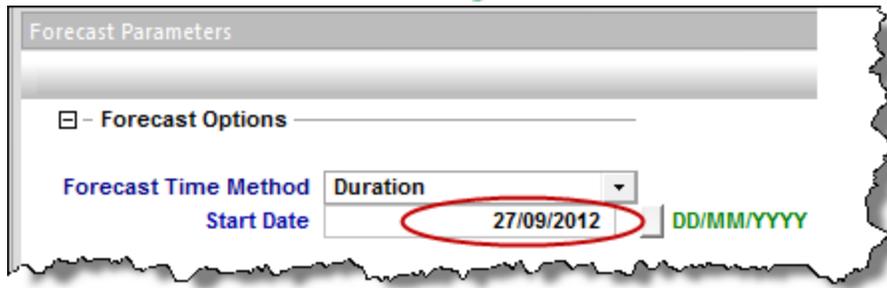


Forecast Parameters

[-] Forecast Options

Forecast Time Method: Duration

Start Date: 27/09/2012 DD/MM/YYYY

If you select **Start Date** from the Forecast Time Method drop-down menu, enter a value for Duration (that is, the total length of the forecast).

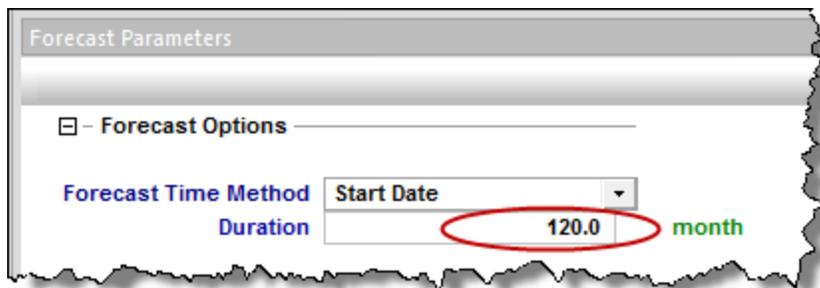

Forecast Parameters

[-] Forecast Options

Forecast Time Method: Start Date

Duration: 120.0 month

Further details about each forecast period are entered in the forecast options table.

	Time			Control		Sandface Pressure	
	Step Type	Duration	# of Steps	Interpolation Method	Control Type	Initial	Final
		month				psi(a)	psi(a)
1	Arithmetic	Required	Required	Step	Pressure	1626.85	

Each row of the table above represents a forecast period. An additional forecast period can be added each time an operational change is encountered (for example, the flowing pressure decreases when a compressor is added). To add a row, use the down arrow when the cursor is in a cell of the last existing row.

The forecast options table has the following sections:

- **Time** — defines the length of each forecast period and each timestep, and has the following columns:
 - Step Type — sets the spacing of the timesteps, and can be set to either Arithmetic or Logarithmic. The Arithmetic step type spaces the number of timesteps equally over the total duration of the period, whereas the Logarithmic step type

spaces the number of timesteps logarithmically (that is, increased density near the beginning of the forecast).

- Forecast Time Method (Duration / Start Date) — sets the length of the forecast period. If the Forecast Time Method is set to Duration, this column shows Duration. If the Forecast Time Method is set to Start Date, this column shows Start Date.
- # of Steps — sets the number of timesteps in the forecast period.
- **Control** — defines how the operating conditions change over the forecast period, and has the following columns:
 - Interpolation — can be set to either Step or Ramp. "Step" keeps the control type constant over the forecast period. "Ramp" varies the control type linearly from an initial value to a final value.
 - Control Type — sets what is used to calculate the forecast. For the numerical model, the forecast can be run using either flowing pressure, or one of the rates being analyzed.
- **Sandface Pressure** — if the Control Type is set to Pressure, this column is displayed, and it is used to set the flowing pressure for the forecast period. If Interpolation is set to Step, only the initial pressure cell is editable. If Interpolation is set to Ramp, initial pressure and final pressure are selectable.
- **<Fluid> Rate** — if the Control Type is set to a <Fluid> Rate, this column is displayed, and it is used to set the rate for the forecast period. If Interpolation is set to Step, only the initial rate's cell is editable. If Interpolation is set to Ramp, initial rate and final rate are editable.

Forecast constraints

The Forecast Constraints section is where maximum rate conditions and abandonment rate conditions for the forecast can be entered. Available constraints include the following:

- p_{\min} — the minimum allowable sandface flowing pressure during the forecast. In order to ensure flowing pressure does not go below this value, rates are adjusted.
- $(q_g)_{\max}$ — sets a maximum fluid rate during the forecast. In order to maintain the maximum fluid rate constraint, flowing pressure is adjusted.
- $(q_g)_{\text{ab}}$ — sets the abandonment fluid rate for the forecast. When the abandonment rate is reached, the forecast ends.

Forecast results

The Forecast Results section is where the results of the forecast are summarized. Available results depend on the analysis type, and could include the following:

- EUR — expected ultimate recovery.

Note: For wells with historical data, EUR is defined as the cumulative of the historical data up to the beginning of the forecast, after which time, the synthetic cumulative calculated from the model is used until the end of the forecast.

- RR — remaining recoverable.

Tables

The sub-tab displays your history match (after you use the [synthesize](#) or [APE](#) functionality) and forecast data (after you populate all the required values in the Forecast tab) in a tabular format.

Note: The single-phase model ([Gas + Immobile Water](#)) is the only model that displays the Blasingame plot on the dashboard. This plot is created using the gas analytical model with identical input parameters. (To generate a Blasingame plot for the [horizontal multfrac numerical model](#), Harmony uses a gas analytical [enhanced frac region](#) model. To generate a Blasingame plot for the vertical numerical model, Harmony Enterprise uses a gas analytical vertical model.)

For more information, see [tables](#).

Advanced numerical model options

Advanced numerical model options include:

- [Adsorption](#)
- [Geomechanical](#)
- [Refracturing](#)
- [Changing skin](#)
- [Sparse data](#)
- [Adjusting gridding](#)

Note: Automatic parameter estimation (APE) works the same way as with the analytical analysis. For more information, see [using APE](#).

Adsorption option

To include the effect of adsorbed gas, click the **Adsorption** checkbox in the Numerical Model pane. Note that this option cannot be used for models that include oil or condensate.

For more information, see [Langmuir isotherm](#).



Geomechanical option


To include the effects of changing formation compressibility and permeability related to reservoir pressure, click the **Geomechanical** checkbox in the Numerical Model pane.

For more information, see [geomechanical reservoir models](#).

Refracturing option

Horizontal multi-fractured wells are sometimes refractured after a few years of production. This is done to access new areas of the reservoir, and therefore increase production.

To use this feature, select the **Refrac** checkbox in the Numerical Model pane and set your refracturing date (t_{Refrac})

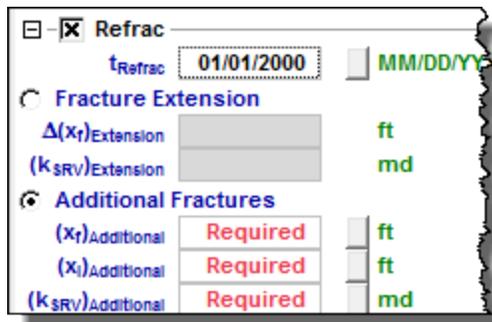


You can select either of these types of refracturing:


1. **Fracture Extension** — in this model, existing fractures are being extended.

Fracture Extension Schematic

Before Refracturing

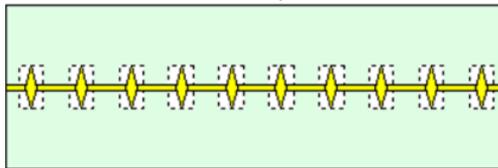


After Refracturing

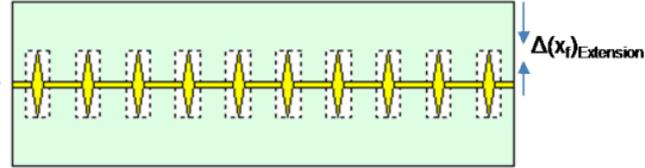


2. **Additional Fractures** — in this model, new fractures are being added in the middle, between existing fractures.

Additional Fractures Schematic

Before Refracturing

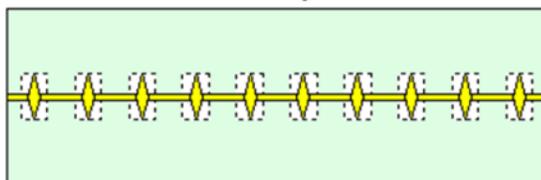

After Refracturing

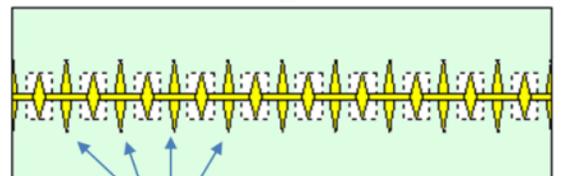

Additional Fractures

Make sure to set the required parameters.

- **Fracture Extension** model:

- $\Delta(x_f)_{\text{Extension}}$ — after refracturing, the fracture half-length becomes this much longer.
- $(k_{\text{SRV}})_{\text{Extension}}$ — the permeability of the stimulated region around the fractures *after* refracturing.

Note that after refracturing, the x-dimension of the stimulated region remains unchanged, and the y-dimension increases, such that it is equal to a new fracture length.

- **Additional Fractures** model:

- $(x_f)_{\text{Additional}}$ — the fracture half-length for additional fractures.
- $(X_f)_{\text{Additional}}$ — defines the x-dimension of the stimulated region around the additional fractures.
- $(k_{\text{SRV}})_{\text{Additional}}$ — the permeability of the stimulated region around the additional fractures.

Note that if the stimulated regions around the *original* fractures overlap with the stimulated regions around the *additional* fractures, permeability in the overlapping area is the maximum of k_{SRV} and $(k_{\text{SRV}})_{\text{Additional}}$.

Changing skin option

To include changing wellbore skin at specific points in time, click the **Chg Skin** checkbox in the Numerical Model pane.

For more information, see [time-dependent skin](#).

Sparse data option

When using sparse data, the numerical model uses coarse timesteps for calculations, and each coarse timestep contains n points.

Note: We recommend using sparse production data when running automatic parameter estimation (APE).

After you enter a value for n in the Use Sparse Production Data dialog box (opens when you click the **Use Sparse Data** icon () on the Numerical Model pane's toolbar), the history plot displays a new sparse set of production data to be used for calculations:

- Sparse rate data is displayed as thin lines (red for gas, green for oil or condensate, blue for water)
- Sparse flowing pressure is displayed as a thin brown line


To ensure that the sparse dataset represents the actual production history, adjust the value for n , as required.

Click the **Synthesize** icon () to run the model. Note that the calculated results correspond to coarse timesteps.

If you run APE, each calculation runs using coarse timesteps based on your n value.

Note: Your weighting and point selection are honored when running APE using sparse data.

While calculation results are slightly less accurate, the calculations run faster. After APE finds a match using sparse data, you can run one calculation using the entire production dataset ($n = 1$) to ensure that the match is still good.

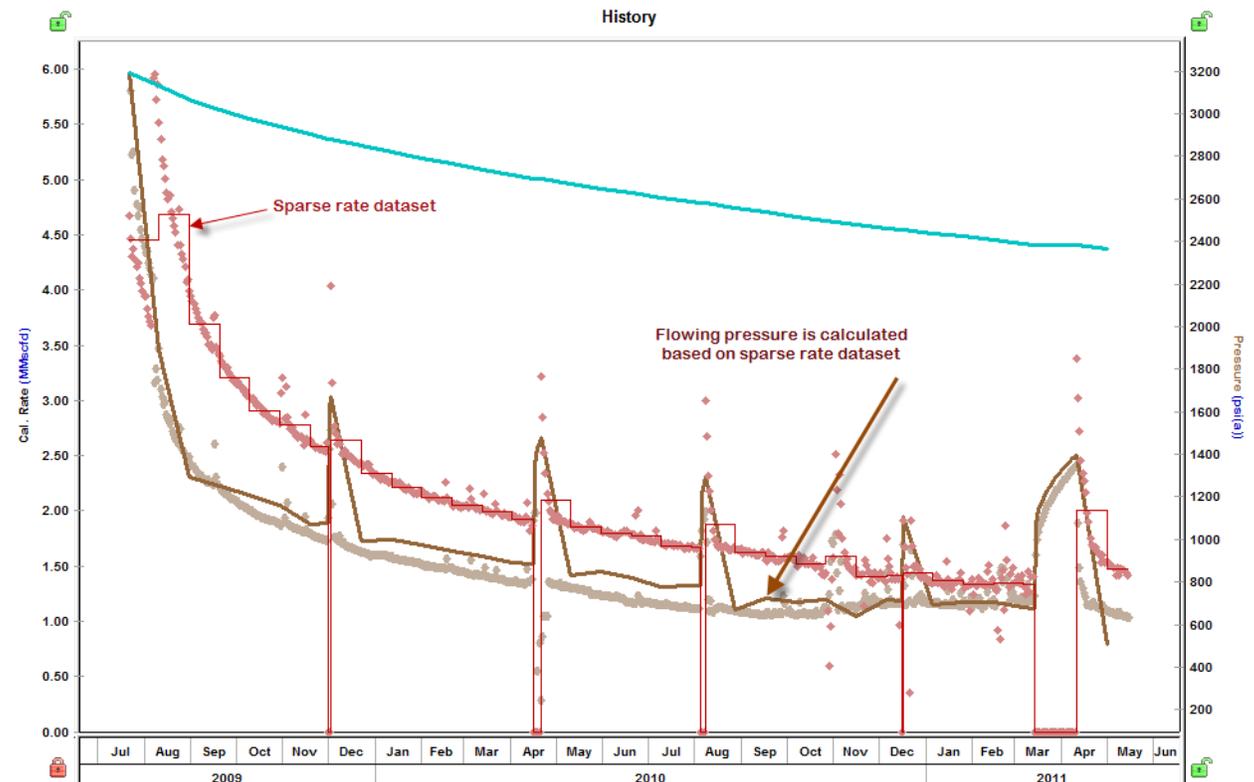

How sparse datasets are calculated


For Use Rate mode: Drawdowns are divided in coarse timesteps. Coarse timesteps contain n points, and the rate for each timestep is calculated as "total volume produced over the timestep" / "duration of the timestep". For buildups, all of the production data is used.

For Use Pressure mode: Drawdowns are divided in coarse timesteps. Coarse timesteps contain n points, and the pressure for each timestep is calculated as "last-measured pressure of the timestep". For buildups, all of the production data is used.

Tip: You can select a rate or pressure in the Calculation Method section.


Adjusting gridding

After you set your reservoir and completion dimensions, Harmony Enterprise creates an appropriate grid for the model to get accurate results with minimal calculation time. The default gridding settings work well most of the time, but in some cases, you may want to adjust the gridding options by clicking the **Options** tab in the Numerical Model pane.

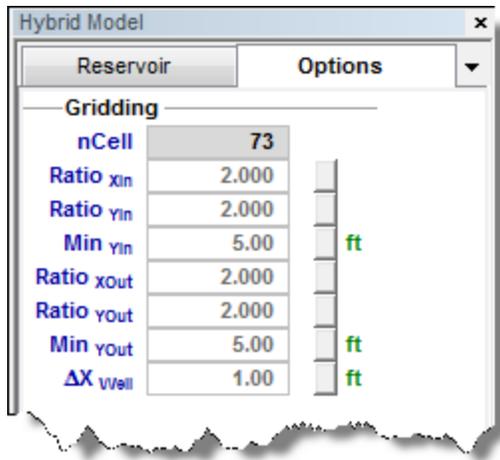

The figure below is a schematic of a model's grid for one quarter of a fracture stage.

- The *inner* zone has geometric gridding. The smallest cell in the inner zone is the cell containing the wellbore. Its dimensions are given by ΔX_{Well} and Min y_{in} . The geometric ratio for the x-dimensions of the grid cells is set by Ratio X_{in} and the geometric ratio for the y-dimensions of grid cells is set by Ratio Y_{in} .
- The *outer* zones have geometric gridding. The smallest cell in the outer zones have dimensions given by ΔX_{Well} and Min y_{Out} . The geometric ratio for the x-dimensions of grid cells is set by Ratio x_{Out} and the geometric ratio for y-dimensions of grid cells is set by Ratio y_{Out} .
- The *nCell* field displays the total number of grid cells used to model one quarter of a fracture stage. This number is important because it directly affects the model's calculation time. This field is populated after you run your model calculations.

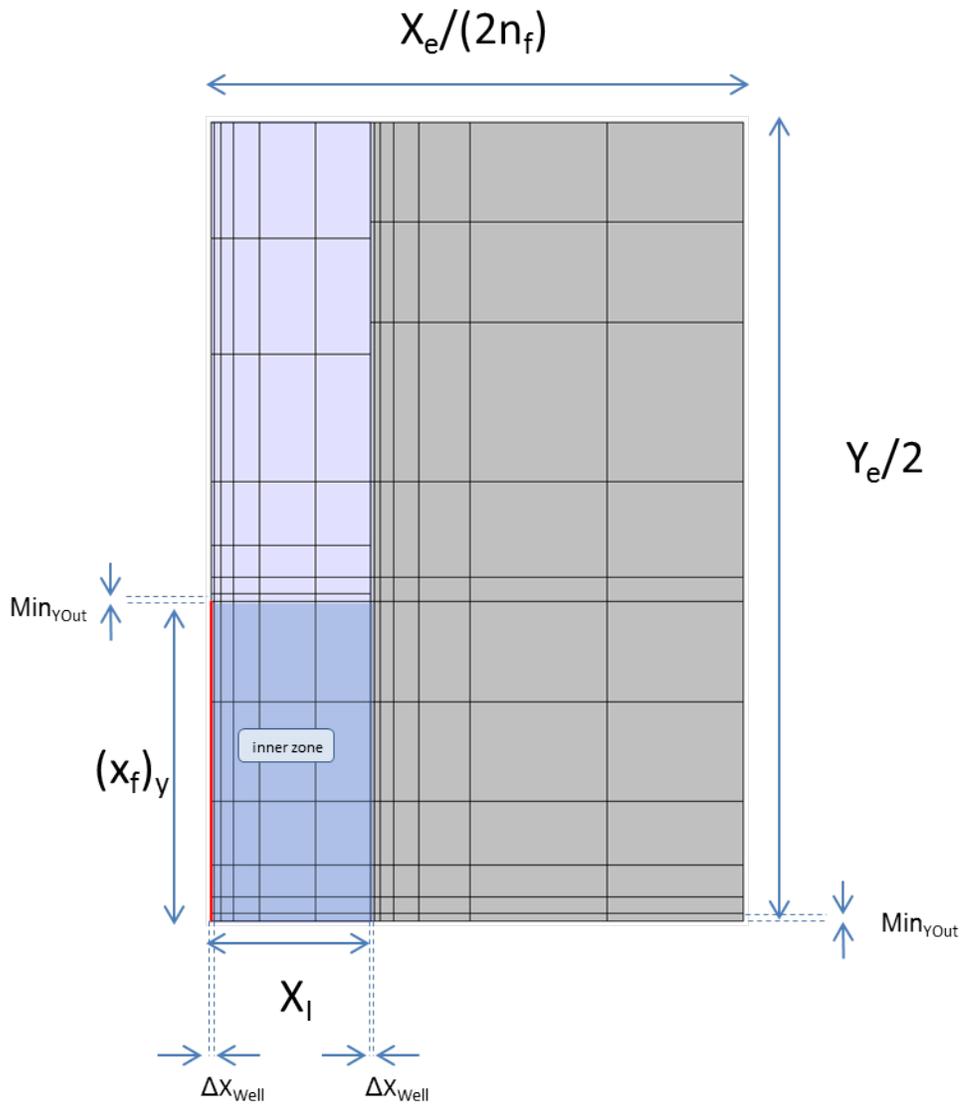


Probabilistic analysis

A probabilistic analysis works by repeatedly running a numerical model to generate a range of forecasts. For each run, the values for the majority of the parameters are taken from the base numerical model, and values for parameters that are uncertain, are drawn from given distributions. As a result, you get a range of forecasts and a distribution for values of expected ultimate recovery (EUR).

Note: This analysis works with your IHS Reservoir™ license.

A probabilistic analysis can be run on any numerical analysis with valid parameters and a forecast.

If values for some of a numerical model's parameters are uncertain, but you have some idea about their range and distribution, you can use a probabilistic analysis to account for this uncertainty.

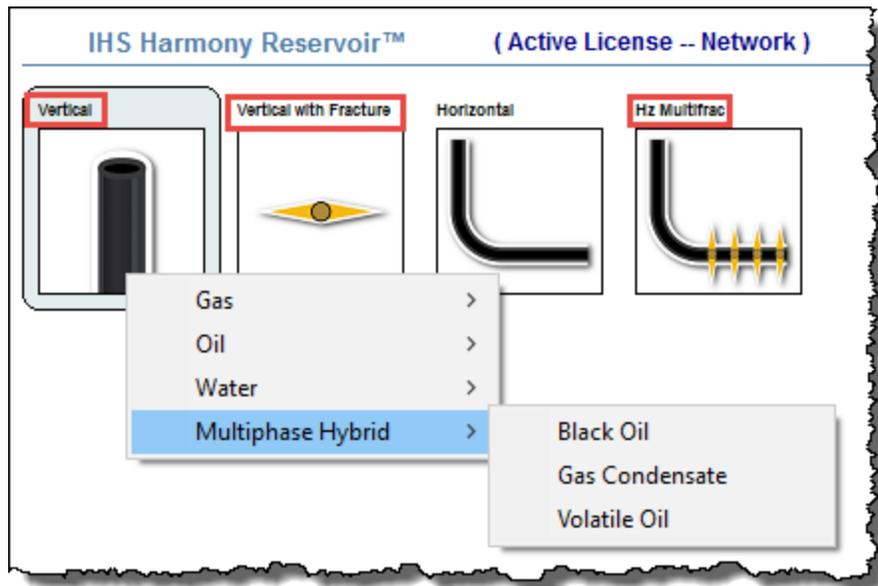

A probabilistic analysis has three tabs: Setup, Dependencies, and Results.

Setup tab

This tab contains parameters for the probabilistic analysis, and cards where you can define the distributions for parameters.

To indicate that a parameter's value is uncertain, click the **Add Parameters** icon (+ ▾), and select the parameter from the drop-down list. A distribution card is added to this tab where you can define the distribution to be used for this parameter.

Number of runs


Probabilistic simulation may take a long time, especially if the number of runs is high.

You can set your number of numerical-model runs in the simulation as follows:

- **Auto** — automatically detects when the P50 forecast has converged, and is no longer changing significantly with additional runs. We recommend using this setting because it can drastically reduce the number of runs required to achieve a good result.
- **Specific number** — runs the number of runs you specify.

Run simulation

After you add and set up distribution cards for all your uncertain parameters, click the **Run Simulation** button to start your simulation.

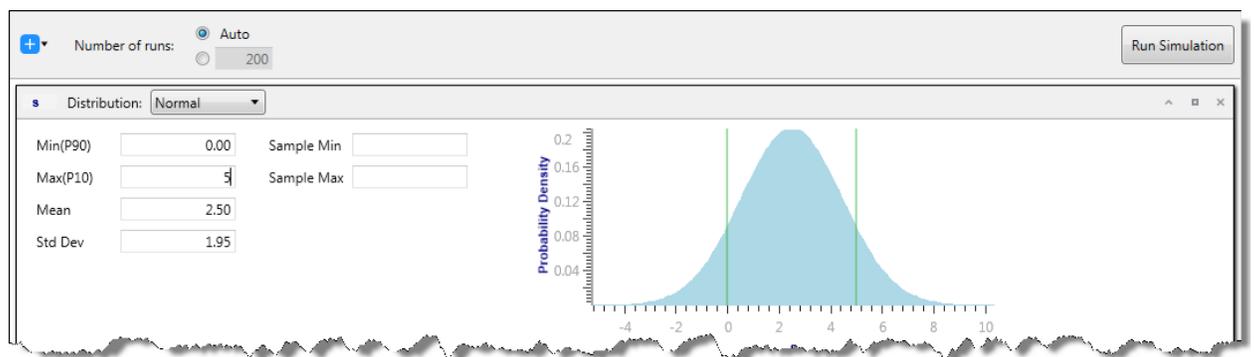


Distribution cards

After you add distribution cards for your uncertain parameters, you can select one of these distribution types: normal, log-normal, triangular, or uniform. For more information, see the descriptions below and probabilistic theory.

With some parameters, you can select automatic parameter estimation (**APE**) from the **Distribution** drop-down list. For more information, see APE.

Normal


By selecting Normal, you can apply a normal distribution to a particular parameter by entering a mean and variance, or a Min (P90) and Max (P10).

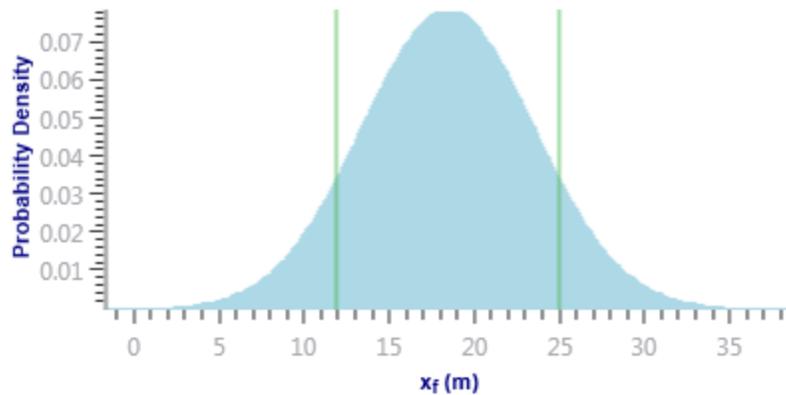

Additionally, you can enter a Sample Min and Sample Max for a normal distribution. In this case, the distribution is truncated, and the probability function is adjusted such that the total probability still sums up to 100%. For more information, see [truncated distributions](#).

Log-Normal


By selecting Log-Normal, you can apply a log-normal distribution to a particular parameter by entering a mean and variance, or a Min (P90) and Max (P10).

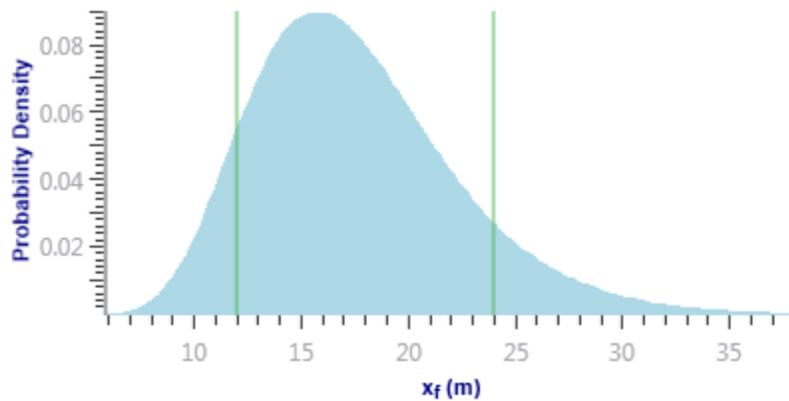

Additionally, you can enter a Sample Min and Sample Max for a log-normal distribution. In this case, the distribution is truncated, and the probability function is adjusted such that the total probability still sums up to 100%. For more information, see [truncated distributions](#).


Triangular

By selecting Triangular, you can apply a triangular distribution to a particular parameter by entering a minimum, mode, and maximum. The minimum and maximum values define the extent to which the probability density is equal to zero. The mode defines the peak.

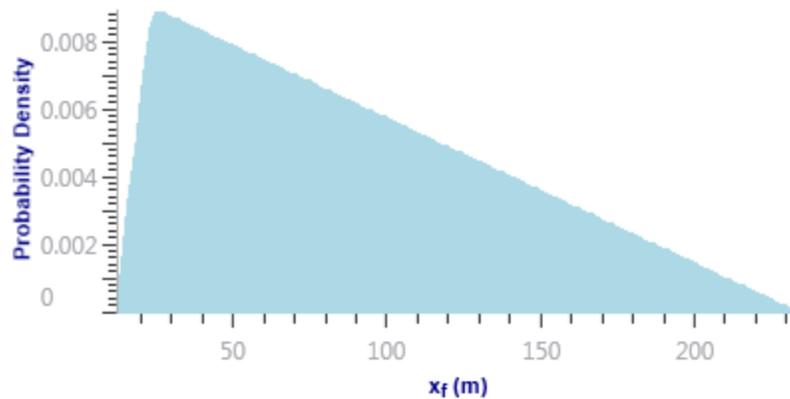

Uniform

By selecting Uniform, you can apply a uniform distribution to a particular parameter by entering a minimum and maximum.

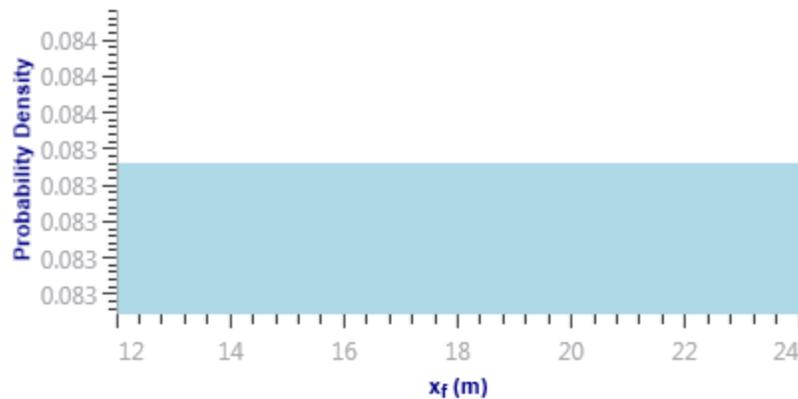

APE

In a typical scenario, you would run probabilistic analysis for a numerical model that matches historical data. However, after you change the values for uncertain parameters based on a given distribution, the history match is likely to get spoiled. You may want to adjust some other parameters to restore the match. To do this, set the distribution for those additional parameters to APE.

APE iteratively varies the value of a parameter and attempts to minimize the total error between the measured data and the simulated values. When the model uses a rate to calculate pressure, it minimizes the difference between the simulated and measured pressures. When the model uses pressure to calculate rates, it minimizes the difference between the measured and simulated primary fluid rate. Only the primary fluid rate match is minimized.

For each probabilistic run, the best match that APE could find is used to generate a forecast. There is no filtering of these results based on the quality of the match found by APE.

Example:

Assume you have a base numerical model that matches historical data, and this model has $x_f = 120$ ft. In reality, you are not certain if the value of x_f is indeed 120 ft, but based on the available information, you can confidently assume that x_f is varying between 80 ft and 160 ft, and can set the distribution for x_f to Normal.

For each run within the probabilistic analysis, Harmony Enterprise picks a value for x_f based on the given distribution. Simply changing the value for x_f results in runs that do not match the historical data.

To mitigate this problem, set the distribution for k_{SRV} and/or k_{matrix} to APE. In this case, for each run within the probabilistic analysis, Harmony Enterprise picks x_f based on the given distribution, and then runs APE on k_{SRV} and/or k_{matrix} (keeping x_f at the value drawn from the given distribution).

Using APE for some of the model's parameters ensures that all probabilistic runs match historical data as closely as possible. However, it is important to keep in mind that when using APE, each probabilistic run requires many runs of the numerical model; therefore, the overall simulation time increases significantly.


When running APE on a certain parameter, you can set user-defined limits for it by clicking the **View Defaults and Limits** button () to the right of the parameter in the base model.

Dependencies tab

After values are sampled during simulation, they are displayed in this tab where relationships between any of the uncertain parameters can be entered. For example, if you know that the porosity and permeability in the reservoir are proportional, a correlation coefficient can be entered to represent this relationship. These values must be between -1 and 1, and must be entered in the field that intersects the two desired variables.

Set Up		Dependencies	
	p_i	k_{inner}	μ_t
p_i	1		
k_{inner}		1	1.000
μ_t		1.000	1

The lower plot displays a cross-plot for the variables you select in the above table.

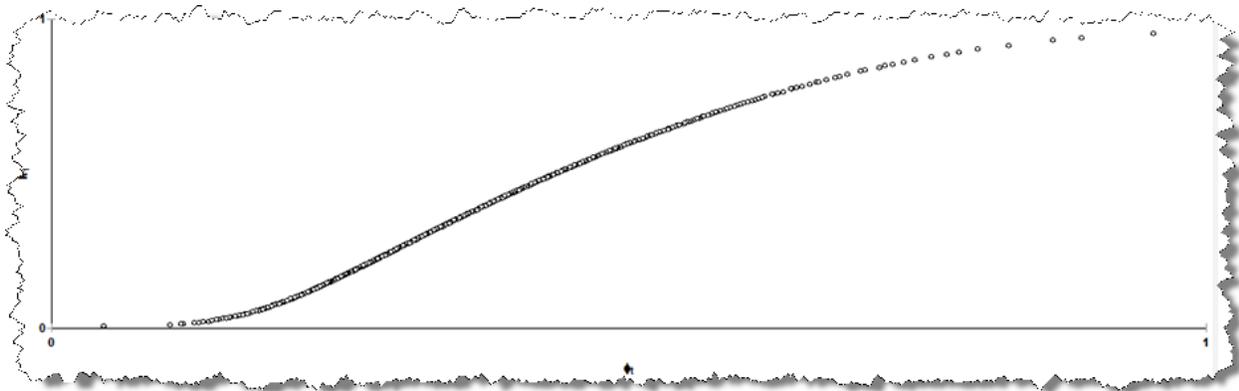


If you set up more than two parameters in the Setup tab, correlation coefficients between each pair of parameters are not independent. After you enter the correlation coefficients, a **Correct the matrix** button appears. Click this button to adjust the coefficients you enter, such that the coefficients for each pair become consistent.

Set Up		Dependencies	
Before			
	x_f	k_{matrix}	c_f
x_f	1	1.000	
k_{matrix}	1.000	1	0.200
c_f		0.200	1

Set Up		Dependencies	
After			
	x_f	k_{matrix}	c_f
x_f	1	0.980	0.002
k_{matrix}	0.980	1	0.197
c_f	0.002	0.197	1

Results tab

In this tab, a dashboard view is displayed.

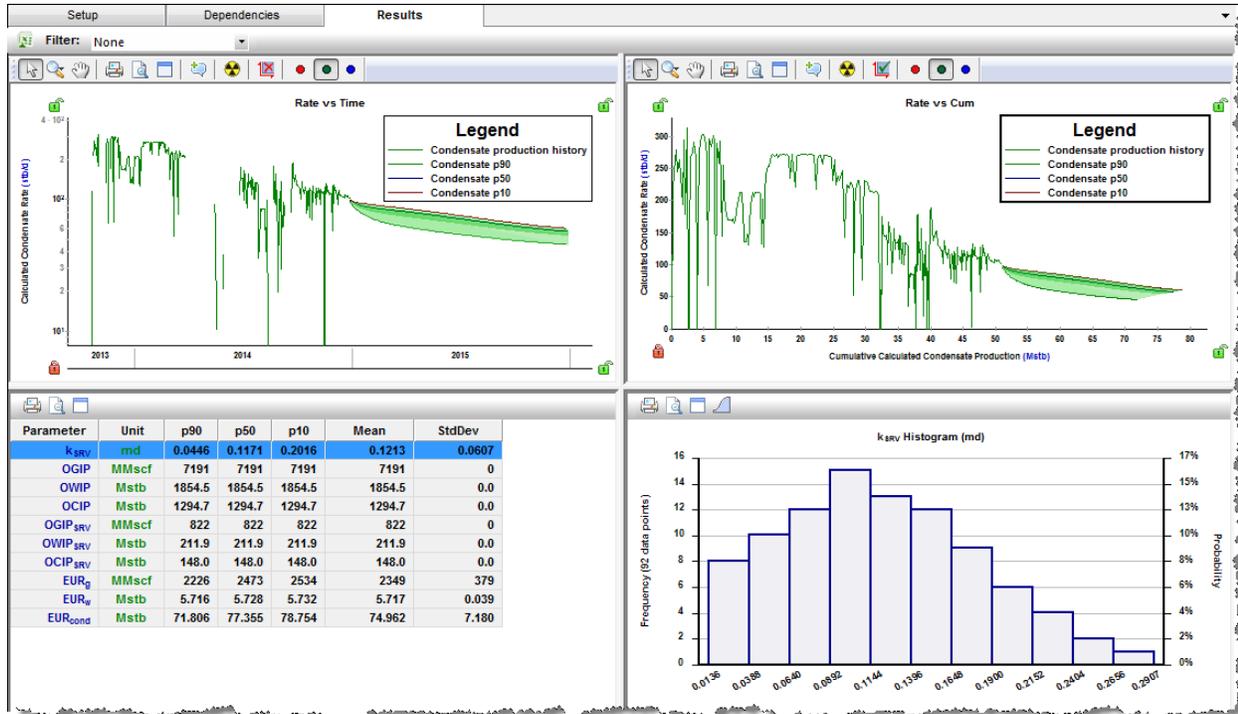

After your simulation runs are complete, you can export your data to Excel by clicking the **Export Data** icon ().

To take the varied parameters from the first probabilistic run and populate them in the base model in the Numerical Model pane, click the  icon.

Tip: If you see a warning that the "Source model changed", you may need to re-run the simulation on the Setup tab, or the base numerical model to clear the warning. The base model can get out-of-date when auto-calculate is deselected (see AutoCalc) and you make changes to parameters (that is, the results become out-of-date).


Filter — you can filter the cases / runs used in determining the P90, P50, and P10 based on a cut-off for the average error (E_{avg}) of each run. Therefore, in every model's run, an average error is determined: it is the average of the error between each measured data point and the synthetic one calculated by the model at that point. The average error is intended to give a sense of the quality of a match. This is true of any numerical or analytical model, as well as the runs calculated for the probabilistic cases. When you are viewing the variation of forecast outcomes based on a range of model parameters, it is

useful to be able to exclude any randomly selected parameter sets in the defined range that produce a “bad” match. Above the Rate vs Time plot, there is a drop-down list. By selecting **Add Filter**, you can type in a value for the error cut-off (*between 0 and 1*). Or you can select the default value of **None** (1.5 times the average of all the E_{avg} values from the probabilistic runs). When you type a value (instead of selecting the default None setting), all the table results and forecast ranges displayed only include runs that have an E_{avg} below this value.


Tip: Any E_{avg} cut-offs you enter are saved within your current session, but are not saved to the database.

By default, these views are displayed from the upper left to lower right:

- Rate vs Time — your historical data, range of generated forecasts (displayed as shaded areas), P90, P50, and P10 forecasts (see [percentile calculations](#)) are displayed. Data is displayed with rate on the y-axis and time on the x-axis. For multiphase cases, you can switch between available fluids by clicking one of the **Show Fluid** icons (  ).
- Rate vs Cumulative — your historical data, along with range of generated forecasts (displayed as shaded areas), P90, P50, and P10 forecasts (see [percentile calculations](#)) are displayed. Data is displayed with rate on the y-axis and cumulative production on the x-axis. For multiphase cases, you can switch between available fluids by clicking one of the **Show Fluid** icons (  ).
- Summary table — your parameters are displayed in a summary table.
- Parameter Distribution plot — when you select a parameter in the summary table, the lower-right plot displays the probability distribution for the selected parameter. You can display the distribution as either a Histogram or a cumulative distribution function (CDF). Toggle the **Switch Plot** icon ( / ) to switch between these two plots.
 - A histogram is a graphical representation of a distribution of data. It is an estimate of the probability distribution of a variable. The dataset is split up into bins (ranges) on the x-axis, and the y-axis plots the frequency at which the data falls in each bin. Only one result variable can be plotted on a histogram at a time.

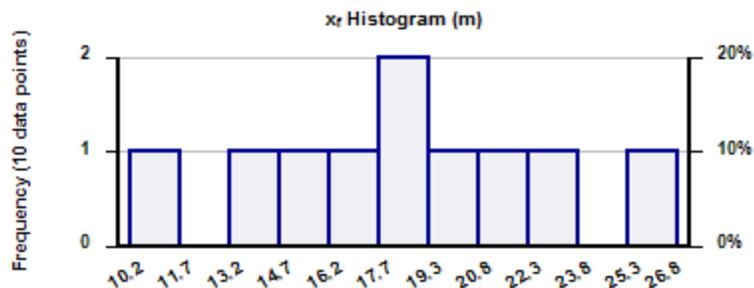

- A CDF calculates the probability that a random variable with a given probability distribution is found at a value less than or equal to "x". Only one result variable can be plotted on a CDF plot at a time. The black horizontal lines originating at cumulative frequencies of 10%, 50%, and 90% intersect the CDF curve, and then line up with the P90, P50, and P10 values of that dataset, respectively.

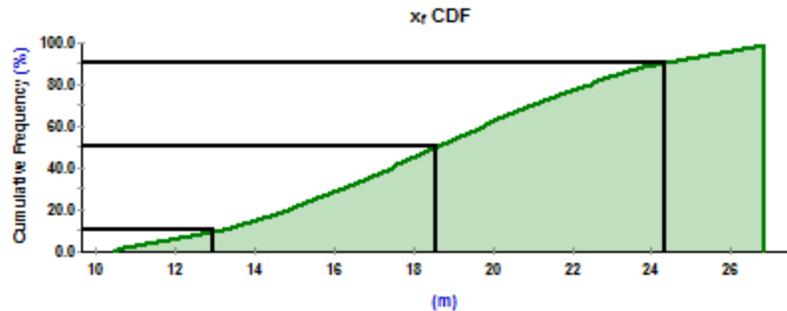


Displaying results

After the probabilistic simulation is complete, Harmony Enterprise creates P10, P50, and P90 forecasts based on all the successful runs within the probabilistic simulation. Remaining recoverable (RR) volumes and EUR volumes are calculated for these forecasts. For more information on calculations, see [percentile calculations](#).

In some regards, P10, P50, and P90 forecasts (also called percentile forecasts) can be treated as separate analyses in Harmony Enterprise. For example, you can:

- View percentile forecasts in the [Analysis Manager](#). You can toggle these forecasts on or off by clicking their checkboxes in the tree structure.
- Display percentile forecasts on decline plots. Toggling a percentile forecast on in the Analysis Manager displays the forecast in the decline plot.

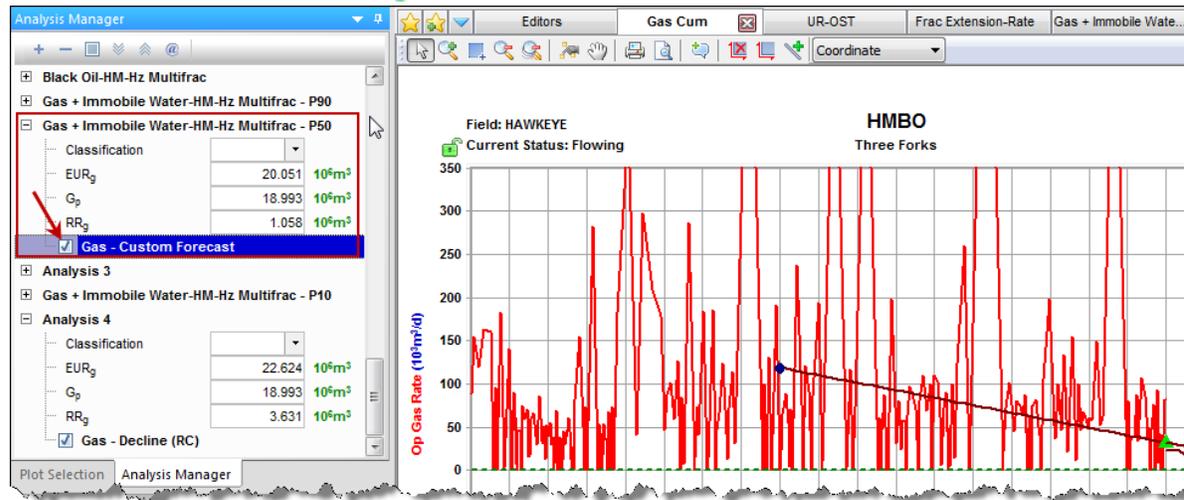

- Fit the decline analysis to match the percentile forecast. In the Analysis Parameters toolbar, you can click the **Fit Decline to Forecast and Selected Production Points** icon () to fit the decline analysis to your percentile forecast.
- Display RR and EUR for percentile forecasts in the Results Viewer.

		Summary Parameters		
		Gas		
	Display Name	Analysis Name	EUR _g	RR _g
			MMscf	MMscf
1	HMBO	Hybrid Model	391	4
2	HMBO	Hybrid Model - P10	428	41
3	HMBO	Hybrid Model - P50	408	21
4	HMBO	Hybrid Model - P90	391	4

Percentile calculations for input parameters, forecasts & EURs

After the probabilistic analysis is run, and all the runs are completed, Harmony Enterprise generates percentiles (P10, P50, P90) for input parameters, percentile forecasts, and percentile expected ultimate recovery (EUR) volumes. Details about these calculations are given below.

Percentile (P10, P50, and P90) input parameters and OFIPs

Input parameters and original fluid-in-place (OFIP) values are calculated using the following steps:

1. Consider all the successful runs generated by the probabilistic analysis.
2. Calculate P10 for a certain input parameter as a P10 percentile of values for this parameter for all successful runs. (Do the same thing for the P50 and P90 values.)
3. Calculate P10-OFIP as a P10 percentile of values for OFIP for all successful runs. (Do the same for the P50 and P90 OFIPs.)

Percentile (P10, P50, and P90) forecasts

These forecasts are calculated using the following steps:

1. Consider all the successful runs generated by the probabilistic analysis.
2. At each timestep, calculate a P10-rate as a P10 percentile of rates at this timestep for all successful runs. (Do the same for P50 and P90 rates.)
3. Calculate a P10 forecast by combining all the rates calculated in step 2. (Do the same for the P50 and P90 forecasts.)

Note: Percentile forecasts do not correspond to any of the runs generated by the probabilistic analysis. Therefore, there is no combination of input parameters that results in a forecast that is equal to the percentile forecast.

Percentile (P10, P50, and P90) EURs

EURs are calculated using the following steps:

1. Calculate P10, P50, and P90 remaining recoverable (RR) volumes by summing up production based on P10, P50, and P90 forecasts.
2. Calculate P10, P50, and P90 EURs as:
 - P10 EUR = Historical cumulative production + P10 RR
 - P50 EUR = Historical cumulative production + P50 RR
 - P90 EUR = Historical cumulative production + P90 RR

Note: The P10 EUR calculation shown above is *not the same* as considering EUR values for all the successful runs generated by a probabilistic analysis and calculating a P10 percentile among them. (This is also true for P50 and P90 EURs.)

Tips: speeding up the probabilistic analysis

With the probabilistic analysis, the numerical model is run multiples times; therefore, the simulation may take significant time. Below are few tips to make the probabilistic analysis run faster.

Base numerical model

Before setting up and running a probabilistic analysis, ensure that the base numerical model is in a good shape:

- The base model should match historical data reasonably well, and the simulation time for the base model should not be too long.
- If you are planning to use automatic parameter estimation (APE) within the probabilistic analysis, test APE on the same parameters for the base model *first*. Make sure you deselect outliers, and set user-defined limits for those parameters, if required.
- Consider using the sparse data option to speed up the base model. If this option increases speed and retains acceptable accuracy for the base numerical model, you can use it for the probabilistic analysis as well.
- Consider adjusting gridding to speed up the base model. If this option increases speed and retains acceptable accuracy for the base numerical model, you can use it for the probabilistic analysis as well.

APE

If some of the uncertain parameters are set to APE, the probabilistic analysis requires more numerical model runs, and therefore takes longer time. In many cases, it is required to have at least some of the model parameters varied by APE to achieve a history match for each probabilistic run. However, we recommend that you keep the number of such parameters to a minimum (one or two).

Changes that affect properties

Due to the way the numerical model uses properties, calculations can require additional time whenever properties change. Therefore, we recommend to *not* include the following parameters in the list of uncertain parameters:

- p_i (initial reservoir pressure)
- γ (permeability module under the Geomechanical group)
- Fluid saturations

- c_f (formation compressibility)
- ϕ_t (porosity)
- h (net pay)

Multi-well model

There are two types of multi-well model:

- Conventional
- Unconventional (beta)

Conventional multi-well model

With the conventional multi-well (CMW) model, you can simulate multiple wells using the *group* numerical model to history-match producing wells and forecast future production.

Note: This model works with your Harmony Reservoir™ license.

Before you start using the multi-well model, make sure that all required information is added to the Harmony Enterprise project:

- Populate sandface locations for each well in the Attributes tab.
- Populate well production data (rates and sandface pressures) in the Production editor for each well in the group.
- Specify reservoir and fluid properties in the Properties editor of the group. When you create a new multi-well model, group reservoir properties are automatically applied.
- Populating wellbore information (such as, a deviation survey, completion, and perforation data) is not required. However, we recommend populating this information because it helps to initiate the multi-well model with correct default settings.

We recommend that you perform analyses and/or modeling for individual wells prior to using the multi-well model. You can bring in parameters from individual well analyses as a starting point for the multi-well model. Additionally, you can perform certain group analyses. For example, a flowing material balance (FMB) performed on the group gives an estimate for original fluid in-place for the reservoir.

By default, the Plots tab opens (with the Wells button selected) with a dashboard with four plots. For more information, see dashboard.

Model creation

To create an CMW model:

1. Create a group (in the [Entity Viewer - Hierarchy](#) or [Entity Viewer - Custom](#)) that contains all the wells you want to include in the model.
2. Launch the group for analysis. For more information, see [selecting an entity for analysis](#).
3. Click the **Group** image and select **Multiphase Multi-well Model, Conventional**.

You can create a Black Oil or a Gas Condensate model:

- **Black Oil** — accounts for gas dissolved in liquid, but does not account for liquid vaporized in gas; therefore, you should not create a Black Oil model for a group that has liquid-rich gas as a gas type.
- **Gas Condensate** — used to create a multiphase model that accounts for liquid vaporized in gas. This model should only be used for groups that have liquid-rich gas as their gas type.
- **Volatile Oil** — used to create a multiphase model that accounts for liquid vaporized in gas. The water phase can be turned off within the model..


Note: For more information, see [modifications for the multiphase model](#).

Model geometry


This analysis currently supports vertical, vertical with fracture, and horizontal well completions. Wells are placed in the reservoir according to their actual locations (specified by sandface lat / long in the [Attributes tab](#)). Length and direction of horizontal wellbores are drawn according to L_e and Azimuth parameters.

Reservoir boundaries default to 1,320 ft (a 1/4 section) from the outermost wells. These boundaries can be adjusted using the  and  icons. For more information, see the [Schematic plot toolbar description](#).


This is a reservoir with well regions:

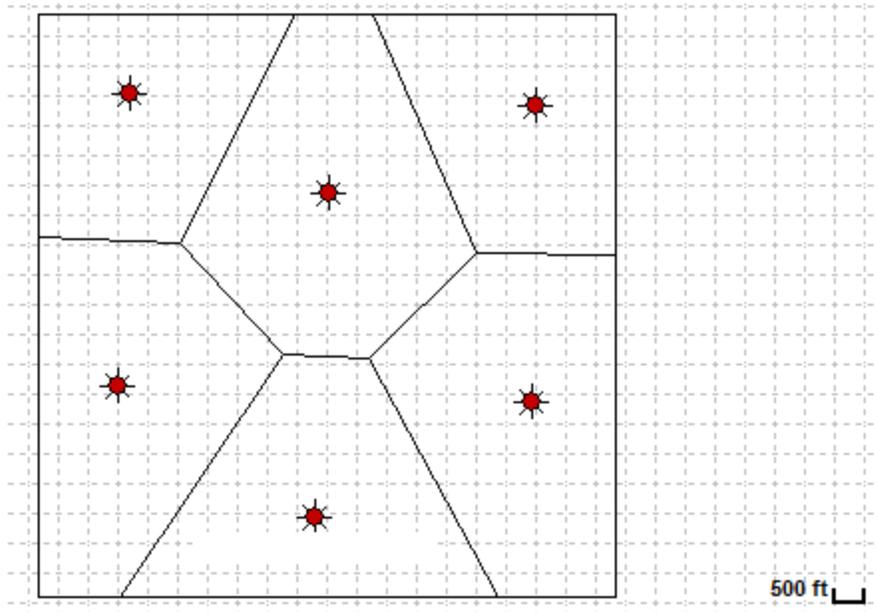

These are vertical wells with cell regions:

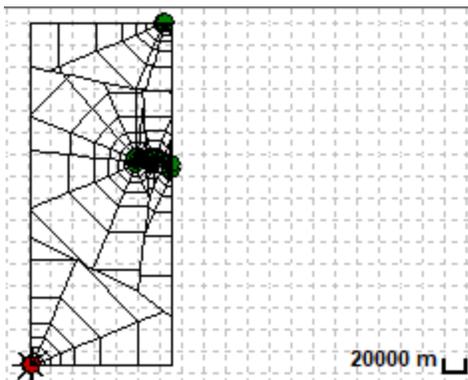

This is a horizontal well with cell regions:

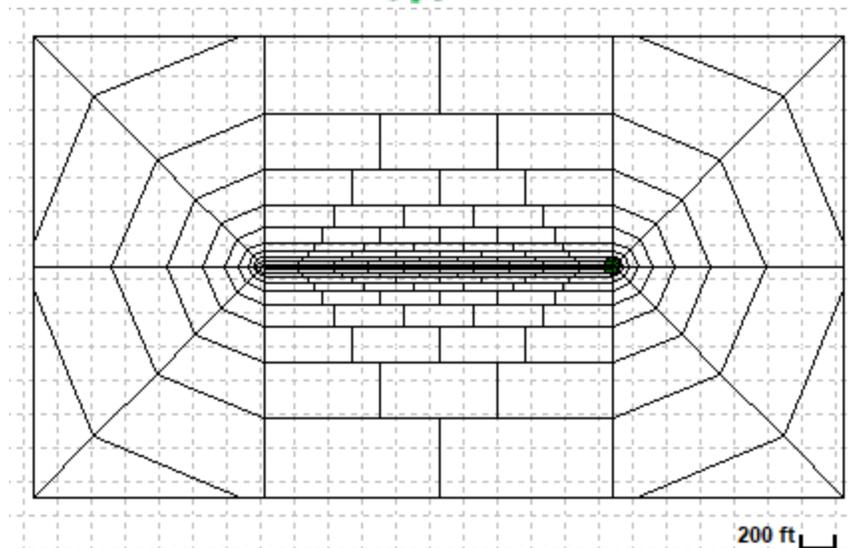

Setting model parameters

Well regions are automatically created for the model by drawing boundaries halfway between adjacent wells. These regions are used for setting parameters, such as net pay and permeability in the grid cells of each region. They do *not* represent no-flow boundaries.

To specify the properties for each region, select the well by clicking it in the schematic, or select the well from the drop-down menu, or use the arrows in the primary toolbar. When you click the **Wells** button, you can manually enter properties, or click the **Pull Defaults** icon in the primary toolbar to use values from analyses in the well.

The initial pressure, bubble-point pressure, compressibility, and area are specified in Reservoir, and are applied to the entire reservoir. If you have the Properties editor populated for the group before creating the Multi-well model, this information is pre-populated when the worksheet is created.

Primary toolbar

The primary toolbar has the following icons:

-  **Pull Defaults** — select from these options:

- **Group Properties** — copies default values from the Properties editor of the group.
- **Selected Well Properties** — copies default values from Properties editor of the selected well.
- **Group Analysis** — displays a sub-menu with all the other multi-well analyses for the group. (If there are no other multi-well analyses, this option is not displayed.) Selecting one of the existing analyses copies one multi-well analysis to another in the same group, which can be useful if you want to experiment with the copy of the analysis while preserving the original content. Note that the parameters on the Forecast tab are not copied.
- **Selected Well Analysis** — displays a sub-menu with all the analyses (that is, typecurve, analytical, and numerical) for the selected well. (If there are no other analyses, this option is not displayed.) Selecting one of the existing analyses, copies parameters of that analysis to the currently selected well.
- **Another Well in this Model** — displays a sub-menu with all the other wells in the same model. Select one of the wells to copy the calculation method, well parameters, and constraints from that well to the currently selected well (displayed in Wells under Selected Well).
-  **Push Defaults** — pushes well parameters, calculation method, and constraints from the currently selected well to the wells you select from the drop-down list.
-  **Synthesize** — click this icon every time you want to history-match and create a forecast.
-  **Stop Synthesize** — stops the model's synthesize calculations.
-  **Previous Well** — jumps to the previous well.
-  **Next Well** — jumps to the next consecutive well.
-  **Copy to / Paste from Clipboard** — copies / pastes entity parameters from the clipboard.

- Playback icons ()

After you click the **Synthesize** icon () in the primary toolbar and the calculations are complete, the icons listed below are enabled in the same toolbar. With these playback icons, you can see how pressures or saturations change through time. A tooltip displays the pressure or saturation value and unit, as you hover over your color-shading plot.

-  **Skip to Beginning** — displays the first timestep.
-  **Step Back One Frame** — view timesteps in reverse one frame at a time.
-  **Play in Reverse** — view timesteps in reverse. You can click this icon multiple times to increase the speed of the playback.
-  **Stop** — stops the playback process. As you hover over various cells in your well, the pressure or saturation is displayed.
-  **Play** — view timesteps from start-to-finish. You can click this icon multiple times to increase the speed of the playback.
-  **Step Forward One Frame** — view one frame at a time.
-  **Skip to End** — displays the last timestep.

Plots tab

This tab displays four plots in a [dashboard](#) and has two buttons in the lower left: Wells and Reservoir.

Tip: If the dashboard is blank, you need to provide well locations (latitude / longitude) for your wells. You can enter these latitudes and longitudes in the [Attributes tab](#), **Location** node.

Wells

When you click the **Wells** button, you can specify model parameters on a per-well basis.



Plots Forecast

Selected Well

100/03-31-064-12W5/00

Include

Completion Type

Vertical

k		md
s		
h		ft
μ		%
S _g		%
S _{cond}		%
S _w		%
r _w	0.350	ft
V _w	100.000	ft ³

Calculation Method for Production

Use Gas Rate

Use Condensate Rate

Use Water Rate

P_{min} 14.65 psi(a)

Use Pressure

(q_g)_{max} MMscfd

(q_c)_{max} stb/d

(q_w)_{max} stb/d

Calculation Method for Injection

Wells

These items apply to Wells:

- **Selected Well** drop-down list — select the well you want to modify within your multi-well group.
- **Include** — by default, all wells in the group are included in the model. Deselect **Include** to exclude the selected well from the model (it is modeled as a shut-in

well). If the well is excluded, you still need to set up valid parameters for it; the geometry of the well region is still being used to generate a grid used in the model. However, if the well is excluded, its production is not taken into account, and permeability for the whole well region (including fracture and SRV) is modeled to be equal to the matrix permeability (k_{matrix}).

- **Completion Type** drop-down list — select either **Vertical**, **Horizontal**, **Vertical with Fracture**.

If you select **Horizontal**, two parameters are displayed:

- **k** — permeability
- **s_f** — damage skin on fracture face

If you select **Horizontal**, two parameters are displayed:

- **L_e** — type your effective horizontal well length, or accept the default values from your perforation data in the Wellbore editor by clicking the **Pull Defaults** icon () in the primary toolbar. (You can accept wellbore data from the reservoir or an analysis.)
- **Azimuth** — is the angle between North and the wellbore. Type your value in degrees, or click the **Pull Defaults** icon to use the default values from your deviation-survey data in the Wellbore editor (as long as you have easting and northing data).
- In addition, two permeabilities must be entered: k_{xy} (permeability in the horizontal direction) and k_z / k_{zy} (permeability ratio).

If you select **Vertical with Fracture**, six parameters are displayed:

- **k** — permeability
- **x_f** — fracture half length
- **F_{CD}** — dimensionless fracture conductivity
- **k_fw_f** — fracture conductivity
- **Azimuth** — is the angle between North and the wellbore. Type your value in degrees, or click the **Pull Defaults** icon to use the default values from

your deviation-survey data in the Wellbore editor (as long as you have easting and northing data).

- s_f — damage skin on fracture face
- **Calculation Method for Production** — set if the selected well is to be operated at rate, or at pressure control.
- **Calculation Method for Injection** — if you have injection rates for your well in the Production editor, the Calculation Method for Injection section is enabled, and you can set controls to be used during injection.

Reservoir

When you click the **Reservoir** button, you can specify parameters that are used for the entire reservoir model.



Plots		Forecast
Gas Condensate		
<input checked="" type="checkbox"/>	Gas	
<input checked="" type="checkbox"/>	Condensate	
<input checked="" type="checkbox"/>	Water	
Reservoir		
P_i	1290.00	psi(a)
P_{dew}	1290.00	psi(a)
C_r	4.86e-06	1/psi
A	116145	acres
<input type="checkbox"/> - Aquifer		
<input type="checkbox"/> Edge Aquifer		
$OWIP_{EAQ}$		MMstb
k_{EAQ}		md
<input type="checkbox"/> Bottom Aquifer		
$OWIP_{BAQ}$		MMstb
k_{BAQ}		md
Reserves		
$OGIP_F$		MMscf
$OGIP_S$		MMscf
$OGIP$		MMscf
$OCIP$		Mstb
$OWIP$		Mstb

	Wells	
	Reservoir	

Fluid type selection

Click the checkboxes for the fluid phases you want to include in your model: **Gas**, **Oil (or Condensate)**, and/or **Water**.

Black Oil

Gas
 Oil
 Water

Reservoir

p_i 3000.00 psi(a)
 C_r 4.51e-06 1/psi

Aquifer

In the Aquifer section, you can have an aquifer edge, bottom, or both. In order to account for an aquifer in your reservoir, you need to connect it. For more information, see the [Connect Aquifer icon description](#).

If you select **Edge Aquifer**, you must specify values for $OWIP_{E\Delta q}$ and $k_{E\Delta q}$.

If you select **Bottom Aquifer**, you must specify values for $OWIP_{B\Delta q}$ and $k_{B\Delta q}$.

Aquifer

Edge Aquifer

$OWIP_{E\Delta q}$ 21.00 $10^6 m^3$
 $k_{E\Delta q}$ 21 mD

Bottom Aquifer

$OWIP_{B\Delta q}$ 21.00 $10^6 m^3$
 $k_{B\Delta q}$ 32 mD


Volumes

When you click the Volumes button, read-only values for Reservoir are displayed.

<screenshot>

Options


When you click the **Options** button, various gridding parameters are displayed. After you set your reservoir dimensions, well locations, and well completion parameters, the CMW model creates an appropriate grid to get accurate results with minimal calculation time. To display gridding, right-click the schematic plot and select **Show Grid Cells**.

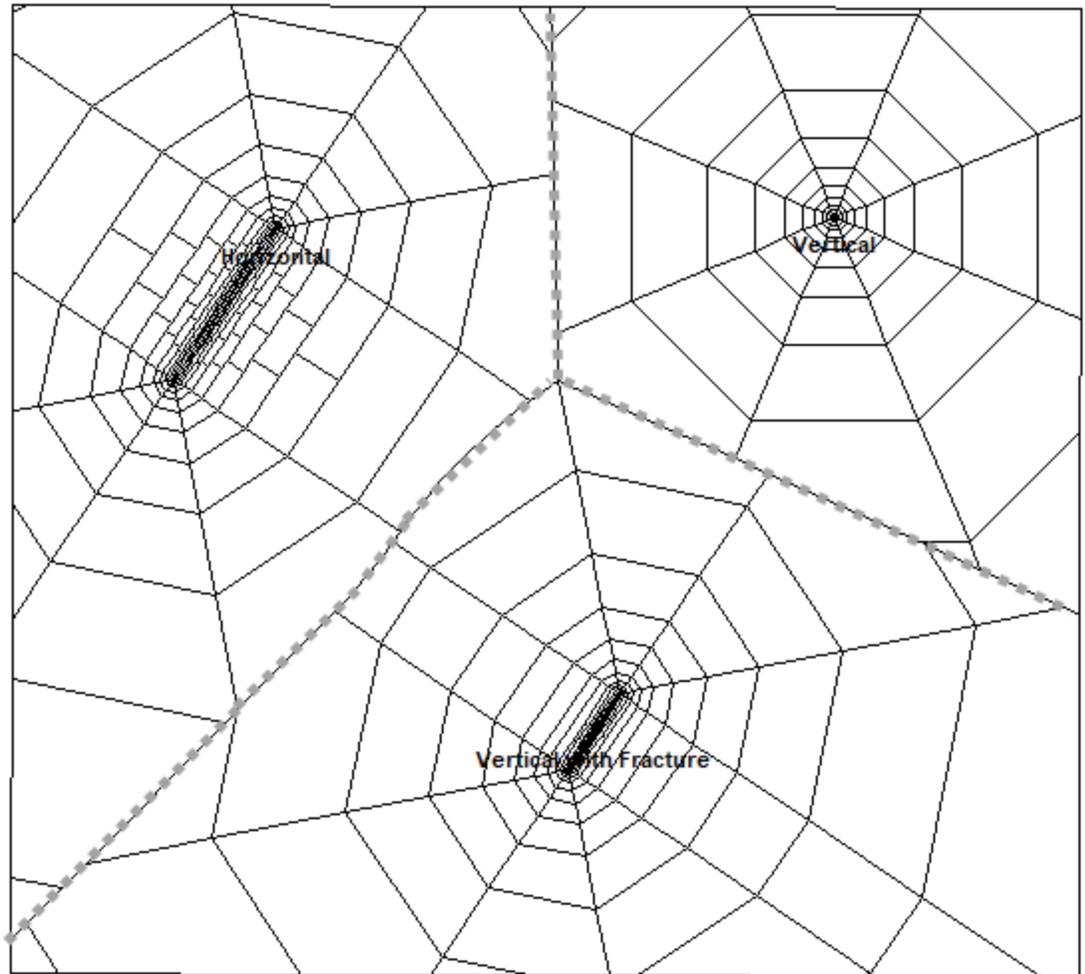

<screenshot of the Options tab>

Usually, the default gridding settings are fine, but in some cases, you may want to adjust the gridding parameters. Gridding parameters are as follows:

- **Ratio_{nwb}** — controls the size of the cells adjoining wellbores and fractures.
- **Ratio** — controls the rate at which cell sizes increase as they go further from the completion.

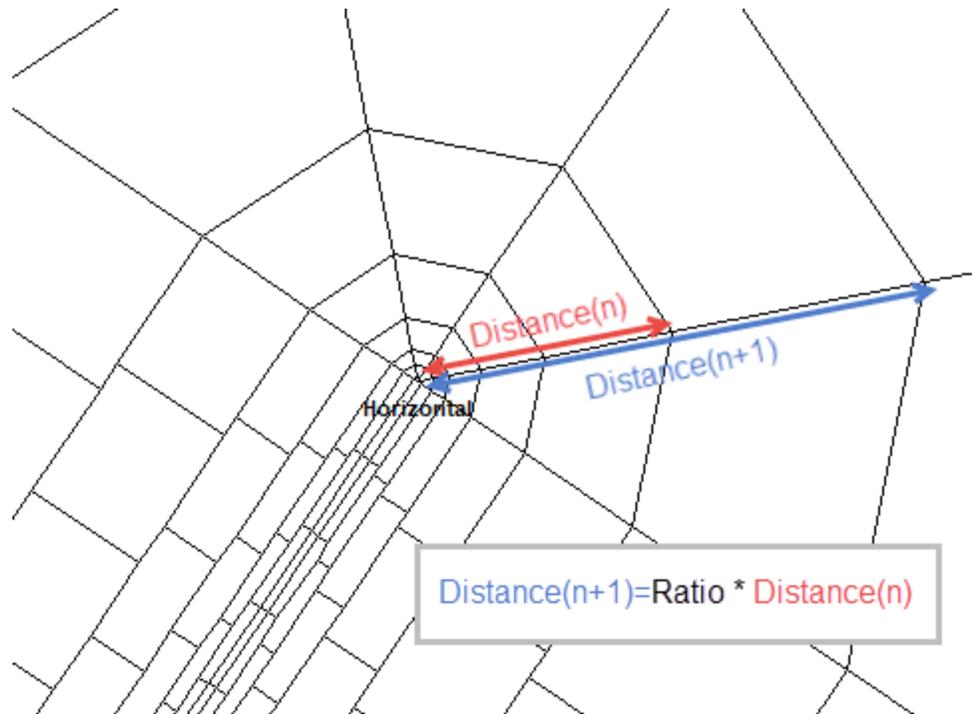

- **n_{sectors}** — the number of sectors used for the radial portion of the gridding. In the figure above, $n_{sectors} = 4$, so each half-circle is divided into four sectors.
- **n_{fracture}** — the fracture has one wellbore cell in the middle, and each wing of the fracture is divided into $n_{fracture}$ equal parts.
- **n_{HZWb}** — the horizontal wellbore is divided into n_{HZWb} equal parts.
- **n_{decrease}** — the row of cells adjoining the completion is divided into equal cells. The number of cells is equal to $2 * n_{fracture}$ for fracture completions and is equal to n_{HZWb} for horizontal completions. For each subsequent row, the number of cells decrease by $n_{decrease}$.

Dashboard

In the dashboard, there are four plots, which are described below.

Schematic plot

This plot displays a schematic view of the reservoir shape and the location of the wells within it, as per their sandface latitudes and longitudes. You can edit / rotate your reservoir, display shapefiles, view / edit your aquifer, and view shaded plots while you run a simulation.

These toolbar icons are unique to this plot:

 **Edit Reservoir Boundary** — click-and-drag to move your reservoir. Scroll your mouse wheel to expand or shrink your reservoir. White circles move an entire edge of the reservoir boundary. Red squares move only the selected vertex. Click a mid-section of a reservoir edge to add a new red vertex; note that your cursor changes to a cross.

 **Rotate Reservoir** — scroll your mouse wheel, or use your keyboard's arrow keys to rotate the boundaries of your reservoir (the physical location does *not* change) around the reservoir center. To rotate your reservoir around your cursor, press the **Ctrl** key and scroll / use your arrow keys.

 **Display Shapefile** — display the shapefile you have in the GIS tab in the multi-well model. If you do not have a shapefile, this icon is grayed-out.

 **Undo** — undoes your last action. (You cannot undo your zoom as this icon applies to resizing only.)

 **Redo** — reapplies the size of your reservoir to your previous settings. (You cannot redo your zoom as this icon applies to resizing only.)

 **Reset Reservoir Boundary** — resets your reservoir size to the default setting.


 **Connect Aquifer** — this icon is available if **Edge Aquifer** or **Bottom Aquifer** are selected in Reservoir. Click this icon to set the parts of the reservoir boundary that are connected to the edge or bottom of the aquifer. Segments of the boundary that are highlighted in blue are connected to the edge of the aquifer. By default, the entire reservoir boundary is connected to the aquifer, but you can select and deselect edges by clicking them. Cells that are highlighted in blue are connected to the bottom of the aquifer. (The mouse cursor becomes blue when you are in connect-aquifer-selection mode.) You can also select **Connect All to Aquifer** or **Deselect All from Aquifer** for your cell regions by right-clicking the schematic.

Pressure ▾


Shaded Plot Display Mode — this drop-down list becomes available after the model has been synthesized. Use this drop-down list to select which property you want to display in each grid cell. You can select one of the following properties to display it: Pressure, Saturations (color scheme based on saturations of all three phases), Gas Saturation, Oil Saturation, Water Saturation, Permeability, Net Pay, or Porosity.

For information on common plot icons, see [plot toolbars](#).

After you click the **Synthesize** icon () in the primary toolbar, the synthesis proceeds. Position lines are displayed to indicate calculation progress. The shaded plot displays the distribution of pressure or saturation at the timestep that has just been calculated (as indicated by the timestamp in the lower left corner, which displays the exact date and time). After the calculation is completed, these Position lines can be dragged to the moment in time you want to examine more closely, and all plots are synchronized.

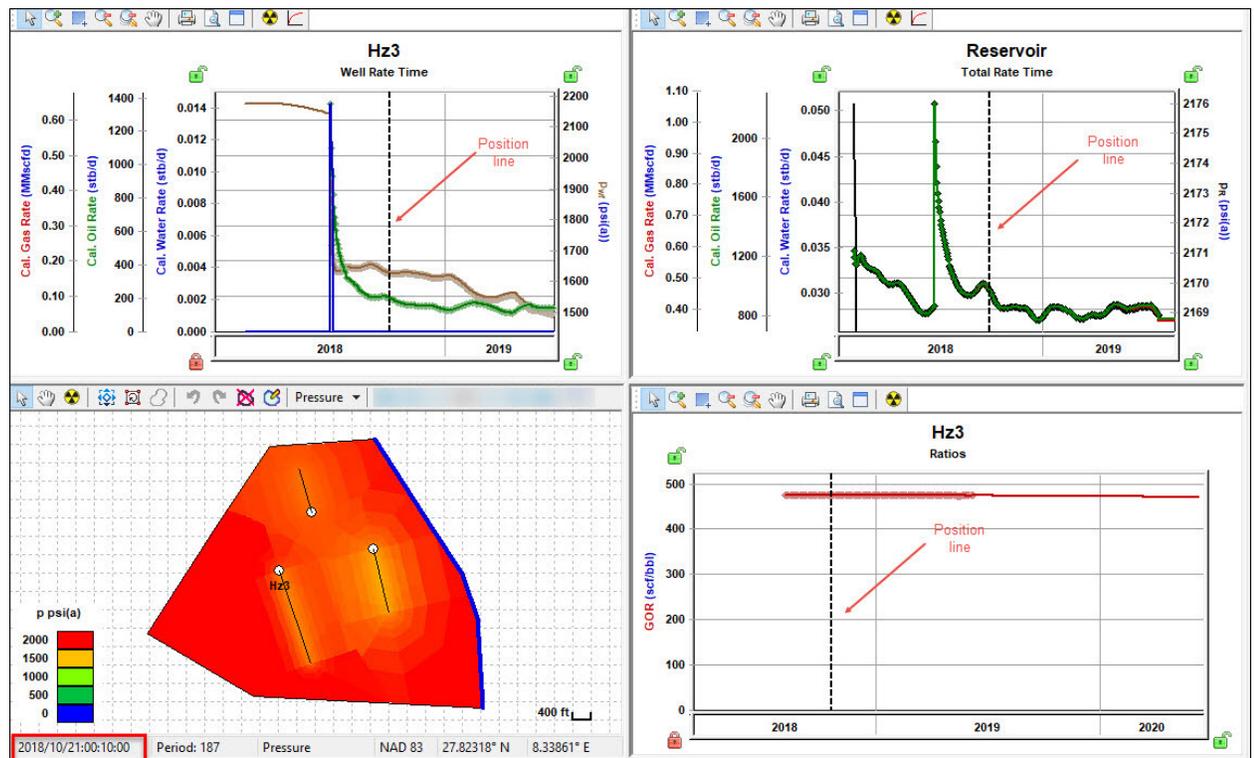

If you find that the color scale for your shaded plot needs adjusting, right-click the legend and select **Customize Color Scale**, and then type customized min and max values. To revert back to the default min and max values, right-click the legend and select **Reset Color Scale**.

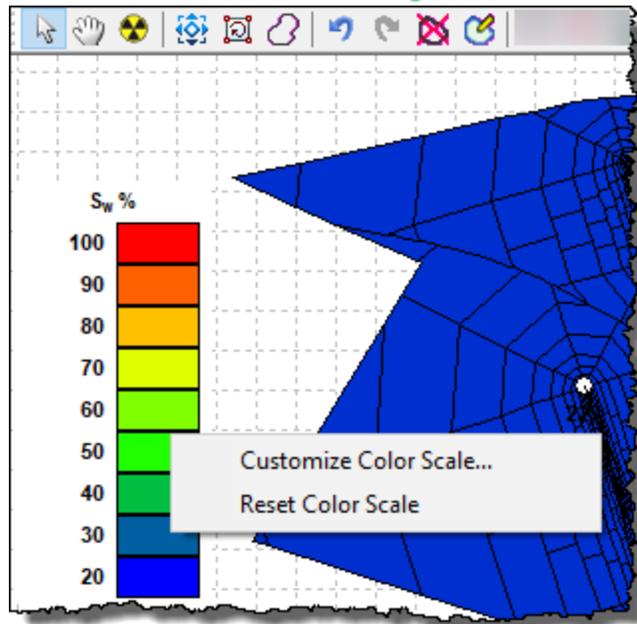

Note: After you click the **Shaded Plot Display Mode** drop-down list and select an option, you can view values for each cell region by hovering over the shaded plot. Tooltips are displayed for each cell region.

Context menu

Right-clicking the reservoir view for your wells lists these options:

- **Reservoir Region** — show / hide the reservoir boundary.
- **Wells** — show / hide the wells in the reservoir.
- **Well Names** — show / hide the well names in the reservoir.
- **Well Regions** — show / hide the boundaries of the well regions.
- **Cell Regions** — show / hide the grid cell boundaries for each well in the reservoir.
- **Selected Well** — show / hide the well name for the selected well.
- **Scale Gridline** — show / hide gridlines with a scale marker.

- **Connect All to Aquifer** — when **Bottom Aquifer** has been selected in the Aquifer section of Reservoir and you are in aquifer-selection mode, you can select all of the cell regions at once by selecting this option.
- **Disconnect All from Aquifer** — when **Bottom Aquifer** has been selected in the Aquifer section of Reservoir and you are in aquifer-selection mode, you can deselect all of the cell regions at once by selecting this option.
- **Copy Lat / Long to Clipboard** — copies the latitude and longitude of the current position of the mouse pointer. These latitude / longitude values can be used to add a new infill well at the location you want:
 - Move the mouse pointer to the location for the new infill well; then, right-click and select **Copy Lat / Long to Clipboard**.
 - Create a new well using the Entity Viewer - Hierarchy. For more information, see adding an entity.
 - Open the Attributes tab for this well and paste the surface latitude and longitude from the clipboard.
 - Add this new well to the multi-well group previously used to run the multi-well analysis. (You can drag-and-drop the new well from the Entity Viewer - Hierarchy to the Entity Viewer - Custom.)

Ratios plot

This plot displays historical and simulated ratios for the selected well. For a description of its common icons, see toolbars.

Well Rate Time plot

This plot displays historical and simulated rates and pressure for a single well. To switch wells, you can:

- Click the arrows in the main toolbar.
- Click a well in the schematic plot.
- Select a different well from the **Select Well** drop-down list.

For a description of its common icons, see toolbars.

Total Rate / Cum Time plot

This plot displays the total historical and simulated rates / cumulative production for the entire reservoir and the reservoir pressure. This plot has one unique toolbar icon:

 **Switch to Rate vs Time / Switch to Cumulative vs Time** — toggle between these two views. (Only available on the Reservoir Rate vs Time plot, *not* on individual well plots.)

Forecast tab

This tab has the same features as the numerical Forecast sub-tab, but you have the option to display all wells in the group, or individual wells.

Forecast Plot

If **All Wells** is selected in the Select Well drop-down list, the Forecast plot displays group-level rates and reservoir pressures. If one of the wells is selected in the Select Well drop-down list, the Forecast plot displays rates and flowing pressures for that selected well.

Forecast Options

Use the Select Well drop-down list to pick any individual well or All Wells. Select one of the wells to see forecast settings for just that well in the Forecast table, or select **All Wells** to see forecast settings for all the wells together.

The Forecast Start Date is set for the entire model (the forecast for *all* the wells starts at this given date).

The values in the Duration column are shared between all the wells in the model.

Forecast Constraints are applied for all of the wells in the model.

After you set up a valid forecast and synthesize it, the Forecast Results table displays EUR, RR, and historical volumes for each well for each of the fluid phases available in the model.

Forecast Injection

To forecast injection for any well, select one of these options from the **Control Type** drop-down list:

- **Gas Inj Rate** — the forecast at a given gas injection rate.
- **Water Inj Rate** — the forecast at a given water injection rate.
- **Pressure (Inj Gas)** — the forecast at a given sandface flowing pressure. (This pressure is reached by injecting gas.)
- **Pressure (Inj Water)** — the forecast at a given sandface flowing pressure. (This pressure is reached by injecting water.)

Note: In order for the above options to be available, the corresponding fluid phase must be selected when you click the **Reservoir** button.

Injection constraints are applicable when at least one of the wells has an injection forecast.

- $(p_{inj})_{max}$ — sets a maximum sandface flowing pressure during the forecast. In order to maintain the maximum flowing pressure, the injection rate is adjusted.
- $(q_{ginj})_{max}$ — sets a maximum gas injection rate during the forecast. In order to maintain the maximum rate constraint, flowing pressure is adjusted.
- $(q_{winj})_{max}$ — sets a maximum water injection rate during the forecast. In order to maintain the maximum rate constraint, flowing pressure is adjusted.

Toolbar

This toolbar has the same common icons described in [plot toolbars](#).

Tables tab

This tab displays synthesis data for your wells in three sub-tabs: <well name>, Total, and Run.

Unconventional multi-well model (beta)

With the unconventional multi-well (UMW) model, you can simulate multiple horizontal multfrac wells using the *group* numerical model to history-match producing wells and forecast future production. With this analysis, wells are considered to be parallel, with the same length, and to have the same number of fractures.

Note: This model works with your Harmony Reservoir™ license.

Before you start using the multi-well model, make sure that all required information is added to the Harmony Enterprise project:

- Populate sandface locations for each well in the [Attributes tab](#).
- Populate well production data (rates and sandface pressures) in the [Production editor](#) for each well in the group.
- Specify reservoir and fluid properties in the [Properties editor](#) of the group. When you create a new multi-well model, group reservoir properties are automatically applied.
- Populating wellbore information (such as, a deviation survey, completion, and perforation data) is not required. However, we recommend populating this information because it helps to initiate the multi-well model with correct default settings.


We recommend that you perform analyses and/or modeling for individual wells prior to using the multi-well model. You can bring in parameters from individual well analyses as a starting point for the multi-well model.

By default, the [Plots tab](#) opens (with the Wells button selected) with a dashboard with four plots. For more information, see [dashboard](#).

Model creation

To create an UMW model:

1. Create a group (in the [Entity Viewer - Hierarchy](#) or [Entity Viewer - Custom](#)) that contains all the wells you want to include in the model.
2. Launch the group for analysis. For more information, see [selecting an entity for analysis](#).
3. Click the **Group** image and select **Multiphase Multi-well Model, Unconventional (Beta)**.

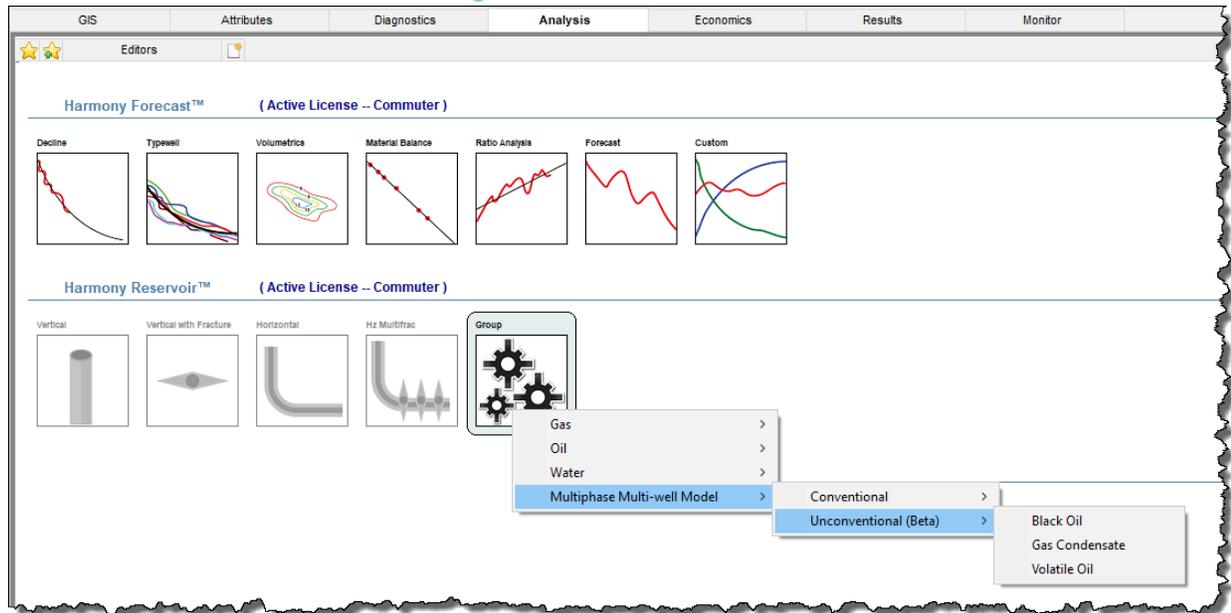

You can create a Black Oil or a Gas Condensate model:

- **Black Oil** — accounts for gas dissolved in liquid, but does not account for liquid vaporized in gas; therefore, you should not create a Black Oil model for a group that has liquid-rich gas as a gas type.
- **Gas Condensate** — used to create a multiphase model that accounts for liquid vaporized in gas. This model should only be used for groups that have liquid-rich gas as their gas type.
- **Volatile Oil** — used to create a multiphase model that accounts for liquid vaporized in gas. The water phase can be turned off within the model.

Note: For more information, see [modifications for the multiphase model](#).

Primary toolbar

The primary toolbar has the following icons:

-  **Pull Defaults** — select from these options:
 - **Group Properties** — copies default values from the [Properties editor](#) of the group.
 - **Group Analysis** — displays a sub-menu with all the other multi-well analyses for the group. (If there are no other multi-well analyses, this option is not

displayed.) Selecting one of the existing analyses copies one multi-well analysis to another in the same group, which can be useful if you want to experiment with the copy of the analysis while preserving the original content. Note that the parameters on the Forecast tab are not copied.

- **Selected Well Analysis** — displays a sub-menu with all the analyses (that is, URM, analytical, and numerical) for the selected well. (If there are no other analyses, this option is not displayed.) Selecting one of the existing analyses, copies parameters of that analysis to the currently selected well.
 - **Another Well in this Model** — displays a sub-menu with all the other wells in the same model. Select one of the wells to copy the calculation method, well parameters, and constraints from that well to the currently selected well (displayed in Wells under Selected Well).
-  **Synthesize** — click this icon every time you want to history-match and create a forecast.
-  **Stop Synthesize** — stops the model's synthesize calculations.
-  **Previous Well** — jumps to the previous well.
-  **Next Well** — jumps to the next consecutive well.
-  **Copy to / Paste from Clipboard** — copies / pastes entity parameters from the clipboard.
- Playback icons ()

After you click the **Synthesize** icon () in the primary toolbar and the calculations are complete, the icons listed below are enabled in the same toolbar. With these playback icons, you can see how pressures or saturations change through time. As you hover over your color-shaded plot, a tooltip displays the pressure or saturation value and unit.

-  **Skip to Beginning** — displays the property at time 0.
-  **Step Back One Frame** — view timesteps in reverse one frame at a time.
-  **Play in Reverse** — view timesteps in reverse. You can click this icon multiple times to increase the speed of the playback.
-  **Stop** — stops the playback process. As you hover over various cells in your well, the pressure or saturation is displayed.

-  **Play** — view timesteps from start-to-finish. You can click this icon multiple times to increase the speed of the playback.
-  **Step Forward One Frame** — view one frame at a time.
-  **Skip to End** — displays the last timestep.

You can switch which plots (that is, XY Schematic, Ratios, Well Rate Time, Total Rate Time, XZ Schematic, and YZ Schematic) are displayed in the dashboard by clicking the **Add an available view** icons (to the far right of the other icons on the primary toolbar).

-  **Change Top Left View** — select a plot to be displayed in the top left corner of your dashboard.
-  **Change Top Right View** — select a plot to be displayed in the top right corner of your dashboard.
-  **Change Bottom Left View** — select a plot to be displayed in the lower left corner of your dashboard.
-  **Change Bottom Right View** — select a plot to be displayed in the lower right corner of your dashboard.


Plots tab

This tab displays four plots in a dashboard and has five buttons in the lower left: Wells, Reservoir, Layers, Volumes, and Options. If you do not see all of these buttons, click >> and select **Show All Buttons**.

Tip: If the dashboard is blank, you need to provide surface locations (latitude / longitude) for your wells. You can enter these latitudes and longitudes in the Attributes tab, **Location** node.

Wells

When you click the **Wells** button, parameters for all wells, the selected well, geometry, permeabilities etc. are displayed.

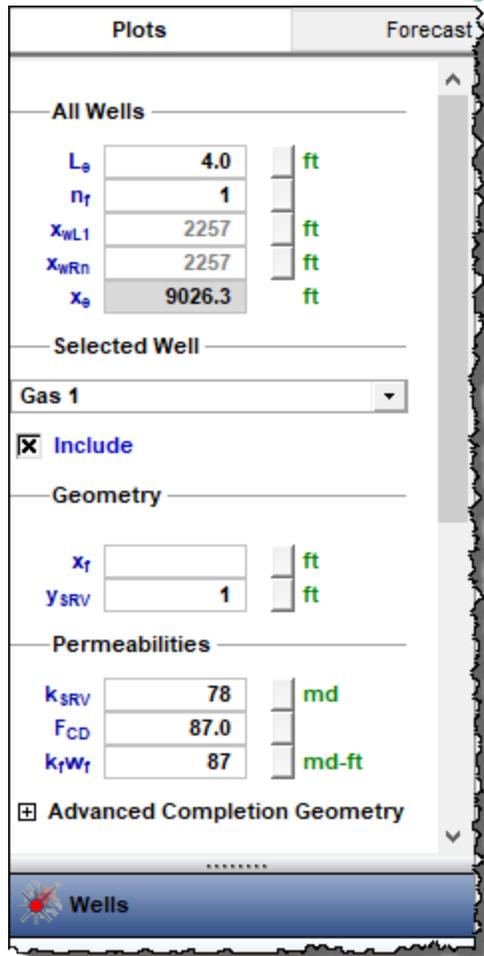


Currently, the wells within the UMW model are considered to be parallel, with the same length, and with the same number of fractures. Therefore, the following parameters are shared between all wells:

- L_e — effective horizontal well length. By default, this field is populated based on the perforations that are set up in the Wellbore editor for each well in the group, but you can edit it.
- n_f — number of fractures.
- x_{WL1} — the distance from the first well to the left reservoir boundary.
- x_{WRn} — the distance from the last well to the right reservoir boundary.
- x_e — extent of the reservoir in the x-direction. This value cannot be edited directly, but can be changed by changing x_{WL1} , x_{WRn} , and x_{sp} for individual wells.

The rest of the parameters in Wells are set up on a per-well basis. Select a well from the **Selected Well** drop-down list to set or modify parameters related to that particular well. (You have to set up parameters for each well for the multi-well model to be valid.)

- **Include** — by default, all wells in the group are included in the model. Deselect **Include** to exclude the selected well from the model. If the well is excluded, you still need to set up valid parameters for it: the geometry of the well region is still being used to generate a grid used in the model. However, if the well is excluded, its production is not taken into account, and permeability for the whole well region (including fracture and SRV) is modeled to be equal to the matrix permeability (k_{matrix}).

Geometry

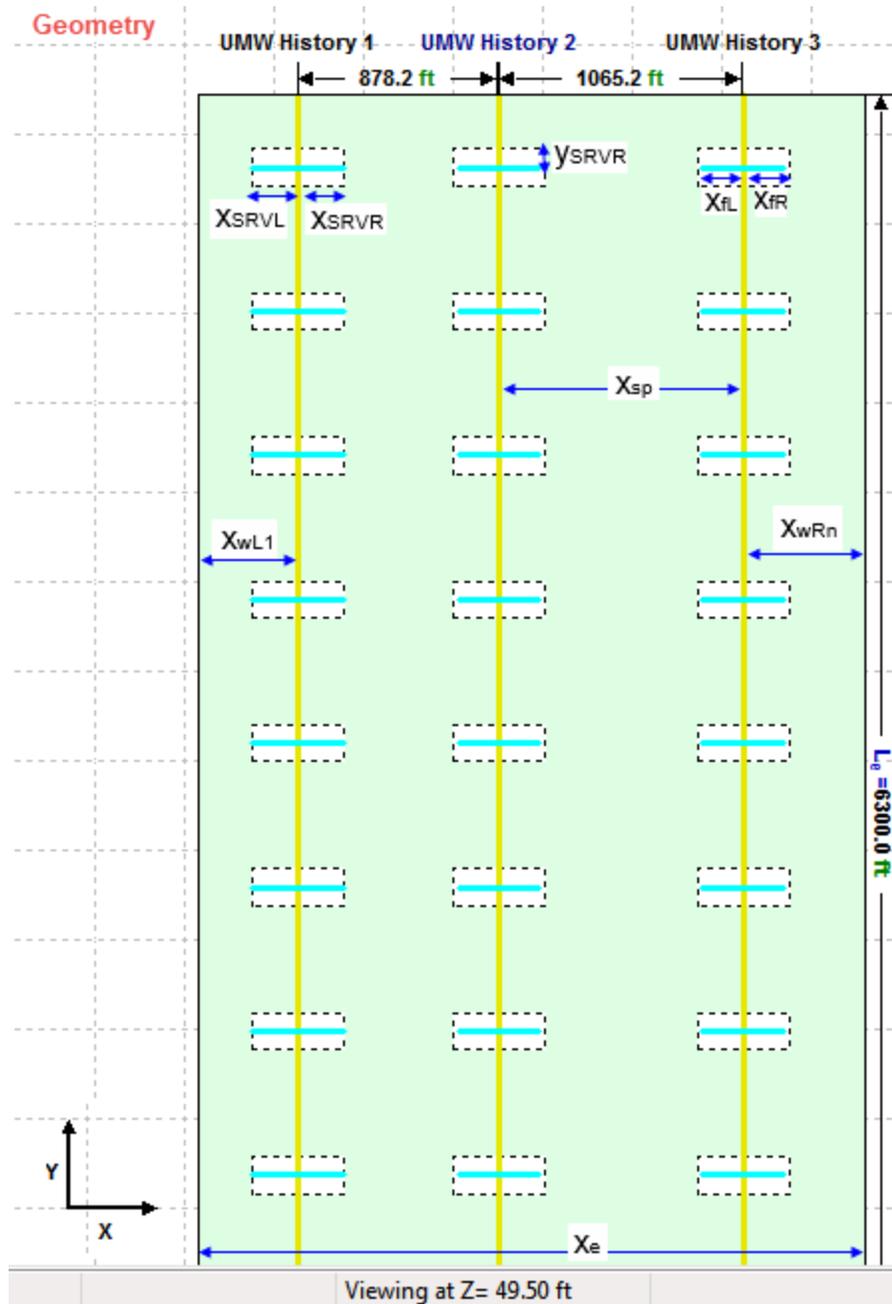

- x_f — fracture half length. Set this field if you want to model a symmetrical fracture with an SRV region extending along the whole fracture. Otherwise, set x_{fL} , x_{fR} , x_{SRVL} , and x_{SRVR} in the Advanced Geometry section.
- y_{SRV} — half SRV in the y-direction.

Permeabilities


- **k_{SRV}** — SRV (inner zone) permeability.
- **F_{CD}** — dimensionless fracture conductivity.
- **$k_f w_f$** — fracture conductivity. Fracture conductivity and dimensionless fracture conductivity are related by:
 $F_{CD} = k_f w_f / (k_{SRV} x_f)$. You can set any of these two parameters (F_{CD} or $k_f w_f$), and the other one is calculated based on the parameter you set.

Advanced Completion Geometry

- **x_{sp}** — the horizontal distance to the next wellbore.
- **x_{fL} , x_{fR}** — use these parameters to set a non-symmetrical fracture. The left wing of the fracture (x_{fL}) and the right wing of the fracture (x_{fR}) can be different (see geometry above).
- **x_{SRVL} , x_{SRVR}** — use these parameters to set up an SRV that extends less than, or beyond the x_f (see geometry above).

Vertical Resolution

Parameters in the Vertical Resolution section are used to set up z-values for well locations and completions. Use this section when wellbores are located at different depths, and when SRV and fractures do *not* extend through the entire thickness of the reservoir.

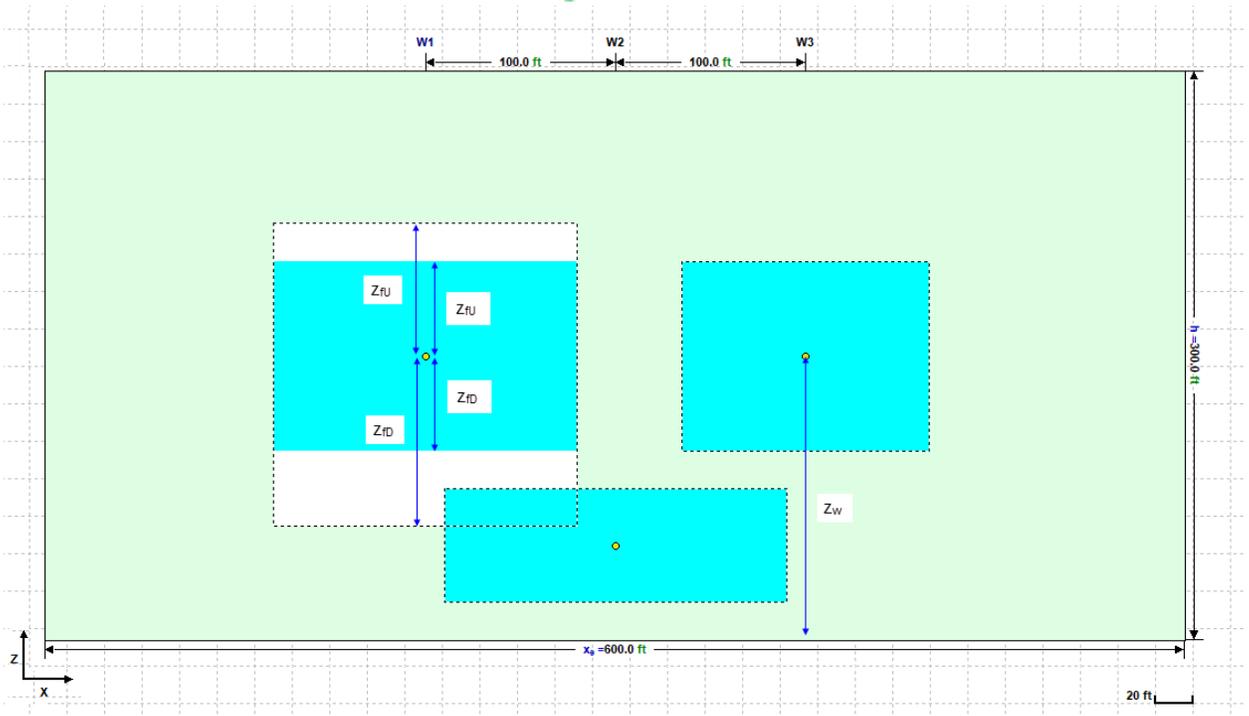

- z_w — vertical distance from the bottom of the reservoir to the wellbore.
- z_{fU} — extent of the fracture (up).
- z_{fD} — extent of the fracture (down).
- z_{SRVU} — extent of SRV (up).
- z_{SRVD} — extent of SRV (down).

Other parameters

- **Calculation Method for Production** — set if the selected well is to be operated at rate, or at pressure control.
- **Calculation Method for Injection** — if you have injection rates for your well in the Production editor, the Calculation Method for Injection section is enabled, and you can set controls to be used during injection.

Reservoir

When you click the **Reservoir** button, you can specify parameters that are used for the entire reservoir model.



Plots		Forecast
Black Oil		
<input checked="" type="checkbox"/>	Gas	
<input checked="" type="checkbox"/>	Oil	
<input checked="" type="checkbox"/>	Water	
Reservoir		
p_i	3000.00	psi(a)
c_r	4.51e-06	1/psi
h	143.0	ft
ϕ_t	12.00	%
S_g	10.00	%
S_o	87.00	%
S_w	3.00	%
k_{matrix}	3	md
k_z/k_{xy}	0.100	
<input type="checkbox"/>	Adsorption	
<input type="checkbox"/>	Geomech	

	Wells	
	Reservoir	

If the model has more than one layer, some of the parameters in the Reservoir tab are read-only because they are defined per layer. To set up parameters for each of the layers, click the [Layers](#) button and set parameters there.

k_{matrix} — matrix (outer zone) permeability within the well region of the selected well.


k_z / k_{xy} — the ratio of vertical permeability to horizontal permeability. (This ratio is only being applied to k_{matrix} .)

To include the effect of adsorbed gas, click the **Adsorption** checkbox. Adsorption parameters are set up for the entire reservoir. Note that this option cannot be used for models that include oil or condensate. For more information, see [Langmuir isotherm](#).

To include the effects of changing formation compressibility and permeability with pressure, click the **Geomechanical** checkbox. Geomechanical parameters are set up for the entire reservoir. For more information, see [geomechanical reservoir models](#).

Fluid type selection

Click the checkboxes for the fluid phases you want to include in your model: **Gas**, **Oil**, and/or **Water**.

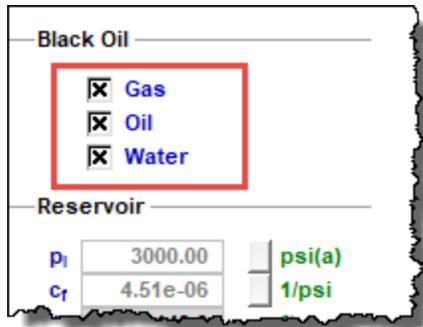

Black Oil


Gas
 Oil
 Water

Reservoir

p_i 3000.00 psi(a)
 C_r 4.51e-06 1/psi

Layers

When you click the **Layers** button, layers for the reservoir are displayed. If your model has only one layer, layer parameters are read-only because the layer is the same for the entire reservoir. Therefore, click the **Reservoir** button and set parameters there.

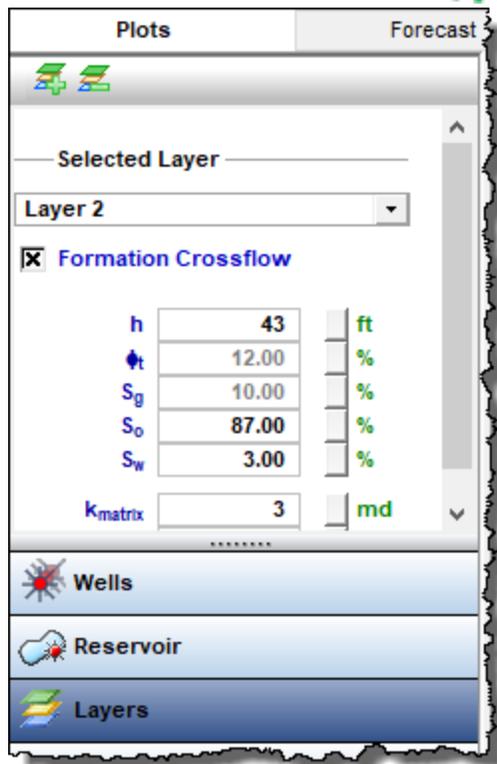

Toolbar


The Layers toolbar has the following icons:

-  **Add New Layer Below the Selected Layer** — opens the Add Layer dialog box where you type a name for the new layer to be added below your currently selected layer.
-  **Remove Selected Layer** — deletes your currently selected layer. You are not prompted to confirm your decision.

To rename a layer, right-click it.

Selected Layer section

To view or modify parameters of a particular layer, select the layer from the **Selected Layer** drop-down list. All of the parameters displayed below are for the selected layer.

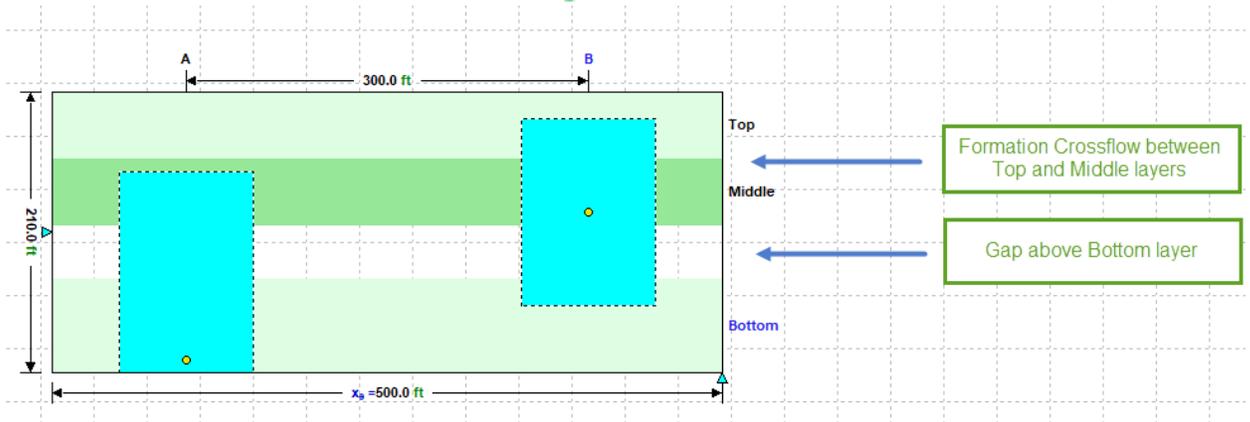

Formation Crossflow — this option is available for all layers except for the top one. This option is used to define whether there is communication between the layers through the matrix (formation crossflow), or if the layers are separated by an impermeable layer (gap), and are only communicating through a fracture or SRV.

- If this checkbox is selected, this implies that there is communication between the layers in the reservoir through the matrix.
- If the checkbox is deselected, you can model a gap between the currently selected layer and the one above it; type the height of the gap in the **Gap Above** field. You can view the gap in the XZ view (side view) of the schematic.

Volumes

When you click the **Volumes** button, read-only values for Reservoir, Well, and Layer are displayed. You can switch which Well and/or Layer is displayed by selecting from the drop-down list.



Plots		Forecast
Reservoir		
OGIP _F	0.000	Bscf
OGIP _S	7.403	Bscf
OGIP	7.403	Bscf
OOIP	17626.7	Mstb
OWIP	5560.4	Mstb
A	422	acres
A _{SRV}	165	acres
Well		
UMW History 2		
OGIP _F	0.000	Bscf
OGIP _S	1.292	Bscf
OGIP	1.292	Bscf
OOIP	3076.3	Mstb
OWIP	970.4	Mstb
OGIP _{SRV}	0.317	Bscf
OOIP _{SRV}	754.7	Mstb
OWIP _{SRV}	238.1	Mstb
A _{SRV}	18	acres
Layer		
Layer 1		
OGIP _F	0.000	Bscf
OGIP _S	7.403	Bscf
OGIP	7.403	Bscf
OOIP	17626.7	Mstb
OWIP	5560.4	Mstb


.....

- Wells
- Reservoir
- Layers
- Volumes

Options

When you click the **Options** button, various gridding parameters are displayed. After you set your reservoir dimensions, well locations, and well completion parameters, the UMW model creates an appropriate grid to get accurate results with minimal calculation time. To display gridding, right-click the schematic plot and select **Show Grid Cells**.

Usually, the default gridding settings work well, but in some cases, you may want to adjust the gridding options by changing gridding parameters.

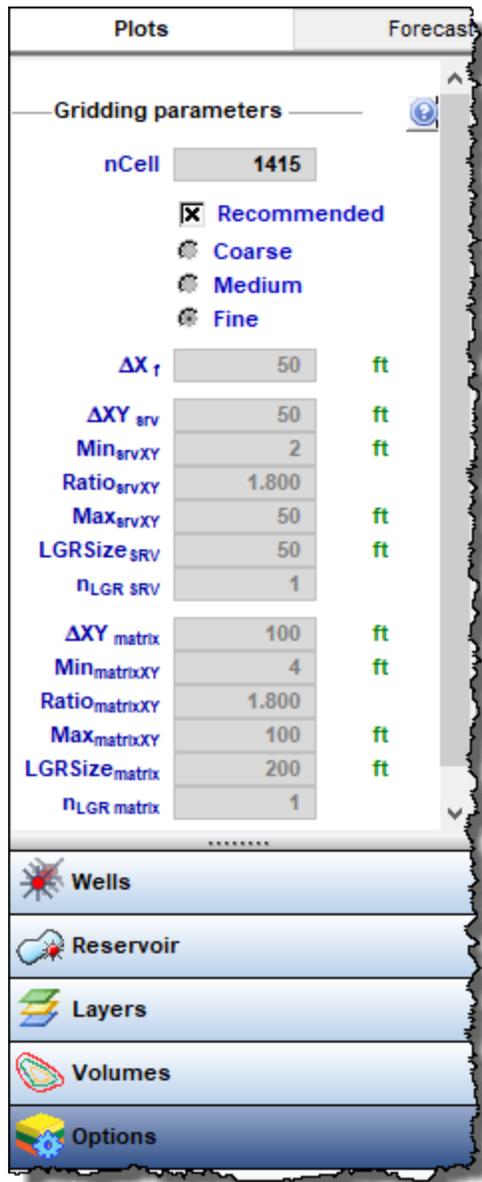


There are three pre-defined gridding options: Coarse, Medium, and Fine. When the **Recommended** option is enabled, one of the pre-defined options is automatically selected based on model parameters.

Alternatively, you can deselect **Recommended** and set your gridding manually. For example, you may want to use **Coarse** gridding while history-matching the model, and then switch to **Fine** gridding after the match is done.

If you need even more flexibility, you can select the **Custom** option and edit each gridding parameter individually. If you select this option, refer to the schematic of a model's grid and description of individual gridding parameters below:

- The fracture has a cell containing the wellbore and its size is fixed. The rest of the fracture is divided into equal cells with an x-dimension approximately given by ΔX_f .
- The SRV regions have arithmetic gridding in the x-dimension (approximately given by ΔXY_{SRV}) and geometric gridding in the y-dimension (given by Min_{SRVXY} , $Ratio_{SRVXY}$, and Max_{SRVXY}).
- The matrix is split into a number of partitions (defined by the locations and SRV-boundaries of all the wells), and then each partition is gridded individually. Partitions that have SRV regions adjacent to them have geometric gridding starting at the boundary with the SRV region. This is done to capture large pressure gradients in such areas. (Geometric gridding is governed by $Min_{matrixXY}$, $Ratio_{matrixXY}$ and $Max_{matrixXY}$). In other cases, matrix partitions have arithmetic gridding (the size of the cells are approximately equal to the ΔXY_{matrix} for the partitions that are adjacent to SRV regions, and are approximately equal to $2 * \Delta XY_{matrix}$ for other matrix partitions.)
- Local grid refinements (LGRs) are added for those corners of matrix partitions that are touching SRV corners. The size of the local grid refinement is defined by $LGRSize_{matrix}$. The refined grid within those LGR areas is built by continuing grid lines from the adjusting partitions (that are gridded geometrically). Every $n_{LGR\ matrix}$ - th line is being continued.
- Local grid refinements are also added for the portions of the SRV that are touching fracture tips. The size of the LGR is defined by $LGRSize_{SRV}$. The refined grid within those LGR areas is built by continuing grid lines from the adjusting partitions (that are gridded geometrically). Every $n_{LGR\ SRV}$ - th line is being continued.

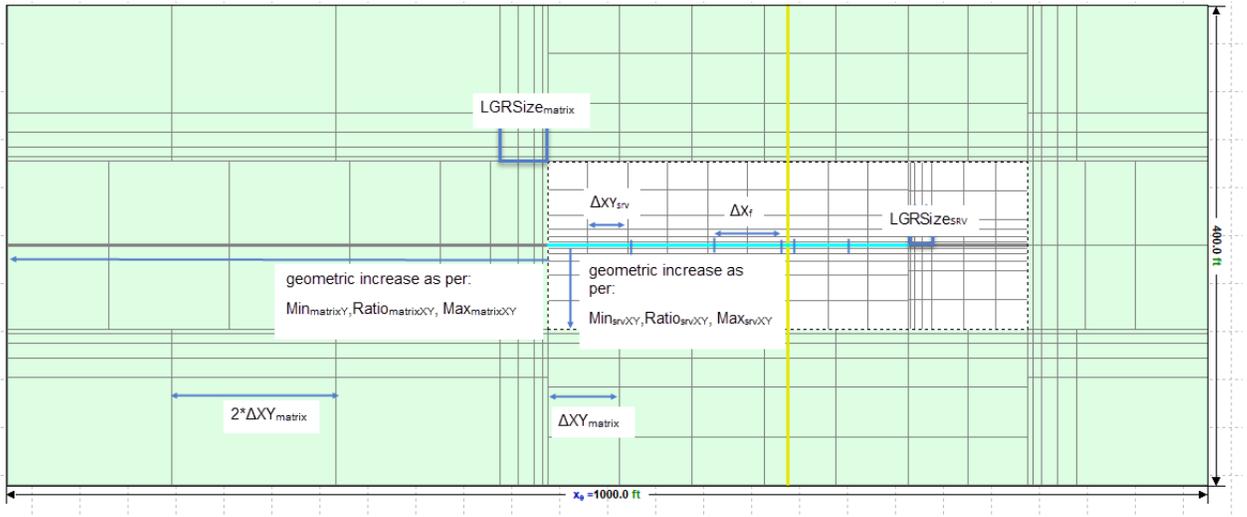

Dashboard

In the dashboard, there are four plots, which are described below. You can switch which plot is displayed by clicking the [plot view icons](#).

Note: If you maximize a plot in the dashboard, you are not able to switch the plot until you minimize its view. For a description of common icons, see [plot toolbars](#).

Ratios plot

This plot displays historical and simulated ratios for the selected well.

Well Rate Time plot

This plot displays historical and simulated rates and pressure for a single well. To switch wells, you can:

- Click the arrows in the main toolbar.
- Select a different well from the **Select Well** drop-down list.

Total Rate / Cum Time plot


This plot displays the total historical and simulated rates / cumulative production for the entire reservoir, and the reservoir pressure. This plot has one unique toolbar icon:

 /  **Switch to Rate vs Time / Switch to Cumulative vs Time** — toggle between these two views. (Only available on the Reservoir Rate vs Time plot, *not* on individual well plots.)


Schematic plot

This plot displays a schematic view of the reservoir shape, and the location of the wells within it. After you run the model, you can use the same plot to view distribution of cell properties (pressure, saturation of any phase or permeabilities) at any timestep.

You can have schematic plots displaying XY, XZ, or YZ cross-sections. If more than one cross-section is displayed, each cross-section has blue arrow tips indicating the location of the other cross-sections.

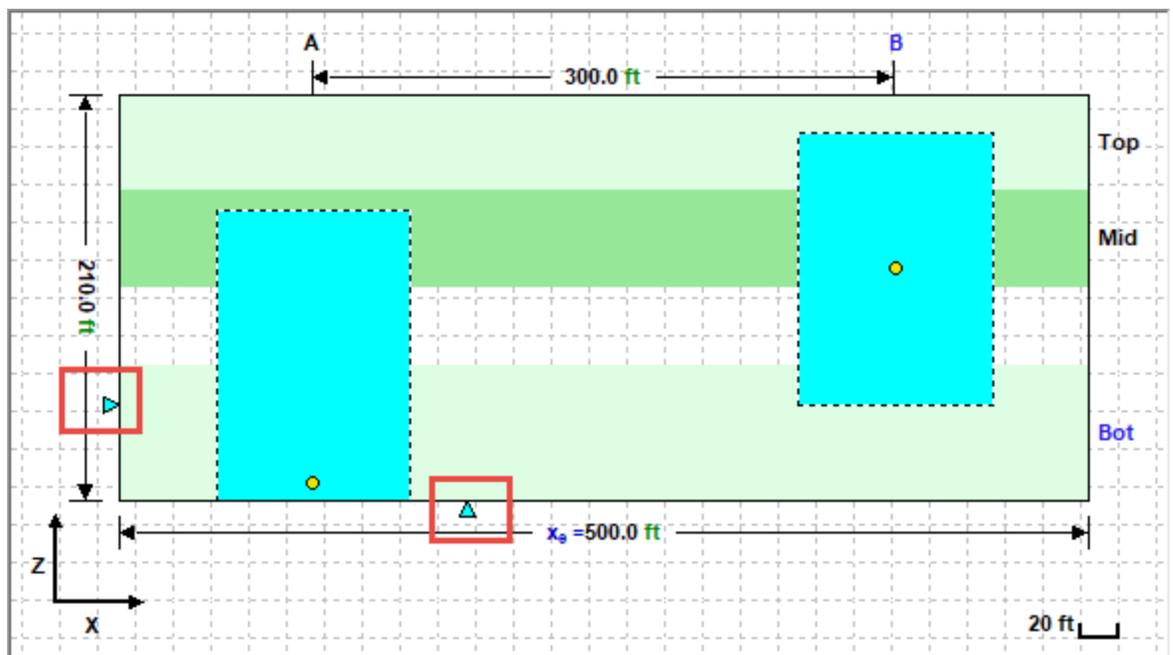

 
These toolbar icons are unique to this plot:

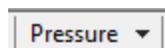 **Pressure** **Shaded plot display mode** — this drop-down list becomes available after the model has been synthesized. Use this drop-down list to select which property you want to display in each grid cell. You can select one of the following properties to display it: Pressure, Saturations (color scheme based on saturations of all three phases), Gas Saturation, Oil Saturation, Water Saturation, or Permeability.


 **Set Cross Section Location** — type a value for the cross-section location to be displayed.

For information on common plot icons, see [plot toolbars](#).

After you click the **Synthesize** icon () in the primary toolbar, the synthesis proceeds. Position lines are displayed to indicate calculation progress. The shaded plot displays the distribution of pressure or saturation at the timestep that has just been calculated (as indicated by the time-stamp in the lower left corner, which displays the exact date and time). After the calculation is completed, these Position lines can be dragged to the moment in time you want to examine more closely, and all plots are synchronized.

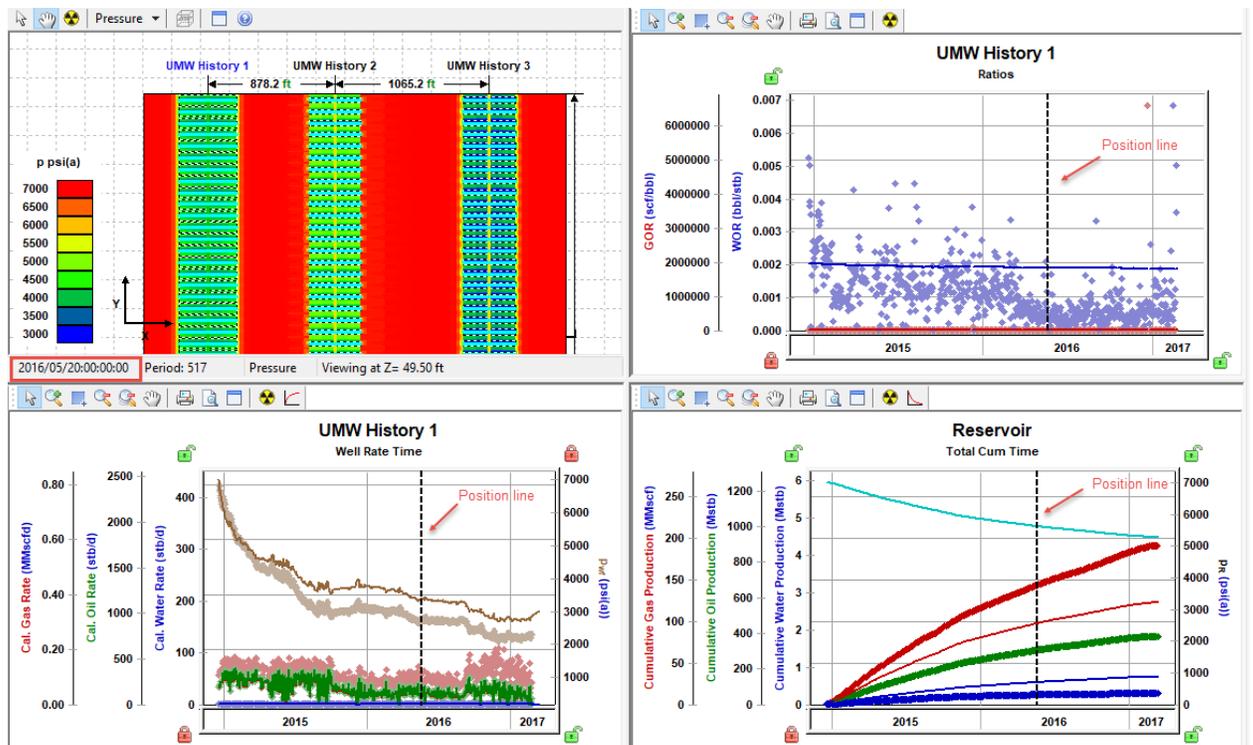

If you find that the color scale for your shaded plot needs adjusting, right-click the legend and select **Customize Color Scale**, and then enter customized min and max values. To revert back to the default min and max values, right-click the legend and select **Reset Color Scale**.

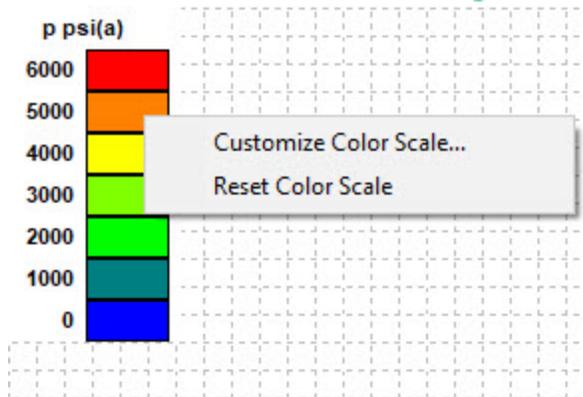

Context menu

Right-clicking the reservoir view for your wells lists these options:

- **Show Grid Cells** — displays a grid layout on your schematic.
- **Show Shaded Plot** (after Synthesizing) — displays the plot after the synthesis process is completed.
- **Show Scale Gridlines** — show / hide gridlines with a scale marker.
- **Show Dimensions** — show / hide dimensions on the right-side of the plot.
- **Show Cross-section Locations** — show / hide cross-sections.
- **Show Layers** — show / hide layers. This option is displayed, if more than one layer exists.
- **Different Colors for SRV and matrix** — when this option is selected, the SRV and matrix are displayed in a different color from the rest of the schematic. When this option is deselected, the entire schematic is displayed in white.
- **Show Single Fracture Schematic** — displays a close-up view of the fracture. You can toggle back to Show Entire Model Schematic.

Forecast tab

This tab has the same features as the [numerical Forecast sub-tab](#), but you have the option to display all wells in the group, or individual wells.

Forecast Plot

If **All Wells** is selected in the Select Well drop-down list, the Forecast plot displays group-level rates and reservoir pressures. If one of the wells is selected in the Select Well drop-down list, the Forecast

plot displays rates and flowing pressures for that selected well.

Forecast Options

Use the Select Well drop-down list to pick any individual well or All Wells. Select one of the wells to see forecast settings for just that well in the Forecast table, or select **All Wells** to see forecast settings for all the wells together.

The Forecast Start Date is set for the entire model (the forecast for *all* the wells starts at this given date).

The values in the Duration column are shared between all the wells in the model.

Forecast Constraints are applied for all of the wells in the model.

After you set up a valid forecast and synthesize it, the Forecast Results table displays EUR, RR, and historical volumes for each well for each of the fluid phases available in the model.

Forecast injection

To forecast injection for any well, select one of these options from **Control Type** drop-down list:

- **Gas Inj Rate** — the forecast at a given gas injection rate.
- **Water Inj Rate** — the forecast at a given water injection rate.
- **Pressure (Inj Gas)** — the forecast at a given sandface flowing pressure. (This pressure is reached by injecting gas.)
- **Pressure (Inj Water)** — the forecast at a given sandface flowing pressure. (This pressure is reached by injecting water.)

Note: In order for the above options to be available, the corresponding fluid phase must be selected when you click the **Reservoir** button.

Injection constraints are applicable when at least one of the wells has an injection forecast.

- **(p_{inj})_{max}** — sets a maximum sandface flowing pressure during the forecast. In order to maintain the maximum flowing pressure, the injection rate is adjusted.
- **(q_{ginj})_{max}** — sets a maximum gas injection rate during the forecast. In order to maintain the maximum rate constraint, flowing pressure is adjusted.
- **(q_{winj})_{max}** — sets a maximum water injection rate during the forecast. In order to maintain the maximum rate constraint, flowing pressure is adjusted.

Toolbar

This toolbar has the same common icons described in [plot toolbars](#).

Tables tab

This tab displays calculation results in a tabular format.

Nodal analysis

With the nodal analysis, you can simulate, analyze, and optimize flow in a wellbore. For theoretical information, see [nodal analysis theory](#).

Note: This analysis works with your Harmony Optimize™ license.

There are two types of nodal analysis:

- [Gas AOF / TPC](#)
- [Oil IPR / TPC](#)

This analysis has the following icons:

-  **Delete** — removes the currently selected inflow or outflow.
-  **Copy** — creates a duplicate of the currently selected inflow or outflow. The name is appended with the word "Copy".
-  **Show / Hide** — toggle between showing or hiding the inflow or outflow.
-  **Collapse / Expand** — closes / opens the details for the inflow or outflow. If you see a red triangle () in the top left of a collapsed inflow or outflow, you need to investigate the required parameters.

Gas AOF / TPC

The Gas AOF / TPC analysis method creates tubing performance curves (TPCs) for a gas well, and overlays them on the sandface absolute open flow (AOF) curves.

For a given set of conditions, a TPC is a plot of the flowing sandface pressure, as a function of flow rate. This curve does not change through the life of the well. It is not at all dependent upon well performance; it depends only upon the gas-liquid ratio, tubular configuration (depth, diameter), wellhead pressures, etc.

On the Gas AOF / TPC plot, the minimum gas rate required to lift liquids is calculated in conjunction with each TPC. It is represented on the tubing performance curve by the transition of the thin dotted portion to the thick solid portion of the curve. For comparison and analysis, multiple TPCs can be plotted at the same time.

The active AOF is highlighted with a blue border on the left-side of the main pane and the active TPC is highlighted on the right-side. In addition, the active TPC and AOF curves are displayed in bold when you hover over the plot. Click the inverted chevron icon () to open your AOF or TPC.

The nodal analysis encompasses functionality from IHS VirtuWell and includes the following:

- **Inflows** — click the **Add Inflow** button to create an inflow that is measured at the sandface.
 - Simplified C, n
 - Forchheimer
 - Custom Table
- **Operating Points** tab — displays a table with operating points (inflow over TPC) for a baseline, and sensitivities A, B, and C. this table is populated with the intersection points where the AOF and TPC curves touch. Note that you can copy and paste values into Excel by pressing **Ctrl-C** and **Ctrl-V**.
- **Auto-scale** checkbox — fits the plot to the maximum viewable area of the screen.
- **Show Sensitivities** checkbox — displays sensitized / transient inflows in the plot with a light-blue line, as well as inflows in the key-performance-indicators table below.
- **Pair all with** drop-down list — matches all TPCs to one inflow.
- **Inflow Comparisons** tab — displays a plot of all inflows.
- **SF to WH Comparison** tab — displays a plot for sandface-to-wellhead comparisons.

- **Wellbore Config** drop-down list — select the wellbore configuration you want to use for comparison purposes.
- **Inflow 1, 2, etc.** tab — displays a table by inflow for P_{RES} , q_{AOF} , n_{SF} , and C_{SF} .
- **Plot** — the plot is displayed after you type all the required parameters. Intersections on the plot correspond to the points in the Operating Points table. The axes operate in the same manner as [Economics](#). For more information, see [Y-axis icons](#) and [X-axis icons](#). To rescale the plot back to its original settings, double-click it.
- **Outflow** — click the **Add Outflow** button to create a [TPC](#). Note that all TPCs require a parent inflow and a wellbore.

Note: For the inflow method, wellhead non-flowing pressure, the following flow paths are not supported: Both, Casing, Gas Lift, and Pumping.

For the inflow method, wellhead flowing pressure, the following flow paths are not supported: Gas Lift and Pumping.


Diagnostics

You can plot TPCs in conjunction with AOF curves. The intersection of the AOF curve with a TPC signifies the operating point of the particular wellbore / reservoir combination. Harmony Enterprise displays the operating points in the following colors, as well as the entire curve:

- **Red** — the operating point intersects below the critical rate required to lift liquid
- **Dark blue** — the operating point is above the critical rate required to lift liquid, and below the erosional velocity.
- **Yellow** — the operating point is above the erosional velocity calculated for this configuration.

Note: You can set your default erosional velocity in the Options dialog box under the [Optimize node](#).

In addition, the Baseline table below the plot displays a yellow box for the table row in the Yellow operating-point state. When a table row is in the Red operating-point state, the entire table row is displayed in red.

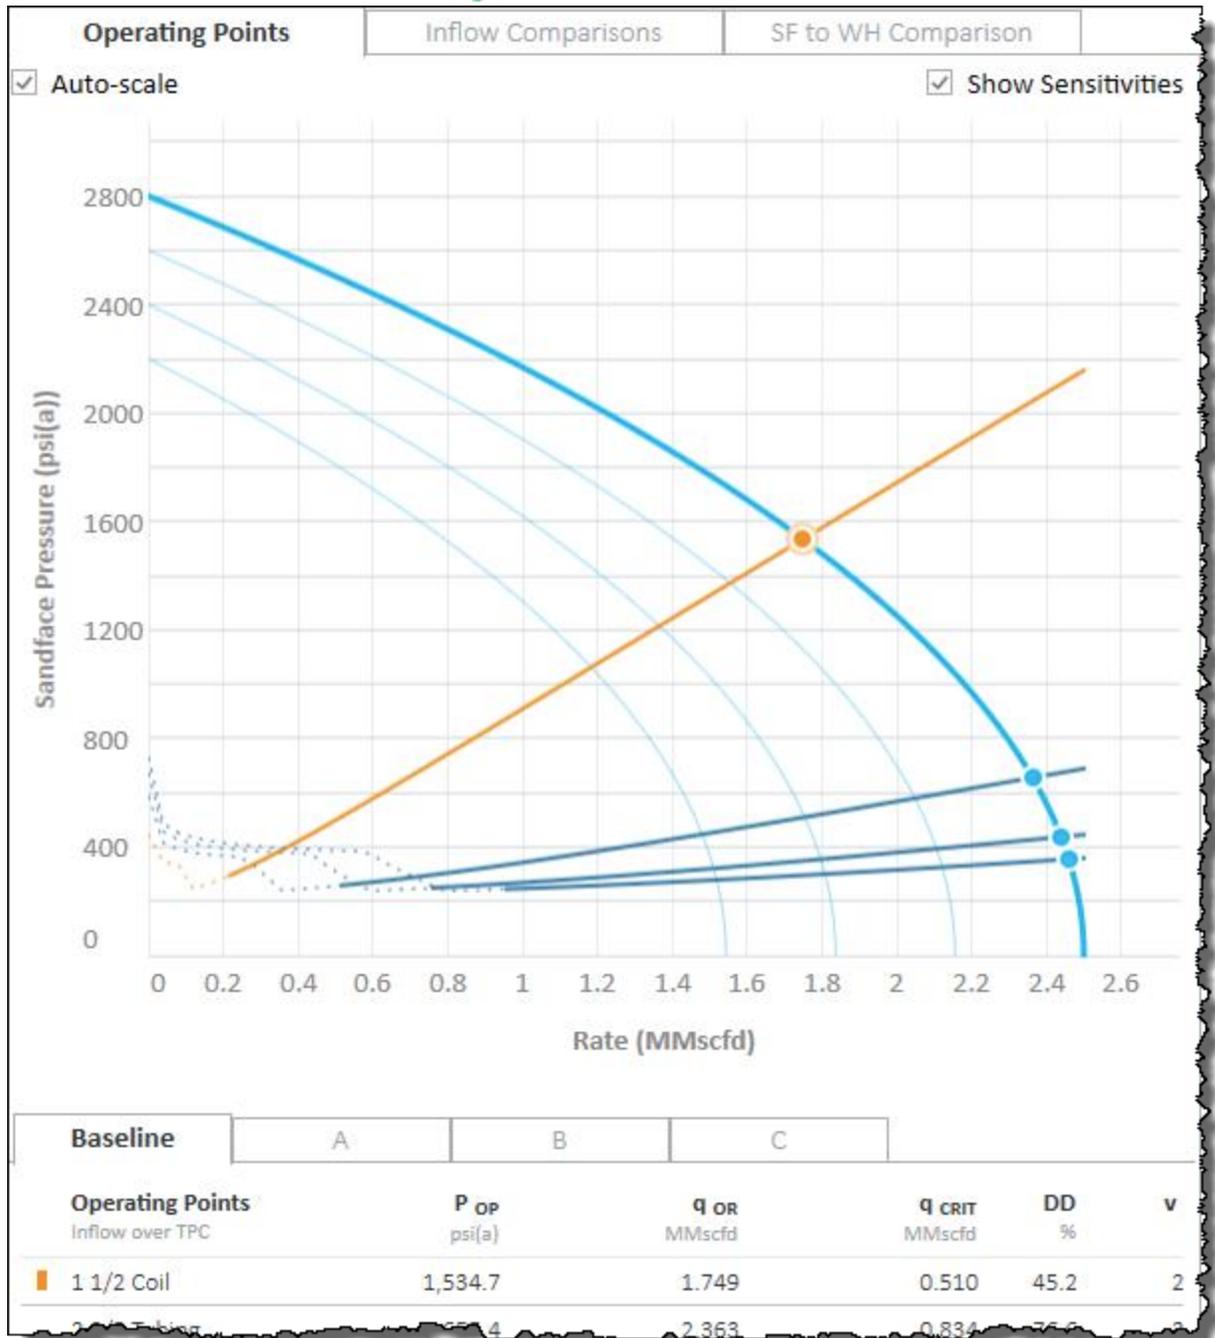

Simplified C, n

The Simplified equation (C, n) is a widely accepted method for determining a well's deliverability (absolute open flow - AOF) potential. The calculation methods use the information provided to determine the well's AOF at the sandface. From here, further analysis may be performed, such as determining the well's wellhead deliverability potential, or comparing well performance scenarios by determining operating points along the deliverability curve(s) with the use of tubing performance curves.

Select a calculation method based on the information you have:

Calculation Method	Required Information	Description	Notes
Sandface Absolute Open Flow	<ul style="list-style-type: none"> ■ Reservoir Pressure ■ Sandface (SF) Turbulence Factor 	Harmony Enterprise calculates either a resulting Sandface AOF, or Sandface C value when either of the other entered.	You must type a value for one of the lower two fields. You can type three reservoir pressure sensitivities (A, B, and C).
Sandface Flowing Pressure	<ul style="list-style-type: none"> ■ Reservoir Pressure ■ SF Turbulence Factor ■ Gas Delivery Rate ■ SF Flowing Pressure 	Harmony Enterprise calculates a resulting Sandface C and Sandface AOF.	You can type three reservoir pressure sensitivities (A, B, and C).
Wellhead Flowing Pressure	<ul style="list-style-type: none"> ■ Physical Wellbore ■ Reservoir Pressure ■ SF Turbulence Factor ■ Gas Delivery Rate ■ Wellhead Flowing Pressure 	Harmony Enterprise uses the wellbore and Liquid Ratio information to calculate the SF Flowing Pressure used to determine the Sandface AOF value. The most-recent wellbore configuration is used by default. If there is no wellbore, the <u>Wellbore editor</u> must be used to enter one.	You can type three reservoir pressure sensitivities (A, B, and C)

Calculation Method	Required Information	Description	Notes
Wellhead Non-Flowing Pressure	<ul style="list-style-type: none"> ■ Physical Wellbore ■ Reservoir Pressure ■ SF Turbulence Factor ■ Gas Delivery Rate ■ Wellhead Non-Flowing Pressure 	Harmony Enterprise uses the wellbore and Liquid Ratio information to calculate the SF Flowing Pressure used to determine the Sandface AOF value. The Average Liquid Gradient is applied to the height of the liquid column from the Liquid Level (LL) to the Datum depth.	You can type three reservoir pressure sensitivities (A, B, and C).

If you type values in a parameter field that is beyond the acceptable range, a red box highlights the field, and a tooltip advises you about what is incorrect.

Forchheimer deliverability method

By using the Forchheimer deliverability method, you can estimate a well's absolute open flow (AOF) potential by entering its reservoir parameters after selecting the pseudo-pressure method or pressure-squared method. You can also calculate when a reservoir reaches boundary-dominated flow.

Calculate a Gas Deliverability curve by entering:

- Reservoir Parameters
- Sandface a and b values

When you enter all necessary parameters, Harmony Enterprise calculates and displays the results and transient inflows.

Note: The View Transient AOF Curves option is only available if reservoir parameters have been entered.

Optionally, you can:

- Add Horizontal Permeability
- Add Partial Penetration

Note: The Transient inflows section is blank until all the required parameters are entered.

Custom table deliverability method

With the Custom Table you can import deliverability curves into Harmony Enterprise that have been generated by another application (such as a numerical simulator).

Or, you can type values for reservoir pressure, reservoir temperature, gas rate, and corresponding sandface pressures for the deliverability curve you want to build. A sandface deliverability curve and results for pseudo-pressure a and b are displayed, as well as the equivalent pressure-squared c and n values.

Note: The Custom Table uses pseudo-pressure for all of its calculations.

Oil IPR / TPC

An oil IPR / TPC analysis provides options to calculate and display the maximum oil rate and inflow performance relationship (IPR) for an oil well. It also provides the ability to create tubing performance curves (TPCs), which can be used to determine the expected operating point (intersection of the IPR and TPC curves) of a particular reservoir / wellbore combination. The intersection of the IPR curve with a TPC signifies the operating point of the particular wellbore / reservoir combination.

The nodal analysis encompasses functionality from IHS VirtuWell and includes the following:

- **Inflow** — click the **Add Inflow** button and select **Vogel** to create an inflow that is measured at the sandface.

The Vogel equation is a widely accepted method for determining a reservoir's deliverability IPR. The calculation uses your information to determine the well's IPR at the sandface. This relationship between pressure and rate can be used to visually determine the desired operating pressure, or it can be combined with TPCs to compare well performance scenarios.

Note: Your bubble point pressure is automatically imported from the [Properties editor](#).

- **Operating Points** tab — displays a table with operating points (inflow over TPC) for a baseline, and sensitivities A, B, and C. this table is populated with the intersection points where the IPR and TPC curves touch. Note that you can copy and paste values into Excel by pressing **Ctrl-C** and **Ctrl-V**.
- **Inflow Comparisons** tab — displays a plot of all inflows.
- **Auto-scale** checkbox — fits the plot to the maximum viewable area of the screen.
- **Show Sensitivities** checkbox — displays sensitized / transient inflows in the plot with a light-blue line, as well as inflows in the key-performance-indicators table below.
- **Plot** — the plot is displayed after you type all the required parameters. Intersections on the plot correspond to the points in the Operating Points table. The axes operate in the same manner as [Economics](#). For more information, see [Y-axis icons](#) and [X-axis icons](#). To rescale the plot back to its original settings, double-click it.
- **Outflow** — click the **Add Outflow** button to create a [TPC](#). Note that all TPCs require a parent inflow and a wellbore. By default, the TPC pairs with the active inflow.

For a given set of conditions, a TPC is a plot of the flowing sandface pressure, as a function of flow rate. This curve does not change through the life of the well. It is not at all dependent upon reservoir performance; it depends only upon the gas-liquid ratio, tubular configuration (depth, diameter), wellhead pressures, etc.

Outflow

After clicking **Add Outflow**, a tubing performance curve (TPC) section opens. Type values or select from drop-down lists for fields in white. Grey fields are read-only.


- **Pair all with** checkbox — click this option, if you want to pair all TPCs with the inflow selected in the drop-down list to the right.
- **Parent inflow** drop-down list — select from the drop-down list.
- **Wellbore** drop-down list — by default, the most-recent wellbore is selected. If there is a red box around the Wellbore drop-down list, you need to correct something in the Wellbore editor.
- **Wellhead FP** field — type your wellhead flowing pressure.
- **Customize Flow Path and Tubing** section— click to enable this option, so you can type values for your Tubing, Annulus, Both, or Casing. Note that Gas Lift is not supported.
- **Liquid Ratios** section — select from the drop-down list, so you can type values for your ratios.

Navigation

Harmony Enterprise navigation consists of the following:

- Clipboard
- Selecting entities
- Toolbars
- Menus
- Status Window
- Tabs
- Panes
- Navigation buttons

This screenshot outlines the main elements in the Harmony Enterprise interface. For a description of more technical elements in the interface, see [Components](#).

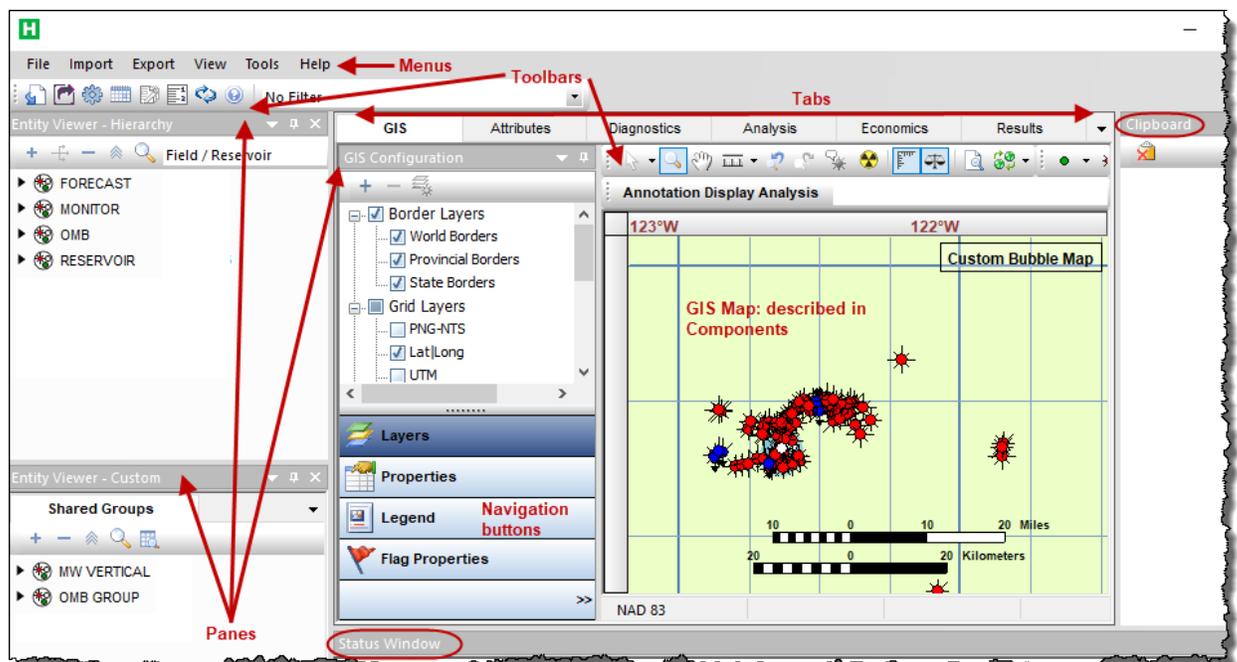

Clipboard


With the clipboard, you can copy and paste data, including analyses, between entities, or within a single entity. You can also copy data from Harmony to Harmony Enterprise.

The clipboard supports:

- Decline analyses
- Analytical analyses
- Unconventional reservoir analyses
- Properties editor
- Wellbore editor
- Multi-well models

The clipboard also supports bulk pasting properties to a selection of wells. After selecting wells in the Entity Viewer, dragging a clipboard item to one of the selected wells pastes the copied properties to the entire selection.

When you copy data to the clipboard, the Clipboard docking window opens, and data is displayed within the pane as a button.

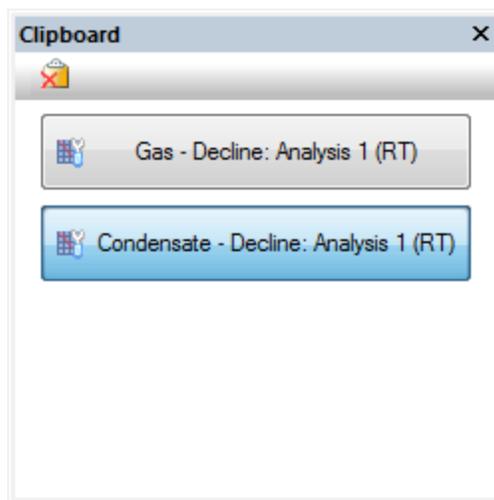

Menus

Harmony Enterprise has the following menus.

File

Close Data Source Connection — closes your data source connection, but keeps the Harmony Enterprise window open.

Exit — closes Harmony Enterprise.

Import

Database Connection — imports well data from a database.

Enerdeq / IHDC — imports / updates your Harmony Enterprise project with data from Enerdeq or IHDC. For more information, see import from Enerdeq.

PowerTools — opens the PowerTools File import dialog box where you browse to your PowerTools file and historical Enerdeq data (optional).

.Harmony file (single user) — imports a project from single-user Harmony. (You can import a single file or multiple files.)

.hldb file — imports data from a local database (by default, a local database is created when Harmony Enterprise is installed) extracted from Harmony Enterprise. For more information, see importing from Harmony Enterprise. (You can import a single file, or you can bulk import multiple files in the Browse dialog box.) Note that this functionality does *not* apply to SE licenses.

Piper Forecasts — opens the Well Selection and Piper Forecast Import dialog box where you can update your selected wells, or update all wells, with your Piper forecasts (.fdb files). Note that your existing analyses are never overwritten.

WellTest — opens the Import dialog box where you browse to your WellTest file.

File — imports well data from a file.

Export

Production Data, Forecasts, or Decline Analyses — opens an export wizard where you select your production data, forecasts, or decline analyses.

To .hldb file — browse to the location for your .hldb file. you can export a portion of the data from an existing Harmony Enterprise project to create a new project. This function can be used for breaking a master project into smaller files (which you can merge at a later date), or for sending a portion of the data in your project to technical support. The following data is available for extracting: entities and their attributes, custom attributes, production, custom datasets, worksheets, analyses, reference dates, wellbore data, wellbore configurations (if none exist), and numerical models.

To Piper — opens the [Piper Export wizard](#), which guides you through exporting entities, and entity-and-analysis pairs for use in Piper®.

To WellTest — browse to the location where you want to save your .hmexp file. For more information, see [export to WellTest](#).

To Harmony Analytics — opens the Analytics connector. If you do not have Spotfire installed, an error message pops up. For more information, see [Harmony analytics](#).

View

Toolbars and Docking Windows — select the toolbars and docking windows you want to display.

Toggle Units — switches between metric and field (imperial) units.

Tools

Import Templates / Workflows — imports an .hrmtemplate file. After browsing to your file, you select from the following options:

- **Discard existing** — deletes your existing templates / workflows.
- **Keep existing, and discard imported duplicates** — keeps your existing templates / workflows, and when there are duplicate templates / workflows being imported, they are not imported.
- **Keep existing, and append imported duplicates** — keeps your existing templates / workflows, and when duplicates exist, additional templates / workflows are created (for example, <filename>1, <filename>2, and so on).
- **Keep existing, and overwrite existing duplicates** — keeps your existing templates / workflows, and overwrites existing templates / workflows when duplicate templates / workflows are imported.

Export Templates / Workflows — exports an .hrmtemplate file of your templates and workflows.

Tip: Templates and workflows are user-specific. Therefore, any templates or workflows you create are not seen by other users in a multi-user environment.

Options — opens the [Options dialog box](#).

Help

Web Help — opens the Harmony Enterprise help system. Note that an Internet connection is required.

Release Notes — opens the Release Notes topic.

Licensing — opens the Licensing dialog box where you can request and release licenses.

Error Report Directory — opens File Explorer and the location where log files are saved.

Online Support — opens the Customer Care web page.

Getting Started Video — opens the On24 web page, which lists free webcasts to help you get started.

Technical Resources — opens the Energy Resources web page, where you can view technical videos, published papers, and unconventional energy maps.

Engineering Webcasts — opens the Engineering web page, where you can register to view helpful videos.


Product Alerts Opt-In — opens the IHS Markit Energy Event Opt-In web page, where you can select the products you want to get alerts for.

Panes

Panes are windows in Harmony Enterprise that contain specific groups of data. Panes include the Entity Viewer – Hierarchy pane, the Entity Viewer - Custom pane, the Clipboard, the Status Window, and all of the data windows inside the tabs. You can move panes to a variety of positions to suit your needs.

Docking functionality


When you click-and-drag the pane's title bar, the docking navigator is displayed.

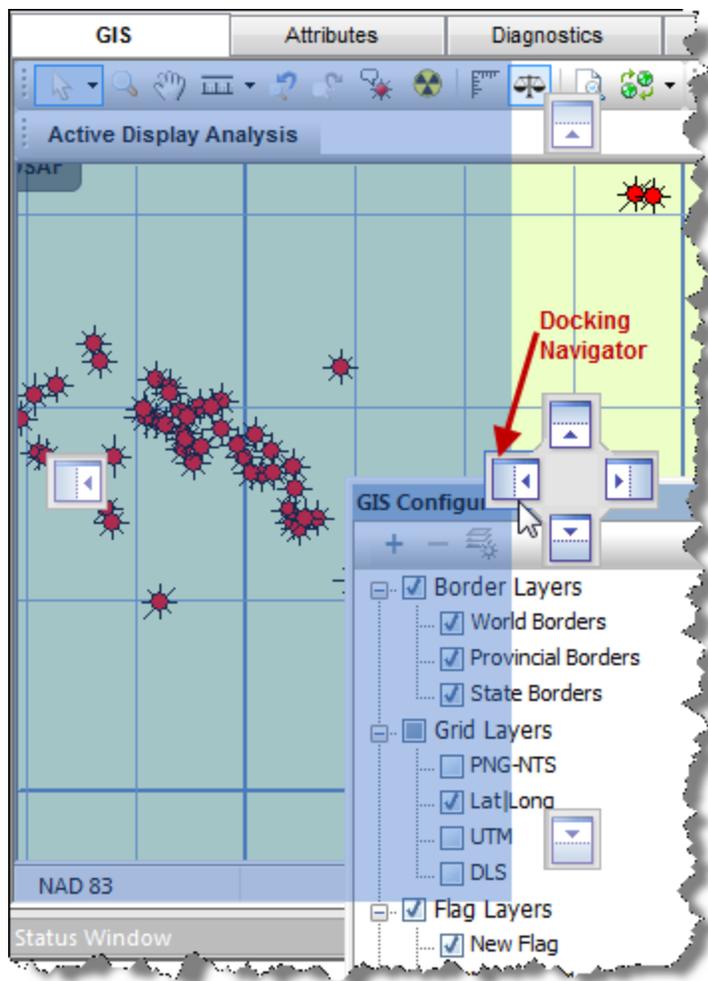

You can dock the pane in these positions:

- top, bottom, left, and right of the application's window
- in a tabbed view


To dock the pane in a tabbed view, hover over the center box and release. Note that you cannot use a tabbed view with non-docking panes.

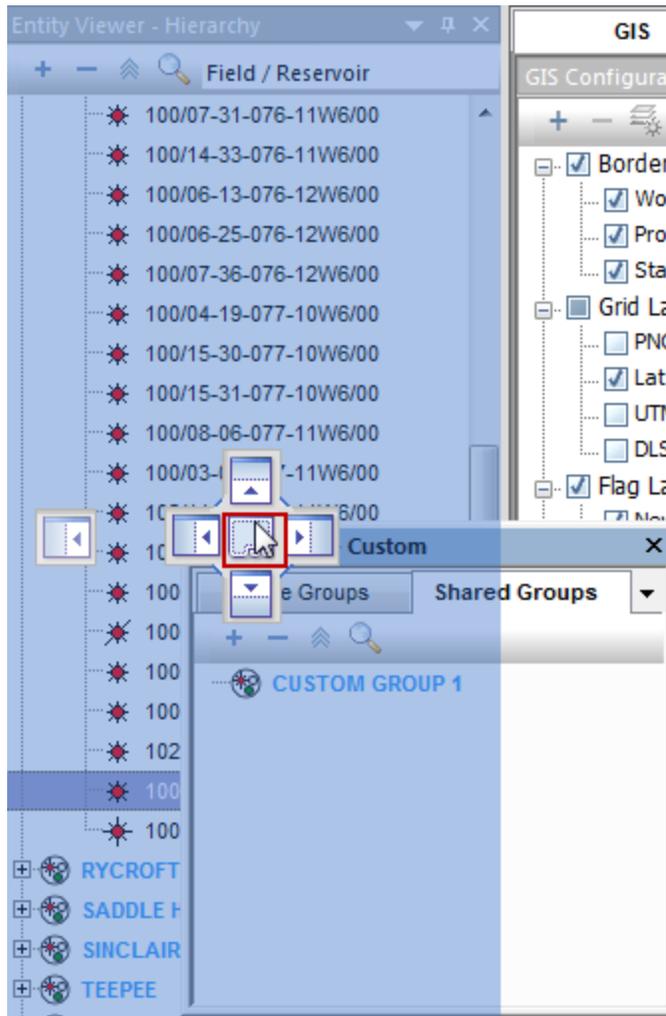

To undock the pane, click-and-drag the tab to a new location.

Pane options

When you right-click the pane's title bar, you can select various options from the context menu.

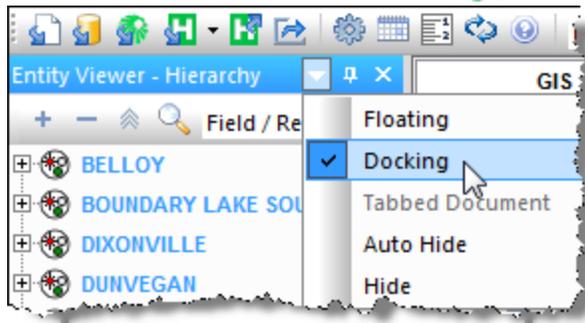


- **Floating** — detaches the pane from the main window. You can move the pane to your preferred location, including outside the application's window.

- **Docking** — returns the pane to its last docked position.

You can also double-click the pane's title bar to float / dock the pane.

- **Auto Hide** — moves the pane to a tabbed position on the left-side of the application.

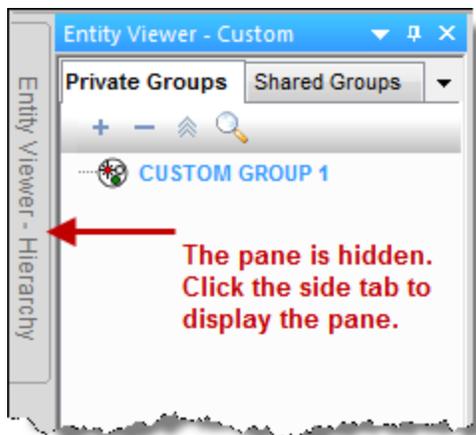


- **Hide** — this option is only applicable for the Clipboard and the Status Window. If you select this option, the pane is hidden. To show a hidden pane, click the **View** menu and select **Toolbars and Docking Windows, Clipboard** or **Status Window**.

Pin functionality

If you click the **Pin** icon (📌) in the pane's title bar, the pane moves to a tabbed position on the left-side of the application.

To return the pane to a docked position, click the sideways pin icon.

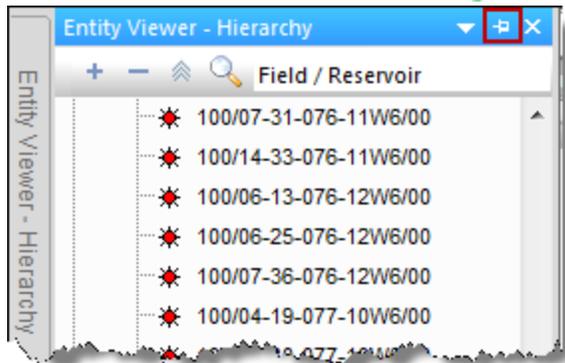


Selecting entities

You can select entities in a variety of ways. For example, you can select entities from the:


- GIS map
- Entity Viewer - Hierarchy pane
- Entity Viewer - Custom pane

There is a direct connection between the Entity Viewers (Hierarchy pane and Custom pane) and the tabs. Wells and groups listed in the entity viewers can be selected by clicking them in the Hierarchy pane or Custom pane. You can select multiple entities by clicking wells while holding down the **Ctrl** key (to make individual selections), or the **Shift** key (to make group selections).

Wells that are selected in the Custom pane are automatically selected in the Hierarchy pane. However, if a well is originally selected in the Hierarchy pane, it is not automatically selected in the Custom pane. Also, a selection of a custom groups cannot be made simultaneously with an additional selection of individual wells in the Hierarchy pane.

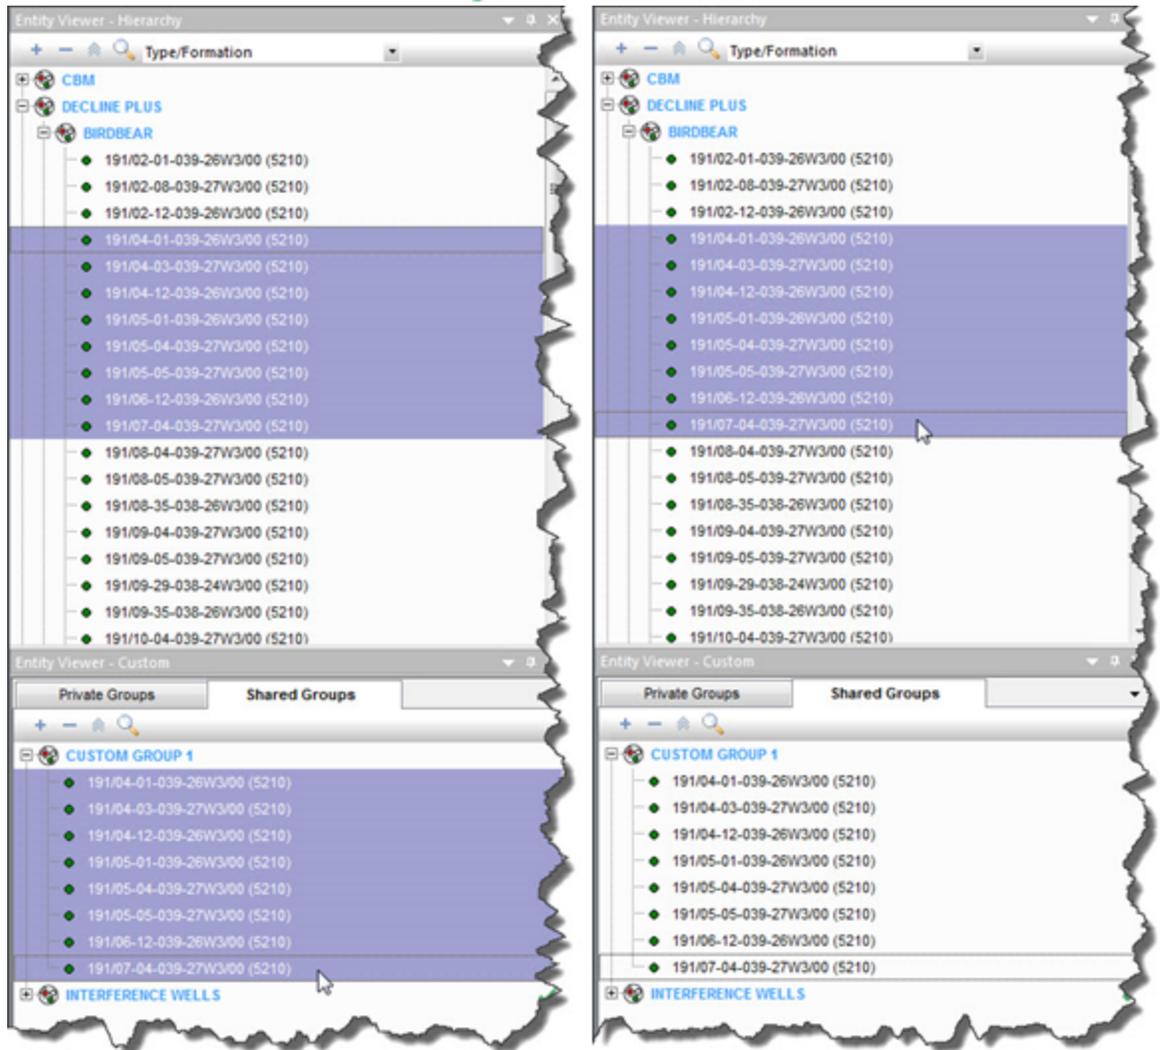


Entities displayed on the GIS map can be selected by clicking them on the map (GIS tab). For example, when a well is selected, it turns light green. When one or more entities are selected in the GIS tab, the same entities are selected in the Hierarchy pane. Multiple entities can be selected in the GIS tab by pressing the **Ctrl** key while clicking entities on the map.

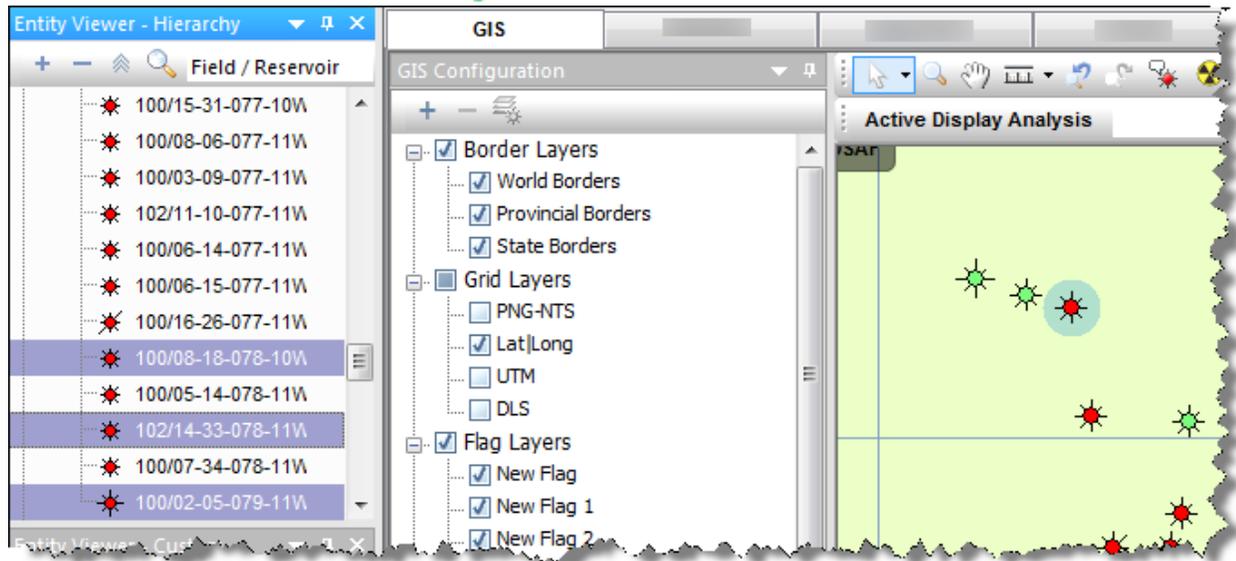

Multiple selections can be further refined by using the Select Subset option on the Attributes tab and Results tab.

You can also adjust your entity selection on the Analysis tab, using the typewell worksheet, but only a single entity can be selected from the Typewell worksheet. This entity must be a member of the group that the typewell analysis is being applied to, and the selection is only displayed in the Hierarchy pane. You can select this entity by right-clicking an individual well's dataset in the Typewell plot and selecting **Select Entity**. You can also select wells using their analysis lines.

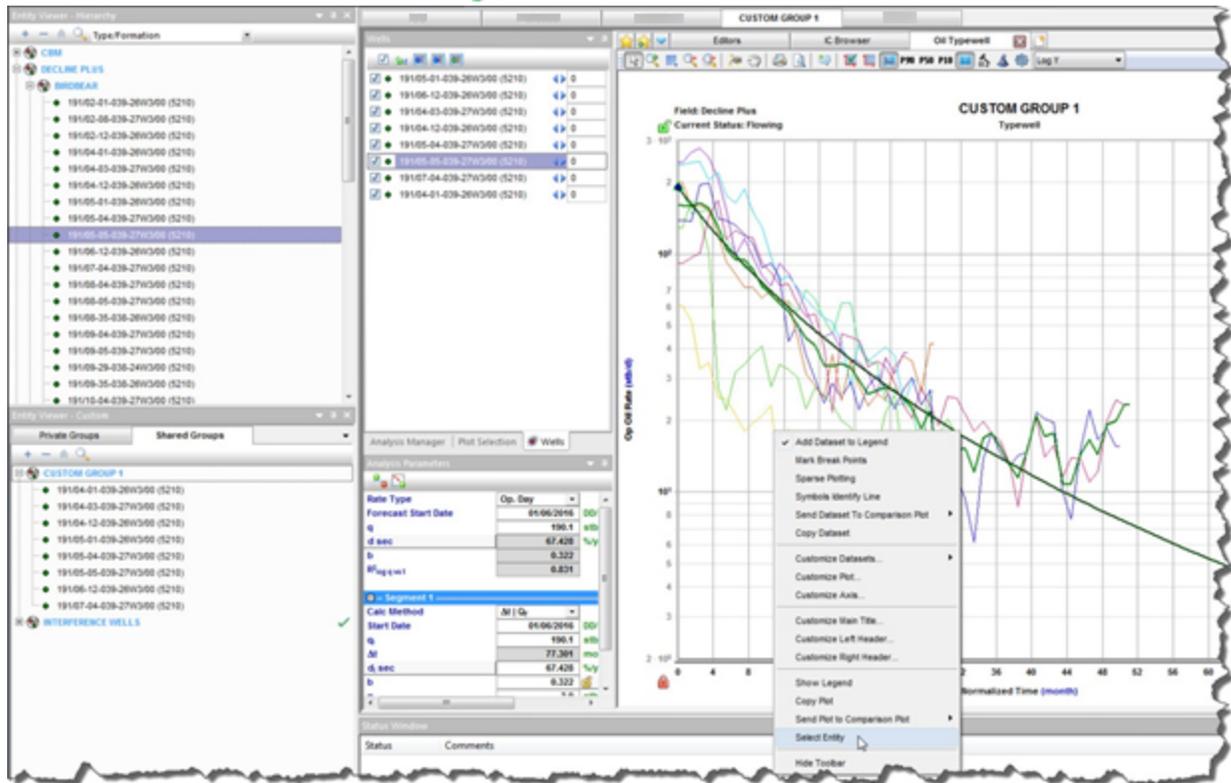

Tip: You can also use your keyboard's arrow keys to change your selections. (This can be useful when, for example, you preview data on the Diagnostics tab.)


Status Window

By default, the Status Window is docked at the bottom of Harmony Enterprise's content pane. The Status Window displays short descriptive messages pertaining to the current state of the project, or the results of actions as you perform them. Scenario names are used in the Status Window.

Note: To hide or show the Status Window, click the **View** menu, **Toolbars and Docking Windows, Status Window**.

Status Window options

When you right-click a message in the Status Window you can select various options from the context menu.

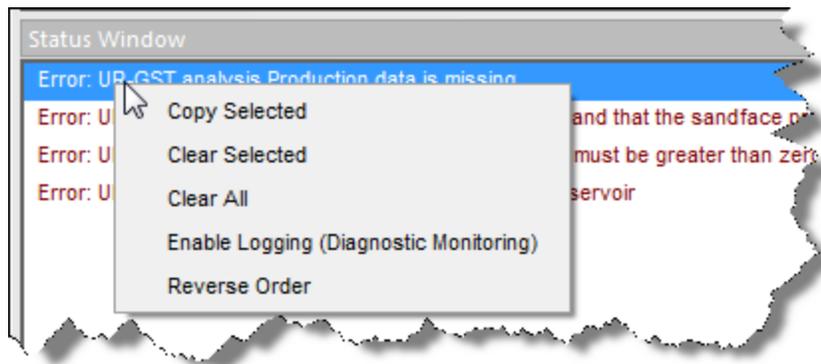

- **Copy Selected** — copies the selected message to the clipboard.
- **Clear Selected** — removes the selected message from the Status Window.
- **Clear All** — removes all messages from the Status Window.
- **Enable / Disable Logging (Diagnostic Monitoring)** — if you enable logging, a text file is saved to your computer's hard drive. This text file logs all of the messages displayed in the Status Window.


This log file is stored in the following location: \User-s\user permissions in local folders.

- **Reverse Order** — by default, the most recent messages are displayed at the bottom of the Status Window. To reverse this display order, select this option.

Message categories

There are three categories of messages:

1. **Normal** — operations that are running correctly. No action is required.
2. **Warning** — operations that can run, but may give erroneous results due to invalid or missing parameters. Corrective action is likely required.
3. **Error** — operations that cannot be completed. Corrective action is required to resolve the error.

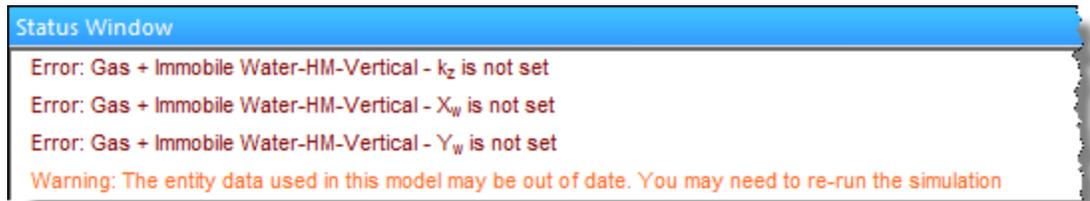


Note: You can double-click some issues to go to the problem area as soon as the issue arises.

Tabs

Tabs are displayed across the top of the Harmony Enterprise window, and can be detached from the application window to facilitate comparing data, especially when comparing multiple entities at the same time.

To float a tabbed window, double-click the tab.

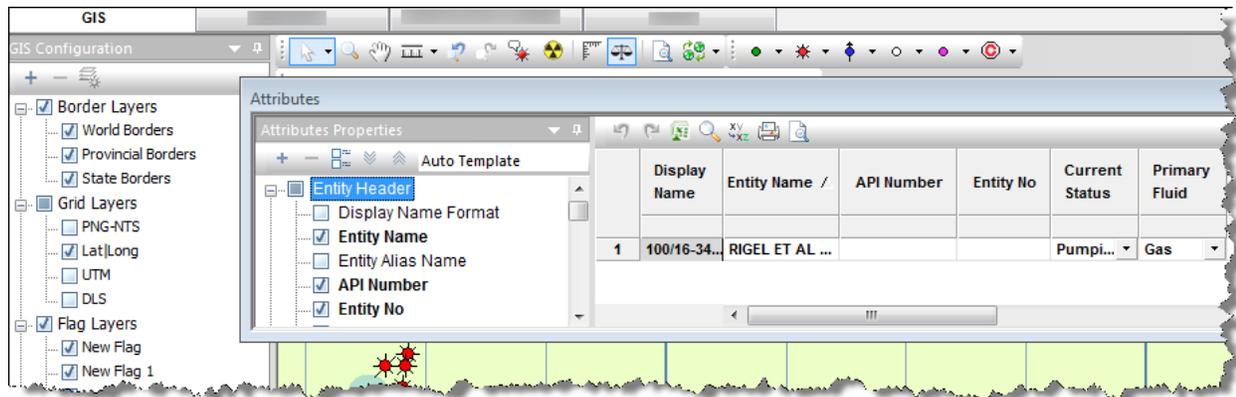

To return a floating tab to its docked position, double-click the tab.

Tip: All of the tabs can float except for the Analysis tab and Diagnostics tab.

Toolbars

Harmony Enterprise has many toolbars. Some toolbars have icons that are specific to a certain toolbar (for example, the [GIS toolbar](#)), while other toolbars have common icons. This topic describes the most common toolbars and related icons.

Main toolbar

The main toolbar has the following icons:

-  **Import** — select from these options:
 -  **Database Connection** — imports data from a database. For more information, see [import well data from a database](#).
 -  **Enerdeq / IHDC** — imports / updates your Harmony project with data from Enerdeq or IHDC. For more information, see [import from Enerdeq](#).
 -  **PowerTools** — opens the PowerTools File import dialog box where you browse to your PowerTools file and historical Enerdeq data (optional).
 -  **.Harmony file (single user)** — [imports a project from single-user Harmony](#). (You can import a single file or multiple files.)
 -  **.hldb file** — imports data from a local database extracted from Harmony Enterprise. (This functionality does not apply to SE licenses.) For more information, see [import from an .hldb file](#). (You can import a single file, or you can bulk import multiple files in the Browse dialog box.)
 -  **Piper Forecasts** — opens the Well Selection and Piper Forecast Import dialog box where you can update your selected wells, or update all wells, with your Piper forecasts (.fdb files). Note that your existing analyses are never overwritten.
 -  **WellTest** — opens the Import dialog box where you browse to your WellTest file.
 -  **File** — imports a file. For more information, see [import well data from a file](#)

-  **Export** — select from these options:
 -  **Production Data, Forecasts, or Decline Analyses** — export production data, parameters from decline and multi-segment decline analyses, or export all forecasts. For more information, see [export data](#).
 -  **To .hldb file** — you can export a portion of the data from an existing Harmony Enterprise project to create a new project. This function is useful, for example, for breaking a master project into smaller files (which you can merge at a later date), or for sending a portion of the data in your project to technical support. The following data is available for exporting: entities and their attributes, custom attributes, production, custom datasets, work-sheets, analyses, reference dates (excluding active reference dates), wellbore data, wellbore configurations, and numerical models.

Note: You need to install a LocalDB (under *Shared Features* for SQL Server Express 2012 / 2014 or SQL Server 2012 / 2014) in order to export wells. If you attempt to export wells without a local database, an error message is displayed.
 -  **To Piper** — opens the [Piper Export wizard](#), which guides you through exporting entities, and entity-and-analysis pairs for use in Piper®.
 -  **To WellTest** — export your selected entities to a .hmexp file.
 -  **To Harmony Analytics** — opens the Analytics connector. If you do not have Spotfire installed, an error message pops up. For more information, see [Harmony analytics](#).
-  **Options** — opens the [Options dialog box](#), which contains settings for various processes in Harmony Enterprise.

Any of the User Settings you change are applied after you close the dialog box, and do not impact existing entities. However, Shared Settings are database settings that apply to all entities, both new and old.
-  **Reference Dates** — opens the [Reference Dates dialog box](#) where you can create a new reference date, specify the active reference date, or hide archived reserve analyses.
-  **Bulk Editor** — opens the [Bulk Editor dialog box](#) where you can delete analyses and worksheets. You must select an entity from the Entity Viewer prior to clicking this icon.

-  **Toggle units** — switches the units displayed between metric and field (imperial).
-  **Refresh** — reads the most up-to-date information from the data source you are connected to. Click this icon to see / get changes made by other users connected to the same data source.
-  **Help** — opens the online help.
- **Project Filter** — click the drop-down list to select a filter you previously created, modify a filter, or select no filter (the default setting). For more information, see [project filters](#).

Plot toolbars

Different plots have different icons available on their toolbars. The most common icons are listed below:

-  **Set Mouse to Default** — switches the cursor to its default state. When the cursor is in its default state, you can hover over any dataset displayed on the plot to read its values on the tooltip.
-  **Display a toolbar with options to zoom** — opens an additional toolbar with zooming options:
 -  **Point Zoom** — click a data point to zoom in 50%.
 -  **Rectangular Zoom** — click-and-drag a rectangle around the area you want to zoom into.
 -  **Undo last zoom** — undo your latest zoom.
 -  **Undo all zooms** — resets the plot display to your original view.
-  **Pan Data** — switches the cursor to a Pan Data state. When the cursor is in this state, you can pan the x- and/or y-axes by clicking-and-dragging within the plot or the desired axis.
-  **Print** — opens the Print dialog box.
-  **Print Preview** — opens the Plot (Preview) window where you can adjust how your plot prints.

-  **Create Annotation** — opens the Create Annotation dialog box. Select your type of annotation from the **Attach To** drop-down list:
 - **screen** — attaches your annotation to a fixed area on the screen. This annotation retains its position, if you rescale your axes.
 - **plot** — attaches your annotation to a fixed area on the plot. This annotation moves with the plot, if you rescale your axes.
 - **data** — (default setting) attaches your annotation to an x- and y-data point. If you use your keyboard arrow keys, you can move your annotation along the dataset and view the coordinate values of each plotted point. This annotation moves with the data point, if you rescale your axes.
-  /  **Toggle the Autoscaling Option for the Plot** — switches automatic scaling on and off. When automatic scaling is on (the icon is in the  state), the plot scales adjust to fit all the data whenever the data is modified. When automatic scaling is off (the icon is in the  state), the plot scales remain unchanged whenever the data is modified.
-  **Rescale all axes** — adjusts the minimum and maximum of the x- and y-axes to fit all data within the plot.
-  **Display a toolbar with options to select data points** — opens an additional toolbar with point-selection options for best-fitting your analysis. These icons are described from left-to-right.



Scrolling your mouse wheel increases / decreases the spraygun tool's selection area

- **spray gun** — selects points when you left-click, and deselects points when you right-click. The mouse wheel can be used to change the spread-tool's size.
- **select all data points** — selects all the data points on the plot.
- **deselect all data points** — deselects all the data points on the plot.

-  **Print** — opens the Print dialog box.
-  **Print Preview** — opens the Grid (Preview) window where you can adjust how your table prints.
-  **Export to Excel** — saves your table data to a .csv file.


Components

Harmony Enterprise components / modules include the following:

- Analysis Manager
- Analysis tab
- Attributes tab
- Entity Viewer - Hierarchy
- GIS
- Harmony Analytics
- Query Wells dialog box
- Reference Dates dialog box
- Results tab
 - Results Viewer - Grid View
 - Results Viewer - Plot View
 - Comparison Plot
 - Reporting
 - Bulk modify decline analyses
- Best-fitting functionality
- Bulk Editor dialog box
- Database connection
- Diagnostics tab
- Economics
- Editors
- Entity Viewer - Custom
- Import functionality
- Monitor tab
- Options dialog box
- Piper export
- Plots
- Plot Selection pane
- Project filters
- Role-based security
- Scenarios
- Tables / grids
- Worksheets

Analysis Manager

The Analysis Manager opens each time you create a new Harmony Forecast worksheet, or open an existing worksheet. Within the Analysis Manager, you can display and manage the analyses on an open worksheet.

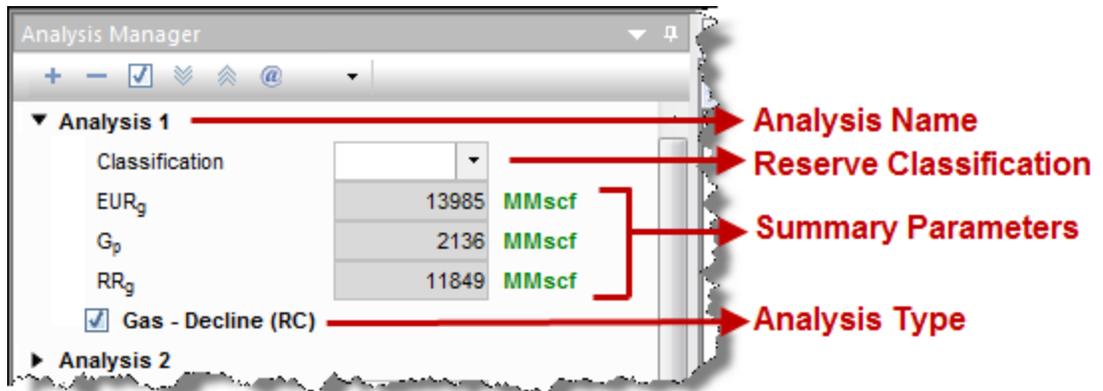

Within the Analysis Manager pane is a tree structure that displays all of the existing analyses. If you want to rename an analysis, use the ... button and select the Rename option. Under each analysis:

- You can set your reserve classification from the **Classification** drop-down list, but this requires an active reference date. For more information, see Reference Dates dialog box.
- A summary of analysis results are displayed, showing the estimated ultimate recovery (*EUR*), historical cumulative production at the forecast start date (*G_p* or *N_p*), and remaining recoverable (*RR*) for the fluid in the analysis.
- You can select / deselect the analysis type to show / hide the analysis on the worksheet. After you select an analysis, a list of detailed parameters pertaining to that analysis is displayed in the Analysis Parameters pane below the Analysis Manager pane. Within the Analysis Parameters pane you can view and modify your parameters.
- If you created a probabilistic numerical analysis, you can toggle the P10, P50, and P90 forecasts on or off.
- If you imported a Piper® Forecast, it is displayed with a "- Piper Forecast" suffix (for example, Gas - Piper Forecast, Oil - Piper Forecast, or Water - Piper Forecast) in the Forecast worksheet.

Toolbar

This toolbar has the following icons:

-  **Add Analysis** — adds an analysis to the current entity with the type specified. You can add these types of analysis:

- | | | |
|--|---------------------------------|---------------------------------|
| - <u>Arps Decline</u> | - <u>Forecast Consolidation</u> | - <u>WOR Analysis</u> |
| - <u>Stretched Exponential Decline</u> | - <u>Ratio Forecast</u> | - <u>Oil Cut Ratio Analysis</u> |
| - <u>Duong Decline</u> | - <u>WOR / Oil Cut Forecast</u> | - <u>Ratio Trend</u> |
| - <u>Multi-segment Decline</u> | - <u>Custom Forecast</u> | |

Note that the analysis you are adding to a worksheet needs to be compatible with the selected entity for analysis, fluid type, and the worksheet itself. Harmony Enterprise does not restrict analyses based on the primary fluid of a well, but there are two restrictions:

- the entity type has to support the analysis (depending on whether the entity is a hierarchy group, custom group, or well).
 - the worksheet has to support the analysis (to add a gas decline, the plot has to contain cal / op gas rate vs time, normalized time, or cumulative gas).
-  **Remove Analysis** — deletes the currently selected analysis.
-  **Select All / Deselect All** — selects / deselects all of the analyses in the Analysis Manager.
-  **Expand All / Collapse All** — expands / collapses all nodes of the tree structure displayed in the pane.
-  **Reference Volume** — updates the cumulative production at the reference date for all classified analyses associated with the active reference date.

For a description of common icons, see [toolbars](#).

Analysis type menu

Clicking the ... button for an analysis type within the Analysis Manager lists these options:

Move — moves the analysis to the destination you select. To move an analysis:

- Click the ... button for the analysis type and select **Move to**, and then select a destination:
 - <New Analysis> — appears as a new analysis in the Analysis Manager, at the bottom of the pane. Note that if the current Analysis Name has only one ana-

alysis type, this option is not available.



<**Analysis Name**> — links the analysis to a selected analysis. If this was the only analysis type under the Analysis Name, the original Analysis Name is removed.

Copy to — moves a copy of the analysis to the destination you select, while retaining the original analysis in the Analysis Manager. To copy an analysis:

- Click the ... button for the analysis type and select **Copy to**, and then select a destination:
 - **<New Analysis>** — lists the copy as a new analysis in the Analysis Manager, at the bottom of the pane.




- **[Analysis Name]** — links a copy of the analysis to a selected analysis, while maintaining the original analysis.

The linked analyses can only associate a single forecast type (for example, decline or ratio) per fluid type. For example, you cannot link a multi-segment gas decline with any other type of gas decline. Neither can you link two WOR ratio analyses. However, you may:

- *copy* an oil decline into a gas decline analysis (or vice versa). The results of both analyses are displayed under the parent analysis name in the Analysis Manager.
- *copy* an oil decline analysis into a WOR analysis. The decline results always overwrite the ratio analysis results. This is a permanent action, and removing links does not

restore the results of the WOR analysis.

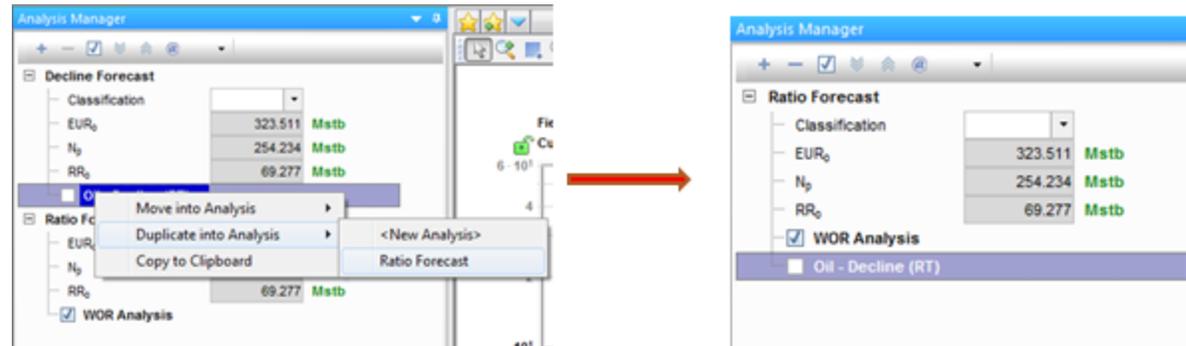


Copy to Clipboard — you can copy a decline or multi-segment decline analysis into the clipboard and paste it into the Analysis Manager of another entity. To copy an analysis to other entities:

- Click the ... button for the analysis type and select **Copy to Clipboard**.

The Clipboard pane opens.

- Drag the copied analysis from the Clipboard to the Analysis Manager of another entity. Or, right-click the empty space in the Analysis Manager and select **Paste Analysis from Clipboard**.

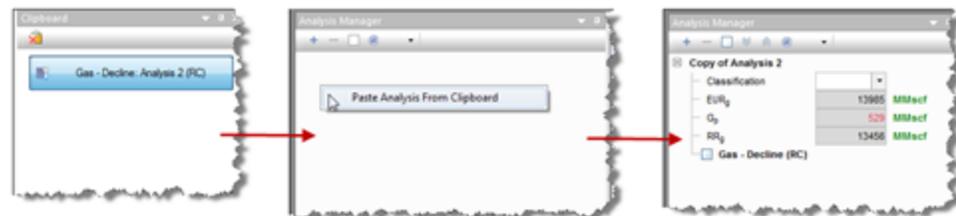


Delete — deletes the analysis.

Note: Instead of clicking the button, you can right-click an analysis name to access the same options.

Analysis tab

The Analysis tab displays your analyses. If you click this tab without first selecting an entity, you are prompted to do so.

After you have selected an entity and clicked this tab, you can select your worksheet. For more information, see selecting an entity for analysis.

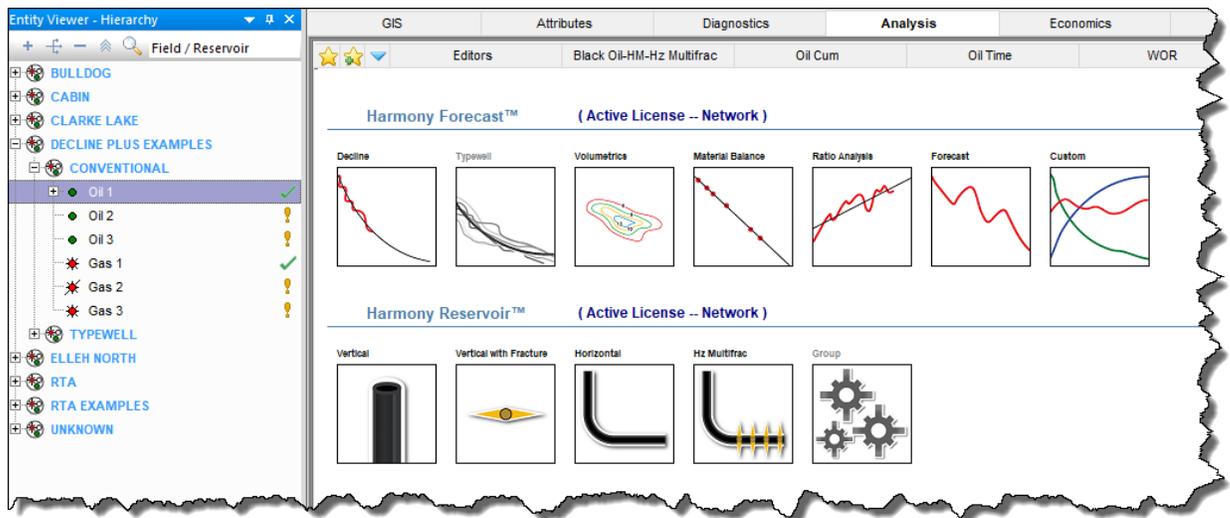


Tip: You can only display a single well, scenario, or group in this tab. Since a Typewell worksheet is used to display multiple decline analyses, it is grayed-out.

After you have selected an entity for analysis, that entity is locked until you select another entity. In other words, the lock is released when you click another entity. If another user tries to open the same entity for analysis while the lock is in place, a message is displayed in the main pane and the Status Window. There is no way to force the release of the well, but the username with the locked well is displayed in the Status Window.

Note: The editors are also locked when you are performing an analysis.

Attributes tab

The Attributes tab displays entity information in a table. Harmony Enterprise displays a default selection of attributes (named Auto Template) when one or more entities are selected in the Entity Viewer.

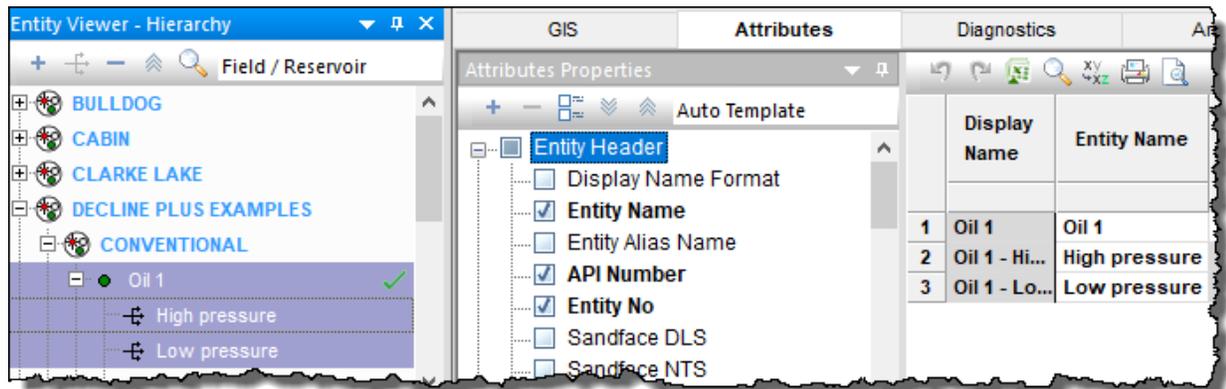

You can export this table to a .csv file. Some of the information displayed (for example, Reservoir or Operator name) is not required to perform a well analysis, but can be helpful for filtering data.

- The *Attributes Properties* tree structure to the left of the table lists all of the available well attributes. When you select an item in the *Attributes Properties* list, it is displayed in the table as a column heading. (Deselecting an attribute removes it from the table.)
- Columns added to the table are appended to the far right in the order in which they are selected. However, you can click-and-drag columns to change this order, or add a new column. You can also click-and-drag a column off of the table if you do not want that column displayed.
- Clicking a column header sorts the table data by its attribute value, according to the same sorting rules as MS Excel.

If you click a column header, and then press the **Ctrl** key, you can sort multiple columns at the same time. This is indicated by a sorting arrow in each of the columns. The columns are sorted in the order you click the header.

On Stream	Last Known Record	Cumulative G...
DD/MM/YYYY	DD/MM/YYYY	MMscf
01/09/2001	01/02/2002	11
08/09/2002	10/10/2004	101
01/01/2001	01/01/2003	380
08/06/2004	07/06/2024	1196
01/06/1992	01/03/2006	10012
01/01/1985	01/10/2010	17374
01/01/1985	01/10/2010	18292

- The first predefined attribute column is the Display Name. You can define the format of this column in the *Display Name Format* column. After the display name is set, that name format is used in every module and worksheet in Harmony Enterprise.

	Display Name	Display Name Format	Reservoir
1	Well01	Alias	ARCS A

DLS
 NTS
 API
 Name
 Number
Alias

Tip: Many users like to display an Alias for their entities. You can customize this display by selecting **Entity Alias Name** in the Attributes Properties pane and typing your alias name in the Entity Alias Name column.

Well attribute data can be imported from a file / database, entered manually, or copied-and-pasted from another table cell. The table cell's color can be used to identify the method by which data can be entered into the cell:

- **Gray** — read-only. These cells display data from another location in Harmony Enterprise, or these cells indicate that it is a calculated cell (for example, a custom attribute). Data in these cells cannot be modified.
- **White (no drop-down list)** — you can enter a value, or paste content from another cell.
- **White (with a drop-down list)** — you can select a value from the drop-down list, or you can paste a value from the drop-down list into these cells.

Scenarios

Scenarios are displayed in the same manner as wells, with these columns for additional information:

- **Scenario Name** — the name of the scenario. For more information, see [promote to well](#).
- **Created By** — the name of the user that created the scenario.
- **Last Modified Date** — the last date when the scenario was modified.
- **Last Modified By** — the name of the user that last modified the scenario.
- **Notes** — optional notes for the scenario.


Toolbars

The Attributes tab has two toolbars: primary and secondary. The unique items are described below; for a description of common icons, see [toolbars](#).

Primary toolbar

The primary toolbar is located below the *Attributes Properties* pane.


Clicking the  icon on this toolbar lists two options.

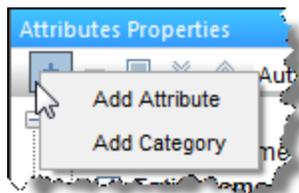

1. **Add Attribute** — opens the [Create Custom Attribute dialog box](#). You can create two different types of [custom attributes](#): *Input* (using values you enter), and *Calculated* (using equations you enter).
2. **Add Category** — opens the Create Custom Category dialog box where you can create custom categories to group your attributes. The selection tree updates after you add your category.

Other notes on this toolbar include the following:

- You can click the **Delete custom attribute / category** icon () after selecting the custom attribute or category you want to delete. You are prompted to confirm your decision when deleting a custom attribute, but a custom category is immediately deleted. Multiple custom attributes and datasets can be deleted quickly by using the **Ctrl** and **Shift** keys.
- After you have customized the table / grid display to your liking (for example, showing or hiding attribute properties and re-ordering the category headers), you can save your configuration as a template for re-use. Click the drop-down arrow on the toolbar and select **Save / Delete Template**. To load a previously saved template, select it from the drop-down list.
- To return to Harmony Enterprise's default template, select **AutoTemplate**.

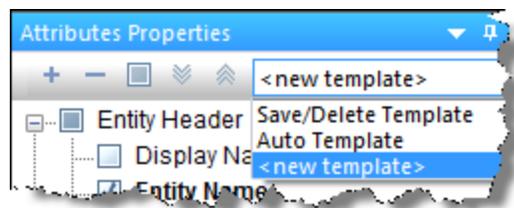

Note: Templates are user- and computer-specific; they are not database-specific.

Secondary toolbar

The secondary toolbar is located above the attributes table / grid and has the following important items:

-  **Undo / Redo** — undo your previous action, or redo your action.
-  **Find / Replace** — type the text you want to search for, and then type the text you want to use instead.


Context menus

Right-clicking the top left of your table lists these options:




- **Copy Grid** — copies the table to the clipboard.
- **Copy Grid + Headers** — copies the table and table headers to the clipboard.

Right-clicking the numeric columns' headers (the columns displaying units in green text) lists these options:

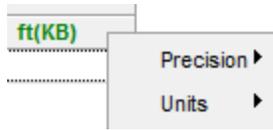

- **Precision** — select between decimal, scientific, or engineering.
- **Units** — select the units you want to display from the submenu.

After selecting your rows using the row headers, right-clicking the row numbers to the left and selecting **Select Subset** removes the other rows in the table, and this selection persists across Harmony (for example, the Entity Viewer, GIS map, and so on).

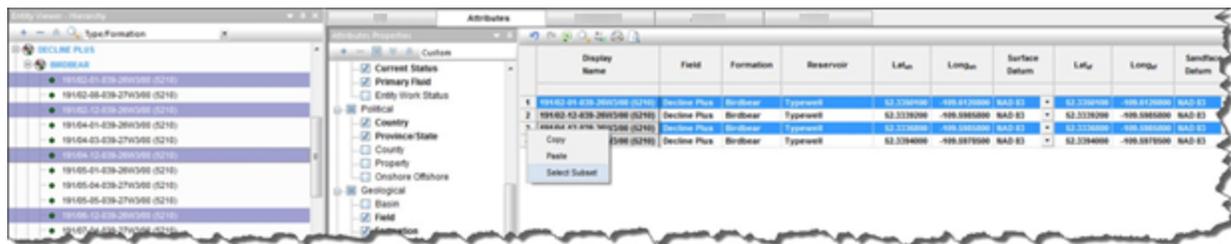

Right-clicking a *white table cell* lists these options: cut, copy, paste, and clear.

Custom

When you merge multiple .harmony files into a single SQL database or .hldb file, you often have duplicate custom attributes. You can delete extra calculated attributes, or merge custom-input attributes by right-clicking them.

Attributes Properties

- Onshore Offshore
 - Geological
 - Basin
 - Field
 - Formation
 - Formation Code
 - Reservoir
 - Reservoir Code
 - Unit
 - Cumulative Volume
 - Drilling
 - Operations
 - Completions
 - Initial Production
 - Well Properties
 - Reservoir Properties
 - Oil Properties
 - Gas Properties
 - Shale Properties
 - Location
 - Information
 - Scenario Name
 - Created By
 - Last Modified Date
 - Last Modified By
 - Notes
 - Security
 - Custom**
 - Custom Attribute
 - Custom Attribute (1)
 - Custom

	Display Name	Custom Attribute	Custom Attribute (1)	Custom Attribute (1) (1)
1	191/02-01-039-26W3/0...	Input 1		
2	191/02-08-039-27W3/0...	Input 1		
3	191/02-12-039-26W3/0...	Input 1	Input 2	
4	191/04-01-039-26W3/0...		Input 2	
5	191/04-03-039-27W3/0...		Input 2	
6	191/04-12-039-26W3/0...		Input 2	Input 3
7	191/05-01-039-26W3/0...			Input 3
8	191/05-04-039-27W3/0...			Input 3
9	191/05-05-039-27W3/0...			Input 3

Merge Custom Attributes

In the Merge Attributes dialog box, drag the most correct or complete attribute to the top. All the other attributes are merged into this custom attribute.



Merge Attributes

Drag and Drop to prioritize the attributes to be merged.
The top attribute will be retained and missing values merged from the attributes below in descending order.

Attribute Name
Custom Attribute
Custom Attribute (1)
Custom Attribute (1) (1)

OK Cancel

Attributes Properties

Province/State
County
Property
Onshore Offshore
Geological
Basin
Field
Formation
Formation Code
Reservoir
Reservoir Code
Unit
Cumulative Volume
Drilling
Operations
Completions
Initial Production
Well Properties
Reservoir Properties
Oil Properties
Gas Properties
Shale Properties
Location
Information
Scenario Name
Created By
Last Modified Date
Last Modified By
Notes
Security
Custom
Custom Attribute

	Display Name	Custom Attribute
1	191/02-01-039-26W3/0...	Input 1
2	191/02-08-039-27W3/0...	Input 1
3	191/02-12-039-26W3/0...	Input 1
4	191/04-01-039-26W3/0...	Input 2
5	191/04-03-039-27W3/0...	Input 2
6	191/04-12-039-26W3/0...	Input 2
7	191/05-01-039-26W3/0...	Input 3
8	191/05-04-039-27W3/0...	Input 3
9	191/05-05-039-27W3/0...	Input 3

Status Window

In order to merge custom-input attributes, keep these rules in mind:

- All attributes must be custom input (that is, no calculated or pre-existing / default attributes).
- All attributes must be the same type (that is, text, date, or number).

- If a well has values in multiple attributes, the order of the attributes in the Merge Attributes dialog box determines which value is maintained.

Note: You cannot merge if well security (see [role-based security](#)) is enabled because the merge is applied globally to all wells in the database or file.

Custom attributes

You can create custom attributes in Harmony Enterprise.

- When you click the **Add Custom Attribute / Category** icon () icon on the *Attributes Properties toolbar* and select **Add Attribute**, the [Create Custom Attribute dialog box](#) opens.
- Your custom attribute is displayed in the *Attributes Properties pane*, under the category you have selected.
- You can remove a custom attribute by selecting it and clicking the **Remove Custom Attribute / Category** icon () icon in the *Attributes Properties toolbar*. Multiple custom attributes and datasets can also be deleted quickly by selecting them and pressing the **Ctrl** and **Shift** keys.
- You can rename or edit your custom attribute's formula, by right-clicking it and selecting **Rename** or [Edit Formula](#).

Custom-calculated numeric attributes

If you selected **Number** for your *Unit Type* in the Create Custom Attribute dialog box, you created a custom-calculated numeric attribute.


Clicking the **Edit Formula** button in this dialog box opens the Equation Editor, where you can use a combination of existing production datasets, custom-input datasets, custom-calculated datasets, well attributes, custom-input attributes, custom-calculated attributes, constants, and mathematical operators to build your equation. For more information, see the [Equation Editor dialog box](#).

Custom-calculated text attributes

You can add a custom-calculated text attribute using a combination of existing text attributes, custom-text attributes, custom-calculated text attributes, and user-defined text.

When you click the  (**Add Custom Attribute / Category**) icon and select **Add Attribute**, the Create Custom Attribute dialog box opens.

- When you select **Text** from the *Attribute Style* drop-down list and **Calculated** for the *Type of Attribute*, the Equation Editor opens.

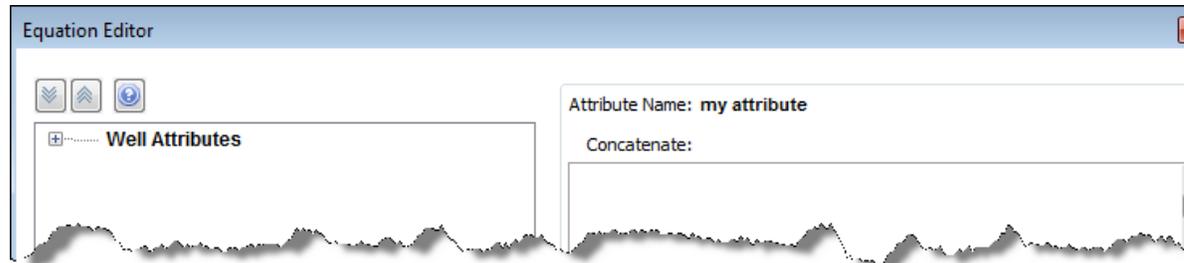

- You can type in the Concatenate pane, or you can select the attributes you want from the tree structure; then click **OK**.

The top part of the Equation Editor has the following components:

- **Tree structure** — displays an updated list of all the text attributes that are available for concatenation. This includes existing text attributes, custom-input text attributes, and custom-calculated text attributes. Clicking an item in the tree structure inserts it into the formula.
- **Concatenate pane** — displays the text attributes and user-defined text for concatenation (links items together).


Create Custom Attribute dialog box

This dialog box is commonly used when you add custom attributes. In this dialog box you are required to select your attribute type (*Input* or *Calculated*), style (*Number* or *Text*), and unit type (when applicable). You are also required to define a name and location for your attribute.

- **Attribute Name** — type a name for your custom attribute. This cannot be edited after the attribute is created, and this is a required field.
- **Attribute Style** — select Text, Number, or Date from the drop-down list. Note that this field cannot be edited after it is set.
- **Unit Type** — select your unit type from the drop-down list (enabled when you select Number for your Attribute Style). Note that this field cannot be edited after it is set.
- **Default Field Unit** — select your default field unit from the drop-down list (enabled when certain unit types are selected). By choosing a default unit, you specify in what unit, by default, your attribute is displayed. This can later be changed by toggling the displayed unit at the top of your attribute column.
- **Default Metric Unit** — select your default metric unit from the drop-down list (enabled when certain unit types are selected). By choosing a default unit, you specify in what unit, by default, your attribute is displayed. This can later be changed by toggling the displayed unit at the top of your attribute column.
- **Location** — select the attribute's location in the Attribute tab's tree structure from the drop-down list. This is a required field and you cannot click OK until a location has been selected.
- **Input** — uses values you enter.
- **Calculated** — opens the Equation Editor dialog box where you enter formulas for this attribute.

Equation Editor dialog box

This dialog box is commonly used when you add custom datasets or add custom attributes, and you want to use a Calculated type of dataset or attribute.

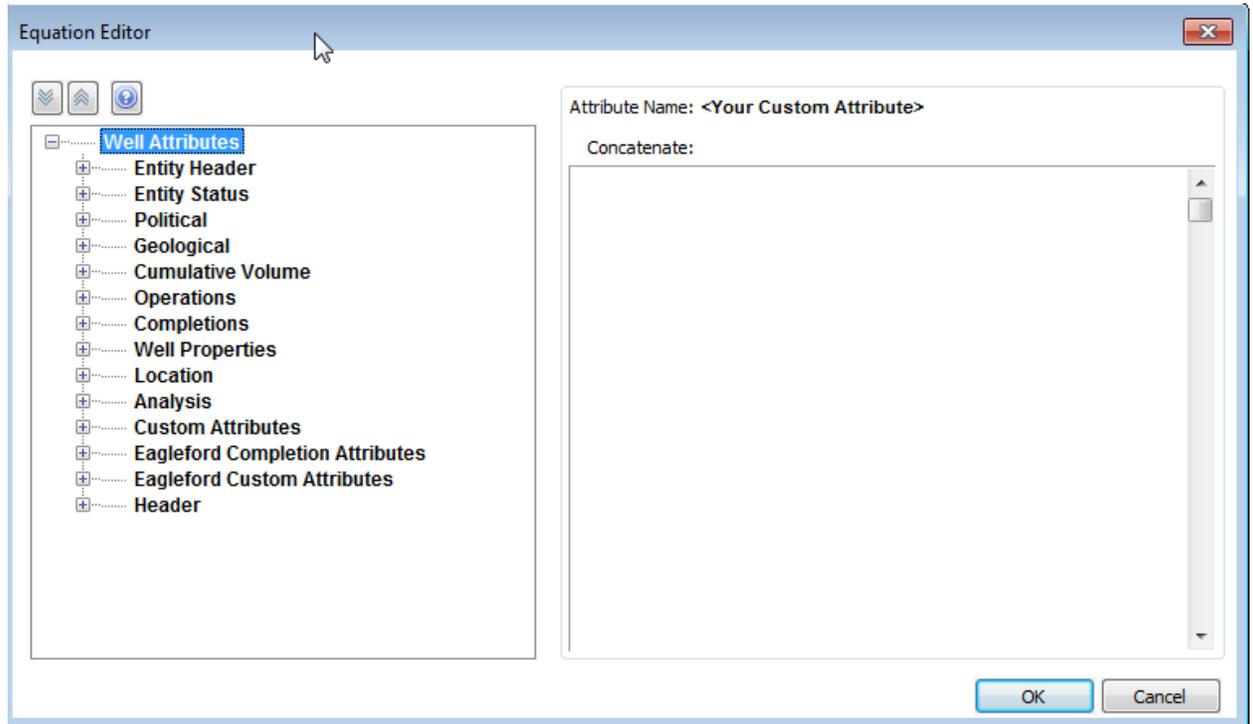

The Equation Editor has the following components:

- **Tree structure** — displays an updated list of all the production datasets that exist in the Production editor, as well as the numerical attributes that exist in the Attributes tab. This includes custom-calculated datasets, custom-input datasets, custom-input attributes, and custom-calculated attributes. Clicking an item in the tree structure inserts it into the formula.
- **Inputs / Units pane** — displays the units associated with each input.
 - If a dataset or attribute is displayed in an equation twice, only one unit can be associated with that variable.
 - The table / grid displays a list of datasets / attributes in the formula pane when you click the **Update Grid** button, *after* you enter a valid formula. You can also update the table / grid each time you make a modification to the formula by clicking the **Update Grid** button.

- Note that if your formula is invalid, clicking **OK** or **Update Grid** displays an error message in the lower left corner of the dialog box.
- **Calculator** — consists of numbers and mathematical functions.
- **Formula pane** — displays the formula as you create it.
 - The *output unit* is the unit associated with the output of your formula.
 - By clicking the four icons directly above the formula area, you can insert subscript, superscript, and symbols within the formula.
 - You can use both the on-screen calculator (by clicking the buttons in the dialog box) and your keyboard.

Tip: When entering a formula, make sure to add the closing “)” when using a function that opens with a “(“. If your formula is invalid, clicking **OK** displays an error message in the lower left corner of the dialog box.

Referencing other datasets / attributes

You can enter a formula into the Formula pane using the keyboard. To reference another dataset or attribute, you must use the following format:

- Attribute: [A:Attribute Name]
- Dataset: [P:Dataset Name]


Best-fitting functionality

Click to see subtopics:

- [Changing the slope of the decline curve](#)
- [Changing the historical match](#)
- [Changing the initial rate](#)
- [Changing the FSD](#)
- [Changing initial cumulative production & final cumulative production](#)
- [Changing the b value](#)
- [Changing the b value & final cumulative production](#)
- [Changing final cumulative production & decline rate](#)
- [Changing the abandonment rate](#)
- [Manipulating multiple segments](#)
- [Manipulating a multi-segment decline](#)

There are several methods you can use to manipulate your decline curve.



When manipulating the decline curve, there are three data points to be aware of.

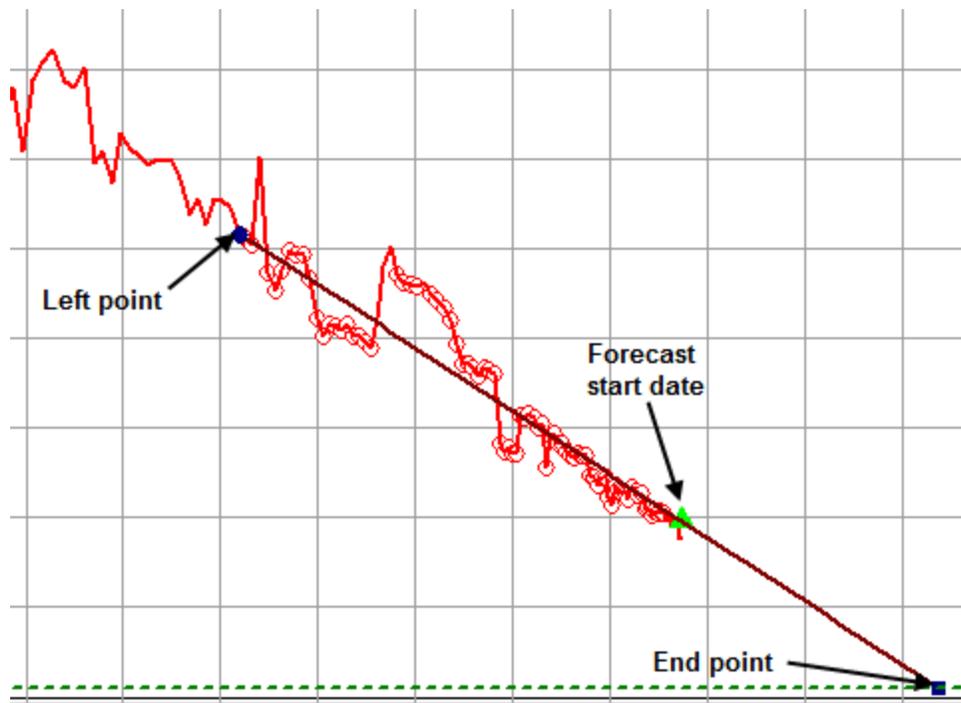

1. **Left point** — any historical data point. (The section between the left point and the forecast start date is not included in the forecast; it is only used to show the match to historical production.)
2. **Forecast Start Date** — the middle point on the line; this is the forecast start date (FSD).
3. **End point** — the expected ultimate recovery.


Changing the slope of the decline curve

To change the slope of the decline curve, click the decline curve line and drag. The line pivots around the FSD point, changing the decline rate and forecast duration. (If you drag the segment that does not have the FSD within it, the line pivots around the segment's start point.)

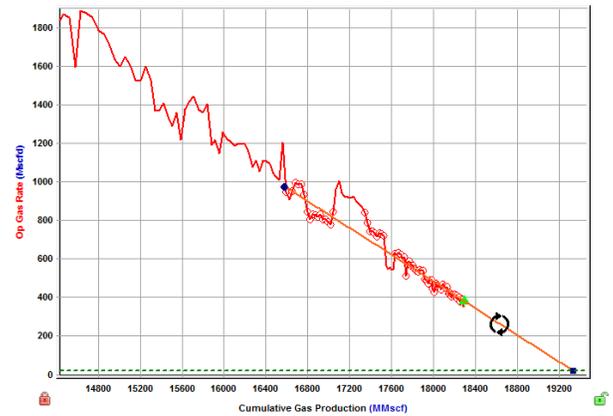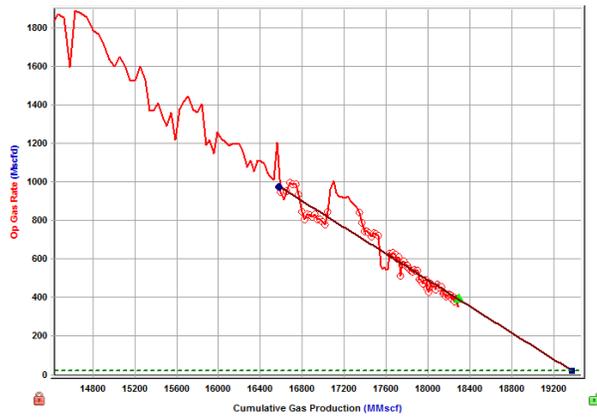


Changing the historical match

To change the historical match, click the left point while pressing the **Shift** key, and then drag it to a new position. This changes the portion of the historical production data used, but it does not change the analysis.

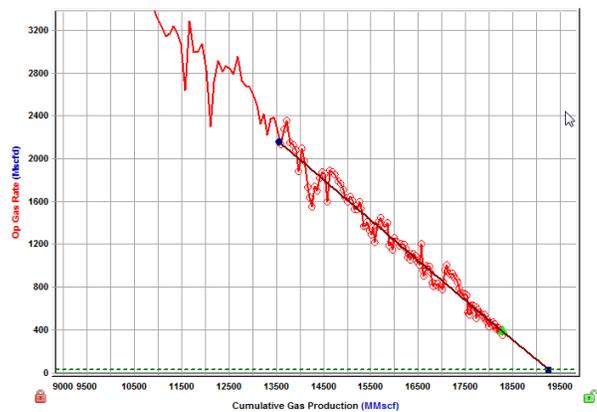

Changing the initial rate

To change the initial rate, click-and-drag the left point up or down. The initial rate and forecast duration change. Alternatively, you can click-and-drag the FSD point up or down.

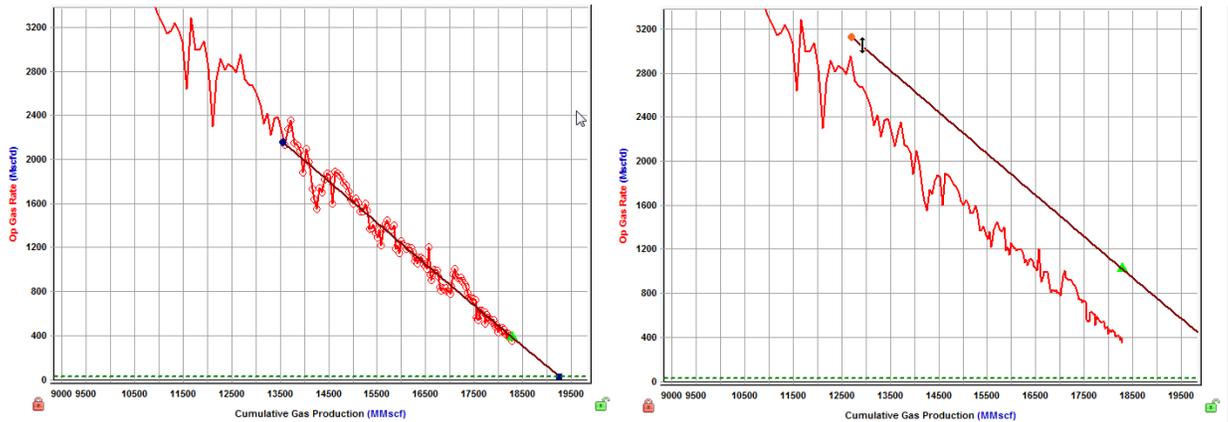

Changing the FSD

To change the FSD, enter a new date in the Forecast Start Date field in the Analysis Parameters pane.

Analysis Parameters

Rate Type	Op. Day	
Forecast Start Date	01/10/2010	DD/MM/YYYY
q	381.8	Mscfd
d sec	12.589	%/year
b	0.016	

Segment 1


Calc Method	$\Delta t Q_r$	
Start Date	11/06/1999	DD/MM/YYYY
q _i	1781.2	Mscfd
Q _i	14554.890	MMscf
Δt	424.193	month
d _i sec	12.890	%/year
b	0.016	<input checked="" type="checkbox"/>
q _r	16.2	Mscfd
End Date	16/10/2034	DD/MM/YYYY
ΔQ	4740.412	MMscf
Q _r	19295.302	MMscf

If you click-and-drag the FSD point left or right while holding down the **Ctrl** key, the FSD point moves together with the decline curve.

If you click-and-drag the FSD point left or right while holding down the **Shift** key, the FSD point moves along the decline curve (the curve itself does not move).


Changing initial cumulative production & final cumulative production

To change the initial cumulative production and final cumulative production, click-and-drag the left point while holding down the **Ctrl** key. This changes the start point without changing the initial oil / gas rate or decline rate.

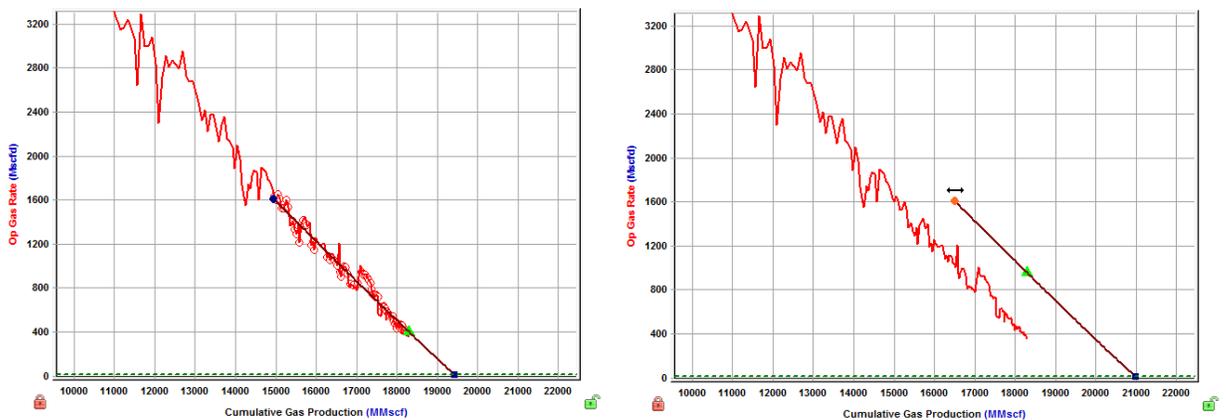


Changing the b value

To change the b value, click-and-drag the decline curve while holding down the **Ctrl** key. This changes the decline exponent value and the start point, while the left point and end point remain fixed. (The gray guidelines represent decline exponents of 0 and 1.)

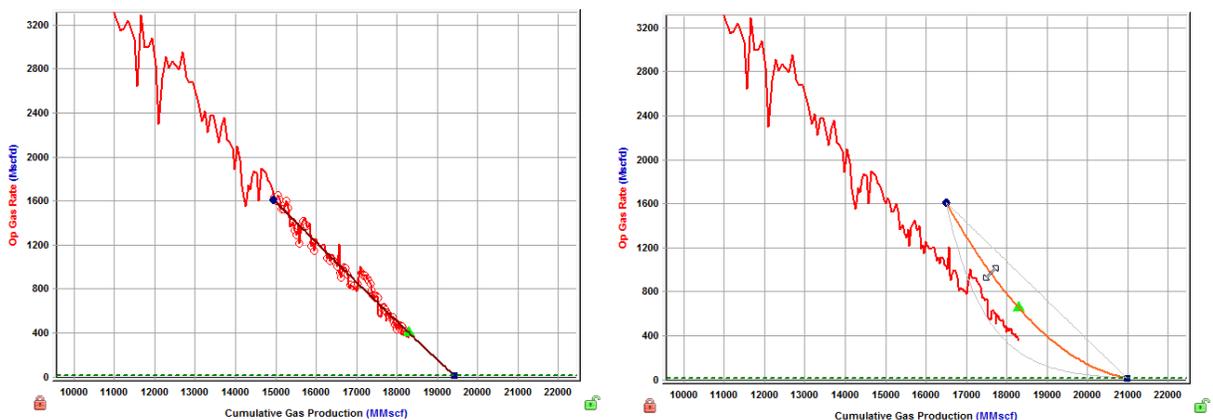


Changing the *b* value & final cumulative production

To change the *b* value and final cumulative production while maintaining the initial gas / oil rate, drag the end point while holding down the **Ctrl** key. (This method does not show the gray guidelines.)

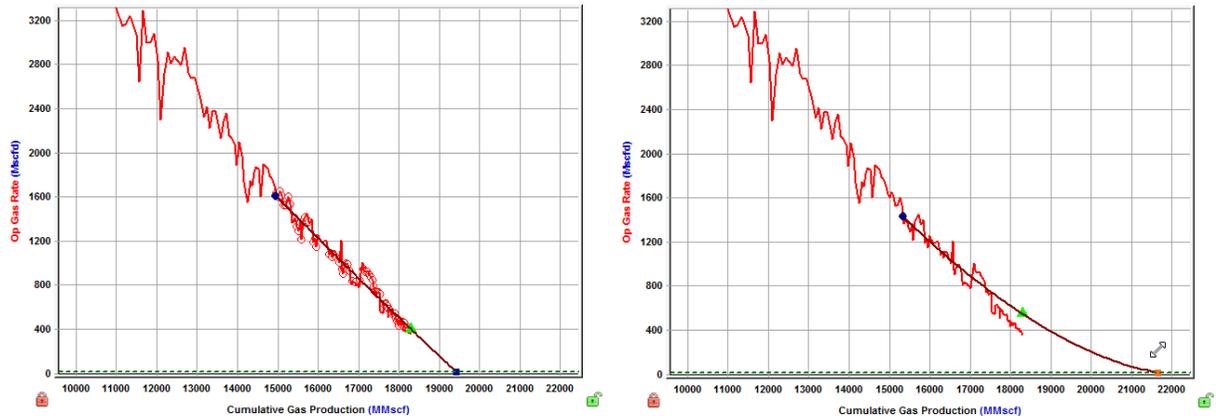



Changing final cumulative production & decline rate

To change the final cumulative production and the decline rate, drag the end point left or right. This changes the cumulative production of the segment and the forecast duration, without changing the final rate. The initial gas / oil rate and decline rate are also changed.

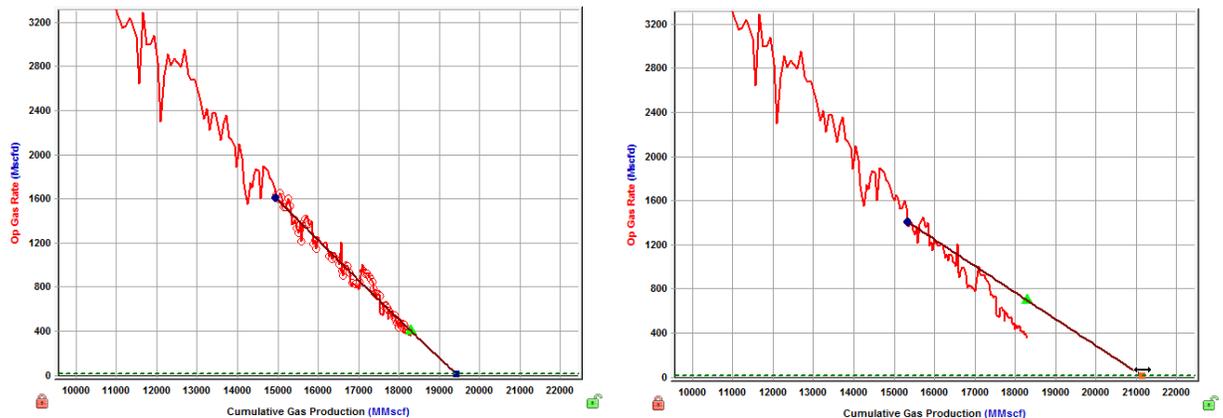

Changing the abandonment rate



To change the abandonment rate, drag the end point while holding down the **Shift** key. The final rate, cumulative production, and forecast duration are changed without changing the decline exponent, or effective decline rate.

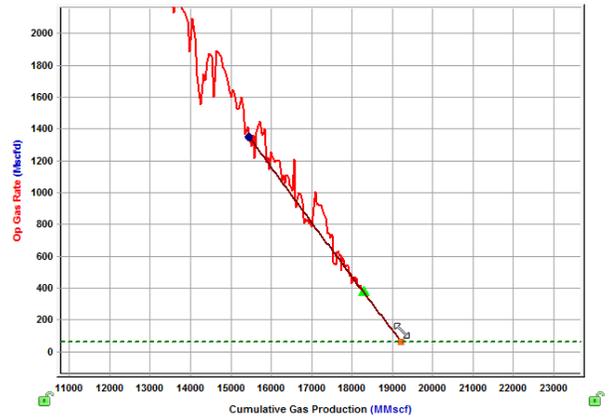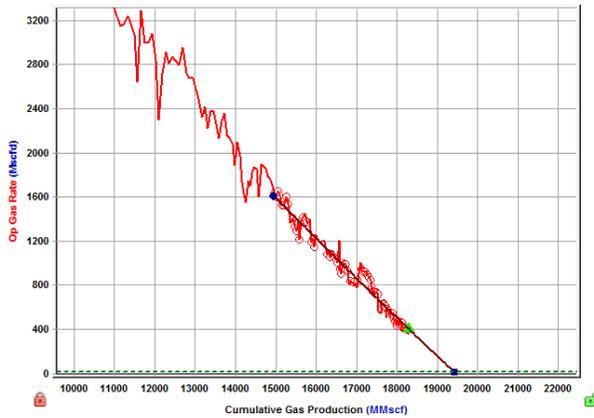

Manipulating multiple segments

Individual segments can be best fit to the corresponding data interval by using the data selection tool, and selecting data points between the start and end date of that segment.

Alternatively, selecting data points that span multiple segments best fits each segment to the points that lie between their individual start and end dates.

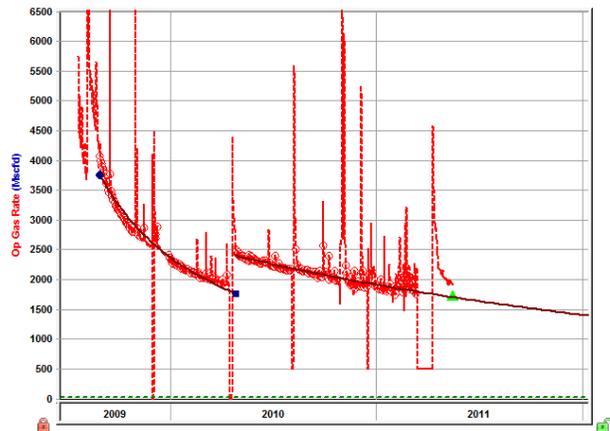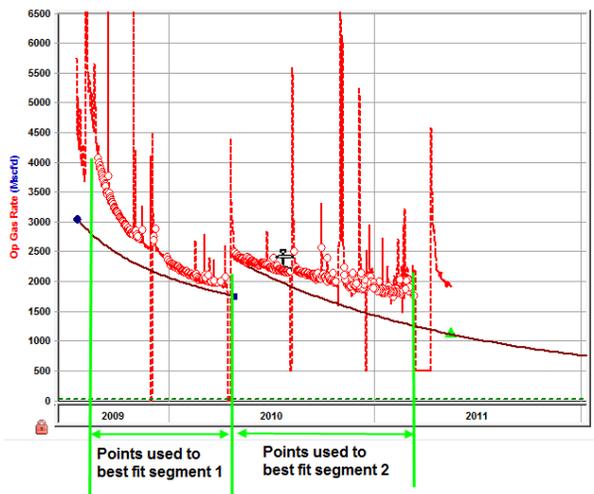

When best fitting using the data selection tool, the start date of the first segment corresponds to the first data point that is selected. The end date of the first segment can be changed by clicking-and-dragging the point left or right.

The end date of the first segment corresponds to the start date of the second segment. These dates are always be the same; however, the initial rate of the second segment does not necessarily have to be the same as the final rate of the first segment. (Additional segments can be added as needed.)

Manipulating a multi-segment decline


A multi-segment decline is initially "best fit" using all data points as follows:

- with the start date of the first segment equal to the start of production
- the end point of the first segment defined by the constraints entered in the Options dialog box
- the start date of the second segment equal to the end date of the first segment
- the end date of the second segment defined by the final gas rate

The first and second segments are always continuous, with the end date of the first segment equal to the start date of the second segment. As well, the instantaneous decline rate at the end of the first segment is equal to that at the beginning of the second segment.

Due to the continuity between the first and second segments, manipulating the shape of the first segment's decline curve impacts the second segment's decline curve.


All line manipulations described above can be applied to the multi-segment decline analysis. The length of the first decline segment can be changed by clicking the end point of the first segment and dragging left or right.

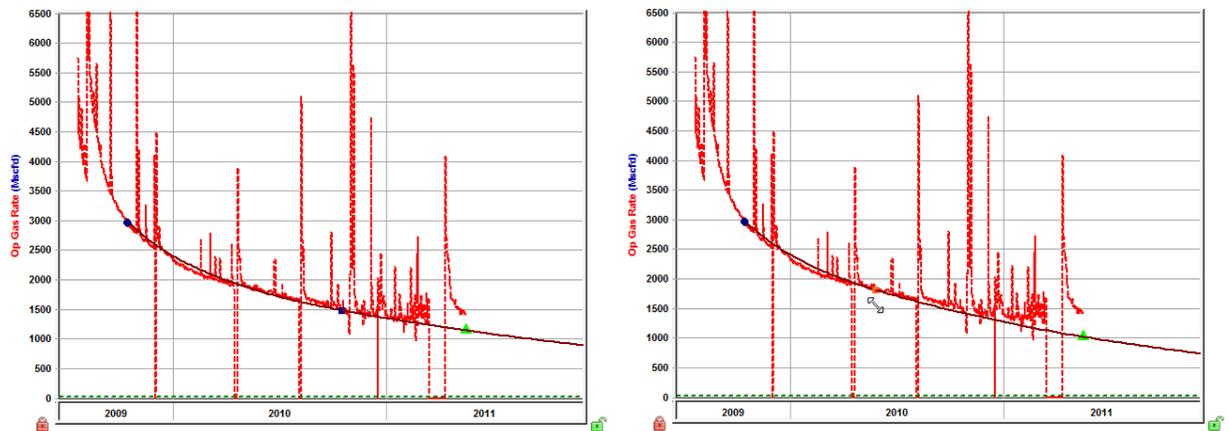

Bulk Editor dialog box

This dialog box is accessible by clicking the **Bulk Editor** icon () in the main toolbar.

In this dialog box, you can delete or rename multiple analyses and worksheets quickly.

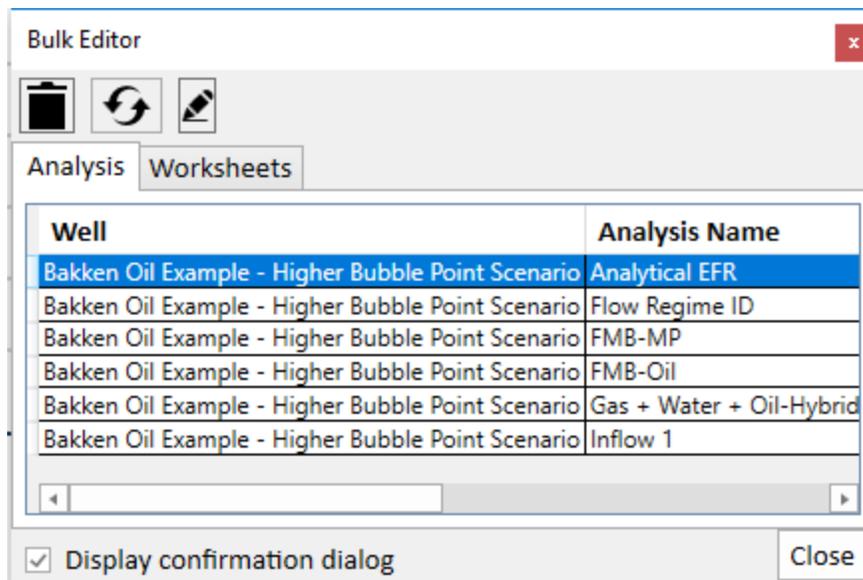

Select the analyses you want to delete or rename in the Analysis tab, and select the worksheets you want to delete or rename in the Worksheets tab. If you want to sort columns, click the column headers.

By default, the **Display confirmation dialog** option is selected. This means that if you make a change, a popup opens where you have to click **Yes** to confirm your decision.

Icons

Both tabs have the same icons.



Delete — deletes the analyses or worksheets you have selected. If an analysis or worksheet is locked by another user, a message is displayed at the bottom of this dialog box and in the Status Window. You are prompted to confirm your deletion.



Refresh — refreshes the list in the table, which can be useful when another user releases / unlocks an analysis or worksheet.



Rename — opens the Rename dialog box where you type a new name for your currently selected analyses or worksheets.

Exceptions

These exceptions apply to the bulk editor:

Selected groups of entities only display the analyses / worksheets at the group level, and not for individual entities. For example, if Well 1 and Well 2 are in a group called Pool A, and you select Pool A before opening the bulk editor, then analyses for Pool A are displayed, but analyses for Well 1 or Well 2 are not displayed individually.

Classified reserve analyses are not listed and cannot be deleted or renamed using the bulk editor.

The bulk editor treats linked analyses differently from other analyses. (You can tell that an analysis is linked if the Analysis Manager has more than one sub-analysis listed.) If you delete or rename a linked analysis, both the parent and child items are deleted or renamed.

If you delete or rename an FMB, typecurve, analytical, or numerical analysis, then the associated worksheet is also deleted or renamed. If you delete or rename the worksheet, the analysis is also deleted or renamed. The reason for this is because unlike other worksheet types that can display multiple analyses of various types, each of these worksheets is linked to its own analysis.

If you delete or rename a consolidated forecast, only the consolidation is deleted or renamed. The child analyses used in the consolidation are not deleted or renamed.




Database connection

These dialog boxes apply to the database connection:

- Set Up Connection Settings dialog box
- Assign Mapping dialog box
- Well Linking Criteria dialog box
- Set Up Filters dialog box
 - Filter a Column dialog box
- Select Wells to Import dialog box
- Import Options dialog box

Set Up Connection Settings dialog box

This dialog box is commonly used when you import well data from a database, and enables you to create or edit your database connections.

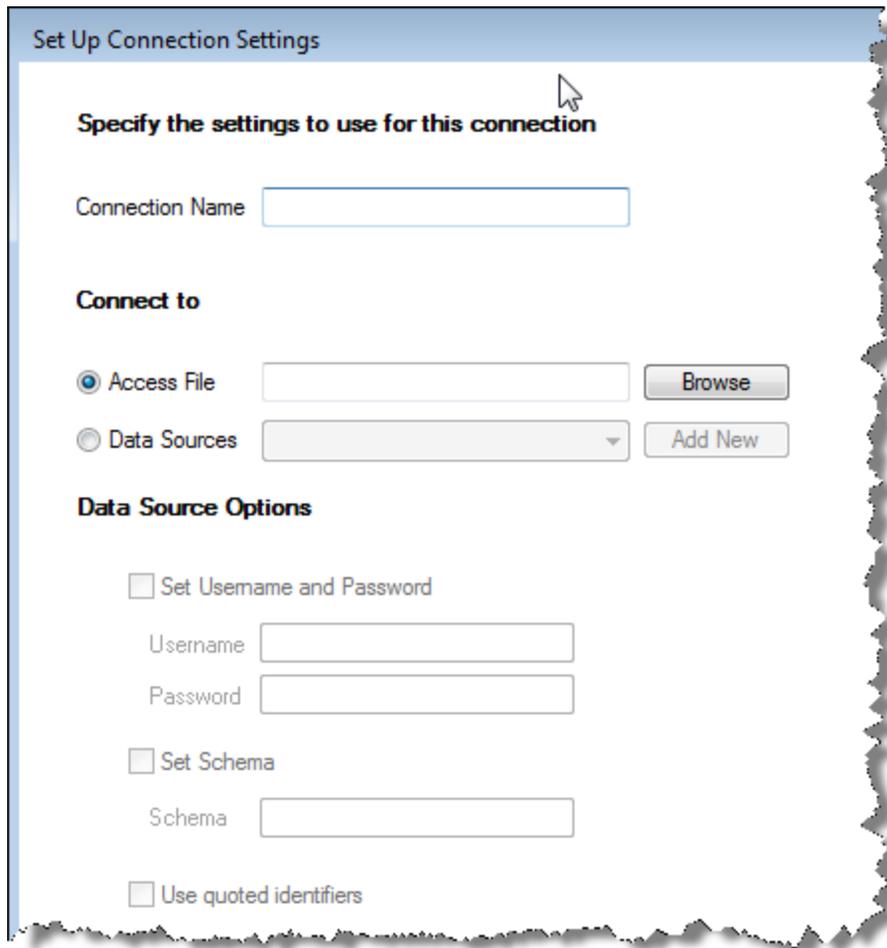


The screenshot shows the 'Set Up Connection Settings' dialog box. It has a title bar with the text 'Set Up Connection Settings'. Below the title bar, there is a section titled 'Specify the settings to use for this connection'. This section contains a text input field for 'Connection Name'. Below this is a section titled 'Connect to' which has two radio button options: 'Access File' (which is selected) and 'Data Sources'. The 'Access File' option is followed by a text input field and a 'Browse' button. The 'Data Sources' option is followed by a dropdown menu and an 'Add New' button. Below the 'Connect to' section is a section titled 'Data Source Options' which contains three checkboxes: 'Set Username and Password', 'Set Schema', and 'Use quoted identifiers'. Each checkbox is followed by a text input field: 'Username' and 'Password' for the first checkbox, and 'Schema' for the second. The third checkbox does not have an associated input field.

Connection Name — type the name of your database connection.

Connect to — select your data source: either an Access database or other data source.

- **Access File** — browse to the location of your Access database.
- **Data Sources** — select the open database connection (ODBC) that connects Harmony Enterprise to your source database.

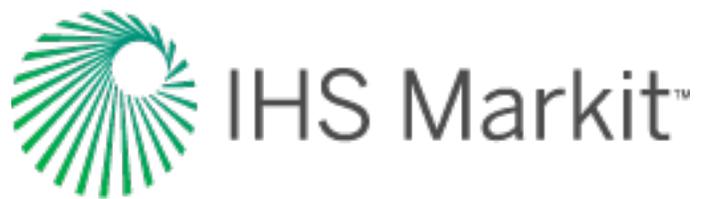

- **Set Username and Password** — if login credentials are required for accessing your database, you can save the user name and password. Note that this field can be left blank.
- **Set Schema** — set the database schema that the data is stored in. Note that this field can be left blank.
- **Use quoted identifiers** — encloses database object names within quotes for queries. For more information, contact [technical support](#) (opens in a new window).

-  **Learn more about Database Mappings** — opens this topic for the Assign Mapping dialog box.
-  **Open the View Definition PDF file** — opens a PDF that summarizes the view definitions for the data fields that can be imported and the expected format.

Views:

To import data from your internal database into Harmony Enterprise, views / tables in your database (**Client Tables / Views**) must be mapped to the corresponding Harmony Enterprise view.

- ARIES_DECLINE_ANALYSES — supports Arps' decline analyses formatted from Aries.
- PRODUCTION_HISTORY — historical production rates and volumes including custom datasets. Custom datasets must be created in Harmony Enterprise before they can be imported.
- WELL_INFORMATION — well attributes and reservoir properties including custom attributes.

Important: Custom attributes must be created in Harmony Enterprise before they can be imported. For more information, see [custom attributes](#).

- RESERVOIR_PROPERTIES — general initial reservoir properties, such as initial reservoir pressure, temperature, and saturations.
- GAS_PROPERTIES_HISTORY — gas gravity and produced gas composition. Can accommodate multiple PVT test results over time, or a single result.
- LIQUID_RICH_GAS_PROPERTIES — condensate gravity along with CGR and recombined gas rate.
- OIL_PROPERTIES — oil gravity, bubble point pressure, and initial GOR.
- OIL_CALIBRATION_PROPERTIES — calibration pressure, temperature, formation volume factor, compressibility, and viscosity.
- SEPARATOR_PROPERTIES — temperature and pressure in the separator.
- CUSTOM_GAS_PVT_PROPERTIES — custom gas formation volume factor table.
- CUSTOM_GAS_VAPORIZED_OIL_PROPERTIES — custom vaporized oil ratio table.
- CUSTOM_GAS_VISCOSITY_PROPERTIES — custom gas viscosity table.
- CUSTOM_VISCOSITY_OIL_PROPERTIES — custom oil viscosity table.

- CUSTOM_SATURATED_OIL_PROPERTIES —oil formation volume factor and solution gas oil ratio custom tables below bubble point.
- CUSTOM_UNSATURATED_OIL_PROPERTIES — oil formation volume factor and solution gas oil ratio custom tables above bubble point.
- WATER_PROPERTIES — water gravity, salinity, viscosity, compressibility, formation volume factor, and solution gas water ratio.
- SHALE_PROPERTIES — shale Langmuir volume, shale Langmuir pressure, and bulk density.
- WELLBORE_CONFIG — configuration name, date and ID, as well as datum, flow path, and pressure loss calculation correlation.
- WELLBORE_CONFIG_DETAILS — top and bottom casing depths, tubing and perforations, along with casing and tubing diameters. Deviation surveys and detailed temperature profiles are also defined here.
- PVT_PROPERTY_CORRELATION — sets all correlations used in the Properties editor along with the Gas Type.

Columns:

After mapping your views / tables to the Harmony Enterprise incoming views, the columns within these views must be mapped. For numeric columns that have been mapped, specify the units that these values use in your database.

Note: For well information, you can assign a field to more than one column, and you do not have to map production data.


Errors and minimum requirements

Every table that is mapped must have at least the well key and one other column specified. (The well key is the identifier used in the source database to separate wells.)

When there are errors in the database mapping, a red X is displayed next to the Harmony Enterprise Views (destination) and the Harmony Enterprise Column Name. At the top of the Assign Mapping dialog box, an error count is listed. Errors may include missing identifiers, or mapping a column of an inconsistent data type (for example, mapping text to numeric Harmony Enterprise data).

Well Linking Criteria dialog box

This dialog box is commonly used when you import well data from a database. Incoming well data is linked to existing wells using attributes.

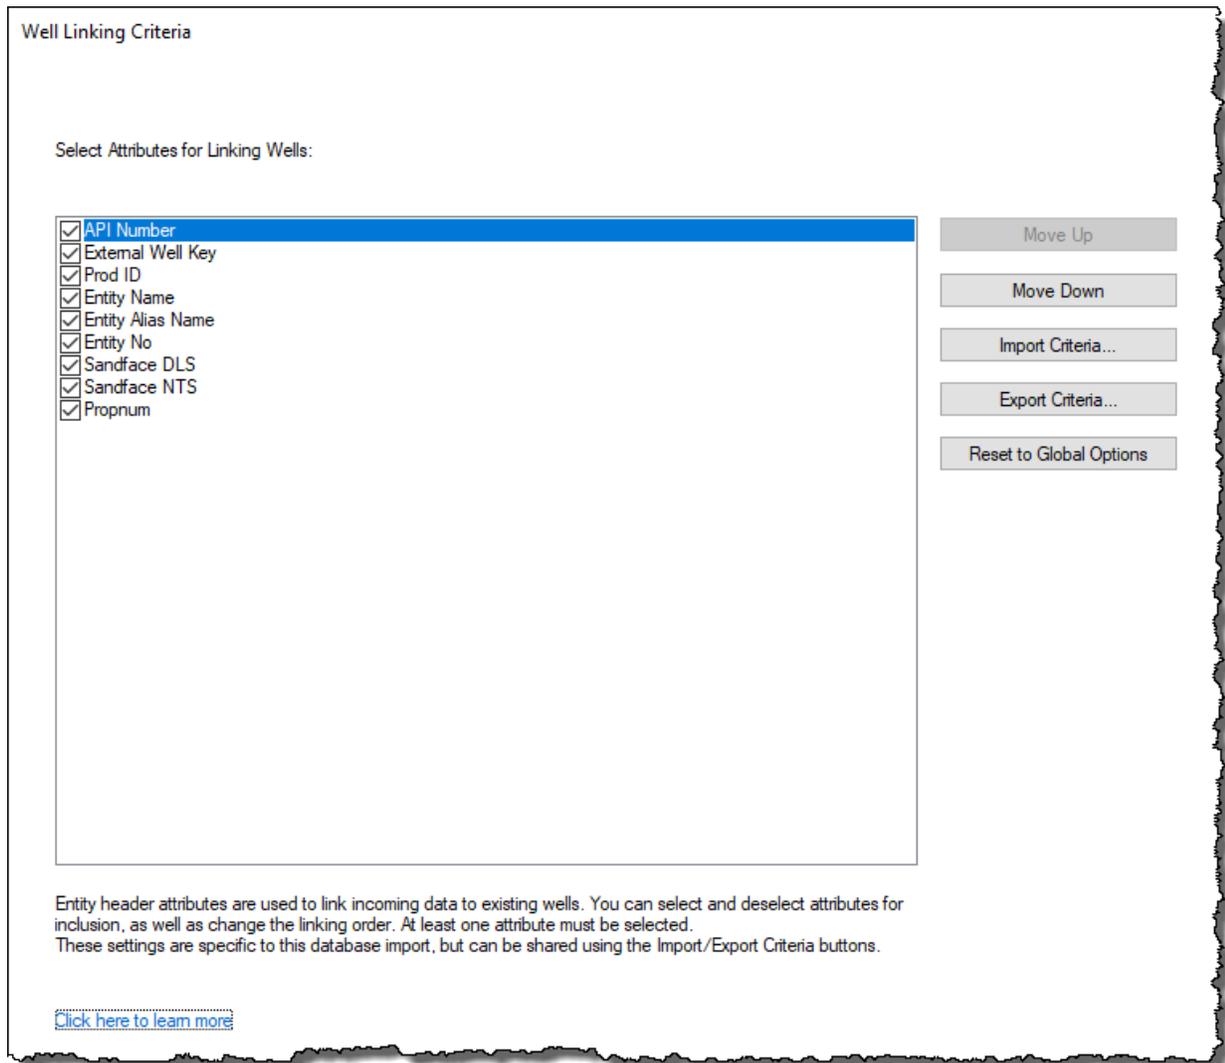

The screenshot shows the 'Well Linking Criteria' dialog box. It features a title bar, a subtitle 'Well Linking Criteria', and a section titled 'Select Attributes for Linking Wells:'. Below this is a list of attributes with checkboxes, all of which are checked. The 'API Number' attribute is highlighted in blue. To the right of the list are five buttons: 'Move Up', 'Move Down', 'Import Criteria...', 'Export Criteria...', and 'Reset to Global Options'. At the bottom of the dialog, there is a paragraph of explanatory text and a blue hyperlink that reads 'Click here to learn more'.

Well Linking Criteria

Select Attributes for Linking Wells:

- API Number
- External Well Key
- Prod ID
- Entity Name
- Entity Alias Name
- Entity No
- Sandface DLS
- Sandface NTS
- Propnum

Move Up

Move Down

Import Criteria...

Export Criteria...

Reset to Global Options

Entity header attributes are used to link incoming data to existing wells. You can select and deselect attributes for inclusion, as well as change the linking order. At least one attribute must be selected. These settings are specific to this database import, but can be shared using the Import/Export Criteria buttons.

[Click here to learn more](#)

Selected attributes are used to link / merge incoming wells, and are ranked in order of priority.

To include attributes from the linking process, select their checkboxes. To exclude attributes, deselect their checkboxes. To change the order of priority, click the attribute you want to change, and then click the **Move Up** or **Move Down** buttons.

Settings are saved within the Harmony Enterprise project database for the current database connection. In order to share your settings, you need to click the **Export Criteria** button. You can then share the .wlc file with colleagues.

You can import an .wlc file by clicking the **Import Criteria** button (similar to sharing a template).

To go back to the settings in the Options dialog box, click the **Reset to Global Options** button.

Note: For a given database connection, Harmony Enterprise saves the linking criteria, and this is available to all users who use that connection for their project database. To apply the linking criteria to database connections created later, you can import the .wlc file.

Set Up Filters dialog box

This dialog box is commonly used when you import well data from a database, and lists filter columns and values in a table. You can filter a column to filter out certain wells being queried.

- **Add** — opens the Filter a Column dialog box.
- **Edit** — after selecting a filter, you can click Edit and update your filter values.
- **Delete** — after selecting a filter, you can delete it.

If you select or deselect the **Disable all Filters** option, this setting is saved for your current database connection. Enabling this option means that no filtering is done; all of your wells are imported. (It is the same thing as not setting up any filters.)

Note: All of the filter settings are stored for each user for each database connection. These settings are *not* saved between users.



Filter a Column dialog box

This dialog box is commonly used when you import well data from a database. Filtering columns reduces the time it takes to display wells.

Filter Column — select an attribute from the drop-down list to specify a filter column. Click the blank box and type values for the attribute, pressing **Enter** after each value. When done, click the **OK** button.

The columns displayed in the drop-down list are based on your mapped columns in the WELL_INFORMATION view.

Some of the attribute values use checkboxes instead of a user-defined list. In these cases, click the checkboxes for the values you want.

Select Wells to Import dialog box

This dialog box is commonly used when you import well data from a database. If the left pane is blank, you need to click the Tree Hierarchy icon () and configure your well hierarchy.

Note: The hierarchy structure needs to be set up for each user for each database connection, but after this is set up, these settings persist (are saved).

Toolbar

This dialog box has these items on its toolbar:

-  **Tree hierarchy** — opens the Configure Well Hierarchy dialog box where you can organize entities in a hierarchical structure according to specific attributes. Click this icon to create a hierarchy view of your wells, which is categorized to your preferences.
-  **Expand all** — expands all nodes of the tree structure displayed in the pane.
-  **Collapse all** — collapses all nodes of the tree structure displayed in the pane.

Plot preview

To see a preview of your well production, click the well's name (not its checkbox).

To limit the number of rows displayed in the Plot Preview pane, click the Limit Rows checkbox and type a limit. The default setting is 1000 rows. Note that your preview limit is saved for all of your database connections, and changing the limit value affects the next well that is selected.

The *Continuous Time Track* option is used to adjust your data depending on your shut-in conditions. It is extremely important that you use this feature correctly, as your volume and rate data is influenced by this setting. For more information, see Continuous Time Track.



Import Options dialog box

This dialog box is used when you import well data from a database.

Updating Data Options

The Updating Data Options section displays the global Updating Data settings from the Options dialog box.


To change these settings for the current database import, select from the drop-down lists and click **Import** (or **Finish** if the auto-import option is enabled).

Production Data

The Production Data drop-down list has the following options:

- **Append** — adds new production data after the end of the existing production history. Abbreviated as "a".
- **Merge no overwrite** — adds new production data for any dates that do not exist in the current production history. If a date already exists, no data for that row is added. Abbreviated as "n".
- **Merge with overwrite** — adds new production data for dates that do not exist in the current production history. If a date already exists, that row is overwritten. Abbreviated as "o".
- **Discard and replace** — production data for each well is deleted and replaced with new data. Abbreviated as "d" (for "discard" from a previous legacy release). The old abbre-

viation was kept so that saved scheduled imports continue to work.

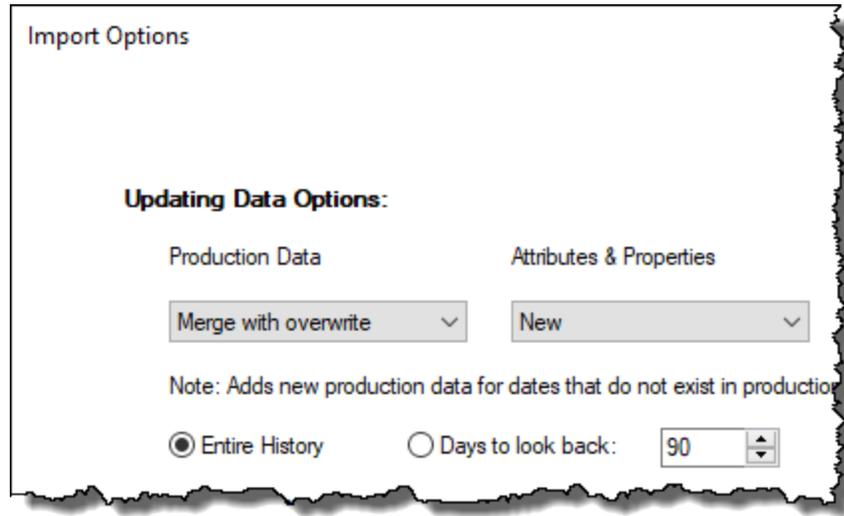

Attributes & Properties

The Attributes & Properties drop-down list has the following options:

- **Ignore** — does not import attributes and properties for existing wells. Abbreviated as "d" (for "discard" from previous releases). The abbreviation was kept "as is", so that saved scheduled imports continue to work.
- **New** — adds new attributes and properties when data did not previously exist. Abbreviated as "n"
- **Overwrite** — adds new attributes and properties, and replaces existing values with newly imported ones. Abbreviated as "o".

Analysis Data

The Analysis Data drop-down list has the following options:

- **Ignore** — does not import analyses. Abbreviated as "d" (for "discard" from previous releases). The abbreviation was kept "as is", so that saved scheduled imports continue to work.
- **New** — only adds new analyses. Abbreviated as "n".
- **Overwrite** — replaces existing analyses when matched with imported ones, and adds new analyses. Abbreviated as "o".

Tip: If you are importing decline analyses from an Aries database via the [Database Connection wizard](#), you may want to adjust your default settings, especially if your default settings include the Discard option.

Wellbore

The Wellbore drop-down list has the following options:

- **Append** — adds new wellbore configurations. Abbreviated as "a".
- **Ignore** — does not import wellbore configurations. Abbreviated as "d" (for "discard" from previous releases). The abbreviation was kept "as is", so that saved scheduled imports continue to work.
- **Overwrite** — adds new wellbore configurations, and replaces existing configurations with newly imported ones when the dates match. Abbreviated as "o".

Autocalc

To automatically calculate sandface pressures during an import, ensure the **Do Sandface Auto-calculations** checkbox is selected. Note that calculating sandface pressures can take a considerable amount of time (depending on the number of wells and their complexity).

Data Reduction Mode

Data reduction is the process of reducing high-frequency data prior to importing. Data reduction options include the following:

- **None** — data reduction is not applied.
- **Auto** — applies data reduction as per your settings in the [Options dialog box](#).
- **Manual** — opens the [Data Reduction dialog box](#) where you can customize your settings.

Auto Import


To schedule automatic well updates using the Windows Task Scheduler or command line, click the **Auto Import** box.

For more information, see [Windows Task Scheduler](#) and [command line](#).

Diagnostics tab

The Diagnostics tab displays customizable plots consisting of production, injection, and pressure data for each well or scenario in a Harmony Enterprise project. Selecting parameters in the Data Viewer Properties pane displays these items on the plot.

- If you select more than one entity, the selected data from all these entities is displayed in the diagnostic plot.
- Hovering your mouse over selected entities in the Entity Viewer (Hierarchy or Custom) makes their plot lines become bold.

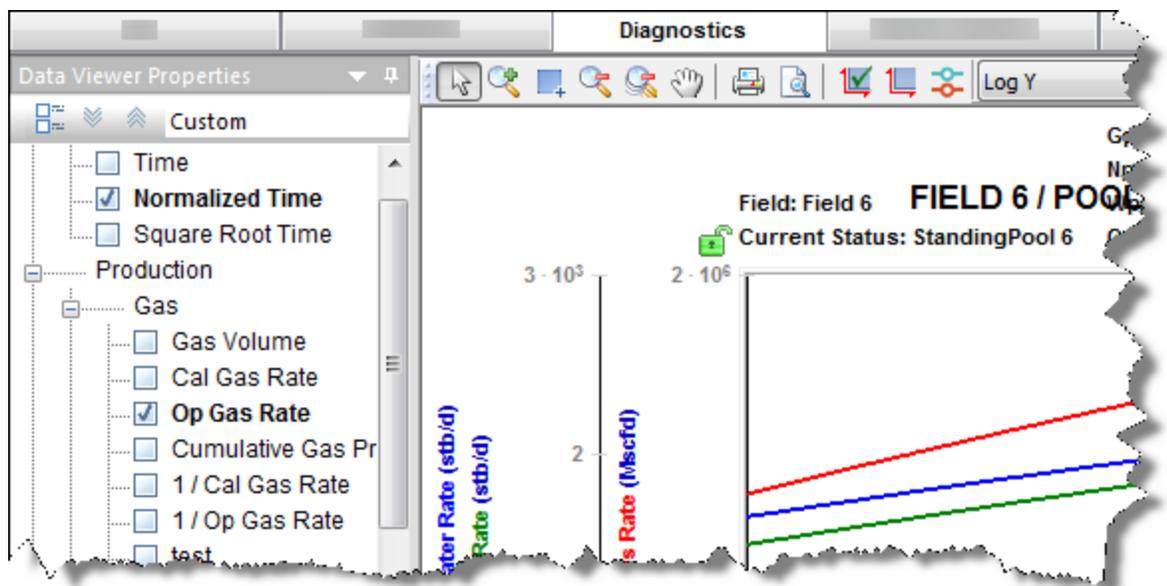

You can send your plot to a [comparison plot](#), by right-clicking it and selecting **Send Plot to Comparison Plot**. You can also right-click a dataset in the plot and select **Send Dataset to Comparison Plot**. For information on other options, see [plot options](#) and [locks](#).


Note: If a custom dataset does not exist when a template is applied, the dataset is not added to the plot.

Toolbars

This tab has two toolbars: a primary toolbar for the Data Viewer Properties pane and a secondary toolbar above the plot. For a description of common icons, see [toolbars](#).

Primary toolbar

The important item on this toolbar is the Template drop-down list.

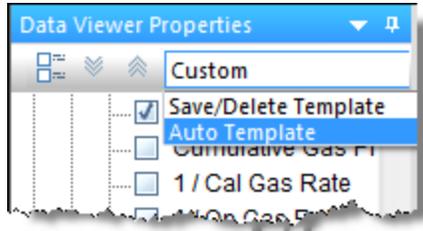

Auto Template is the default setting, but you can select **Save / Delete Template** in order to create a template with the plot selections / datasets you prefer. This template can also be used in a custom worksheet to perform a decline analysis or ratio analysis. For more information, see the [Save Template dialog box](#).

Secondary toolbar

The secondary toolbar is above the plot, and in addition to the [common toolbar items](#), has the following items:

-  **Toggle Coloring by Entity or Dataset** — displays unique colors for entities / datasets. In other words, entities can use the default colors (red for gas, green for oil, etc.), or every dataset can have a unique color. (This feature is available in a diagnostic plot with multiple wells selected.)
- **Plot drop-down list** — select your plot type (semi-log vs. coordinate).

Context menus

Right-clicking within the *Data Viewer's* tree structure displays the same context menu as for a [pane](#).

Right-clicking within the Diagnostic plot (the main pane) displays [plot options](#).

Save Template dialog box

This dialog box is commonly used when you save, delete, or rename a template on the Diagnostics tab.

Tip: All templates are user-specific. Therefore, any templates you create are not seen by other users in a multi-user environment. Note that templates exist in more places than just the Diagnostics tab. For example, templates also exist in the Attributes tab and Results tab.

- **Name** — type a name for your template.
- **Worksheet Category** — select the appropriate worksheet category from the drop-down list (that is, Decline, Ratio Analysis, or Custom). After you click **Save**, the template is available for the new worksheets you create in the respective categories.

For example, if you are saving a template for the Decline category, you can customize these things in your template:

- You can set your rate (operated vs. calendar rate), and after adding a new decline worksheet, you can select the template and your decline worksheet initializes with that rate type.
- You can set any individual axis type to log-log (vs. coordinate) by right-clicking it.

To rename a template, select it in the Existing Templates box and type a new name in the Name field; click **Save**.

To delete a template, select it in the Existing Templates box and click **Delete**.


Hall plot

The slope of a Hall plot indicates a well's average injectivity. At normal conditions, this plot is a straight line; deviations indicate changes in injection conditions. For more information, see [Hall plot theory](#).


Note: The Hall plot uses tubing pressure, not injection tubing pressure, as an input.

You can display this plot as follows:


- Click **Injection**, **Water**, and drag **Cumulative Water Inj** to the x-axis.

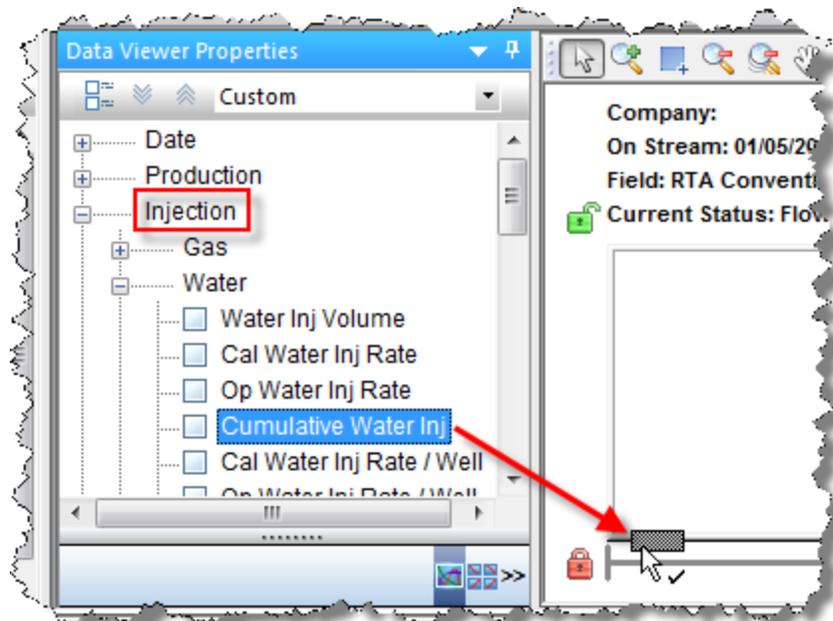

- Click **Hall**, and drag **Hall Coefficient** or **Hall Coefficient Slope** to the y-axis.

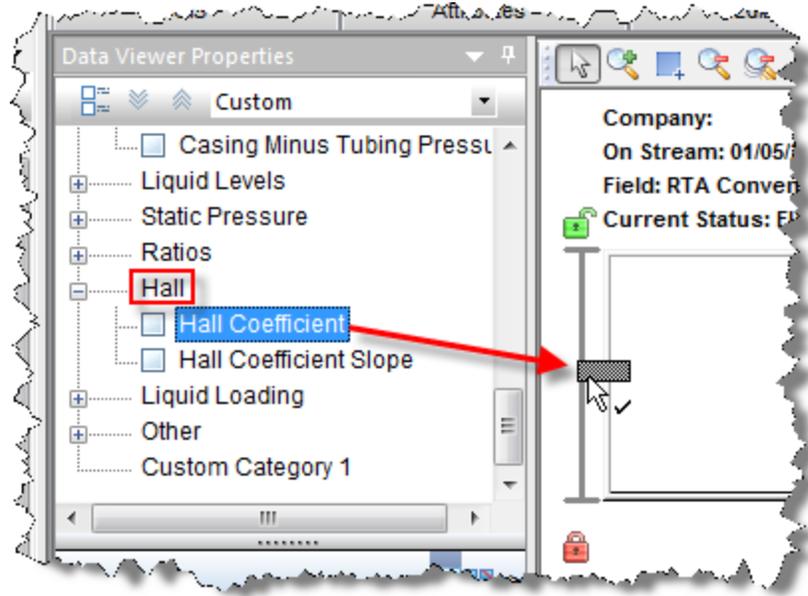

The Hall plot opens.

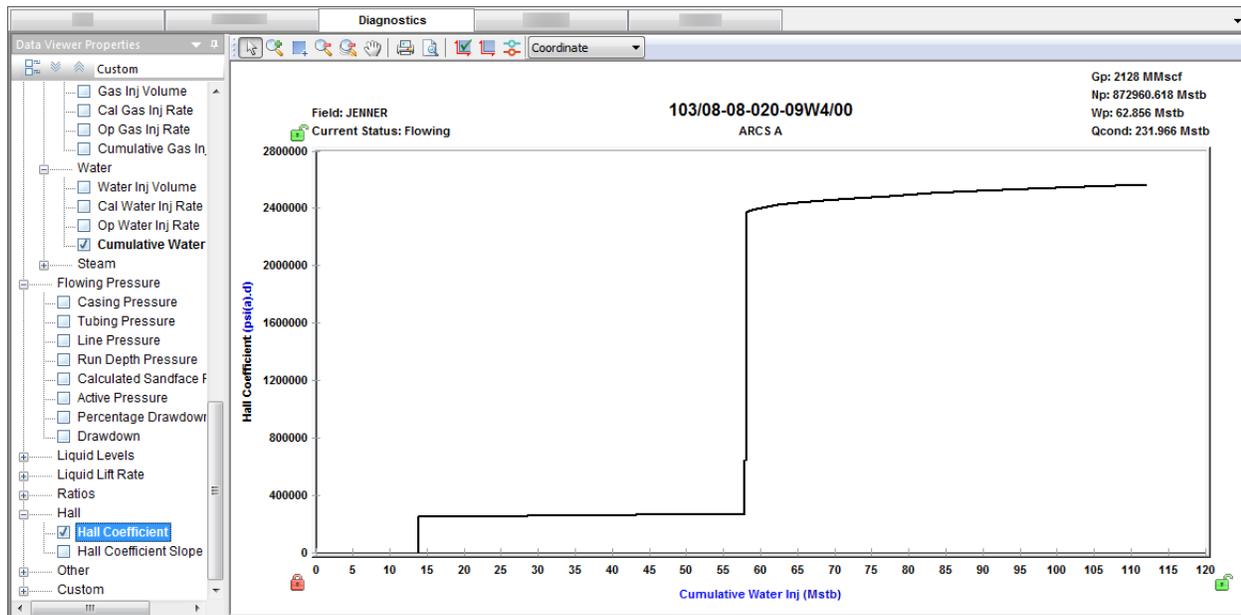

Economics

The Economics tab displays the economics for a well, scenario, or group of wells on a monthly basis, and you can run economics for multiple cases with multiple wells. Economics are calculated on a monthly basis by:

- taking the estimated production from decline curve analysis
- multiplying the production volume by the oil, gas, condensate, water, or BOE price that applies to the well at that month
- subtracting fixed and variable expenses
- calculating net revenues for the month

Note: Economics works with your Harmony Forecast™ license.

After clicking **Add Case**, the Case section opens. Click the inverted chevron icon () to open the case section.

Case

In this section, you can type a name for your economics scenario and add notes. Only one case can be open at a time.

A case can be added to a single entity or multiple entities.

Case — the title for your economics scenario. You can rename your case by clicking the Case field and typing a new name, or you can leave the default name. However, you cannot have cases with the same name. If you rename a case, its order in the list of cases is automatically resorted alphabetically.

Notes — (optional) click this field to begin typing your notes.

The effective date and duration date are displayed in gray text below the toolbar icons. These dates are automatically taken from the production data you select in the Forecast section. For example, if you have a gas forecast that ends earlier than an oil forecast, the duration date is extended to match the oil forecast's end date for the analysis.

Toolbar

These icons are displayed at the top of the Case section:

 **Delete Case** — removes the currently selected case. If you delete the last case, your settings are reset to the default blank settings (the initial view).

 **Copy Case** — creates a duplicate of the currently selected case. The name is appended with the word "Copy".

 **Show / Hide Case** — toggle between showing or hiding the plot / grid for the currently selected case.

Discount Rate

The discount rate is a percentage discount, which is applied per year. This adjustment applies to your monthly cash flows received in the future to show its present value.

Type your annual discount rate for your case. The default value is 10%.

Forecast

In this section, up to five fluids can be displayed: oil, gas, condensate, barrel of oil equivalent (BOE), and water.

Your forecast is selectable from the existing decline analyses you have for the currently selected entity.

Select forecast data — select from the drop-down list. If there is an issue with your selection, the Fluid table below displays an error message (for example, invalid forecast, no forecast, etc.).

Note: Forecast volumes are only displayed for the fluids (that is, oil, gas, or BOE) that apply to the currently selected entity, and you can only select one forecast (not one forecast for each fluid).

Price & Revenue

In this section, up to five fluids can be displayed: oil, gas, condensate, BOE, and water.

Type your price, percentage of escalation / year, and your revenue is automatically calculated.

Revenue represents money you have earned *before* any expenses are accounted for.

 **Edit Price Deck** — opens the Enter Price Decks dialog box. Click this icon to paste values from an existing price deck, or type prices for your fluids. Note that if your price deck has an end date that falls short of the duration date of the forecast for your analysis, the last value in the Price Deck table is used for the remainder of the forecast period. If you paste content with more rows than are automatically displayed in the Price Deck table, note that additional rows are automatically added.

Tip: To decouple your case from a price deck, you need to delete the content in the Enter Price Decks dialog box. Then, you can type a price and percentage of escalation for your fluids.

Capital Expenses

Capital expenses represent investments that generate benefits for more than one period (for example, drilling, completions, tanks, buildings, etc.).

Tip: For upfront costs, leave the Date field blank. These costs are not included in the net present value (NPV) calculation.

Description — type a name for your capital expense.

Date — select a month from the calendar. Note that you must enter a date between the effective date and duration date for your economic analysis.

Dollar Amount — type a value for your capital expense.

 **Delete** icon — deletes the currently selected capital expense.

 **Add** icon — adds a new capital expense item.

Operating Costs

Operating costs represent expenditures that generate a benefit for the current period (for example, labor, maintenance, water disposal, etc.).

Description — type a name for your operating cost.

Dollar Amount — type a value for your operating cost.

Operating Cost Type — select from the drop-down list (that is, \$ / month, \$ / year, \$ / bbl, \$ / Mscf).

✕ **Delete** icon — deletes the currently selected operating cost.

⊕ **Add** icon — adds a new operating cost item.

From — select a month from the calendar. Note that you must enter a date between the effective date and duration date for your economic analysis.

to — select a month from the calendar. Note that you must enter a date between the effective date and duration date for your economic analysis.

Note: If no dates are selected, by default, the effective date and duration date are used.

Taxes & Royalties

Taxes and royalties are calculated as percentages for the following categories:

Severance Tax — type your percentage. This tax is calculated based on oil & gas earnings *before* deductions for operating costs, and is also known as the production tax.

Ad Valorem Tax — type your percentage. This "according to the value" tax is calculated based on local taxes (for example, metro district tax, county tax). It is calculated based on revenue less the severance tax.

Royalties — type your percentage. This tax is calculated based on the ongoing right to use certain properties or assets. This tax may be based on a percentage of revenues, or a fixed price per unit sold.

Note: Taxes and royalties are calculated for the duration of the forecast, not annually.

Working Interest

Type your percentage of working interest for revenue and operating costs, which applies for the entire course of the project.

If you want to apply your operating interest to all capital expenses, click this checkbox.

Cumulative Net Cash Flow

This represents a summation of all the values for your case.

Important metrics

These metrics are displayed at the bottom of the plot:

Net Present Value (\$) (NPV) — provides the dollar value of a project taking into account the time value of money.

Discounted Payout — the length of time it takes in months to pay back the original investment. If you are running economics on an existing well, the discounted payout is zero.

Internal Rate of Return (IRR) — measures the potential profitability of a project. This metric is a discount rate that measures the percentage of return needed in order for the project to break even (where NPV is equal to zero). IRR is used to evaluate the attractiveness of a project, and is also known as the discounted cash flow rate of return. Generally, if the IRR is a high percentage, this indicates that you have a good project to invest in.

Plot / grid

The cash-flow plot is displayed in the main pane of the Economics window and has the following icons:



Show Plot — displays a plot view for your case. Up to 10 cases can be plotted with cumulative and periodic cash flows. If you plot more than 10 cases, only the cumulative values are displayed. Note that the active case is displayed in bold on the plot.



Show Grid — displays a tabular view for your active case, which can be copied and pasted, or exported as a .csv file.



Export to .csv — (only visible when the Show Grid icon is selected) copies your tabular data to a .csv file.



Rescale plot to show all data — (only visible when the Plot icon is selected) automatically fits all your data to the plot.

The following drop-down list items are only visible when the Plot icon is clicked:

Cumulative and Periodic Cash Flows — displays both the cumulative cash flow and period cash flow on the same plot.

Periodic Series Cash Flows — depending on how you scale the resolution on the x-axis, cash flow is displayed in a bar graph by month, quarter, year, or every five years.

Cumulative Series Cash Flows — displays an aggregate of cash flows in a line graph. The point where the line graph crosses the x-axis is the break-even point.

Y-axis icons

These icons are displayed when you hover your mouse over the y- axis:

 **y-axis panning** — visible when you hover over the middle of the y-axis, and enables you to pan the axis up and down.

 **y-axis panning with a lock on the top of the top of the axis** — visible when you hover over the lower part of the y-axis, and enables you to pan the axis up and down, while you maintain the top value on the y-axis.

 **y-axis panning with a lock on the bottom of the axis** — visible when you hover over the upper part of the y-axis, and enables you to pan the axis up and down, while you maintain the lower value on the y-axis.

X-axis icons

These icons are displayed when you hover your mouse over the x- axis:

 **x-axis panning** — visible when you hover over the middle of the x-axis, and enables you to pan the axis left and right.

 **x-axis panning with a lock on the right of the axis** — visible when you hover over the left-side of the x-axis, and enables you to pan the axis left and right, while you maintain the value on the right.

 **x-axis panning with a lock on the left of the axis** — visible when you hover over the right-side of the x-axis, and enables you to pan the axis left and right, while you maintain the value on the left.

Editors

To open the Editors pane, select an entity (in either Entity Viewer, or on the GIS map), click the Analysis tab, and then click the Editors sub-tab.

Tip: You cannot use the editors with group selections.

Harmony Enterprise has the following editors:

- [Properties](#) (opens when you click the Editors tab)
- [Wellbore](#)
- [Production](#)
- [Static Pressure](#)

Properties editor

In the Properties editor (located within the Editors pane), you can set properties and correlations for the formation and fluids, as well as reservoir properties.

Toolbars

There are three toolbars associated with the Properties editor: primary, secondary, and plot toolbars.

Primary

The primary toolbar has the following icons:

-  **Change plot options** — opens the Plot Options dialog box where you can set your minimum and maximum pressure, as well as your step size. You also have the option to display numerical or non-numerical analysis properties.
-  **Copy to / paste from clipboard** — click this icon to copy / paste properties between different wells.
-  **Calculate sandface pressure** — calculates sandface pressure based on given wellhead pressure and fluid rates. These calculations use fluid properties set in the Properties editor. If you change fluid properties, you need to re-run sandface pressure calculations by clicking this icon.

Secondary

The secondary toolbar is located to the right of the Editors pane, and has the following icons:


-  **View Data** — toggle between a table view and a plot view.
-  **Toggle Units** — toggle between metric and field (imperial) units.
-  **Change Bottom Left Plot** — (gas properties only) toggles the bottom left plot between the Vaporized Oil Ratio (R_V) and Gas Compressibility (c_g).

Plot

The plot toolbar is located directly above the plots in the main pane. For more information, see [plot toolbars](#).

Selection tree

The selection tree is located directly below the primary toolbar. After you select a certain node in the selection tree, a corresponding set of properties is displayed in the pane to the right (for example, if you select the Gas node, gas properties are displayed in the right pane). The Reservoir Properties pane is located below the selection tree.

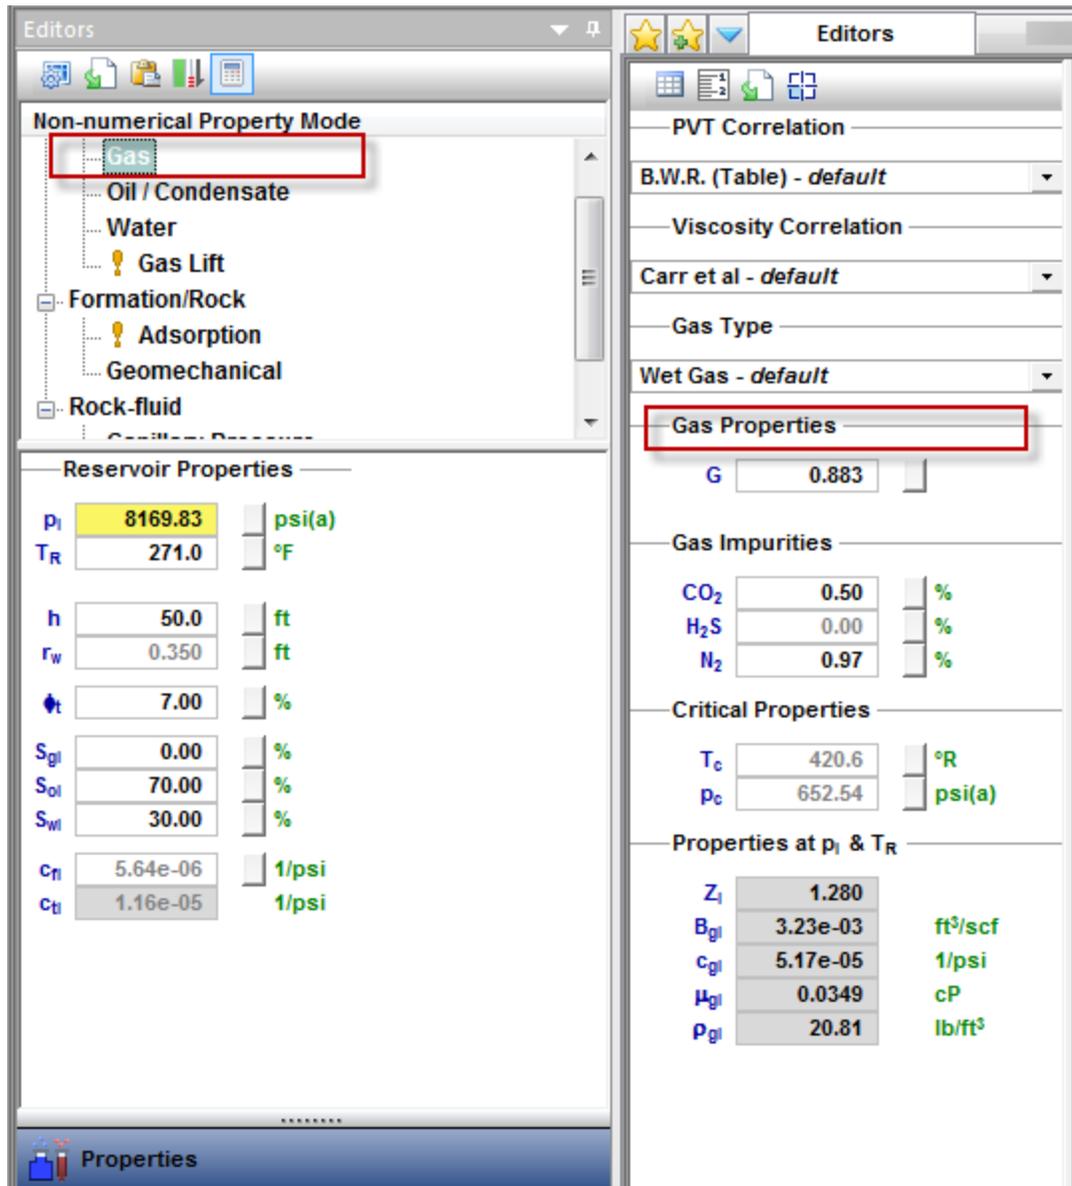

Editors

Non-numerical Property Mode

- Gas
- Oil / Condensate
- Water
- Gas Lift
- Formation/Rock
- Adsorption
- Geomechanical
- Rock-fluid

Reservoir Properties

p_i	8169.83	psi(a)
T_R	271.0	°F
h	50.0	ft
r_w	0.350	ft
μ_t	7.00	%
S_{gi}	0.00	%
S_{ol}	70.00	%
S_{wl}	30.00	%
c_{ri}	5.64e-06	1/psi
c_{ti}	1.16e-05	1/psi

Editors

PVT Correlation

B.W.R. (Table) - default

Viscosity Correlation

Carr et al - default

Gas Type

Wet Gas - default

Gas Properties

G 0.883

Gas Impurities

CO ₂	0.50	%
H ₂ S	0.00	%
N ₂	0.97	%

Critical Properties

T_c	420.6	°R
p_c	652.54	psi(a)

Properties at p_i & T_R

Z_i	1.280	
B_{gi}	3.23e-03	ft ³ /scf
c_{gi}	5.17e-05	1/psi
μ_{gi}	0.0349	cP
ρ_{gi}	20.81	lb/ft ³

Properties

Gas properties

After you select **Gas** in the selection tree, you can select a **PVT** correlation, or custom table from the **PVT Correlation** drop-down list. Use the correlation selection for gas PVT to select the appropriate correlation. If you select **Custom Table**, you can enter or import your own data.


Similarly, you can select a viscosity correlation, or custom table from the **Viscosity Correlation** drop-down list. Use the correlation selection for gas viscosity to select the appropriate correlation.

From the **Gas Type** drop-down list, you can select dry gas, wet gas, or liquid-rich gas.

Gas properties as functions of pressure are calculated based on selected correlations, using the values set for gas gravity (G), critical temperature (T_c), and critical pressure (p_c). You can enter these values, or leave the default values calculated by Harmony Enterprise.

The calculated properties at initial conditions (p_i and T_R) are displayed in the **Properties at p_i & T_R** section.

Gas properties vs. pressure are plotted, including Z , ψ , B_g or B_{gd} , ρ_g , c_g , R_v , V_L / V_{sat} , and μ_g .

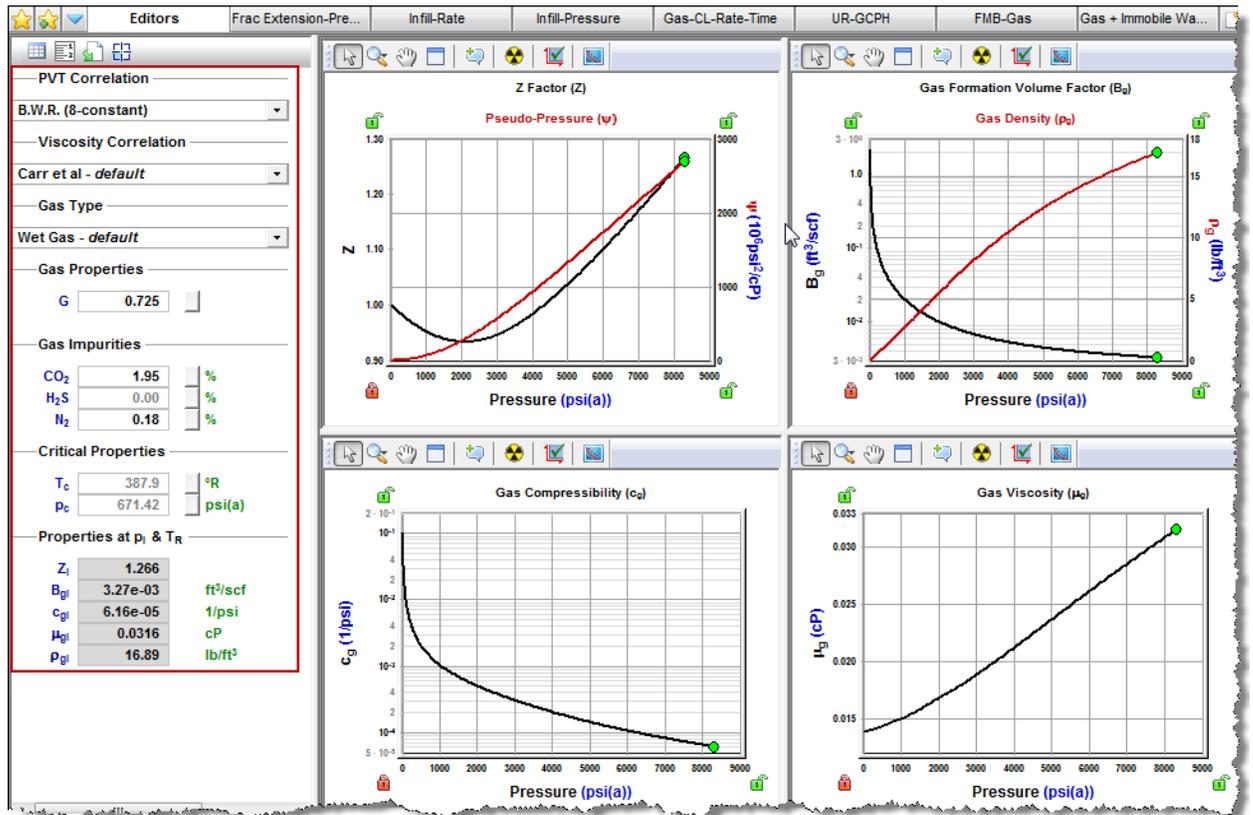

Additional properties for liquid-rich gas

If the Gas Type is set to **Liquid-Rich Gas**, additional properties are displayed:

- **Vaporized Oil Ratio Correlation** — defines the amount of liquid vaporized in gas as a function of pressure.
- **p_{dew}** — dew point pressure. It should be set to the same value as the bubble point pressure defined under Oil / Condensate properties.

- CGR_1 — condensate gas ratio at the separator.
- Y_{cond} — condensate gravity. It should be set to the same value as the oil gravity defined under Oil / Condensate properties.
- T_{sep} , P_{sep} — temperature and pressure at the separator.
- **RGRF** — recombined gas rate factor. We recommend keeping the default value.
- G_r — recombined gas gravity. All gas property functions are generated based on this gas gravity (as well as critical temperature and pressure).

— PVT Correlation —

Custom Table

— Viscosity Correlation —

Carr et al - default

— Gas Type —

Liquid-Rich Gas

— Vaporized Oil Ratio Correlation —

Ovalle et al. (Gas Condensate)

— Gas Properties —

G	0.650	
P_{dew}	435.11	psi(a)
CGR_1	300.0	bbbl/MMscf
Y_{cond}	45.0	°API
T_{sep}	100.0	°F
P_{sep}	100.00	psi(a)
RGRF	1.207	
G_r	1.462	

Correlation selection for gas

There are two correlation selections for gas: PVT and viscosity.

PVT

Various gas PVT correlations are described below:

- **B.W.R. (Table)** — the Benedict-Webb-Rubin equation is an empirical relationship that predicts the state of liquids and gases. Tables were developed for approximately 50

substances, mostly hydrocarbons that related gas density, formation volume factor, and temperature to pressure.

- **B.W.R. (8-constant)** — the Benedict-Webb-Rubin (8-constant) equation of state developed a set of generalized coefficients in order to be applied to all types of gases.
- **B.W.R. (11-constant)** — the Benedict-Webb-Rubin (11-constant) equation of state is a further refined method to predict the state of liquids and gases. It is used for all types of gases, and uses 11 empirical constants to achieve a more accurate interpolation of the data.
- **AGA8 Detail** — calculates the Z-factor based on the physical chemistry of the gas components at specified temperatures and pressures. It can be used when the exact composition (fraction mole percents) of the gas is available.
- **Carbon Dioxide (Table)** — the Carbon Dioxide tables are for calculating a Z factor for 100% CO₂ content.
- **Nitrogen (Table)** — the Nitrogen tables are for computing a Z factor for 100% N₂ content.
- **Hydrogen Sulfide (Table)** — the Hydrogen Sulfide tables are for computing a Z factor for 100% H₂S content.
- **Custom Table** — you can enter laboratory measurements for a gas Z factor or formation volume factor. The Z factor is calculated from the formation volume factor or vice versa. Gas compressibility is subsequently calculated from these two values.

Viscosity

Various gas viscosity correlations are described below:

- **Carr et al.** — developed to predict the viscosity of gas hydrocarbon mixtures for temperatures between 32°F and 400°F, and pressures up to 12,000 psi. It applies to both sweet and sour gas, and is designed to handle non-hydrocarbon components (CO₂, H₂S, N₂) in concentrations of up to 15% each.
- **Lee, Gonzalez, Eakin** — applies to sweet gas, but does not account for the presence of non-hydrocarbon components. It is applicable for a pressure range of 100 - 8,000 psi, and temperatures between 100°F - 340°F. It is less accurate for gases with a specific gravity above 1.0.
- **Optimized Lee et al.** — developed using the Lee, Gonzalez, and Eakin method, but uses an optimized temperature history to achieve more accurate results, thus resulting in different coefficients in the equations. (There is less than a 5% difference in extreme cases from the original correlations.)
- **Lucas et al.** — uses the method of corresponding states to calculate gas viscosity. It is better suited for higher density gases at lower pressures.


- **Custom Table** — you can enter custom gas viscosity values from laboratory measurements.

Oil / condensate properties

After you select **Oil / Condensate** in the selection tree, you can select a PVT correlation, constant properties, or custom table from the **PVT Correlation** drop-down list. Similarly, you can select a correlation, constant properties, or custom table from the **Viscosity Correlation** drop-down list.

Use the correlation selection for oil to select the appropriate correlation. If you select **Custom Table**, you can enter or import your own data.


Oil properties vs. pressure are plotted, including R_{so} , B_o , ρ_o , c_o , and μ_o . The calculated properties at p_i and T_R are also displayed.

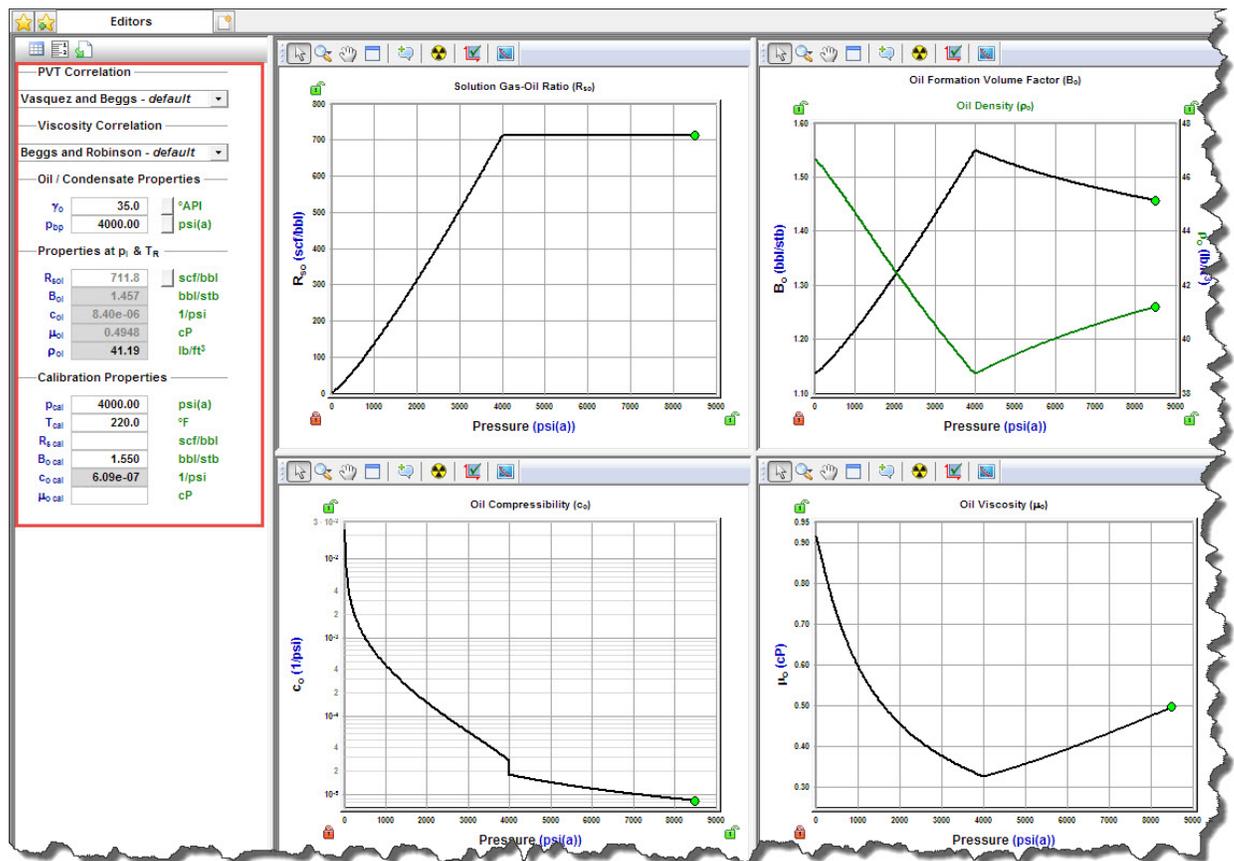

Calibration properties for oil

This functionality is used to calibrate existing correlations for oil PVT and viscosity to anchor them to a certain (known) value. This is usually done when you have some custom data for oil properties, and want to calibrate oil correlations to match custom data as closely as possible.

To see if the selected correlation is close to the custom data you entered, click the **Show the Custom Data Points** icon on the plot toolbar.

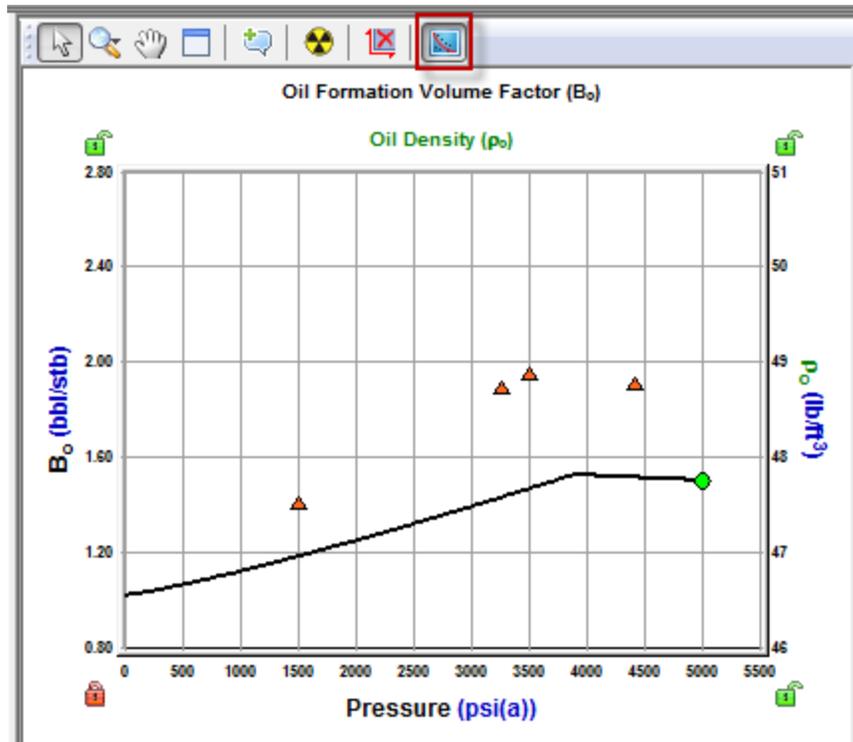

In the Calibration Properties section, these fields are displayed:

- **p_{cal}** and **T_{cal}** — calibration pressure and temperature.
- **R_{s cal}** — the correlation curve for the solution gas-oil ratio (R_s) shifts such that $R_s(p=p_{cal}, T=T_{cal})=R_{s cal}$.
- **B_{o cal}** — the correlation curve for the oil formation volume factor (B_o) shifts such that $B_o(p=p_{cal}, T=T_{cal})=B_{o cal}$.
- **c_{o cal}** — the correlation curve for oil compressibility (c_o) shifts such that $c_o(p=p_{cal}, T=T_{cal})=c_{o cal}$.
- **μ_{o cal}** — the correlation curve for oil viscosity ($μ_o$) shifts such that $μ_o(p=p_{cal}, T=T_{cal})=μ_{o cal}$.

P_{cal}	5000.00	psi(a)
T_{cal}	120.0	°F
$R_{s cal}$		scf/bbl
$B_{O cal}$	1.500	bbl/stb
$C_{O cal}$		1/psi
$\mu_{O cal}$	0.800	cP

Correlation selection for oil

There are two correlation selections for oil: PVT and viscosity.

PVT

Various oil PVT correlations are described below:

- **Vasquez and Beggs** — developed from field data (from locations all over the world). It is generally applicable for all oil types, and covers a wide range of pressures, temperatures, and oil properties.
- **Al-Marhoun** — developed for Saudi Arabian oils. It is valid for all types of gas-oil mixtures ranging from 14 - 45 °API.
- **De Ghetto et al.** — developed for heavy oils ($10 < \text{°API} < 22.3$) and extra-heavy oils ($\text{°API} < 10$) from the Mediterranean Basin, Africa, and the Persian Gulf. It requires separator pressure and temperature.
- **Glaso** — developed for North Sea oils. It is suitable for oil mixtures ranging from 22-48 °API, and is valid for all types of oil and gas mixtures after correcting for non-hydrocarbons in the surface gases, and the paraffinicity of the oil.
- **Hanafy et al.** — developed for Egyptian oils gathered from the Gulf of Suez, Western Desert, and Sinai regions. It is independent of oil gravity and reservoir temperature. Although the authors claim that the correlations are applicable to a wide range of crude oils ranging from heavy to volatile oils (14.3 – 47 °API), it appears to be more applicable to light oils.
- **Petrosky and Farshad** — developed for Gulf of Mexico oils gathered from offshore regions in Texas and Louisiana. It is applicable for oil mixtures ranging from 16 - 45 °API, and provides improved results for the Gulf of Mexico oils compared to Standing, Vasquez and Beggs, Glaso, and Al-Marhoun correlations.
- **Standing** — developed for California oils. It is applicable for oil mixtures ranging from 16 - 64 °API.

- **Velarde et al.** — developed for black oils. It is applicable for oil mixtures ranging from 12 - 55 °API.
- **Constant Properties** — you can enter values for the oil compressibility, solution gas-oil ratio, and oil formation volume factor at initial reservoir conditions.
- **Custom Table** — you can enter laboratory measurements for the oil compressibility, solution gas-oil ratio, and oil formation volume factor.

Viscosity


Various oil viscosity correlations are described below:

- **Beggs and Robinson** — developed from field data (from locations all over the world). It is generally applicable for all oil types, and covers a wide range of pressures, temperatures, and oil properties.
- **De Ghetto et al.** — developed for heavy oils ($10 < \text{°API} < 22.3$) and extra-heavy oils ($\text{°API} < 10$) from the Mediterranean Basin, Africa, and the Persian Gulf. It requires separator pressure and temperature.
- **Hanafy et al.** — developed for Egyptian oils gathered from the Gulf of Suez, Western Desert, and Sinai regions. It is independent of oil gravity and reservoir temperature. Although the authors claim that the correlations are applicable to a wide range of crude oils ranging from heavy to volatile oils (14.3 – 47 °API), it appears to be more applicable to light oils.
- **Khan et al.** — developed using oil samples collected from Saudi Arabian reservoirs. It gives more accurate predictions for Saudi Arabian oils, compared to the Beggs and Robinson.
- **Ng and Egbogah** — this correlation contains two methods for calculating dead oil viscosity using a modified Beggs and Robinson viscosity correlation, and a correlation that uses the pour point temperature, which is the lowest temperature at which the oil is observed to flow when cooled. The purpose of introducing the pour point temperature into the correlation is to reflect the chemical composition of crude oil into the viscosity correlation. To obtain the viscosity for live oils, the dead oil correlations are used with the Beggs and Robinson viscosity correlation. This correlation is applicable for oil mixtures ranging from 5 - 58 °API.
- **Constant Properties** — you can enter a value for oil viscosity at initial reservoir conditions.
- **Custom Table** — you can enter laboratory measurements for oil viscosity.

Water properties

After you select **Water** in the selection tree, you can select a correlation, constant properties, or a custom table from the **General Correlation** drop-down list.

Water properties vs. pressure are plotted, including R_{sw} , B_w , ρ_w , c_w , and μ_w . The calculated properties at p_i and T_R are also displayed.

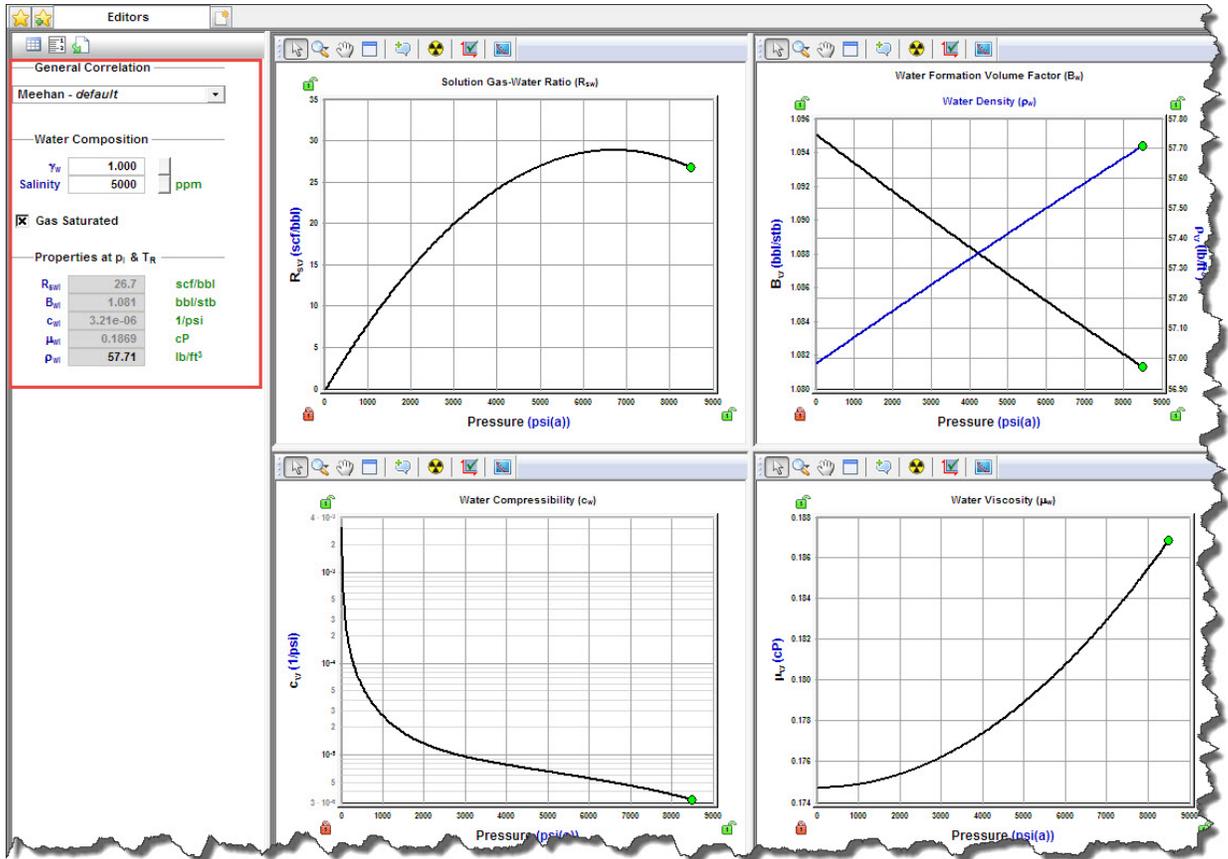

Gas lift properties

After you select **Gas Lift** in the selection tree, simplified gas properties are listed, to be used on analyses with gas lift. Only limited options are available for PVT Correlation, Viscosity Correlation, and Gas Type.


Note: If you want to change the PVT Correlation or Viscosity Correlation for your gas lift, you must change these selections in gas properties.

Adsorption properties

After you select **Adsorption** in the selection tree, these properties are displayed:

- V_{LS} , P_{LS} — Langmuir volume and Langmuir pressure (for shale). For more information, see [Langmuir isotherm](#).
- ρ_b — bulk density (for shale).

Gas content vs. pressure is plotted.

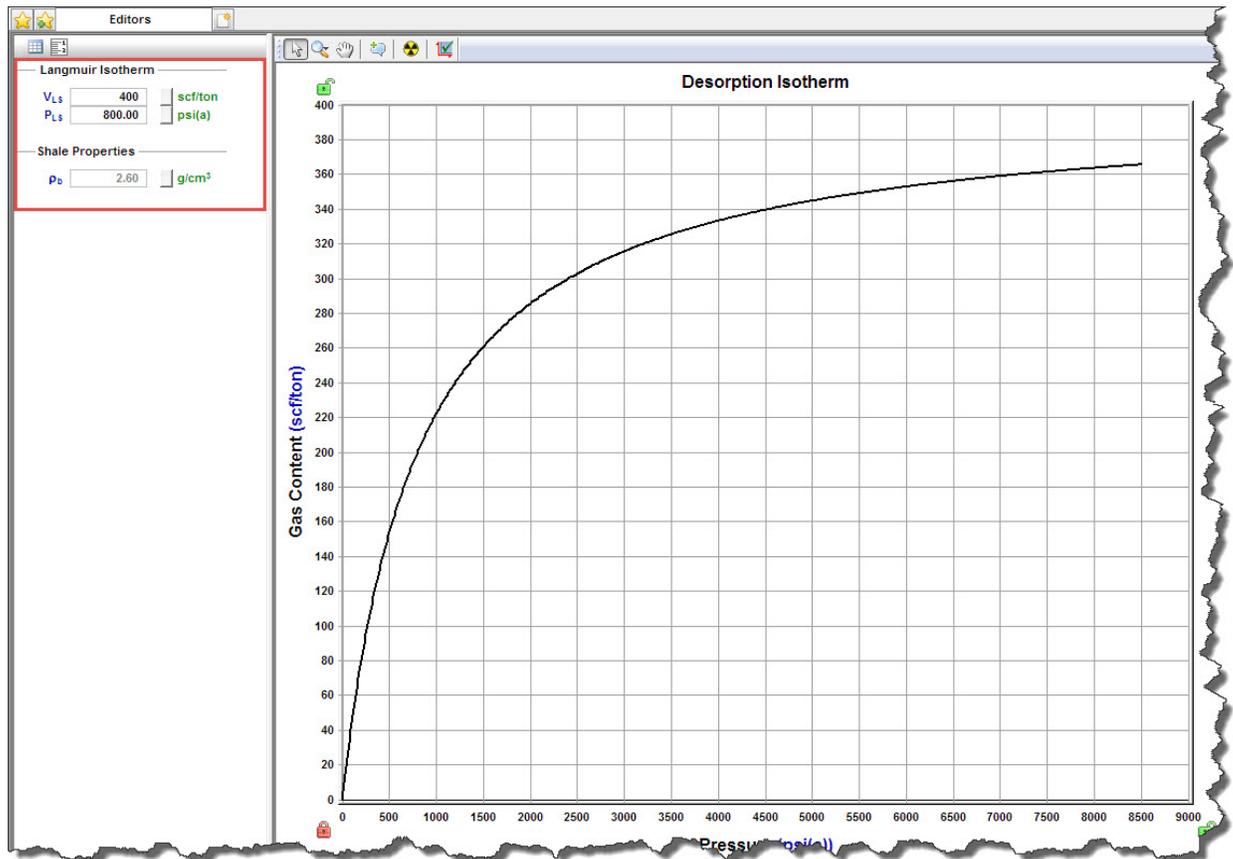

Geomechanical properties


After you select **Geomechanical** in the selection tree, you can set how rock properties (permeability and formation compressibility) vary with pressure.

- **Permeability Ratio Correlation drop-down list** — select a correlation for the variation of permeability with pressure.
- **Compressibility Ratio Correlation drop-down list** — select a correlation for the variation of formation compressibility with pressure.
- α — Biot effective stress coefficient (for Dobrynin correlation). The larger this parameter is, the more permeability and formation compressibility vary with pressure.

- γ — permeability modulus (for the Yilmaz & Nur correlation). The larger this parameter, the more permeability varies with pressure.

For more information, see [Geomechanical reservoir models](#).

Geomechanical properties vs. pressure are plotted, including k / k_i and c_f / c_{fi} .

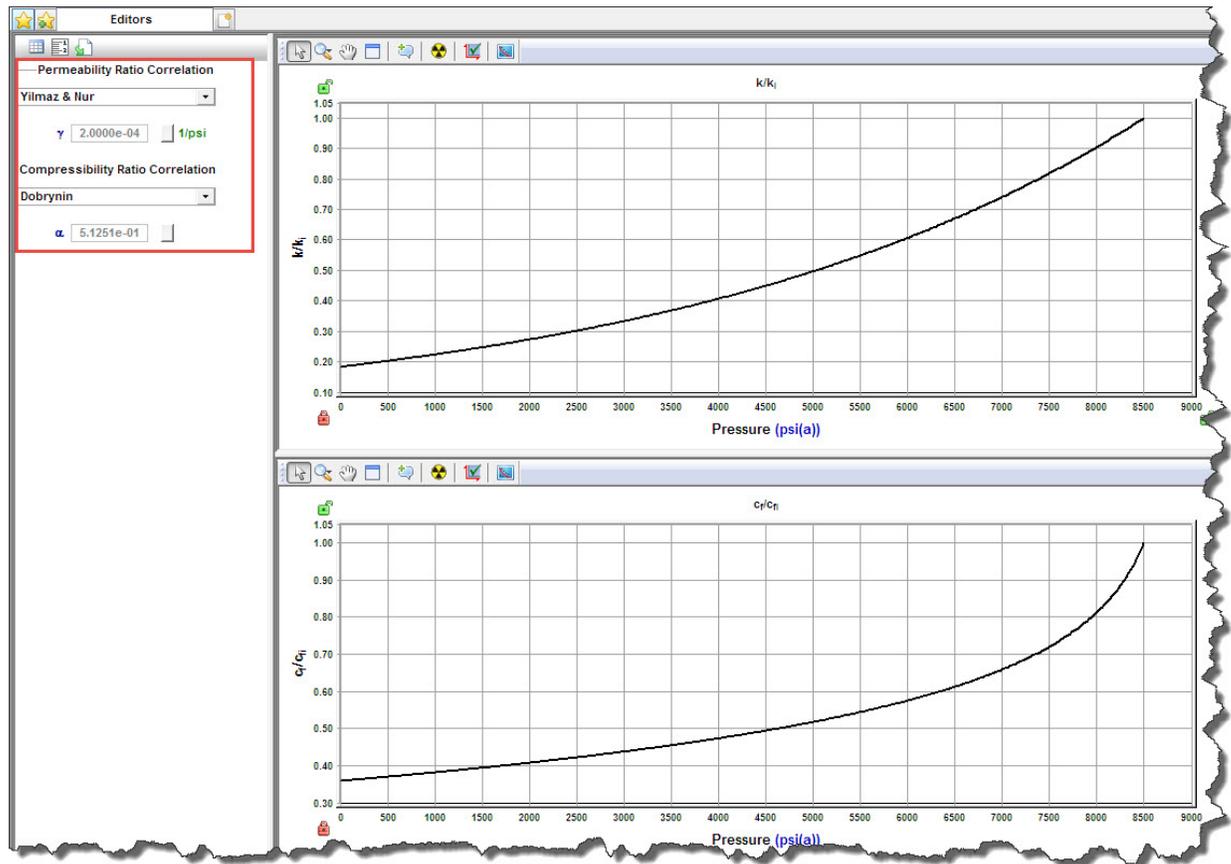

Relative permeability properties


After you select **Relative Permeability** in the selection tree, you can set correlations and parameters describing [relative permeability](#) between different fluids flowing together.

- **2-Phase Model Correlation drop-down list** — select a relative permeability correlation. For more information, see [relative permeability correlations](#).
- (located at the bottom of the pane) **3-Phase Model Correlation** — defines how given 2-phase relative permeabilities are combined to calculate permeability for each phase for the cases when all three phases (oil, gas, and water) are flowing together. For more information, see [three-phase correlations](#).

Water-gas section

Parameters in the Water-Gas section describe relative permeabilities for the case when water and gas are flowing together:


- $S_{w\text{ irr}}$ — irreducible water saturation. This is the immobile water when gas is the displacing fluid.
- $S_{g\text{ c}}$ — critical gas saturation. This is the minimum saturation for gas to become mobile.
- $k_{rw}(S_{g\text{ c}})$ — water relative permeability at $S_{g\text{ c}}$.
- $k_{rg}(S_{w\text{ irr}})$ — gas relative permeability at $S_{w\text{ irr}}$.
- n_w — water relative permeability exponent. This parameter describes how much the water relative permeability curve bends.
- n_g — gas relative permeability exponent. This parameter describes how much the gas relative permeability curve bends.

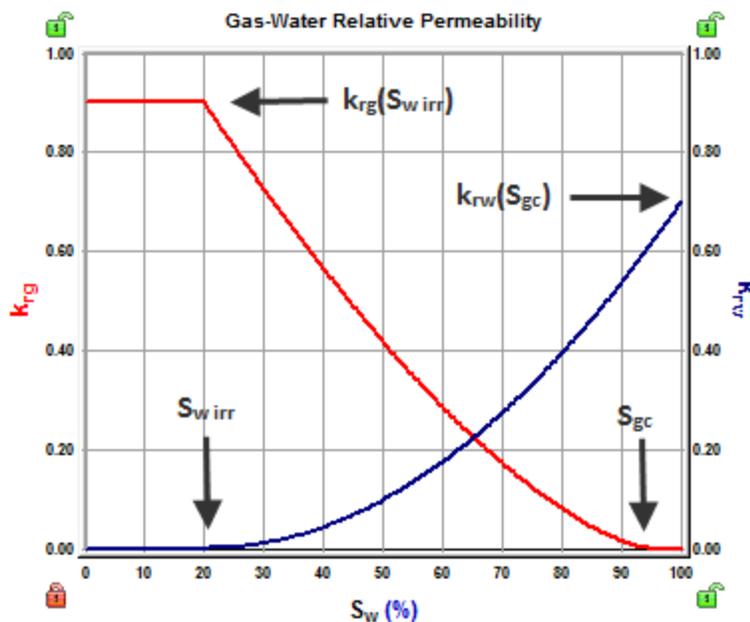

Oil-gas section

Parameters in the Oil-Gas section describe relative permeabilities for the case when oil and gas are flowing together:

- $S_{w\text{ irr}}$ — irreducible water saturation. This is the immobile water when oil or gas is the displacing fluid.
- S_{org} — residual oil saturation to gas. This is the immobile oil when gas is the displacing fluid.
- S_{gc} — critical gas saturation. This is the minimum saturation for gas to become mobile.
- $k_{\text{ro}}(S_{w\text{ irr}})$ — oil relative permeability at $S_{w\text{ irr}}$.
- $k_{\text{rg}}(S_{\text{org}})$ — gas relative permeability at S_{org} .
- n_{og} — oil relative permeability exponent to gas. This parameter describes how much the oil relative permeability curve bends.
- n_{q} — gas relative permeability exponent to gas. This parameter describes how much the gas relative permeability curve bends.

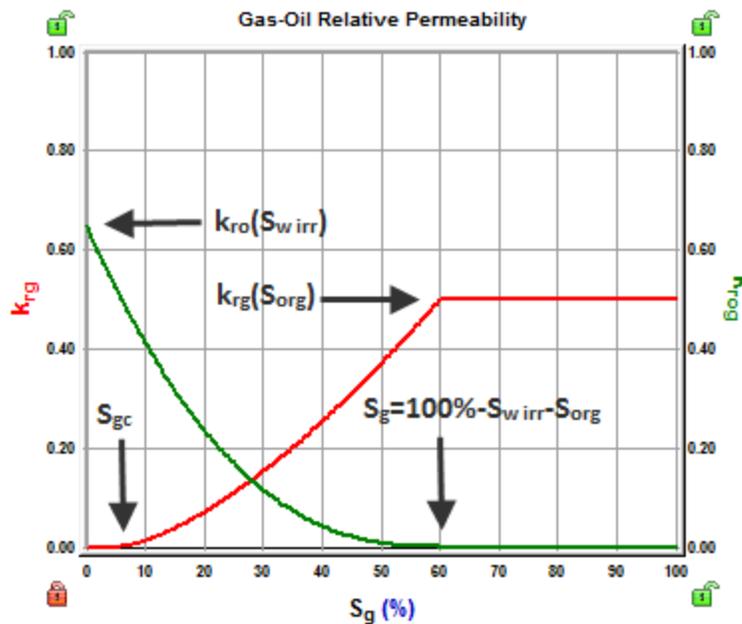


Water-oil section

Parameters in the Water-Oil section describe relative permeabilities for the case when oil and water are flowing together:

- $S_{w\text{ irr}}$ — irreducible water saturation. This is the immobile water when oil is the displacing fluid.

- S_{orw} — residual oil saturation to water. This is the immobile oil when water is the displacing fluid.
- $k_{rw}(S_{orw})$ — water relative permeability at S_{orw} .
- $k_{ro}(S_{wirr})$ — oil relative permeability at S_{wirr} .
- n_w — water relative permeability exponent. This parameter describes how much the water relative permeability curve bends.
- n_{ow} — oil relative permeability exponent to water. This parameter describes how much the oil relative permeability curve bends.

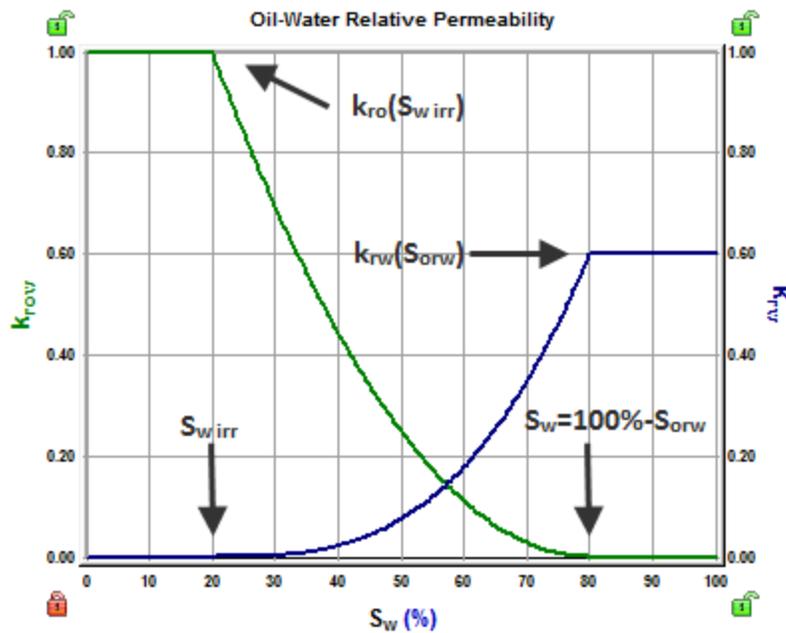

Wellbore editor

In the Wellbore editor (located within the Editors pane), you can create multiple wellbore configurations for a well. Wellbore configurations are used to calculate flowing pressures in the Production editor. Configurations are assigned a date and are used in calculations until the date of the next configuration. Temperature and deviation surveys can also be added for the initial configuration. A schematic of the wellbore is displayed on the right side of this editor.

After you have entered completion data and set temperature gradients, this data can be used in analyses and pressure calculations.

Note: Many rate transient analysis (RTA) analyses use sandface flowing pressures. In order to calculate sandface flowing pressures, you must enter wellbore information.


Toolbars

There are two toolbars associated with the Wellbore editor: primary and schematic.

Primary

The primary toolbar has the following icons:

-  **Add Configuration** — opens the Add Wellbore Configuration dialog box where you can select an existing wellbore or configuration to copy from, or create a blank configuration. By default, Harmony Enterprise makes a copy of the wellbore. However, you can create a new, blank configuration.

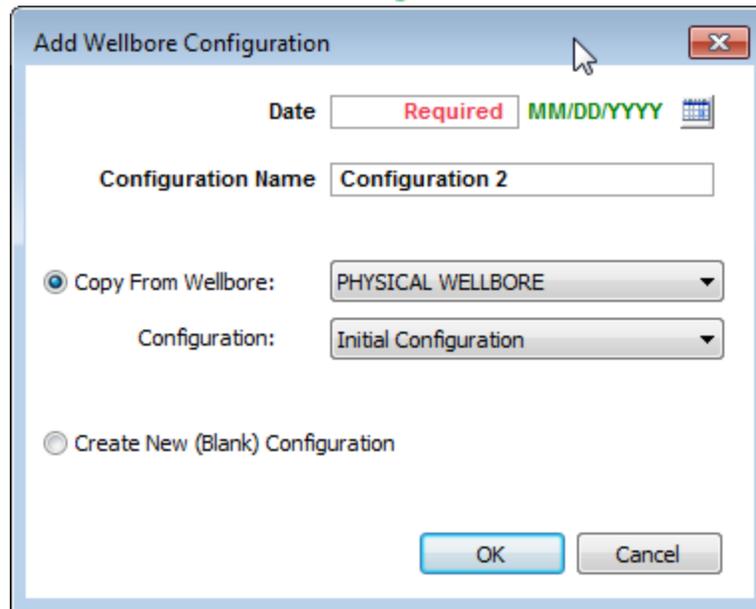

-  **Delete Configuration** — this icon is enabled after you select a wellbore in the Editors pane. If the initial configuration is removed, the next configuration is set as the Initial Configuration. When only one configuration exists, it cannot be deleted.

Note: Pressures are not updated after deleting a wellbore until the Calculate icon is clicked. If the Auto Calculate feature is enabled, pressures are recalculated when a wellbore is deleted.


-  **Liquid Loading** — opens the Liquid Loading Parameters dialog box where you enter the required parameters:
 - select the correlation used to calculate liquid-loading conditions.
 - select the liquid type.
 - select how the critical gas rate used to determine liquid-loading conditions is calculated: at Datum, or at end of tubing (at EOT).
Note that for configurations with a casing flow path, the critical gas rate is always calculated at Datum.
-  **Calculate Sandface Pressure** — calculates sandface pressure each time you click this icon.
-  **Toggle Name / Date** — toggle between the name and date of the configuration in the pane below.
-  **Copy to / Paste from Clipboard** — copy / paste configurations.

Tip: To set various elevations (for example, ground level, Kelly bushing), enter these values in the Attributes tab.

Schematic

The schematic pane is located on the right-side of this editor in the Schematic pane, and has the following icon:

-  **Preferences** — opens the Schematic Preferences dialog box where you can customize your schematic.

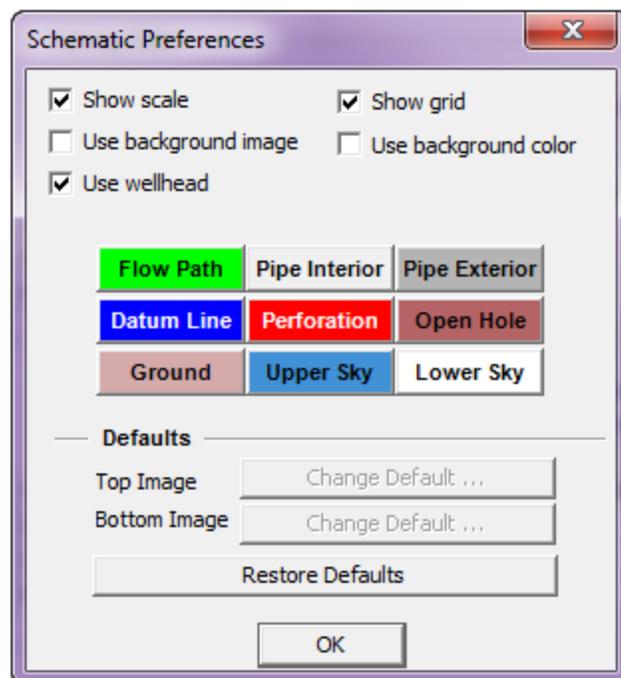

Main pane

In the main pane, you can edit your wellbore profile, which is important for rate transient analysis (RTA) as it provides a model of your well to calculate sandface pressures.

Click **Initial Configuration** in the Editors pane; then enter values in the Casing Data, Tubing Data, Perforation Intervals, and Pressure Loss Calculation Parameters areas.

Editors

Editors
Frac Extension-Pre...
Infill-Rate
Infill-Pressure

Initial Configuration

- Temperature
- Deviation Survey

Configuration Date MM/DD/YYYY

Configuration Name

Casing Data

	Section Type	Top Depth (MD)	Bottom Depth (MD)	Inner Diameter	Roughness
		ft	ft	in	in
1	Prod. Casing	0.0	17398.7	4.670	0.000600
2					
3					
4					

Tubing Data

	Bottom Depth (MD)	Inner Diameter	Outer Diameter	Roughness
	ft	in	in	in
1	12638.5	1.995	2.375	0.000600
2				
3				
4				

Perforated Intervals

	Top Depth (MD)	Bottom Depth (MD)	MPP	Flow Proportion	Flow Percentage
	ft	ft	ft		%
1	12555.0	17221.0	14888.0	100.000	100.00
2					
3					
4					

Pressure Loss Calculation Parameters

Flow Path Datum MD ft

Correlation Excess Prs Drop psi

Properties

Wellbore


Production

When entering casing or tubing data, clicking the  icon on the right-side of each row opens the Sizes dialog box, where tubing /casing / pipe sizes can be edited.


If you select **Pumping** in the **Flow Path** drop-down list and **Auto Template** is selected (default setting), these columns are displayed in the Production editor:

- Gas Volume
- Casing Pressure
- Pressure Source
- Active Pressure
- Calculated Sandface Pressure
- Liquid Level (MD)
- Average Liquid Gradient
- Gas Gradient
- Oil Gradient
- Water Gradient

Click **Temperature** in the Editors pane; then enter your temperature profile.

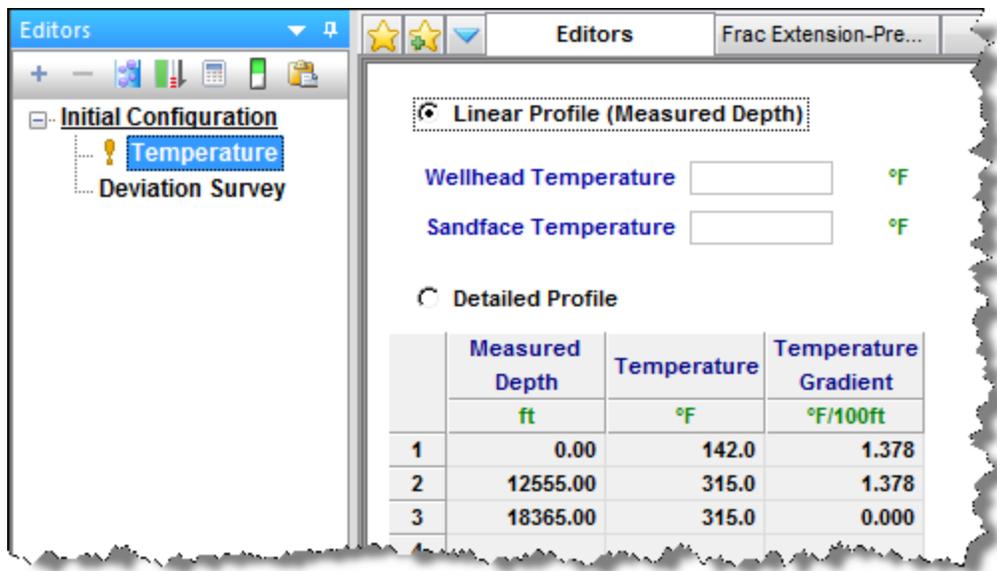

Click **Deviation Survey** in the Editors pane; then enter measured depth and TVD. In this way, you can emulate a horizontal or directional well. For a vertical well, deviation data is unnecessary.

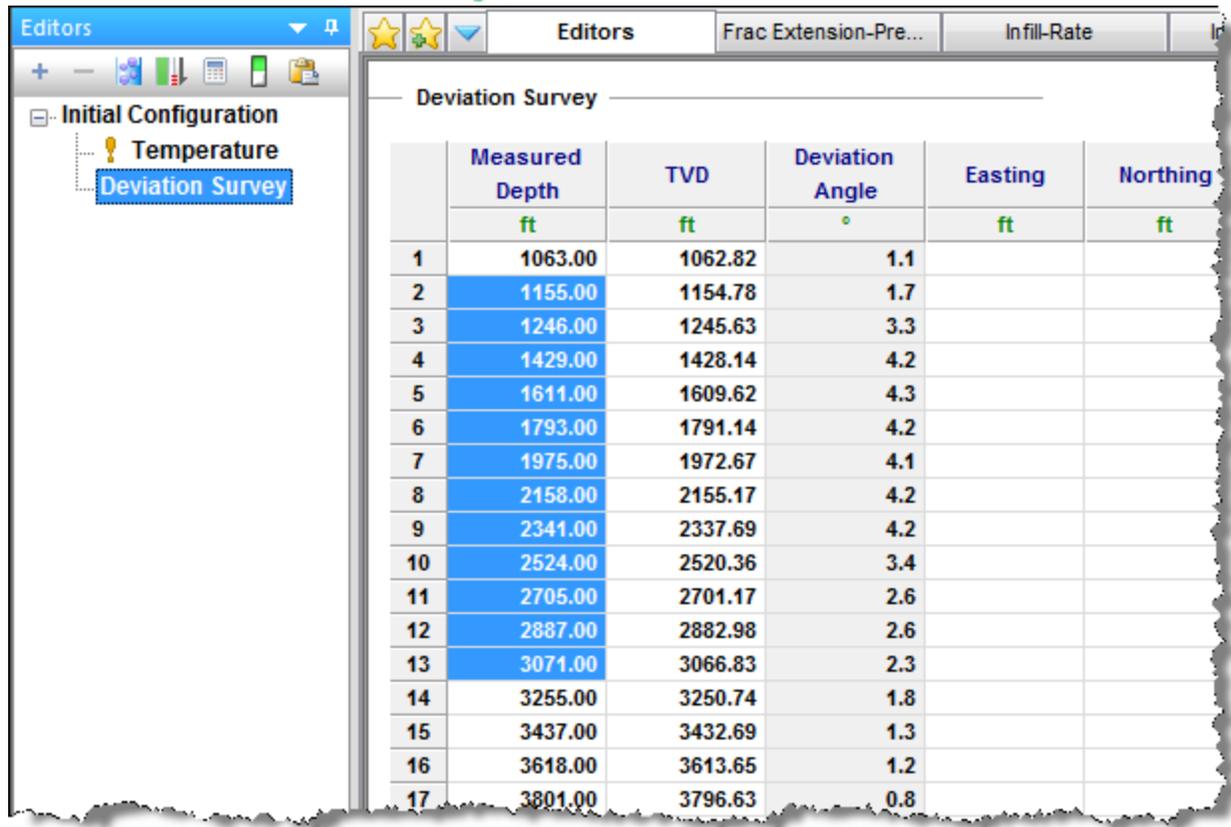


	Measured Depth	TVD	Deviation Angle	Easting	Northing
	ft	ft	°	ft	ft
1	1063.00	1062.82	1.1		
2	1155.00	1154.78	1.7		
3	1246.00	1245.63	3.3		
4	1429.00	1428.14	4.2		
5	1611.00	1609.62	4.3		
6	1793.00	1791.14	4.2		
7	1975.00	1972.67	4.1		
8	2158.00	2155.17	4.2		
9	2341.00	2337.69	4.2		
10	2524.00	2520.36	3.4		
11	2705.00	2701.17	2.6		
12	2887.00	2882.98	2.6		
13	3071.00	3066.83	2.3		
14	3255.00	3250.74	1.8		
15	3437.00	3432.69	1.3		
16	3618.00	3613.65	1.2		
17	3801.00	3796.63	0.8		

If you want to add a deviation survey with 3-dimensional data, enter your data in the Easting and Northing columns.

Schematic pane

By default, the wellbore Schematic pane opens to the right of the configuration parameters. This schematic is a two-dimensional visual representation of the well information that has been provided. The depth scale appears to the left of the wellbore. The flow path of the produced fluid in the well is displayed in green, and injected fluid is displayed in red. Perforations are indicated in red, and the datum is depicted with a dashed blue line.

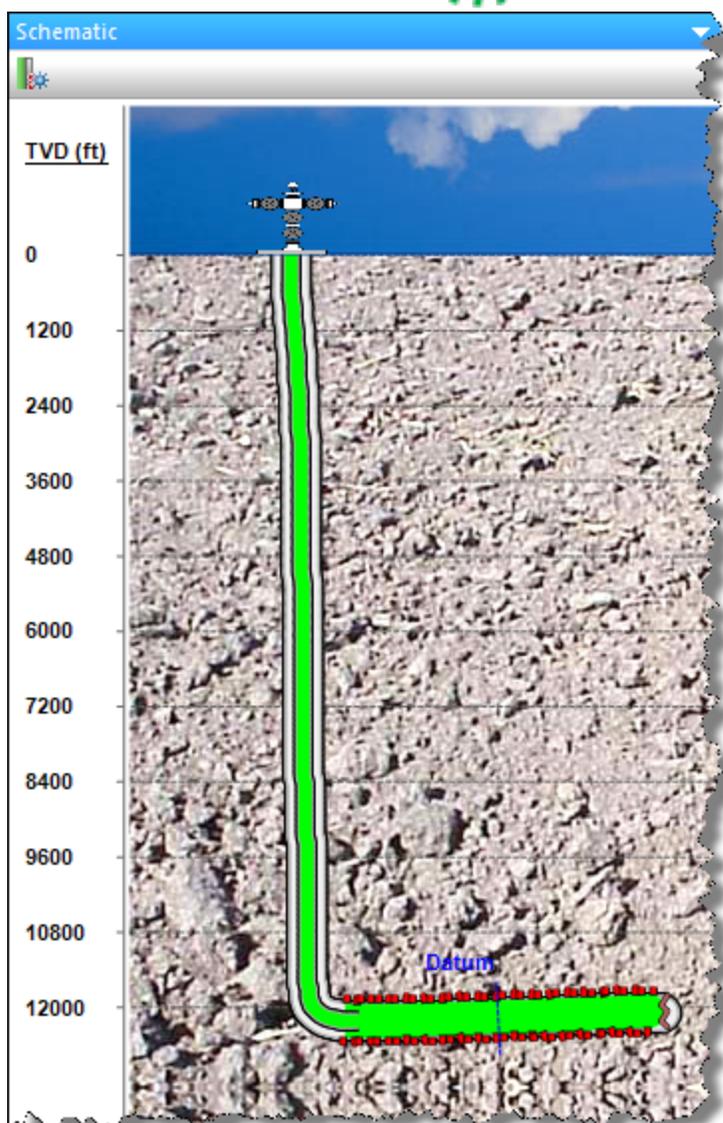

Production editor

In the Production editor (located within the [Editors pane](#)), you can manipulate imported production and flowing pressure data, and create new production records. To open the Production editor, click **Production** at the bottom of the pane.

The required inputs for calculating sandface pressure (including auto-calculated sandface pressure) are:

1. A complete wellbore (wellhead + sandface temperature, casing, tubing (if flow path !=casing), datum).
2. Properties for the fluids being produced (gas, oil, water, and condensate).
3. An active pressure (set by Pressure Source; either casing, tubing, gauge depth, or imported sandface pressure).
4. Production for the fluids being produced (although sandface pressures are calculated without production / assumed to be shut-in)

The Production editor consists of the following parts:

- [Toolbars](#)
- [Selection tree](#)
- [Grid \(table\)](#)


Toolbars

The Production editor has two toolbars: primary and secondary. The unique items are described below; for a description of common icons, see [toolbars](#).

Primary toolbar

The primary toolbar for the Production editor is located directly below the Editors pane.


Clicking the + icon on this toolbar lists two options.

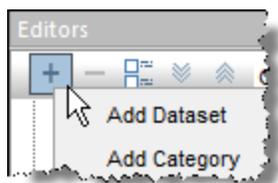

- **Add Dataset** — opens the Create Custom Dataset dialog box. You can create two different types of custom datasets: input (using values you enter) and calculated (using equations you enter). The selection tree updates after you add your dataset and your update is viewable on the Plot Selection pane and Diagnostics tab.
- **Add Category** — opens the Create Custom Category dialog box where you can create custom categories to group your data. The selection tree updates after you add your category and your update is viewable on the Plot Selection pane and Diagnostics tab.

You can click the – icon after selecting the custom dataset or category you want to delete. You are prompted to confirm your decision when deleting a custom dataset, but a custom category is immediately deleted.

After you have customized the table / grid display to your liking, you can save your configuration as a template for re-use. Click the drop-down arrow on the toolbar and select **Save / Delete Template**. To load a previously saved template, select it from the drop-down list.

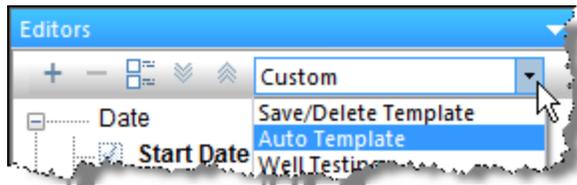

If you select **Auto Template** (default setting), the following columns are displayed, if they have data:

- Gas Volume
- Oil Volume
- Water Volume
- Cond Volume
- CO2 Volume
- Gas Lift Inj Volume
- Gas Inj Volume
- Water Inj Volume
- Casing Pressure
- Tubing Pressure
- Line Pressure
- Gauge Depth Pressure
- Imported Sandface Pressure

The following Flowing Pressure columns are displayed, if at least one of these columns has data: casing pressure, tubing pressure, gauge depth pressure, or imported sandface pressure:

- Pressure Source
- Active Pressure
- Calculated Sandface Pressure

The following columns are displayed if any wellbore configuration has the Flow Path set to "Pumping":

- Gas Volume
- Casing Pressure
- Pressure Source
- Active Pressure
- Calculated Sandface Pressure
- Liquid Level (MD)
- Liquid Level (TVD)
- Average Liquid Gradient
- Gas Gradient
- Oil Gradient
- Water Gradient

Downhole gauge pressure data can be used to calculate the sandface pressure. This functionality is only available for Tubing, Pumping and Casing flowpaths with the following assumption: gauge and tubing are landed above datum (MPP).

Note: For the pumping flowpath the gauge cannot be above the end of tubing (EOT).


Secondary toolbar

This editor has the following important icons on its secondary toolbar (to the right of the Editors pane):

-  **Add Data** — adds data to the current well. Select either:
 - **Enter Data** — opens the Import Data dialog box where you assign column headers (by clicking the drop-down arrows) and type in your data.

Note: If active pressure has been set to a wellhead pressure (for example, tubing pressure), and "Use Active Pressure" has been selected, all analyses will use the tubing pressure as the flowing pressure in calculations. This could result in significant differences in results compared to using a calculated sandface flowing pressure. If imported sandface pressures are not available, we recommend calculating a sandface pressure and setting the pressure for analysis to "Use Calculated Sandface Pressure".

2. **Use Calculated Sandface Pressure** — uses the calculated sandface pressure in the Production editor for flowing pressure in analyses. This is the default selection.

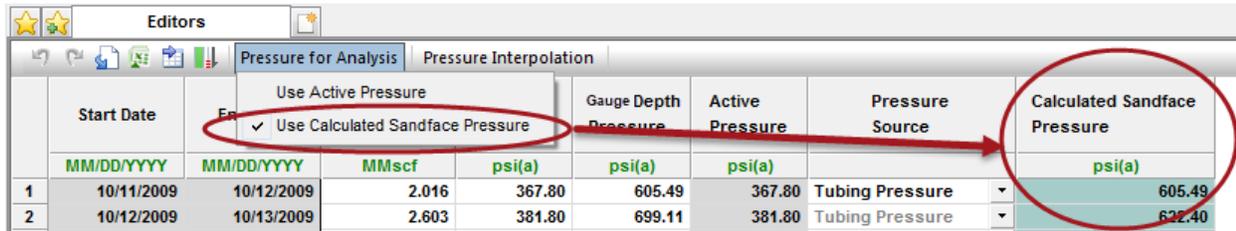

	Start Date	End Date	Pressure for Analysis		Gauge Depth Pressure	Active Pressure	Pressure Source	Calculated Sandface Pressure
			Use Active Pressure	Use Calculated Sandface Pressure				
1	10/11/2009	10/12/2009	2.016	367.80	605.49	367.80	Tubing Pressure	605.49
2	10/12/2009	10/13/2009	2.603	381.80	699.11	381.80	Tubing Pressure	622.40

Note: A valid wellbore is needed to calculate sandface pressures.

The pressure used in analyses is highlighted in turquoise.

Pressure interpolation

Flowing-pressure columns are interpolated based on whether you select Linear or Step. If the table cell is in the bottom row, and you press the Enter or Tab keys, the cell selection does not change. This affects these columns: Casing Head Pressure, Tubing Pressure, Gauge Depth Pressure, and AWS Wellhead Pressure.

For both Linear and Step, all rows prior to the first-specified value are set to the first-specified value. All rows after a specified value are set to the last-specified value.

For the step method, all rows after a specified value are set to the specified value until the next specified value.


For the linear method, all rows between two specified values are linearly interpolated. Linear interpolation is calculated at the mid-period for each row. The table below demonstrates this interpolation. (Cells in gray have been calculated or interpolated.)

Start Date	End Date	Value	Mid-period Date
2010/01/01	2010/02/01	100.00	2010/01/16 12:00:00
2010/02/01	2010/03/01	132.96	2010/02/15 00:00:00
2010/03/01	2010/04/01	165.92	2010/03/16 12:00:00
2010/04/01	2010/05/01	200.00	2010/04/16 00:00:00

For more information, see [interpolation theory](#).


Selection tree

The selection tree has production / injection, flowing pressure, and other data reported by date / time. To display data in the table to the right, click your dataset's checkbox in the tree structure. Deselecting a dataset's checkbox removes it from the table.

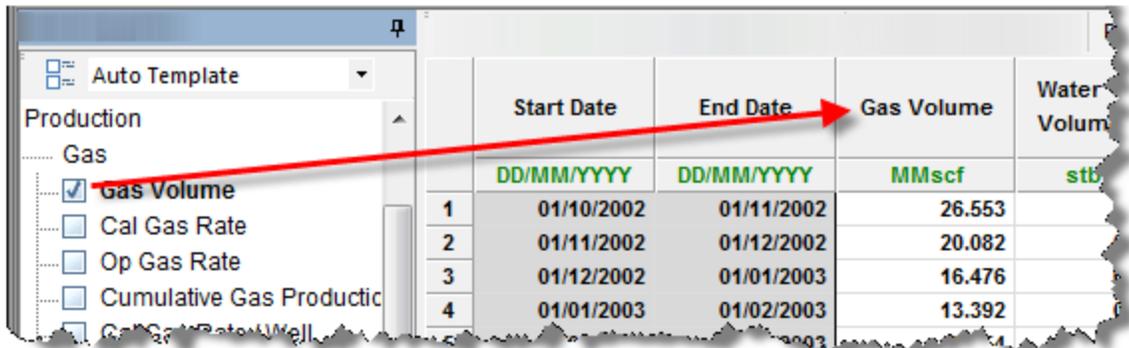

	Start Date	End Date	Gas Volume	Water Volume
	DD/MM/YYYY	DD/MM/YYYY	MMscf	stb
1	01/10/2002	01/11/2002	26.553	
2	01/11/2002	01/12/2002	20.082	
3	01/12/2002	01/01/2003	16.476	
4	01/01/2003	01/02/2003	13.392	

You can also add data to the table by clicking the dataset name and dragging it to its desired location

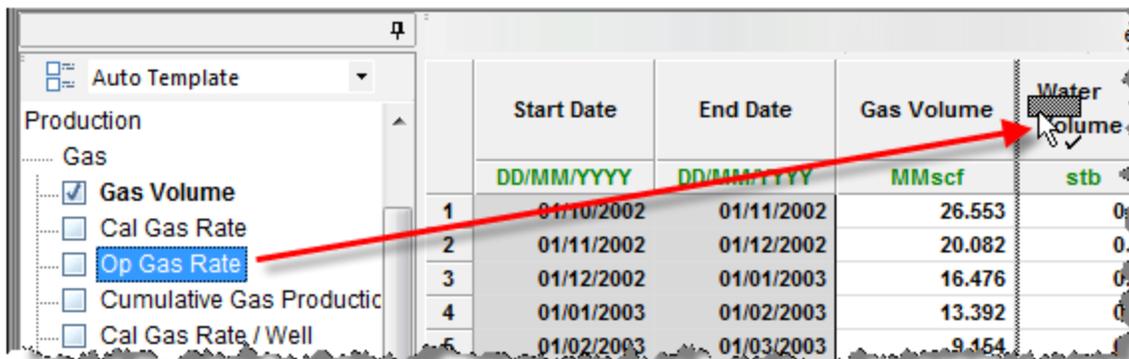

	Start Date	End Date	Gas Volume	Water Volume
	DD/MM/YYYY	DD/MM/YYYY	MMscf	stb
1	01/10/2002	01/11/2002	26.553	0
2	01/11/2002	01/12/2002	20.082	0
3	01/12/2002	01/01/2003	16.476	0
4	01/01/2003	01/02/2003	13.392	0
5	01/02/2003	01/03/2003	9.154	0

If you want to rename a custom dataset or category, right-click it in the selection tree and select Rename. (You can add these custom datasets and categories using the [primary toolbar](#).)

Grid (table)

The grid (or table), located on the right-side of the Production editor, displays the selected entity's production data. The Start Date and End Data columns are always displayed as the leftmost columns in the grid, and cannot be moved or removed. All of the other columns can be shown / hidden by selecting / deselecting the parameter's name in the selection tree, or by moving the parameter within the grid.

	Start Date	End Date	Gas Volume	Op Gas Rate	P
	YYYY/MM/DD	YYYY/MM/DD	MMscf	MMscfd	
1	2000/09/09	2000/09/10	0.000	0.000	
2	2000/09/10	2000/09/11	0.550	0.550	
3	2000/09/11	2000/09/12	0.550	0.550	
4	2000/09/12	2000/09/13	0.550	0.550	

To change the units, click the unit sub-header and select from the list. You can also set precision.

	Start Date	End Date	Op Gas Rate	Gas Volume	T	P
	YYYY/MM/DD	YYYY/MM/DD	MMscfd	MMscf		
1	2000/09/09	2000/09/10	0.00			
2	2000/09/10	2000/09/11	0.5			
3	2000/09/11	2000/09/12	0.5			
4	2000/09/12	2000/09/13	0.5			
5	2000/09/13	2000/09/14	0.5			
6	2000/09/14	2000/09/15	0.5			
7	2000/09/15	2000/09/16	0.5			
8	2000/09/16	2000/09/17	0.5			
9	2000/09/17	2000/09/18	0.5			
10	2000/09/18	2000/09/19	0.5			
11	2000/09/19	2000/09/20	0.2			
12	2000/09/20	2000/09/21	0.3			
13	2000/09/21	2000/09/22	0.5			
14	2000/09/22	2000/09/23	0.5			
15	2000/09/23	2000/09/24	0.5			
16	2000/09/24	2000/09/25	0.4			

Metric

Field

System

Precision ▶

scf/min

scf/hr

scf/d

scf/s

Mscfd

MMscfd

m³/min

cc/min

Fields with a white background can be edited by typing within the field, or pasting from another source (for example, Excel).

Note: If you select multiple wells, or a well group in the Entity Viewer, you cannot edit any of the fields. Gray fields (including cumulative production, ratios, and aggregates) are read-only.



To remove a row from the grid, right-click the row number and select Remove Row. You can only remove rows at the end of production.

Create Custom Dataset dialog box


This dialog box is commonly used when you [add custom datasets](#).

Tip: Harmony Enterprise supports up to 100 custom datasets.

- **Dataset Name** — type your dataset name. This is a required field and you cannot click OK until this field has been entered. "Invalid Dataset Name" is displayed until you type a name.
- **Unit Type** — select from the drop-down list. Note that this field cannot be edited after it is set.
- **Default Field Unit** — select your default field unit from the drop-down list.
- **Default Metric Unit** — select your default metric unit from the drop-down list.
- **Location** — select the dataset's location in the Production Editor's tree structure from the drop-down list.
- **Input** — uses values you enter.
- **Calculated** — opens the [Equation Editor dialog box](#) where you enter formulas for this dataset.

Equation Editor dialog box

This dialog box is commonly used when you add custom datasets or add custom attributes, and you want to use a Calculated type of dataset or attribute.

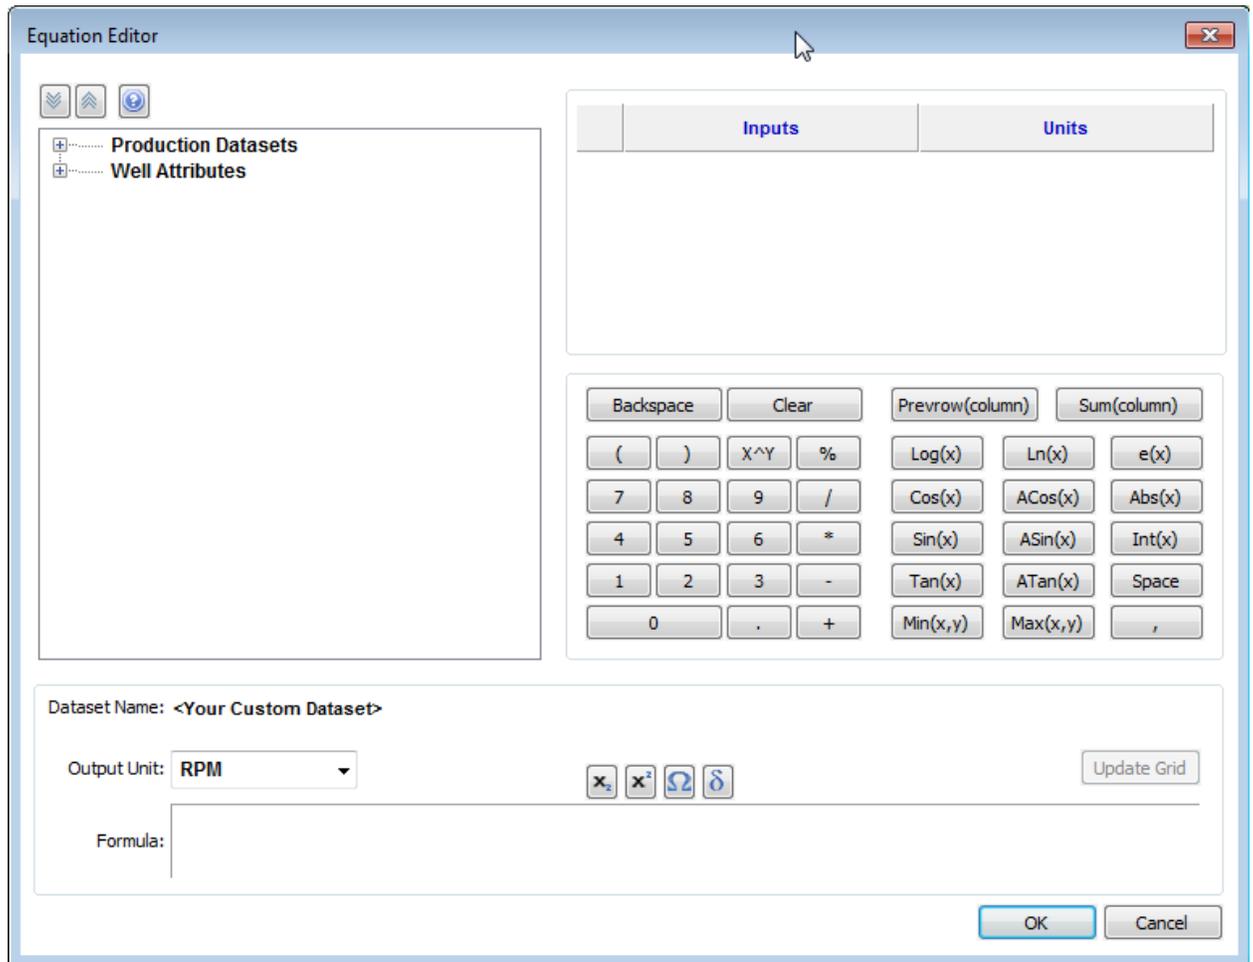

The Equation Editor has the following components:

- **Tree structure** — displays an updated list of all the production datasets that exist in the Production editor, as well as the numerical attributes that exist in the Attributes tab. This includes custom-calculated datasets, custom-input datasets, custom-input attributes, and custom-calculated attributes. Clicking an item in the tree structure inserts it into the formula.
- **Inputs / Units pane** — displays the units associated with each input.

- If a dataset or attribute is displayed in an equation twice, only one unit can be associated with that variable.
 - The table / grid displays a list of datasets / attributes in the formula pane when you click the **Update Grid** button, *after* you enter a valid formula. You can also update the table / grid each time you make a modification to the formula by clicking the **Update Grid** button.
 - Note that if your formula is invalid, clicking **OK** or **Update Grid** displays an error message in the lower left corner of the dialog box.
- **Calculator** — consists of numbers and mathematical functions.
 - **Formula pane** — displays the formula as you create it.
 - The *output unit* is the unit associated with the output of your formula.
 - By clicking the four icons directly above the formula area, you can insert subscript, superscript, and symbols within the formula.
 - You can use both the on-screen calculator (by clicking the buttons in the dialog box) and your keyboard.

Tip: When entering a formula, make sure to add the closing “)” when using a function that opens with a “(“. If your formula is invalid, clicking **OK** displays an error message in the lower left corner of the dialog box.

Referencing other datasets / attributes

You can enter a formula into the Formula pane using the keyboard. To reference another dataset or attribute, you must use the following format:

- Attribute: [A:Attribute Name]
- Dataset: [P:Dataset Name]

Dataset-specific functions

There are four special functions: *MinCol*, *MaxCol*, *Avg*, and *ValueAt*. These functions require production datasets (in columns) as inputs, and normalized time must also be specified.

- The units of normalized time can be selected in the Inputs / Units pane in this dialog box.
- The values "start" and "end" can also be entered as normalized time values. "Start" refers to the beginning of production history, and "end" references the last date of production.

Note: Normalized time must be specified as an integer.

1. **MinCol** — this function returns the smallest value of the specified column, over a specified period of normalized time.

Equation Format: MinCol(column, start time, end time)

Example: MinCol([P:Gas Volume], end-6, end)

This returns the minimum gas volume during the last six months of production.

2. **MaxCol** — this function returns the highest value of the specified column, over a specified period of normalized time.

Equation Format: MaxCol(column, start time, end time)

Example: MaxCol([P:Gas Volume], start, end)

This returns the maximum gas volume during the entire production history of the well.

3. **Avg** — this function returns the weighted average of the specified column, over a specified period of normalized time.

Equation Format: Avg(column, start time, end time)

Example: Avg([P:Gas Volume], 3, 12)

This returns the average gas volume between the 3rd and 12th months of production, based on the following equation:

$$average(x, t) = \frac{\Sigma(x * \Delta t)}{\Sigma \Delta t}$$

Although you can specify the period in months, Harmony Enterprise inputs the Δt in days when calculating the weighted average. So, based on the month in the year, Δt can be 28 - 31 days for a full month.

4. **ValueAt** – this function returns a scalar value from the specified column, at a specified normalized time.

Equation Format: ValueAt(column, time).

Example: ValueAt([P:Gas Volume], 1.5)

This returns the gas volume at 1.5 months. Calculations are done using days, and monthly values are converted using 365.25/12. So, in this case, 1.5 months would be equivalent to 45.6




days. Harmony returns the value at the row that covers the time range which includes this specific time.

Note: The start time in Harmony Enterprise is inclusive, and the end time is exclusive.

Static pressure editor

In the Static Pressure editor (located within the Editors pane), you can view, enter, and modify static pressures for wells. Static pressures can also be viewed at the group level, but not manipulated. In addition, you can view static pressures for scenarios.

The Editors pane on the left-side has a list of data series that you can select to be displayed in the table. By default, all of the series are selected to be displayed. In addition, the following columns are always displayed (that is, they cannot be hidden): test date, static gauge depth pressure, gauge depth, use in analysis, static sandface pressure, and static pressure at datum).

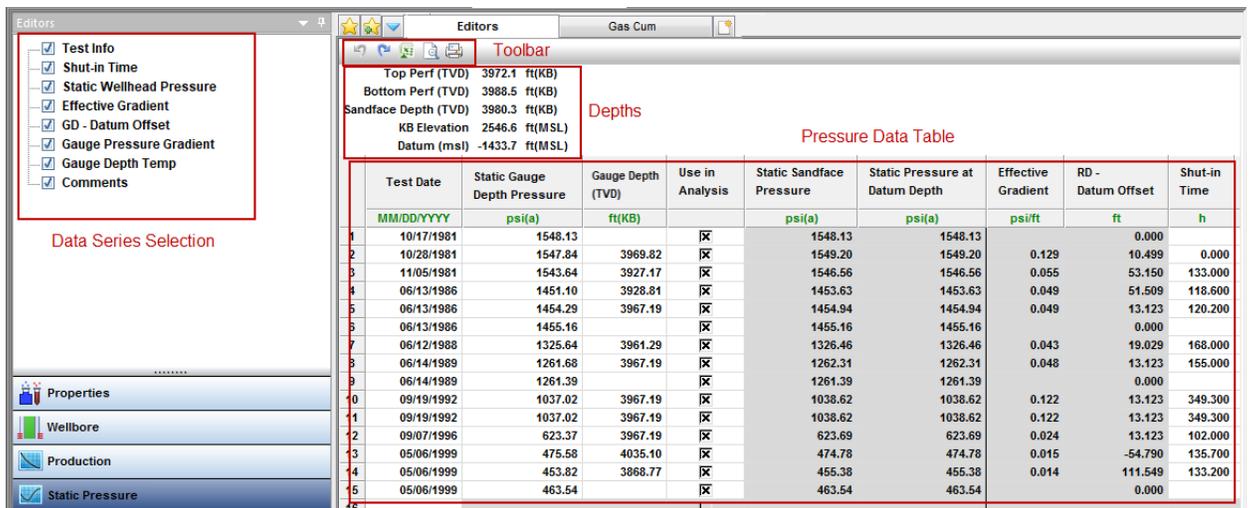

Test Date	Static Gauge Depth Pressure	Gauge Depth (TVD)	Use in Analysis	Static Sandface Pressure	Static Pressure at Datum Depth	Effective Gradient	RD - Datum Offset	Shut-in Time
MM/DD/YYYY	psi(a)	ft(KB)		psi(a)	psi(a)	psi/ft	ft	h
1	10/17/1981	1548.13	☑	1548.13	1548.13		0.000	
2	10/28/1981	1547.84	☑	1549.20	1549.20	0.129	10.499	0.000
3	11/05/1981	1543.64	☑	1546.56	1546.56	0.055	53.150	133.000
4	06/13/1986	1451.10	☑	1453.63	1453.63	0.049	51.509	118.600
5	06/13/1986	1454.29	☑	1454.94	1454.94	0.049	13.123	120.200
6	06/13/1986	1455.16	☑	1455.16	1455.16		0.000	
7	06/12/1988	1325.64	☑	1326.46	1326.46	0.043	19.029	168.000
8	06/14/1989	1261.68	☑	1262.31	1262.31	0.048	13.123	155.000
9	06/14/1989	1261.39	☑	1261.39	1261.39		0.000	
10	09/19/1992	1037.02	☑	1038.62	1038.62	0.122	13.123	349.300
11	09/19/1992	1037.02	☑	1038.62	1038.62	0.122	13.123	349.300
12	09/07/1996	623.37	☑	623.69	623.69	0.024	13.123	102.000
13	05/06/1999	475.58	☑	474.78	474.78	0.015	-54.790	135.700
14	05/06/1999	453.82	☑	455.38	455.38	0.014	111.549	133.200
15	05/06/1999	463.54	☑	463.54	463.54		0.000	

Depths

The perforation intervals, sandface depth, kelly bushing (KB) elevation, and datum for the entity are displayed above the pressure data table. Some import file types (such as *.mer) include this well data. When it is not imported, the data that is specified in the Wellbore editor is used to populate these values. For wells, the sandface depth midpoint of perforation (MPP) is assumed to be the same as the datum depth. When a group is viewed, a common datum is determined for the group based on the datum of each well. No sandface depth is displayed for a group, as it is not meaningful.

Header

These items are displayed above the table in the main pane:

- **Top Perf (TVD)** — the uppermost perforation depth from the Attributes tab or the Wellbore editor. (The Wellbore editor's perforation interval inputs override the Attributes tab's inputs.) The top perf depth is converted from measured depth (MD) to true vertical depth (TVD) based on the Deviation Survey entered in the Wellbore editor.
- **Bottom Perf (TVD)** — the lowermost perforation depth. The bottom perf depth is converted from MD to true vertical depth TVD based on the Deviation Survey entered in the Wellbore editor.
- **Sandface Depth (TVD)** — the midpoint of the perforated interval (MPP). You cannot change the Sandface Depth in the Static Pressure editor by changing the Datum Depth in the Wellbore editor. It is calculated based on top and bottom perf inputs (from the Attributes tab or Wellbore editors) only. You cannot type a fixed reservoir datum depth.
- **KB Elevation** — the kelly bushing (KB) reference elevation. All datum calculations reference the KB elevation.
- **Datum (msl)** — the true vertical depth relative to mean sea level (msl). This value changes depending upon the launched entity as described below:
 - For Well entities: "Datum" depth is always the Sandface or MPP depth in TVD for the well. This is *not* the Datum Depth referred to in the Wellbore editor.
 - For Group entities: "Datum" depth is calculated from the average well Datum Depths of the wells in the group. As group membership changes, the group datum depth changes. The intention is to automatically minimize the Datum Depth correction required for each well in the group. You cannot type a fixed reservoir datum depth.

Pressure data table

The minimum requirements for an entry in the pressure table are a date and a static gauge depth pressure. Additional information that can be provided includes the gauge depth, shut-in time, static well-head pressure, gauge pressure gradient, gauge depth temperature, comment, and test info.

In the Use in Analysis column, you can select which static pressures are displayed on worksheets and which are used in the analysis. By default, all static pressures are selected.

When a gauge depth is not provided, the gauge depth is assumed to be the same as the datum. When a gauge depth is available, the gauge depth pressure gradient is used to convert the static pressure at the gauge depth to a datum pressure. The same approach is used to convert static pressures from a well datum to a group datum. When the gauge depth pressure gradient is not provided (or if the input value is 0), fluid properties from the Properties editor are used to estimate a pressure gradient.

Column headers

Column headers are defined as follows:


- **Static Gauge Depth Pressure** — the gauge measured pressure in absolute pressure units.
- **Gauge Depth** — the depth of the gauge used to measure the static pressure.
- **Static Sandface Pressure** — the Gauge Depth Pressure corrected to the Sandface Depth or MPP of a launched well entity.
- **Static Pressure at Datum Depth** — the Gauge Depth Pressure corrected to the Datum Depth for a launched group entity. You cannot type a fixed reservoir datum depth. The Static Pressure at Datum Depth for a well entity, or a group with only one well, is always the same as the Static Sandface Pressure. The Static Pressure at Datum Depth and the Static Sandface Pressure are only different when there are multiple wells in the group with differing MPPs based on datum depths.
- **Effective Gradient** is either:
 - (a) the “Gauge Pressure Gradient” you entered, or
 - (b) An internally calculated gradient based on the specified Primary Fluid in the Attributes tab, the input Gauge Depth Pressure, the reservoir temperature in the Properties editor, as well as inputs in the Wellbore and Fluid Properties editors.
 - We use (a) when the Gauge Gradient contains a non-zero value
 - We use (b) when the Gauge Gradient contains a zero, or is blank.
- **Static Wellhead Pressure**— you can type a value for information purposes. In rare circumstances, we have only measured well static pressure data and no gauge measured data. In those cases, you can copy / paste the Static Wellhead Pressures over to the Gauge Depth Pressure column. If you specify a Gauge Depth of "0" (zero) and set the Primary fluid to gas, oil, or water, Harmony Enterprise calculates Sandface and Group Datum pressures based on sandface depth (MPP) and the Effective Gradient. This method can be used for gas, oil, or water, but generally should only be used for gas. It also assumes there are no wellbore or reservoir fluid contacts between the wellhead and the calculated datum depth.
- **Gauge Pressure Gradient** — the pressure gradient measured at or near the gauge depth in the wellbore. You should be careful when using imported values, as these gradients generally reflect wellbore fluid contacts, and not necessarily the fluid contacts in the reservoir.

Note: The remainder of the column headers are provided for information only, and are not used in the calculations.

Entity Viewer - Custom

The Entity Viewer - Custom displays private groups and shared groups. You can create custom groups from your list of wells in the [hierarchy](#) based on locations and groupings that are not possible within the hierarchy structure.

Note: Property correlations and the gas type are initialized for a group based on the values you have specified for its constituent wells. If these settings are not identical for all the wells in the group, Harmony Enterprise uses the default values.

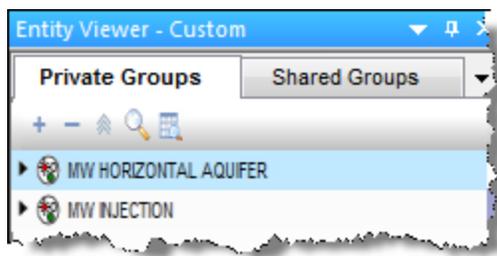

If you import custom groups, they are shared, and each custom group is guaranteed a unique name. Note that custom groups are not imported when their ID already exists.

Clicking an entity in this pane highlights the entity in the [GIS map](#) and displays the entity's data under the other tabbed headings. (Only well and meter station entities are shown on the GIS map, and only if they have valid location information entered in their attributes.)

You can scroll through wells using your keyboard's arrow keys by doing the following: click the tab you want to view (for example, Analysis or Diagnostics), click a well in the Entity Viewer, and then press the Up and Down arrow keys on your keyboard.

You can select multiple entities by clicking wells while holding down the **Ctrl** key (to make individual selections), or the **Shift** key (to make group selections).

Toolbar

The Entity Viewer - Custom has the following important icons:

-  **Add Entity** — create an empty custom group or create a group from entities you have selected.

-  **Remove Selected Entities** — select an entity or group in the tree structure and then click this icon to remove it. Note that if you delete an entity in a custom group, it is removed from the group, but it still exists in the project.
-  **Search** — opens a search box where you can search for entities by name. (You can also initiate a search by pressing **Ctrl + F**.)
-  **Query** — opens the Query Wells dialog box where you can query and filter wells using attribute data.

For a description of common icons, see [pane toolbars](#).

Note that if you selected a previously created filter (see [project filters](#)) prior to creating a new custom group, this custom group automatically exists in the filter.

Private groups tab

On this tab, you can view groups that only you can see.

These entities are user-specific and are not accessible by others unless you right-click a custom group and select **Share Group**. This moves the custom group to the Shared Groups tab.

Shared groups tab

On this tab, you can view groups and wells that are shared with users who have access to the database.

Work status icons

The Entity Viewer panes use icons to indicate the work status of entities. The icons and their meanings are as follows:

-  **(Complete)** — an analysis has been completed for this entity.
-  **(In Progress)** — this entity has been selected, and an analysis has been started, but it has not yet been completed.
-  **(Invalid)** — data for this entity has changed, or wells within this group have changed. If an analysis has been run, it may no longer be valid.

You can set your work status manually by right-clicking the entity and selecting **Set Entity Work Status**. To reset your work status, right-click and select **Clear Status**.

Context menu

Right-clicking within this pane lists various options, which depend on the type of entity you select (for example, a well, group, or multiple wells).

- **Rename** — renames the entity.
- **Remove Selected Entities** — removes the selected entities from the custom group, but retains the entities in the database.
- **Rerun Well Query** — (visible after you have run a [well query](#)): if you have modified wells in your database, running the query again updates your results.
- **Select Constituent Wells** — (for groups): selects all of the wells that belong to the group. (This selection is applied to the [Entity Viewer - Hierarchy](#) as well.)
- **Set Entity Work Status** — changes the work status icon for the selected entity.
- **Apply Workflow to Selected Entities** — applies your workflow to the entities you selected. For more information, see [apply a workflow](#).
- **Move Selected into Custom Group** — moves the selected entities into a custom group.
- **Duplicate Selected into Custom Group** — copies the selected entities into the custom group you select from the submenu.



Entity Viewer - Hierarchy

The Entity Viewer - Hierarchy displays the entities in a project, which you can view, sort, and select for analysis.



Clicking an entity in this pane highlights the entity in the [GIS map](#) and displays the entity's data under the other tabbed headings. (Only well and meter station entities are shown on the GIS map, and only if they have valid location information entered in their attributes.)

You can scroll through wells using your keyboard's arrow keys by doing the following: click the tab you want to view (for example, Analysis or Diagnostics), click a well in the Entity Viewer, and then press the Up and Down arrow keys on your keyboard.

You can select multiple entities by clicking wells while holding down the **Ctrl** key (to make individual selections), or the **Shift** key (to make group selections).

Toolbar


The Entity Viewer - Hierarchy has the following important icons:

-  **Add Entity** — opens a submenu where you can select your entity type (for example, gas, oil, water, and so on).
-  **Add Scenario** — (for wells) adds a scenario child item below the parent well in the Entity Viewer - Hierarchy pane.
-  **Duplicate Scenario** — (for scenarios) adds a copy of the scenario below the scenario you have selected.

-  **Remove Selected Entities** — select an entity / scenario in the hierarchy structure and then click this icon to remove it. This removes the entity from the database, so you are prompted to confirm your decision.

Any entities that you add or delete are reflected in the GIS, Diagnostics tab, analysis tab, Results tab, and Attributes tab. Deleting a well or group also removes it from the active filter.

-  **Search** — opens a search box where you can search for entities by name. (You can also initiate a search by pressing **Ctrl + F**.)

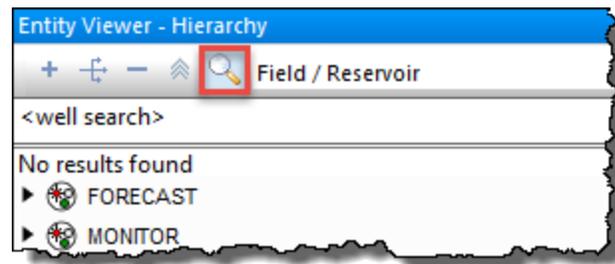

- **Hierarchy Structure** — you can add a hierarchy structure, modify an existing hierarchy structure, or select Field / Reservoir. If you select Add / Modify Hierarchy Structure, you can drag-and-drop fields from the Available Fields pane to the Current Hierarchy pane.

For a description of common icons, see [pane toolbars](#).

Work status icons

The Entity Viewer panes use icons to indicate the work status of entities. The icons and their meanings are as follows:

-  **(Complete)** — an analysis has been completed for this entity.
-  **(In Progress)** — this entity has been selected, and an analysis has been started, but it has not yet been completed.
-  **(Invalid)** — data for this entity has changed, or wells within this group have changed. If an analysis has been run, it may no longer be valid.


You can set your work status manually by right-clicking the entity and selecting **Set Entity Work Status**. To reset your work status, right-click and select **Clear Status**.

Hierarchy structure

The Hierarchy pane organizes entities in a hierarchical structure according to specific attributes, which you can view in the Attributes tab.

To initially view wells, Harmony Enterprise provides a default hierarchy structure: Field / Reservoir.

You can select your hierarchy structure from the drop-down list on top of the pane.

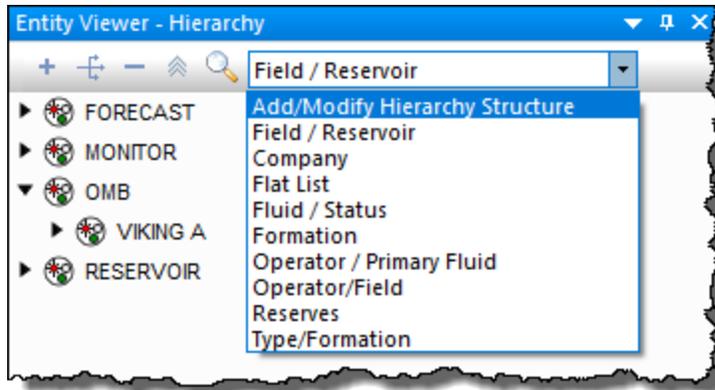

To create a new hierarchy structure, select **Add / Modify Hierarchy Structure** from the drop-down list.

Context menu

Right-clicking within this pane lists various options, which depend on the type of entity you select (for example, a well, group, or multiple wells).


- **Add Scenario** — adds a scenario child item below the parent well in the Entity Viewer - Hierarchy pane.
- **Duplicate Scenario** — (for scenarios) copies your currently selected scenario.
- **Promote to Well** — (for scenarios) replaces the parent well with the selected scenario, and demotes the parent well to a scenario. You are prompted to confirm your decision.
- **Rename** — opens a dialog box where you can type a new name for your entity (well or scenario).
- **Delete Selected Entities** — you are prompted to confirm the deletion, which removes the entities from the database. Note that you are not able to delete an entity that is locked by another user. To see the latest list of entities, click the **Refresh** icon () on the main toolbar.



- **Set Entity Work Status** — changes the work status icon for the selected entity.
- **Select Constituent Wells** — (for groups): selects all of the wells that belong to the group.
- **Expand Selected Group Only** — (for groups): expands the selected group.
- **Apply Workflow to Selected Entities** — applies your workflow to the entities you selected. For more information, see apply a workflow.
- **Copy / Paste from Clipboard** — copies / pastes data from the Properties editor.
- **Go To** — after selecting an entity, you can right-click it and select Go To, which highlights the entity on the GIS map with a blinking circle. If location information is not available for the well, a warning message is displayed in the Status Window.

GIS

The geographic information system (GIS) tab displays entities on a map based on one of the standard coordinate systems.

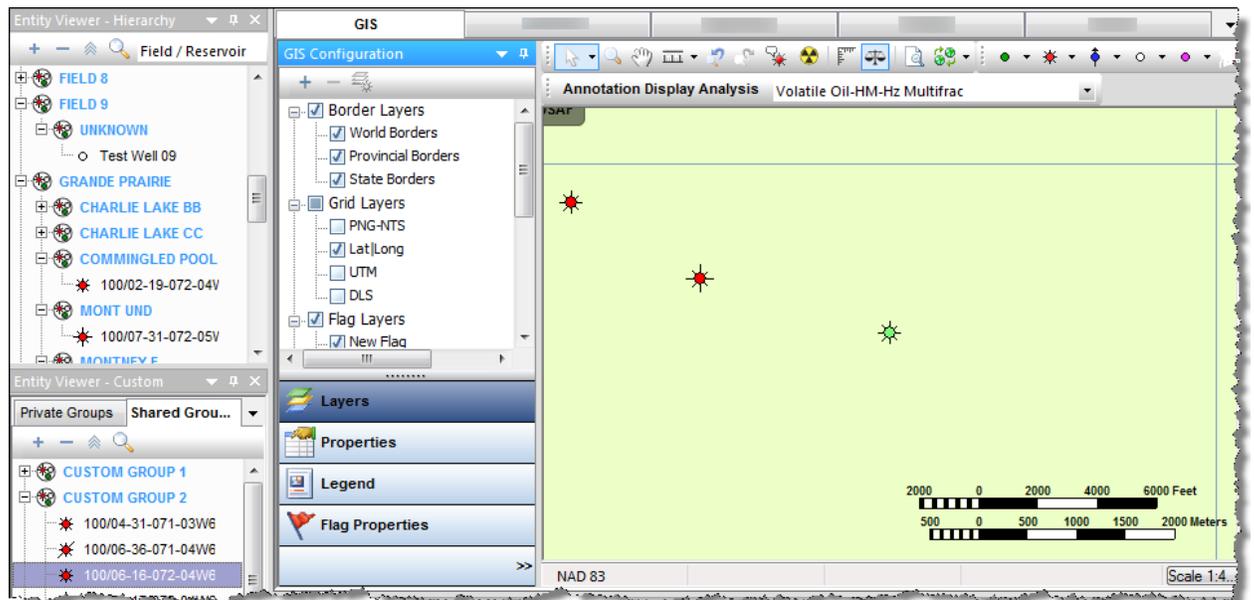

Entities are displayed on the GIS map only if their attributes include geographical coordinates. If you expect to see well on the GIS map and it is not there, highlight it in the Entity Viewer - Hierarchy or Custom, click the **Attributes** tab, double-click **Location** in the tree structure, and verify that the latitude / longitude attributes are valid. For more information, see [GIS map](#).


Toolbars

There are four toolbars on the GIS tab:

1. GIS Configuration pane
2. GIS toolbar
3. GIS design mode tools
4. Active analysis

GIS Configuration pane


This toolbar handles layer functionality.

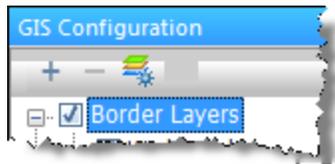

- **Add Layer** — adds various types of layers (that is, a shapefile layer, image layer, general annotation, bubble map layer, or a flag layer).
- **Remove Layer** — deletes a layer. Note that you cannot delete Project Layers.
- **Layer-specific options** — select from these options: group display layers by type, shapefile info, DBF info, customize shapefile drawing, highlight shape(s), and show / hide labels.

GIS toolbar

This toolbar handles map-related functionality. For a description of common icons, see [toolbars](#).

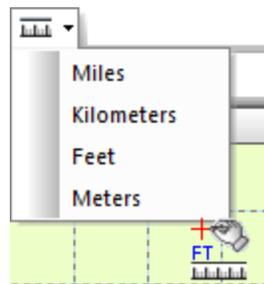

- **Measure** — select your scale from the drop-down list. Click the first location on the map and then drag the mouse to the second location. The distance is displayed between the two points, and updates automatically when the distance changes.
 - **Go back to Previous Extents** — reverts your display to the previous zoom setting.
 - **Go to Next Extents** — updates your display to the next zoom setting.
- The current extents are saved on a per-user, per-project basis. When you open the project again, the last-used extents (zoom level) is applied.
- **Annotation Display Options** — opens the [Facility Annotation Editor dialog box](#) where you can customize your annotation display. This icon is grayed-out when the annotation layer is not supported because there are too many wells on-screen.

-  **Reset GIS** — zooms out to display all the wells on the map, or if there are no wells, the map zooms out to display the entire world).
-  **Rulers** — displays a ruler along the top and left-side of the map. This can be toggled on or off.
-  **Scale** — displays a map scale in the lower right corner of the map. This can be toggled on or off.
-  **NAD Conversion** — from the drop-down list, select NAD 83 (North American Datum, modified in 1983), NAD 27 (North American Datum, created in 1927), or WGS 84 (World Geodetic System, modified in 1984).

Tip: To reset to the default mouse pointer, press the **Esc** key.

GIS design mode tools

Use this toolbar to draw wells on the map.

 


From left-to-right, the icons enable you to add an oil well (green), gas well (red), water well (blue), location (white), and other well (pink) to the GIS map.

Note: Icons on this toolbar are only active if you are zoomed-in close enough.

Active analysis


From this toolbar, you can select an analysis name from the drop-down list. The data from this analysis is used in Results annotations.

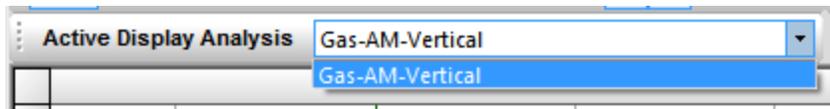


GIS Configuration pane

The GIS Configuration pane has the following buttons:

- Layers
- **Properties** — are used to fine-tune the GIS map. Property descriptions are displayed at the bottom of the pane as they are selected.

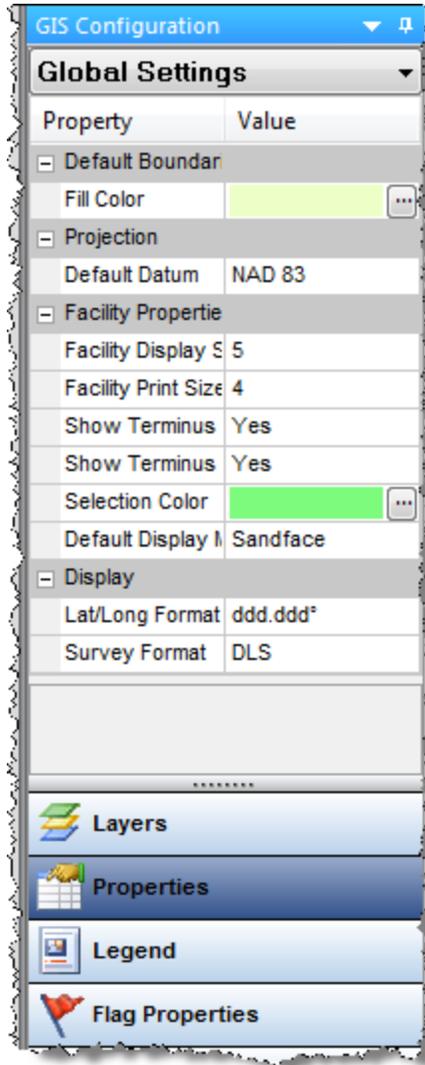


- **Legend** — lists all of the symbols that may be found on the GIS map.

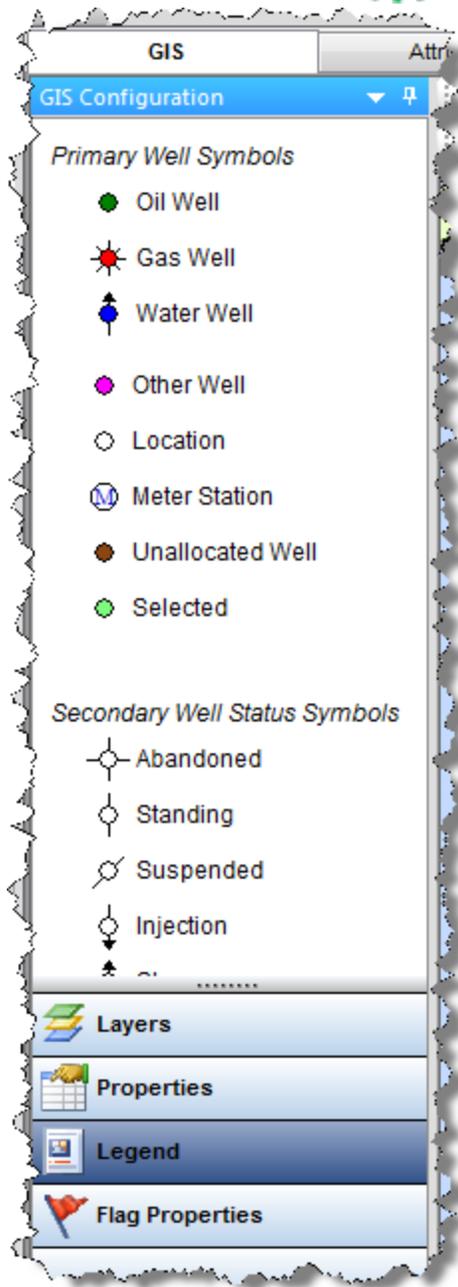

Note: Meter stations are displayed on the GIS map only if they are included in an imported .dp2 or a 298 file.

- Flag Properties

If you do not see these buttons, click the angle brackets (>>) and select **Show All Buttons**.

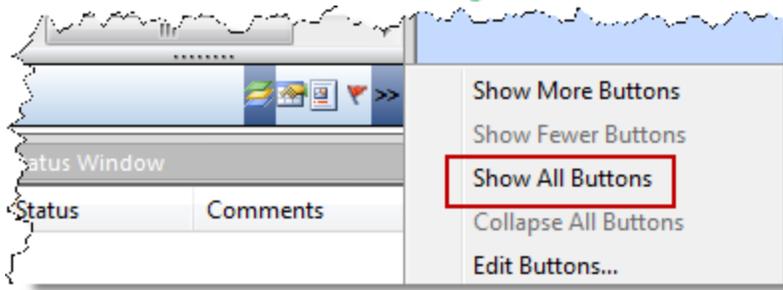

Context menus

Right-clicking within the GIS Configuration pane lists various options, which depend on the type of layer you select (for example, border layers, grid layers, and so on):


- **Select All Layers** — selects all of the layers for that layer type (for example, border layers).
- **Deselect All Layers** — deselects all of the layers for that layer type.
- **Group Display Layers By Type** — selecting this option groups layers by type; deselecting displays a flat list.
- **Add Shapefile Layer** — browse to your shapefile (.shp) file.
- **Shapefile Info** — opens the Shapefile Info dialog box where detailed information is provided (such as, the number and type of shape, label selection) along with a preview image.
- **DBF Info** — opens the DBF Info dialog box where attribute information is displayed. (The information in the DBF file is used when shapes are converted to facilities.)
- **Customize Shapefile Drawing** — opens the Customize Shapefile Drawing dialog box where you can change the line color, line thickness, fill color, and other visual attributes of the shape. You can also reset the settings to the default values.
- **Highlight Shapes** — highlights the selected shape.
- **Show Labels** — displays the label title for the shape.
- **Rename Shapefile Layer** — opens the Rename Layer dialog box where you can type in a new name for your shapefile.
- **Remove Shapefile Layer** — deletes the shapefile layer. Note that you are not prompted to confirm your decision.
- **Add Flag Layer** — adds a flag layer to the map.
- **Flag Properties** — opens the [flag properties](#) for that flag.
- **Remove Flag Layer** — deletes the flag layer.

- **Options** — opens the Bubble Map Editor dialog box where you can customize your bubble-map display.
- **Auto Range** — calculates a range based on the data for the entities used in the pie chart bubble map.
- **Legend** — select the item you want to display in the legend from the submenu (for example, color, size, section, and so on).
- **Rename** — opens the Rename Layer dialog box where you can type in a new name for your bubble-map layer.
- **Remove Bubble Map Layer** — deletes the bubble-map layer. Note that you are not prompted to confirm your decision.
- **Add General Annotation** — opens the General Annotation Editor dialog box where you can type your annotation and customize its display. You can also anchor the annotation to a specific location.

GIS map

The GIS map displays entities (wells and groups) as long as their attributes include geographical coordinates.

When you mouse over the GIS map, the status bar displays the latitude, longitude, and dominion land survey (DLS) at the current location.

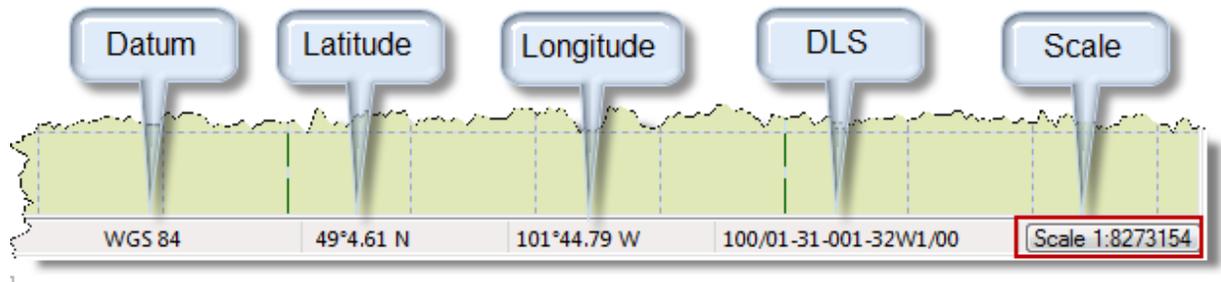


The GIS map supports three datum systems / projections:

1. NAD 27 (North American Datum, created in 1927)
2. NAD 83 (North American Datum, modified in 1983)
3. WGS 84 (World Geodetic System, modified in 1984)

To create new facilities, click the icons located on the GIS design mode tools toolbar. If you want other options (for example, setting a flag), right-click the well on the map.

When you select a well on the map, it is synchronized with the Entity Viewer and vice versa. Selected wells are highlighted in the Entity Viewer and are displayed in light green on the GIS map.

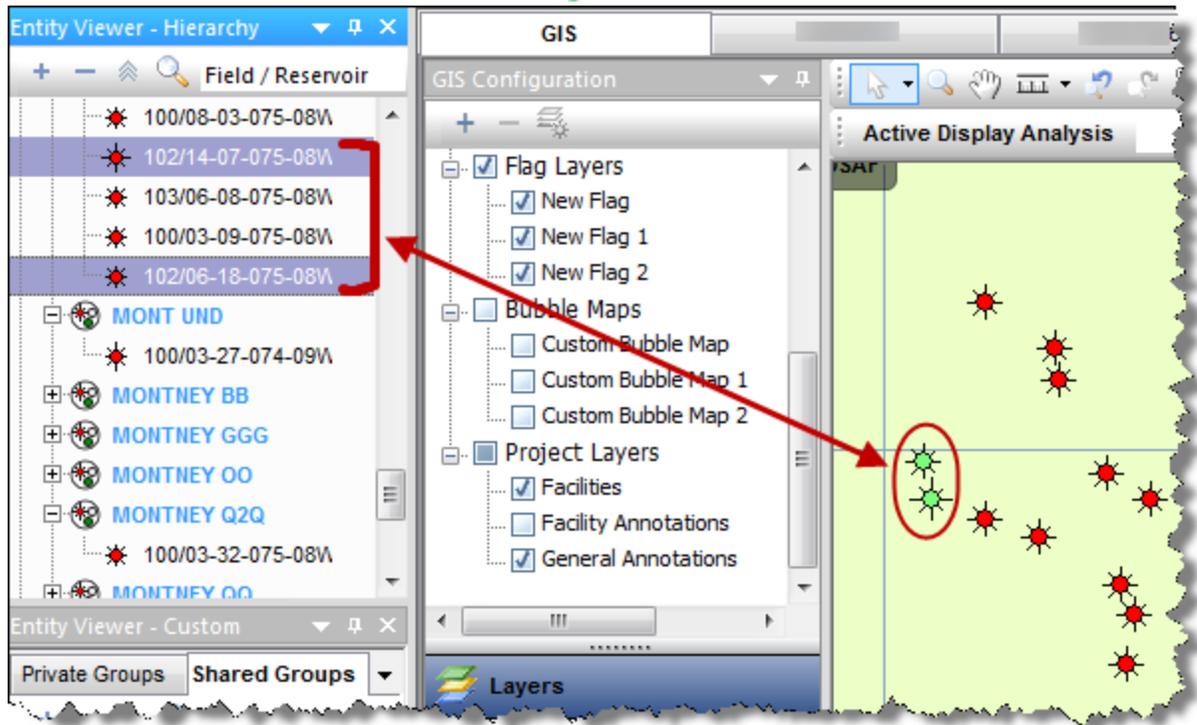

Context menus

If you right-click the map, you can add a general annotation by selecting **Create General Annotation**. This anchors the annotation at the point on the map you clicked.

If you right-click an annotation, you can edit it.

If you right-click a well on the map, these options are displayed:

- **Flags**
 - **Create New Flag** — adds a flag layer for this well and displays the flag properties in the GIS Configuration pane.
 - **Delete Flag** — deletes the flag for this well.
 - **Add Selection to Flag** — select your flag from the submenu.
 - **Remove Selection from Flag** — this option is enabled if a flag layer is already in place. Delete the appropriate flag by selecting it from the submenu.
 - **Flag Properties** — displays the flag properties in the GIS Configuration pane.
- **Bubble Maps**



- **Create New Bubble Map** — opens a dialog box where you can create and customize your bubble map.
- **Add to Bubble Map** — select your bubble map from the submenu.
- **Remove From Bubble Map** — this option is enabled if a bubble map is already in place. Delete the appropriate bubble map by selecting it from the submenu.

Layers


Layers are graphical strata that you can display on top of the GIS map. Layers include gridlines, geo-political borders, and well icons. You can show and hide layers by selecting or deselecting items in the tree structure.

Tip: All layers are user-specific. Therefore, any layers you create are not seen by other users in a multi-user environment.

Layers include the following:

- **Border Layers** — displays the political borders for all countries, the provincial borders in Canada, and the state borders in the United States.
- **Grid Layers** — displays each of the available coordinate systems. The DLS and NTS coordinate systems are only available within certain regions.
- **Shapefile Layer** — a shapefile is a collection of files that contains simplified geo-spatial and attribute information to describe points, arcs, and polygons. These points and shapes represent objects or locations on a map (for example, a well, a lake, or political borders). For more information, see shapefiles.
- **Image Layer** — any image (for example, a photograph) can be imported as an image layer. While importing an image file you are prompted to set desired coordinates for three points on the image. These points are used to position the image on the GIS map.
- **Project Layers** — includes all wells / facilities and annotations.
 - **Facilities** — this layer includes all wells and meter stations.
 - **Facility Annotations** — annotations connected to a specific entity (such as, wells) that display selected attribute and analysis information. For more information, see the Facility Annotation Editor dialog box.
 - **General Annotation** — annotations to be displayed on the GIS map. While adding a general annotation, you can customize the text, appearance, and position.
- **Bubble Map Layer** — bubble maps graphically represent attributes associated with wells and other entities. For more information, see bubble maps.
- **Flag Layer** — flags are similar to bubble maps, but they do not reflect well attributes. Instead, they are simple markers that can be used to designate individual or multiple entities. For more information, see flags.

By default, layers are displayed with Project Layers being drawn on top of the GIS map, followed by Grid Layers, and Border Layers. This corresponds to Project Layers being at the bottom of the tree structure and Border Layers being at the top.

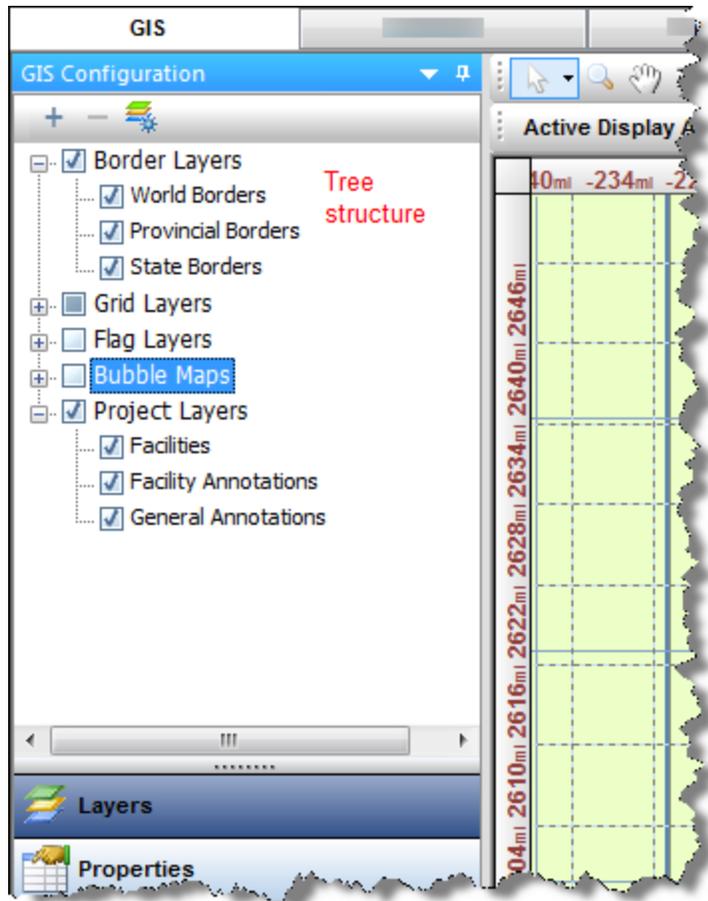

To change your display order, drag the category in the tree to your new location.

Note: Drawing layers on top of others may hide certain information. You can avoid this by setting the transparency of the top layer by right-clicking it in the tree and editing its properties.

Shapefiles

With Harmony Enterprise, you can only select shapefiles with the .shp extension, but shapefiles usually contain a collection of files with different extensions. Harmony Enterprise uses the following file types to make the import process faster and more accurate:

- **DBF** — contains shapefile information and labels for the data. (The information this file contains is used when shapes are converted to facilities.) This file is the least critical; if it is missing, the shapefile is still imported.
- **PRJ** — contains the datum for the shapefile in projection, unit, datum format. (Harmony Enterprise supports NAD27, NAD83, and WGS84.) If this file is missing, the shapefile may not be placed in the correct location.
- **SHX** — loads individual shapes from the file. This file reads the bounding boxes of an area and works as a sort of index for the .shp file, so that all the data contained in the .shp does not need to be cached. If this file is missing, loading may be slow and more memory may be consumed.

These files make using shapefiles easier, so we recommend keeping them together in the same directory.

Compatibility

If you encounter issues importing a shapefile, it may be because your shapefile is incompatible with Harmony Enterprise. Ensure that your shapefile meets the following requirements:

- Mercator projection
- Geographic coordinate system (GCS)
- NAD 27, or NAD 83, or WGS 84
- Latitude and Longitude in decimal degrees

Facility Annotation Editor dialog box

This dialog box is commonly used when you click the [Annotation Display Options icon](#) on the GIS toolbar.

Important: Clicking **OK** applies your changes to all your annotations *excluding* those that have been individually modified by right-clicking specific annotations. Clicking **Apply to All** updates every annotation.


- **Search** — type a search term in this field, and results are automatically displayed.
- **Attributes** — select the attributes you want displayed in your annotation.
- **Results** — select the results you want displayed in your annotation.
- **Include in Apply to All** — if you select this checkbox, the settings in the Label Position section are applied to all of your wells when you click **Apply to All**. When this checkbox is deselected, only the well annotations that have not been individually edited are modified.
- **Angle** — sets the angle that the annotation is offset at from the well. A negative value is rotated counterclockwise from the well.
- **Distance** — sets the distance (in inches) that the annotation is offset at from the well.
- **Display** — select one of the display options for title, value, and unit.
- **Draw Settings** — if you select **Frame**, a box is drawn around your annotation. If you select **Anchor**, your annotation is fixed to the well.
- **Background** — set your background color and transparency for the annotation.

Bubble maps


Bubble maps provide a means of graphically representing attributes and analyses associated with specific wells.

Bubble maps are represented as layers within the GIS tab, and can be selectively enabled or disabled like other layers. To create these graphic representations, a colored shape is overlaid on the entity. Both the color and the shape reflect one of the properties associated with the entity. As the value of the property changes, the color changes within a set range. In more complicated cases, multiple properties can be associated with different settings including variations in color, size, angle, and shape, according to the scale you set.

To show or hide the bubble map, select or deselect it in the tree structure.

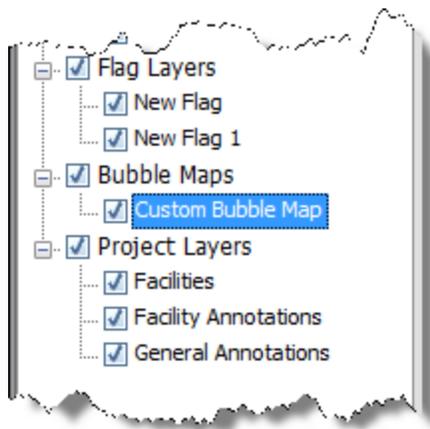

To add / create a bubble map, start by selecting wells for the bubble map. In the GIS Configuration pane, click the + icon and select **Add Bubble Map Layer**.

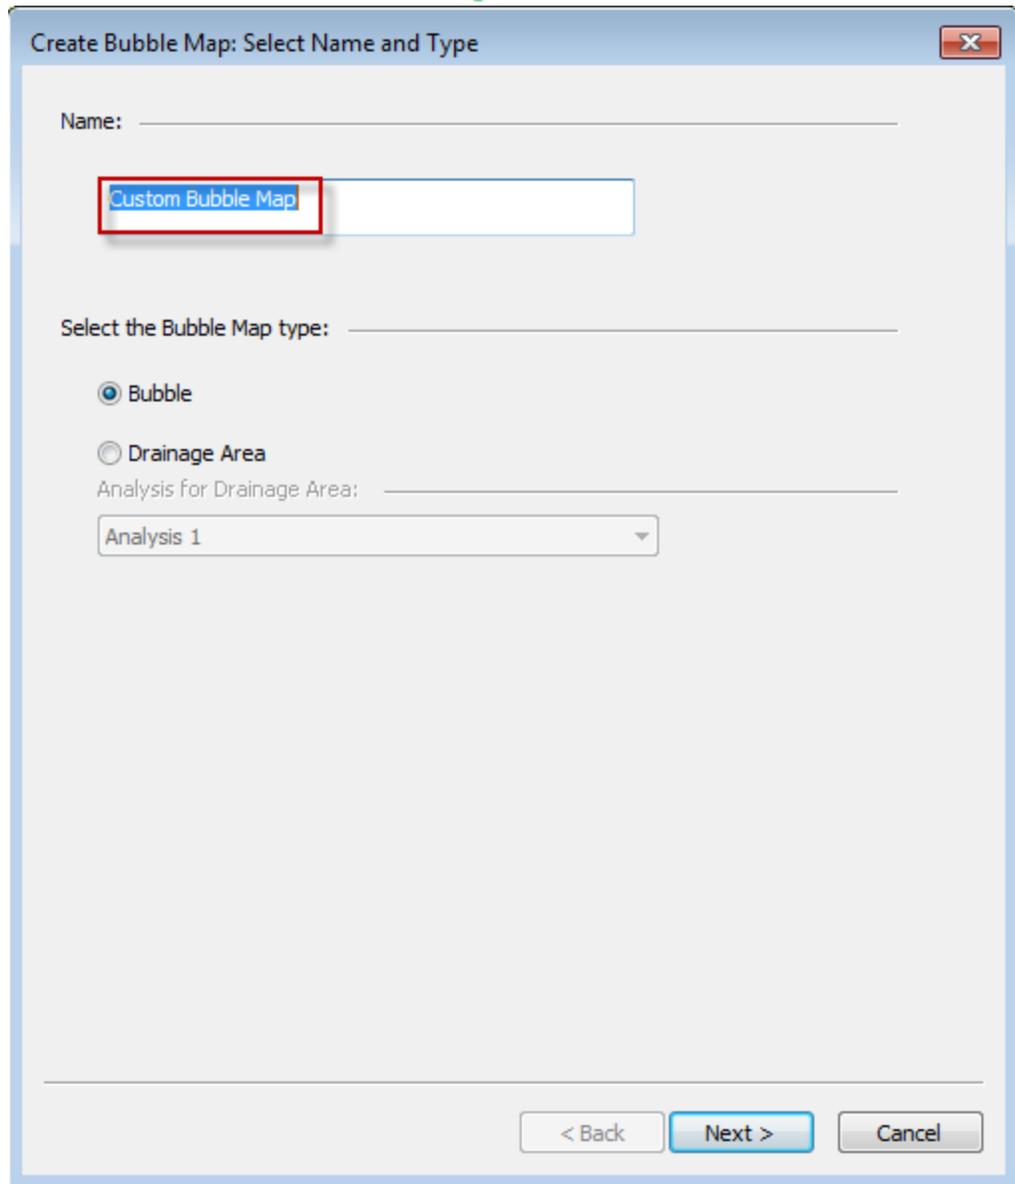

Create Bubble Map: Select Name and Type

Name: _____

Custom Bubble Map

Select the Bubble Map type: _____

Bubble

Drainage Area


Analysis for Drainage Area: _____

Analysis 1

< Back Next > Cancel

Type a name for your bubble map layer and click **Next**. If you create a bubble map with the same name, a number is incrementally added to the name (for example, custom bubble map 1, custom bubble map 2, and so on).


Each tab in Preferences enables you to customize a different property that varies with well properties. (Fixed settings are used by default.)

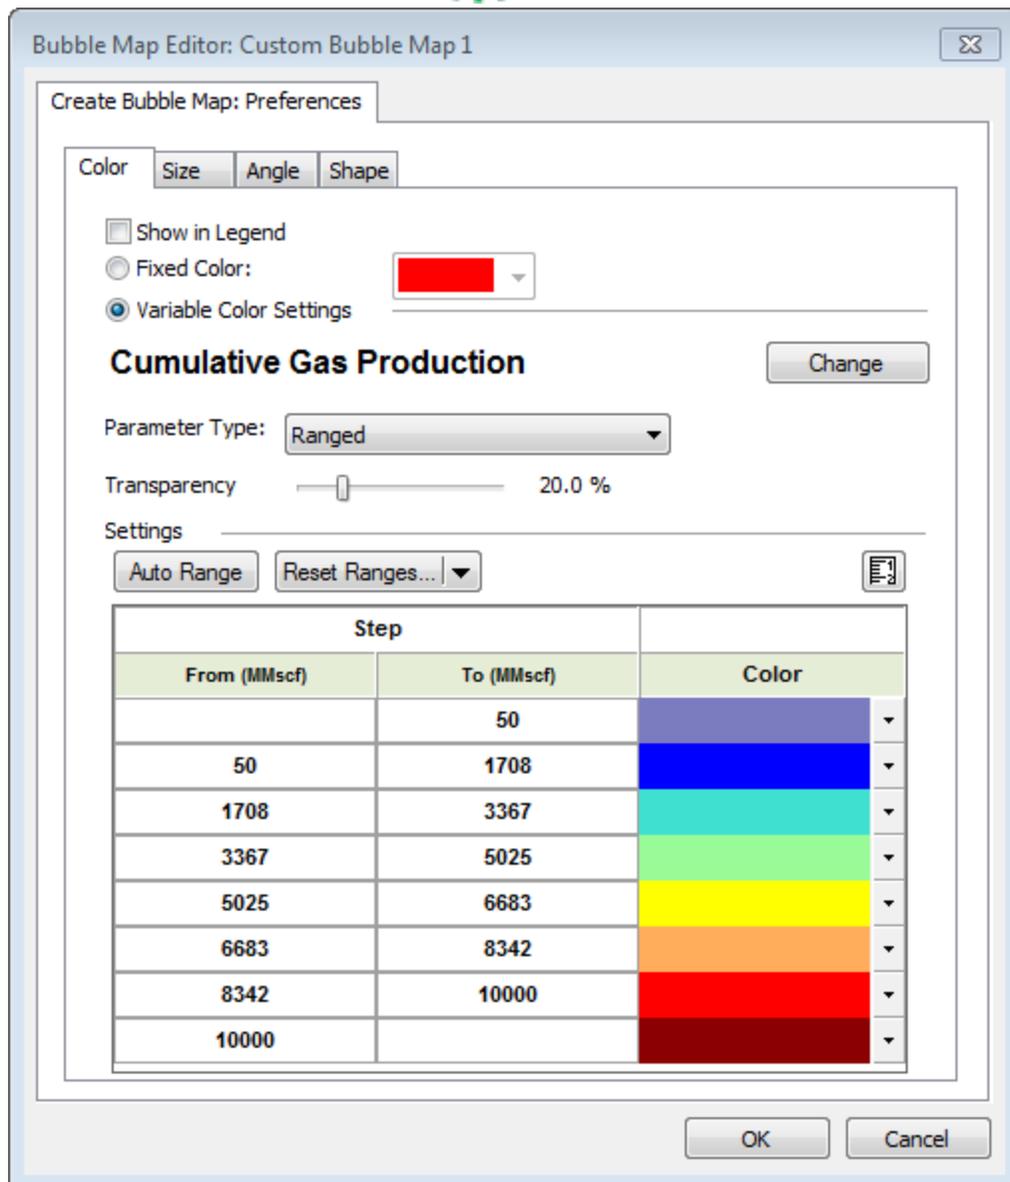


- **Show in Legend** — select whether this property is displayed in the legend. If the property is using a variable color setting, by default, the property is displayed in the legend.
- **Fixed Color / Size / Angle / Shape** — all wells show the same property, as set in the dialog box.
- **Variable Color / Size / Angle / Shape** — select an attribute or analysis result on which to vary the property. When selecting analysis results, an analysis name must also be selected.

- **Parameter Type:**
 - **Ranged** — the color, size, etc. displayed corresponds to a range of property values for each parameter.
 - **Set Point** — the color, size, etc. displayed corresponds to a specific value for each parameter.
- **Transparency** — use the slider to set the level of transparency / opacity for your bubbles.
- **Auto Range** — for each ranged property, Harmony Enterprise automatically detects the appropriate range and division to separate values.
- **Reset Ranges** — reverts back to a previously saved range, or to the default values.
- **Change** — when you click this button, the <Color> Attribute: Select a Property dialog box opens.


Select the attribute / result from the tree structure.

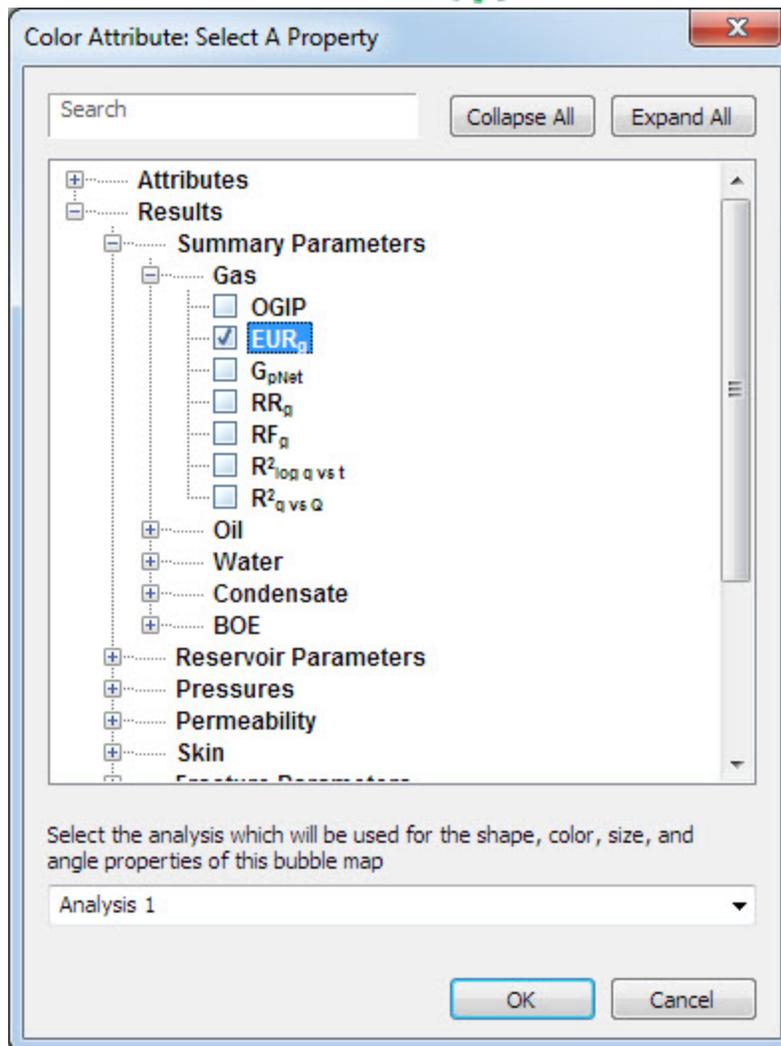

- **Search** field — type your search term to find attributes or analysis results.
- **Analysis** drop-down list — select the analysis to populate values for the selected property. Note that this only applies to the Results tree structure, and does not apply to attributes.

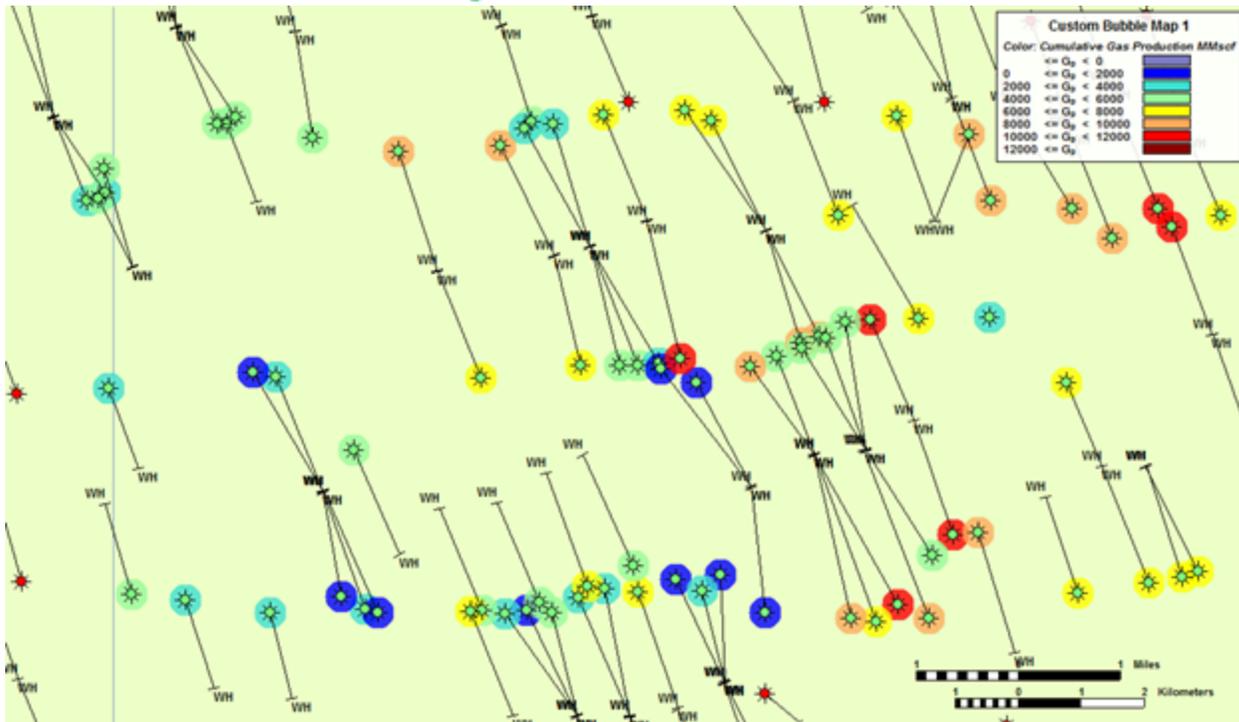

To edit an existing bubble map, right-click it in the tree structure and select **Options**. If you click **Variable Color Settings**, the **Change** button is enabled and you can set the <color> for a specific attribute.

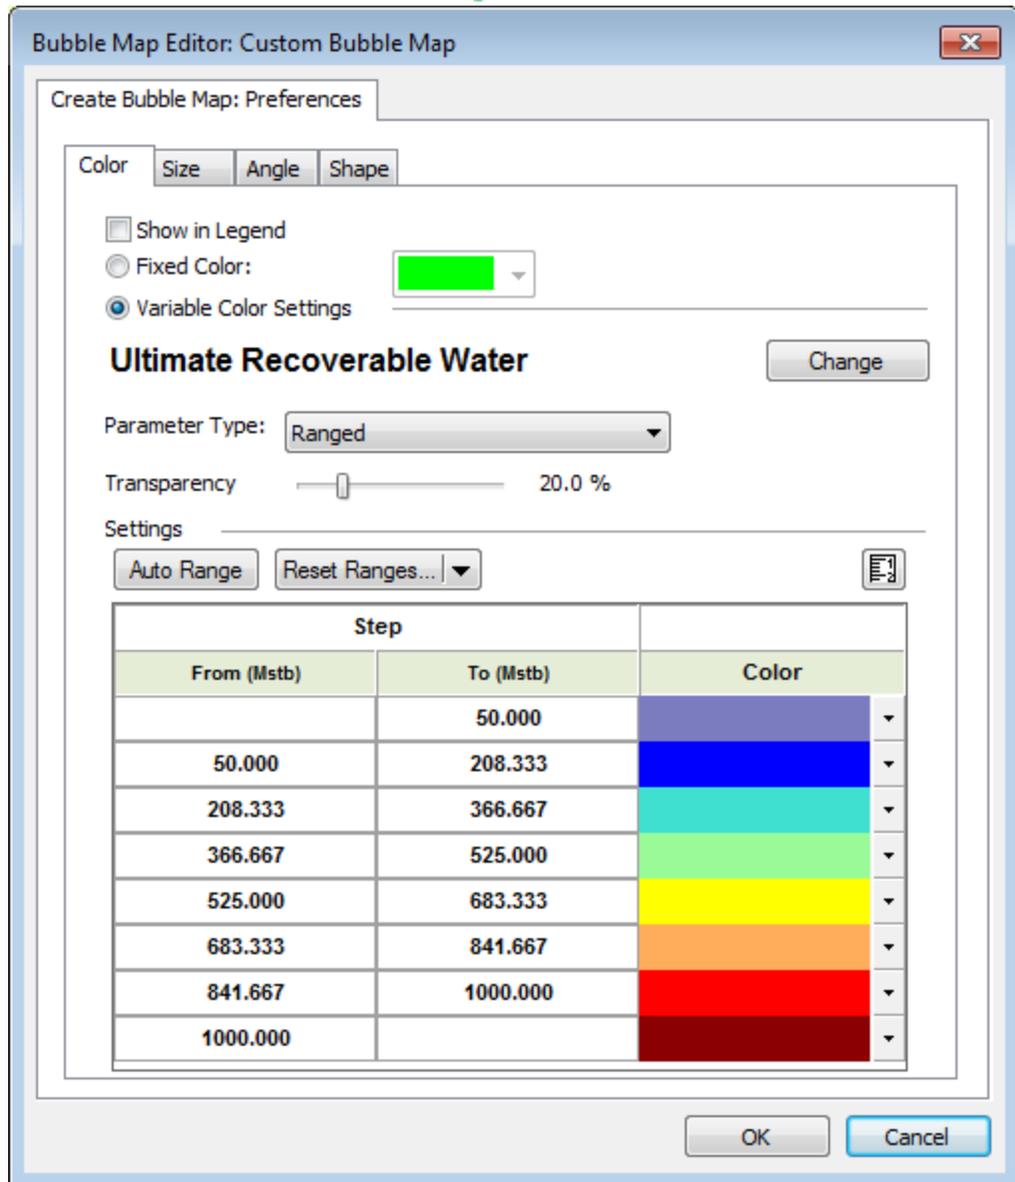

To add wells to an existing bubble map, select the well, right-click it and select **Bubble Map, Add to <bubble map name>**.

Drainage area maps

A drainage area map is a bubble map (plotted as a circle), which plots the drainage area of a well to scale on the GIS map, based on the area each well is draining. While traditional bubble maps can plot drainage areas, they only show relative areas, with the size of the bubble corresponding to the range you set.


Note: If the drainage area is small, you may have to zoom in to see the bubble map.

To add a drainage area map, see [bubble maps](#). Note that with drainage area maps, color is the only variable preference that can be set.

Flags

Flags are similar to bubble maps, but they do not reflect well attributes. Instead, they are simple markers that can be used to designate individual or multiple entities.

If you add a flag layer (click the + icon on the GIS Configuration pane), a corresponding node in the tree structure is added. You can show or hide flags by selecting or deselecting their checkboxes.

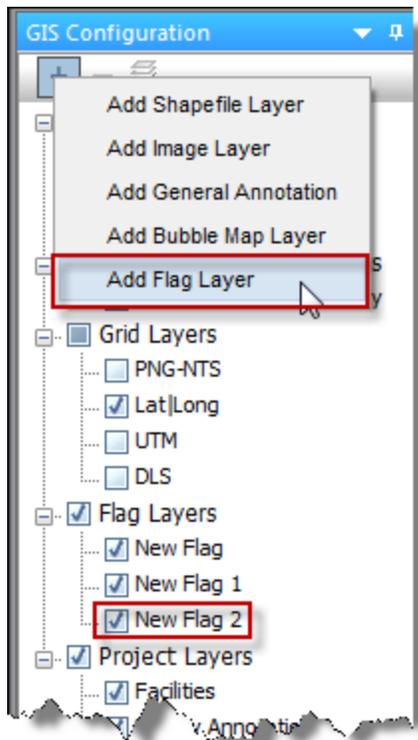


To add wells to an existing flag, select the appropriate wells on the GIS map, and then right-click and select **Flags, Add Selection to Flag**.

To modify flags, right-click the flag in the tree structure and select **Flag Properties**. Edit your flag's name, color, size, or transparency.


Flag properties

When you click the Flag Properties button at the bottom of the GIS Configuration pane, you can edit the appearance of flags displayed on top of entities on the GIS map. The drop-down list at the top of the pane determines which flag is being edited.

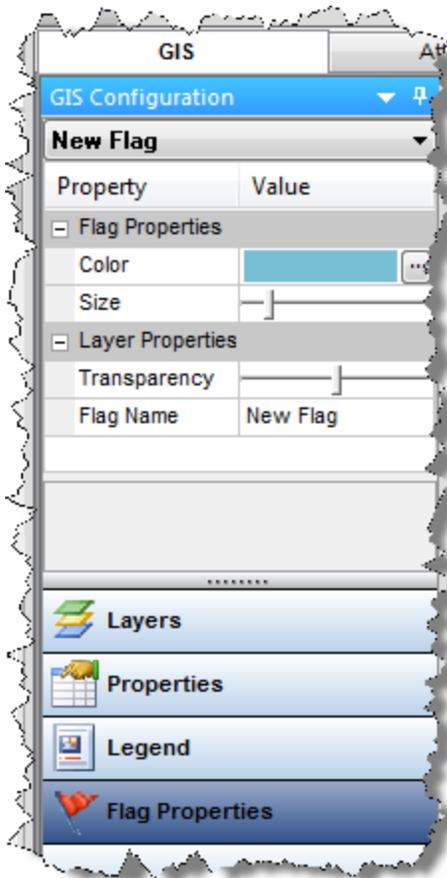

- **Color** — click the ... button and select the color for the selected flag.
- **Size** — click the slider to increase or decrease the size of the circle displayed on the map for the selected flag.
- **Transparency** — click the slider to increase or decrease the transparency of the selected flag. Moving the slider to the left, makes the flag more opaque, and moving the slider to the right, makes the flag more transparent.
- **Flag Name** — use this field to type a name for the selected flag layer.

Flags are similar in appearance to bubble maps, but they do not reflect well attributes. Instead, they are simple markers that can be used to designate individual or multiple entities.

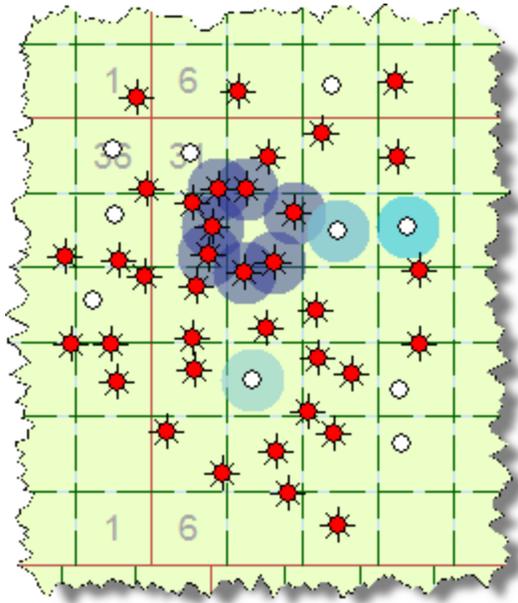

Flags are represented as layers on the GIS map, and can be selectively enabled or disabled like other layers.

Import functionality

To prevent other users from modifying data at the same time, wells must be locked while they are imported. Importing a new well does not impact other users because the well is not visible to them until the well import is complete. However, when you are updating existing wells, these wells are locked to other users. If Harmony Enterprise is unable to lock a well during importing or updating, the update of this well fails, and an error message is displayed in the Status Window.

Import functionality includes the following:

- Scheduling well updates
- Import Data dialog box
- Link Incoming Wells to Existing Wells dialog box
- Updating existing wells
- Data Reduction dialog box

Scheduling well updates

In most cases, scheduling well updates refers to specifying a time to import additional data for one or more wells.

Note: This functionality does *not* apply to SE licenses.

You can schedule well updates on a one-time basis using the [Import Database wizard \(step 12\)](#), or automatically using the auto-import feature. If you decide to import your wells automatically, you can schedule imports to occur outside of business hours on a recurring basis without using a Harmony Enterprise license. For more information, see the [Import Options dialog box](#).

In order to schedule well updates, you need:

- permission to modify and execute tasks. If adjustments are needed, see your IT department.
- permission to import data. For more information, see [role-based security](#).
- to be logged in to Windows when the updates occur. Note that locking your computer is fine.

After your automatic well import is complete, a log file is generated, which is viewable by double-clicking the summary message in the [Status Window](#).

Troubleshooting

You can customize well-linking-logic in Harmony Enterprise 2019.3. Well-linking-criteria selections are saved with other Scheduled Import settings. Pre-existing scheduled imports will persist when upgrading, but they will not contain well-linking-criteria selections. Existing scheduled imports will be aborted, and that information is reported in the [Status Window](#), as well as in a log file.

To fix your pre-existing scheduled imports, you only need to revise your existing scheduled imports *once* by configuring the well-linking-criteria hierarchy for each saved database connection. Your selections are saved, and scheduled imports resume during their regular time frame. For more information, see [importing well data from a database](#) and the [Well Linking Criteria dialog box](#).




Windows Task Scheduler

The Windows Task Scheduler is commonly used when setting Auto Import options in the Import Options dialog box.

To use the Task Scheduler:

- Type a name for your task.
- Set a start date and time.
- Select the frequency of the task from the drop-down list (that is, daily, weekly, or monthly).
- To rename your task, type a new name in the Task Name field, and click **Save Task**.
- To save your task, click **Save Task**.
- To delete your task, click **Delete Task**. (You are *not* prompted to confirm your decision.)

When your task is scheduled, you can preview it in the Task Scheduler.

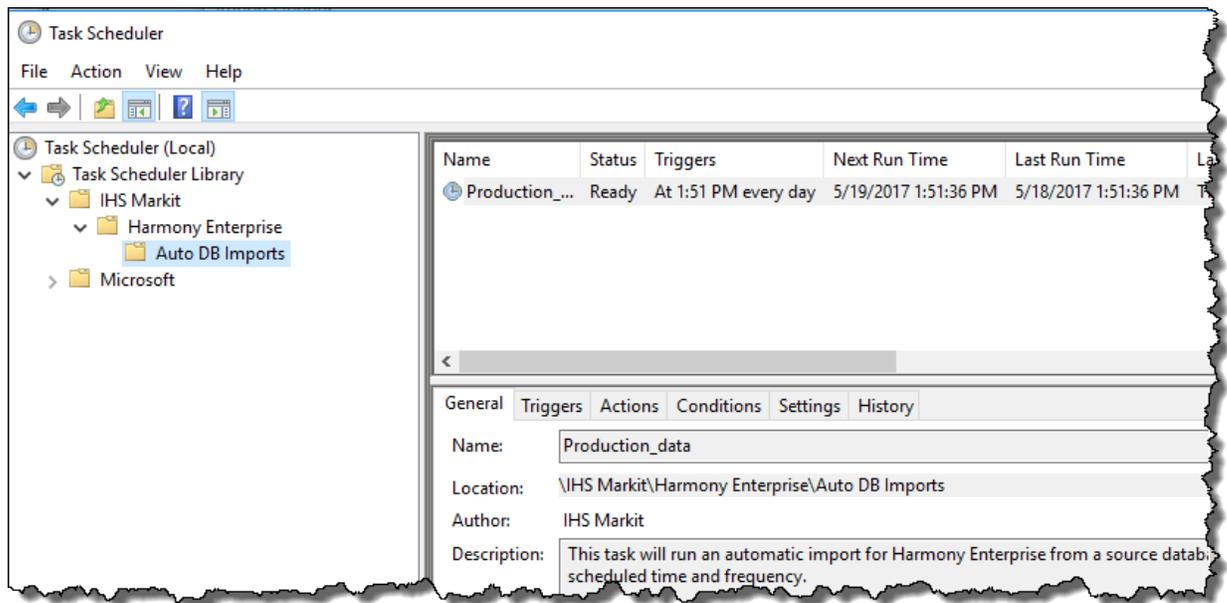

Command line

Command line is commonly used when setting Auto Import options in the Import Options dialog box.

Copy and paste the text in the Program and Arguments fields to your application or script. If you are not able to open a Command prompt, you may need to contact your IT dept.

Command line arguments include the following:

- **DSN** — data source name. This is the defined connection to your data source.
- **AutoDBImport** — automatically connects to the connection you previously set up.
- **Options** — update options can be specified with a single letter. For more information, see Updating Data Options.
- **Autocalcs** — type **Y** (yes) to automatically calculate sandface pressures when importing. If you type **N** (no), sandface pressures are not automatically calculated.
- **DataReduction** — type **Y** (yes) to perform automatic data reduction based on your default settings for all wells. If you type **N** (no), no data reduction is done.

Import Data dialog box

This dialog box is commonly used when you import well data from a file. The main purpose of this dialog box is to assign column headers (by clicking the drop-down arrows) to your data, which brings this data into Harmony Enterprise.

Toolbar

This dialog box has these items on its toolbar:

-  **Open folder** — lists two options:
 - **Reset and Open** — closes the existing imported file and opens the Open File to Import dialog box.
 - **Open Another File** — opens the Open File to Import dialog box.
-  **Discard Changes** — clears all content in the table / grid.
- **Options** — opens the Import Options pane.
- **Separate** (Production data only with multiple wells in one file; not applicable to attributes) — if you specify a Well Identifier for your first column and click **Separate**, multiple wells in the same file are listed as tabs, which divides the single import file into multiple entities for import.
- **Apply To** — applies the column headers you have set in one worksheet to all of the other worksheet tabs in the spreadsheet file. The single import file generates multiple entities for importing, with each one named according to the original worksheet name.

Import Options pane

In this pane, you can change import options, including the standard operating conditions of the file to be imported, and the configuration of the unit list.

Rows

(You can also right-click rows to set this range.)

- **Start Import from row** — set the first row number in the table that you want to import.
- **End Import at row** — set the last row number in the table that you want to import.

Template

- **Save format for this file while importing** — saves your column and row mapping for this file.
- **Save current format as default while importing** — saves your column and row mapping as the default setting for other files.
- **Remove default format (if it exists) while importing** — resets your settings, so you can remap columns and rows.
- **Save current format as** — saves your current mapping as a template.
- **Saved Formats** — select the saved formats you want to apply or delete.
- **Multi-level unit picker** — when selected, the column-mapping menus display the menu items horizontally in multiple columns, instead of the default setting of a single vertical column.
- **Continuous time track** — this option is selected by default for cumulative time. If you deselect this option, gaps in your order, as determined by irregularities in the data sampling interval, are interpreted as shut-ins. For additional information, see [continuous time track](#).
- **Sample interval for Date / Time matching** — we recommend keeping the default setting. This option specifies the interval for comparisons. For example, every 50 rows a comparison is performed on the date / time column to verify if the format is acceptable.
- **Date / Time Sensitivity Level** — we recommend keeping the default setting. You can use the slider to specify how closely a format has to match. For example, a 100% setting means that the imported file has to match your format exactly.

Plot pane

In this pane, your column selections are plotted as long as you have populated x- and y-axis data in your table / grid.

Link Incoming Wells to Existing Wells dialog box

If at least one well matches the criteria below, this dialog box opens after the import process is complete. All of the wells that meet any of these conditions are listed:

1. Wells that have multiple potential matches to existing wells.
2. Wells imported without a well identifier (for example, a *.csv file for a single well).
3. Wells with potential matches that cannot be updated due to access restrictions in Well Security (see [configuring well security](#)) are skipped, and an error message for the well is displayed.

The OK button is enabled after the incoming wells are linked up and are displayed in the Linked Well (Incoming | Existing) pane. In other words, incoming wells cannot be imported unless they are linked to existing wells, or are categorized as new wells.

In this dialog box, you can:

- Display which incoming wells are linked, and which are not, as a result of the auto-mapping process.
- Link an incoming well to a well in the database manually.
- Compare the production data for any two wells (one from the import, and the other from the database, or from a pair of linked wells).
- Compare the well attributes of two or more wells (one from the import, and the other(s) from the database).

The options in this dialog box include the following:

- **Display Wells by** drop-down list — the default setting is Entity Name. Any Entity Header attributes containing data can be selected to identify wells, and they set how the wells are displayed in this dialog box.
- **Link by** drop-down list — the default setting is Import Linking Criteria. With this setting, you can select a header that was not initially used in import linking and trigger matching based on the secondary setting. For example, if you are importing wells and the linking criteria is set to match on API and you have duplicate existing wells for an incoming well, you can have a secondary match on the Entity Number. By clicking the **Auto Link** button (described below), the incoming well is linked to an existing well with matching on Entity Number.
- **Incoming Wells** section — lists incoming wells that have not been linked up.

- **Link** button — links a single well from the incoming list to a single well from the database list. After a link has been made, the two linked items are moved to the Linked Wells pane. This button is disabled if the two selected items are not compatible. For example, in an unallocated .dp2 or .298 file, a meter station cannot be linked to an unallocated well.
- **New well** button — enabled when incoming wells are selected that are not currently in the database. Clicking this button moves the selected wells to the Linked Wells pane.
- **Ignore well** button — enabled after you select a well(s) in the Incoming Wells pane. By clicking this button, you can exclude these wells from the import process.
- **Existing Potential Well Matches** section — lists wells in the database that are a potential match for the incoming wells based on the Display Link by setting. Or, if the Show all wells option is selected, lists all wells in the database. A well in this list is not updated on import.
- **Show all wells** option — when this checkbox is selected, all of the wells in the database are displayed in the Existing Wells pane.
- **Auto Link** button — clears the current linking results and restarts the auto-mapping process according to the single setting displayed in the Link by field. For more information, see the [Link by description](#). The Auto Link feature operates on a 1:1 basis with wells too. In other words, you cannot auto-map multiple wells to a single well.
- **Unlink** button — removes the items selected in the Linked Wells pane and returns them to their original locations. (If the well ID in a *.harmony file has been used for matching, it cannot be unlinked.)
- **Unlink All** button — removes the links for all of the items in the Linked Wells pane.
- **Reset** button — resets the entire dialog box to its original settings (initial view).
- **Linked Wells (Incoming | Existing)** section — lists the wells that have been linked (incoming to existing), or new wells to be imported. Wells on the left-side of this pane are used to update the corresponding wells on the right-side. Empty wells have only their well name set (their API, DLS, NTS, Production ID, and Well Alias Name are blank) and are listed as new wells in this pane.
- **Compare by** drop-down list — displays the production variables that can be plotted (one at a time).
- **Production** tab — clicking wells in either the Imported Wells or the Existing Wells pane displays the production data for the selected wells. Clicking two wells (one from each of the panes), or a single well in the Linked Wells pane, displays the production data for both wells. Data from the database is displayed in black, while data from the incoming well is displayed in the color of the primary fluid. The plot is disabled when more than one item is selected in the Linked Wells pane.



- **Attributes** tab — clicking wells in the Incoming Wells pane displays their corresponding data in the Attributes tab. Subsequently clicking one or more wells in the Existing Wells pane displays their corresponding data in the Attributes tab.
- **Stop Import** — stops the import process of wells that do not have a 1:1 mapping.
- **Cancel** — cancels the current batch of wells that do not have a 1:1 mapping.
- **OK** button — completes the import of well data, including the addition of new wells, and linking incoming wells to existing wells as specified.

Note: Meter stations cannot be manually linked up in Harmony Enterprise. If meter stations exist in an imported .298 or .harmony file, they are automatically brought into a project when they are imported.

Updating existing wells

When you import wells, Harmony Enterprise checks for links to existing wells, so you can merge existing data, instead of creating new wells. Linking is done using the Entity Headers in the Attributes tab (excluding custom headers). Merging new data to existing wells is handled by your settings in the Options dialog box, Well Linking node.

The following identifiers are used based on the various import types.

Import Format	Order of identifiers for linking
Database connection	Internal Harmony Well Key External Well Key API Number Sandface DLS Sandface NTS Entity Name Prod ID Entity No Entity Alias Name Propnum
Enerdeq, Dwights files, PowerTools	API Number Prod ID
Harmony file, .hldb file	Internal Harmony Well Key API Number Sandface DLS Sandface NTS Entity Name External Well Key Prod ID Entity No Entity Alias Name Propnum
IHDC	Sandface DLS Sandface NTS Prod ID
Merak and Lasser (.mer, .axp, .mxx, .vna, and .prn files)	Sandface DLS Sandface NTS


Import Format	Order of identifiers for linking
	API Number
Piper Forecasts	Internal Harmony Well Key
Text (all text files excluding Dwights)	Well Identifier Sandface DLS Sandface NTS API Number Prod ID Entity Name Prod ID Entity Alias Name Entity No External Well Key Propnum
WellTest)	Entity Name

Note: All of the import formats are read-only except for text files and Harmony files. Applying changes in the Options dialog box applies changes globally.

If there are well-matching ambiguities, your input is required. In these cases, the Link Incoming Wells to Existing Wells dialog box opens.

Data Reduction dialog box

Data reduction is the process of reducing high-frequency data prior to importing. This dialog box opens when the number of production rows in a well reaches the threshold defined in the Options dialog box (or the default value of 50,000), or if you have selected the **Always Display** option.

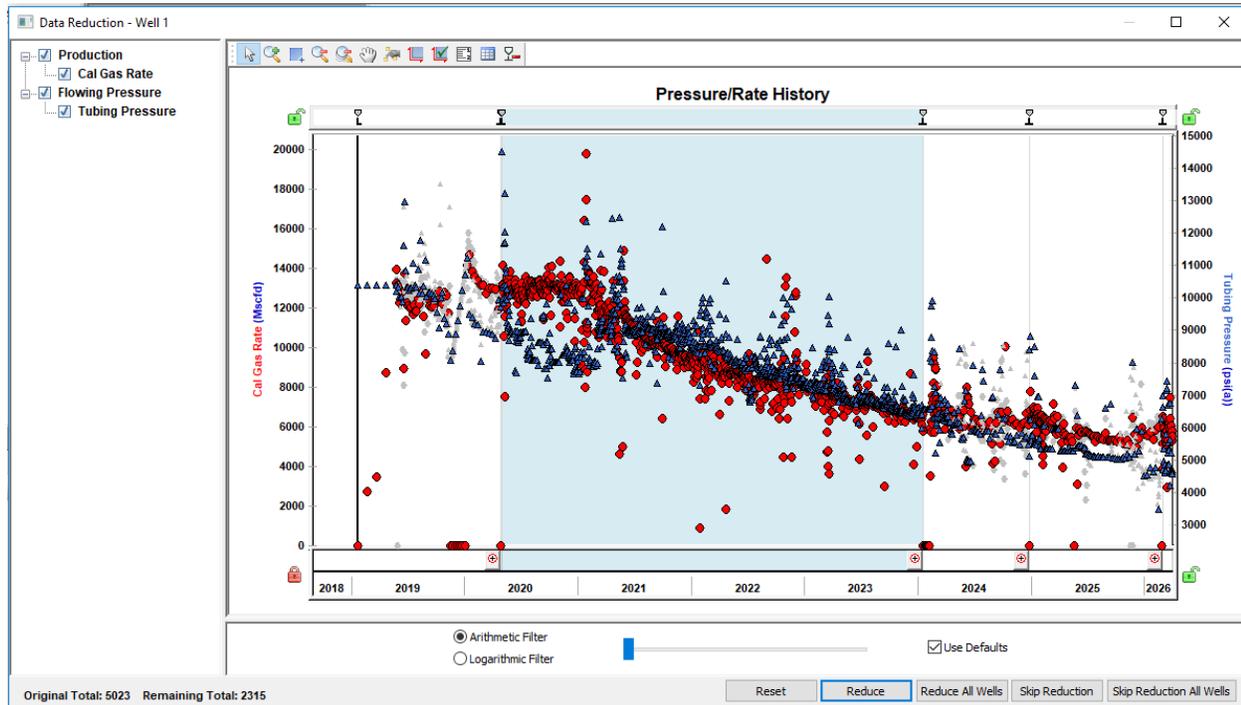

The plot displays the production data categorized automatically with flowing and shut-in periods ("ranges"). Note that automatic detection thresholds for flowing and shut-in periods can be set in [Data Reduction options](#).

The selection tree displays the incoming production data, including producing rates, injecting rates, volumes, and pressure data.

Hovering your mouse over an empty portion of the plot displays the number of points originally in that range, and how many are remaining after applying the current filter. Hovering over a range displays whether you are in a flowing or shut-in period, and whether the range uses default settings. Hovering the mouse over a data point displays that data point's type and date.

With the slider, you can apply a smaller or greater amount of data reduction based on either an arithmetic or logarithmic filter. The slider only applies to the selected range (which is displayed darker on

the plot). If you select the **Use Defaults** option, the selected range is filtered based on the default settings.

Toolbar

This dialog box has the following unique icons:

- 
Display Data Reduction Filtering Table — displays the original and remaining points in each range, and running totals of both. You can select or deselect checkboxes, or click inside a field and enter custom values.


Data Reduction Filtering Table										
	Period	Start Date	End Date	Use Defaults	Arithmetic Filter			Log Filter		
					Use in Period	Points Per Time Step	Target Number of Points	Use in Period	Points per Cycle	Target Number of Points
		DD/MM/YYYY	DD/MM/YYYY			pts/d				
8	Flowing Period 06	23/07/2001	16/12/2002	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1.000	18	<input type="checkbox"/>	100	18
9	Flowing Period 07	16/12/2002	18/02/2005	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1.000	27	<input type="checkbox"/>	100	27
10	Flowing Period 08	18/02/2005	10/02/2006	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1.000	13	<input type="checkbox"/>	100	13
11	Flowing Period 09	10/02/2006	27/03/2007	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1.000	14	<input type="checkbox"/>	100	14
12	Flowing Period 10	27/03/2007	27/04/2008	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1.000	14	<input type="checkbox"/>	100	14
13	Flowing Period 11	27/04/2008	01/05/2009	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	1.000	13	<input type="checkbox"/>	100	13

- 
Merge All Ranges — copies the filter settings to all ranges. For more information, see adding, resizing, and merging ranges.

For information on common plot icons, see plot toolbars.

Zoom

You can zoom into a range by clicking the **Zoom** icon (⊕) in the lower right corner of every range.

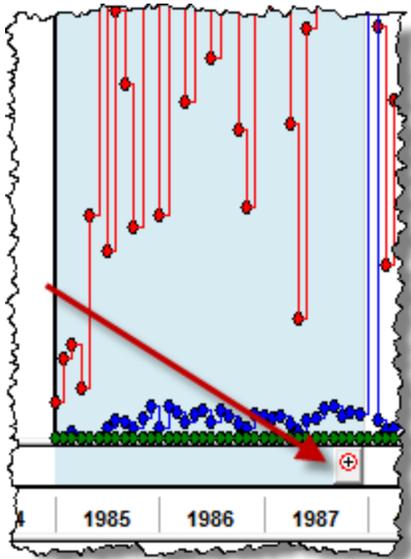

To zoom out of the range, click one of the **Zoom Out** icons.

Buttons


This dialog box has the following buttons:

- **Reset** — resets this dialog box to its initial configuration.
- **Reduce** — reduces the current well's data based on that well's reduction criteria.
- **Reduce All Wells** — reduces the current well's data based on the well's reduction criteria, and all other wells based on the default reduction criteria.
- **Cancel** — imports the current well without applying reduction.
- **Cancel All Wells** — imports all wells without applying reduction.

Adding, resizing, and merging ranges

To add a range:

Click inside the range area just above the main plot area. A marker opens.

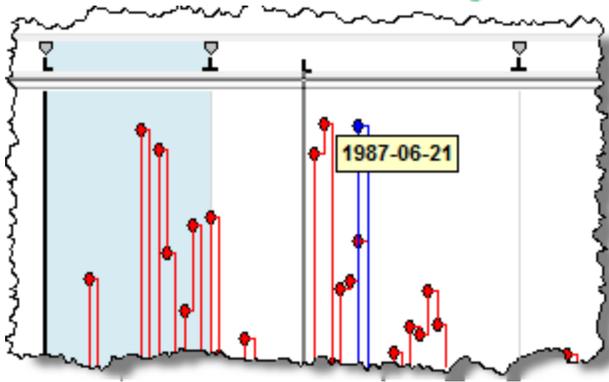

To resize a range:

Drag the range marker to the left or right.

Note: You can move any range marker except those at the furthest left and right.

When you merge a range, you copy the filter settings from one range to the next range.

To merge a range:

Click the **Merge All Ranges** icon () in the main toolbar.

Or, right-click a marker and select **Merge Left** or **Merge Right**.

Harmony Analytics

There are two ways to bring Harmony Enterprise data into Spotfire:

- from [Harmony Enterprise](#)
- from [Spotfire](#)

Note: This feature works with your Harmony Analytics™ license. To install Harmony Analytics and Spotfire, see the [Harmony Analytics installation and setup guide](#).

Harmony Analytics dialog box

To access this dialog box, see [export to Harmony Analytics](#).

After you export to Harmony Analytics, the Harmony Analytics dialog box opens. In this dialog box, these items are displayed:

- *(only viewable if you launch from Spotfire)* **Data Source Selection** button — enables you to edit your data source, if you have access rights.
- **Wells** count — the number of wells currently selected for importing into Spotfire.
- **Use Memory Optimization** checkbox — if you are trying to bring in a huge Harmony file with many wells and production data, your computer may run out of memory. If this is a possibility, select this option. For more information, hover over the checkbox to display the tooltip.
- **Field units** or **Metric units** option — applies this change globally.
- **Load Data** button — loads the currently selected wells and data sets into Spotfire.

Well Selection pane

This pane is visible on the left-side from any of the tabs and displays the same drop-down list as the [Entity Viewer - Hierarchy](#). You can select which wells to bring into Spotfire.

Data Set Selection pane

This pane is visible on the right-side and from here you can select which data to bring into Spotfire.

Attributes tab

This tab lists all the attributes from Harmony Enterprise. By default, everything is selected, but you can deselect the attributes you want to exclude from analytics.

Harmony Analytics

Well Selection | **Data Set Selection**

Field / Reservoir: [Dropdown]

All Wells Expand Collapse

- BANNER LAKES
 - D SAND
 - 05123103300000
 - 05123104200000
 - 05123105780000
 - 05123106040000
 - 05123107600000
 - 05123110610000
 - 05123120950000
 - J SAND
- BARBWIRE
- CABLE
- CENTER PIVOT
- DJ HORIZONTAL CODELL
- DJ HORIZONTAL NIOBRARA
- HEREFORD
- HORSE CREEK
- LAKESIDE
- LANYARD
- LOST CREEK
- MAMM CREEK
- PAWNEE PIONEER

545 Wells

Use Memory Optimization

Field units Metric units [Load Data](#)

Data Set Selection

Attributes | **Production** | Properties | Results | Analyses

Default Template [Dropdown] [Update](#) [New Template](#)

All Attributes Expand Collapse

- Entity Header
- Entity Status
- Political
 - Country
 - Province/State
 - County
 - Property
- Geological
 - Basin
 - Field
 - Formation
 - Reservoir
- Cumulative Volume
- Drilling
- Operations
- Completions
- Initial Production
- Well Properties
- Oil Properties
- Location

Production tab

This tab lists all the production data from the [Production editor](#). By default, everything is selected, but you can deselect the production data you want to exclude from analytics.

Harmony Analytics

Well Selection | **Data Set Selection**

Field / Reservoir: [Dropdown]

All Wells Expand Collapse

- BANNER LAKES
 - D SAND
 - 05123103300000
 - 05123104200000
 - 05123105780000
 - 05123106040000
 - 05123107600000
 - 05123110610000
 - 05123120950000
 - J SAND
- BARBWIRE
- CABLE
- CENTER PIVOT
- DJ HORIZONTAL CODELL
- DJ HORIZONTAL NIOBRARA
- HEREFORD
- HORSE CREEK
- LAKESIDE
- LANYARD
- LOST CREEK
- MAMM CREEK
- PAWNEE PIONEER

545 Wells

Use Memory Optimization

Field units Metric units [Load Data](#)

Data Set Selection

Attributes | **Production** | Properties | Results | Analyses


Default Template [Dropdown] [Update](#) [New Template](#)

All Production Data Expand Collapse

- Date
- Production
 - Gas
 - Gas Volume
 - Cal Gas Rate
 - Op Gas Rate
 - Cumulative Gas Production
 - Normalized Gas Rate
 - Oil
 - Water
 - BOE
 - Condensate
 - Recombined Gas
 - Liquid (o + w)
 - Liquid (o + w + c)
 - CO₂
- Injection
- Flowing Pressure
- Ratios
- Other

Properties tab


This tab lists all the properties data from the Properties editor. By default, everything is selected, but you can deselect the properties data you want to exclude from analytics.

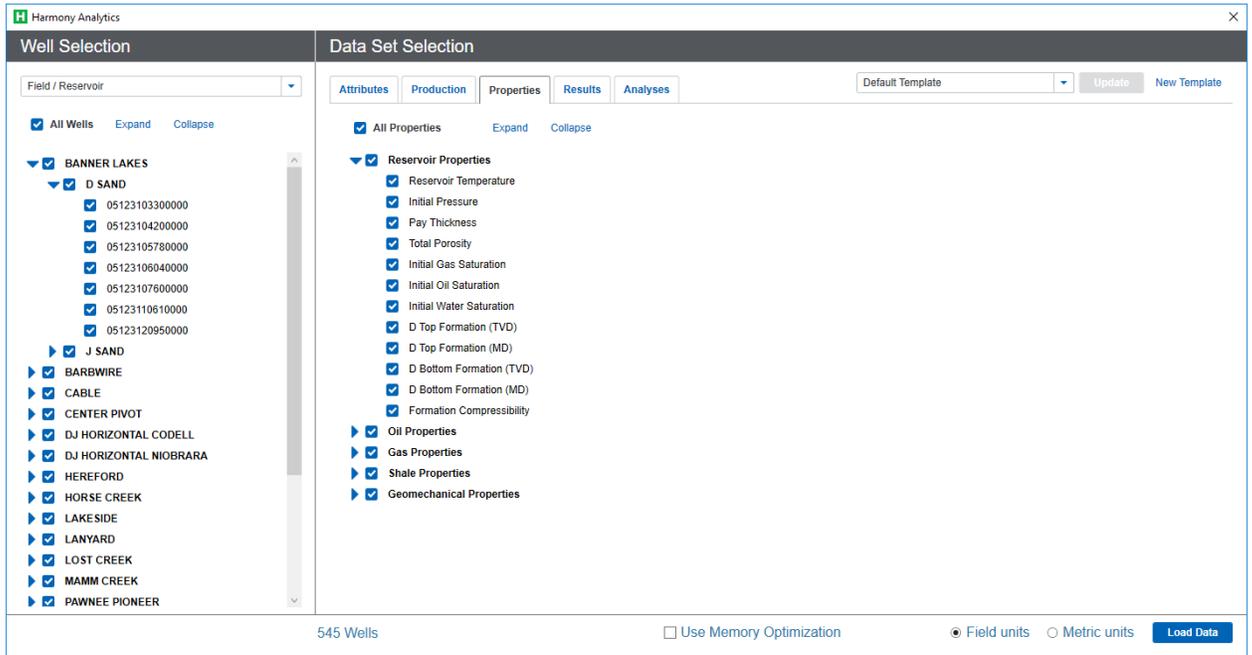

The screenshot shows the Harmony Analytics interface with the Properties tab selected. The 'Well Selection' panel on the left lists wells under 'BANNER LAKES' (D SAND) and 'J SAND'. The 'Data Set Selection' panel on the right shows a list of properties under 'Reservoir Properties', 'Oil Properties', 'Gas Properties', 'Shale Properties', and 'Geomechanical Properties'. All properties are checked. At the bottom, there are options for 'Use Memory Optimization', 'Field units', and 'Metric units', along with a 'Load Data' button.

Results tab

This tab lists summary results and filtered analyses. By default, everything is selected, but you can deselect the results you want to exclude from analytics.

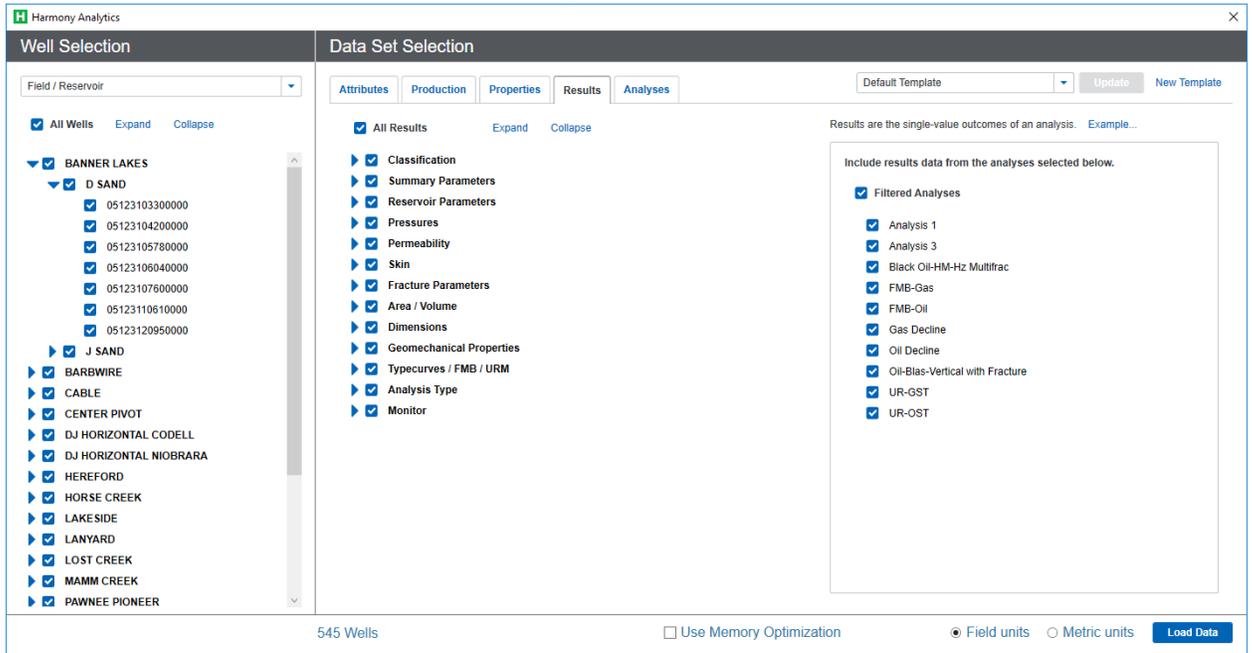


If you click the **Example** link in the top-right-side of the screen, a results example is displayed. This example shows that results are the single-value outcomes of an analysis. In other words, each well can have multiple analyses associated with them, but each analysis can only have one result.

Results Example


Display Name	Analysis Name	EUR	k	RF	Xf
Well 1	Analysis A	756	0.20	85	126
Well 1	Analysis B	684	0.10	79	132
Well 2	Analysis A	390	0.05	36	223
Well 3	Analysis C	581	0.04	52	387

Analyses tab

This tab lists detailed analyses. By default, everything is selected, but you can deselect the analyses you want to exclude from analytics.

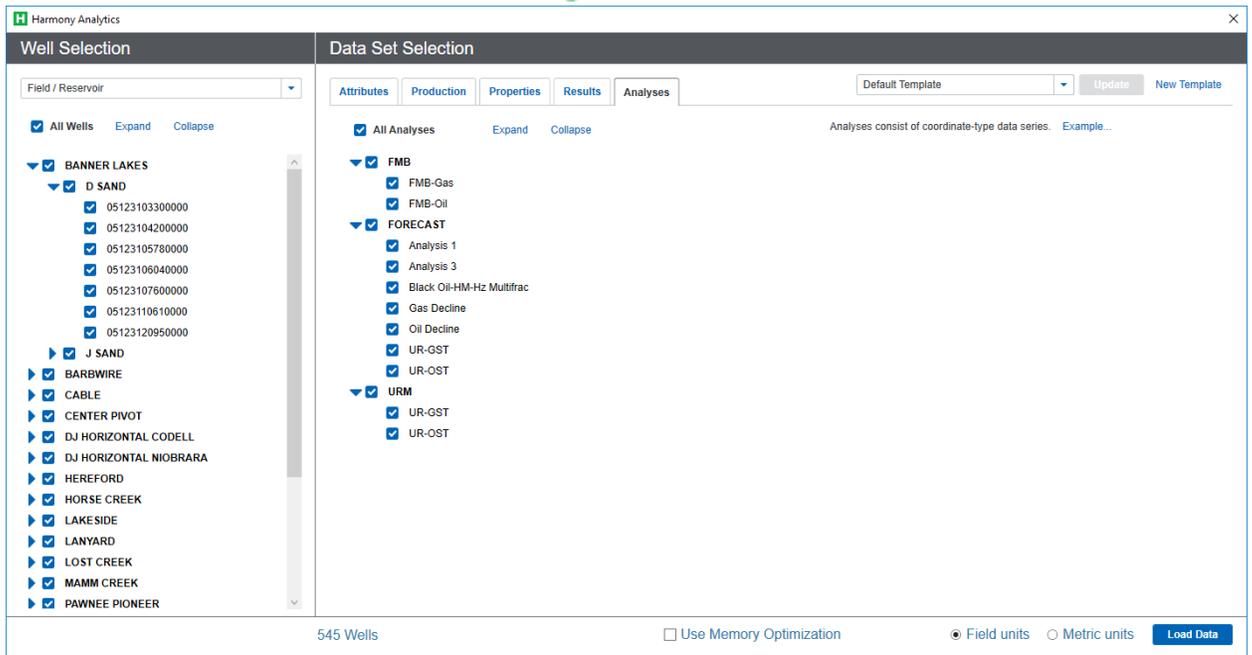

If you click the **Example** link in the top-right-side of the screen, an analyses example is displayed. This example shows that you can import x- and y-plot data for FMB, forecast, and URM analyses.

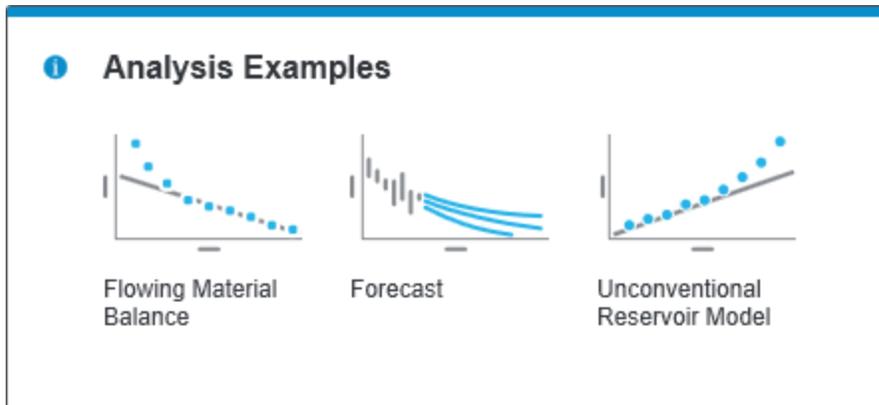

Template functionality


Template functionality is visible from any of the tabs.

- **Default Template** drop-down list — this list is populated after you create a new template. The default template has all items selected.
- **Update** button — after you modify one of your templates, you can click this button.
- **New Template** — opens a popup where you type a name for your template.

Templates are saved to your hard drive, and can be shared by saving to a network drive, or emailing the template file. To find the location of the template, click **Edit Templates**, **Open Template Folder**.

Data Source Selection

When you click this button, you can edit your data source. Note that this button is only displayed, if you start from Spotfire. If you start from Harmony Enterprise, you do not need to select a different data source.

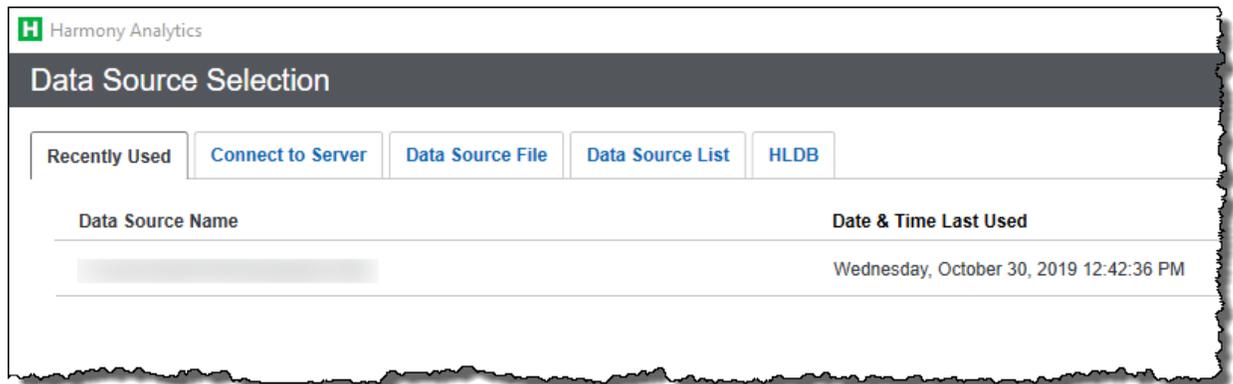

Spotfire

TIBCO Spotfire is an analytics tool that can connect with Harmony Enterprise.

Harmony Enterprise can connect to both Spotfire Desktop and Spotfire Analyst. If you happen to have both versions installed on your computer, Harmony Enterprise connects to whichever version you installed last. We support version 7.14 and 10.3 of Spotfire.

Note: Marking data = highlighting it in Spotfire. In Spotfire, right-click a marked item (any row in the table or part on a visualization) and select **Harmony Analytics, Create Private Group in Harmony**. This moves the marked item to the Private Groups tab in the Entity Viewer - Custom.

First-time connection to a database

The first time you connect to a database, follow these steps. To connect to Harmony Enterprise, click the **Tools** menu and select **Harmony Analytics**, then:

- **Select Harmony Data** — opens the Data Source Selection dialog box. Click one of the tabs described below. After you are done, click the **Connect** button.

- a. In the Recently Used tab, double-click a **Data Source Name** to open one of these connections. (These connections exist if you connected to a SQL server in the past.)
- b. In the Connect to Server tab, type all the required information:
 - **Server** — the name of your SQL server.
 - **Database Name** — the name you assigned to your database.
 - **User Name** and **Password** — type the credentials for the database.

To use your Windows login, click the **User Windows Authentication** checkbox.

- c. In the Data Source File tab, click **Browse** and navigate to your .dsn file.
- d. In the Data Source List tab, select the database you want to use. To use the ODBC Data Source Administrator dialog box, click the **Open Data Source Manager** button.
- e. In the HLDB tab, click **Browse** and navigate to your .hldb file (single-user Harmony file).

The Analytics connector opens.

- f. In the Well Selection pane, select the specific data you want to bring into Harmony Enterprise by clicking the various tabs.



- Or, **Reload Data** — opens the Data Source Selection dialog box (see above). After you connect to a data source, you can refresh your data.

After you have connected to a database

To connect to Harmony Enterprise, click the **Tools** menu and select **Harmony Analytics**, then:

- **Select Harmony Data** — opens the Analytics connector.
- **Reload Data** — refreshes your previously loaded data.

Monitor tab

In this tab, you can monitor how your forecasts compare to actual production.

By default, the largest negative cumulative volume is displayed first, sorted by fluid type (that is, gas, oil, water, BOE). Wells are also sorted by status. A red status indicates a forecast has not been found. To fix this, you can select a forecast from the drop-down list, or create a forecast. An amber status indicates incomplete results (for example, missing production data, missing dates, etc.). Note that only the first issue with a fluid is reported (for example, no oil production data). A blank status indicates there are no issues.

Actual production volume can vary substantially. Therefore, assessing the deviation from a forecast is only meaningful over a defined duration window. The period of time you set must be sufficiently long enough to iron-out fluctuations in the empirical data, yet brief enough to alert you of any adverse trends. By default, the last 30 days of production are displayed in a tabular format. If there are more than 20 wells, a status bar is displayed after you click **Calculate**.

Note: You can sort tabular data by clicking the column headers, and columns can be reordered by dragging-and-dropping. Your first five columns are frozen, so you can keep track of key information as you scroll horizontally.

Investigate well performance for drop-down list — select a forecast to compare against actual cumulative production.

for <30> days field — type a number of days between 1 and 365 for calculation purposes (30 days is the default value). Note that typing a larger value may influence calculation time.



Calendar icon — select an end date of calculation. For example, if you select August 31st, calculations are run for a production window between August 2nd to 31st (assuming you kept the default value of 30 days).

Calculate button — click this button to calculate the cumulative volume difference between actual production and the forecast, as well as percent differences. These calculations apply to the selected well's forecast for all fluid types, or group of wells. Calculations are saved to the database.

Volume variance = cumulative production - cumulative forecast production. A positive difference indicates you are producing more than expected.


% volume variance = cumulative production / cumulative forecast production x 100.

If you select an end date that occurs *after* the last production date, calculations are displayed up to the last date of production, as shown in the **To** column. For example, if you select an end

date of Nov 30th, but your production ends on Nov 20th, calculations are shown up to Nov 20th, and the **To** column displays Nov 20th.

Tip: If you export or import wells with an .hldb file, the data in this tab is not saved, and to have this data, you need to recalculate.

After you select entities in the Entity Viewer - Hierarchy pane and click the Monitor tab and then click a Well (Entity) in this tab, the **Create custom group from selections** section opens at the bottom of the pane. Based on your selections, you can create a new custom group. After typing a custom group name and clicking the **Create** button, a new custom group is created in the Entity Viewer - Custom pane.

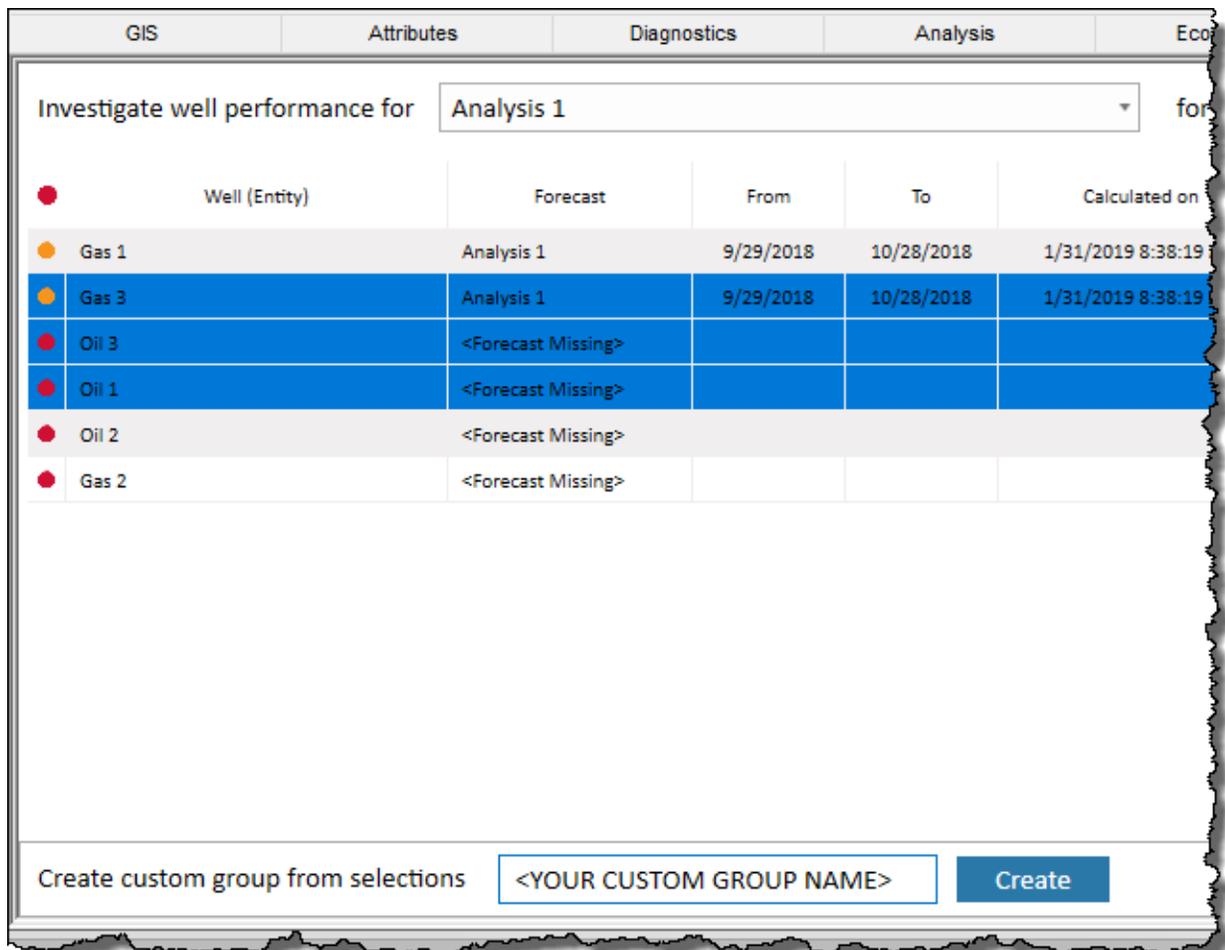

The screenshot shows a software interface with several tabs: GIS, Attributes, Diagnostics, Analysis, and Eco. The 'Analysis' tab is active, displaying a table titled 'Investigate well performance for Analysis 1'. The table has columns for Well (Entity), Forecast, From, To, and Calculated on. Below the table is a section for creating a custom group from selections, with a text input field containing '<YOUR CUSTOM GROUP NAME>' and a 'Create' button.

Well (Entity)	Forecast	From	To	Calculated on
Gas 1	Analysis 1	9/29/2018	10/28/2018	1/31/2019 8:38:19
Gas 3	Analysis 1	9/29/2018	10/28/2018	1/31/2019 8:38:19
Oil 3	<Forecast Missing>			
Oil 1	<Forecast Missing>			
Oil 2	<Forecast Missing>			
Gas 2	<Forecast Missing>			

Create custom group from selections

Options dialog box

Click to see subtopics:

You can access the Options dialog box from the **Tools** menu, or by clicking the **Options** icon () on the main toolbar. Any of the User Settings you change apply after you close the dialog box, and do not affect existing analyses. However, Shared Settings are database settings that apply to all entities, both new and old.

Importing

Unreported Volume or Rate

- **Leave as Null (empty)** — assigns no value to volumes / rates whose true value is not reported.
- **Zero** — assigns a value of "0" to volumes / rates whose true value is not reported.
- **Step Interpolate** — carries over the preceding value to an unreported volume. This creates a step-like plot.
- **Linearly Interpolate** — assigns a value to an unreported volume that is equidistant from the preceding and following reported values. This creates a linear plot.

Number Format

Use Comma as Decimal Separator — applies to some European customers where commas are used as a decimal. If this applies to some of your text imports, click to select this option, so that Harmony Enterprise can appropriately handle the numbers.

Batch Size

To prevent out-of-memory errors when importing files, you can set your batch size to a fewer number of wells. The default setting is 250 wells (maximum setting) for each of the file types. After you click OK, your settings persist. You do not need to close your database connection in order for your change to take effect.

Updating Data

These settings apply globally unless you specify other options on a per-data-source connection basis in the [Import Options dialog box](#).

Production Data

- **Append from last production date** — imports production data from the last production end date.
- **Merge (do not overwrite duplicate dates)** — adds new production data and keeps production data for any dates that exist in the current production history.
- **Merge (overwrite duplicate dates)** — adds new production data and replaces production data for any dates that exist in the current production history.
- **Discard all existing data and replace with incoming data** — replaces production data with incoming data.

Attributes and Properties

- **New data only** — imports new attribute and property data and does not overwrite any data.
- **Overwrite / Merge existing data** — imports all new production data and overwrites data with the same dates as those being imported.
- **Ignore incoming data** — does not import attribute nor property data.

Analysis Data

These settings only apply when you import well data from a database (Aries), or from PowerTools.

- **New data only** — imports new analyses and does not overwrite any data.
- **Overwrite / Merge existing analyses** — adds all analyses, even if analyses with the same name exist in the project. If a duplicate analysis / worksheet exists, the analysis / worksheet names are appended with a number.
- **Ignore incoming data** — does not import analyses.

Tip: When you import well data from a .harmony file, if an analysis or worksheet already exists, it is not imported. For .hldb files (local database files), if an analysis or worksheet already exists, it replaces the existing copy.

Wellbore

- **Append with incoming wellbore data** — only imports new / incoming wellbore data.
- **Overwrite existing data** — applies to some imports, and the deviation survey if it is empty (that is, when the wellbore configurations are empty).
- **Ignore incoming data** — does not import wellbore data.

Static Pressures

- **New data only** — imports static pressure data and does not overwrite any data.
- **Discard all existing data and replace with incoming data** — imports all new static pressure data and overwrites data with the same dates as those being imported.

Custom Data

- **Import New Custom Attributes** — if this option is selected, all custom attributes are brought in when importing .hldb or .harmony files. If this option is deselected, values for custom attributes that are already set up in the project are brought in, but no new custom attributes are created on import.
- **Import New Custom Datasets** — if this option is selected, all custom datasets are brought in when importing .hldb or .harmony files. If this option is deselected, values for custom datasets that are already set up in the project are brought in, but no new custom datasets are created on import.

Autocalc Settings

By default, sandface pressure calculations are calculated after your data has been imported because this can be a time-consuming process. However, if you want these calculations to be done automatically during the import, click the Import Autocalculation Options checkbox to deselect it.

Tip: Scenarios do *not* automatically recalculate when importing an .hldb file even when the Autocalculation checkbox is selected.

Data Reduction

Data Reduction Filter

- **Always Display the Data Reduction Dialog** — opens the [Data Reduction dialog box](#) every time well data is imported into the project.
- **Display the Data Reduction Dialog when threshold is reached** — opens the Data Reduction dialog box only when an incoming well has more than the specified threshold number of production rows.

Data Reduction Thresholds

- **Threshold** — the number of rows of production data in a well that causes the Data Reduction dialog box to open.
- **Gas Rates** — the number below which gas values are treated as shut-in when automatically detecting flowing / shut-in periods in data reduction.
- **Liquid Rates** — the number below which liquid values are treated as shut-in when automatically detecting flowing / shut-in periods in data reduction.

Data Reduction Filter Defaults

- **Arithmetic Filter** — the default value for all periods using the arithmetic filter.
- **Log Filter** — the default value for all periods using the log filter.

Data Reduction Use in Period Defaults

- **Flowing Periods** — sets flowing period defaults to the filter values specified in the Data Reduction Filter Defaults section.
- **Shut-In Periods** — sets shut-in period defaults to the filter values specified in the Data Reduction Filter Defaults section.

Well Linking

By selecting from the **Import Format** drop-down list, you can view the entity header attributes (listed in the [Attributes tab](#)) that are used to link incoming data to existing wells. For information on how Harmony Enterprise updates wells and merges incoming well data to existing wells, see [well linking logic](#).

The default Entity Header attributes used for well linking are listed by Import Format type. For each Import Format type, attributes are listed in order of linking priority. Most import formats do not allow you to edit linking criteria. However, you can edit the linking criteria for Harmony files, Database Connections, and Text-type files.

To exclude attributes from the linking process, deselect their checkboxes. To include attributes, select their checkboxes. To change the order of priority, click the attribute you want to change, and then click the **Move Up** or **Move Down** buttons. As these changes are saved locally, in order to share your settings, you need to click the **Export Criteria** button when you are finished with your changes. You can then share the .wlc file with other colleagues.


You can import an .wlc file by clicking the **Import Criteria** button (similar to sharing a template). To go back to the original settings for the import format you have currently selected, click the **Reset to Default** button.

Analysis

To automatically add the Add Analysis menu to a new worksheet, click the Worksheet Creation checkbox (default setting).

Decline

These options set the initialization of new decline analyses and constrain the use of best-fit tools:

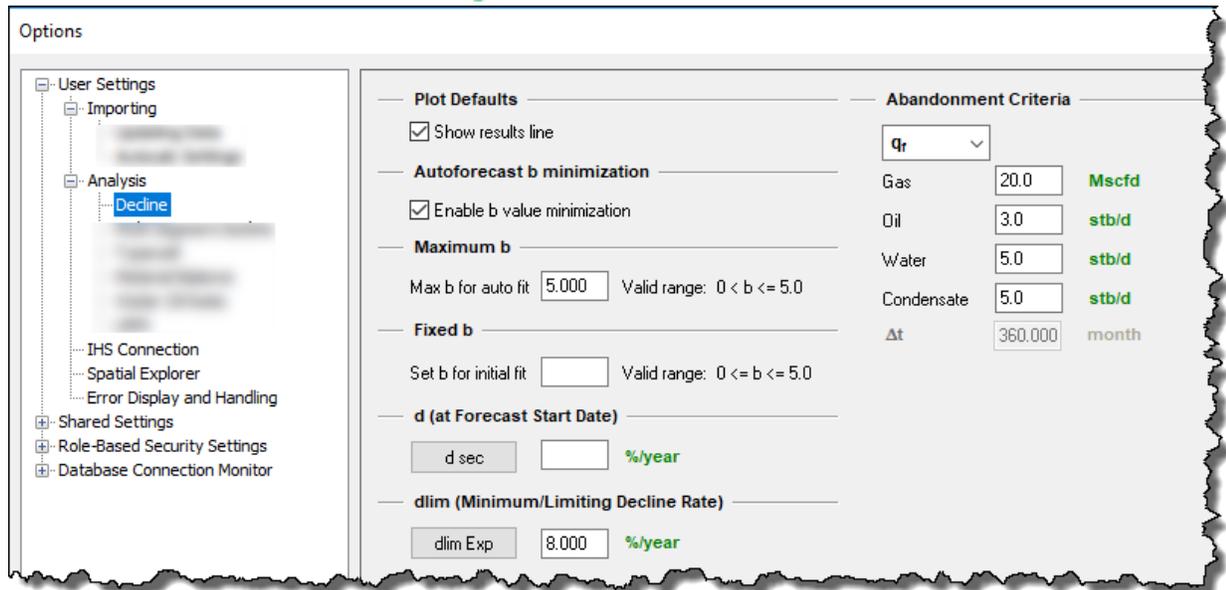

You can set the parameters that initialize all decline analyses in Harmony Enterprise, and you can change these initialization values while performing an analysis (within the analysis worksheet). The decline parameters and settings are as follows:

- **Show results line** — displays / hides a green-dashed line for abandonment rates on your decline plot.
- **Enable b value minimization** — when you add a decline analysis, Harmony Enterprise automatically selects the best subset of your data for an initial best fit. When this option is selected, the b value (slope) is minimized without sacrificing the quality of the fit. This can be of particular use with unconventional reservoirs where there is more curvature in the declines. (This option is deselected by default.)
- **Maximum b value** — sets the maximum b value allowed for the best-fit decline. Harmony Enterprise accepts any value between 0 and 5.
- **Fixed b** — if a value is defined, every decline initializes with this b value, and the yellow lock icon defaults to a locked (🔒) position. Harmony Enterprise accepts any value between 0 and 5.
- **d (at Forecast Start Date)** — sets an effective decline rate from the forecast start date of a segment, so that each new decline curve initializes with this value. This parameter can be toggled among the effective decline rates (*d sec* and *d tan*), or the initial nominal decline rate (*a*).
- **d_{lim} (Minimum / Limiting Decline Rate)** — defines a limiting effective decline rate, and every decline switches to an exponential decline ($b=0$) when this value is

reached. The default setting is 8%. This parameter can be toggled from d_{lim} Hyp to d_{lim} Exp.

- **Abandonment Criteria** — defines the abandonment rates (q_f) for different fluids, or the duration of the decline (Δt) as abandonment criteria.

Multi Segment Decline

You can set the parameters that initialize all multi-segment decline analyses in Harmony Enterprise, and you can change these initialization values while performing the analysis, within the analysis worksheet. The multi-segment decline parameters and settings are as follows:

Gas Defaults

Segment #1:

- **b value** — select your *b* type for the *first segment* from the drop-down list: *Best Fit*, *Input*, or *Custom*.
 - **Input** — enter your *b* value between 0 and 5 inclusively.
 - **Best Fit** — Harmony Enterprise performs a curve-fitting to the selected historical portion of the data and reports a *b* value.
 - **Custom** — if you have already created a custom attribute for *b* values, you can select *Custom* from the *b* drop-down list. (The custom attribute must be without units.)
- **Constraints** — you can define up to four constraints for the *first segment*. Harmony Enterprise needs at least one constraint within this section. If you define multiple constraints, the first constraint that is chronologically encountered, is the constraint that is applied.
 - You can select your Δt_{max} to be an *Input* or *Custom* value from the drop-down list. A default value of 12 months is used. If you select a custom attribute for your Δt_{max} , make sure that the attribute has a unit of time. All attributes that have a time unit are displayed in the *Custom* drop-down list.
 - You can also set your constraints to be a minimum production rate (q_{min}), minimum effective decline rate (d_{min}), and/or maximum incremental cumulative production (ΔQ_{max}).

Segment #2:

- **b value** — you can define *b*-value settings for the *second segment*, similar to Segment #1 (see above).

- **d_{lim} Exp** — click this button to toggle between *exponential* d_{lim} and *hyperbolic* d_{lim} . For more information, see [d_{lim} decline options](#). If there is no value in the $d_{lim, exp}$ field, a limiting decline calculation is not performed on the *second segment*. If you toggle this option, any values you enter are saved, and the current selection is what is used.

Liquid Defaults

See the Gas Defaults section above.

Best-Fit criteria

For your *first segment*, you can select to start at either:

- **from initial peak rate** (default setting) — equivalent to the highest rate that the entity has produced throughout its entire history.
- **from initial production** — the first production data point for that entity.

Typewell

These settings apply to the average rate, P90 rate, P50 rate, P10 rate, and the number of producing wells. For additional information, see the [typewell analysis](#).

- **All Rates** — includes all wells in your rate calculations
- **Producing Rates Only** — only includes producing wells in your calculations

Material Balance

These options affect the behavior of material balance analyses:

- **Show abandonment line** — shows / hides the abandonment line on your plot.
- **Abandonment Pressure** — sets which “Abd Calc” method (in the Analysis Parameters view of the Analysis tab) is used by default when an analysis is created.

Water Oil Ratio

You can set the parameters that initialize water-oil ratio (WOR) analyses in Harmony Enterprise. These inputs can be overridden with each analysis, and the Options dialog box inputs are only used when the analysis is created. The WOR parameters and settings are as follows:

- **Show results line** — shows / hides the green-dashed line for abandonment on your plot.

- **WOR** — sets the abandonment WOR. Harmony Enterprise uses 49 bbl/stb as the default.
- **WC** — sets the abandonment water cut (WC). Harmony Enterprise uses 98% as the default.
- **Initial Best Fit** — specifies the percentage of your historical data that you want to be included in the initial best fit.

URM

Display Pseudo-Time Option — if selected, the **Use Corrected Pseudo-Time checkbox** is shown in the Unconventional Reservoir pane. The default setting is to hide this option.

Optimize

Set your default setting for erosion velocity.

IHS Connection

These options determine the behavior of the direct connection to IHS.

- **Save Login Information** — saves your username and password, so you can log into Enerdeq USA without manually entering your login credentials.
- **Split Enerdeq Wells by Production ID** — when importing wells, you can separate wells based on production ID. For example, this may apply when you are importing US data where the production IDs have changed throughout the life of a well. In Harmony Enterprise, there is one well per API, and production history from individual production IDs are aggregated together to make sure that the whole production history is captured.
- **Save Login Information** — saves your username and password, so you can log into IHDC without manually entering your login credentials.

Unit Customization

For each of the attributes and properties listed in the main pane, you can set default units by selecting from the drop-down lists.

To import customized units in a .cu file, click the **Import** button.

To export customized units, click the **Export** button.

If you want to revert back to the original default settings, click the **Reset** button.

Error Display and Handling

Click the checkboxes to show or hide error messages and warnings in the Status Window. By default, errors and warnings are displayed in the Status Window.

To enable logging for the license module, click to select the options you want.

Shared Settings

Gas Conversion to BOE — barrel of oil equivalent (BOE) = oil volume + gas volume / factor. This factor can be changed from the default value of six, but the factor must be greater than one.

Classified Consolidations — select this option to include fluid produced from all wells, if you want to consolidate classified and unclassified decline analyses at the group level for EUR and fluid-produced calculations. The default setting only includes classified decline analyses. After you click OK, all consolidations are adjusted, which may take several minutes.

Role-Based Security Settings

These options apply to role-based security. If any of these settings are grayed-out, you do not have permission to make changes in this area.

Enable / Disable

Role-based security checkbox — by clicking this checkbox, you can assign permissions to other users for certain Harmony Enterprise tasks. In order for any changes to take effect, you need to close Harmony Enterprise and re-open it.

Role Definitions

The Superuser and Default roles are always available and cannot be edited nor deleted.

Roles:

- **Add** — clicking this button creates a new role (by default, Role 1, Role 2, and so on). You can rename a role (*excluding* the Superuser and Default roles) by clicking the role and typing a new name.
- **Remove** — after selecting a role and clicking this button, the role is deleted from the Roles pane.


Note: These buttons are only accessible to Superusers and users that have permission to manage security.

Permissions:

- **Manage Security** — if you select this option, the role selected in the Roles pane can edit permissions for other users (excluding the Superuser and Default users).
- **Import / Update Wells** — if you select this option, the role selected in the Roles pane can import and update wells.
- **Delete Wells** — if you select this option, the role selected in the Roles pane can delete wells in the Entity Viewer - Hierarchy pane.
- **Modify Editors** — if you select this option, the role selected in the Roles pane can change data in the Editors (that is, Properties, Wellbore, Production, Static Pressure). Note that when Modify Editors is not granted and Import / Update wells is granted, only the Database Connection is available for import.

Assignments

You can assign roles to various users by clicking the appropriate checkboxes in the table.

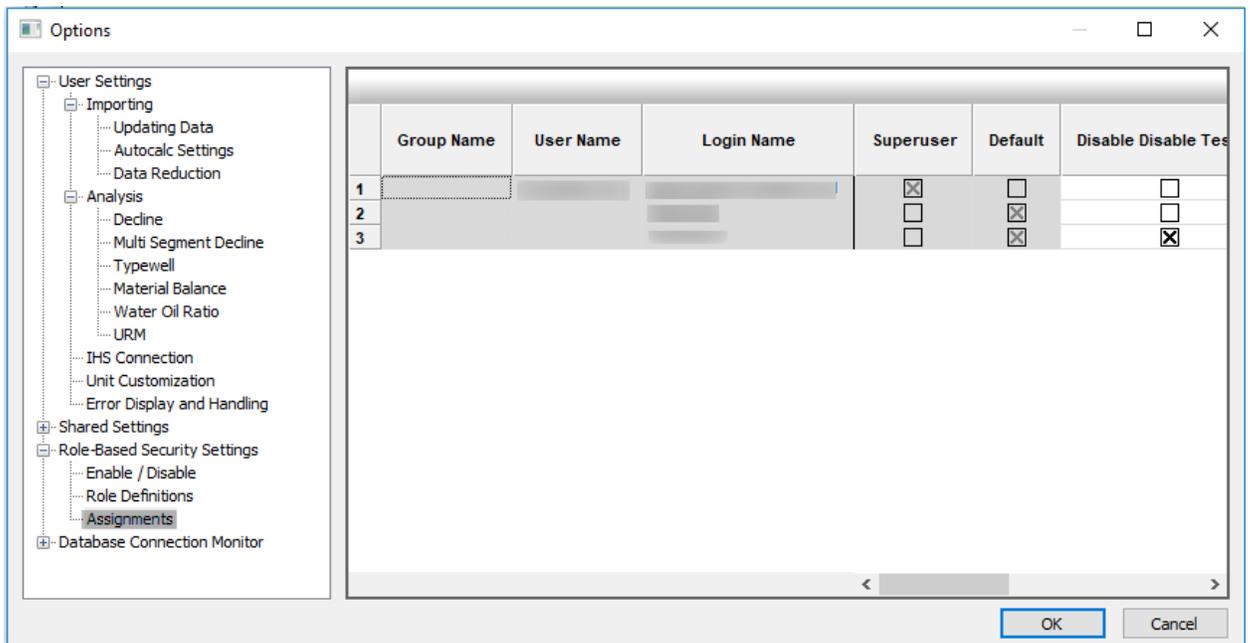

	Group Name	User Name	Login Name	Superuser	Default	Disable	Disable Tes
1				<input checked="" type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
2				<input type="checkbox"/>	<input checked="" type="checkbox"/>		<input type="checkbox"/>
3				<input type="checkbox"/>	<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>

Database Connection Monitor

This table displays all the currently connected users to Harmony Enterprise.

Piper export

Piper export functionality includes the following:

- [Export Type dialog box](#)
- [Analyses Selection dialog box](#)
- [Well-Analysis Pairing Conflicts dialog box](#)
- [Export logs](#)

Export Type dialog box

This dialog box opens when you access the [Piper Export wizard](#) (after the Welcome dialog box). In this dialog box, you select the type of export, and the file name and path for the file you want to export.

Important: Calibration must be done prior to forecasting.

Type of export

Select from these two options:

1. **Building and Calibration** — exports well locations, fluid properties, wellbore, rates, and pressures for each well as of the effective date. This information is used to calibrate your selected wells.

Effective Date — if you have production up to the current month, the default date is midnight on the first day of the current month. Click the date and time fields to select the appropriate snapshot in time for your measured rates and pressures.

Tip: When selecting an effective date, it may be helpful to view the [Diagnostic tab](#).

There are four reasons to select this option:

- a. to build a new model
 - b. to add new wells to an existing model
 - c. to create conventional deliverability typewells in Piper (e.g., Gas: wellhead test, wellhead c&n, sandface c&n, Gas and oil wells: fixed rate or profile)
 - d. to validate a Piper model (also known as calibration)
2. **Forecasting** — exports well locations and other attributes together with one analytical model per well. This information is used to predict future production.

File name and path

Browse to the appropriate location for your text file to be saved. After you complete the steps in the wizard, you can import this file into Piper®.

Note: If you run the wizard again with the same filename, wells with the same name are overwritten.

Analyses Selection dialog box

This dialog box is part of the Piper Export wizard. In this dialog box, you select your analyses for export, and you are given the option of exporting wells without analyses.

Note: You must select at least one analysis in order to proceed, or you can include wells without analyses.

Analyses for the wells you want to export are displayed by analysis type. You can export well locations and other attributes together with one analytical model per well.

Select one analysis for each well you want to export.

If you want to export wells that are not paired with an analysis, click the checkbox in the lower left. Note that your wells are exported without rate and pressure data.

Well-Analysis Pairing Conflicts dialog box

This dialog box is part of the Piper Export wizard and it only appears when there is more than one analysis paired with a well. In this dialog box, you resolve any conflicts by selecting from the Select Analysis drop-down list.

Note: You must resolve all conflicts in order to proceed.

Any wells that have more than one analysis assigned to them are listed in the Well column.

Select Analysis drop-down list — select either:

- **Exclude from Export** — excludes the well from the export
- **<Analysis name>** — pairs your selected analytical analysis with the well

Piper export logs

You can view these logs by clicking the link in the [Piper Export | Summary](#), or by browsing to your export data file.

Calibration data

An example Calibration data log is shown below.

Piper Export initiated at Wednesday, September 12, 2018, 11:28:03

Wells exported successfully:

- With analyses: 0
- With well data only: 15

Corrections performed during export:

- Sandface pressure recalculations: 0
- Flowpath corrections: 1

Details of modified or failed wells:

- Well 4 wellbore has been modified from unsupported casing flowpath to tubing flowpath.

Forecast data

An example Forecast data log is shown below.

Piper Export initiated at Wednesday, September 12, 2018, 12:01:00

Wells exported successfully:

- With analyses: 15
- With well data only: 0

Corrections performed during export:

- Sandface pressure recalculations: 9
- Flowpath corrections: 1

Details of modified or failed wells:

- Well 1 has been modified with its sandface pressure recalculated.
- Well 2 wellbore has been modified from unsupported casing flowpath to tubing flowpath.
- Well 2 has been modified with its sandface pressure recalculated.
- Well 3 has been modified with its sandface pressure recalculated.
- Well 4 has been modified with its sandface pressure recalculated.
- Well 5 has been modified with its sandface pressure recalculated.
- Well 6 has been modified with its sandface pressure recalculated.
- Well 7 has been modified with its sandface pressure recalculated.
- Well 8 has been modified with its sandface pressure recalculated.
- Well 9 has been modified with its sandface pressure recalculated.

Plots

Plots are a vital tool used in analyzing well data, comparing data (see [comparison plot](#)), and are displayed in many different areas in Harmony Enterprise.

These items apply to plots:

- [Plot components](#)
- [Plot types](#)
- [Diagnostic line](#)

Plot components

Plot components include locks, a legend, and context menus. For information on toolbars, see [plot toolbars](#).

Locks

Each axis has a lock at both ends to control resizing and movement. Locks are represented by two different icons, depending on their state:

Icon	Status	Description
	Unlocked	This end of the axis is free to move or change in scale.
	Locked	This end of the axis is locked down (that is, immobile).

Locks can be toggled independently by clicking them. The state of these locks affects the behavior of the axis when you click-and-drag. The possible lock states and their effects on the axis are described below:

Lock States	Effect on Axis
	Both ends are free to move; dragging the axis pans / slides without changing in scale.
	Neither side of the axis can move; dragging the axis zooms in.
	The end that is unlocked stretches or shrinks, rescaling the axis.

Legend

The legend displays the relevant datasets on the plot. To show or hide a legend on any plot: right-click the plot and select **Show Legend** or **Hide Legend**.

- Single-well plot legends display the available datasets for the selected well.
- Multi-well plot legends display the individual wells as differently colored lines.

Plot context menus

Plots have two sets of context menus.

Axis options

Right-clicking an axis lists these options:

- **Autoscale Axis** — scales the axis to fit the data.
- **Change Axis Units** — select your units from the submenu.
- **Sync - Snap - Square** — links up major axis lines between multiple axis scales.
- **Customize Axis** — select your axis preferences (labels, font settings, and so on) in the Axis dialog box.
- **Move Axis to Right / Left Side** — moves the axis to the other side of the plot.
- **Link / Unlink Axes** — connects axes of different datasets to share a common scale (must be the same units), or disconnects them.
- **Major Grid Lines** — shows / hides major grid lines.
- **Minor Grid Lines** — shows / hides minor grid lines.
- **Snap Scale** — snaps the axis to the closest major grid line division / whole number.
- **Sync all log axes to use 1 log cycles** — synchronizes log axes to 1-log cycles.
- **Show / Hide Toolbar** — shows / hides the tab's toolbar.

Plot options

Right-clicking a plot lists these options:


- **Send Dataset to Comparison Plot** — opens a snapshot of your dataset in a new or existing comparison plot. (You must right-click a specific dataset.)
- **Copy / Paste Dataset** — copy and paste your dataset content. For example, you can copy your dataset to the comparison plot as an independent dataset, which retains the customizations you set up (name, line / symbol properties, axis titles, and so on). (You must right-click a specific dataset.)
- **Customize Datasets** — change the display order, and / or customize the display for specific datasets.
- **Customize Plot** — select your plot preferences in the Plot dialog box.
- **Customize Axis** — select your axis preferences in the Axis dialog box.
- **Customize Main Title** — type or select attributes for your title and subtitle in the Titles dialog box.

- **Customize Left Header** — type or select attributes for your left-header information in the Left Header dialog box.
- **Customize Right Header** — type or select attributes for your right-header information in the Right Header dialog box.
- **Show / Hide Legend** — shows / hides the legend.
- **Customize Legend** — select your legend preferences in the Legend dialog box.
- **Copy / Paste Plot** — copy and paste your plot content. For example, you can copy your plot to the comparison plot.
- **Send Plot to Comparison Plot** — opens a snapshot of your plot in a new or existing comparison plot.
- **Show / Hide Toolbar** — shows / hides the tab's toolbar.

Plot types

There are different types of plots in Harmony Enterprise, and often the plots that are available for viewing depend on the datasets currently displayed.


For example, you can select a plot type from the drop-down menu in the Diagnostics tab:

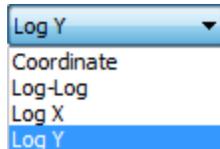

Coordinate plots

Coordinate (also called 'Cartesian') plots display data in a 1:1 ratio with no manipulation of the axes.


An example of a coordinate plot:

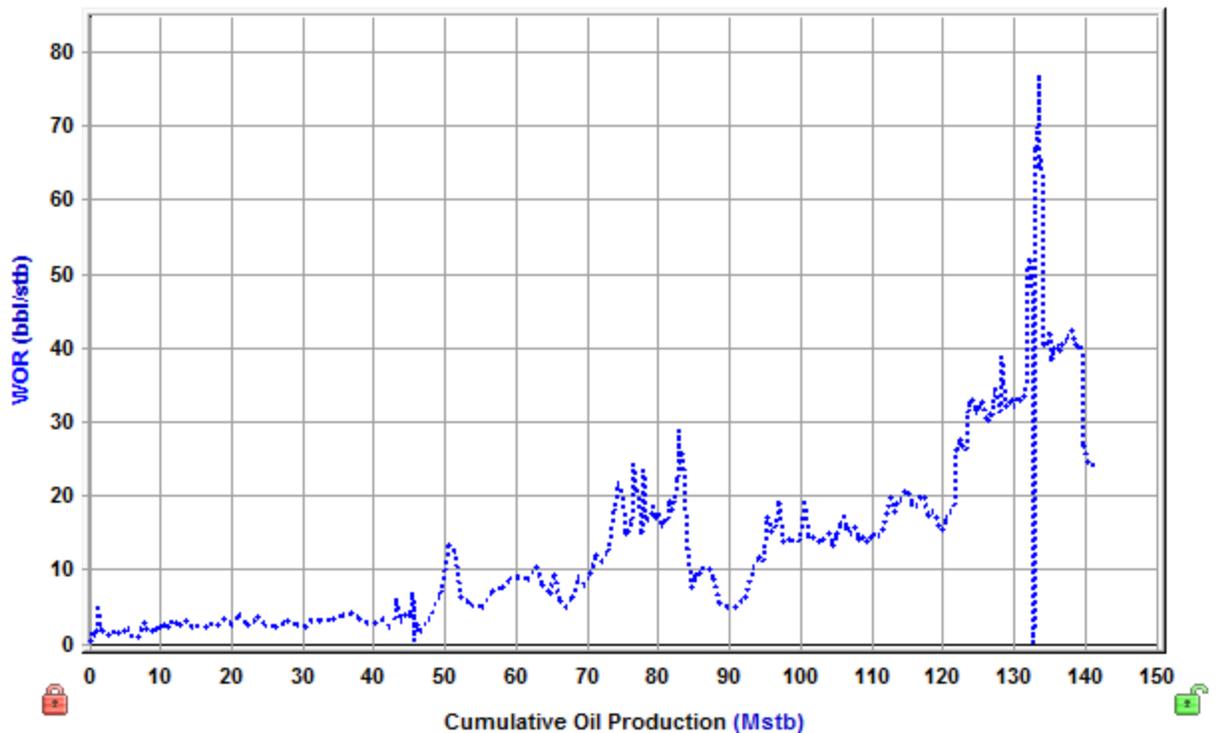

Log-log plots

Log-log plots use logarithmic scales on the x- and y-axes to stretch data in order to view trends in the data that are not apparent with Cartesian coordinates.


An example of a log-log plot:

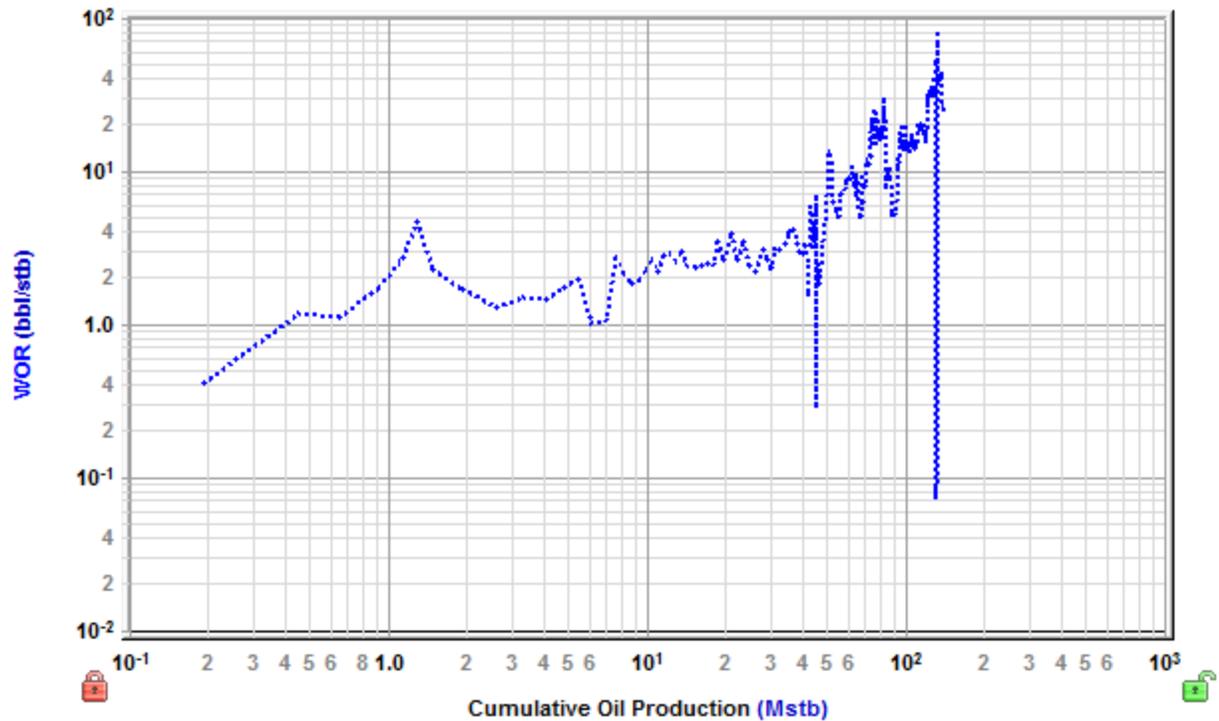

Log-X plots

In log-X plots, the scale of the x axis increases exponentially. Manipulating the y-axis in this way places emphasis on a specific portion of the data set (for example, semi-log time emphasizes early-time data).


An example of a log-X plot:

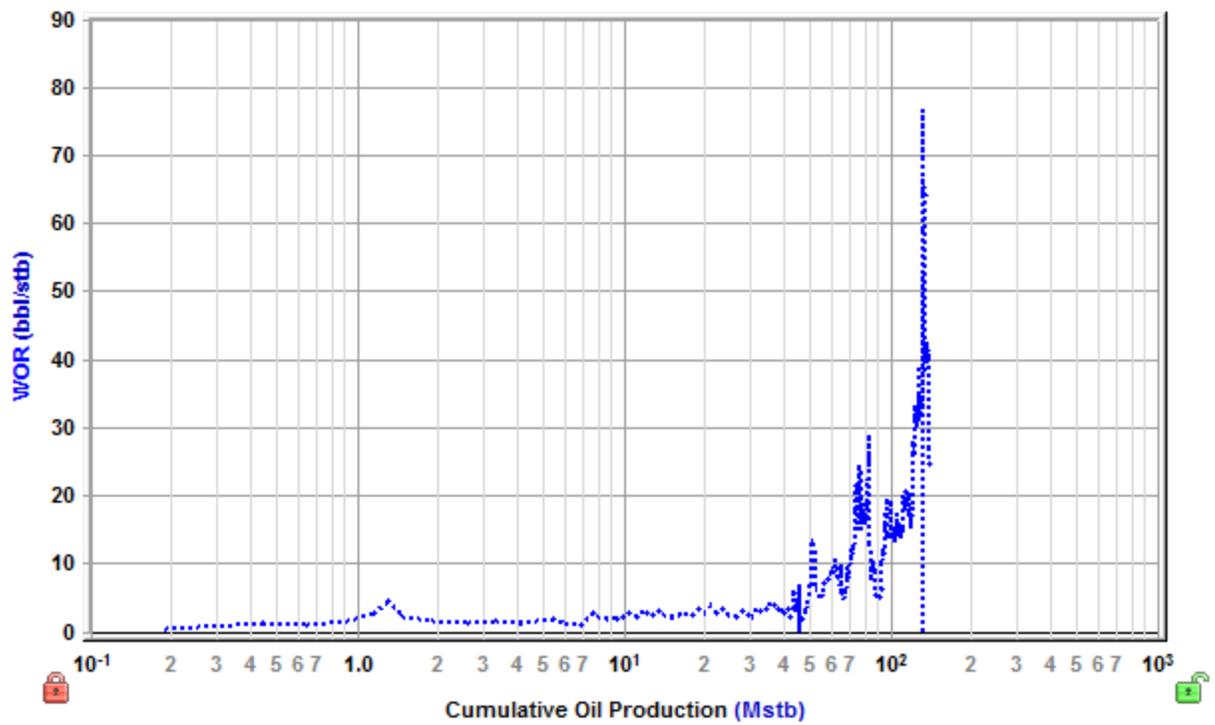

Log-Y plots

In log-Y plots, the scale of the y-axis increases exponentially. Manipulating the x-axis in this way normalizes a large range of data that is difficult or impossible to analyze on a coordinate plot.

An example of a log-Y plot:

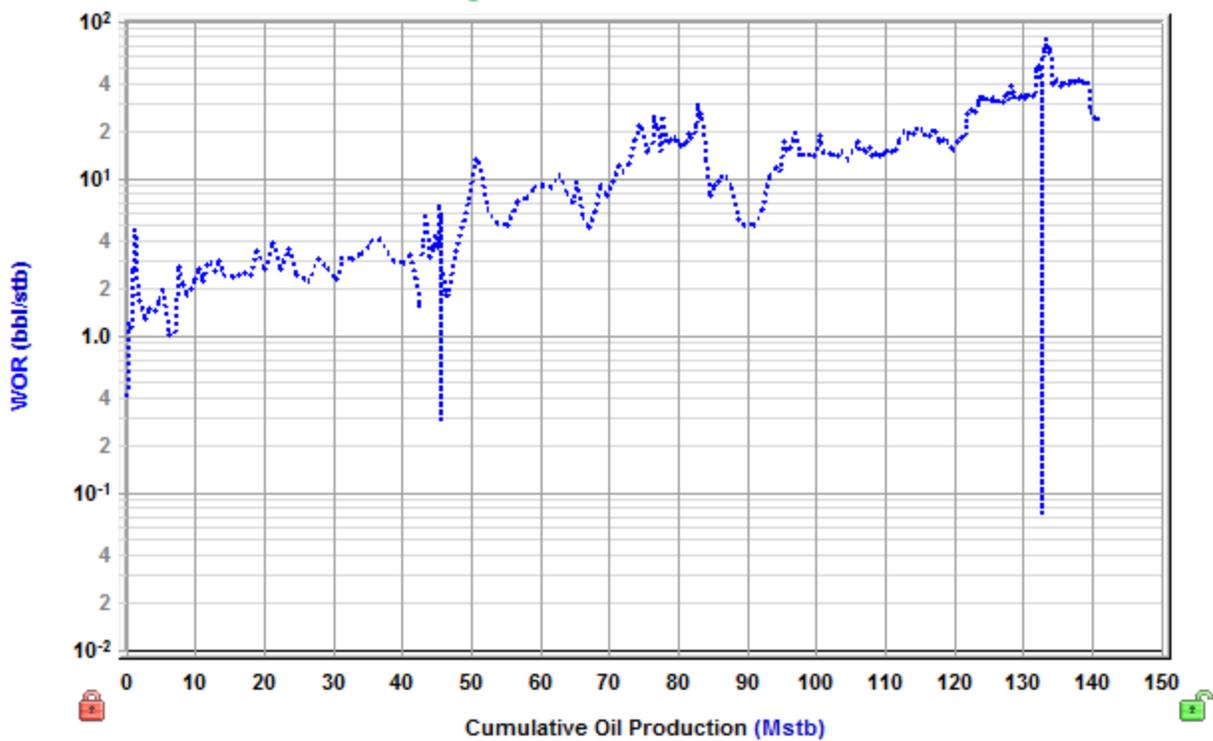


Diagnostic line


On many of Harmony Enterprise's plots (for example, analysis plot-style worksheets and the [Results Viewer cross-plot](#)), you can add a diagnostic line, which is useful for identifying and extrapolating trends in the data.

To add a diagnostic line, click the **Add a Diagnostic Line** icon () on the toolbar.

A diagnostic line requires at least one dataset or forecast. If there are multiple datasets, a popup opens where you can associate the diagnostic line with a data series. If that data series has one of its axes scaled, the diagnostic line scales with it.

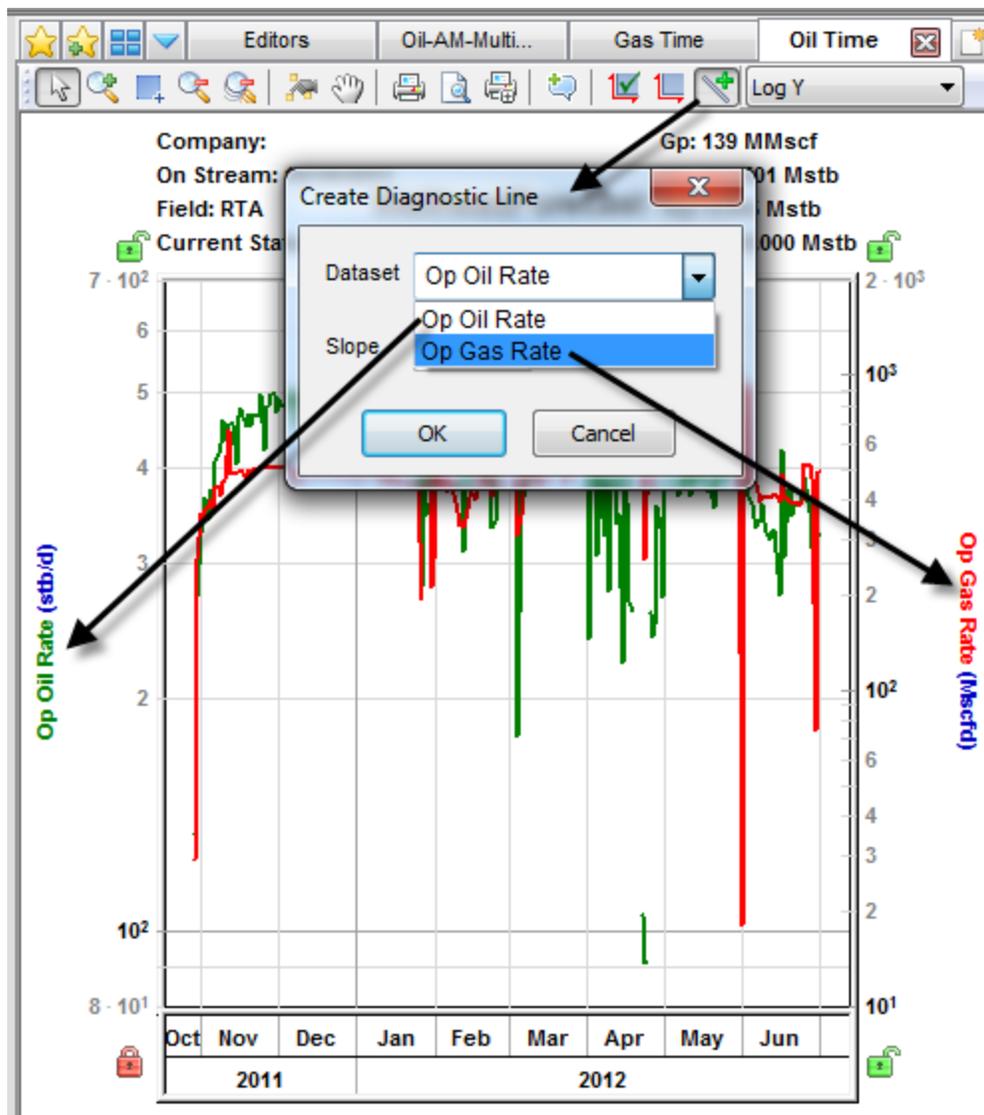

If the plot's vertical and horizontal axes are both set to use logarithmic scales (that is, if the plot is "log-log"), when you click the Add a Diagnostic Line icon, a popup opens where you can select a preset value.

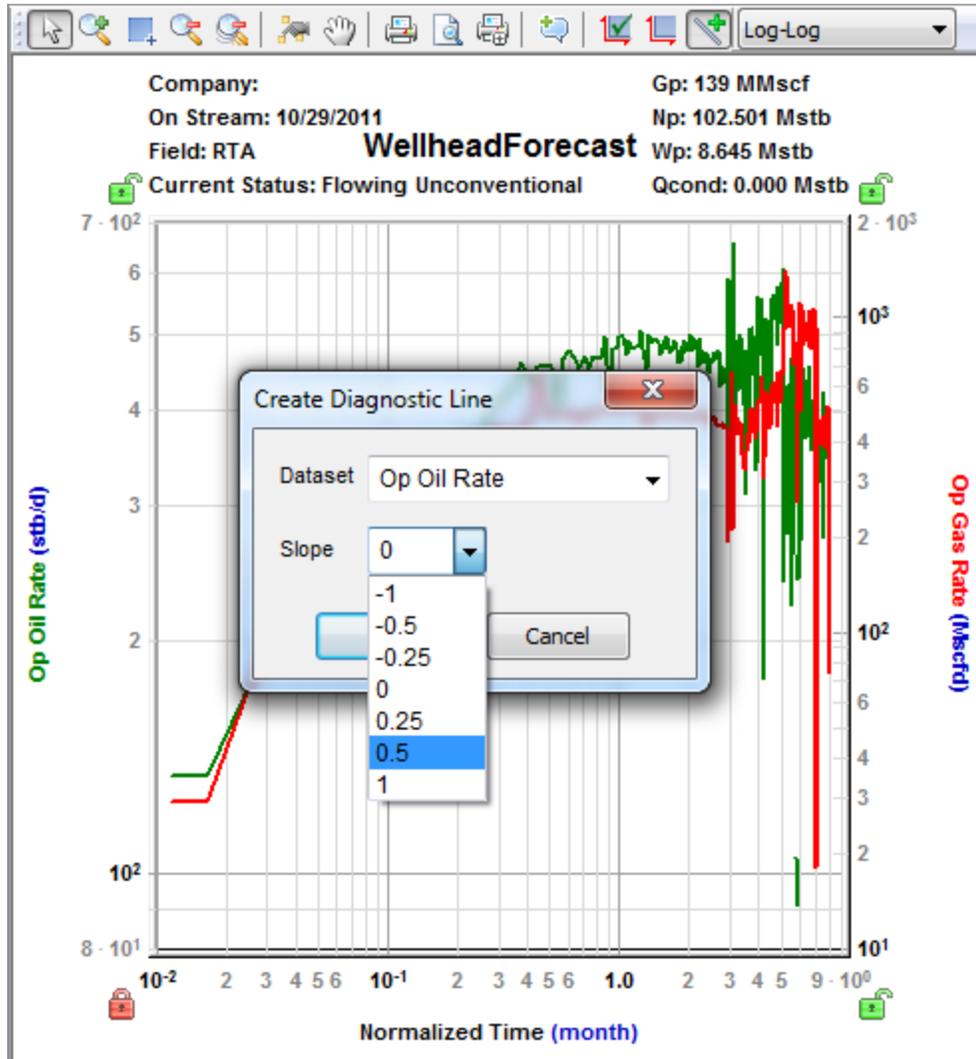

Context menu

Right-clicking the diagnostic line lists these options:

- **Show All Annotations** — shows the x, y coordinates for both endpoints, as well as the slope of the line, denoted by 'm'.
- **Customize Line** — for changing the line width and color.

- **Default Slopes** — for changing the slope to a preset value; this is only shown for log-log plots.
- **Remove Line** — deletes the line from the plot.

Line manipulation

You can manipulate the diagnostic line as follows:

- **Rotate** — rotates the line, keeping the center point in its original position
- **Move end points** — drag either end point, while the other end point stays in its original position
- **Move line** — drag near the center of the line to move it to another location

Plot Selection pane

By default, this pane opens in a tab to the right of the Analysis Manager while a worksheet is in focus. For a description of common icons, see toolbars.

To add / remove plot axes:

- **Checkboxes** — Toggling the checkbox for an item within this pane adds / removes the axis from the worksheet.
- **Double-click** — Double-clicking an item within this pane adds / removes the axis from the worksheet.
- **Drag-and-drop** — Dragging an item from this pane to the worksheet, adds the axis. The item can be dropped to the position you want: x-axis, y-axis, or over an existing axis to link the axes. If you drop the item to a location that is not over an axis, it is added as a y-axis, unless the item is a cumulative or date series.

To customize datasets / categories:

Whenever you modify a custom dataset or category in the Production editor (add, delete, rename, or update a formula), these changes are reflected in this pane. In order to see renamed items or formula changes from other users, you need to click the **Refresh** icon on the main toolbar.


Project filters

Project filters are used to reduce the number of entities displayed in large databases in your specific area of interest. When filters are set, wells and groups outside the filter are not displayed in any of the modules within Harmony Enterprise. All filters are global to the database they are created in; this is, all users can see them. Each user selects an active filter independently.

Tip: Project filters are user-specific. Therefore, any filters you create are not seen by other users in a multi-user environment.

After clicking the Project Filter drop-down list on the main toolbar, you have the following options:

- **Add / Modify Filters** — opens the Add / Modify Filters dialog box where you can:
 - **Add a new filter** — click the **Add** button and type your filter name. Click the checkboxes in the Hierarchy, Shared Groups, and Private Groups tabs to include entities in the filter. Click **Save**.
 - **Modify an existing filter** — select the filter in the Filters pane, and then select the wells and groups you want in your filter (you can select from the Hierarchy, Shared Groups, or Private Groups tabs). Click **Save**.
 - **Delete a filter** — select the filter in the Filters pane and click the **Remove** button.
 - **Rename** — right-click or double-click the filter in the Filters pane, and then type in your new name.
- **No Filter** — displays all of the wells and groups in your project.
- **<previously created filter>** — displays your filtered results on the GIS map, Attributes tab, analysis tabs, and so on.

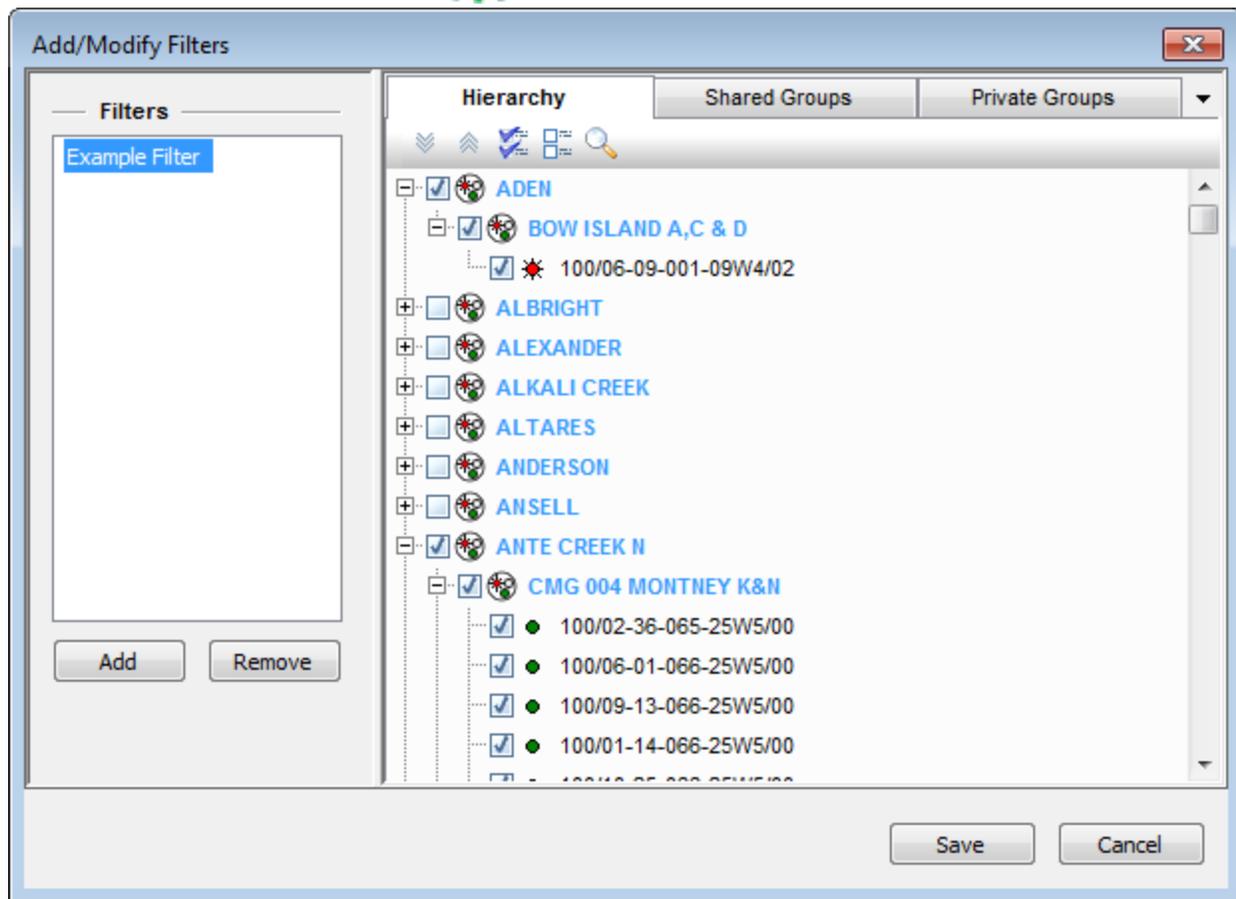

Tip: When creating a filter, you select your entities using one of the available three tabs.

Hierarchy tab

In the Hierarchy tab, selecting a hierarchy group selects all the wells below it automatically. Constituent wells can be deselected from a hierarchy group, and that hierarchy group is no longer selected in the dialog box. If that hierarchy structure is used when working in the filtered database, a partially selected hierarchy group is displayed. However, any analyses performed on this group only include production from wells included in the filter. When you select the group for analysis, it is locked for other users, which is the same behavior as for an unfiltered database.

Shared and Private Group tabs

Both Shared Groups and Private Groups (custom groups) can be added to filters. In order for a custom group to be included in a filter, *all* wells in the group must also be in the filter. When a custom group is selected, all its wells are displayed as selected in the Hierarchy tab. If wells are deselected in the

Hierarchy tab, and the custom group remains selected, saving the change to the filter fails, and an error message is displayed in the Status Window. If you are modifying a filter created by another user, this can occur because you cannot see the private custom groups the other user has added to the filter.

Importing with filters

Project filters interact with imports from Harmony Enterprise as follows:

- If the well is new to Harmony Enterprise, it is imported and added to the active filter.
- If the imported well is already in Harmony Enterprise and exists in the active filter, Harmony Enterprise attempts to merge the well.
- If the imported well is already in Harmony Enterprise and does not exist in the active filter, Harmony Enterprise skips the import.
- If the well exists in the active filter, but is not imported, Harmony Enterprise skips the well.

Project filters interact with imports from files (everything except *.harmony) as follows:

- If the well is new to Harmony Enterprise, or is already in Harmony Enterprise and does not exist in the active filter, it is imported as a new well, and is added to the active filter.
- If the imported well is already in Harmony Enterprise and exists in the active filter, Harmony Enterprise attempts to merge the well.
- If the well exists in the active filter, but is not imported, Harmony Enterprise skips the well.

Query Wells dialog box

You can access this dialog box by clicking the **Query Wells** icon in the Entity Viewer - Custom's toolbar (either the Private Groups or Shared Groups tab).

In this dialog box, you can query wells using attribute data, and your queries are saved as custom groups. To limit the scope of your results, well queries use the criteria in your project filters.

Each query includes one or more query statements, and each query statement includes a property, an operator, and a value. The property corresponds to a specific kind of information in the database, the operator is the logical evaluation you want to perform on the property, and the value is what you use to make the logical evaluation. For example:

Property	Operator	Value
Entity Header	Equal	Well 1
DTOP FORMATION (TVD)	Between	500 and 15,000
Display Name Format	DLS	100/13-076-12W6/00
Spud Date	Calendar	07/22/2016

There are four different property types:

- Text — has three different operators: equals, contains, and starts with. Note that you can paste a list of items in the text field.
- Number — has four different operators: equals, greater than or equal to, less than or equal to, and between.
- Selectable values — select from a drop-down list.
- Date — has the same operators as numbers, plus you can select a date from a calendar.

Note: You can also have properties for custom attributes. If your query has attributes with units (for example, cumulative gas production), these units correspond to what you have set on the main toolbar using the Toggle Units icon (that is, metric or field units).

Attributes pane


This pane displays all of the available attributes from the database.

To create a query, select the attributes you want to search for from the tree structure, and then refine them on the right-side. For example, if you select Province / State, your operators are Equals, Contains, or Starts with. You could select Equals from the drop-down list, and then type Alberta in the field below. To continue, click the **Add** button. Your query is displayed in the main pane.

Main pane

In this pane, you can refine your query with these operands:

- **NOT** (top right corner) — the inverse / opposite of all the query items below. For example, display wells that are not in Alberta, and basins that do not begin with the letter "a" (applies the OR condition). If you select the NOT checkbox at the top and a NOT checkbox within the query below, the effect is to clear the NOT condition.
-  **DELETE** — either of the delete icons deletes the query item.
- **CHECKBOX** — to enable a query item, click the box, and a checkmark is displayed. To disable a query item, click the box, and the checkmark is cleared.
- **AND** — includes other queries. For example, display wells that are in Alberta and have basins that start with the letter "a".
- **OR** — includes one query or the other (less restrictive than AND). For example, display wells that are in Alberta, as well as basins that start with the letter "a".
- **NOT** — the inverse / opposite of a query. For example, display wells that are not in Alberta, and basins that do not begin with the letter "a".

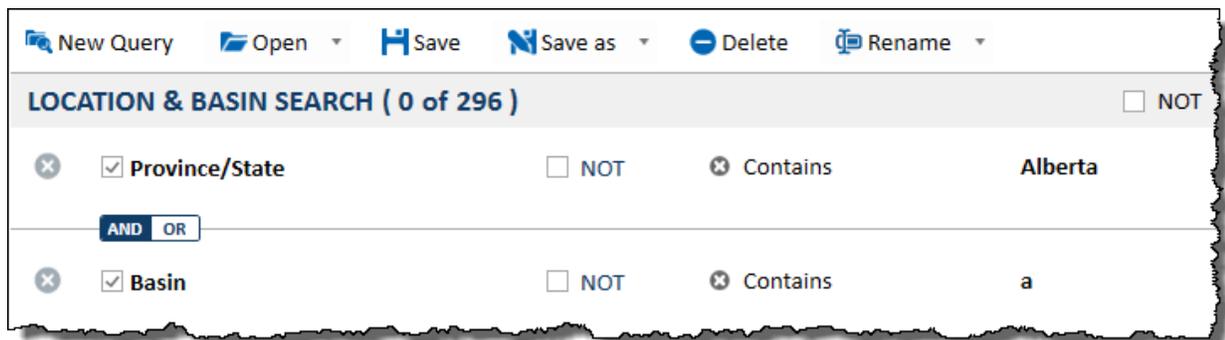

Icons

These icons are at the top of the main pane:

- **New Query** — resets your existing query, so you can start a new one.
- **Open** — select queries from your saved custom groups. When you open a query, your results are updated with any database changes that occurred after the last time you saved this query.

- **Save** — saves your query as a custom group in the Entity Viewer - Custom pane. When you save a query, your results are updated with any database changes that occurred after the last time you saved this query.
- **Save as** (visible after you have a saved query) — creates a copy of your query. Type a new name for the query you have open.
- **Delete** (visible after you have a saved query) — deletes the query you currently have open. You are prompted to confirm the deletion.
- **Rename** (visible after you have a saved query) — type a new name for the query you have open.

Preview pane

In this pane, the wells that dynamically match your query are displayed, and the attributes that are used in the query are displayed as columns in a table.

By default, the Display Name matches your display in the Entity Viewer - Hierarchy pane (for example, well name, DLS, API, etc.). Note that clicking column headers sorts the column alphanumerically, even for columns with numerical values (that is, the Display Name is used to sort numerical columns).

Preview			
	Display Name	Cumulative Gas Production (MMscf) ▲	Primary Fluid
	141/02-27-033-25W3/00	1021	Gas
	ARBALEST 33-03H	1024	Gas
	ARBALEST 25-14H	1028	Gas

Reference Dates dialog box

In this dialog box, you set the effective date for reserves evaluation, and you can access it by clicking the **Reference Dates** icon () on the main toolbar.

Toolbar

This dialog box has these items on its toolbar:

-  **Add reference date**
 - **Add New Reference Date** — adds a reference date, by default, at the end of the current month.
 - **Duplicate from previous reference date** — adds a reference date with a copy of the analyses from the most-recent previous date. Cumulative volumes at the reference date are determined for the copied analyses using the precedence specified (IP-2P-3P or 2P-1P-3P).
-  **Remove reference date** — deletes the currently selected reference date .

Grid columns

The reference dates you add are listed in the table / grid and are shared between all users.

- **Date** — only the most recent date is editable by clicking the **Calendar** icon () . Note that after the **Save** button is clicked, the date specified gets committed and cannot be changed.
- **Active Date** — specifies which date is used when classifying analyses. Only one reference date can be specified as the Active Date. The chosen date is user-specific (it is *not* shared), and no date is selected by default.
- **View Analyses** — toggle the View Analyses checkboxes to show or hide analyses with a particular reference date.
- **Description** (Optional) — type a name for your reference date in the Description field.

Clicking **Save** closes all open analyses.

Results tab

The Results tab consists of three sub-tabs: the Results Viewer, Comparison Plot, and Reporting. (The Results Viewer opens when you click the Results tab.)

Results Viewer sub-tab

The Results Viewer has two buttons at the bottom of its pane: Grid View and Plot View.

Grid view

The Grid View displays attributes and results in a table / grid based on selections in the Entity Viewer - Hierarchy or Custom Groups panes. As you change selections, the grid columns are retained, but the entities and their analyses are updated.

The grid is empty until you select attributes and parameters to be displayed. Columns are added to the grid by selecting checkboxes from the tree structure on the left. After you have created a selection of columns in the grid and customized them, you can save it as a template by selecting **Save / Delete Template** from the drop-down list above the tree structure.

Clicking a column header sorts the table data by its attribute value, according to the same sorting rules MS Excel uses. For alphanumeric attributes, numbers are sorted first from left-to-right (instead of top-to-bottom), then special characters, and finally letters. Apostrophes and hyphens are ignored except when there is text with a hyphen. In this case, the text with the hyphen is sorted last. If you click a column header, and then press the **Ctrl** key, you can sort multiple columns at the same time. This is indicated by a sorting arrow in each of the columns.

On Stream	Last Known Record	Cumulative G...
DD/MM/YYYY	DD/MM/YYYY	MMscf
01/09/2001	01/02/2002	11
08/09/2002	10/10/2004	101
01/01/2001	01/01/2003	380
08/06/2004	07/06/2024	1196
01/06/1992	01/03/2006	10012
01/01/1985	01/10/2010	17374
01/01/1985	01/10/2010	18292

Plot view

The Plot View displays the axis parameters you select from the tree structure in a plot; you can plot attribute and result values to analyze relationships between input and output parameters. If you are only plotting attribute values, you do not need to perform an analysis. For a description of plot options, see [plot components](#).

To build the plot for the currently selected entity, select the parameters / datasets you want to display by selecting the appropriate checkboxes in the Results Viewer pane (tree structure). Or, you can drag-and-drop the parameters to the plot.


Tip: You can send your plot to a [comparison plot](#), by right-clicking it and selecting **Send Plot to Comparison Plot**, or you can right-click and select **Send Dataset to Comparison Plot**. For information on other options, see [plot options](#).

There are two plot types: cross plot and cumulative distribution function (CDF).

Cross plot

A cross plot displays data as a collection of points, each having the value of one variable determining the position on the horizontal axis, and the value of the other variable determining the position on the vertical axis. This is also known as a scatter plot. These plots are most commonly used for identifying trends or relationships between different variables.


Results can be added to the cross plot by clicking the checkboxes in the tree structure on the left, or by dragging results to the desired axis. Multiple results can be plotted on the y-axes, but only one result can be plotted on the x-axis at a time. (Date variables can only be plotted on the x-axis.)

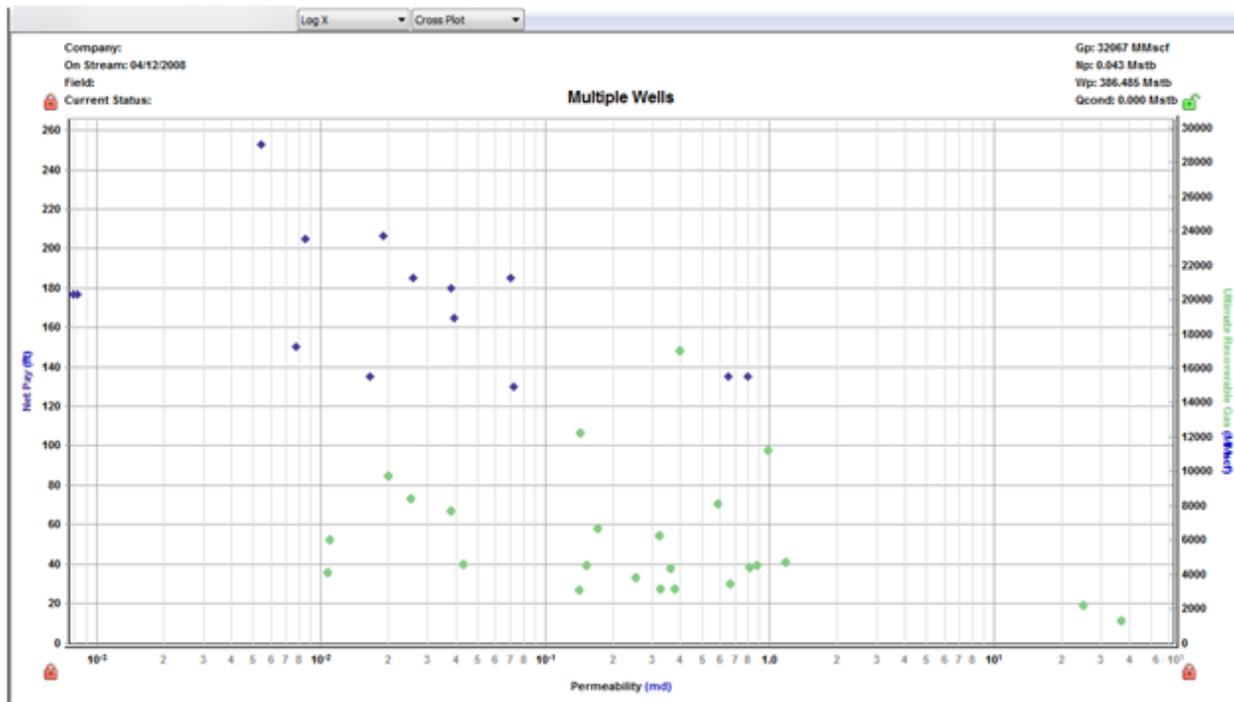

CDF

A CDF calculates the probability that a random variable with a given probability distribution is found at a value less than or equal to "x".

Only one result variable can be plotted on a CDF plot at a time, and results can only be added by clicking the appropriate checkboxes in the tree structure on the left. If a result variable is already selected, making another selection replaces the current selection.

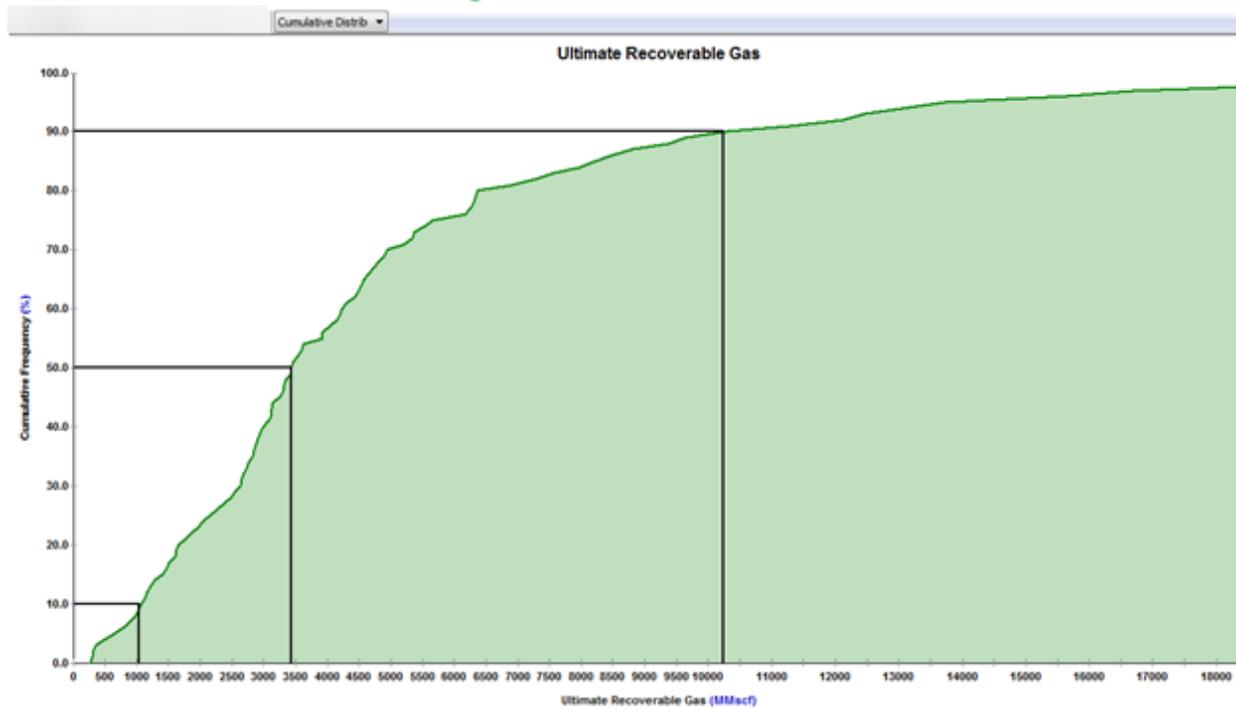

The black horizontal lines originating at cumulative frequencies of 10%, 50%, and 90% intersect the CDF curve, and then line up with the P90, P50, and P10 values of that dataset, respectively.

Toolbar

The important icons are described below. For a description of common icons, see [toolbars](#).

- (Grid View and Plot View) **Save / Delete Template** — is the default setting, but you can select you saved templates with the plot selections / datasets you prefer.
- (Grid View and Plot View)  **Analysis Filtering** — lists the analysis names that exist for the currently selected entities. Deselecting an analysis name removes all analyses of that name from the plot or grid for all entities. By default, all analyses associated with the selected entities are displayed.
- (Grid View) **Bulk Edit Declines** — you can edit decline parameters for all the selected wells as a group. For more information, see [bulk modify decline analyses](#).
- (Plot View)  **Search** — after specifying search criteria, the tree structure filters the results to only display parameters that match. The search considers both the description (for example, the initial rate) and nomenclature (for example, q_i) for each parameter.



- (Plot View) **Select data points** — you can select data points, and then to exclude any you do not want, right-click them (to deselect them).

Context menus (grid view)


Right-clicking the top left of your table lists these options:

- **Copy Grid** — copies the table to the clipboard.
- **Copy Grid + Headers** — copies the table and table headers to the clipboard.

Right-clicking table headers lists these options:

- **Precision** — select between decimal, scientific, or engineering.
- **Units** — select the units you want to display from the submenu.

After selecting one or more rows in your table, you can right-click the row numbers to the left and select **Select Subset**. This removes the other rows in the table, and this selection persists across Harmony Enterprise (for example, the Entity Viewer, GIS map, and so on).

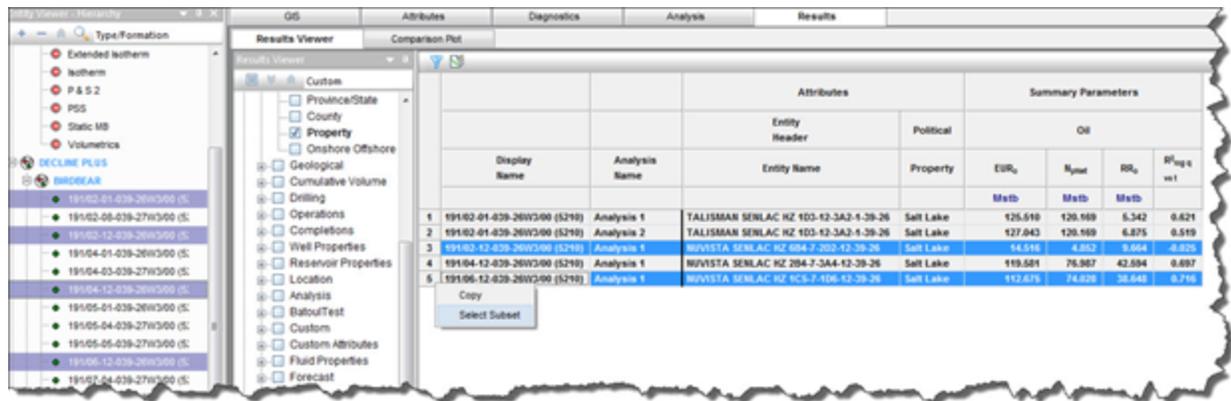

		Attributes		Summary Parameters			
		Entity Header		Oil			
Display Name	Analysis Name	Entity Name	Property	EUR ₀	N _{year}	RR ₀	NP ₁₀ vs 1
				MMb	MMb	MMb	
1	19182-01-039-2693500 (S219)	Analysis 1	TALJSMAR SENLAC HZ 103-12-3A2-1-39-26	125,510	129,169	6,342	0.621
2	19182-01-039-2693500 (S219)	Analysis 2	TALJSMAR SENLAC HZ 103-12-3A2-1-39-26	127,043	129,169	6,875	0.519
3	19182-12-039-2693500 (S218)	Analysis 1	WUVSTA SENLAC HZ 604-7-203-12-39-26	14,516	4,052	9,664	-0.025
4	19184-12-039-2693500 (S218)	Analysis 1	WUVSTA SENLAC HZ 294-7-3A4-12-39-26	119,581	76,987	42,694	0.697
5	19186-12-039-2693500 (S219)	Analysis 1	WUVSTA SENLAC HZ 9CS-7-106-12-39-26	112,676	74,626	36,646	0.716

By right-clicking a table cell, you can copy / paste the table cell's contents.

Comparison plot sub-tab

In the Comparison plot, you can combine plots and/or datasets from many Harmony Enterprise plots. Comparison plots are static (a snapshot of a point in time), meaning that the plot does not change even if the source plot / dataset is modified. This can be useful to compare plots of slightly modified data-


sets or scenarios, and to compare analyses between entities. Each tab in the Comparison plot contains a separate plot.

Plots created within the Comparison Plot tab are user-specific, meaning they are not shared with other users. The plot and its axes and datasets can be customized, and these changes persist with each plot (such as line / symbol properties, axis title, color, and so on).

Toolbar

The unique icons are as follows:

-  **New Plot** — opens a new blank tab to the right of your existing tabs.
-  **Copy Plot to New Tab** — copies the content of your existing plot to a new tab.
-  **Paste Plot from Clipboard** — pastes the plot in the clipboard to the current tab. When an axis is added, if it has the same units as an existing axis, they are linked (default setting).
-  **Copy to Clipboard** — copies the plot on the current tab to the clipboard.
-  **Delete Current Plot** — deletes the current tab you are on.
-  **Add an Arrow Annotation** — adds an annotation arrow to the data point you click.

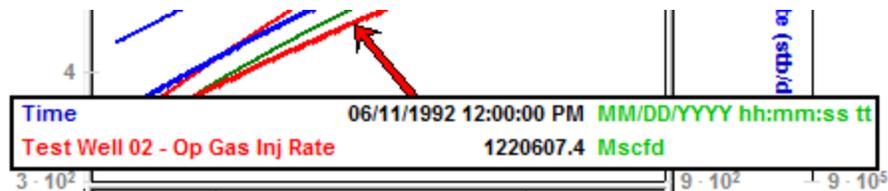

For a description of common icons, see plot toolbars.

Tab context menu

Right-clicking the tab below the toolbar lists these options:


- **New Plot** — opens a new tab to the right of the existing tabs.
- **Copy Plot to New Tab** — copies the content of your current plot to a new tab.

- **Paste Plot from Clipboard** — pastes the plot / dataset in the clipboard to the current tab.
When an axis is added, if it has the same units as an existing axis, they are linked (default setting).
- **Copy to Clipboard** — copies the plot on the current tab to the clipboard.
- **Delete Current Plot** — deletes the current tab.
- **Rename Tab** — opens the tab's name field where you can type a new name.

Plot context menu

Right-clicking within a plot lists these options:

- **Paste plot**
 - Enabled only if a plot is currently in the clipboard.
 - Pastes the plot in the clipboard of the current tab.
When an axis is added, if it has the same units as an existing axis, they are linked (default setting).
 - When any plot is pasted to the comparison plot, all datasets coming from the same plot are grouped together under a parent node in the Data Selection pane. By default, these nodes are the parent name to the originating well / group name, but they can be renamed (for example, to indicate where the data was originally copied from).

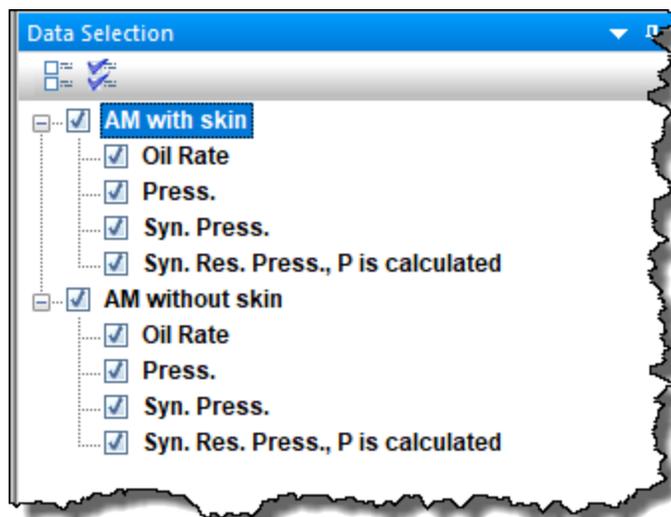

- **Paste dataset**
 - Enabled only if a dataset is currently in the clipboard.

- Pastes the dataset in the clipboard of the current tab.
When an axis is added, if it has the same units as an existing axis, they are linked (default setting).

Note: When you hover over the dataset in the plot, the tooltip has the name of the node, followed by the name of the dataset (for example, AM with skin: Oil Rate). You can rename the dataset by right-clicking the plot and selecting Customize Dataset, but the tooltip retains the name of the parent node.


For a description of common plot context menus, see [plot components](#).

Reporting sub-tab

In the Reporting sub-tab, report sets are created to print your specified worksheets using the Report Format you select. Report sets are database specific, and are shared between users connecting to the same database, with the last-saved action persisting. Each report set can include multiple items with no hard limit. The report set and its meta-data are automatically saved when you navigate away.

Note: Reports of plot and analysis parameters have been designed to fit up to nine analyses on the first page, and additional analyses are printed on subsequent pages.

Clicking the **Print** or **Preview** buttons prints the active report set for the entities selected (wells and groups).

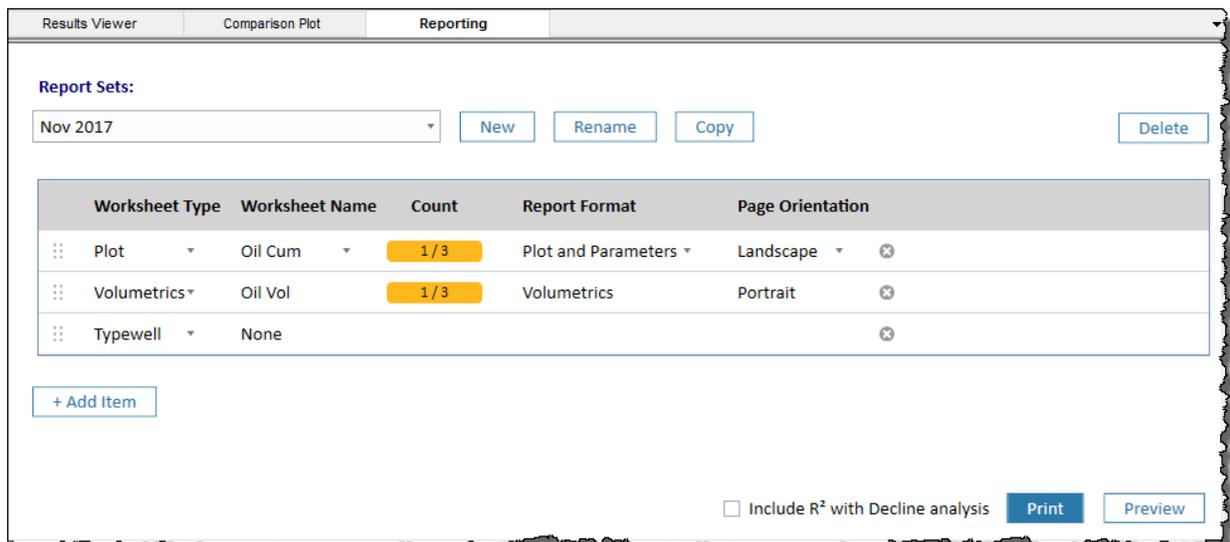

The screenshot shows the 'Reporting' sub-tab interface. At the top, there are tabs for 'Results Viewer', 'Comparison Plot', and 'Reporting'. Below the tabs, the 'Report Sets' section is visible, with a dropdown menu set to 'Nov 2017' and buttons for 'New', 'Rename', 'Copy', and 'Delete'. A table lists the items in the report set:

Worksheet Type	Worksheet Name	Count	Report Format	Page Orientation
Plot	Oil Cum	1 / 3	Plot and Parameters	Landscape
Volumetrics	Oil Vol	1 / 3	Volumetrics	Portrait
Typewell	None			

Below the table is a '+ Add Item' button. At the bottom right, there is a checkbox for 'Include R² with Decline analysis' and buttons for 'Print' and 'Preview'.

If you select multiple entities in the Entity Viewer, a subset of the selection may not have the specified worksheet. If this happens, a warning is displayed to the right of the Worksheet Name column. In this example, 13 of the 14 entities have the specified worksheet name. In the same manner, errors are also displayed to the right of the Worksheet Name column.

Worksheet Type	Worksheet Name	Count	Report Format	Page Orientation
 Plot	OGW vs. t	13 / 14	Plot and Parameters	Landscape

These items are defined as follows:

Report Sets — select your previously saved report sets from the drop-down list. If you have not created a report set yet, this drop-down list is blank.

New button — type a name for your report set.

Rename button — type a new name for the currently selected report set.

Copy button — creates a copy of the currently selected report set. Type a unique name for this copied report set.

Delete button — deletes the currently selected report set. You are not prompted to confirm the deletion.

 button — enables you to rearrange rows in your table by dragging-and-dropping.

Worksheet Type column — select Forecast, Plot, Typewell, or Volumetrics.

Note: The reporting feature only supports worksheet types that are created with the Harmony Forecast™ license. Additionally, when you select Plot, worksheets for Decline, Ratio Analysis, or Custom can be used.

Worksheet Name column — select from your list of worksheet names. If you do not have a worksheet for the Worksheet Type you selected, this column displays None. The Worksheet Name drop-down list is blank until you create a worksheet that corresponds with your Worksheet Type selection. If there is only one worksheet that corresponds with your Worksheet Type, it is automatically selected.

Report Format column — if you selected Plot from the Worksheet Type drop-down list, you can select Plot, Parameters, or Plot and Parameters from this drop-down list. Otherwise, this column is not editable because only one report format is supported.

Page Orientation column — select either Portrait or Landscape. For Plot and Typewell worksheets, the default orientation is Landscape; otherwise the default is Portrait.

✕ **Delete** icon — deletes the currently selected item / row in the table. Note that this icon is only visible after you have added at least one item in the Report Set table.


+ **Add Item** — adds a table row where you can specify your Worksheet Type, Worksheet Name, Report Format, and Page Orientation, by selecting from the drop-down lists.

Include R² with Decline analysis — click this checkbox to include the R² parameter in your reports for Report Formats set to Parameters or Plot and Parameters.

Print — prints the currently selected report set. Entities are printed in the same top-to-bottom order as the Entity Viewer (Hierarchy or Custom), and worksheets for an entity are printed in the same order as the report-set table. Plots are formatted as they look in the Analysis tab.


Preview — opens a Preview window where you can adjust your view, page setup, and print options for the currently selected report set. Entities are displayed in the same top-to-bottom order as the Entity Viewer (Hierarchy or Custom), and worksheets for an entity are displayed in the same order as the report-set table. If you open and close the Preview window, when you open it again, it opens to the last page where you left off.

Tip: (*Windows 7*) If your Preview window opens without a Close Window button, make sure that the **Enable desktop composition** option is deselected in your Performance Options dialog box (see your Windows help for more information).

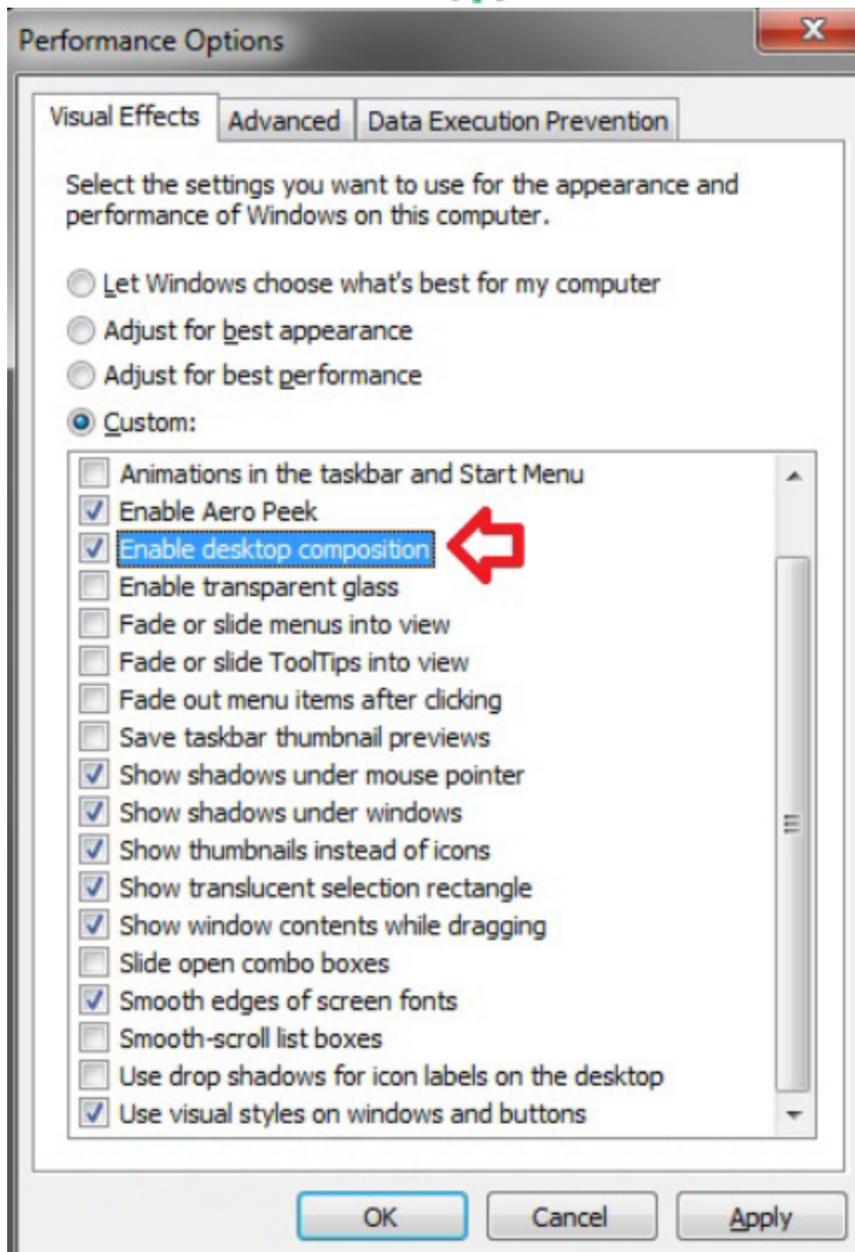

Bulk modify decline analyses


This feature is used to change selected decline analysis parameters for multiple entities simultaneously. By clicking the **Bulk Edit Declines** icon (📄) on the Results Viewer - Grid View toolbar, you can apply changes to all the entities selected in the Entity Viewer. (If any filters have been applied in the table / grid, only the displayed analyses are modified.)

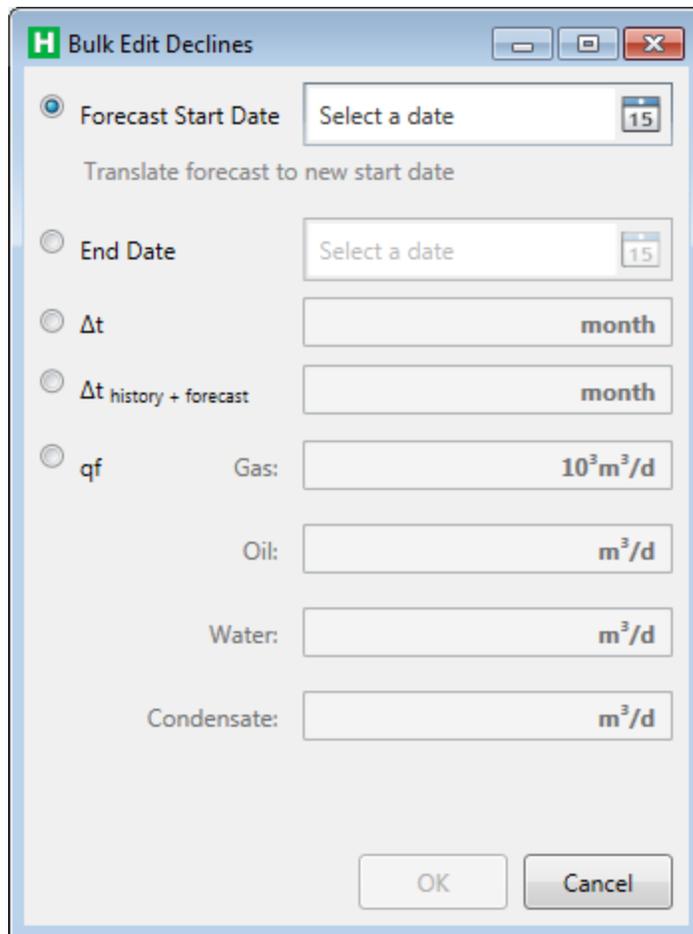

Tip: A brief description for each of the options is displayed after you click the option.

The following parameters are available:

- **Forecast Start Date (FSD)** — changes the FSD for all declines to the input date. The decline forecasts are shifted in time to the new start date, but the decline parameters remain unchanged. When a decline forecast has a reserves classification, the FSD cannot be set earlier than the reference date.

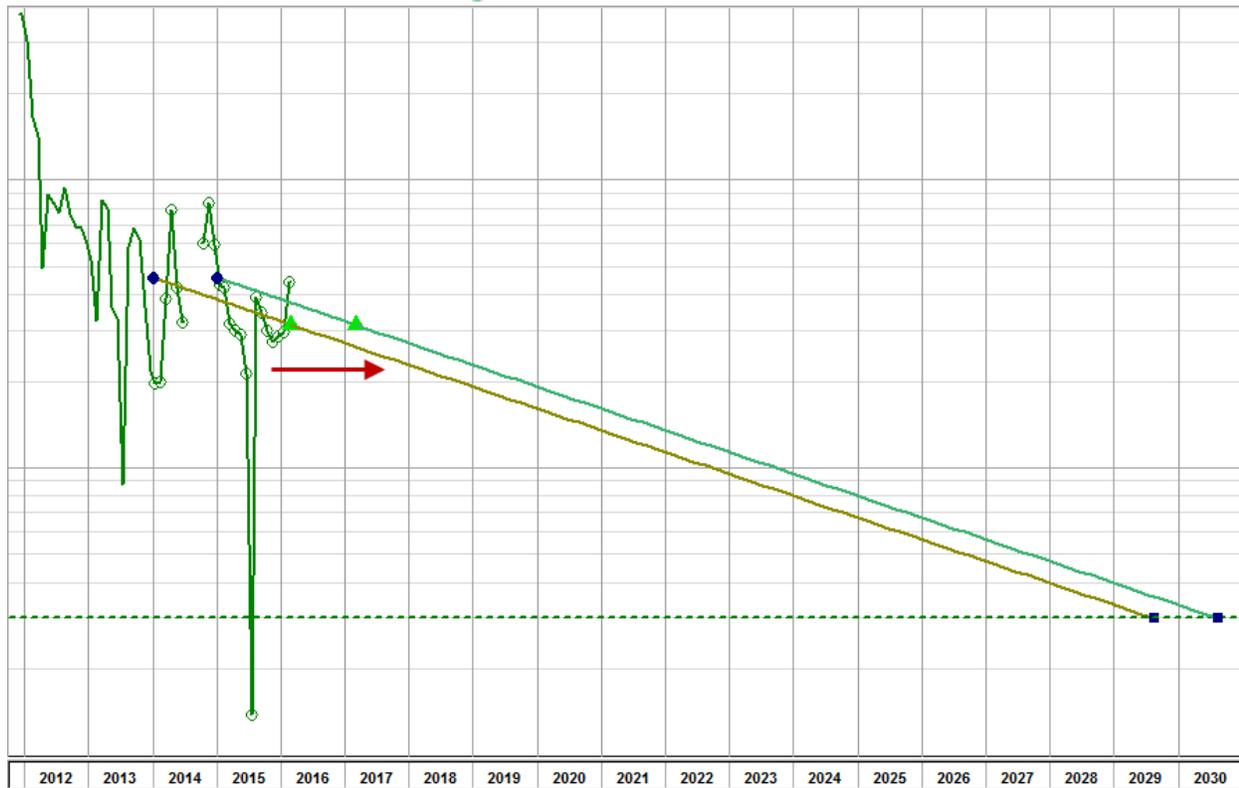

- **End Date** — changes the end date of the decline forecast to the input date. The decline forecast is truncated or extended to the new end date, and the abandonment rate is adjusted to match. Additionally, there is an option to prevent the end date from being extended.
- **Δt** — changes the duration of the forecast to the specified number of months. The decline forecast is truncated or extended to the new duration, and the abandonment rate is adjusted to match. Additionally, there is an option to prevent the forecast from being extended. This is useful in order to "bulk set" declines that end at the earlier of an abandonment rate or end date. This is done by creating declines with the abandonment rate, and then bulk applying the delta t to the forecasts.
- **Δt history + forecast** — changes the duration of the total duration (historical time and forecast) to the specified number of months. The decline forecast is truncated or extended to the new end date, and the abandonment rate is adjusted to match. Additionally, there is an option to prevent the forecast from being extended.
- **q_f** — changes the abandonment rate of the forecast to the specified rate(s). The decline forecast is truncated or extended to the new abandonment rate, and the end date is adjusted to match. If declines for multiple fluid types are displayed / selected, only type values for the fluid types to be changed. Any empty cells are left alone.



Role-based security


Role-based security (RBS) provides you with the ability to limit access to certain functions in Harmony Enterprise, based on permissions that are associated with assigned roles.

Note: This functionality does *not* apply to .hldb files.


Depending on your role in Harmony Enterprise, you are able to do various things:

- **Super user** — represents the highest level of authority and their role definitions cannot be altered. This user can create role permissions, and assign role definitions to other users.
- **Default** — (Well Security: on) has full access to Harmony Enterprise, *except* for these areas: importing wells (importing a file, importing from a database, importing from Harmony Enterprise, and importing from a local Harmony Enterprise database), performing an IHS update, deleting wells in the Hierarchy pane, modifying RBS, modifying editors, and Well Security settings.
- **Default** — (Well Security: off) has full access to Harmony Enterprise, *except* for these areas: importing wells (importing a file, importing from a database, importing from Harmony Enterprise, and importing from a local Harmony Enterprise database), performing an IHS update, deleting wells in the Hierarchy pane, and modifying RBS settings.
Tip: Importing wells and performing an IHS update are tasks represented by the menu under the first icon in the main toolbar.
- **User-defined roles** — has full access to the rest of Harmony Enterprise along with a combination of any of the following four permissions: manage Security settings, import wells / update wells from IHS Markit, delete wells, modify editors, and modify security attributes (if Well Security is enabled).


Role-based security is set in the [Options dialog box](#), under the [Role-based Security Settings node](#). To determine your permissions for your current session, click the **Enable / Disable** node. Any activities that are not allowed are displayed in red text under the Activities Not Permitted heading.

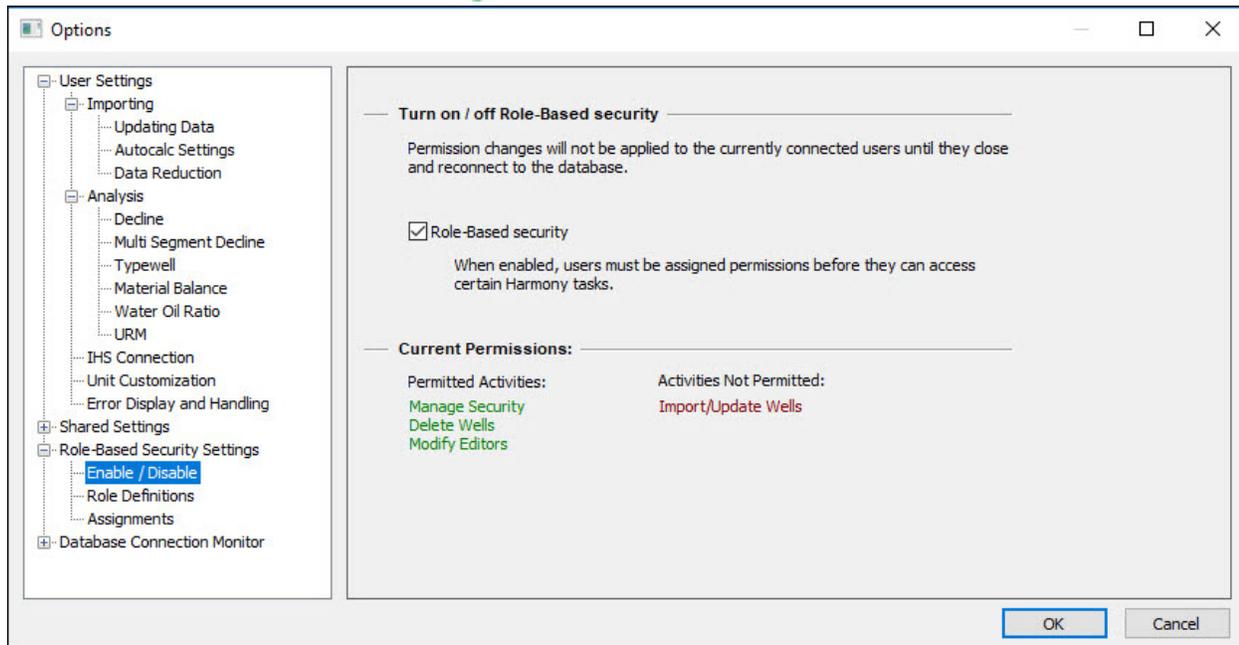

After clicking the **Role Definitions** node, you can add or remove roles. After you have added a role, you can rename it by double-clicking the role name in the Roles pane. (If you do not have permission to modify roles, the Permissions pane is grayed-out.)

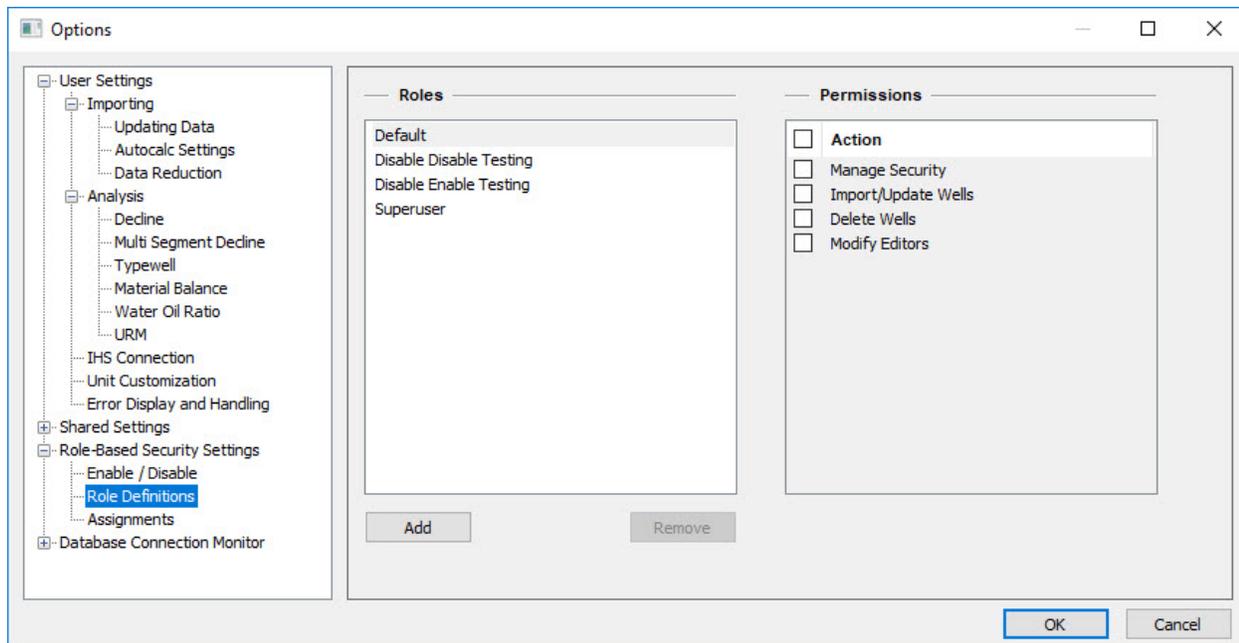

After clicking the **Assignments** node, you can assign users to various roles by clicking the check-boxes for the access you want to grant. Note that the superuser role cannot be assigned from the dialog box, and therefore it is grayed-out.

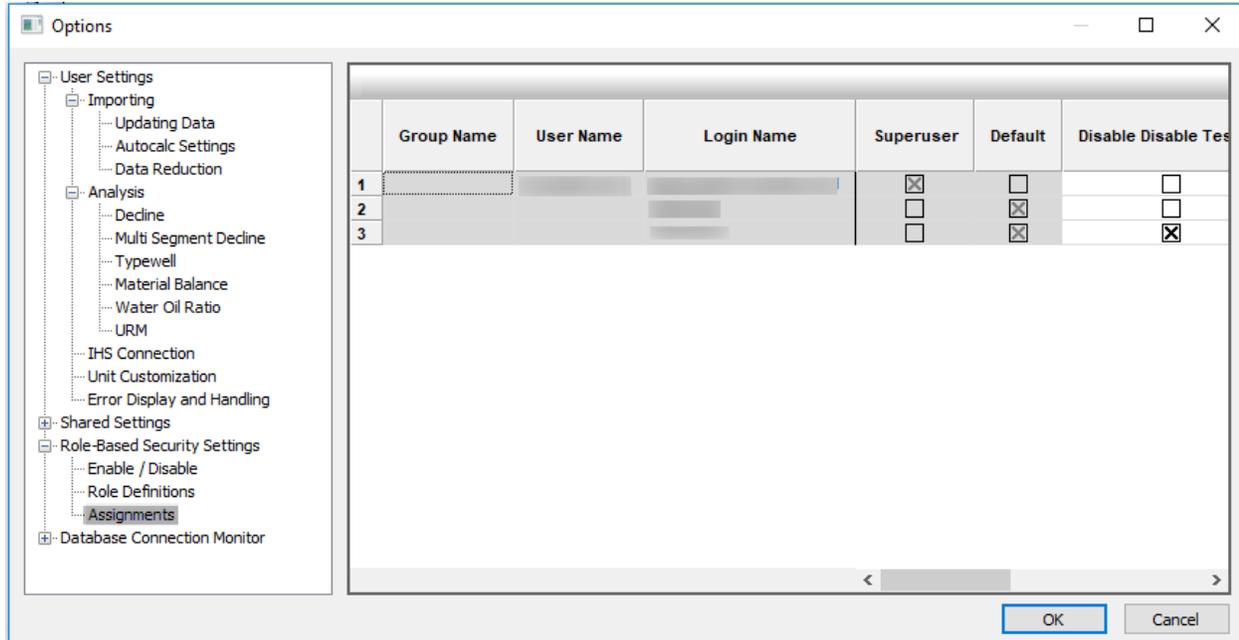

The permission you have for a given session remains the same, regardless of whether another user has made modifications to your permissions. To see any permission changes another user has made, requires Harmony Enterprise to be closed and re-opened. These changes persist after you click **OK**. Changes made by a user to their own role or role assignments (when they have the "modify role" permission) take effect immediately after they click OK.

Note: If another user is updating user roles and assignments at the same time, you may need to close the project, reconnect, and try again. If this is the case, an error message is displayed in the Status Window.

Scenarios

With scenarios, you can create a copy of your parent well, so you can perform "what if" scenarios without risking your original data.

Scenarios are created in the Entity Viewer - Hierarchy (toolbar or by right-clicking), and copy the following information:

- attributes
- properties
- wellbore data
- static pressures
- analyses

Note: While you are working with a scenario, it is locked, and other users cannot access it. Even if you have default role-based security with Editors disabled, you can still edit your scenarios.

Core data in the Production editor is read-only (that is, volumes and casing / tubing pressures are kept from the parent well). However, you can still calculate your own sandface pressures by using different properties and a different wellbore configuration.

Importing

When importing new production data, the parent well and all scenarios underneath it are updated. After an import, the other scenarios are static and out-of-date. For sandface pressure updates, you need to click the **Calculate Sandface Pressure** icon () in the Production editor's toolbar for all scenarios.

Note: If you are using the Import Auto-calculation option to automatically calculate sandface pressures, this function only applies to the parent well.

Tables / grids

Harmony Enterprise often displays data in tabular form and uses functionality similar to Excel. For example, you can click-and-drag the bottom right corner of a table cell to copy your data to a range of rows below. The cursor changes to a large X, and you drag the table cell contents to the next row or rows.

	Start Date	End Date	Gas Volume	Water Volume
	MM/DD/YYYY	MM/DD/YYYY	MMscf	scf
1	02/01/1992	03/01/1992	1.828	
2	03/01/1992	04/01/1992	16.497	
3	04/01/1992	05/01/1992	6.034	
4	05/01/1992	08/01/1992		
5	08/01/1992	09/01/1992	0.000	
6	09/01/1992	10/01/1992		

Note: For a description of common table icons, see [table toolbars](#).

To change the height and width of rows and columns, drag the boundary between the header cells.

	P	ψ	Z	B _g	ρ _g	c _g
	psi(a)	10 ⁶ psi ² /cP		ft ³ /scf	lb/ft ³	1/psi
1	0.00	0.000				
2	10.00	1.779e-02	0.999	2	0.03	1.00e-01
3	20.00	4.449e-02	0.997	1	0.06	5.01e-02
4	30.00	8.905e-02	0.996	1	0.09	3.35e-02
5	40.00	1.515e-01	0.995	0	0.12	2.51e-02
6	50.00	2.319e-01	0.993	0	0.15	2.01e-02
7	60.00	3.303e-01	0.992	0	0.18	1.68e-02
8	70.00	4.468e-01	0.991	0	0.21	1.44e-02

To move a column to a new location, click-and-drag the column you want to move. The cursor changes to a gray box with a checkmark, and when you release your mouse button, the column moves to its new location.

	Start Date	End Date	Water Volume	Gas Volume
	MM/DD/YYYY	MM/DD/YYYY	stb	MMscf
1	02/01/1992	03/01/1992	0.0	1.828
2	03/01/1992	04/01/1992	0.0	16.497
3	04/01/1992	05/01/1992	0.0	6.034

Context menus

Right-clicking an entire table or columns in a table, display different context menus.

Entire table

To copy an entire table, right-click the top-left cell of a table and select one of these options:

- **Copy Grid** — copies the table to the clipboard.
- **Copy Grid + Headers** — copies the table and table headers to the clipboard.

	p	ψ	Z	B _g	ρ _g	c _g
				ft ³ /scf	lb/ft ³	1/psi
1						
2			0.999	1.63e+00	0.03	1.00e-01
3	20.00	4.449e-02	0.997	8.15e-01	0.06	5.01e-02
4	30.00	8.905e-02	0.996	5.43e-01	0.09	3.35e-02
5	40.00	1.515e-01	0.995	4.06e-01	0.12	2.51e-02
6	50.00	2.319e-01	0.993	3.25e-01	0.15	2.01e-02
7	60.00	3.303e-01	0.992	2.70e-01	0.18	1.68e-02
8	70.00	4.468e-01	0.991	2.31e-01	0.21	1.44e-02


Columns

To copy one or more columns of a table, select your columns by clicking their headers, and then right-click and select **Copy**.

	p	ψ	Z	B_g	ρ_g	c_g
	psi(a)	10 ⁶ psi ² /cP		ft ³ /scf	lb/ft ³	1/psi
1	0.00	0.000				
2	10.00	1.779e-02	0.999	1.63e+00	0.03	1.00e-01
3	20.00	4.449e-02	0.997	8.15e-01	0.06	5.01e-02
4	30.00	8.905e-02	0.996	5.43e-01	0.09	3.35e-02
5	40.00	1.515e-01	0.995	4.06e-01	0.12	2.51e-02

After you have copied your content from a table, you can paste it to another application (for example, Excel).

To change the precision and/or units displayed in a column, right-click the numeric columns' headers (the columns displaying units in green text).

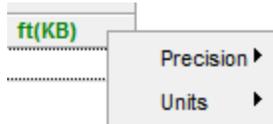

- **Precision** — select between decimal, scientific, or engineering.
- **Units** — select the units you want to display from the submenu.

	p	ψ	Z	B_g	ρ_g	c_g
	psi(a)	10 ⁶ psi ² /cP		ft ³ /scf	lb/ft ³	1/psi
1	0.00	0.000				
2	10.00	1.779e-02	0.999	1.63e+00	0.03	1.00e-01
3	20.00	4.449e-02	0.997	8.15e-01	0.06	5.01e-02
4	30.00	8.905e-02	0.996	5.43e-01	0.09	3.35e-02
5	40.00	1.515e-01	0.995	4.06e-01	0.12	2.51e-02
6	50.00	2.319e-01	0.994	3.25e-01	0.15	2.01e-02
7	60.00	3.303e-01	0.993	2.70e-01	0.18	1.68e-02
8	70.00	4.468e-01	0.992	2.31e-01	0.21	1.44e-02
9	80.00	5.812e-01	0.991	2.02e-01	0.24	1.26e-02
10	90.00	7.337e-01	0.990	1.79e-01	0.28	1.13e-02
11	100.00	9.042e-01	0.989	1.61e-01	0.31	1.01e-02
12	110.00	1.093e+00	0.986	1.46e-01	0.34	9.23e-03

Note: Changing the precision only affects the way values are displayed. All of the calculations use exact values, even if the displayed value looks rounded-up.


Worksheets

Worksheets are plots or tables of entity data and analyses. Worksheets are related to the currently selected entity for analysis (a well or group), and each worksheet can be used for one or many analyses. You must add a worksheet before you can analyze an entity.

The New Worksheet tab opens when you select an entity for analysis, or click the New Worksheet tab.

An important distinction exists between Forecast worksheets and Reservoir worksheets.

- Forecast worksheets support multiple analyses and these analyses can be displayed on multiple worksheets (*many:many relationship*). With forecast worksheets, click your worksheet, and then select from the context menus (if applicable).
- Reservoir worksheets support one analysis and this analysis is displayed on one worksheet (*1:1 relationship*). With reservoir worksheets, click your reservoir, and then select the fluid, analysis, and model (if applicable).

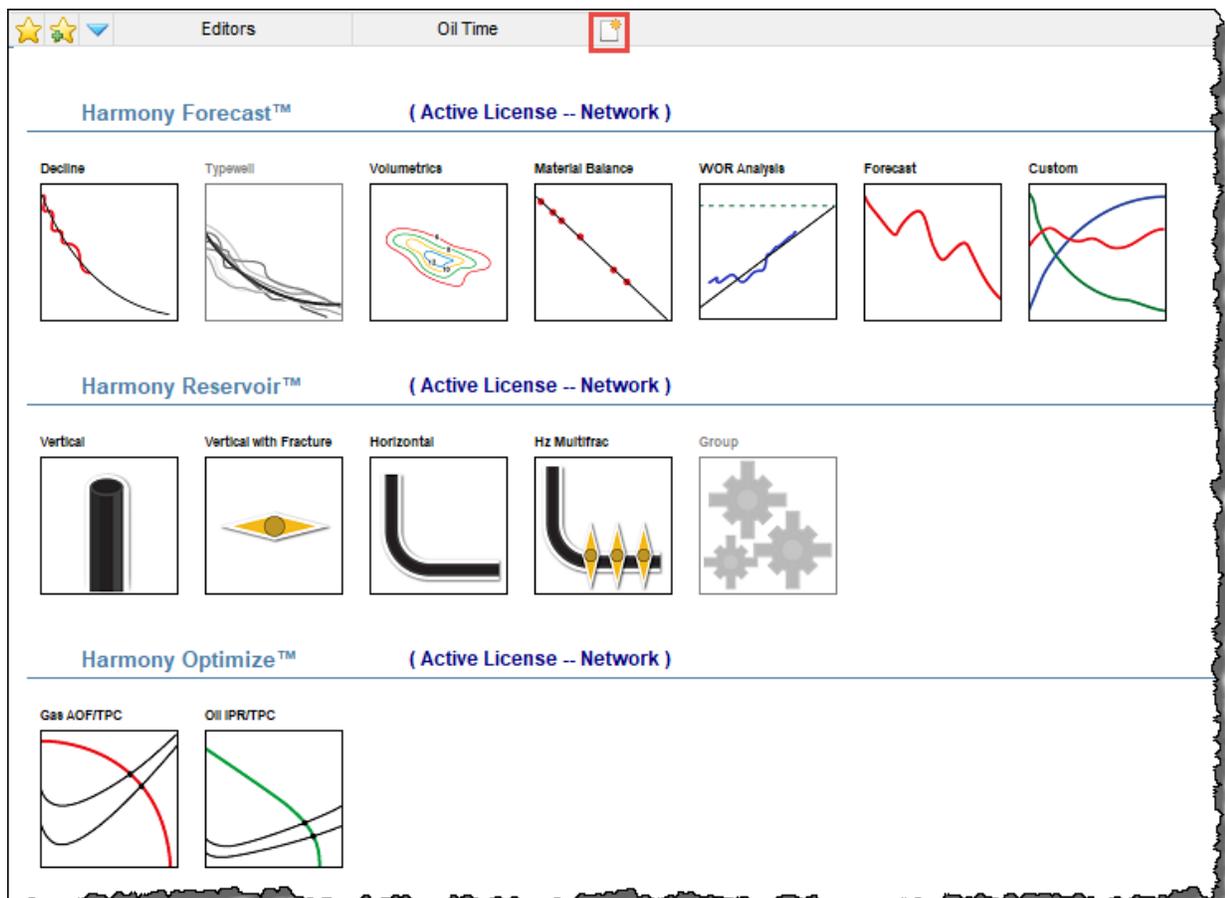

For group analyses, (for example, typecurve, FMB), click **Group** and select your worksheet from the context menu.

Tip: After working on your analysis, you can click another tab and your work is automatically saved. If you want to export specific wells and later import them back into the database, see [export to an .hldb file](#).

Harmony Enterprise supports the following worksheets:

Harmony Forecast™ License	Harmony Reservoir™ License (links to various analyses)	Harmony Optimize™ License
Decline	Typecurve	Nodal
Typewell	FMB	
Volumetrics	URM	
Material Balance	Analytical	
WOR Analysis	Numerical	
Forecast	Probabilistic	
Custom	Multi-well	

Decline worksheet

Decline worksheets display the production data of a well using the selected plot options (such as, time or cumulative production for the x-axis). These worksheets can be used to add, display, and modify decline forecasts based on your production data. For more information, see the [analysis manager](#) and [plot selection pane](#).

Note: This worksheet works with your Harmony Forecast™ license.

In the decline category, you can select these plot types for gas, oil, water, and barrel of oil equivalent (BOE):

- **Rate Time** — production rates are plotted against time on a semi-log plot
- **Rate Cum** — production rates are plotted against cumulative production on a coordinate plot
- **Cum Time** — cumulative production is plotted against time on a coordinate plot. Note that this is a read-only display and the decline cannot be modified on this plot.

Default decline worksheets can be modified in the [Plot Selection pane](#).


In the Analysis Manager, you can add numerical forecasts for gas, oil, or water.

You can also add condensate decline analyses (that is, [Arps](#), [multi-segment](#), [stretched exponential](#), and [Duong](#)) to your decline worksheet, but the procedure is different. For more information, see [analyzing a condensate decline analysis](#).

BOE

The BOE applies to wells and groups, and it is of interest because oil and gas are often produced together. The BOE is calculated as oil volume + gas volume / factor. This factor can be changed from the default value of 6.00 Mcf/bbl in the Production Calculations section of the Options dialog box (**Tools** menu, **Options**).

Important: This value is shared by all users, and updating this value affects new and existing analyses.

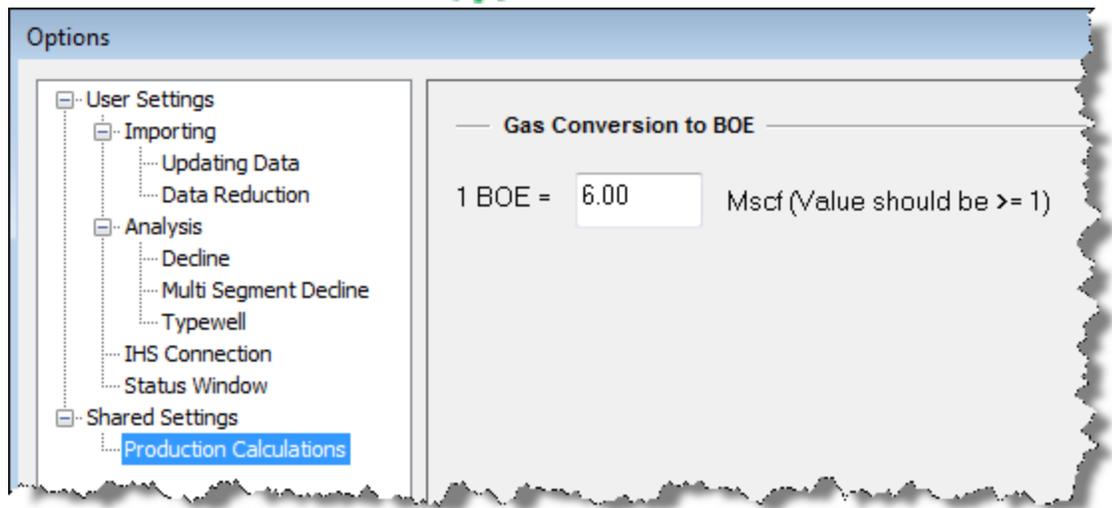

If you set this factor to less than one, an error message is displayed in the Status Window and the value resets to six.

Typewell worksheet

The typewell worksheet is used to view well-level production on a group of wells and calculate average performance. This can be used to create a forecast for wells with limited or no historical production based on a relevant group. A typewell worksheet can also be created and average performance determined for ratios.

Note: This worksheet works with your Harmony Forecast™ license.

You can add the following typewell worksheet types:

- Rate typewells:
 - gas
 - oil
 - water
 - BOE
 - condensate

- Ratio typewells:
 - CGR (condensate-gas ratio)
 - WGR (water-gas ratio)
 - GOR (gas-oil ratio)
 - WOR (water-oil ratio)

Note: The traditional decline analysis is available for each of the above rate typewells. The Ratio Trend is available for ratio typewells.

Note: Cumulative production is not viewable in the Plot Selection tab for ratios.

Plot toolbar


You can toggle different datasets by clicking these icons on the toolbar above the plot:

-  **Select a Best Fit range using the options listed** — see [best fit](#).
-  **Show / Hide Average rate** — by default, the average rate / ratio is shown. Click this icon to show / hide the average rate / ratio on the plot. The arithmetic average of all selected wells is determined in each period.
-  **Show / Hide Wells** — by default, all wells are shown.
- **P90 P50 P10 P90 / P50 / P10 rates** — by default, all these calculated datasets are hidden. Click the [P90](#), [P50](#), or [P10](#) icons to show / hide these various rates / ratios on the plot.
-  **Show / Hide Number of Producing Wells** — you can display the number of producing wells in each period.
-  **Append historical production with selected forecast** — you can use an individual well's historical production and forecasts to create a typewell forecast. This is only available for rate typewells.
-  **Color Management** — select from these options:
 - **All Grey** — displays all wells in a gray color.
 - **All Unique** — displays each well in a unique color.
 - **Color by Attribute** — opens a submenu where you can select a specific attribute. All wells with the same attribute appear in the same color.
-  **Settings** — select which rate calculations you want to display on the plot: All Rates or Producing Rates Only.
- **Plot drop-down list** — select your plot type from the drop-down list: log y, coordinate, log-log, or log x.

For a description of common icons, see [plot toolbars](#).

Best fit

There are several tools that you can use to create a "best fit" using the point-selection method. Selecting any of these options opens the Set Axis Ranges dialog box where you can define the portion of data to be used for the best fit.

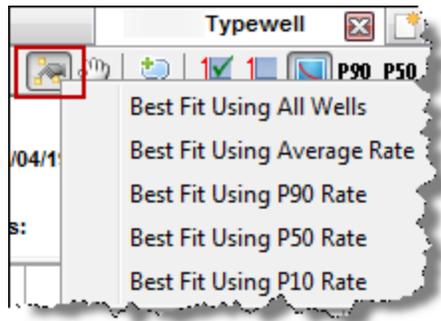

Plot Selection tab

The Plot Selection tab lists the options for your plot.

X-axis:

- **Normalized Time** — This option plots well data as cumulative time from 'time zero' (0 on the x-axis) rather than as dates. Time periods are displayed in increments of months or days. If the increments are mixed within the group, the lowest-resolution time period is used to ensure consistency. When the average line is calculated, each producing well's rate is averaged at each period.
- **Normalized Flowing Time** — This option is similar to normalized time, but all shut-in, missing, or blank periods are removed from each well's production history.
- **Cumulative Production** — Production volume is displayed based on volume produced per time period. (The period size is the one the data is imported in.) When creating the average well, all wells are aggregated to the lowest resolution period, and the average production volume and rate are determined for each period.
- **Resolution** — Toggle between Daily and Monthly.


Y-axis:

- **Rate** — This option displays the rates for each well in the group and uses these rates to create the average well's rate.
- **Rate per Attribute** — Well rates are normalized (that is, divided) by the value of the selected attribute. If the attribute is blank, the well's production history is not displayed.
- **Rate Type** — Toggle between Operated Rate and Calendar Rate.
- **Cumulative Production** — Production volume is displayed based on volume produced per time period. (The period size is the one the data is imported in.) When creating the average well, all wells are aggregated to the lowest resolution period, and the average production volume and rate are determined for each period.
Note that if you select this for your y-axis, the typewell becomes read-only.


- **Ratio** — This option displays the ratio for each well in the group and uses these ratios to create the average well's ratio.
- **Ratio per Attribute** — Well ratios are normalized (that is, divided) by the value of the selected attribute. If the attribute is blank, the well's production history is not displayed.

Wells tab

Use the Wells tab to synchronize well settings between typewell worksheets via the toolbar. In addition, you can change the start period of a well by entering a value in the Start Date Offset boxes, or by clicking the blue left- or right-facing arrows next to the boxes.

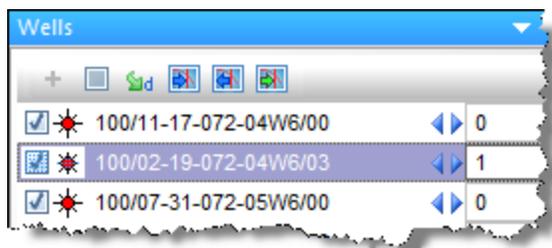

The number in the box corresponds to the time period in which production data starts for the well. (On a time plot, this is either months or days. On a cumulative plot, this is production volume produced in that time period. Therefore, a well with larger production volume moves more than a well with less production volume.)

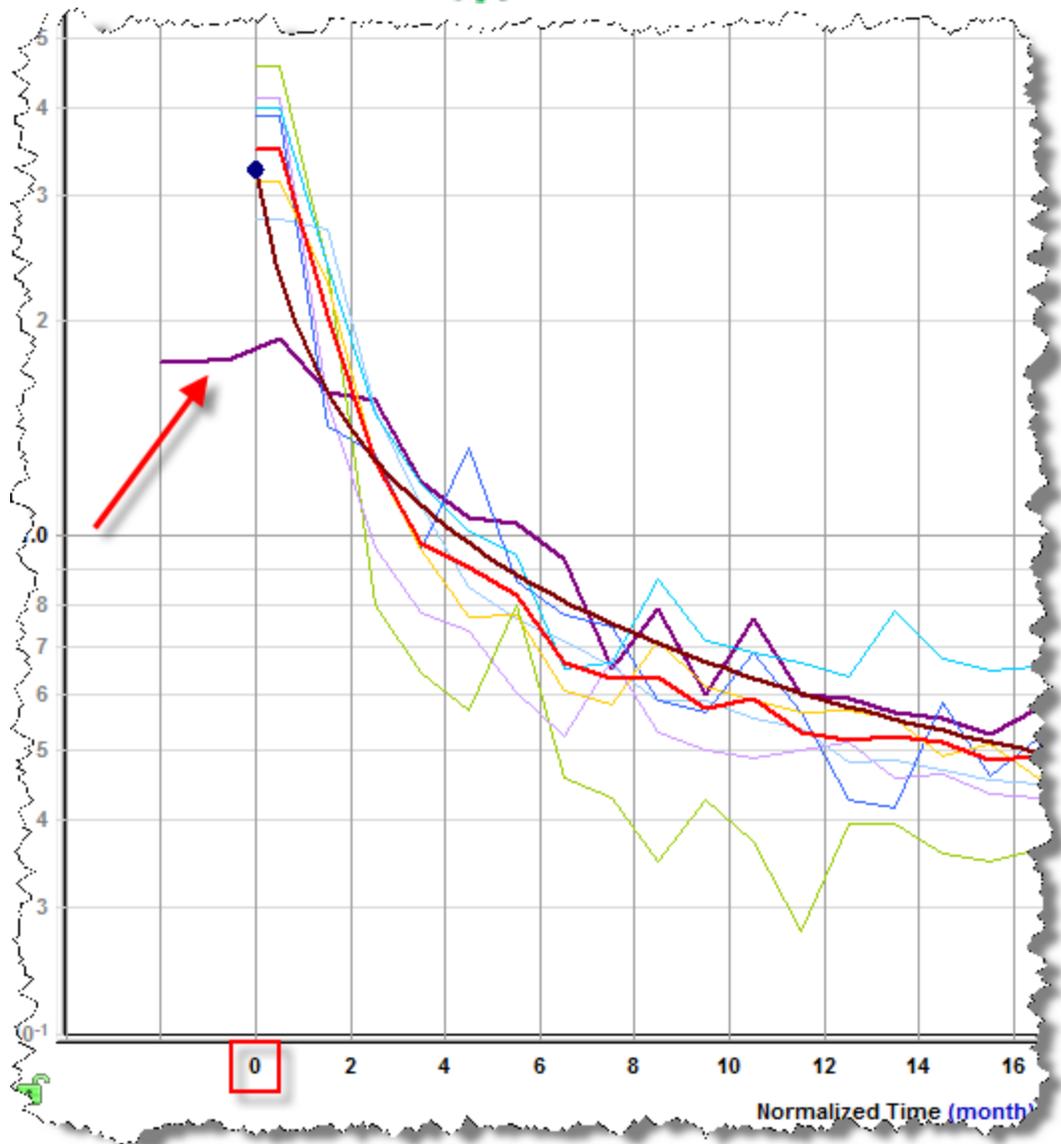

Anything to the left of time zero (0 on the y-axis) is not used for the calculated lines or the decline forecast.

Hovering over a well temporarily displays a thicker line for the associated dataset on the plot.

A selection can be made within the Wells tab, or on the plot. Selections are maintained between the Wells tab and the plot. A selected dataset is displayed with a thicker line to indicate that it is selected.

Wells can be selected in the Wells tab using standard selection behavior (including using the Ctrl and Shift keys). For more information, see selecting entities.

Clicking a dataset clears the existing selection, and then selects the new dataset. Pressing the **Ctrl** key while selecting a dataset adds / removes the dataset from the existing selection.

Toolbar

This tab has the following icons on its toolbar:

-  **Duplicate Selected into** — copies the selected wells, so you can paste these wells into a custom group.
-  **Check all / uncheck all** — selects or deselects all of the wells displayed on the plot
-  **Apply Selections from another Typewell Worksheet** — gets selections (selects the same wells) and spinner values (offset values that translate the rate history for a well) from another typewell worksheet in the same custom group.
-  **Set Start Date Offsets to Zero** — sets all well offsets to zero.
-  **Set Start Date Offsets to Peak Rate** — sets all well offsets to the well's peak rate – time zero for the well becomes the peak rate instead of the first period.
-  **Set Start Date Offsets to Specified Value** — opens the Shift Spinner Value dialog box where you can set your well offsets (positive values only). This moves the plot to the right (0 corresponds to the beginning of production data. You can also use the blue left- or right-facing arrows on the Wells tab.

Context menu

Right-clicking wells on this tab lists these options:

- **Duplicate Selected into Shared Custom Group** — copies the selected wells into a new or existing shared custom group.
- **Duplicate Selected into Private Custom Group** — copies the selected wells into a new or existing private custom group.
- **Move Selected into Shared Custom Group** — moves the selected wells into a shared custom group. Only available if the active group is a Custom Group.
- **Move Selected into Private Custom Group** — moves the selected wells into a private custom group. Only available if the active group is a Custom Group.

Analysis Manager tab

The Analysis Manager tab has an Analysis Manager pane and an Analysis Parameters pane. The Analysis Manager only shows typewell analyses, unlike other worksheets, which show all analyses while disabling ones that cannot be displayed on the plot.


Decline and multi-segment decline analyses displayed on the rate typewell worksheet have their forecast start dates matched to the start date of the first segment, and the forecast always starts at $t / Q = 0$.

Volumetrics worksheet

The volumetrics worksheet is used to view gas and oil volumetrics analyses. For more information, see the [volumetrics analysis](#).

Note: This worksheet works with your Harmony Forecast™ license.

Click to show / hide an example screenshot

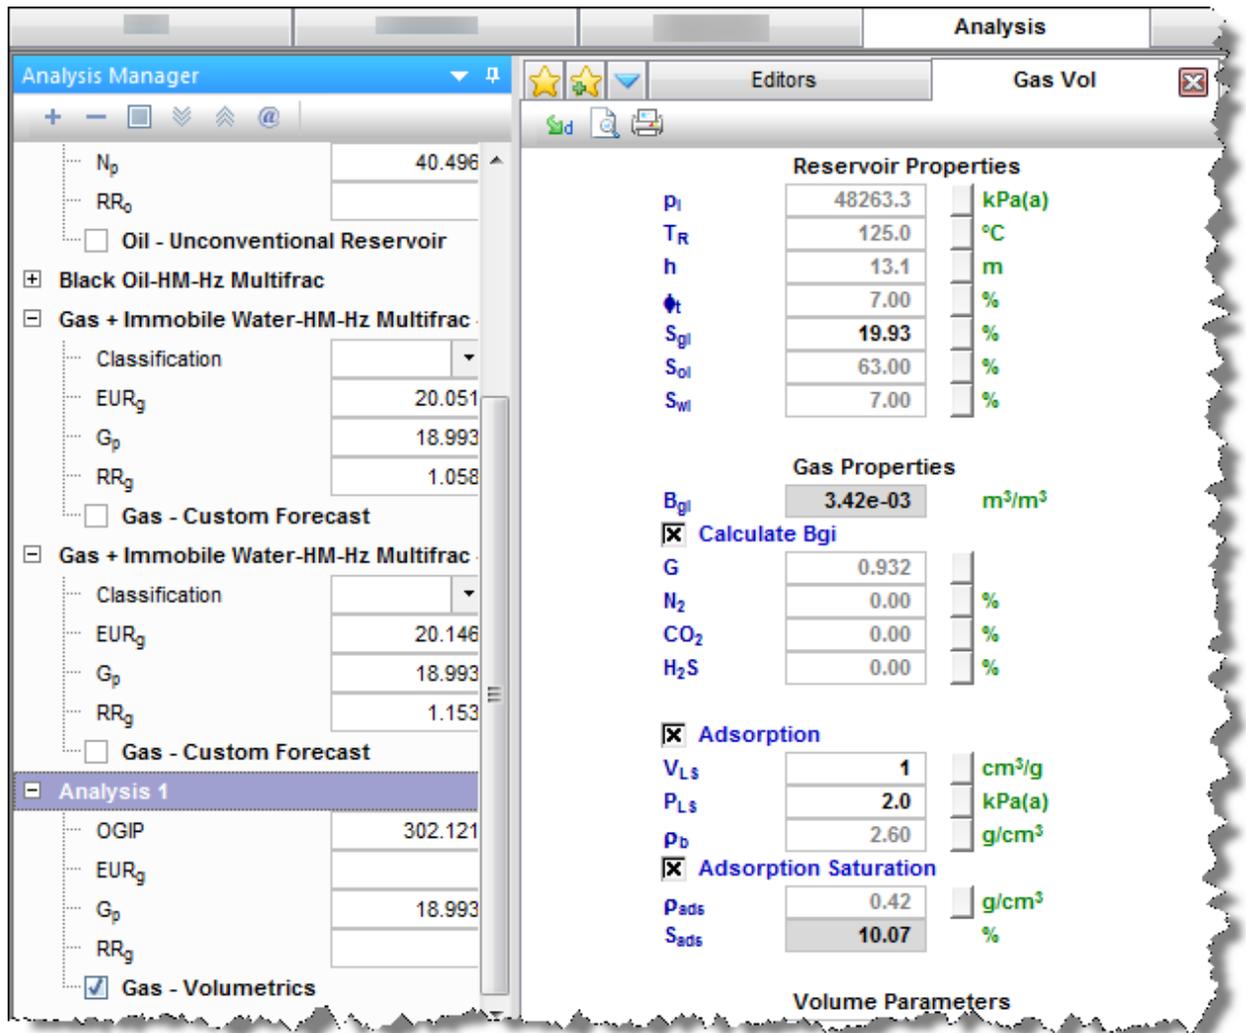

The screenshot displays the 'Analysis Manager' window on the left and the 'Gas Vol' worksheet on the right. The 'Analysis Manager' shows a tree view with the following components:

- Oil - Unconventional Reservoir
- Black Oil-HM-Hz Multifrac
 - Gas + Immobile Water-HM-Hz Multifrac
 - Classification: [Dropdown]
 - EUR_g: 20.051
 - G_p: 18.993
 - RR_g: 1.058
 - Gas - Custom Forecast
 - Gas + Immobile Water-HM-Hz Multifrac
 - Classification: [Dropdown]
 - EUR_g: 20.146
 - G_p: 18.993
 - RR_g: 1.153
 - Gas - Custom Forecast
 - Analysis 1
 - OGIP: 302.121
 - EUR_g: [Empty]
 - G_p: 18.993
 - RR_g: [Empty]
 - Gas - Volumetrics


The main workspace shows the following data:

Reservoir Properties		
P _i	48263.3	kPa(a)
T _R	125.0	°C
h	13.1	m
h _t	7.00	%
S _{gi}	19.93	%
S _{oi}	63.00	%
S _{wi}	7.00	%

Gas Properties		
B _{gi}	3.42e-03	m ³ /m ³
<input checked="" type="checkbox"/> Calculate B _{gi}		
G	0.932	
N ₂	0.00	%
CO ₂	0.00	%
H ₂ S	0.00	%

Adsorption		
<input checked="" type="checkbox"/> Adsorption		
V _{Ls}	1	cm ³ /g
P _{Ls}	2.0	kPa(a)
P _b	2.60	g/cm ³
<input checked="" type="checkbox"/> Adsorption Saturation		
P _{ads}	0.42	g/cm ³
S _{ads}	10.07	%

Volume Parameters

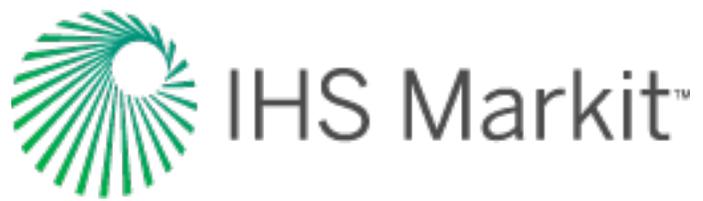

Material Balance worksheet

The Material Balance worksheet is used to view gas material balance analyses. For more information, see the [materials balance analysis](#).

Note: This worksheet works with your Harmony Forecast™ license.

WOR Analysis worksheet

With water-oil ratio (WOR) worksheets you can use oil ratios vs. cumulative oil or vs. time, to forecast oil and water rates in a high-water cut. In these cases, abandonment criteria is often related to both oil and water production. By providing the total fluid rate, forecasts for oil and water are calculated.

Note: This worksheet works with your Harmony Forecast™ license.

For more information, see [water-oil forecasting theory](#).

You can select from the following default worksheets:

- **WOR vs. Cumulative Oil** — presents the water-oil ratio (WOR) from a historical perspective. It has little or no analysis value. The WOR + 1 analysis curve can be presented on this plot.
- **WOR + 1 vs. Cumulative Oil** — this is our main analysis plot for estimating oil EUR by extrapolating the linear portion of the WOR + 1 trend. This plot is used because it helps ensure you only use the data where water cut exceeds 50% and it tends to produce more reliable linear trends. This plot can be used directly to extrapolate EUR because the x-axis is cumulative oil, or it can be used as a trend line in the Forecast worksheet to create an oil-rate forecast based on a projection of Total Liquids Rate (Oil + Water). This is a crude, but workable method.
- **Water cut vs. Cumulative Oil** — water cut can be defined as the ratio of water produced compared to the volume of total liquids produced. The water cut in water-drive reservoirs can reach very high values (from the Schlumberger Oilfield Glossary).
- **Oil cut vs. Time** — is a method sometimes used for wells with very high WORs to linearly extrapolate similar oil rates to an economic oil-cut limit. It can be very dangerous because it encourages you to identify and extrapolate trends that may be partially or entirely created by measurement errors, and not due to progressive saturation changes in the reservoir.

You can add your own worksheets, but the WOR analysis can only be added when the required axes are present.

Forecast worksheet

The forecast worksheet displays raw data for existing production forecasts in a table. The forecast worksheet can also be used to create a ratio forecast from an existing forecast using an input ratio.

Note: This worksheet works with your Harmony Forecast™ license.


On this worksheet, forecasts start at the forecast start date. You can change your table resolution by clicking the **D** (day), **M** (month, the default setting), or **Y** (year) icons on the toolbar. For a description of common icons, see [table toolbars](#).

If you imported a Piper® Forecast, it is displayed with a "- Piper Forecast" suffix (for example, Gas - Piper Forecast, Oil - Piper Forecast, or Water - Piper Forecast) as a Custom Forecast.

Custom worksheet

The custom worksheet is a blank worksheet where you can display the parameters you select on the Plot Selection pane. In addition, you can select the custom templates you create in the Diagnostics tab.

Note: This worksheet works with your Harmony Forecast™ license.

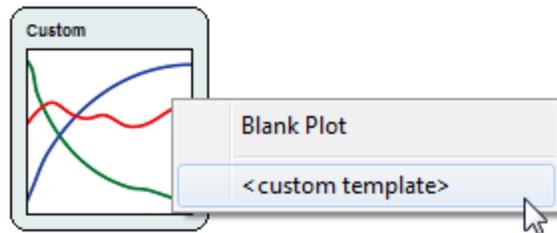

For a description of common icons, see toolbars.



Reference materials

Reference materials include the following:

- analysis and theory
- calculations & correlations
- general concepts
- nomenclature
- references

Analysis and theory

Analysis and theory includes the following:

- Analytical
- Decline analysis
- FMB | Multiphase theory, Model theory
- Duong decline
- Hall plot
- Material balance
- Nodal
- Numerical model
- Probabilistic
- Stretched exponential decline
- Typecurve | Agarwal-Gardner, Blasingame, Compound linear, Fetkovich, NPI, Transient, Wattenbarger
- Typewell
- Unconventional reservoir
- Volumetrics
- WOR forecasting

Analytical models theory

Modeling is the process of history matching pressure and rate transient data based on a mathematical model. There are many different models available to match the data depending on the situation. Thus, it is important to analyze the pressure and rate transient data before modeling because it forces the analyst to think about the probable reservoir configurations and provide good estimates of reservoir parameters. Models are not unique (different model types can match the same set of data), and as a result, we recommend selecting the model type after the analysis step. The following summarizes the advantages of modeling pressure and rate transient data:

- Modeling makes use of all the information within a dataset. For example, while analyzing data from vertical wells, the analyst might try and determine permeability and skin by analyzing the data points that make up the zero slope on the derivative plot, and the semi-log straight line on the radial plot, but ignore the data points in the transition period between wellbore storage and radial flow. Models make use of the information contained in transition periods.
- Modeling takes all flow regimes into account. In multi-rate situations, analyses depend on the superposition of the equation for a single flow regime. For example, the derivation of Horner time includes the assumption that all flow, including the entire drawdown, is radial. Modeling does not assume that only one flow regime has occurred.
- With modeling, you can simultaneously analyze multiple flow periods, so that a single set of parameters can be found.

Parameter values obtained during the analysis step provide a good starting point for an appropriately chosen model type. Parameters can then be optimized by automatic parameter estimation (APE). Before using the APE method, corrupted data should be removed from the dataset to prevent the attempt to match invalid points.

Choice of model

As stated above, different models can be used to match a single set of data. Choosing a probable model type requires the consideration of a number of factors including seismic data, geology, log data, and information provided from other wells drilled in the same formation.

The choice of model can drastically change the outcome of a forecast. For example, pressure and rate transient analysis of radial flow data can be used to find the reservoir flow capacity (kh). The analyst must decide which model is better.

Model assumptions


There are many assumptions that go into the model itself which can lead or mislead the analyst. Most models assume that a reservoir is homogeneous (dual porosity excluded, where the dual porosity flow within each layer can be modeled either as pseudo-steady state or transient interporosity flow). There is no single reservoir that is actually homogeneous in nature, but many reservoirs behave as homogeneous reservoirs.

Vertical model

The vertical model simulates the pressure response in a vertical well within a rectangular-shaped reservoir with homogeneous or dual-porosity characteristics. Note that the well may be at any location within the reservoir, and that the reservoir for the vertical model has no-flow boundaries. During very early times, the cylindrical source solution is used, which is followed by the Green's function solutions (Grindarten and Ramey, 1973). No-flow boundaries are modeled using the method of images. The result is superposed in time based on the rate history provided.


Vertical with fracture model

The fracture model simulates the pressure response in a vertical well intercepted by an infinite-conductivity vertical fracture within a rectangular-shaped reservoir with homogeneous or dual-porosity characteristics (see the figure below). Note that the well may be at any location within the reservoir, and that the reservoir for the fracture model has no-flow boundaries. During very early times, the cylindrical source solution is used, which is followed by Green's function solutions. The Green's function solution, as developed by Thompson et al. (1991), is used with slight modifications to simulate an infinite-conductivity vertical fracture. No-flow boundaries are modeled using the method of images. The result is superposed in time based on the rate history provided.

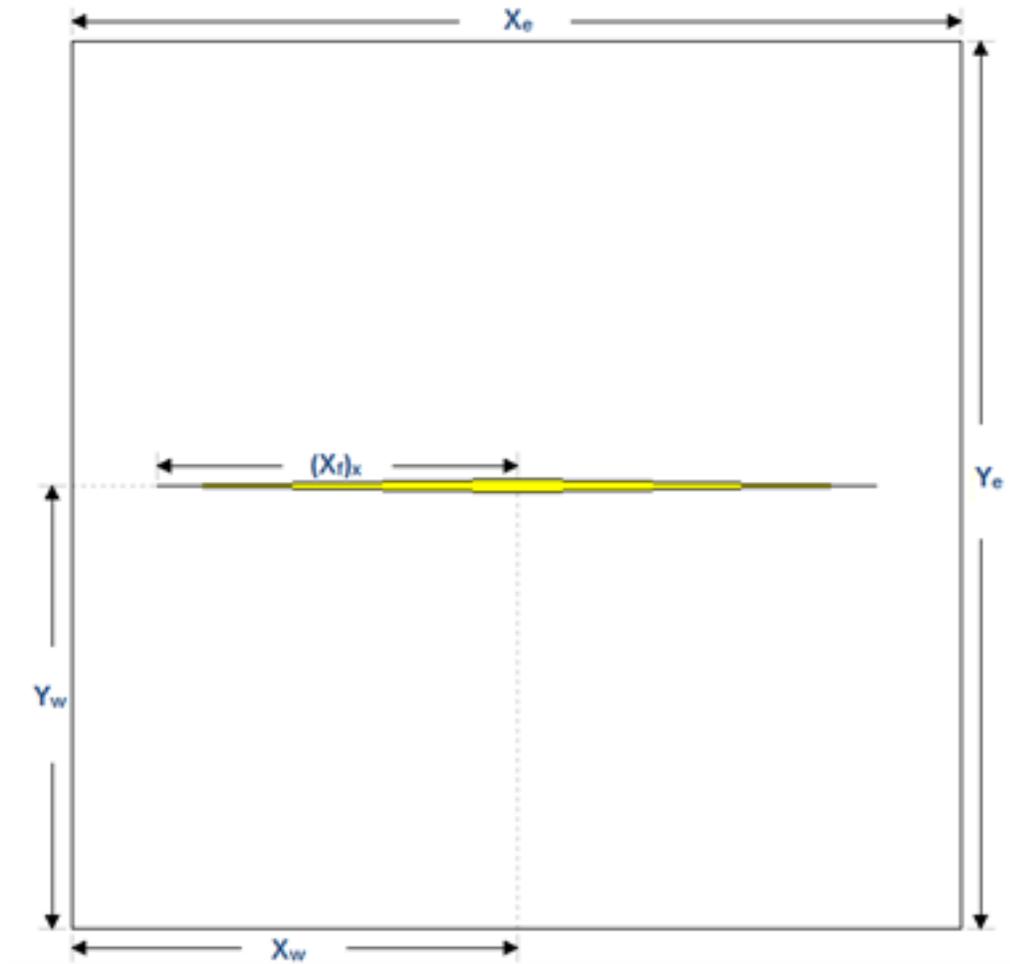

Horizontal model

The horizontal model simulates the pressure response in a horizontal well within a rectangular-shaped reservoir with anisotropic heterogeneities (that is, differences in permeability in the x, y, and z directions), or dual-porosity characteristics. The anisotropy is handled using a conformal mapping procedure that adjusts the boundary sizes accordingly to mimic the effect of increased or decreased permeability in each direction. The horizontal well is oriented in the x-direction, and may be at any location within the reservoir (see the figure below) and supports no-flow boundaries.

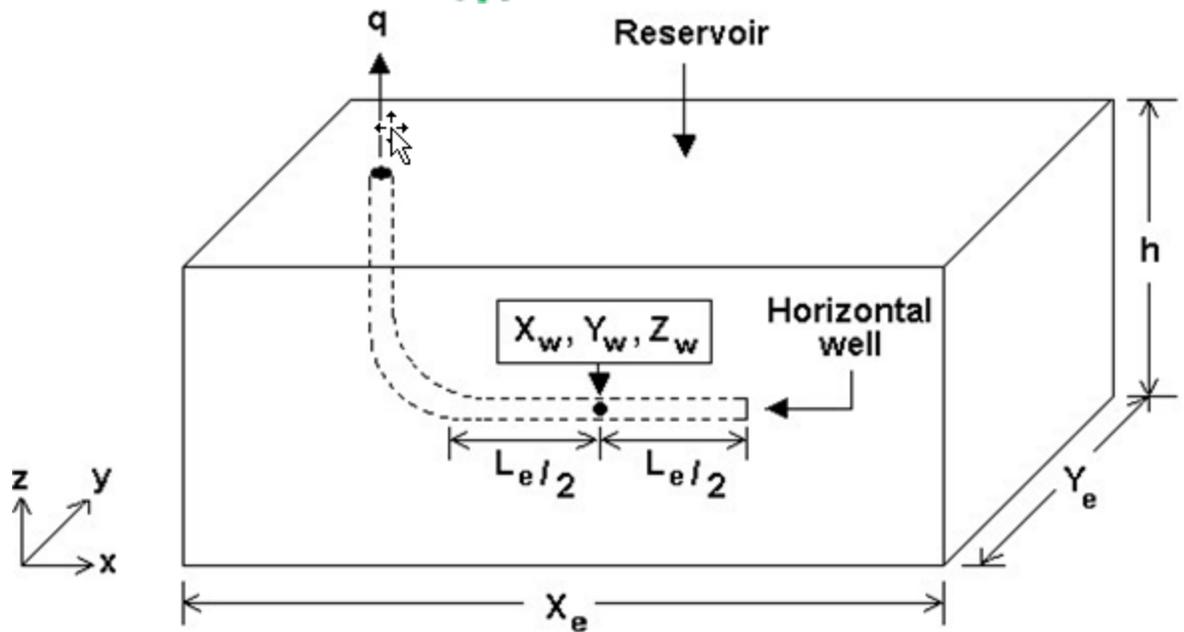


Note that the effective wellbore length (L_e) defines the wellbore area open to fluid flow. The cylindrical source solution is used at very early times, which is followed by Green's function solutions for horizontal wells, as developed by Thompson et al. (1991). No-flow boundaries are modeled using the method of images. The result is superposed in time based on the rate history provided. The following flow regimes can be handled by this model:

- Wellbore storage
- Vertical radial flow
- Linear horizontal flow
- Elliptical flow
- Horizontal radial flow
- Boundary effects
- Pseudo-steady state flow

Horizontal multifrac enhanced fracture region model

This model is a rectangular reservoir model consisting of a non-contributing horizontal well and transverse fractures. This model assumes that all the fractures are uniformly spaced with equal half-fracture length. (The reservoir can extend beyond the fracture tips.) This model has an improved effective

permeability region around each fracture, and you can specify the distance from the fracture to the permeability boundary (X_1).

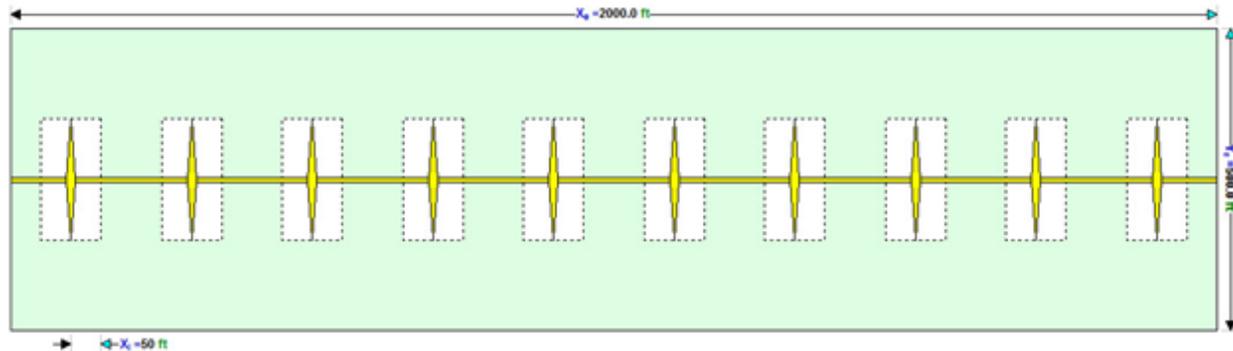

This model takes the following linear flow regimes into account:

- linear flow within the fracture (at very early time)
- linear flow within the stimulated region towards the fractures
- linear flow within the non-stimulated regions towards the stimulated region
- linear flow within the non-stimulated region towards the wellbore


Note: A detailed description of the model is given by [Stalgorova and Mattar \(2012\)](#).

General horizontal multifrac model

The general horizontal multifrac model is a homogeneous, single-phase, rectangular reservoir model consisting of a horizontal wellbore and transverse fractures. The horizontal multifrac solution is created through superposition of individual infinite conductivity fracture solutions in space.

You can specify the reservoir dimensions and well position, provided the entire wellbore and all fractures fit within the reservoir boundaries. In addition, each fracture can be situated anywhere along the horizontal wellbore and configured to have a unique fracture half-length and conductivity. Thus, it is possible to model the combined effects of the horizontal wellbore and multiple fractures as well as the transition into middle-time flow regimes and boundary-dominated flow for any number of different geometrical configurations. Depending on the configuration, pseudo-radial flow can be observed with this model.

Damage skin is applied along the length of the horizontal wellbore and a turbulence factor may be specified.

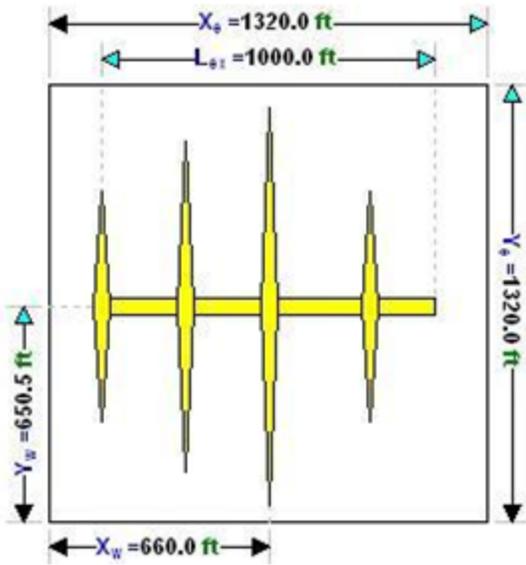


Decline analysis theory

Conceptual definition: decline analysis


Decline analysis is a reservoir engineering empirical technique that extrapolates trends in the production data from oil and gas wells. The purpose of a decline analysis is to generate a forecast of future production rates, and to determine the expected ultimate recoverable (EUR) reserves.

Figure 1: Rate versus cumulative gas production

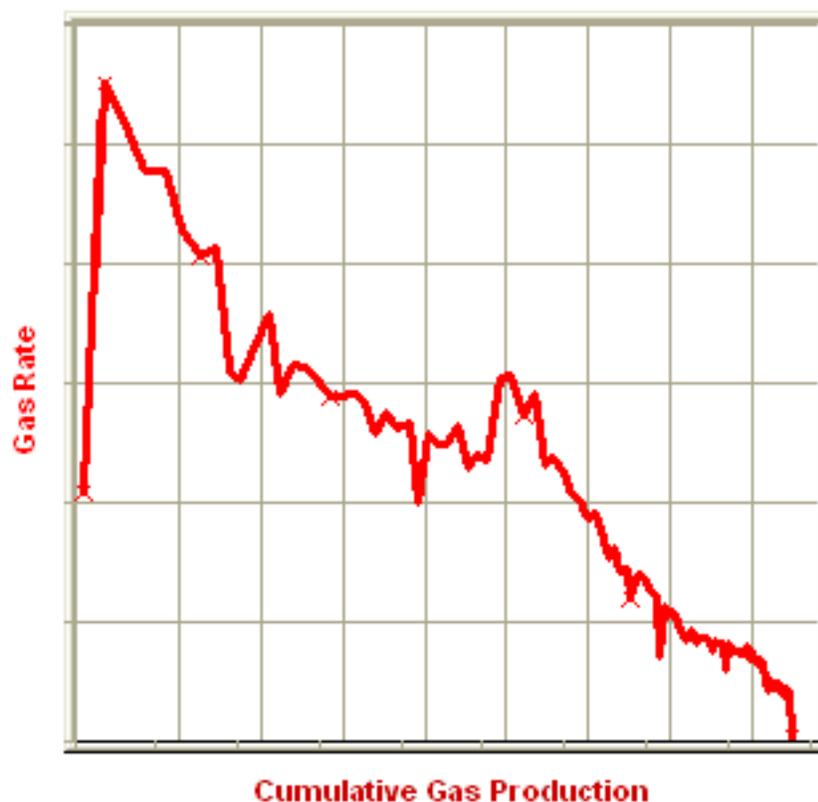

Typically, a decline analysis is conducted on a plot of rate versus time, or rate versus cumulative production (as shown in the figure above). The most commonly used trending equations are those first documented by J.J. Arps (1945). The following figure demonstrates a match trend and extrapolation to the EUR.

Figure 2: Rate versus cumulative gas production

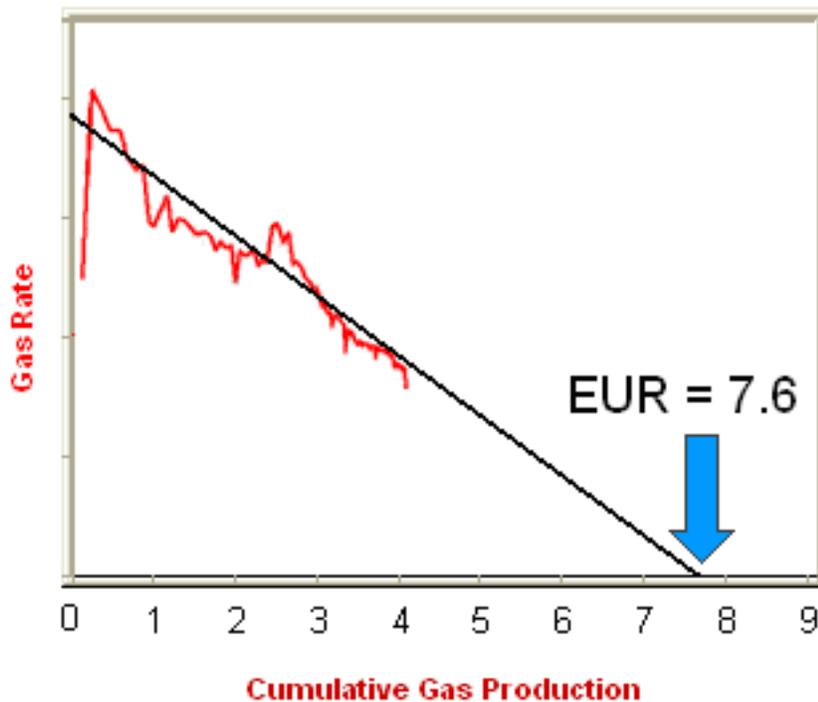

Historical background

J.J. Arps was an American geologist who published a mathematical relationship for the rate at which oil production from a single well declines over time (1945). His paper made several references to existing methods and theory about decline analysis. References included Arnold and Anderson (1908), W.W. Cutler (1924), H.N. Marsh (1928), and R. E. Allen (1931).

Many contemporary published papers have tried to investigate or modify the Arps decline based on theoretical derivations. However, after 70 years, the original method is still widely in use.

Practical decline analysis: key points

All production can be characterized as having an initial transient flow period followed by a boundary-dominated-flow period. During the transient period, the reservoir pressure at the flow boundary remains constant at the initial reservoir pressure, and the flow boundary moves outward from the well through the reservoir. This portion of a well's flow is characterized by very high decline rates. When the flow boundary reaches an actual reservoir boundary, or meets with a flow boundary of another well, the reservoir pressure begins to decline, and the well enters the boundary-dominated-flow period. It is in this period that traditional decline methods (that is, Arps) can be used.

The transient flow period can last for time periods from several minutes to several years, depending upon permeability and the areal extent of the reservoir. For most conventional production, the transient flow period ends after a few days. Tighter reservoirs that have permeability in the 0.5 to 1.0 mD range can have transient periods that last several months. Reservoirs that have even lower permeabilities that require extensive fracture networks can have transient periods that could last for several years.

Once a well has achieved boundary-dominated flow, another important consideration is the sandface flowing pressure. For the period of production included in the decline analysis, the sandface flowing pressure must be relatively constant before a reliable set of decline parameters can be extracted. Factors that affect sandface flowing pressure are rate-controlled wells, changing wellhead backpressure, changing wellbore configurations, and liquid loading.

Decline theory

The theory of all decline curve analysis begins with the concept of the nominal (instantaneous) decline rate (a), which is defined as the fractional change in rate per unit time:

$$a = \frac{(\Delta q/q)}{\Delta t} = \frac{1}{q} \frac{\Delta q}{\Delta t}$$

Another way of representing the decline rate is based on rate (q), and the decline exponent constant, b .


$$a = kq^b$$

When production is plotted as flow rate vs. time, the nominal decline rate is equal to the slope at a point in time divided by the rate at that point.

Figure 3



Exponential Decline

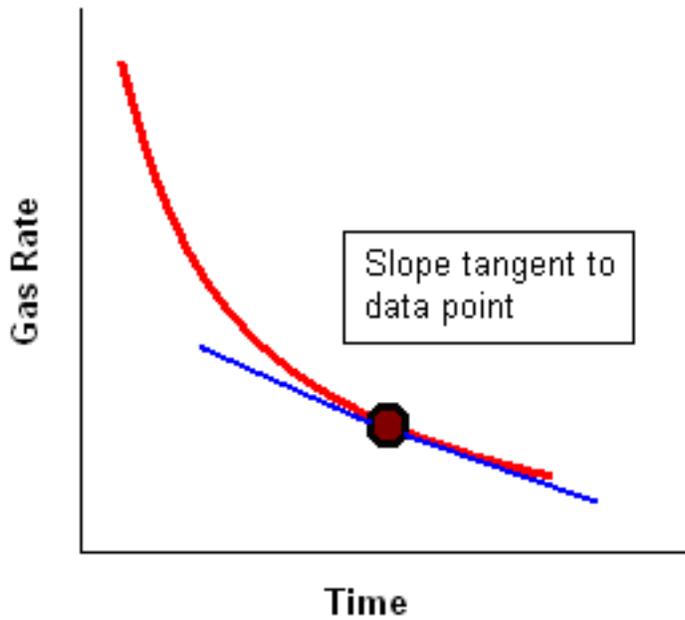

The behavior of the production data can be characterized based on the way in which the nominal decline rate varies with rate, based on the value of the decline exponent constant b .

- **Exponential** — $b = 0$
- **Hyperbolic** — b is a value other than 0 or 1
- **Harmonic** — $b = 1$

Exponential

For the exponential case, $b = 0$. The decline rate can be shown as:

$$a = kq^0$$

Where k is a constant equal to a / q^b at initial conditions:

$$k = \frac{a_i}{a_i^0} = a_i = a$$

As the decline rate remains constant, the integration of the equation for decline rate results in:

$$a = kq^b = -\frac{1}{q} \frac{dq}{dt}$$

$$\int_0^t a dt = \int_{q_i}^q -\frac{dq}{q}$$

$$-at = \ln \frac{q}{q_i}$$

$$q = q_i e^{(-at)}$$

Therefore, a plot of flow rate vs. time, with rate set to a logarithmic axis, results in a straight line.

The cumulative production is defined as:

$$Q = \int_0^t q dt$$

$$Q = \int_0^t q_i e^{(-at)} dt$$

$$Q = \frac{q_i - q_i e^{(-at)}}{a}$$

$$Q = \frac{q_i - q}{a}$$

Therefore, a plot of flow rate vs. cumulative production results in a straight line.

Hyperbolic

For the hyperbolic case, b is equal to any number between zero and one. The decline rate can be shown as:

$$a = kq^b$$

$$a \propto q^b$$

Where k is a constant equal to a / q^b at initial conditions:

$$k = \frac{a_i}{q_i^b}$$

As the decline rate is not constant, the substitution and integration of the equation for decline rate results in:

$$a = kq^b = -\frac{1}{q} \frac{dq}{dt}$$

Substituting

$$k = \frac{a_i}{q_i^b} :$$

$$a = \frac{a_i}{k_i} q^1 = -\frac{1}{q} \frac{dq}{dt}$$

$$\int_0^t \frac{a_i}{q_i} dt = \int_{q_i}^q -\frac{dq}{q^2}$$

$$\int_0^t \frac{a_i}{q_i} dt = \int_{q_i}^q -\frac{dq}{q^{(b+1)}}$$

$$\frac{a_i}{q_i^b} t = \frac{1}{b} (q^{-b} - q_i^{-b})$$

$$q = \frac{q_i}{(1 + ba_i t)^{\left(\frac{1}{b}\right)}}$$

The cumulative production is defined as:

$$Q = \int_0^t q dt$$

$$Q = \int_0^t \frac{q_i}{(1 + ba_i t)^{\left(\frac{1}{b}\right)}} dt$$

$$Q = \frac{q_i}{a_i(1-b)} \left[1 - (1 + ba_i t)^{\left(1 - \frac{1}{b}\right)} \right]$$

Substituting

$$\left(\frac{q_i}{q}\right)^b = (1 + b a_i t) :$$

$$Q = \frac{q_i}{a_i(1-b)} \left[1 - \left(\frac{q_i}{q}\right)^{(b-1)} \right]$$

$$Q = \frac{q_i^b}{a_i(1-b)} \left(q_i^{(1-b)} - q^{(1-b)} \right)$$

Note that neither a plot of flow rate vs. time nor flow rate vs. cumulative production results in a linear relation (regardless of whether rate is set to a Cartesian or logarithmic axis).

Harmonic

The harmonic case is a special case of the above hyperbolic case, where b is equal to one. The decline rate can be shown as:

$$a = kq^1$$

Where k is a constant equal to a / q^b at initial conditions:

$$k = \frac{a_i}{q_i^{(1)}} = \frac{a_i}{q_i}$$

As the decline rate is not constant, the substitution and integration of the equation for decline rate results in:

$$a = kq^b = -\frac{1}{q} \frac{dq}{dt}$$

Substituting

$$k = \frac{a_i}{q_i} :$$

$$a = \frac{a_i}{q_i} q^{(1)} = -\frac{1}{q} \frac{dq}{dt}$$

$$\int_0^t \frac{a_i}{q_i} dt = \int_{q_i}^q -\frac{dq}{q^2}$$

$$\frac{a_i}{q_i} t = -\left[\left(-\frac{1}{q}\right) - \left(-\frac{1}{q_i}\right) \right]$$

$$q = \frac{q_i}{(1 + a_i t)}$$

The cumulative production is defined as:

$$Q = \int_0^t q dt$$

$$Q = \int_0^t \frac{q_i}{(1 + a_i t)} dt$$

Substituting

$$\frac{q_i}{q} = (1 + a_i t) :$$

$$Q = \frac{q_i}{a_i} \ln \left(\frac{q_i}{q} \right)$$

Note that a plot of flow rate vs. time does not result in a linear relation (regardless of whether rate is set to a Cartesian or logarithmic axis). A plot of flow rate vs. cumulative production, with rate set to a logarithmic axis, results in a straight line.

Exponential decline rate: nominal vs. effective

When production follows an exponential decline, there are two different ways of defining the decline rate: nominal and effective.

The first is the nominal decline rate, represented by the symbol "a". The nominal decline rate is defined as:

$$a = \frac{\ln\left(\frac{q_1}{q_2}\right)}{t_2 - t_1} = \frac{\ln\left(\frac{q_1}{q}\right)}{t}$$

The nominal decline rate is used to calculate the rate decline at a specific time. For a given time, the equation for rate using nominal decline is:

$$q_2 = q_1 e^{-a(t_2 - t_1)}$$

$$q = q_1 e^{-a t}$$

The second is the effective decline rate, represented by the symbol "d". The effective decline rate, for a particular time period (typically one year), is defined as:

$$d = \frac{(q_1 - q_2)}{q_1} = \frac{(q_i - q)}{q_i}$$

The effective decline rate is used to calculate the rate decline for particular time periods. For one timestep, the equation for rate using effective decline is:

$$q_2 = q_1 (1 - d)$$

$$q = q_i (1 - d)$$

Note that the time interval is included in the equation for rate using effective decline, but is explicitly stated in the equation for rate using nominal decline.


Although the equations for nominal and effective decline rates are different from one another, there is a relationship that gives the same answer for q_2 provided the time intervals between q_1 and q_2 are the same. The relationship between the two is given by:

$$a = -\ln(1 - d)$$

Note: The above equation is only valid for the exponential equations.

The difference between the two decline rates is shown below. In effect, the nominal decline rate is related to the instantaneous slope of the line, whereas the effective decline rate derives from the chord segment approximating that slope. Also, the rate by which the slope is divided is different – instantaneous rate (q) is used in the case of nominal decline, whereas the preceding rate (q_1) is used in the case of effective decline.

Figure 4: Comparison of Nominal Decline and Effective Decline

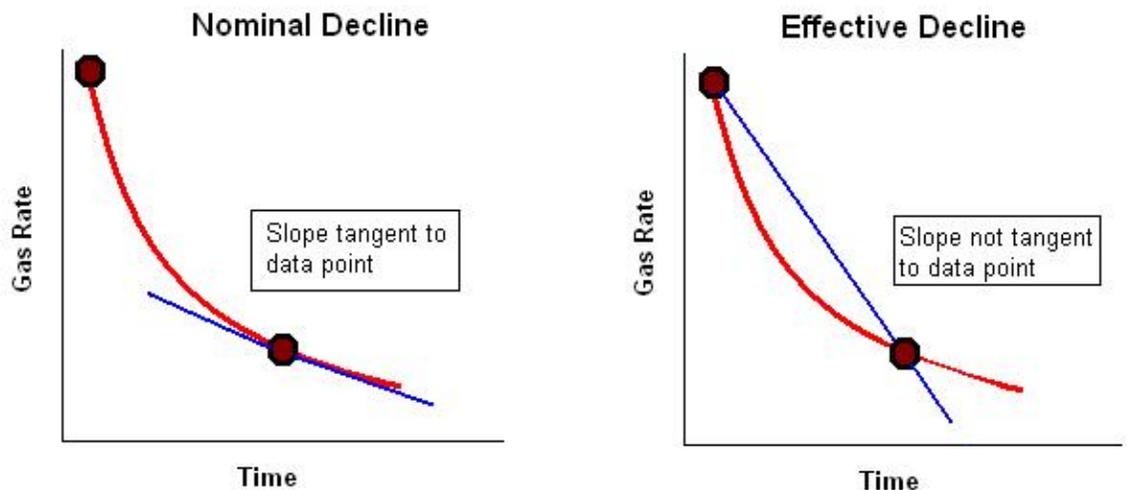

The effective decline rate typically arises when dealing with flow-rate data in tabular rather than graphical format. The difference between the nominal and effective decline rates is very small when the nominal decline rate is small, but as the nominal decline rate gets larger, the difference between the two increases. Therefore, it is important to use these values correctly.

Modified hyperbolic decline

Extrapolation of hyperbolic declines over long periods of time frequently results in unrealistically high reserves. To avoid this problem, it has been suggested that at some point in time the hyperbolic decline be converted into an exponential decline (Robertson). Thus, assume that for a particular example, the decline rate starts at 30% and decreases through time in a hyperbolic manner. When it reaches a specified value, 10% for example, the hyperbolic decline can be converted to an exponential decline, and the forecast continued using the exponential decline rate of 10%.

Limited decline rate

The limited decline rate begins as a hyperbolic decline curve and transitions into an exponential decline curve at a specified limiting effective decline rate, d_{lim} . The limiting effective decline rate is converted to a limiting nominal decline rate, a_{lim} , and the following rate – time equations are applied in the analysis:

$$\text{At } d > d_{lim} : q = \frac{q_i}{(1 + ba_i t)^{\left(\frac{1}{b}\right)}}$$

$$\text{At } d \leq d_{lim} : q = q_{lim} e^{(-a_{lim}(t - t_{lim}))}$$

where:

$$q_{lim} = q_i \left(\frac{a_{lim}}{a_i} \right)^{\left(\frac{1}{b}\right)}$$

$$t_{lim} = \frac{\left(\frac{q_i}{q_{lim}} \right)^b - 1}{b a_i}$$

The limited decline rate can also be expressed as rate – cumulative production using the following equations.

For $b > 1$:

$$\text{At } d > d_{lim} : Q = \frac{q_i^b}{a_i(1-b)} \left(q_i^{(1-b)} - q^{(1-b)} \right)$$

$$\text{At } d \leq d_{\text{lim}} : Q = \frac{q_i^b}{a_i(1-b)} \left(q_i^{(1-b)} - q_{\text{lim}}^{(1-b)} \right) + \frac{q_{\text{lim}} - q}{a_{\text{lim}}}$$

For $b = 1$:

$$\text{At } d > d_{\text{lim}} : Q = \frac{q_i}{a_i} \ln \left(\frac{q_i}{q} \right)$$

$$\text{At } d \leq d_{\text{lim}} : Q = \frac{q_i}{a_i} \ln \left(\frac{q_i}{q_{\text{lim}}} \right) + \frac{q_{\text{lim}} - q}{a_{\text{lim}}}$$

Values of $b > 1$

$$q = \frac{q_i}{(1 + b a_i \Delta t)^{\left(\frac{1}{b}\right)}}$$

A value of $b = 0$ corresponds to exponential decline; values of $b > 0$ and < 1 correspond to hyperbolic decline; and a value of $b = 1$ corresponds to harmonic decline. Values of $b > 1$ are not consistent with decline curve theory, but they are sometimes encountered, and their meaning is explained below.

Decline curve analysis is based on empirical observations of production rate decline, and not on theoretical derivations. Attempts to explain the observed behavior using the theory of flow in porous media led to the fact that these empirically observed declines are related to boundary-dominated flow. When a well is placed on production, there is transient flow initially. Eventually, all of the reservoir boundaries are felt, and it is only after this time that decline curve analysis becomes applicable. During boundary-dominated flow, the value of "b" lies in the range of 0 to 1, depending on the reservoir boundary conditions and the recovery mechanism.

Occasionally, decline curves with values of $b > 1$ are encountered. Below are some reasons that have been presented to explain this:

- The interpretation is wrong, and another value of $b < 1$ fits the data.
- The data is still in transient flow and has not reached boundary-dominated flow.
- Gentry and McCray (1978), using numerical simulation showed that reservoir layering can cause values of $b > 1$.
- Bailey (1982) showed that some fractured gas wells exhibit values of $b > 1$, sometimes as high as 3.5.

Arps production decline equation summary

Type	Exponential Decline	Hyperbolic Decline	Harmonic Decline
	Decline is constant $b=0$	Decline is proportional to a fractional power (b) of the production rate $0 < b < 1$	Decline is proportional to production rate $b = 1$
$d_i \rightarrow$	$a_i = -\ln(1 - d_i)$	$a_i d_i = \frac{1}{b} \left[(1 - d_i)^{-b} - 1 \right]$	$a_i = \frac{d_i}{1 - d_i}$
$a_i \rightarrow$	$d_i = 1 - e^{-a_i \Delta t}$	$d_i = 1 - (1 + b a_i \Delta t)^{-\frac{1}{b}}$	$d_i = \frac{a_i}{1 + a_i \Delta t}$
a(t)	$a = a_i$	$a = a_i (1 + b a_i \Delta t)^{-1}$	$a = a_i (1 + a_i \Delta t)^{-1}$
Rate-Time	$q = q_i e^{-a \Delta t}$	$q = \frac{q_i}{(1 + b a_i \Delta t)^{\left(\frac{1}{b}\right)}}$	$q = \frac{q_i}{(1 + a_i \Delta t)}$
Rate-Cumulative	$Q = \frac{q_i - q}{a}$ $q = q_i - Q a$	$Q = \frac{q_i^b}{a_i(1-b)} \left(q_i^{(1-b)} - q^{(1-b)} \right)$ $q^{(1-b)} = q_i^{(1-b)} - \frac{Q a_i^{(1-b)}}{q_i^b}$	$Q = \frac{q_i}{a_i} \ln \left(\frac{q_i}{q} \right)$ $q = q_i e^{\left(\frac{-Q a_i}{q_i}\right)}$
EUR	$Q_f = Q_i + \left[\frac{q_i - q_f}{a} \right]$	$Q_f = Q_i + \left[\frac{q_i^b}{a_i(1-b)} \left(q_i^{(1-b)} - Q_f^{(1-b)} \right) \right]$	$Q_i + \left[\frac{q_i}{a_i} \ln \left(\frac{q_i}{q_f} \right) \right]$

Goodness of fit

Whenever the decline curve is created to approximate production data, you may want a quantitative way to evaluate how good the fit is. There are various metrics that can be used to estimate goodness of fit. In Harmony Enterprise, R^2 is reported (this statistic is also known as the coefficient of determination).

R² is calculated using the following equations:

For decline curves created on the q vs t plot:

$$R_{\log q \text{ vs. } t}^2 = 1 - \frac{\sum_i (\log q_{i,p} - \log q_{i,c})^2}{\sum_i (\log q_{i,p} - \overline{\log q})^2}$$

For decline curves created on the q vs Cum plot:

$$R_{q \text{ vs. } Q}^2 = 1 - \frac{\sum_i (q_{i,p} - q_{i,c})^2}{\sum_i (q_{i,p} - \bar{q})^2}$$

where:

- i: is the index of summation, and summation is done for all data points after the analysis start date
- q_{i,p}: is the i-th rate (based on given production data)
- q_{i,c}: is the i-th rate (based on decline-curve approximation)
- \bar{q} : is the average for all rates q_{i,p} used in calculations
- $\overline{\log q}$: is the average for all $\log q_{i,p}$ used in calculations


Note: The closer R² is to 1, the better the fit.

Flowing material balance (FMB) theory

The determination of reserves is a fundamental calculation in reservoir engineering. The material balance method uses actual reservoir performance data, and therefore is generally accepted as the most accurate procedure for estimating original hydrocarbons-in-place. In order to generate a traditional material balance plot, the well is shut in at several points during its producing life to obtain the average reservoir pressure. However, this is sometimes impractical, and usually the duration of the shut-in is often not long enough to obtain an accurate measurement. A FMB uses the concept of boundary-dominated flow or pseudo-steady state flow, as well as flowing pressures and rates, to calculate original hydrocarbons-in-place.

Pseudo-steady state

The flow of hydrocarbons through a porous medium can be divided into transient and boundary-dominated flow periods. When a well has reached boundary-dominated flow, its behavior is governed by the pseudo-steady state equations. When a reservoir is in pseudo-steady state flow and the flow rate is constant, the pressure at all locations in the reservoir declines at the same rate. The figure below depicts pressures in the reservoir at all locations when the wellbore is located at the left, and the exterior boundary of the reservoir is located at the right. Each of the lines, one, two, and three, represents the pseudo-steady state pressure in the reservoir when the well is flowing at a constant rate. The pressure decline from "time one" to "time two" is the same throughout the reservoir as the curves are parallel.

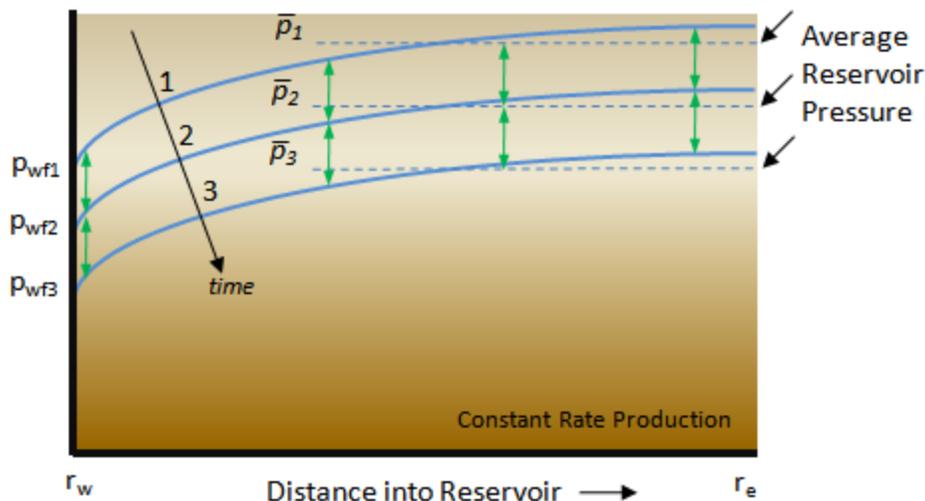

The traditional material balance method shuts in the well several times during the productive life of the reservoir, and lets the pressure stabilize to an average pressure p_1 . Similarly, the pressure profile in the reservoir at later times would result in shut-in average reservoir pressures of p_2 and p_3 . It is evident that the drop in pressure from p_1 to p_2 to p_3 is the same as the drop in pressure at any selected point along curves one, two, or three. A convenient point for analysis could be at the wellbore. Remembering that curves one, two, and three represent a flowing well, it is evident that a plot of the flowing wellbore pressure (p_{wf1} , p_{wf2} , p_{wf3}) should be parallel to a plot of the average reservoir pressure (p_1 , p_2 , p_3).

In a flowing situation, the average reservoir pressure clearly cannot be measured. However, as demonstrated above, in a stabilized-flow situation, there is very close connectivity between well-flowing pressures, which can be measured, and the average reservoir pressure. The pressure drop measured at the wellbore while the well is flowing at a *constant* rate is the same as the pressure drop that is observed anywhere in the reservoir, including the location that represents average reservoir pressure. This is *only* true if pseudo-steady state conditions are present, meaning that all boundaries have been reached, and the rate of withdrawal is constant for the period of time when p_{wf1} through p_{wf3} were measured.


Gas

For gas reserves, the material balance p/z plot is a very useful tool for estimating original gas-in-place (OGIP). The conventional p/z plot uses the extrapolated straight-line trend of measured shut-in pressures to predict OGIP. The same can be done with flowing pressures, provided that the pseudo-steady state assumption is valid (that is, constant rate boundary-dominated flow). For gas, the pseudo-steady state equation for a vertical well in the center of a circular reservoir is as follows:

$$\Delta p_p = p_{pi} - p_{pwf} = \frac{2qp_i t_a}{(\mu c_t Z)_i G_i} + \frac{1.147 \cdot 10^6 T}{k h} \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$

Furthermore, the pressure decline illustration above shows that a material balance plot of flowing wellbore pressures should be parallel to the material balance plot using the average static reservoir pressure. This procedure, shown below, consists of a plot of p_{wf} / Z , where p_{wf} is the flowing sandface pressure at the wellbore vs. cumulative production. A straight line drawn through the flowing sandface pressure data and then extrapolated parallel from the initial reservoir pressure gives the OGIP.


Basically this means that the slope of the resulting best-fit line should be the same as the slope of the conventional p/z line, but shifted upwards, so that it falls through the initial p/z point. This is the flowing gas material balance. Therefore, using flowing pressures and rates, a material balance analysis can be conducted without shutting in the well.

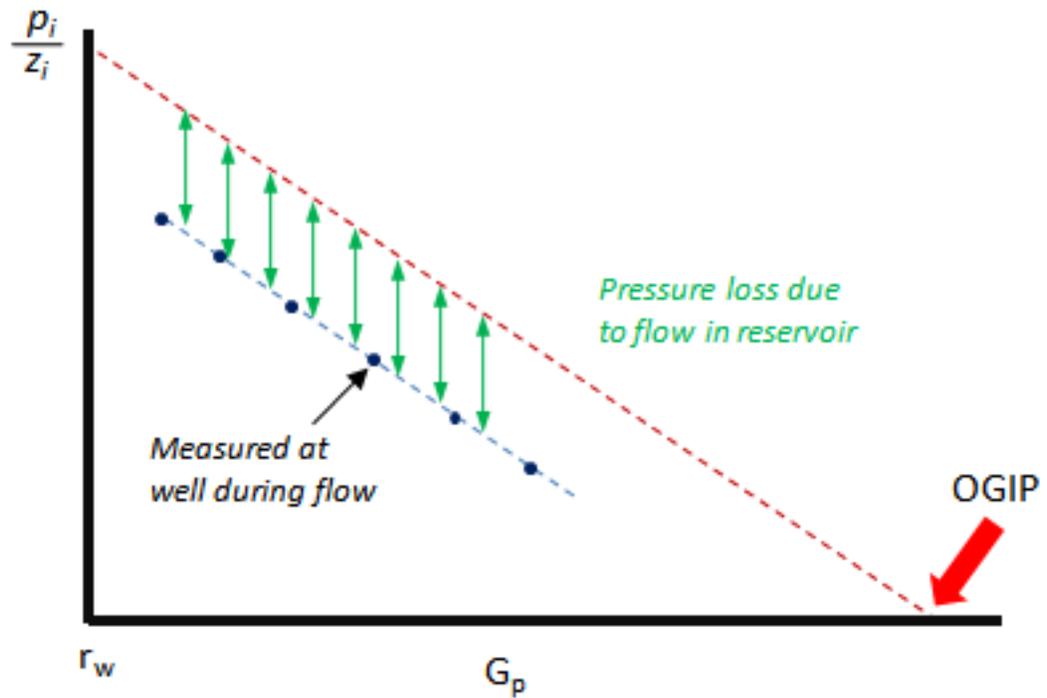

This technique can use either flowing sandface pressures or flowing surface pressures. However, when using surface pressures, the line drawn parallel to the data must pass through the initial "well-head" pressure, not the initial "reservoir" pressure.

Variable rate flowing p/Z^{**}

Most gas wells do not have extended periods of constant-rate production. Thus the above concepts cannot be directly applied. A typical gas well may have a production profile as shown below.

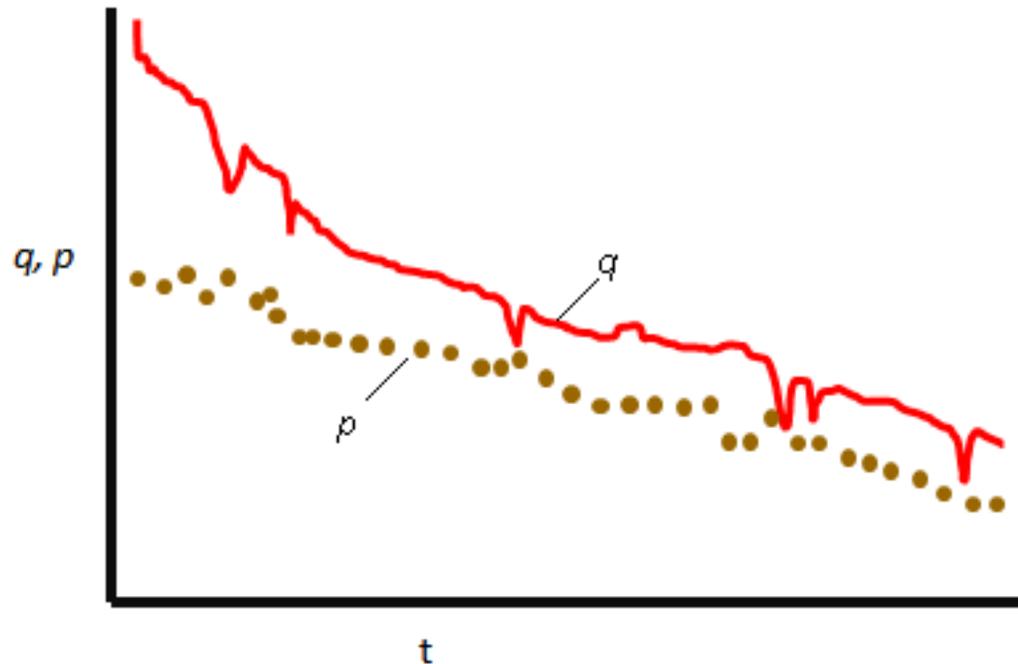

With the above profile, we cannot assume a constant pressure difference between average reservoir conditions and flowing conditions. We know that during boundary-dominated flow:

$$\bar{p}_p = p_{pwf} + qb_{pss}$$


where:

$$b_{pss} = \frac{1.147 \cdot 10^6 T}{k h} \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$

b_{pss} represents the pressure loss due to the steady-state inflow of gas, and is assumed to be constant over time.


For a variable-rate system, the equation above clearly shows that the difference between reservoir p/z and flowing p/z is not constant, but rather is a function of flow rate. Since the flow rate is known, we need only to determine the value of b_{pss} , using some independent method. Note that the value of b_{pss} did not have to be explicitly determined for the constant rate case because the total value of " $q b_{pss}$ " (the product of flow rate and b_{pss}) was determined graphically.

One way to obtain a reliable estimate of b_{pss} is to plot the production and flowing-pressure data in the following manner:

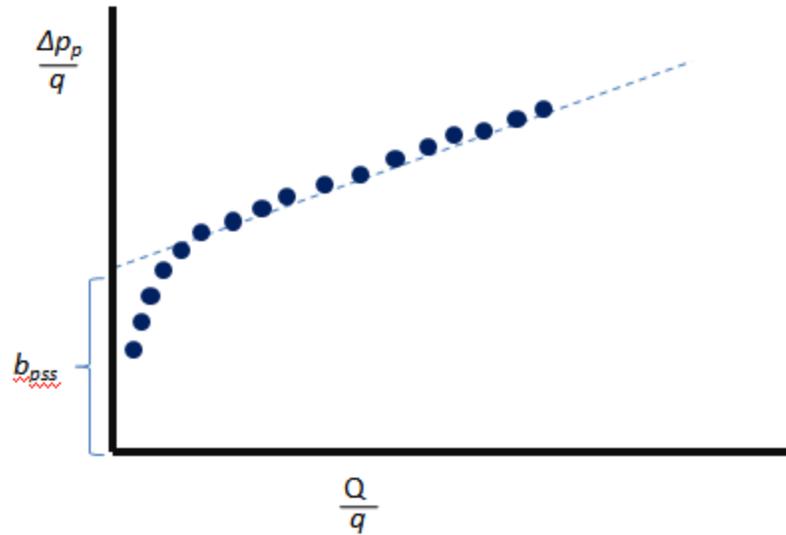

The straight line portion of this graph represents boundary-dominated flow, and the y-intercept is b_{pss} . This value of b_{pss} may then be used in the above equation to calculate the average reservoir pressure. Note that the value of b_{pss} is always subject to interpretation as it depends on proper identification of the stabilized (straight line) section of the above graph.

Alternatively, b_{pss} can be obtained from the Agarwal-Gardner FMB analysis plot. As shown below, $1/b_{pss}$ is the y-intercept on that plot. Obtaining the value from the best-fit straight line interpretation below, the flowing p/z^{**} values can be calculated.

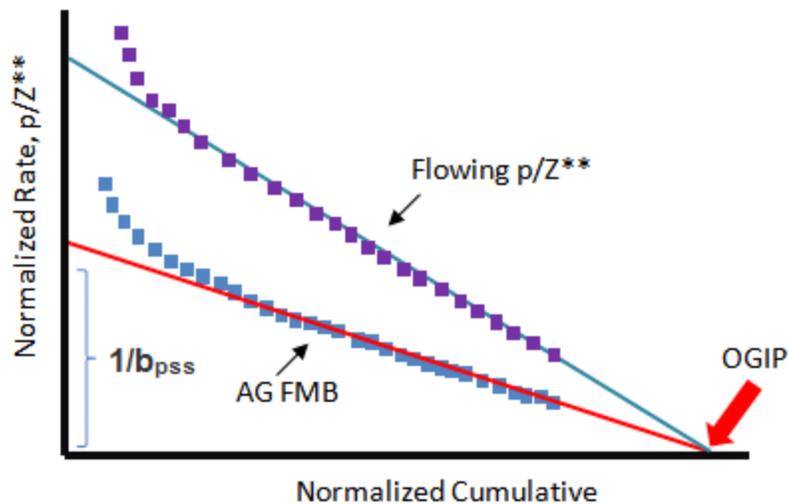

Agarwal-Gardner normalized rate

An alternative to the flowing p/z plot is the normalized rate / normalized cumulative analysis. The normalized rate approach applies to both oil and gas reservoirs, and works for constant, or variable-rate systems. Its advantage is its flexibility and ease of use. Its primary drawback is that the resulting analysis plot is not as intuitive as that of the flowing p/z.

The procedure is similar to the pseudo-steady state approach, but involves plotting the inverse of the pseudo-steady state equation, so that a declining trend is produced. The normalized rate is plotted against the normalized cumulative. A line is then drawn through the best-fit of the points, and the x-intercept is the OGIP. The governing equation for the straight-line equation for the Agarwal-Gardner analysis is:

$$\frac{q}{\Delta p_p} = \frac{-1}{b_{pss} G_i} \frac{2 q t_{ca} p_i}{(c_t \mu Z)_i (p_{pi} - p_{pwf})} + \frac{1}{b_{pss}}$$

where:

$$Q_m = \frac{G (p_{pi} - \bar{p}_p)}{(p_{pi} - p_{wf})} = \frac{2 q t_{ca} p_i}{(c_t \mu Z)_i (p_{pi} - p_{pwf})}$$

$$\text{Normalized Rate} = \frac{q_g}{p_{pi} - p_{pwf}}$$

and:

$$\text{Normalized Cumulative} = \left(\frac{p_{pi} - \bar{p}_p}{p_{pi} - p_{pwf}} \right) G$$

To calculate the average reservoir pressures, use the general material balance equation below, and first assume a value for OGIP. This is an estimate and can be obtained from volumetrics, modeling, or some other analysis.

$$\frac{P}{Z^{**}} = \frac{p_i}{Z_i^{**}} \left(1 - \frac{G_p}{G} \right)$$

The step-by-step procedure for generating the Agarwal-Gardner analysis for a gas well with varying flow rate is:

1. Convert initial pressure to pseudo-pressure.
2. Convert all flowing pressures to pseudo-pressures.
3. Assume a value for OGIP.
4. Calculate p/z^{**} from the general material balance equations.
5. Using lookup tables, find the corresponding average reservoir pressure.
6. Convert average reservoir pressure to pseudo-pressure.
7. Using the equations above, plot a graph of normalized rate versus normalized cumulative.
8. Draw a straight line through the best-fit of the data points. (The intercept on the x-axis gives OGIP.)
9. Using this new value for OGIP, repeat steps 4-8 until the OGIP converges.

Productivity index

The productivity index of a well is a measure of the production rate achievable under a given drawdown pressure, which is the difference between the average reservoir pressure and the flowing sandface pressure. Defined as the flow rate per unit pressure drop, the productivity index gives an indication of the production potential of a well.

$$PI = \frac{1}{b_{pss}}$$

From the pss equation above:


$$\bar{p}_p = p_{pwf} + qb_{pss}$$

therefore:

$$PI = \frac{q_g}{\bar{p}_p - p_{pwf}}$$

From a reservoir point of view, well management primarily depends on the well productivity index, which is in turn dependent on rock and fluid properties. One of the principal causes for the reduction in

well productivity is formation damage around the wellbore. For an FMB analysis, when the "correct" OGIP is found, the productivity index dataset should be relatively flat, indicating that the productivity index is not drastically changing over time.

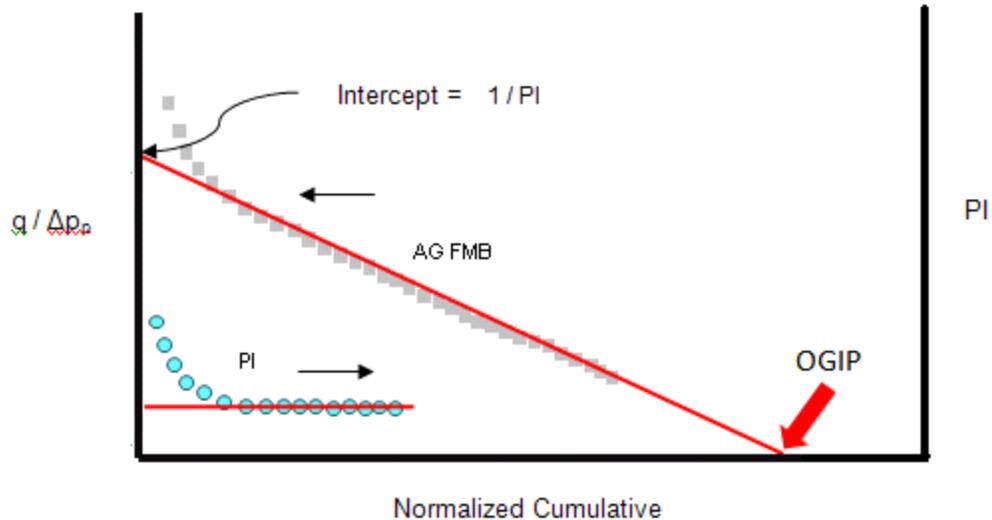

As can be seen above, the productivity index equation is very similar to the traditionally used simplified absolute open flow (AOF) equation, shown below. The major differences being that:

- The productivity index is written rigorously using pseudo-pressures and the AOF equation uses the simpler pressure- squared method.
- The AOF equation introduces the concept of laminar / turbulent flow using the exponent "n".

$$q = c \left(\bar{p}^2 - p_{wf}^2 \right)^n$$

Assuming $n = 1$:

$$c = \frac{q_g}{\bar{p}^2 - p_{wf}^2}$$

Advanced gas material balance techniques – p/Z^{**}

The graphical simplicity of the conventional p/Z material balance analysis makes it quite popular. Developed for a "volumetric" gas reservoir, it assumes a constant pore volume of gas, and accounts for the energy of gas expansion. However, advanced methods have been developed to account for

other sources of energy, such as the effects of formation compressibility, residual fluids expansion, and aquifer support. Furthermore, these methods can also account for other sources of gas storage such as connected reservoirs, or adsorption in coal / shale. The FMB analysis accounts for all of these effects, if required. The formulation for the calculation of p/Z^{**} is highlighted below:

$$\frac{P}{Z^{**}} = \frac{p_i}{Z_i^{**}} \left(1 - \frac{G_p}{G} \right)$$

where:

$$Z^{**} = \frac{p}{\left[\frac{1}{S_{gi}} \frac{p}{Z} \left(S_{gi} - c_{wip} - c_{ep} - c_d \right) + \frac{p_i}{Z_i} \left(\frac{G}{G_f} - 1 \right) \right] \frac{G_f}{G}}$$

$$\frac{G}{G_f} = 1 + \frac{B_{gi}}{S_{gi}} \frac{\rho_B (1 - a - W_c)}{\phi} \frac{(V_L p_i)}{p_L p_i}$$

and total compressibility is defined as:

$$c_t = \left(c_g \left[S_{gi} - c_{wip} - c_{ep} - c_d \right] - \frac{\partial c_{wip}}{\partial p} - \frac{\partial c_{ep}}{\partial p} - \frac{\partial c_d}{\partial p} \right)$$

The table below outlines the formulations for the total-compressibility equations for all reservoir types.

Definition	Comment
$c_{wip} = \frac{5.615(W_e - W_p B_w)}{\frac{G_f B_{gi}}{S_{gi}}}$ $\frac{\partial c_{wip}}{\partial p} = \frac{5.615}{\frac{G_f B_{gi}}{S_{gi}}} \frac{\partial W_e}{\partial p}$	Water-drive reservoir
$c_{ep} = (c_f + c_w S_{wi} + c_o S_{oi}) (p_i - p) = c_e (p_i - p)$ $\frac{\partial c_{ep}}{\partial p} = - \left[c_f (1 - c_f (p_i - p)) + S_{wi} c_w (1 + c_w (p_i - p)) + S_{oi} c_o (1 + c_o (p_i - p)) \right]$	$c_o, c_w,$ and c_f are constant c_e is the approximate form

Definition	Comment
$c_{ep} = \left(1 - e^{-c_f(p_i - p)}\right) + S_{wi} \left(e^{c_w(p_i - p)} - 1\right) + S_{oi} \left(e^{c_o(p_i - p)} - 1\right)$ $\frac{\partial c_{ep}}{\partial p} = - \left[S_{oi} c_o e^{c_o(p_i - p)} + S_{wi} c_w e^{c_w(p_i - p)} + c_f e^{-c_f(p_i - p)} \right]$	c_o , c_w , and c_f are constant c_{ep} is the simple form
$c_{ep} = \left(1 - e^{-\int_p^{p_i} c_f d_p}\right) + S_{wi} \left(e^{\int_p^{p_i} c_w d_p} - 1\right) + S_{oi} \left(e^{\int_p^{p_i} c_o d_p} - 1\right)$ $\frac{\partial c_{ep}}{\partial p} = \left(c_f e^{-\int_p^{p_i} c_f d_p} + S_{wi} c_w e^{\int_p^{p_i} c_w d_p} + S_{oi} c_o e^{\int_p^{p_i} c_o d_p} \right)$	c_o , c_w , and c_f are pressure-sensitive <i>without</i> matrix shrinkage. c_{ep} is the rigorous form
$c_{ep} = \left(1 - F_\phi(p)\right) + S_{wi} \left(e^{\int_p^{p_i} c_w d_p} - 1\right) + S_{oi} \left(e^{\int_p^{p_i} c_o d_p} - 1\right)$ $\frac{\partial c_{ep}}{\partial p} = \left(-\frac{dF_\phi(p)}{dp} + S_{wi} c_w e^{\int_p^{p_i} c_w d_p} + S_{oi} c_o e^{\int_p^{p_i} c_o d_p} \right)$	c_o , c_w , and c_f are pressure-sensitive with matrix shrinkage. c_{ep} is the rigorous form
$c_d = \frac{\rho_B B_g}{\phi} \left(1 - a - m\right) \left(\frac{V_L p_i}{p_L + p_i} - \frac{V_L p}{p_L + p} \right)$ $\frac{\partial c_d}{\partial p} = \frac{\rho_B B_g V_L}{\phi} \left(1 - a - m\right) \left[-c_g \left(\frac{p_i}{p_L + p_i} - \frac{p}{p_L + p} \right) + \left(-\frac{1}{p_L + p} + \frac{p}{(p_L + p)^2} \right) \right]$	Shale gas reservoir


Note: For more information, see Moghadam et al. (2009).

Oil

The basis for the FMB of oil comes from both the definition of compressibility and the steady-state inflow equation. Compressibility is defined as:


$$c = - \frac{1}{V} \frac{\partial V}{\partial p}$$

This equation shows that compressibility is defined as the relative change in fluid volume per unit change in pressure.

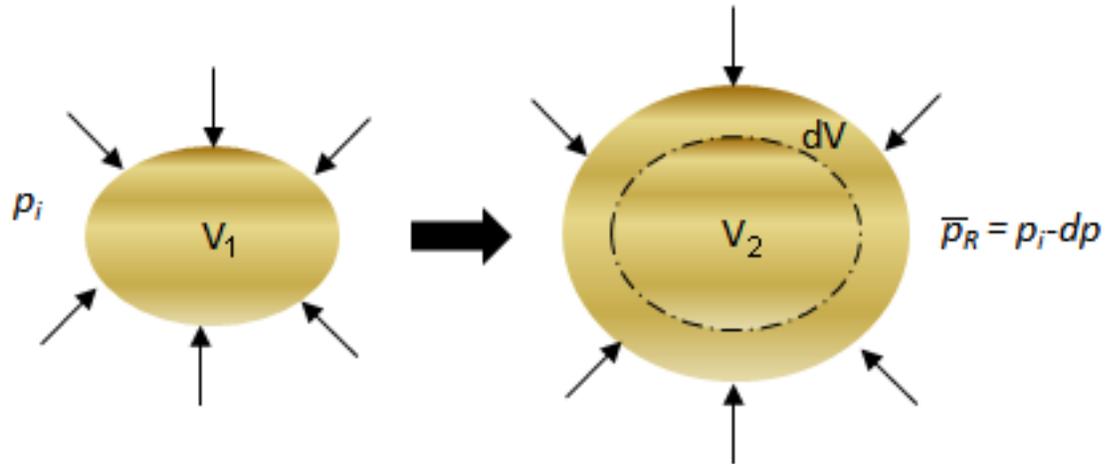

The above schematic demonstrates that as pressure is reduced, the fluid expands to occupy a larger volume such that $V_2 > V_1$. However, most reservoirs can reasonably be expected to have a constant pore volume such that $PV_1 = PV_2$. Consequently, as we produce fluid from a reservoir, the remaining fluid in the reservoir expands to fill the pore volume, and so the reservoir pressure is reduced.

Production from an undersaturated* oil reservoir can be visualized as follows:

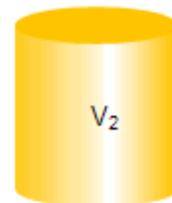

Pore Volume:

$$\text{Container Volume 1 (PV}_1\text{)} = \text{Container Volume 2 (PV}_2\text{)}$$

Fluid Volume:

$$\text{Fluid Volume 1 (N)} = \text{Fluid Volume 2 (Remaining N) + Extracted Volume (N}_p\text{)}$$

Reservoir Pressure:

$$\text{Initial Reservoir Pressure (p}_i\text{)} = \text{Current Reservoir Pressure (}\bar{p}_R\text{) + Depletion (N}_p\text{ / N * c)}$$

* There is no free gas since the reservoir pressure is greater than the bubble-point pressure of the oil.


Thus, the change in pressure is the difference between the initial reservoir pressure and the average reservoir pressure, and the change in volume is the produced volume up to that point in time. Knowing that the initial volume is the total oil-in-place, these terms are applied to the compressibility equation.

$$c = \frac{1}{N} \frac{N_p}{(p_i - \bar{p}_R)}$$

Combining the above relationship with the pseudo-steady equation, and then rearranging and substituting for material balance time gives the following:

$$\frac{\Delta p}{q} = \frac{p_i - p_{wf}}{q} = \frac{B_o}{B_{oi}} \frac{S_o N_p}{q c_t N} + \frac{141.2 B_o N_p \mu}{k h} \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$

The above equation clearly illustrates the relationship between initial pressure, flowing pressure, and rate.

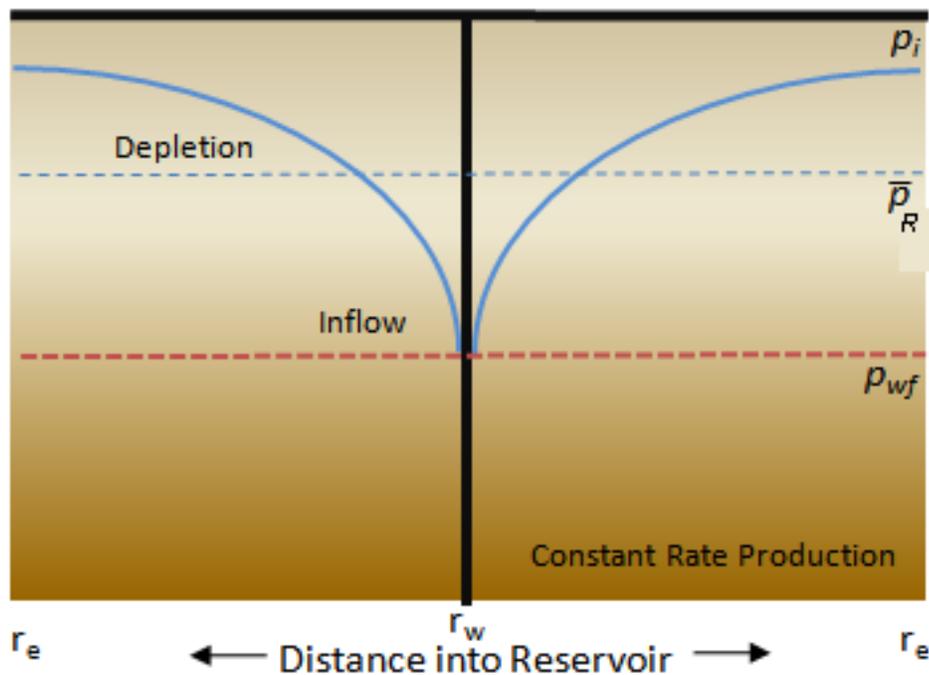

From the figure above, it is apparent that the pseudo-steady state equation is the sum of two distinct pressure-loss components:

Pressure loss due to depletion:

$$p_i - \bar{p}_R = \frac{B_o}{B_{oi}} \frac{S_o q t}{c_t N}$$

Pressure loss due to inflow:

$$\bar{p}_R - p_{wf} = \frac{141.2 B_o \mu q}{k h} \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$


The advantage of the pseudo-steady state formulation is that the average reservoir pressure is eliminated during the addition of pressure loss due to depletion and pressure loss due to inflow, and thus is not explicit in the equation. This is an obvious advantage because the average reservoir pressure is an unknown. Since both terms (pressure loss due to depletion and pressure loss due to inflow) are functions of rate, we can simplify the pseudo-steady state equation as follows:

$$\frac{\Delta p}{q} = \frac{B_o}{B_{oi}} \frac{S_o}{c_t N} t + b_{pss}$$

where:

$$b_{pss} = \frac{141.2 B_o \mu}{k h} \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$


A graph of normalized pressure vs. time produces a straight line, the slope of which provides the original oil-in-place (OOIP). This is the most basic form of FMB, and is directly applicable to undersaturated oil reservoirs. In well testing, this procedure is commonly referred to as a "reservoir limits test".

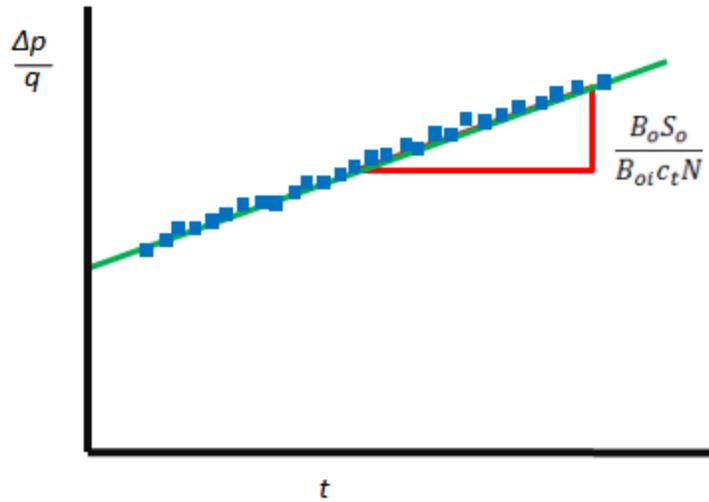

However, to make it more intuitive and similar to a gas material balance plot, the pseudo-steady state equation above is rearranged to the following:

$$\frac{q}{\Delta p} = \frac{1}{b_{pss}} - \frac{B_o S_o N_p}{B_{oi} c_t N \Delta p b_{pss}}$$

Plotting normalized rate vs. normalized cumulative (similar to the Agarwal-Gardner plot), the following plot is derived, where the x-intercept is equal to the OOIP.

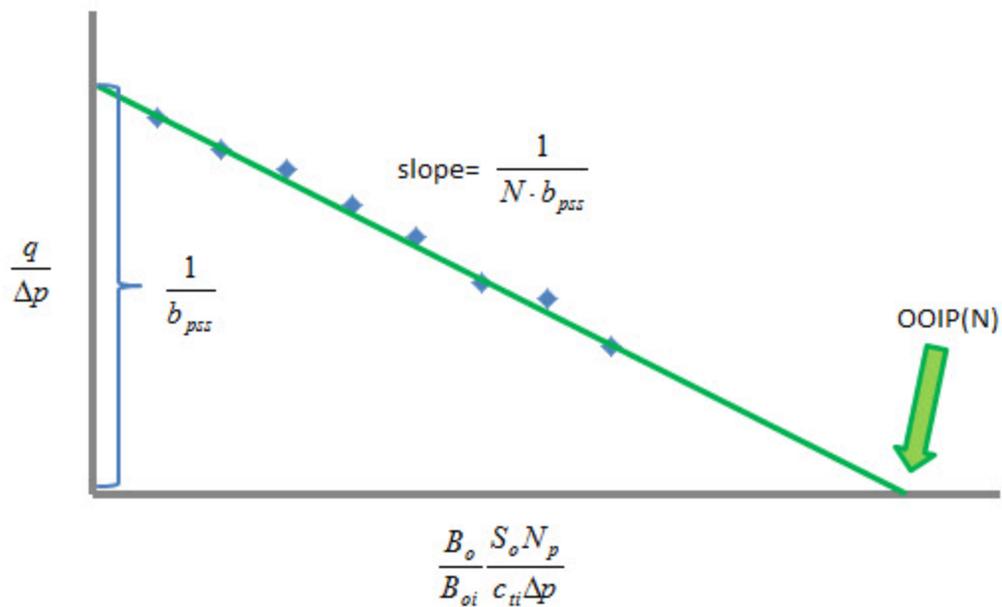

The above equation and associated figure describe the flowing oil material balance analysis for a volumetric circular reservoir.

Static pressure data

If static pressures are available, you can use this data as an independent confirmation of the OOIP. This is an equation describing material balance for an oil reservoir for a simple case (that is, no gas cap, no water production), assuming constant total compressibility:

$$N_p B_o = \frac{N}{S_o} \cdot B_{oi} (p_i - \bar{p}) c_{ti}$$

This equation can be rearranged as:

$$\bar{p} = p_i - \frac{B_o \cdot S_o N_p \cdot p_i}{B_{oi} c_{ti} p_i N}$$

↑
←
→

y-value
x-value

Therefore, plotting average pressure against

$$\text{Adjusted Normalized Oil Cumulative Production} = \frac{B_o S_o N_p}{B_{oi} c_{ti} p_i}$$

should follow a straight line, with the x-intercept of the line being equal to the OOIP.

Accounting for variation in oil properties

The derivation for oil Flowing Material Balance (FMB) given above is valid under the assumption that the variation of oil and rock properties (c_t , B_o , μ_o , and k) with pressure is negligible. That assumption is valid for some cases, but sometimes (for example, for oil with high gas content, or for cases with pres-

sure-dependent rock properties), it is important to accurately account for variations in oil and rock properties.

This is done similarly to Agarwal-Gardner FMB analysis for gas.

Oil pseudo-pressure is defined as:

$$p_{po}(p) = \frac{B_o(p_i) \mu_o(p_i)}{k(p_i)} \int_0^p \frac{k(p)}{B_o(p) \mu_o(p)} dp$$

Total pseudo-pressure drop can then be written in terms of oil pseudo-pressure and can be presented as:

$$\begin{aligned} \Delta p_{po} &= p_{po}(p_i) - p_{po}(p_{wf}) = (p_{po}(p_i) - p_{po}(\bar{p})) + (p_{po}(\bar{p}) - p_{po}(p_{wf})) \\ \text{total} &= \text{due to depletion} + \text{due to Darcy flow} \end{aligned}$$

Under conditions of pseudo-steady state, the pressure drop due to Darcy flow and flow rate are related by:

$$q_o = \text{Constant} \cdot \int_{p_{wf}}^{\bar{p}} \frac{k(p)}{\mu_o(p) B_o(p)} dp$$

Where *Constant* is defined by reservoir and completion geometry, but does not change with pressure.

Using rules of integration, this can be re-arranged as:

$$\begin{aligned} q_o &= \text{Constant} \cdot \int_{p_{wf}}^{\bar{p}} \frac{k(p)}{\mu_o(p) B_o(p)} dp = \text{Constant} t \cdot \left(\int_0^{\bar{p}} \frac{k(p)}{\mu_o(p) B_o(p)} dp - \int_0^{p_{wf}} \frac{k(p)}{\mu_o(p) B_o(p)} dp \right) = \\ &= \left(\text{Constant} t \cdot \frac{k(p_i)}{\mu_o(p_i) B_o(p_i)} \right) \left(p_{po}(\bar{p}) - p_{po}(p_{wf}) \right) \end{aligned}$$

Therefore, pressure drop due to Darcy flow in terms of oil pseudo-pressure can be expressed as:

$$p_{po}(\bar{p}) - p_{po}(p_{wf}) = q_o \cdot b'_{pss}$$

Where b'_{pss} does not vary with pressure.

Using this formulation for pressure drop due to Darcy flow, total pressure drop can be presented as:

$$\Delta p_{po} = (p_{po}(p_i) - p_{po}(\bar{p})) + q_o \cdot b'_{pss}$$

Dividing both sides by $\Delta p_{po} b'_{pss}$ and re-arranging we get:

$$\frac{q_o}{\Delta p_{po}} = \frac{1}{b'_{pss}} - \left(\frac{p_{po}(p_i) - p_{po}(\bar{p})}{\Delta p_{po}} N \right) \cdot \frac{1}{N b'_{pss}}$$

$$y\text{ value} = \text{intercept} - x\text{ value} \cdot \text{slope}$$

(Note that we added N to both the numerator and denominator of the last term.)

This equation is used to create a plot for oil FMB analysis that accounts for variation of oil and formation properties.

The y -values for each data point can be readily calculated based on production data:

$$\text{Oil Normalized Rate} = \frac{q_o}{\Delta p_{po}}$$

To calculate x -values, use an iterative procedure:

1. Estimate a value for oil in place, N_{guess} .
2. Calculate the average reservoir pressure based on N_{guess} , known production data, and using rigorous material-balance calculations.
3. Calculate x -values:

$$\text{Normalized Oil Cumulative Production} = \frac{p_{po}(p_i) - p_{po}(\bar{p})}{\Delta p_{po}} N_{guess}$$

4. Generate an FMB plot (y -values vs. x -values).
5. Draw a straight line through the data points corresponding to boundary-dominated flow (the late portion of the data).
6. The y -intercept of the line equals $1/b'_{pss}$, and the slope of the line equals $1/(N b'_{pss})$; therefore N can be calculated.

7. Compare the calculated N with N_{guess} . If they are not equal, set the next N_{guess} to the value calculated in step 6, and return to step 1.
8. Iterate until $N = N_{guess}$.

This approach is described by Stalgorova and Mattar (2016).

Multiphase flowing material balance (FMB) theory

There is significant research in the field of multiphase FMB, and rate-transient analysis in general, that is ongoing at the University of Calgary, under the direction of Dr. Chris Clarkson. This research has been supported by industry sponsors of the Clarkson-led Tight Oil Consortium, and by NSERC CRD grants held by Clarkson. This partial list of [publications](#) attests to the interest, effort, and success of his team in this field. All the methods have a certain number of assumptions and approximations, and are therefore not exact analytical solutions for all flow conditions. For example, they are not meant to be applicable to “transient flow”, but they are intended for analyzing boundary-dominated flow. Our (IHS Markit) development of Multiphase FMB, implemented in Harmony Enterprise version 2018.1 builds on the work of Dr. Clarkson’s team and extends it. Most of the studies define one two-phase pseudo-pressure for oil, and one for gas. Some define a total pseudo-pressure that combines all three phases.

There are two major components to the FMB methodology: defining an appropriate pseudo-pressure and an appropriate pseudo-time. Sometimes, as in the current implementation, pseudo-time is not visible explicitly, but is couched in expressions that combine the average pseudo-pressure and cumulative production.

Multiphase FMB parallels the single-phase methodology. In simple terms, single-phase FMB was derived for oil (in terms of pressure). Multiphase FMB uses the same format of equations, but replaces pressure by a pseudo-pressure that accounts for the variations in pressure, volume, and temperature (PVT) properties, saturation changes, relative permeability, and individual flowing phases.

As an introduction, a simplified version of the single-phase FMB formulation is presented below:

(Boundary-dominated flow) fundamental flow equation:

$$p_i - p_{wf} = \frac{qt}{c_i N} + \frac{141.2qB\mu}{kh} \left[\left(\ln \frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$

Can be simplified to:

$$p_i - p_{wf} = \frac{qt}{c_t N} + bq$$

$$p_i - p_{wf} = \frac{N_p}{c_t N} + bq$$

Rearranging — divide by b and by $(p_i - p_{wf})$:

$$\frac{q}{(p_i - p_{wf})} = - \frac{N_p}{bc_t N (p_i - p_{wf})} + \frac{1}{b}$$

Material balance equation:

$$p_i - \bar{p}_R = \frac{N_p}{c_t N}$$

Combining these two equations:

$$\frac{q}{(p_i - p_{wf})} = - \frac{(p_i - \bar{p}_R)}{b(p_i - p_{wf})} + \frac{1}{b}$$

Multiplying top and bottom by N:

$$\frac{q}{(p_i - p_{wf})} = - \frac{1}{bN} \left\{ \frac{(p_i - \bar{p}_R)}{(p_i - p_{wf})} N \right\} + \frac{1}{b}$$

This is the **FMB equation** that is represented in the **Agarwal-Gardner (A-G) plot**: Plotting the **left-side** against **{...}** results in an **x-intercept** of **N** (original-oil-in-place), and a **y-intercept** of **1/b** (Productivity Index).

Multiphase FMB equation


The multiphase FMB analysis is structured in a format similar to the above equation, but pressure is replaced by an appropriately defined multiphase pseudo-pressure.

$$\frac{q}{(p_{pi} - p_{pwf})} = -\frac{1}{bN} \left\{ \frac{(p_{pi} - \bar{p}_{pR})}{(p_{pi} - p_{pwf})} N \right\} + \frac{1}{b}$$

The discussion below is focused on oil as the flowing fluid of interest. The pseudo-pressure defined below is the “oil” pseudo-pressure. A parallel discussion, mutatis mutandis (after the necessary changes have been made), is relevant when gas is the primary fluid of interest.

The “oil” pseudo-pressure defined below accounts for:

- multiphase flow — oil, gas, and water, for both production and injection
- fluid property variations with pressure
- saturation changes in the reservoir caused by production or injection
- geomechanical effects, desorption, water influx.

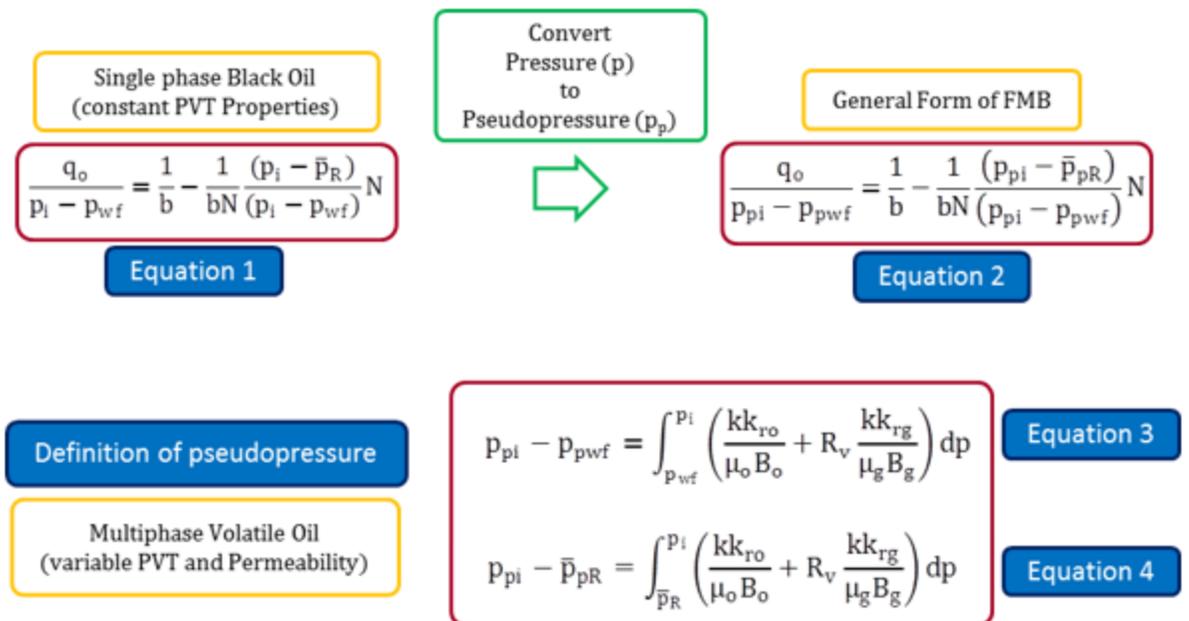

In evaluating the above equations, the following considerations apply:

i: k_{rg} and k_{ro} are functions of saturation (*not* pressure). In order to evaluate the pseudo-pressure integral, the k_{rg} and k_{ro} functions have to be expressed in terms of pressure (*not* saturation). Therefore, we need to have a relationship between saturation and pressure. However, saturations depend on production. Consequently, multiphase pseudo-pressure can only be evaluated *after* the production rates are known. This is in contrast to single-phase

pseudo-pressure, where the pseudo-pressure can be evaluated independently from production.

ii: At any point in time, the flow rates of gas, oil, water, and the flowing pressures are known from measurement. The average reservoir pressure is obtained from material balance equations.

iii: At any point in time, using the production data, the k_{rg} / k_{ro} ratios are determined from:

$$\frac{k_{rg}}{k_{ro}} (S_g, S_w) = \left(\frac{GOR - R_s}{1 - R_v GOR} \right) \frac{\mu_g B_g}{\mu_o B_o} \quad \text{Equation 5}$$

And the k_{rw} / k_{ro} ratios are obtained from:

$$\frac{k_{rw}}{k_{ro}} (S_g, S_w) = WOR \frac{\mu_w B_w}{\mu_o B_o} \quad \text{Equation 6}$$


iv: The relative permeability curves are reformulated in terms of k_{rg} / k_{ro} ratios versus saturations. The k_{rg} / k_{ro} ratios will be a single curve for two-phase (gas / oil) flow, but become a surface, when water production is included.

v: From the permeability ratios obtained from production data (*see step iii*) and the relative permeability curves (*see step iv*), the saturations are obtained for every point in time, and the corresponding pseudo-pressure is evaluated, using Equations 3 and 4.


vi: The calculation of pseudo-pressure involves the evaluation of an integral. In the literature, there are two ways of doing this: a) using the Sandface Integral, or b) using the Reservoir Integral. The more rigorous of the two is the Reservoir Integral, and that is what is used in the current implementation of Harmony Enterprise. It recognizes that the saturations change, not only through time, but also with location in the reservoir. This makes the pseudo-pressure calculations complex, cumbersome, and iterative. At every point in time, they consist of a step-

wise integration from p_{wf} to \bar{p}_R , and from \bar{p}_R to p_i .

As a result, because analysis lines are dynamically calculating the pseudo-pressures, the line movement can be slow, when there is a large number of data points. Figure Int-1 and Int-2 below demonstrate that the Reservoir Integral is more effective in straightening out the multiphase data than the Sandface Integral.

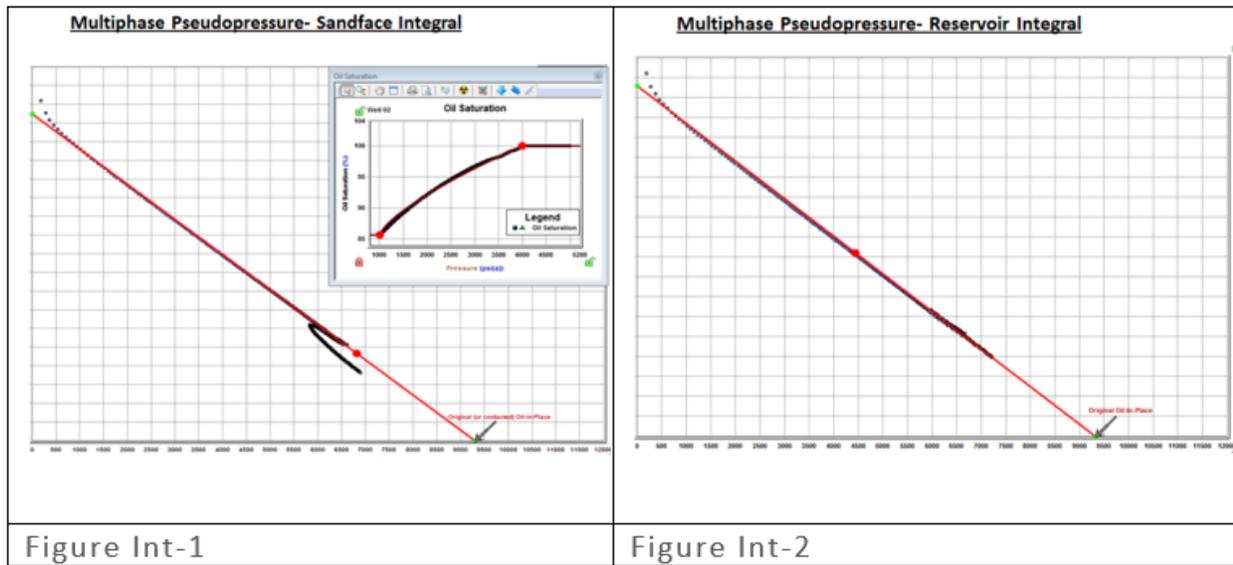

vii: On the basis of Equation 2, an FMB (A-G) analysis is created by plotting $\frac{q_o}{p_i - p_{wf}}$ versus $\frac{p_{pi} - \bar{p}_{pR}}{p_{pi} - p_{pwf}} N$. Since the Oil-In-Place, N, is not known, the solution is iterative. The value of N is modified until the data forms a straight line. This is illustrated in Figure FMB-1 and FMB-2.

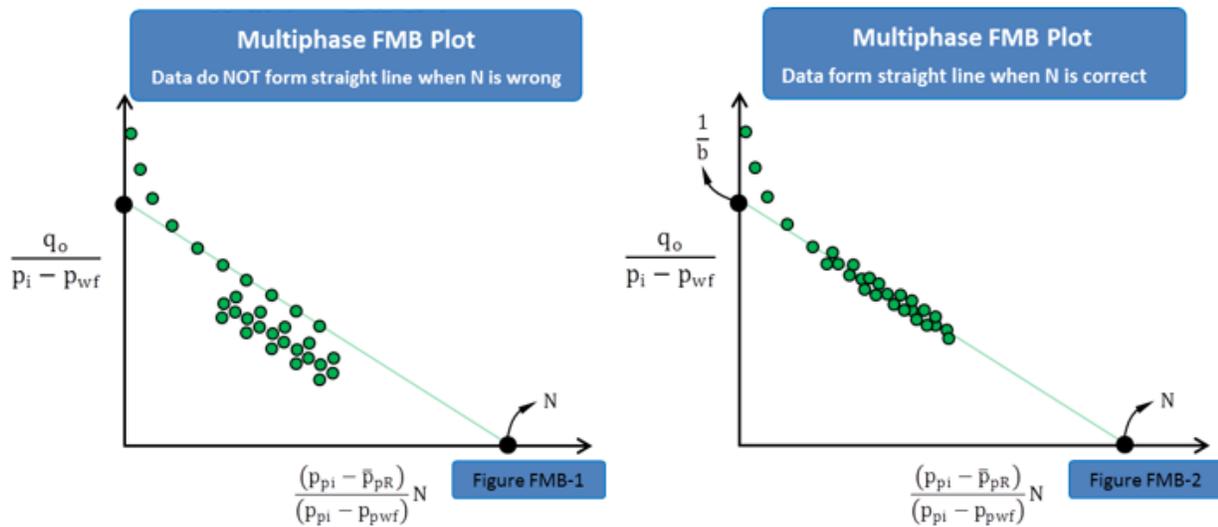


The x-intercept is the desired value of N. The y-intercept (1/b) is the (pseudo) Productivity Index, which is defined as:

$\text{Productivity Index} = \frac{1}{b} = \frac{q_o}{\bar{p}_{pR} - p_{pwf}}$	Equation 7
--	------------

viii: The productivity index varies during transient flow, but becomes constant during boundary-dominated flow. Because the pseudo-productivity index is defined in terms of pseudo-pressures, variations in saturation and relative permeabilities are accounted for (albeit in an approximate manner). As a result, the pseudo-productivity index becomes a constant (dependent only on reservoir shape, size, initial permeability, initial saturations, and well completion, which are all considered to be constant).

ix: For oil wells producing below the bubble point or producing water, the results of the multiphase FMB can be significantly different from a single-phase oil analysis.

x: For oil wells producing at a flowing pressure above the bubble point, the gas produced is purely solution gas, and flow in the reservoir is actually single phase. In this situation, the traditional single phase (using “pressure” for analysis) can yield the correct value of N at the beginning (when PVT properties are still relatively constant) — see Figure FMB-3a. When PVT properties change (while still in single-phase flow), a single-phase pseudo-pressure can be defined, and this straightens the data — see Figure FMB-3b. When pressures go below the bubble point, multiphase flow occurs and the multiphase pseudo-pressure defined above must be used to straighten the data, and obtain the correct value of N. This is demonstrated in Figure FMB-3c.

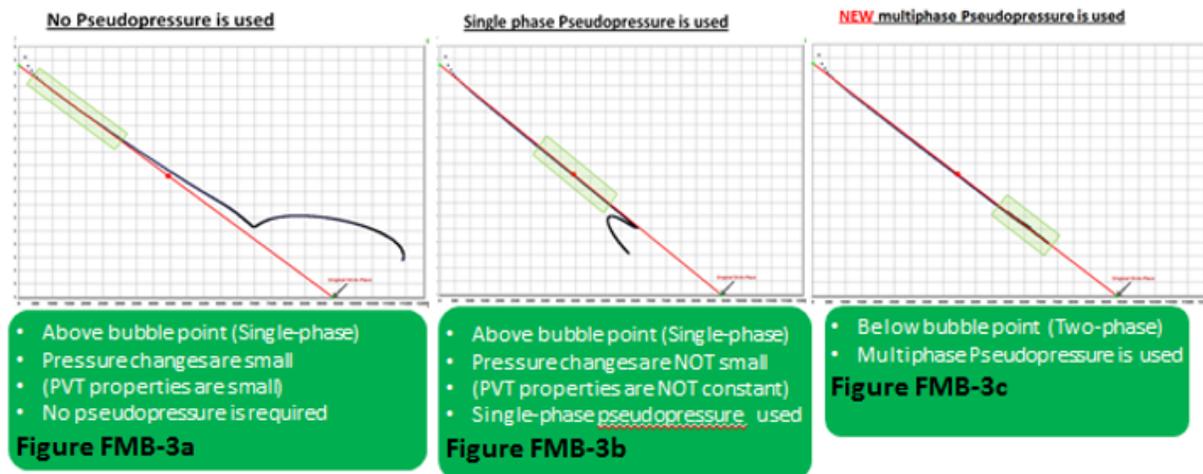

Important considerations

The multiphase FMB equations are developed for boundary-dominated flow, and like most reservoir engineering equations, involve simplifying assumptions. Since the multiphase FMB model has only


recently been implemented, the effect of these assumptions has not been extensively evaluated, and the results must be used with caution until they have been verified in everyday production situations. Some of the issues that need to be validated through use and independent confirmation of results are discussed below:

In some of the following situations, anomalies in the behavior of the data (even synthetic data) have been observed:

- a. When the bubble / dew-point pressure is crossed while production is still in transient flow. However, it is expected that the data catches up to the correct trend as production continues.
- b. Selecting Liquid-Rich Gas in the PVT Properties section. This option is sensitive to any inconsistencies inherent in the PVT properties.
- c. The Z^{**} used in the flowing P/Z^{**} calculation does not account for condensate and water production. Therefore, for rich-gas condensate reservoirs and cases with significant water production, the flowing P/Z^{**} plot may not line up with the analysis line. However, the analysis is correct: the A-G straight line points to the correct Original-Gas-in-Place, and the model's verified gas flow rates and flowing pressures are correct. The only problem is that the P/Z^{**} plot does not match, and this mismatch is not indicative of an incorrect analysis. Rather it indicates that the Z^{**} is not accounting for the liquid production.
- d. In some cases, a minimal adjustment of the relative permeability exponents (for example, changing n_g from 1.5 to 2) does improve the match between the data and the analysis.
- e. When analyzing multiphase production data in FMB, it is possible to generate an incorrect straight-line trend by increasing the volume in place. The recommended procedure is to select the **minimum** value of original-oil-in-place, which results in an A-G Analysis straight line. This issue becomes more critical when analyzing data that is still in transient flow, especially when the bubble / dew-point pressures are hit before the boundary-dominated flow is reached. An example of incorrect and correct interpretation is shown below (see item *h*).
- f. Since multiphase FMB takes into account the production rate of all phases that are entered in the Production editor, the often poorly measured or misreported water production rates might result in a more scattered FMB plot. In some jurisdictions, the condensate is inconsistently reported, sometimes as condensate production, sometimes as oil production, and sometimes as part of the (recombined) gas. These issues can be evaluated by removing these poorly reported rates from the Production editor.
- g. In analyzing the multiphase flow in the unconventional reservoir model (URM), moving the end-of-linear flow line in the square-root time plot, may cause the data to move (even when pseudo-time has not been selected). The reason for this is that by changing the end-of-linear flow line, the reservoir size is changing. Therefore, the average pressure, will correspond to a different saturation distribution, and as a result, has

different pseudo-pressure calculations. For a large reservoir volume, where changes in the saturation profile are not as important as for a smaller reservoir volume (or for single-phase flow), moving the end-of-linear flow line has an insignificant effect on the data.

- h. Since FMB equations are focused on boundary-dominated flow, caution has to be exercised during transient flow. For single-phase flow, the FMB has been used to reliably estimate the “contacted” volume. However, for multiphase flow, it may not be reliable for this purpose, and may give significantly misleading results. Moreover, the effect of flow geometry has not been completely studied. Two examples that illustrate some problems with Linear and Transient Flow are shown below:

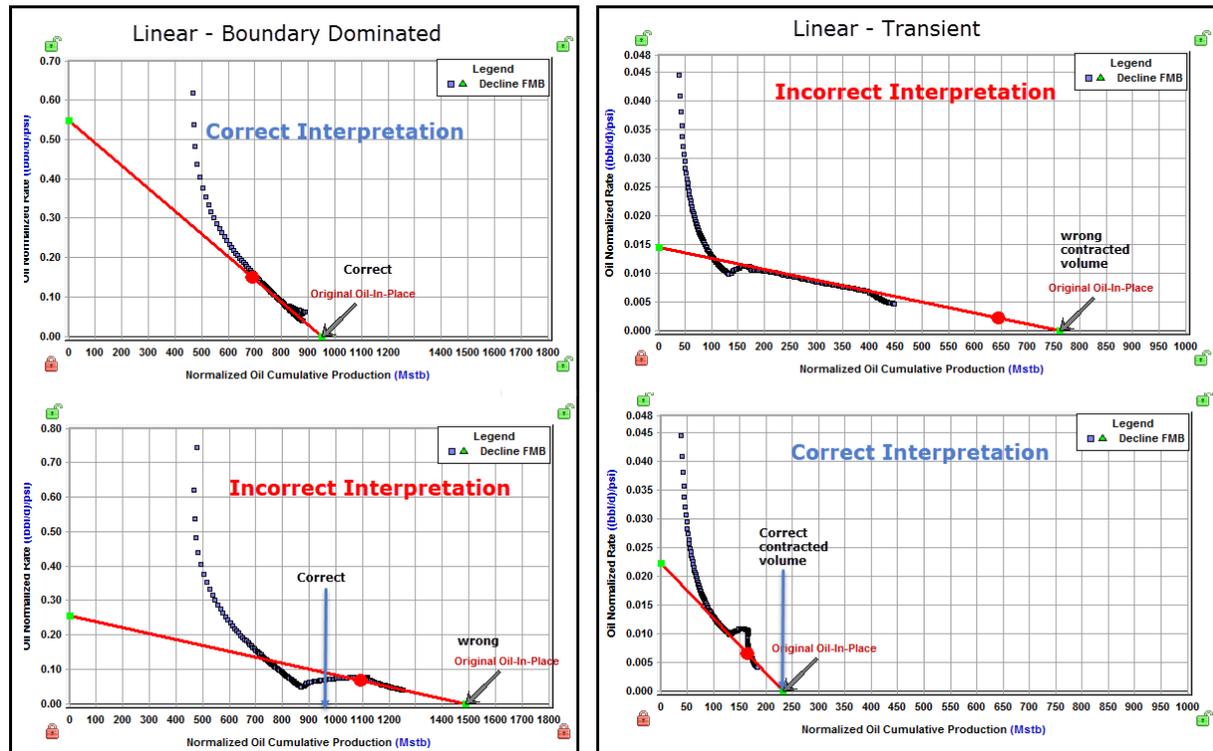

Publications

1. Behmanesh, H., Hamdi, H. and Clarkson, C. R. 2015. Production Data Analysis of Liquid Rich Shale Gas Condensate Reservoirs. Journal of Natural Gas Science and Engineering 22: 22–34. 10.1016/j.jngse.2014.11.005.
2. Behmanesh, H., 2016, Rate–Transient Analysis of Tight Gas Condensate and Black Oil Wells Exhibiting Two–phase Flow, Ph.D. thesis, University of Calgary.

3. Behmanesh, H., Hamdi, H., Clarkson, C.R. 2017. Production data analysis of gas condensate reservoirs using two-phase viscosity and two-phase compressibility, *Journal of Natural Gas Science & Engineering*, doi: 10.1016/j.jngse.2017.07.035.
4. Behmanesh, H., Mattar, L., Thompson, J. M., Anderson D. M., Nakaska, D. W. and Clarkson, C. R. 2018. Treatment of Rate-Transient Analysis During Boundary-Dominated Flow. *SPE Journal*, SPE 189967-PA doi:10.2118/189967-PA
5. Camacho-v, R. G., and Raghavan R. 1989. Performance of wells in solution-gas-drive reservoirs. *SPE Form Eval* 4.(4) 611-620. SPE-16745-PA. DOI: 10.2118/16745-PA.
6. Heidari, M., Behmanesh, H., and Clarkson, C. R. 2013. Multi-Well Gas Reservoirs Production Data Analysis. Presented at the SPE Unconventional Resources Conference Canada, Calgary, 5-7 November. SPE-167159-MS. <https://doi.org/10.2118/167159-MS>.
7. Heidari, M., Behmanesh, H. and Clarkson, C. R. 2014. New Semi-Analytical Method for Analyzing Production Data from Constant Flowing Pressure Wells in Gas Condensate Reservoirs during Boundary-Dominated Flow. Paper SPE 169515 presented at the SPE Western North American and Rocky Mountain Joint Regional Meeting, Denver, Colorado, 16-18 April. DOI: 10.2118/169515-MS.
8. Jones, J. R., & Raghavan, R. (1988, September 1). Interpretation of Flowing Well Response in Gas-Condensate Wells (includes associated papers 19014 and 19216). *Society of Petroleum Engineers*. doi:10.2118/14204-PA
9. Raghavan, R. (1976, August 1). Well Test Analysis: Wells Producing by Solution Gas Drive. *Society of Petroleum Engineers*. doi:10.2118/5588-PA.
10. Shahamat, M. S., & Clarkson, C. R. 2017. Multi-Well, Multi-Phase Flowing Material Balance. Paper SPE 185052 prepared for Presentation at the SPE Reservoir Evaluation & Engineering – Formation Evaluation, SPE 185052-PA doi:10.2118/185052-PA.

FMB model (*patent pending*) theory

The following theory is focused on oil as the flowing fluid of interest. The pseudo-pressure referenced is the “oil” pseudo-pressure. A parallel discussion, *mutatis mutandis* (after the necessary changes have been made), is relevant when gas is the primary fluid of interest.

The Agarwal-Gardner (A-G) flowing material balance (FMB) plot yields the original-oil-in-place as the x-intercept, and the pseudo-productivity index as the y-intercept. The pseudo-productivity index is given by:

$$\text{Pseudo-Productivity Index} = \frac{q}{\bar{P}_{pR} - P_{pwf}} = \frac{1}{b}$$

The pseudo-productivity index depends on the average reservoir pseudo-pressure, the flowing pseudo-pressure, and the flowing rates of the three producing fluids: oil, gas, and water. The pseudo-productivity index is a parameter that combines Darcy’s law, material balance, and accounts for the variations of fluid and reservoir properties such as: viscosity, formation volume factor, oil-gas-water saturations, geomechanical effects, desorption, etc.

Multiphase FMB uses the rigorous material balance equation to determine the average reservoir pressure, as a function of oil, gas, and water production for specified values of original-oil-gas-water-in-place. Multiphase FMB can account for the presence of water influx, and includes both production and injection rates. In addition, multiphase FMB also takes into account variations of fluid and reservoir properties such as: formation volume factor, oil-gas-water saturation, geomechanical effects, and desorption.

Having determined the oil pseudo-productivity index and the average pseudo-pressure in the FMB analysis, the FMB model uses the pseudo-productivity index and material balance equations in reverse, as follows:

1. Using the pseudo-productivity index:
 - a. **Oil Rate** — uses the measured flowing pressure to calculate a synthetic oil rate, and compares the synthetic and measured oil rates. Modifies the productivity index and the original-oil-in-place, N , until an acceptable history-match of the oil rates is obtained.
 - b. **Flowing Pressure** — uses the measured oil rate to calculate a flowing pressure, and compares the synthetic and measured flowing pressures. Modifies the productivity index and the original-oil-in-place, N , until an acceptable history-match of the flowing pressures is obtained.

- c. **Average Pressure** — uses the measured flowing pressure and the flowing oil rate to calculate a synthetic average reservoir pressure. Modifies the productivity index and the original-oil-in-place, N, until an acceptable history-match of the average pressure with 2a (see below) is obtained.


2. Using the material balance equation:

- a. **Average Pressure** — uses the measured flowing pressure and the flowing oil rate to calculate a synthetic average reservoir pressure. Modifies the productivity index and the original-oil-in-place, N, until an acceptable history-match of the average pressure with 1c (see above) is obtained.

Novelty of the FMB model

Historically, the FMB analysis is based on the A-G analysis (Agarwal et al. 1999). An example of an A-G FMB plot is shown in Figure FMB-Model-1a and FMB-Model-2a. This example is a multiphase gas well, but the FMB model applies to multiphase oil wells as well.


Figure FMB-Model-1a and FMB-Model-2a are plots of different analyses of the same data. Both analyses appear reasonable, but they give significantly different answers. It is obvious that for this data-set, the analysis' straight line can be placed in many locations, and that the corresponding original-gas-in-place values are non-unique over a wide range. Up until recently, there was no way out of this dilemma.

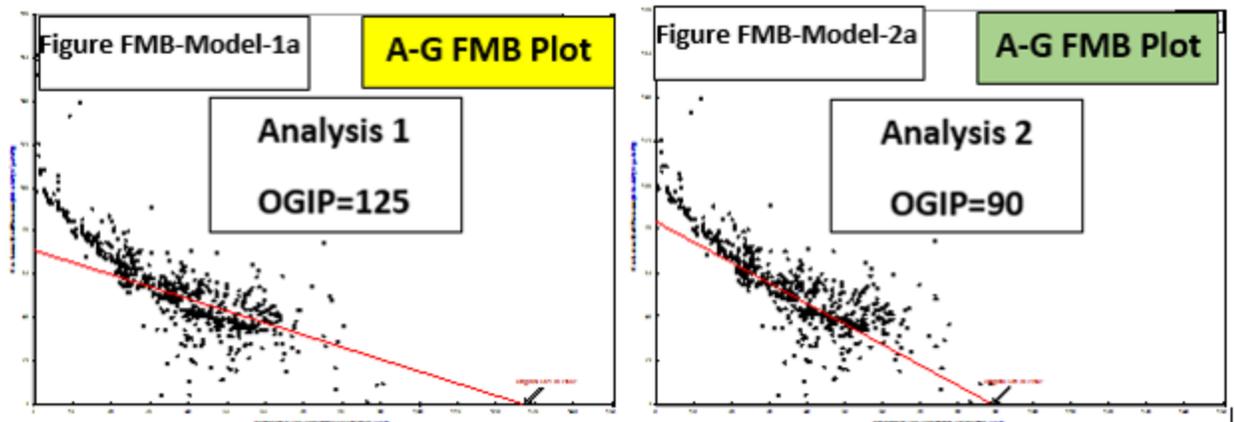


The FMB model solves this problem by creating a history-match of the flowing pressures, or the flow rates.

Figure FMB-Model-1b shows the rate history-match corresponding to Analysis 1. Clearly, this history-match is unacceptable. On the other hand, Figure FMB-Model-2b shows the rate history-match corresponding to Analysis 2. Clearly, this is an excellent history-match and confirms that the original-oil-


in-place determined from Analysis 2 is *consistent* with the data, whereas that of Analysis 1 is *inconsistent*.

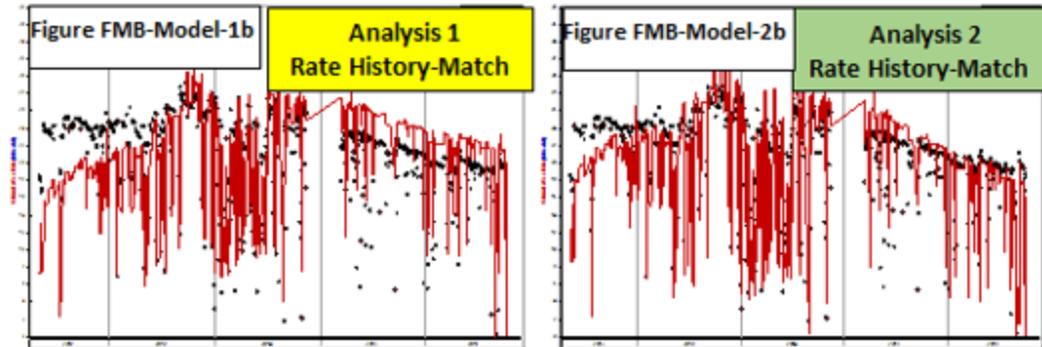

Similarly, Figure 1c and 2c are history-matches of the flowing pressures and confirm that Analysis 1 is *incorrect*, and that Analysis 2 is *correct*.

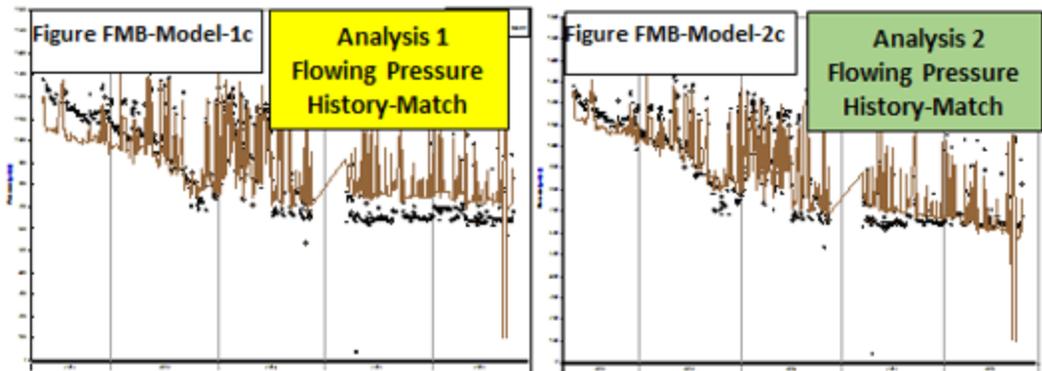

In addition to the rate history-match and the flowing pressures history-match, the FMB model can generate the average pressure within the drainage area of a well. This is shown in Figure FMB-Model-1d and FMB-Model-2d. The average reservoir pressure can be generated in two ways: from the productivity index (PI) and from the material balance (MB). When these two methods are congruent, the analysis is correct, as shown in Figure FMB-Model 2d. The utility of this plot is discussed further in reservoir group identification.

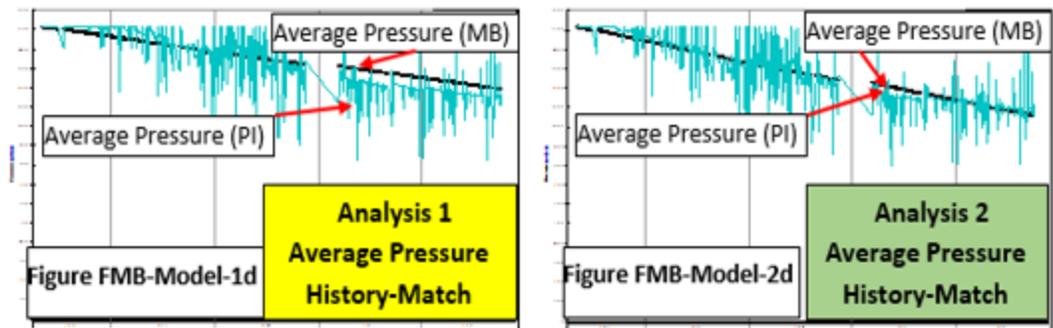


The conclusion for this example, is that the original-oil-in-place for this well is 90 BCF. This conclusion would not have been possible without the FMB model.

Reservoir group identification

The objective for using the Reservoir Group Identification plot is to identify which wells are in the same reservoir, and which wells are in separate reservoirs. If there are several wells producing from the same reservoir under stable conditions, they establish their own drainage areas, approximately in proportion to their flow rates. These drainage areas vary in shape and size, and depend in part on the flow rates. If the well's flow rates change, the no-flow boundaries between the wells move, and each well's drainage area changes correspondingly, until all the drainage areas have the same average pressure within them.

The phenomenon that, under stable flowing conditions, wells in the same reservoir have a common average pressure within their drainage areas as a function of time, provides a diagnostic to identify if two wells are in the same reservoir, or in different reservoirs.

Using the FMB model, the average pressure within the drainage area can be determined by selecting **Average Pressure** — see Figure FMB-Model-2d above. For each well, determine the correct average pressures (FMB Model Pressure-PI) as shown in Figure 2d. Compare these average pressures in the Comparison plot, as a function of time. If they follow the same trend, they most-likely belong to the same reservoir — (see Wells A and B in Figure 3), and if they have different trends, they most-likely belong to separate reservoirs — (see Well C in Figure 3).

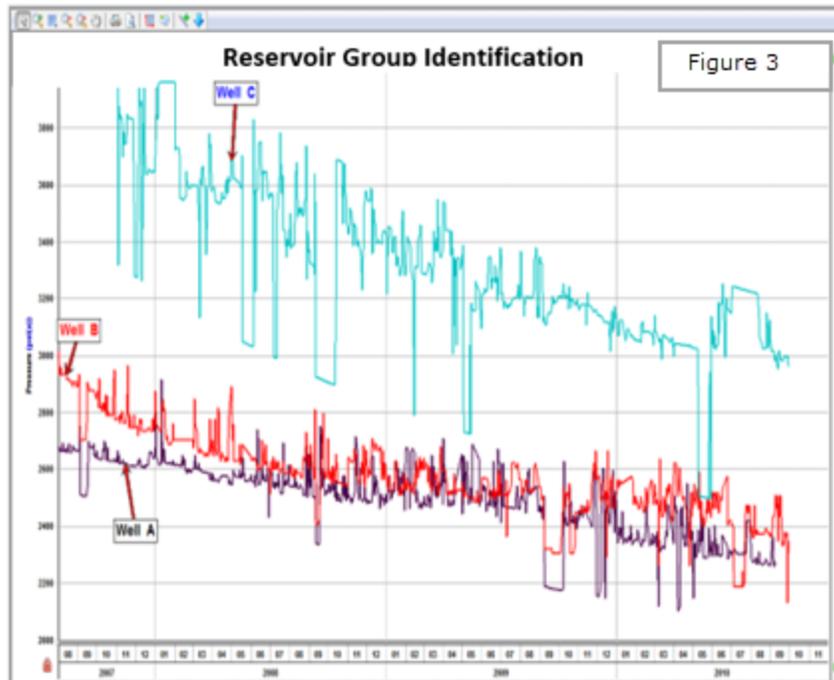

Duong decline analysis theory

The Duong analysis was developed specifically for unconventional reservoirs with very low permeability. The shape of the curve is suited for wells that exhibit long periods of transient flow. The Duong method will reach a finite EUR, and tends to be more conservative than traditional Arps declines with $b > 1$.

The Duong Production Decline Model		
$q =$	$q_1 t^{-m} \exp\left[\frac{a}{1-m}(t^{1-m} - 1)\right] + q_\infty$	Rate expression as a function of time
$Q =$	$\frac{q_1}{a} \exp\left[\frac{a}{1-m}(t^{1-m} - 1)\right]$	Cumulative production as a function of time
$EUR =$	$\frac{q_f}{a} t_f^m$	EUR in terms of model parameters
Reference <u>SPE</u> paper 137748.		

Hall plot theory

The Hall plot analyzes steady-state flow at an injection well. In general, the slope of a Hall plot is interpreted as an indicator of the average well injectivity. At normal conditions, the plot is a straight line. Kinks on the plot indicate changes to injection conditions.

Hall (in 1963) presented this technique to interpret routinely collected injection well data to draw conclusions regarding near-wellbore skin effects and average injectivity performance. The data required for a Hall plot analysis includes the following:

- monthly sandface injection pressures (monthly average)
- average reservoir pressure
- monthly water injection volumes
- injection days for the month

The Hall method assumes steady-state injection such that the injection rate can be expressed as:

$$i_w = \frac{0.00707kh(p_{wi} - p_{avg})}{\mu \left[\ln \frac{r_e}{r_w} + S \right]} \quad (\text{Equation 1})$$

where:

- k = permeability,
- h = reservoir thickness
- p_{wi} = flowing wellhead pressure
- p_{avg} = average reservoir pressure
- μ = fluid viscosity
- r_e = reservoir effective radius
- r_w = wellbore radius
- S = skin

Equation 1 is based on the following assumptions:

- the fluid is homogenous and incompressible
- the reservoir is vertically confined and uniform, both with respect to permeability and thickness

- the reservoir is horizontal and gravity does not affect flow (consequently, the flow is radial)
- the flow is steady-state
- the mobility ratio is equal to 1
- during the time of observation, the pressure at the distance equal to r_e is constant, and this distance itself is constant as well

At this point, it is assumed that k , h , μ , r_e , r_w , and S are constant. Therefore, Equation 1 reduces to:

$$i_w = C(p_{wi} - p_{avg}) \quad \text{(Equation 2)}$$

where:

$$C = \frac{0.00707kh}{\mu \left[\ln \frac{r_e}{r_w} + S \right]} \quad \text{(Equation 3)}$$

Rearranging Equation 2 yields the following:

$$(p_{wi} - p_{avg}) = \frac{i_w}{C} \quad \text{(Equation 4)}$$

Integrating both sides of Equation 4 with respect to time gives:

$$\int_0^t (p_{wi} - p_{avg}) dt = \frac{1}{C} \int_0^t i_w dt \quad \text{(Equation 5)}$$

The integral on the right-side of Equation 5 is cumulative water injected, so Equation 5 can be represented as:

$$\int_0^t (p_{wi} - p_{avg}) dt = \frac{W_i}{C} \quad \text{(Equation 6)}$$

where:


W_i = cumulative volume of water injected at time t , bbls

Closer inspection of Equation 6 indicates that a coordinate graph of its left-side of versus the right-side should form a straight line with a slope of $1/C$. This type of graph is called the Hall plot. If h , μ , r_e , r_w ,

and S are constant, then from Equation 3, the value of C is constant and the slope is constant. However, if the parameters change, C changes, and thus the slope of the Hall plot changes, which is where the diagnostic value of the plot lies.

Changes in injection conditions may be noted from the Hall plot. For example, if wellbore plugging, or other restrictions to injection are gradually occurring, the net effect is a gradual increase in the skin factor, S . As S increases, C decreases; thus, the slope of the Hall plot increases. Conversely, if S decreases (as would be the case if injecting pressure exceeds fracture pressure, causing fracture growth), then C increases and the slope of the Hall plot decreases. See Figure 1 for various injection well conditions and their Hall plot signatures.


Figure 1. Hall plot characteristic signatures

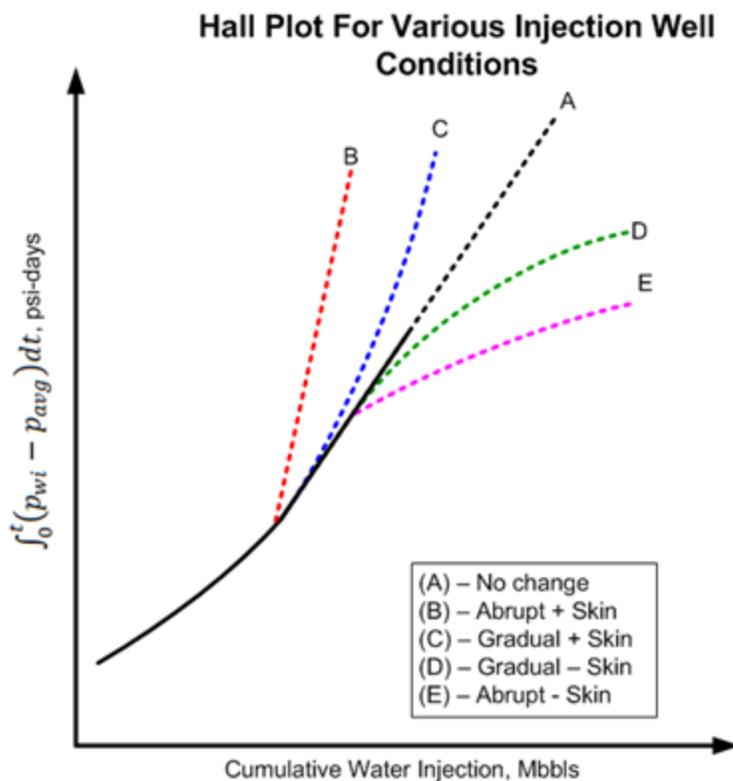

The most challenging part of developing the Hall plot is calculating the pressure-integral function of the y-axis. Fortunately, the integral can easily be solved. Consider Figure 2, which shows a graph of monthly sandface injection pressure, p_{wi} , and periodic estimates of average reservoir pressure, p_{avg} .

Figure 2. Sandface (bottomhole) injection and reservoir pressure vs. time

Bottomhole Injection and Reservoir Pressure vs. Time

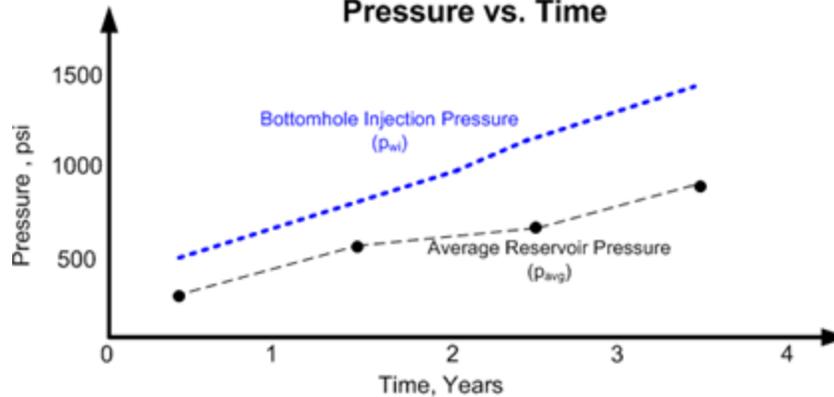

If it can be assumed that p_{wi} and p_{avg} are average for the month, then

$$\int_0^t (p_{wi} - p_{avg}) dt = \sum \Delta p * \Delta t \quad (\text{Equation 7})$$

where:

$$\Delta p = p_{wi} - p_{avg}$$

$$\Delta t = \text{number of injection days for the month}$$

Changes in the slope of the Hall plot typically occur gradually, so several months (six months or more) of injection history may be needed to reach reliable conclusions about injection behavior, as is the case for production decline curve analysis.

It is important to note that changes in the slope of the Hall plot can be the result of other factors. Early in the life of an injection well (before gas fillup), the radius of the water and oil zones increase with cumulative injection and cause the value of C to increase, resulting in a concave upward trend in the Hall plot. Recall that the Hall plot technique assumes a mobility ratio of 1.0. If the mobility ratio is greater than 1, then the Hall plot gradually trends concave downwards after gas fillup (as shown in curve D in [Figure 1](#)); if the mobility ratio is less than 1.0, it gradually trends concave upwards (see curve C). Also, as the average water saturation in the reservoir increases with time, k_w may increase, which can also affect the slope of the plot.

If after gas fillup it can be assumed that p_{avg} does not change significantly, then calculating the y-axis on the Hall plot is greatly simplified by dropping p_{avg} . This is because if p_{avg} is constant and ignored, the Hall plot is only shifted on the y-axis without changing the slope, or its diagnostic interpretive value. Under this condition, the sandface injection pressure (p_{wi}) is simply the wellhead injection pressure, plus a hydrostatic gradient, minus a frictional loss term. Since these two terms can usually be

assumed to be constant and neglected, the left-side of Equation 6 can simply reduce to the integral of the wellhead injection pressure, a dataset that is more readily available.

To determine whether average reservoir pressure is changing, it is necessary to conduct regular pressure buildup / falloff tests, and to monitor monthly voidage replacement ratio (VRR) plots. The objective of the Hall plot is to detect changes in the injection well's skin factor. It is not a perfect tool, but can, under certain conditions, provide reasonable insight on skin changes. The best tool for quantifying injection wellbore skin damage is a properly designed, well executed, and fully analyzed pressure falloff test.


References: Waterflooding Course, William M. Cobb & James T. Smith.

Material balance analysis theory

Overview

Material balance analysis is an interpretation method used to determine original fluids-in-place (OFIP) based on production and static pressure data. The general material balance equation relates the original oil, gas, and water in the reservoir to production volumes and current pressure conditions / fluid properties. The material balance equations considered assume tank-type behavior at any given datum depth — the reservoir is considered to have the same pressure and fluid properties at any location in the reservoir. This assumption is quite reasonable provided that quality production and static pressure measurements are obtained.

Consider the case of the depletion of the reservoir shown below. At a given time after the production of fluids from the reservoir has commenced, the pressure drops from its initial reservoir pressure p_i , to some average reservoir pressure, p . Using the law of mass balance, during the pressure drop (Δp), the expansion of the fluids left over in the reservoir must be equal to the volume of fluids produced from the reservoir.

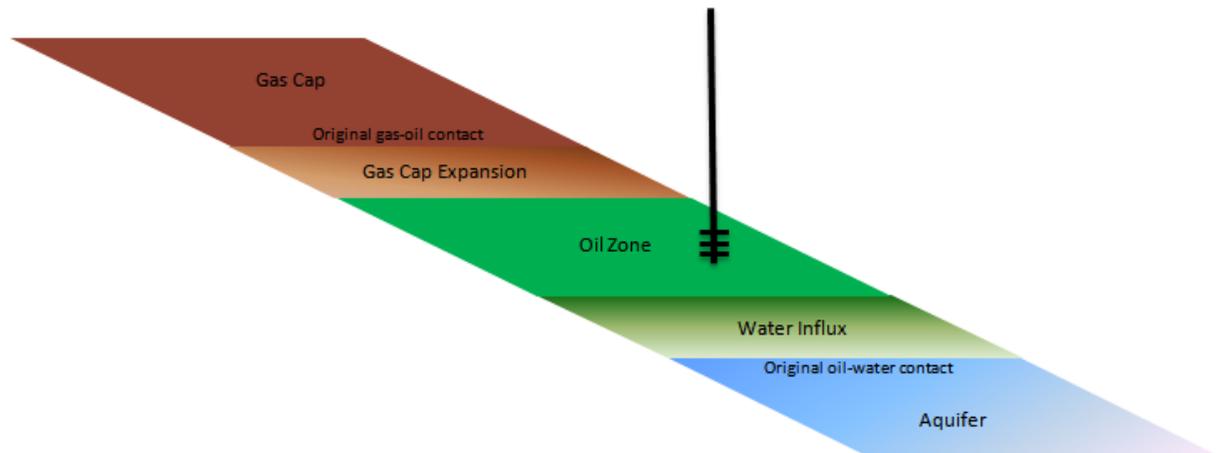

The simplest way to visualize material balance is that if the measured surface volume of oil, gas, and water were returned to a reservoir at the reduced pressure, it must fit exactly into the volume of the total fluid expansion, plus the fluid influx.

The general form of the equation can be described as net withdrawal (withdrawal - injection) = expansion of the hydrocarbon fluids in the system + cumulative water influx. This is shown in the equation below.

$$\begin{aligned}
 & N_p [B_o + B_g (R_p - R_s)] + W_p B_w - W_{inj} B_{winj} - G_{inj} B_{ginj} \\
 & = N \left\{ [B_o - B_{oi} + B_g (R_{si} - R_s)] + \frac{B_{oi}}{B_{gi}} m (B_g - B_{gi}) \right. \\
 & \quad \left. + B_{oi} (1 + m) \left(\frac{c_f + c_w S_w}{1 - S_w} \Delta p \right) \right\} + W_e B_w
 \end{aligned}$$

Each term in the equation can be grouped based on the part of the system it represents. The table below shows the terms and a simplified version of the general equation based on the terms.

Summary of terms in the material balance equation

Term	Description
$F = N E_t + W_e B_w$	Simplified general equation.
$F = N_p [B_o + B_g (R_p - R_s)] + W_p B_w - W_{inj} B_{winj} - G_{inj} B_{ginj}$	Volume of withdrawal (production and injection) at reservoir conditions is determined by the oil, water, and gas produced at the surface.
$E_t = E_o + \frac{B_{oi}}{B_{gi}} m E_g + B_{oi} (1 + m) E_{fw}$	Total expansion.
$E_o = B_o - B_{oi} + B_g (R_{si} - R_s)$	If the oil column is initially at the bubble point, reducing the pressure results in the release of gas and the shrinkage of oil. The remaining oil consists of oil,



Term	Description
	and the remaining gas still dissolved at the reduced pressure.
$E_g = B_g - B_{gi}$	Gas expansion factor. For example, as the reservoir depletes, the gas cap expands into the reservoir volume previously occupied by oil.
$E_{fw} = \frac{c_f + c_w S_w}{1 - S_w} \Delta p$	Even though water has low compressibility, the volume of connate water in the system is usually large enough to be significant. The water expands to fill the emptying pore spaces as the reservoir depletes. As the reservoir is produced, the pressure declines and the entire reservoir pore volume is reduced due to compaction. The change in volume expels an equal volume of fluid

Term	Description
	as production, and is therefore additive in the expansion terms.
$m = \frac{G B_{gi}}{N B_{oi}}$	Ratio of gas cap to original oil in place. A gas cap also implies that the initial pressure in the oil column must be equal to the bubble point pressure.
$W_e B_w$	If the reservoir is connected to an active aquifer, then once the pressure drop is communicated throughout the reservoir, the water encroaches into the reservoir resulting in a net water influx.

Not all terms are used at any one time, but the purpose of a complete equation is to provide a basis from which to analyze many types of reservoirs: gas expansion, solution gas drive, gas cap drive, water drive, etc. Terms that are not needed for a particular reservoir type cancel out of the equation. For example, when there is no gas cap originally present, the G and B_{gi} terms are zero.

Application of material balance

Material balance is an important concept in reservoir engineering because it is a performance-based tool used to establish the original volume of hydrocarbons-in-place in a reservoir that typically contains many wells. Additionally, the process of matching pressure-based depletion trends between wells

gives the reservoir engineer the ability to create a performance-based view of the connected pore volume in the reservoir. Consequently, it is important that:

1. All fluids taken from, or injected into the reservoir be measured accurately.
2. Pressure, volume, and temperature characteristics (PVT properties) be measured and validated. Subsurface samples from several properly conditioned wells are preferred.
3. At least one static pressure from each well prior to production, and several after production has commenced, are required to achieve good results.

The establishment of original-in-place fluid volumes and connected pore volume are critical to the development of ongoing depletion plans, especially where secondary or tertiary recovery methods are being considered.

Gas material balance

Gas material balance is a simplified version of the general material balance equation. When the general equation is reduced to its simplest form containing only gas terms, it appears as shown below:

$$G = \frac{G_p B_g}{(B_g - B_{gi})}$$


In this equation, it is assumed that gas expansion is the only driving force causing production. This form is commonly used because the expansion of gas often dominates over the expansion of oil, water, and rock. B_g is the ratio of gas volume at reservoir conditions to gas volume at standard conditions. This is expanded using the real gas law.

$$B_g = \frac{V_{res}}{V_{std}} = \frac{Z_{res} n R T_{res} p_{std}}{Z_{std} n R T_{std} p_{res}}$$

The reservoir temperature is considered to remain constant. The compressibility factor (Z) for standard conditions is assumed to be 1. The number of moles of gas do not change from reservoir to surface. Standard temperature and pressure are known constants. When B_g is replaced and the constants are canceled out, the gas material balance equation then simplifies to:

$$\frac{p}{Z} = - \left(\frac{p_i}{Z_i} \frac{1}{G} \right) G_p + \frac{p_i}{Z_i}$$

When plotted on a graph of p/Z versus cumulative production, the equation can be analyzed as a linear relationship. Several measurements of static pressure and the corresponding cumulative productions can be used to determine the x-intercept of the plot - the original gas-in-place (OGIP), shown as G in the equation.

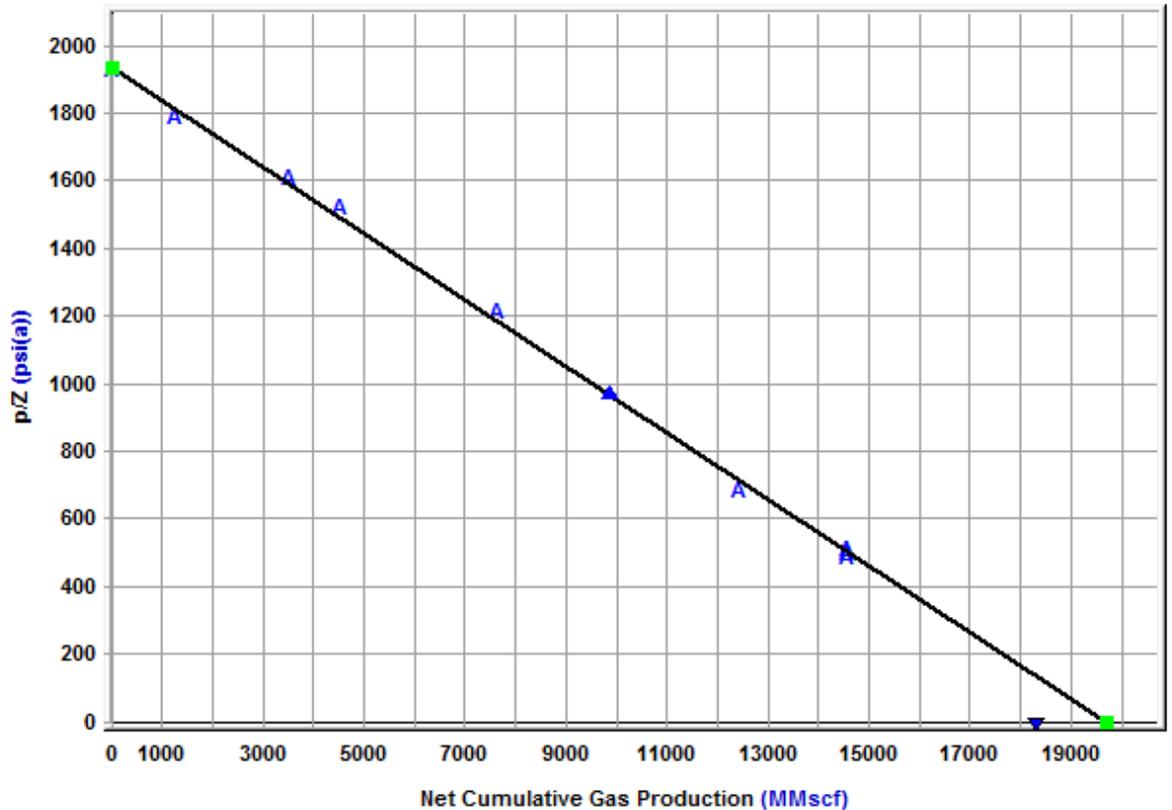

Advanced gas material balance

For a volumetric gas reservoir, gas expansion (the most significant source of energy) dominates depletion behavior; and the general gas material balance equation is a very simple, yet powerful tool for interpretation. However, in cases where other sources of energy are significant enough to cause deviation from the linear behavior of a p/Z plot, a more sophisticated tool is required. For this, a more advanced form of the material balance equation has been developed, and the standard p/Z plot is modified to maintain a linear trend with the simplicity of interpretation.

In his work on CBM, King (1993) introduced p/Z^* to replace p/Z . By modifying Z , parameters to incorporate the effects of adsorbed gas were incorporated, so the total gas-in-place is interpreted, rather than just the free gas-in-place; and a straight line analysis technique is still used. This concept has been extended to additional reservoir types with Fekete's p/Z^{**} method (Moghadam et al. 2009).



The reservoir types considered in the advanced material balance equation are: overpressured reservoirs, water-drive reservoirs, and connected reservoirs. The total Z^{**} equation is shown below with the modified material balance equation.

$$\frac{p}{Z^{**}} = \frac{p_i}{Z_i^{**}} \left(1 - \frac{G_p}{G} \right)$$

$$Z^{**} = \frac{p}{\left[\frac{1}{S_{gi}} \frac{p}{Z} (S_{gi} - c_{wip} - c_{ep} - c_d) + \frac{p_i}{Z_i} \left(\frac{G}{G_f} - 1 \right) \right] \frac{G_f}{G}}$$

Overpressured reservoir

At typical reservoir conditions, gas compressibility is orders of magnitude greater than that of the formation rock or residual fluids. In reservoirs at high initial pressures the gas compressibility is much lower, in the same order of magnitude as the formation. A typical example of this is an overpressured reservoir, which is a reservoir at a higher pressure than the hydrostatic column of water at that depth — in other words, a higher than expected initial pressure given the depth. In this situation, ignoring the formation and residual fluid compressibility results in over-prediction of the original gas-in-place. The initial depletion shows the effects of both depletion and reservoir compaction, and the slope of a p/Z plot is shallower. Once the pressure is much lower than the initial pressure, gas expansion is dominant and a steeper slope is observed on the p/Z plot. When matching on the shallower slope of this bow-shaped trend, all later pressure data is lower than the analysis line, and the estimated original gas-in-place is higher than the true original gas-in-place. The plot below shows an overpressured reservoir matched on the initial data, and the analysis line of the advance material balance method.

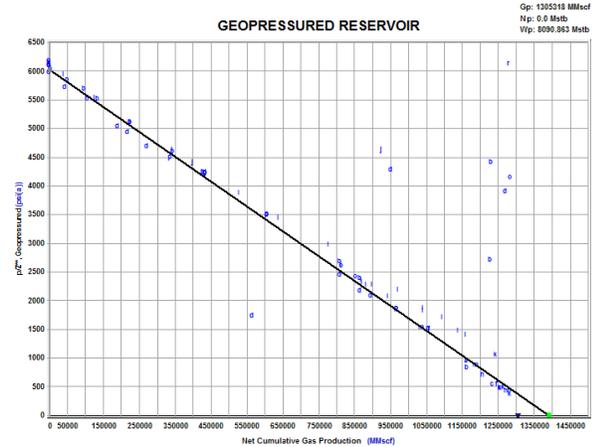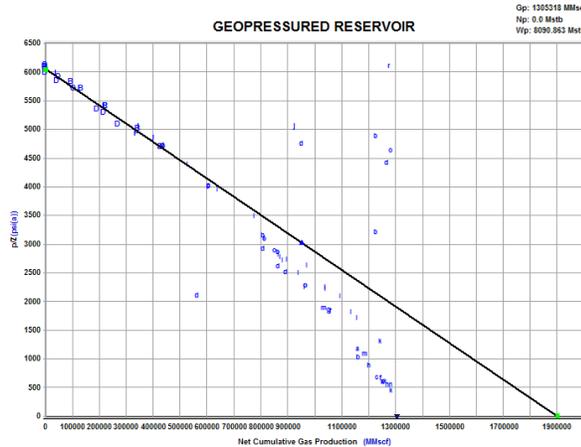

Based on the definition of compressibility, the following equation represents the total effect of formation and residual fluid compressibility:

$$\Delta V_{ep} = \frac{B_{gi}G}{S_{gi}} \left[\left(1 - e^{-\int_p^{p_i} c_f dp} \right) + S_{wi} \left(e^{\int_p^{p_i} c_w dp} - 1 \right) + S_{oi} \left(e^{\int_p^{p_i} c_o dp} - 1 \right) \right]$$

The approximate form of this equation, found by considering compressibility for oil, water, and the formation as constant; and e^x as $1 + x$, is:

$$\Delta V_{ep} = \frac{B_{gi}G}{S_{gi}} (c_f + S_{wi}c_w + S_{oi}c_o)(p_i - p)$$

In order to use this compressibility in the material balance equation, the change in pore volume is taken relative to the initial pore volume. The rigorous and approximate forms are shown below.

Rigorous form:


$$c_{ep} = \left(1 - e^{-\int_p^{p_i} c_f dp} \right) + S_{wi} \left(e^{\int_p^{p_i} c_w dp} - 1 \right) + S_{oi} \left(e^{\int_p^{p_i} c_o dp} - 1 \right)$$

Approximate form:

$$c_{ep} = (c_f + S_{wi}c_w + S_{oi}c_o)(p_i - p)$$

Water-drive reservoir

Some gas reservoirs may be connected to aquifers that provide pressure support to the gas reservoir as it is depleted. In this case, the pressure decrease in the gas reservoir is balanced by water encroaching into the reservoir. As this happens, the pore volume of gas is decreasing and the average reservoir pressure is maintained. Often this reservoir shows a flat pressure trend after some depletion. An example of this behavior on a p/Z plot is shown below.

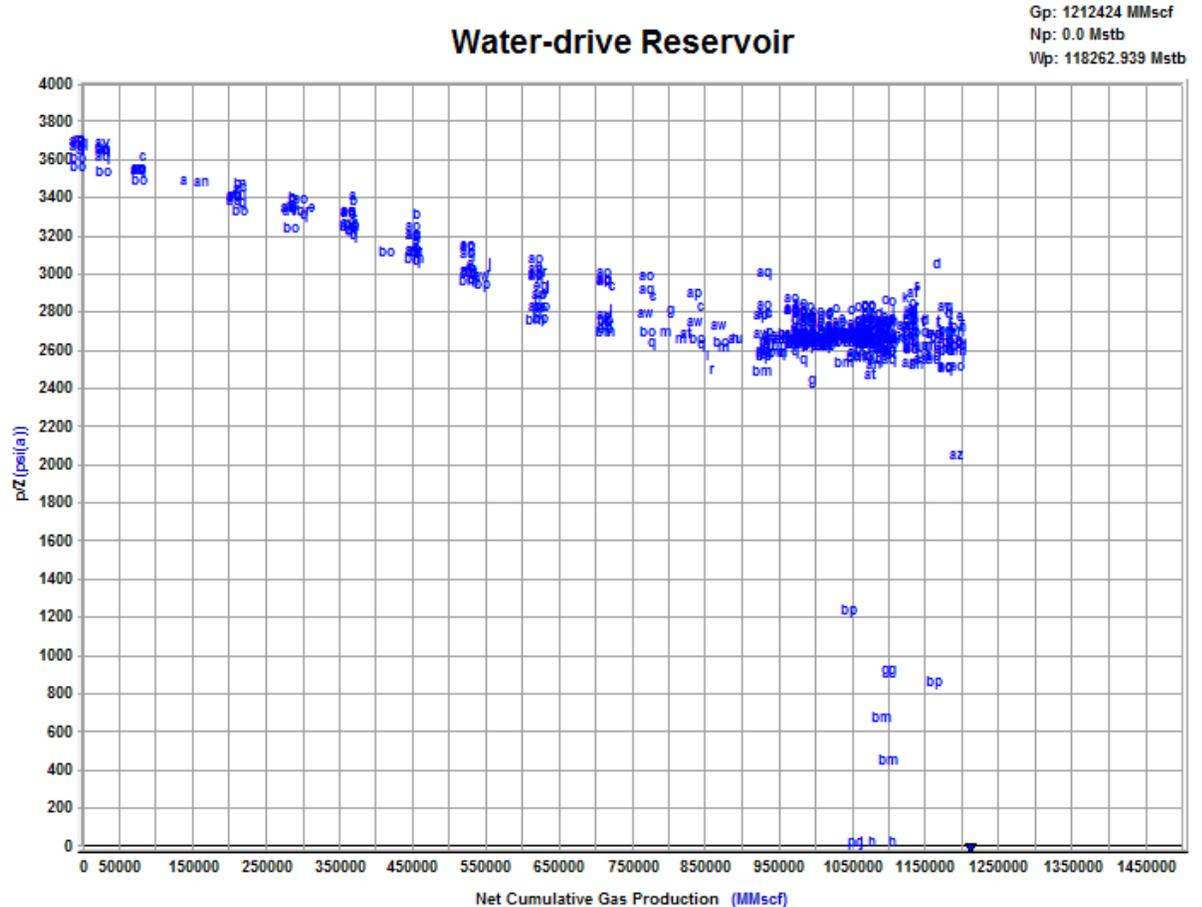

The change in reservoir volume due to net encroached water can be determined from the following equation:

$$\Delta V_{wip} = 5.615(W_e - W_\rho B_w)$$

To use this in the material balance, the change in pore volume is taken relative to the initial pore volume, shown below.

$$c_{wip} = \frac{5.615 (W_e - W_p B_w)}{B_{gi} G / S_{gi}}$$

When dealing with this equation, the major unknown value to be determined is water encroachment from the aquifer (W_e). Two aquifer models are provided to determine net encroached water: Schilthuis Steady-State Model and Fetkovich Model.

Schilthuis steady-state model

This is the simplest aquifer model and assumes the rate of water influx is proportional to pressure draw-down. In this model it is assumed that the aquifer volume is much larger than the gas reservoir and remains at the initial pressure.

$$W_e = K \int_0^t (p_i - p) dt = K \sum_{j=0}^n \left(p_i - \frac{p_j + p_{j-1}}{2} \right) (t_j - t_{j-1})$$

Using this model, the only parameter to solve for is the transfer coefficient (J).

Fetkovich

In the Fetkovich aquifer, the aquifer is assumed to be in pseudo-steady state and depleted according to the material balance equation. In this model, both the aquifer volume and transfer coefficient must be determined. The equations are shown below.

$$W_e = K \int_0^t (p_i - p) dt = K \sum_{j=0}^n \left(p_i - \frac{p_j + p_{j-1}}{2} \right) (t_j - t_{j-1})$$


$$W_{ei} = c_w p_{aqi} V_{aq}$$

$$J = \frac{k h}{141.2 \mu \left(\ln \frac{r_e}{r_o} - \frac{3}{4} \right)} \frac{\theta}{360}$$

While the transfer coefficient is defined, the required inputs to calculate the transfer coefficient are often not known. More commonly the transfer coefficient is determined as part of matching the p/Z plot.

Connected reservoir

Another scenario which appears as pressure support on the p/Z plot is the connected reservoir model. The generic description is that two gas reservoirs are connected, described by a transfer coefficient between them, and gas feeds from one tank to the other as one of the tanks is depleted. This can be observed with two gas reservoirs with some communication, two zones in a reservoir with different permeability, or some barrier between them, or even another way of considering the situation of free and adsorbed gas in a reservoir. Because both water-drive and connected reservoirs show pressure support, it can be easy to mistake which model should be used. In a connected reservoir, the influx into the main reservoir is gas, as compared to an influx of water in water-drive. So the pressure support is accompanied by more gas in the reservoir, rather than a shrinking reservoir as in water-drive. Typically if the initial p/Z trend points to an original gas-in-place smaller than the cumulative production, a connected reservoir is the appropriate model to use.

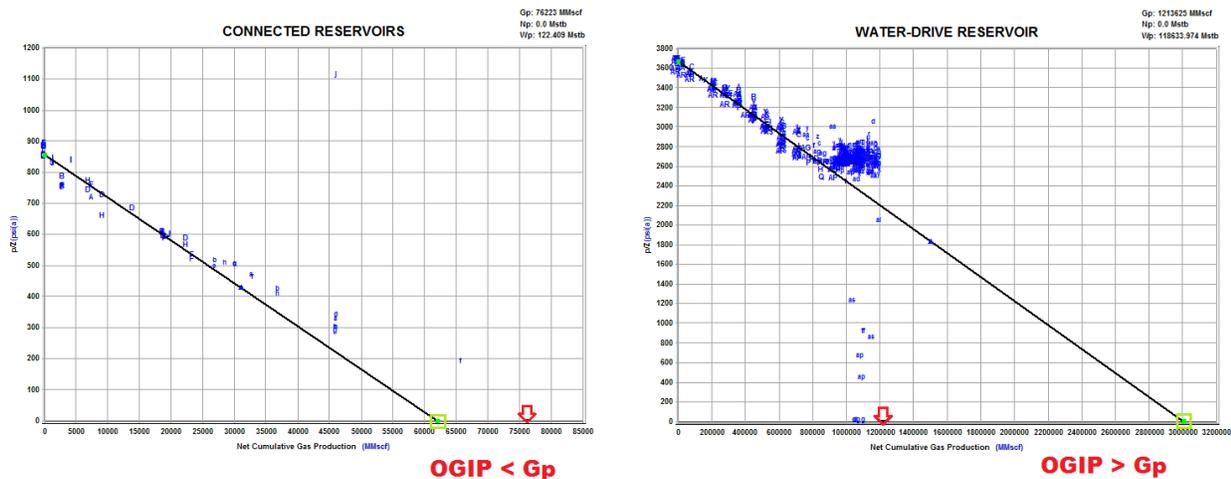

For a connected reservoir, the material balance equation is written as shown below to account for gas influx.

$$\frac{p_1}{Z_1} (S_{gi} - c_{wip} - c_{ep}) = \frac{p_i}{Z_i} \left(1 - \frac{G_{p1} + G_T}{G_1} \right) S_{gi}$$

$$\frac{p_2}{Z_2} (S_{gi} - c_{wip} - c_{ep}) = \frac{p_i}{Z_i} \left(1 - \frac{G_{p2} + G_T}{G_2} \right) S_{gi}$$

This can be converted into a dimensionless term similar to the terms describing relative change in pore volume (c_{wip} , c_{ep} , and c_d) for other models, as shown below.

$$c_d = -\frac{Z_1}{p_1} \frac{p_i}{Z_i} S_{gi} \frac{G_T}{G_1}$$

Similar to the water-drive model, the influx of gas from the second reservoir (G_T) is likely not a known value, and therefore it must be determined based on the size of the connected reservoir, and the transfer coefficient between the reservoirs. The equation for gas influx is shown below.

$$\Delta G_T = C(p_1 - p_2)\Delta t$$

Oil material balance


As seen in the general material balance equation, there are many unknowns, and as a result, finding an exact or unique solution can be difficult. However, using other techniques to help determine some variables (for example, m or original gas-in-place from volumetrics or seismic), the equation can be simplified to yield a more useful answer. Various plots are available to conduct an oil material balance rather than calculating an answer from individual measurements of reservoir pressure.

Havlena-Odeh (all reservoir types)

Similar to the interpretation of gas material balance, oil material balance uses plotting techniques. However, unlike the equation for single-phase gas expansion, the standard form of the material balance equation for oil reservoirs does not easily yield a linear relationship. The equation can be organized to show linear behavior. Based on the rearrangement below, the large combinations of terms are used as x and y , while G is the slope, and N is the intercept. This of course implies that water influx term for each data point is a known value, or the simpler scenario that there is no water influx. Additionally, if the water influx is neglected in calculating the terms, the result is non-linear behavior on the plot. This can be a diagnostic to determine the presence of water drive. In practice, the scatter in the data may be great enough, and the signature of water drive subtle enough that deviation from linear behavior on the Havlena-Odeh plot may go unnoticed.

$$\frac{F - W_e B_w}{E_o + B_{oi} E_{fw}} = N + G \left(\frac{E_g + B_{gi} E_{fw}}{E_o + B_{oi} E_{fw}} \right)$$

An example of the plot is shown below. The scatter shown in the data points demonstrates the difficulty in determining trends in the reservoir behavior.

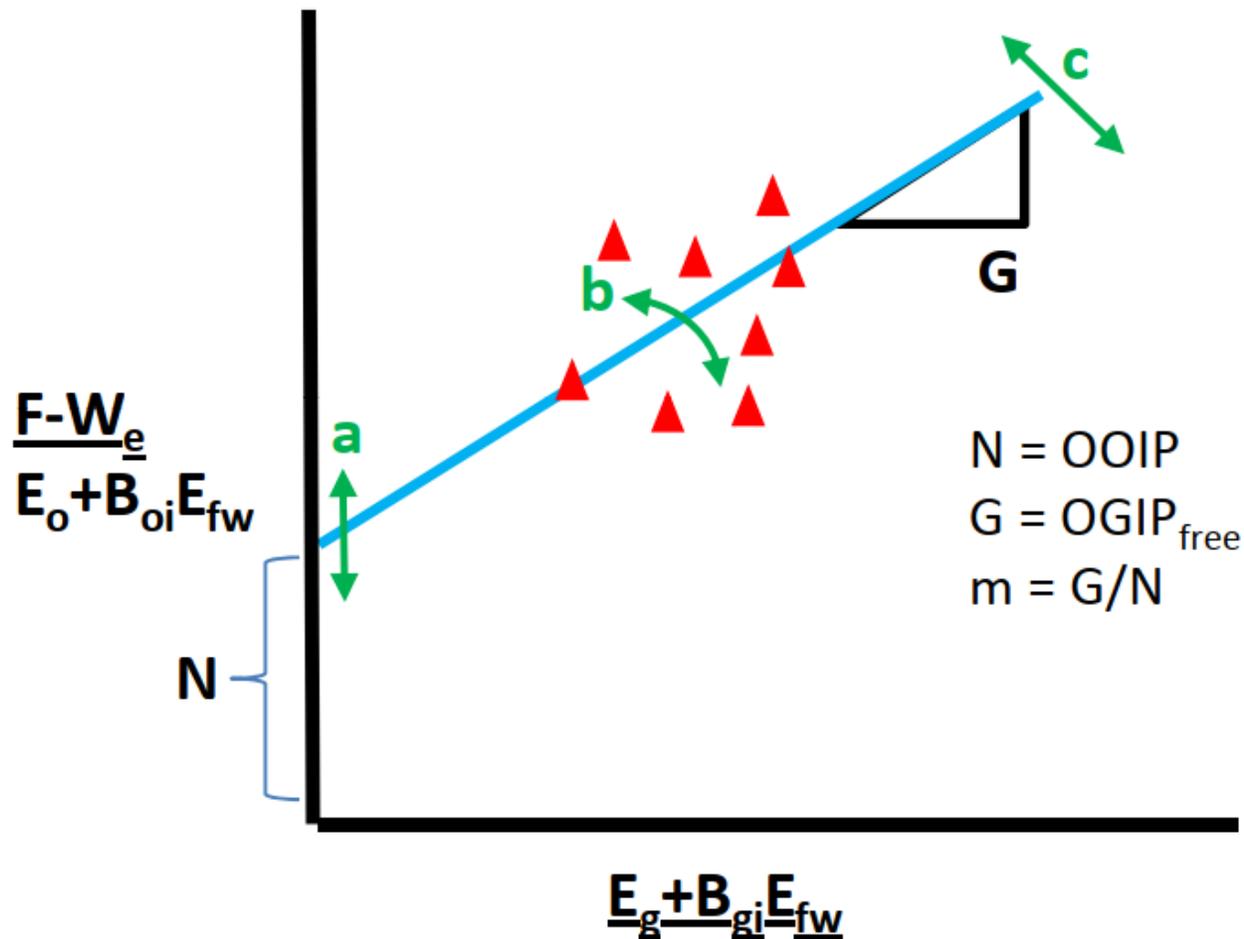

- **Movement around a** — moves the y-intercept. Changes N and keeps G (OGIP_f) constant.
- **Movement around b** — rotates the line around the pivot point. Changes N and G at the same time.
- **Movement around c** — rotates the line around the y-intercept. Changes G and keeps N constant.

The slope of the line is G and the y-intercept is N. This plot provides a solution to G and N simultaneously. Either G or N can be manually adjusted to achieve the best answer. *Care should be taken when using this plot as slight errors in pressure measurements can drastically affect results.* The data is more spread out in a cloud-like formation when errors are present in PVT or pressure data.

Note: "Scaling" applied to the plot can interfere with the appearance of a trend. Use your judgment when using this analysis.


This method works for most reservoir types. In the case of an undersaturated reservoir (above bubble point), the $E_g + B_{gi} * E_{fw}$ term is zero, and this plot is not as useful. The standard Havlena-Odeh plot can be substituted for one that excludes free gas terms.


Havlena-Odeh diagnostics: F vs. E_t (no initial gas cap)

If the reservoir to be analyzed has no initial free gas, the free gas terms of the equation can be eliminated. This equation is now much simpler to linearize. In the equation shown below, the total expansion term is split into the oil and water / formation expansion terms. Once again, the inclusion of water influx is such that it is assumed to be known.


$$F - W_e B_w = N(E_o + B_{oi} E_{fw})$$

In this form of the equation, N is the slope on a plot of expansion terms versus withdrawal and influx terms. There is no intercept, so the analysis line is typically forced through zero. Similar to the Havlena-Odeh plot that includes gas terms, if water influx is neglected and a non-linear trend results, this can be a diagnostic for observing water-drive effects. An example of the plot is shown below.

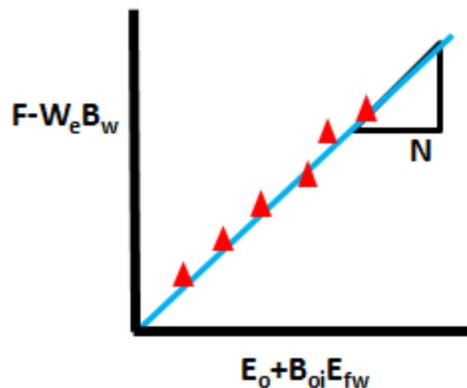


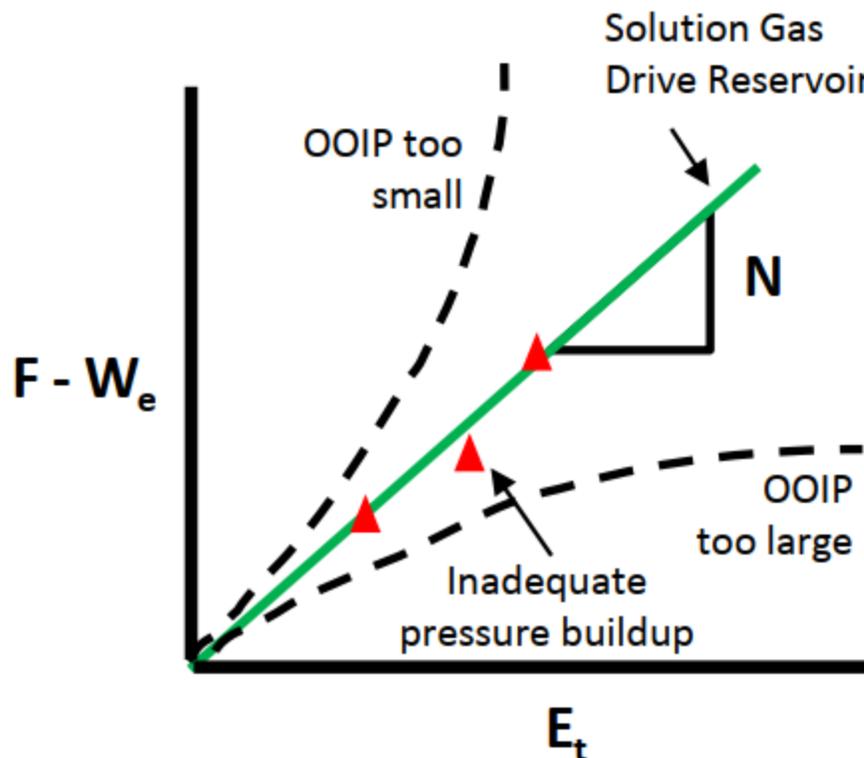

- **Linear trend** — a linear trend in the data indicates volumetric depletion behavior, or that all external drive mechanisms have been correctly accounted for.
- **Upward concave** — indicates that the OOIP is too small. Adjusting OOIP will linearize the points along the trend.
- **Downward convex** — indicates that the OOIP is too large. Adjusting OOIP will linearize the points along the trend.
- **Stray point** — an inadequate pressure buildup over time may be the reason that a pressure measurement comes in slightly below the predicted trend line. Other reasons may include inaccurate PVT data, or inaccurate production information for that time.

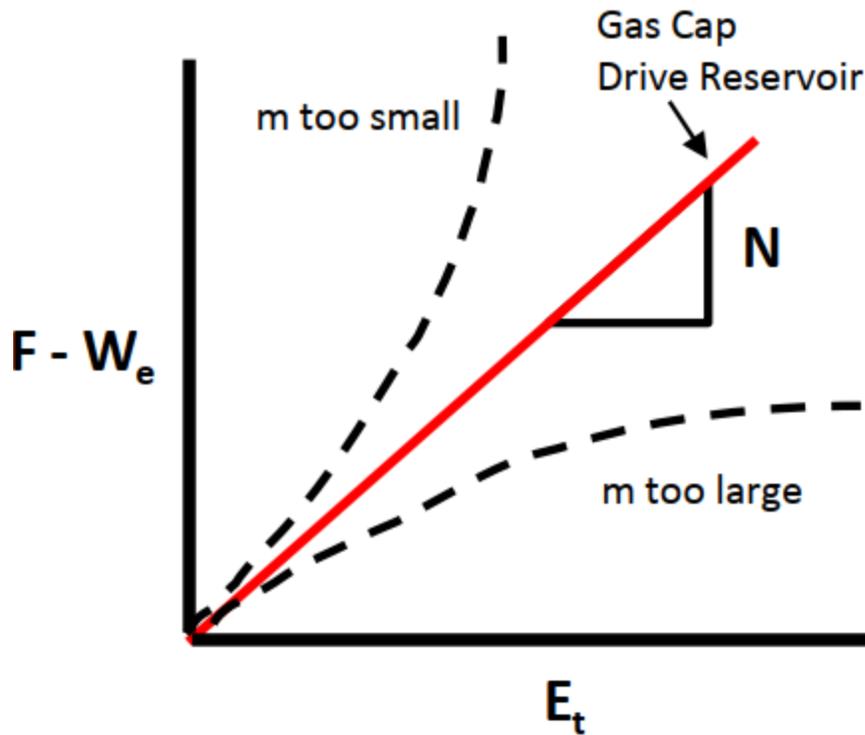


- **Linear trend** — a linear trend in the data indicates volumetric depletion behavior, or that all external-drive mechanisms have been correctly accounted for. Though it cannot independently determine the oil-in-place volume when a gas cap is present, the F vs. E_t plot can assist in confirming the consistency of the proposed solution.
- **Upward concave** — indicates that the gas cap is too small. Adjusting m or G should linearize the points along the trend.
- **Downward convex** — indicates that the gas cap is too large. Adjusting m or G should linearize the points along the trend.

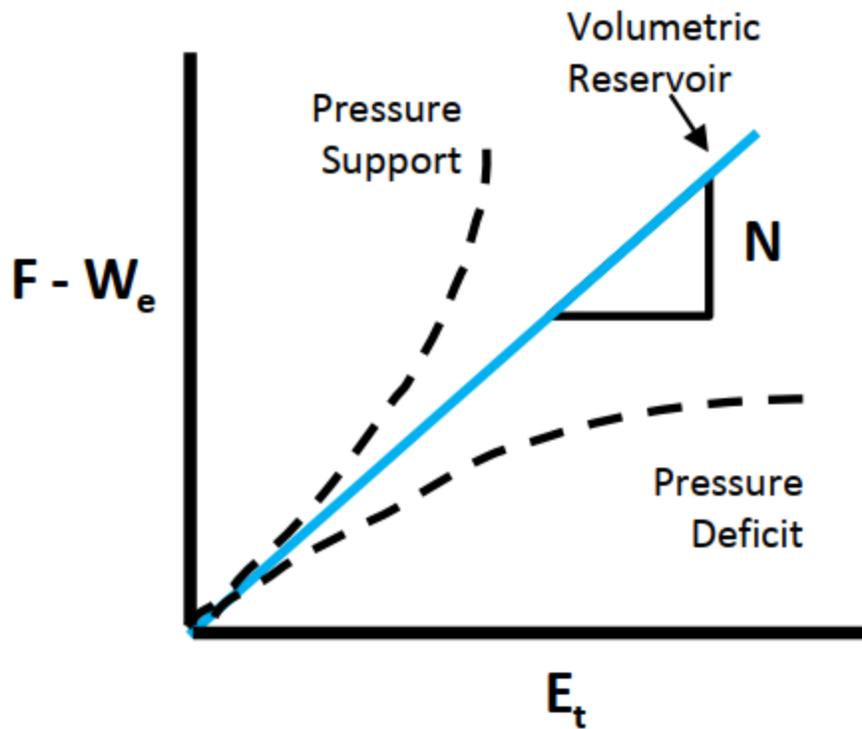

- **Linear trend** — a linear trend in the data indicates a volumetric expansion reservoir (solution gas or gas cap), provided the OOIP and OGIP are correct. The F vs. E_t cannot independently determine the exact reason for pressure support, but it can assist in confirming the consistency of the solution.
- **Upward concave** — indicates pressure support from unaccounted for water injection, fluid from another reservoir, aquifer, U-tube displacement of a producing reservoir's water leg by a connected reservoir, or the expansion of water.
- **Downward convex** — indicates a pressure deficit from late-time interference from unaccounted for producing wells, rock compressibility in an over-pressurized reservoir, or inflow that gradually decreases over time due to depletion.

Oil in place diagnostics (N vs. time)

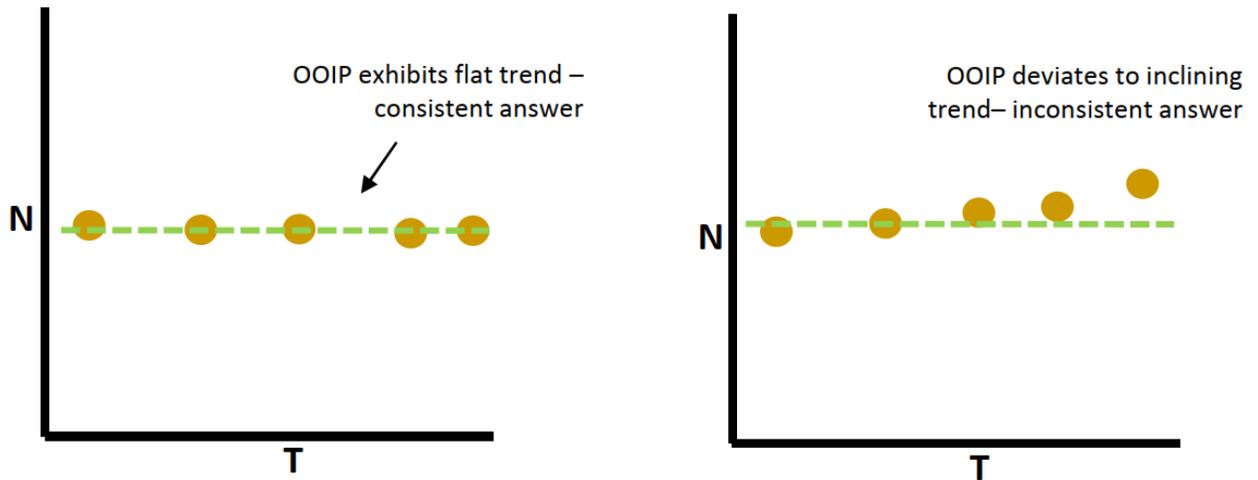


When applying material balance, it is a good practice to examine the validity of the results. The N vs. Time profile provides a useful check as to the consistency of the answer. The value of N is based on the input pressure, production, and PVT data. At each individual reservoir pressure, OOIP is calculated. An inconsistent trend in the OGIP usually indicates that there may be an external-drive mechanism present. This plot is also useful as a diagnostic to determine if the correct reservoir type has been assumed, and to assess the data quality. An inconsistent trend usually indicates that the quality of the pressure measurements are not good, or the definition of the wells in the reservoir should be reviewed. A consistent upward trend indicates that another drive mechanism may be present, whereas a downward trend indicates that not all wells in the reservoir have been included in the analysis. The type of drive mechanism is not evident, only that there is some "other" energy in the system that is not accounted for.

- **Flat trend** — a flat trend in the N values indicates volumetric depletion behavior, or that all external drive mechanisms have been correctly accounted for.
- **Inclining trend** — indicates that the reservoir is seeing additional pressure support, either from an aquifer or formation compressibility drive (geomechanical effects). However, the type of external drive mechanism is not distinguishable.

Note: This plot is meant to be used as a diagnostic guide to complement the analysis, and we recommend not putting too much emphasis on the interpretation. When there is a low frequency of pressure surveys, a trend may not be visible and this diagnostic plot may be of little value. Scaling applied to the plot can interfere with the appearance of a trend. Use your judgment when using this analysis.


Pressure diagnostics: P vs N_p

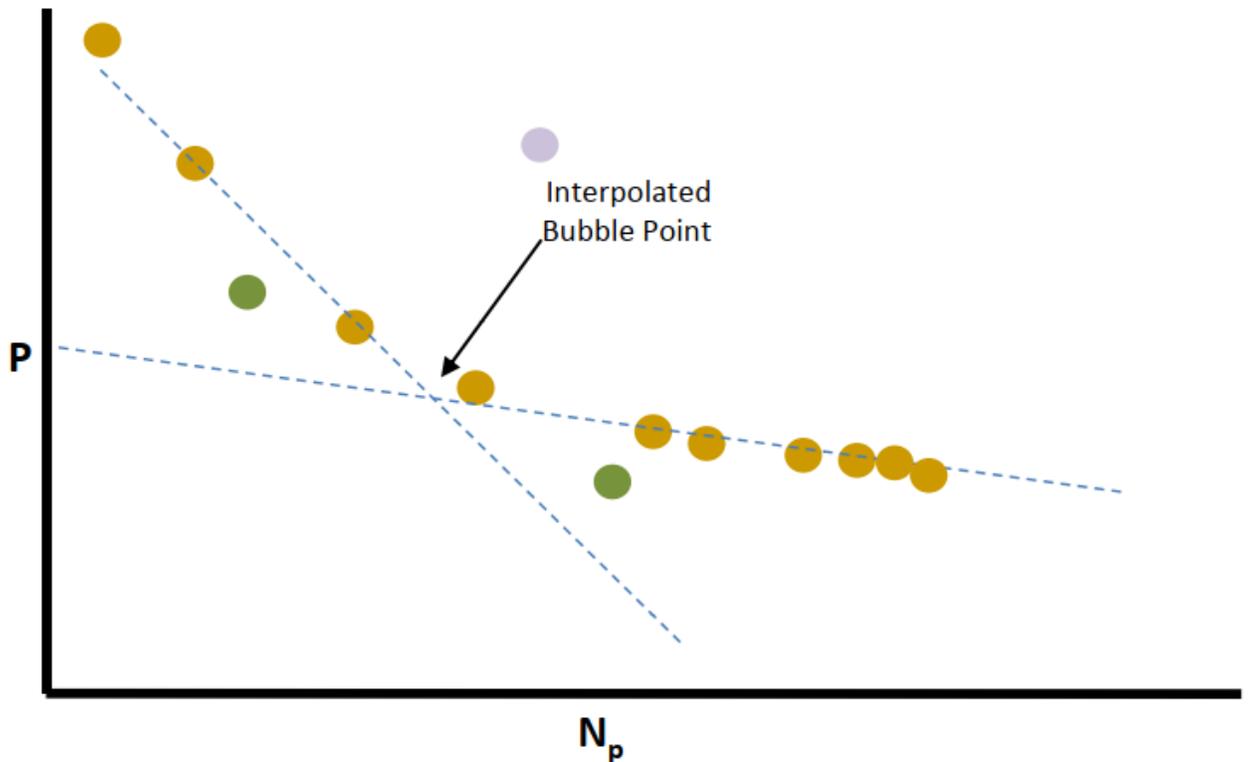

- **Inflection** — this is where the pressure depletion trend changes. At this point, the first bubble of gas comes out of solution, and the solution-drive-energy mechanism starts to decrease, thus the reservoir depletes at a slower rate.
- **Inclining static pressures** — indicates the start of gas or water injection.
- **Constant pressure** — may indicate aquifer support.
- **Erroneous pressure data** — may indicate that this well is not part of the reservoir.

Pressure vs. time

When applying material balance, it is a good practice to initially examine the pressure depletion profile. Any changes in production during the life of the reservoir should be visible in this plot. For example, the bubble point pressure is visible by a decrease in the pressure decline rate. The start of injection should be seen as an increase in the sandface pressure measurements. Examining the trends prior to the analysis helps give a frame of reference for the analysis. With these trends, you can learn from the diagnostic plots, which can help you understand if the final answers obtained from the analysis make sense.

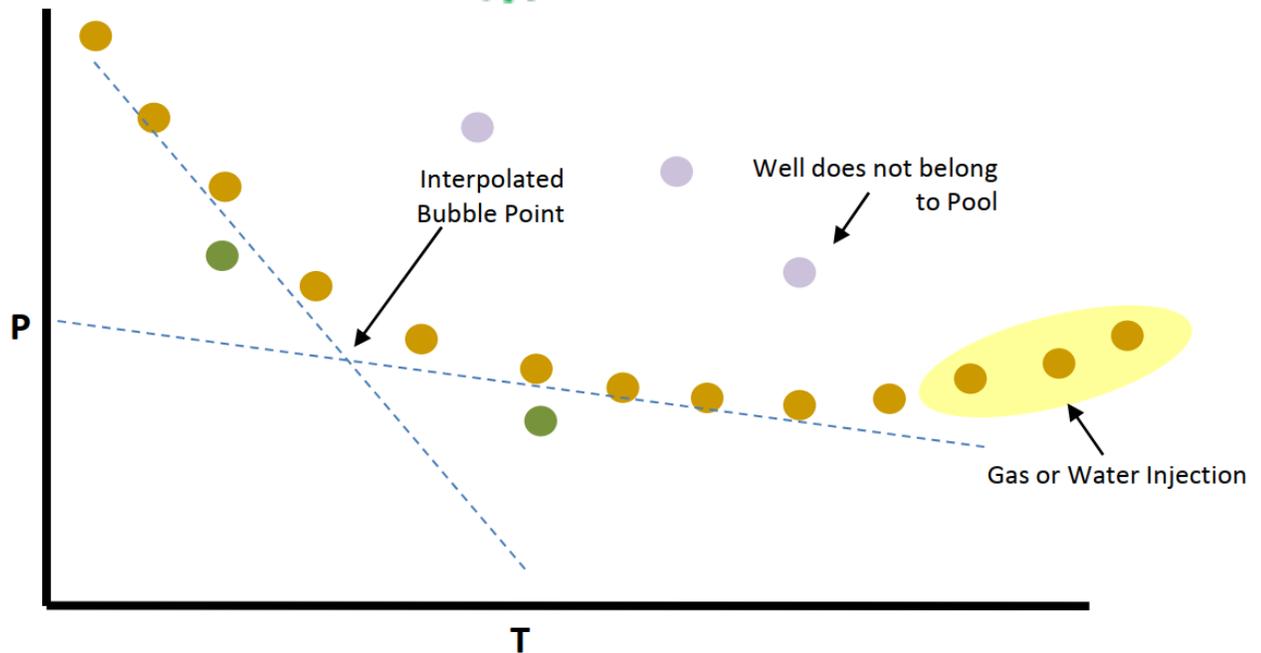

- **Inflection** — this is where the pressure-depletion trend changes. At this point, the first bubble of gas comes out of solution and the solution-drive-energy mechanism starts to decrease, thus the reservoir depletes at a slower rate.
- **Inclining static pressures** — indicates the start of gas or water injection.
- **Constant pressure** — may indicate that boundary-dominated flow has not yet been achieved, or the pressure of aquifer support.
- **Erroneous pressure data** — may indicate that this well is not part of the reservoir.

Note: This plot is meant to complement the analysis plot, and we do not recommend interpretation with pressure on its own. When there is a low frequency of pressure surveys, a trend may not be visible and this plot may be of little value.

Synthetic reservoir pressure

The pressure match method uses an iterative procedure that uses the values of original oil-in-place, original gas-in-place, and W to calculate the reservoir pressure versus time. The synthetic reservoir pressure is then plotted against the real measured static reservoir pressures and compared. This is by far the most robust and easily understood material balance technique for the following reasons:

1. Pressure and time are easily understood variables, so sensitivity analysis can be conducted relatively easily.


2. Use of time enables the analyst to see directly the impact of:

- Changing withdrawal rates, especially shut-ins on reservoir pressure declines.
- Injection operations on pressure response.
- Water drive and connected reservoirs on reservoir depletion, especially since these are both cumulative withdrawal and time-based processes.

3. A relatively simple, iterative process is used to achieve a unique solution wherein:

- Start with the simplest solution (oil and/or gas depletion only) and then proceed to more complex models only if demonstrated to be required.
- Employ a left-to-right matching technique (early-time to late-time), wherein initial reservoir pressure is matched first, followed by early-time depletion response, and then late-time responses. Since water drive and connected reservoir models are cumulative withdrawals and time-based, their responses are minimal at early-times and maximized at late-times.

Consistent and inconsistent history matches are shown below:

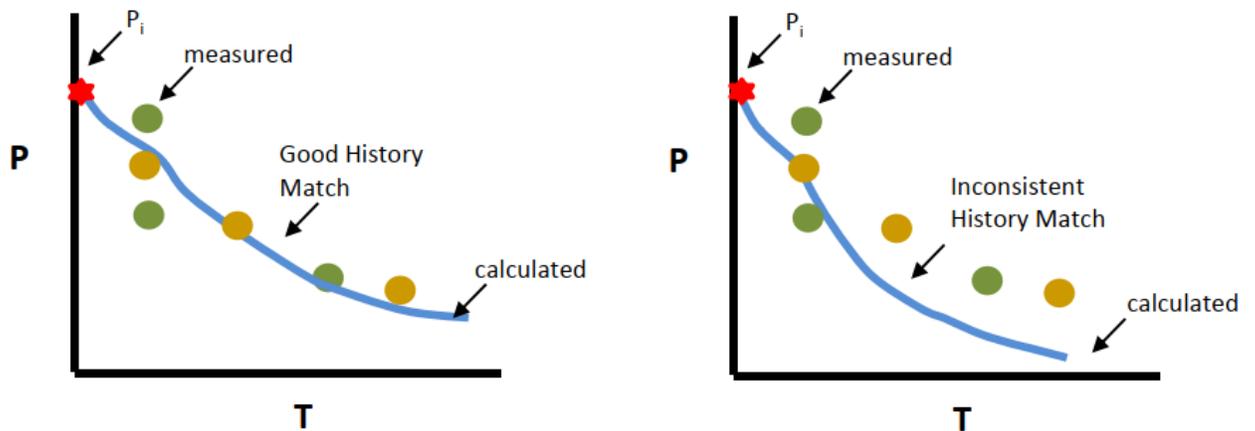


- **Good match** — the combination of G , N , and W_e has provided a valid solution to the material balance equation. Note that other combinations of values may exist as the solution is usually non-unique.
- **Incorrect / inaccurate PVT data** — results in a bad match. This causes problems early on when pressure depletion is low, and results in the oil & gas expansion terms having a large error.

- **Outlier production / pressure points** — water and solution gas may not be accounted for correctly. Also, outliers or erroneous pressure points may be incorrectly included in the analysis.
- **Incorrect pressure data** — in low permeability reservoirs, the well may not have been shut-in long enough to obtain a stabilized pressure, so pressure measurements could be on the low side.

Drive indices

Drive indices for oil reservoirs indicate the relative magnitude of the various energy sources acting in the reservoir. A simple description of a drive index is the ratio of a particular expansion term to the net withdrawal (hydrocarbon voidage). These drive indices are cumulative and change as the reservoir is produced. A plot of drive indices and the details of specific drive indices are shown below.

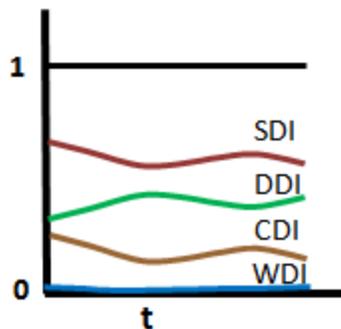


Summary

Drive Index	Description
$DDI = \frac{NE_o}{F}$	Depletion drive index
$SDI = \frac{NmE_g \left(\frac{B_{oi}}{B_{gi}} \right)}{F}$	Segregation (gas cap) drive index
$WDI = \frac{W_e B_w - W_p B_w}{F}$	Water drive index

Drive Index	Description
$CDI = \frac{N(1+m)E_{fw}B_{oi}}{F}$	Formation and connate water compressibility index

If the drive indices do not sum to unity (or very close to 1), the correct solution to the material balance has not been obtained.

Diagnostics

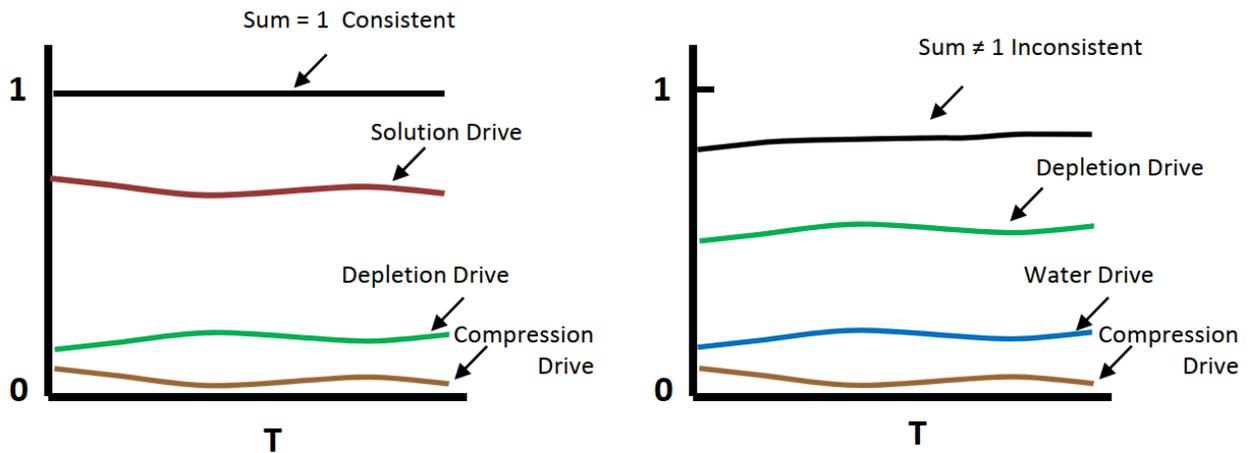

- **Sums to approx 1** — high probability that the correct solution to the material balance equation has been obtained.
- **Does not sum to 1** — the correct solution has not been obtained. If the summed drive indices are consistently greater than or less than unity, or show a consistent increasing or decreasing trend, this indicates that the correct solution has not been found. Possible reasons include an over-estimation of voidage, or withdrawals of energy have been defined incorrectly.

Some rules of thumb are:

- In a water-drive system, the depletion drive index should be greater than 0.2.
- In a gas-cap system, the depletion drive index should be greater than 0.65.
- In a real-life system, drive indices may not exactly sum to 1. A practical range should be between 0.95 and 1.05.

Diagnostics — Dake and Campbell

Dake and Campbell plots are used as diagnostic tools to identify the reservoir type based on the signature of production and pressure behavior. The plots are established based on the assumption of a volumetric reservoir, and deviation from this behavior is used to indicate the reservoir type.

Dake

In the Dake plot, the simplest oil case of solution gas / depletion drive (no gas cap, no water drive), is used to determine the axes of the plot. The material balance equation is rearranged as shown below.


$$\frac{F}{E_o + B_{oi}E_{fw}} = N$$

In a volumetric reservoir producing due to depletion drive only, production is balanced by the oil and water / formation expansion, and the original oil-in-place is constant. If a plot of cumulative oil production versus the net withdrawal over expansion is created with this reservoir type's data, the points remain along a horizontal line.

If a gas cap is present, there is a gas expansion component in the reservoir's production. As production continues and the reservoir pressure decreases, the gas expansion term increases with an increasing gas formation volume factor. To balance this, the withdrawal over oil / water / formation expansion term must also continue to increase. Thus in the case of gas cap drive, the Dake plot shows a continually increasing trend.

Similarly, if water drive is present, the withdrawal over oil / water / formation expansion term must increase to balance the water influx. With a very strong aquifer, the water influx may continue to increase with time, while a limited or small aquifer may have an initial increase in water influx that eventually decreases.

This diagnostic assumes that the formation compressibility is constant, $cf = cfi$. This plot is meant to be diagnostic in nature, and not too much emphasis should be placed on the interpretation. It is provided as a guide to complement the analysis. In certain cases where there is a low frequency of pressure surveys, a trend may not be visible, and this diagnostic may be of little value.

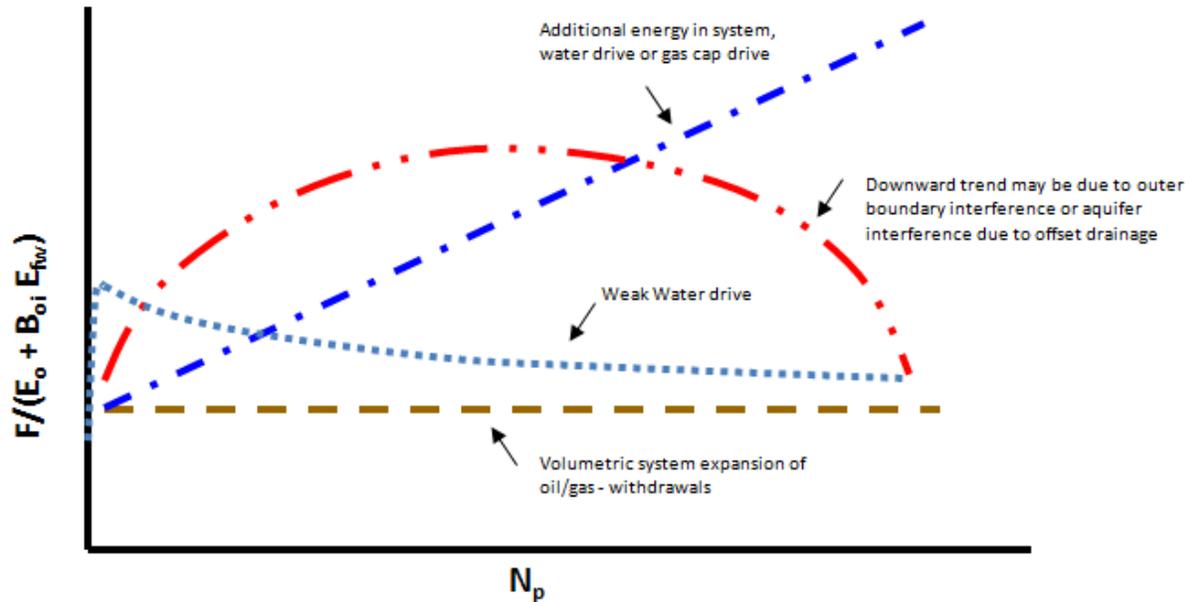


- **Horizontal straight line** — suggests a pure volumetric systems with no water influx. The energy of the reservoir is solely derived from the expansion of oil, dissolved gas in the solution, and the regular component of compaction drive.
- **Slight rising trend** — suggests the reservoir has been energized by a water influx and/or an abnormal pore compaction.
- **Steep rising trend** — suggests a strong water-drive system in which the aquifer displays infinite-acting behavior.
- **Rising then declining trend** — suggests an aquifer presence, and the effect of the outer boundary (that is, a finite aquifer). In this case, the aquifer is depleting with the reservoir itself, so the pressure support is minimal, and the external energy drive in the system is diminishing.
- **Declining trend** — suggests offset drainage or pressure depletion due to withdrawals by an offset reservoir (that is, a weak aquifer).

Campbell

The Campbell plot is a very similar diagnostic to Dake, with the exception that it incorporates a gas cap, when applicable. In the Campbell plot, the withdrawal is plotted against withdrawal over total expansion, while the water influx term is neglected. If there is no water influx, the data plots as a horizontal line. If there is water influx into the reservoir, the withdrawal over total expansion term increases proportionally to the water influx over total expansion. A weak aquifer exhibits the counter-intuitive trait of decreasing with time. The Campbell plot can be more sensitive to the strength of the aquifer. In this

version of the material balance, using only E_T neglects the water and formation compressibility (compaction) term. The Campbell plot is shown below.

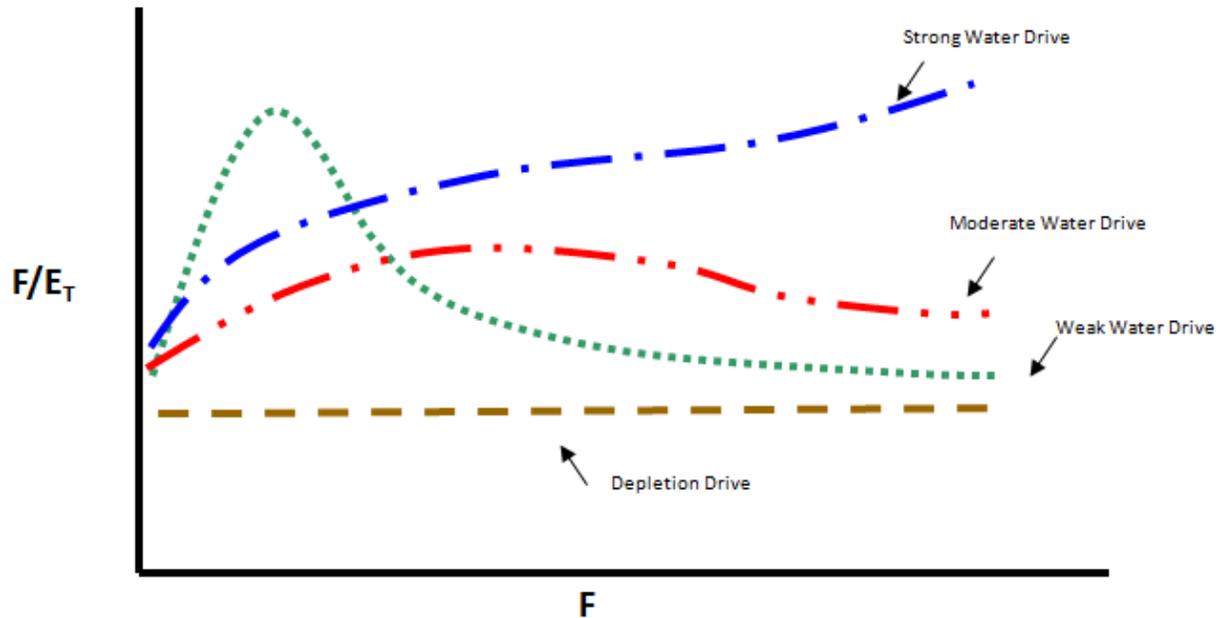

- **Horizontal straight line** — suggests a pure volumetric systems with no water influx. The energy of the reservoir is solely derived from the expansion of oil, dissolved gas in the solution, and the regular component of compaction drive.
- **Slight rising trend** — suggests the reservoir has been energized by a moderate water drive.
- **Steep rising trend** — suggests a strong water-drive system in which the aquifer displays infinite-acting behavior.
- **Declining trend** — suggests a weak water drive.

Note: This plot is meant to be used as a diagnostic guide to complement the analysis, and we recommend not putting too much emphasis on the interpretation. When there is a low frequency of pressure surveys, a trend may not be visible and this diagnostic plot may be of little value.

Volatile oil — Walsh formulation

Volatile oil is also called high shrinkage crude oil, or near-critical oil. It contains relatively fewer heavy molecules and more intermediates than black oils. It has a higher API (typically greater than 44), and is typically lighter in color.

A small reduction in pressure below the bubble point causes the release of a large amount of gas in the reservoir. An additional property is used to describe volatile oil – the volatile oil ratio R_v . The volatile oil ratio describes the amount of volatilized oil in the reservoir gas phase and is typically expressed in stb/ MMscf. The volatile oil ratio is often described as "the liquid content in the gas" or the "oil vapor in the gas". An oil reservoir can be described as volatile, if the gas in the gas cap or the gas that comes out of solution contains significant quantities of volatile liquids. Volatile oils normally contain more than 500scf/ stb of dissolved gas and the liquid content of the gas phase, the volatile oil ratio, would be more than 20stb/ MMscf.

Regular material balance does not account for volatile oil. In a reservoir containing volatile oil, the Walsh formulation is used to calculate original oil-in-place. The equations which are modified from standard material balance are shown below.

Terms	Description
$F = N_p \left(\frac{B_o - B_g R_s}{1 - R_v R_s} \right) + G_p \left(\frac{B_g - R_v B_o}{1 - R_v R_s} \right) + W_p B_w - W_{inj} B_{winj} - C_{inj} B_{ginj}$	Modified with drawal term for volatile oil.
$E_o = \frac{(B_o - B_{oi}) + B_g (R_{si} - R_s) + R_v (B_{oi} R_s - B_o R_{si})}{1 - R_v R_s}$	Modified oil expansion term for volatile oil.
$E_g = \frac{(B_g - B_{gi}) + B_o (R_{vi} - R_v) + R_s (B_{gi} R_v - B_g R_{vi})}{1 - R_v R_s}$	Modified gas expansion term for volatile oil.

Nodal analysis theory

Nodal analysis theory includes the following:

- Gas AOF / TPC
- Oil IPR / TPC

Gas AOF / TPC theory

Wellhead C, n deliverability

The "deliverability" of a system is its capacity to deliver gas as a function of pressure. The maximum possible capacity is called the absolute open flow potential (AOF), and reflects what the system could deliver if there were no external losses acting on it; (that is, if the flowing pressure was equal to zero).

The equation governing the inflow performance relationship is known as the Rawlins-Schellardt back-pressure equation. It is a universal relationship that applies to all gas wells and is independent of reservoir drive. It is generally derived from AOF or inflow performance testing. For wellhead deliverability, the equation is stated as:

$$q = C \cdot (P_{ts}^2 - P_{ff}^2)^n$$

Where:

q = flow rate, MMscfd or 10³m³/d
C = constant, MMscfd/(psi²)ⁿ or (10³m³/d/kPa²)ⁿ
n = turbulence of flow, dimensionless
P_{ts} = static wellhead pressure, psi or kPa
P_{ff} = flowing wellhead pressure, psi or kPa

Wellhead, C

The "C" value for a well defines the magnitude of the wells rate response to changes in pressure. Larger C values correspond to higher deliverability wells. A wellhead C value is sometimes available from a well-test report.

There are no limits on the range of allowed "C" values due to the complicated interaction between C, AOF, n, and pressure. Be aware however, that the system is very sensitive to changes in "C" and that extreme values of "C" can result in extremely large deliverability potentials, which can cause system instabilities.

Wellhead, n

The 'n' value is a measure of the effect of turbulence in the near-wellbore region on the well's performance. Values for "n" are valid only between 0.5 and 1.0. A default value of 1 corresponds to very

laminar flow, so little in the way of near-wellbore turbulent pressure losses. A value approaching 0.5 corresponds to significant losses due to highly turbulent flow in the near-wellbore region.

Values of n closer to 0.5 are most appropriate for wells that are expected to flow at high drawdowns, or for wells with high deliverability potential. Values approaching 1 are most appropriate for aging wells, or for low deliverability wells. Note that while in theory a value of $n = 1$ should not be possible, standard practice often prescribes an n value of 1 to aging or low deliverability wells that are expected to flow at a low rate.

Sandface C, n deliverability

With Sandface C, n deliverability, you can specify the constants of the back-pressure equation (also known as the Rawlins-Schellhardt equation), the Sandface "C" and the Sandface "n", to define the deliverability of the well at the sandface. The C and n values are generally determined from standard AOF / Back Pressure / Deliverability tests, but they can also be calculated / estimated from current operating conditions, if some assumptions are made.

Sandface C,n deliverability uses the back-pressure equation to define the well's deliverability. The back-pressure equation is an empirically derived industry standard that applies to all gas wells, independent of reservoir drive. It is generally derived from AOF or inflow performance testing. The back-pressure equation is stated as:

$$q = C \cdot (P_R^2 - P_f^2)^n$$

Where:

- q = flow rate, MMscfd or $10^3\text{m}^3/\text{d}$
- C = constant, MMscfd/(psi²)ⁿ or ($10^3\text{m}^3/\text{d}/\text{kPa}^2$)ⁿ
- n = turbulence of flow, dimensionless
- P_R = reservoir pressure, psi or kPa
- P_f = bottomhole flowing pressure, psi or kPa

Sandface, C

The "C" value defines the magnitude of the well's rate response to changes in pressure. There are no limits on the range of allowed "C" values. Be aware however, the system is very sensitive to changes in "C" and that extreme values of "C" can result in extremely large deliverability potentials, which can cause system instabilities.

Sandface, n

The inverse slope on the back-pressure plot, "n", describes the effect of turbulence in the near-wellbore region. Wells that are operating at high drawdowns, or wells with high permeability, can experience significant energy loss in the near-wellbore region due to the development of turbulent flow from the high gas velocities. The "n" value helps account for this effect.

An "n" value equal to 1 describes completely laminar flow (no turbulence), and an "n" equal to 0.5 describes a very turbulent flow. In practice, values equal to 1 or 0.5 are not seen, but it is fairly common industry practice to use an n of 1 on low-to-mid-deliverability gas wells that are not expected to operate at low drawdowns, and thus, where turbulent effects are minimal.

Values of n closer to 0.5 are most appropriate for wells that are expected to flow at high drawdowns, or for wells with high deliverability potential. Values approaching 1 are most appropriate for aging wells, or for low deliverability wells. While in theory a value of n = 1 should not be possible, standard practice often prescribes an n value of 1 to aging or low deliverability wells that are expected to flow at a low rate.

Another common practice for n when it is not known is as follows:


- <1 MMcfd use n = 1.0
- >5 MMcfd use n = 0.5
- 1-5 MMcfd use n = 1.0 - 0.5 (interpolation)

The n value is a function of permeability, or wellbore radius, of skin in the near-wellbore region, and other variables, so making an assumption based purely on well rate needs to be understood in this context. If possible, it is always better to use an n derived from a well test, or even from analogy of similar performing wells from the same geological structure.

The n value cannot be less than 0.5 or greater than 1.0. Input values less than 0.5 are automatically set to 0.5, and values greater than 1.0 are automatically set to 1.0.

Understanding the curves displayed in the Wellbore Tuning plot

The Wellbore Tuning plot displays the deliverability curves for the well, in addition to a few diagnostic curves.

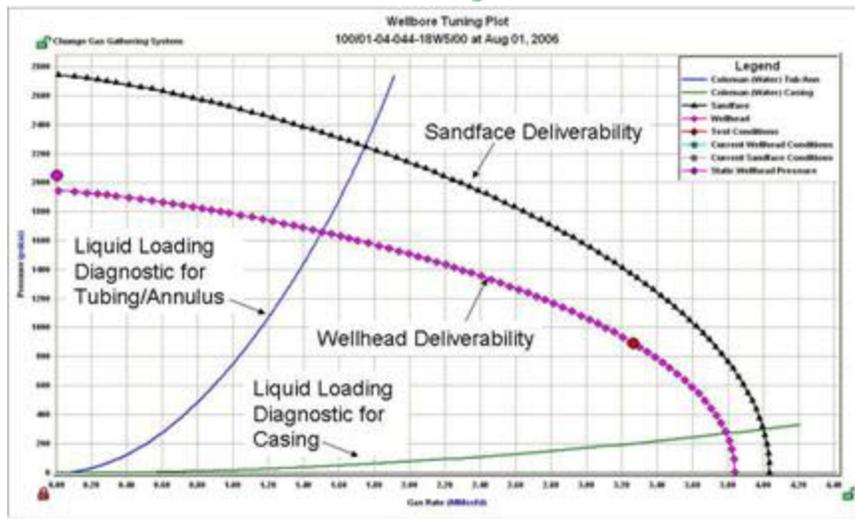

Sandface Deliverability Curve: The Sandface Deliverability curve is the black curve, and it displays the pressure response at sandface as a function of well rate. The curvature is defined as per the C and n values you enter, while the Y-intercept is defined by the current reservoir pressure (when the flow rate equals zero).

Wellhead Deliverability Curve: The Wellhead Deliverability curve is the purple curve. The wellhead deliverability curve displays the pressure response at the wellhead as a function of well rate. The Wellhead Deliverability curve is determined from the sandface deliverability curve and the pressure losses in the wellbore. For any given rate, the wellhead pressure can be defined as the sandface pressure at that rate minus the pressure losses in the wellbore.

Liquid Loading Diagnostic for Casing: The blue and green parabolic-shaped curves are the Liquid Loading diagnostics. There are two diagnostic curves displayed: one green and one blue. The green curve is a diagnostic for the casing. For any given pressure (measured at MPP), the green curve reflects the minimum flow rate required to lift liquids at MPP. For flow rates and pressures to the left of the green curve, liquids cannot be lifted at MPP, while for flow rates and pressures to the right of the green curve, liquids can be lifted at MPP.

Liquid Loading Diagnostic for Tubing or Annulus: The blue curve is the diagnostic for the tubing or annulus. For any given pressure (measured at EOT) the blue curve reflects the minimum flow rate required to lift liquids at EOT and above. For flow rates and pressures to the left of the blue curve, liquids cannot be lifted at EOT and above, while for flow rates and pressures to the right of the blue curve, liquids can be lifted at EOT and above.

There are separate diagnostics for the tubing / annulus segment and the casing segment because the diameter of each segment of the wellbore is different, and thus, the same flow rate through both segments results in different velocities for the gas. Generally the tubing / annular segment is a smaller

diameter then the casing segment. A well first reaches a point where liquids cannot be lifted in the casing, followed later by a lower rate to the point where liquids cannot be lifted in the tubing / annulus.


Sandface C calculation

With these calculations, liquid loading can be excluded or included.

Excluding liquid loading

It is assumed that gas can lift liquids throughout the wellbore. The single phase or multi-phase correlation is applied to the length of the wellbore.

A value for Sandface C is calculated based on the current flowing pressure, rate, and LGR that have been entered as the Surface Test condition.

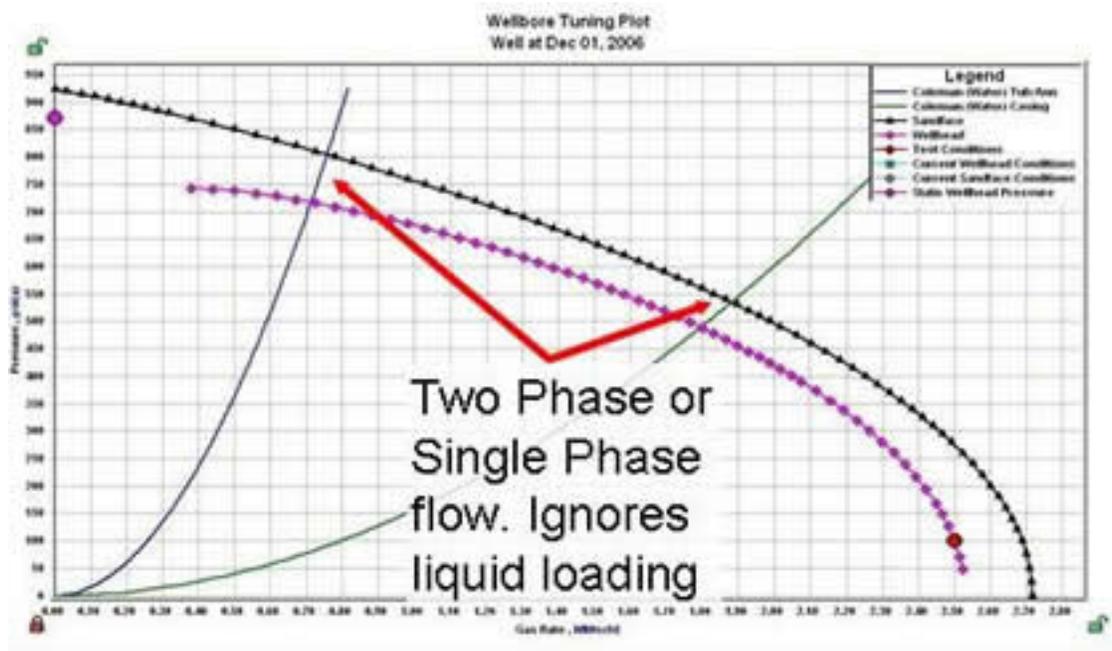

The above figure illustrates how the ability of the well to lift liquids is ignored. Note that to the left of the liquid-loading diagnostic curves for the tubing / annulus and casing (blue and green curves), there has been no change to the wellhead deliverability curve.

Including liquid loading


We can estimate the sandface deliverability of a well that can no longer lift liquids by using the non-flowing pressure. Note that non-flowing pressure can only be used when a well does not have a packer installed downhole.

Theory: using non-flowing side pressures to calculate well deliverability

The application of non-flowing pressure to calculate Sandface C comes about because of the unreliability of using flowing-side pressures for wells that cannot lift liquids in the tubing / annulus. The extent that liquids accumulate in the tubing / annulus is an unknown, and therefore using flowing-side surface pressures to estimate sandface conditions is unreliable. On the other hand, with non-flowing side pressures, a much more reliable sandface pressure estimate can be attained.

The theory behind using non-flowing pressures to calculate Sandface C is based on the distribution of liquids in a wellbore after a well can no longer lift liquids to surface.


Consider the scenario where a well can no longer lift liquids to surface either in the casing or the tubing. Liquids accumulate in the wellbore in both segments of the wellbore (see figure below).

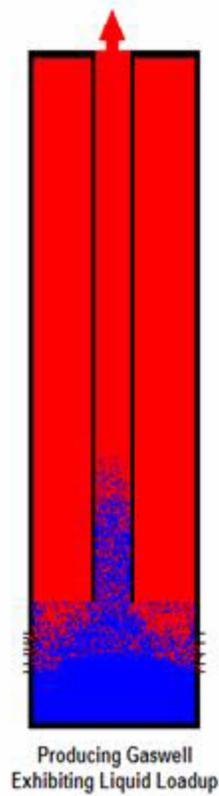

Note how the liquids accumulate on the flowing side of the wellbore (in this case in the tubing), but not on the non-flowing side (annular side).

Because liquids do not accumulate along the non-flowing side, the only pressure drop across that side is due to the presence of the gas. The calculation of the pressure drop from surface to EOT due to the hydrostatic column of gas is a reliable one.

For most wells, the end of tubing is landed within a short distance of MPP. Thus, the pressure drop in the casing segment due to the liquids that have built up is generally small in relation to the reservoir pressure, and therefore an approximation of this pressure drop is usually sufficient. By default, we assume that the pressure loss in the casing due to liquids is equal to the length of the casing segment (the distance from MPP to EOT) multiplied by a gasified liquid gradient of 0.265 psi/ft. The gradient of 0.265 psi/ft is an experience-based estimate of the effect of accumulated liquids in the wellbore.

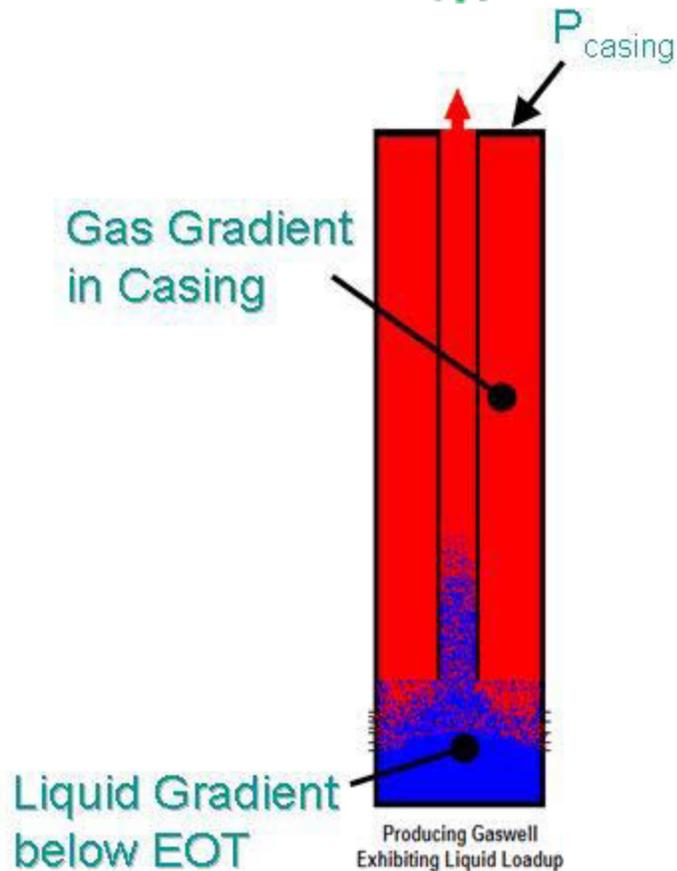

We calculate the pressure at sandface using a combination of the gas gradient down the non-flowing side, and an estimate of the pressure drop due to the liquids that have accumulated from EOT to MPP.

$$P_{wf} = P_{static} + \Delta P_{g-HH} + 0.265\text{psi/ft} * (\text{MPP} - \text{EOT})$$


After a pressure loss at the sandface is calculated, it is a relatively simple calculation of C. In addition, we calculate what the pressure drop due to accumulated liquids along the flowing side must be to satisfy the fact that the pressure and EOT is equal on both the flowing and non-flowing side.

Oil IPR / TPC theory

When the objective is to determine the optimal way to complete a well, a common method is nodal analysis. Nodal analysis combines two separate concepts, inflow performance relationship (IPR) and tubing performance curve (TPC), and plots them on the same chart where you can see how each well may operate under a number of conditions. Since both the IPR and TPC are calculated independently, the theory for each concept will be described separately below.

TPC

A tubing performance curve is a graphical representation of the pressure response of a wellbore completion to a range of fluid rates. In Harmony Enterprise, it is plotted as a relationship between sandface flowing pressure vs. oil rate.

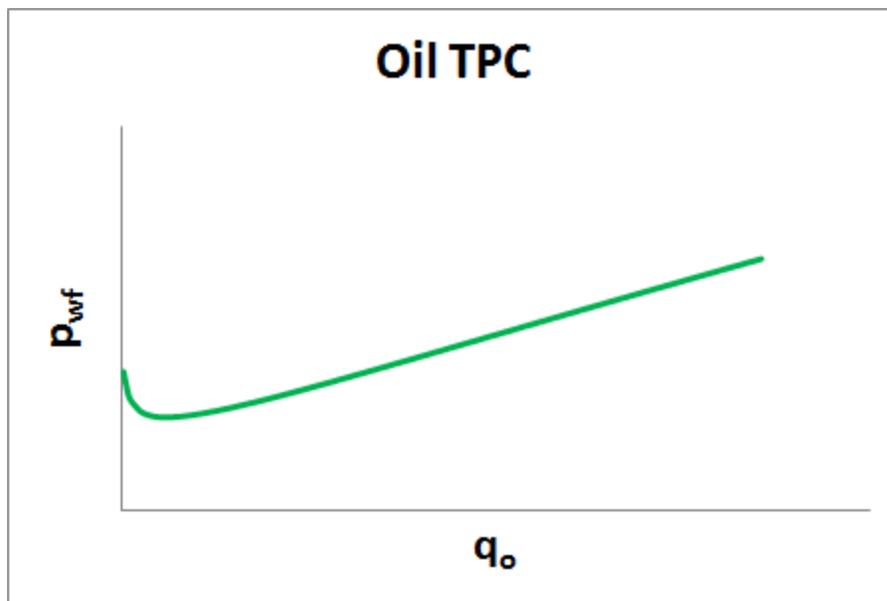

The inputs needed to create a TPC curve are as follows:

- Wellhead pressure
- Ratios (GOR and WOR)
- A valid wellbore configuration
See the [Wellbore editor](#) for details.
- Valid fluid properties
See the [Properties editor](#) for details.

Using these inputs, a series of pressure loss calculations are done over a range of oil rates, and then a line is drawn through all the points to create a curve. The default setting is to plot 64 points, using equally spaced oil rates up to a predetermined maximum rate. However, both the maximum rate and the number of rates used for plotting may be set using the IPR / TPC Solver settings. In all cases, the minimum oil rate is fixed at 1.0 stb/d.

IPR


Flow into a well depends on both the reservoir characteristics and the sandface flowing pressure. The relationship of inflow rate to sandface flowing pressure is called the inflow performance relationship (IPR). Harmony presents this relationship in the form of a pressure versus flow rate plot. From this plot, the well's flow potential can be determined at various flowing sandface pressures.

Straight line IPR

In calculating oil well production, it is assumed that producing rates are proportional to the pressure drawdown. Using this assumption, a well's behavior can be described by its productivity index (PI) as follows:

$$PI = \frac{q}{(P_R - P_{wf})}$$

This relationship was developed from Darcy's law for the steady-state radial flow of a single, incompressible liquid. An example of a straight line IPR is shown below.

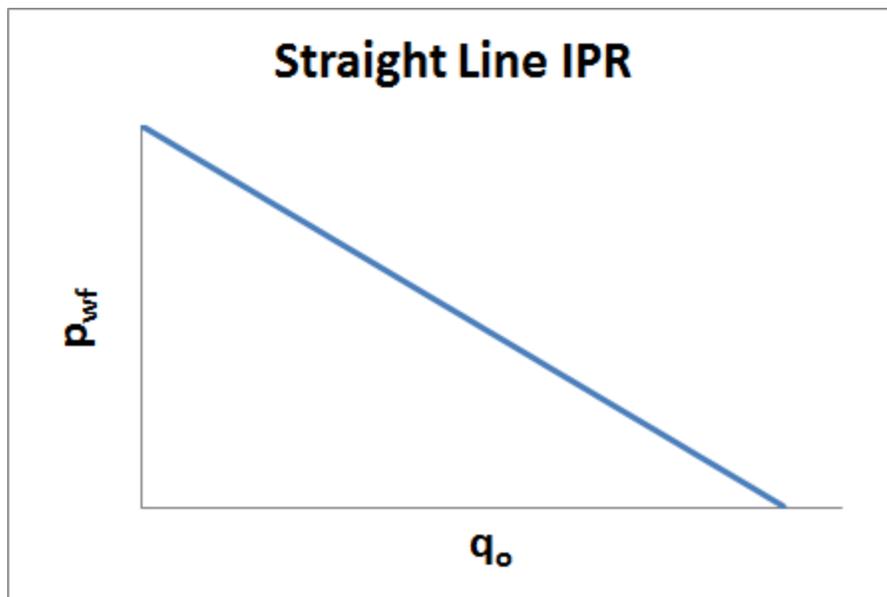

In order for oil to flow from the surrounding reservoir towards the wellbore, there must be a pressure drawdown. Consequently, if the flowing sandface pressure (p_{wf}) is equal to the reservoir pressure (p_R), then no oil will flow from the reservoir to the wellbore, and therefore the rate is zero. Consequently, for any IPR graph, the y-axis intercept is essentially an indicator of the reservoir pressure.

Likewise, if the sandface pressure is zero, then the drawdown would be at its maximum value, indicating the theoretical maximum rate that the reservoir could deliver to the well. This maximum rate is sometimes referred to as the absolute open flow potential (AOF), and is indicated by the x-axis intercept on the plot. Since an absolute sandface pressure of zero is a physical impossibility, the AOF cannot be measured. Instead, a test is performed to measure the rate that the reservoir delivers at some intermediate sandface pressure. This test information, along with the reservoir pressure, is used to determine the productivity index. Consequently, the AOF can be calculated from the productivity index equation.


Vogel IPR

While a straight line IPR is quite applicable for single-phase liquid systems (e.g., a water reservoir), it is less accurate for two-phase systems. Since reservoir oil contains dissolved natural gas, and this gas evolves from the oil below the bubble point pressure (p_{bp}), a two-phase scenario is a common occurrence in an oil reservoir.

Vogel developed the following empirical equation to account for two-phase flow.

$$\frac{q_o}{(q_o)_{\max}} = 1 - 0.2 \left(\frac{p_{wf}}{p_R} \right) - 0.8 \left(\frac{p_{wf}}{p_R} \right)^2$$

An example is shown below.

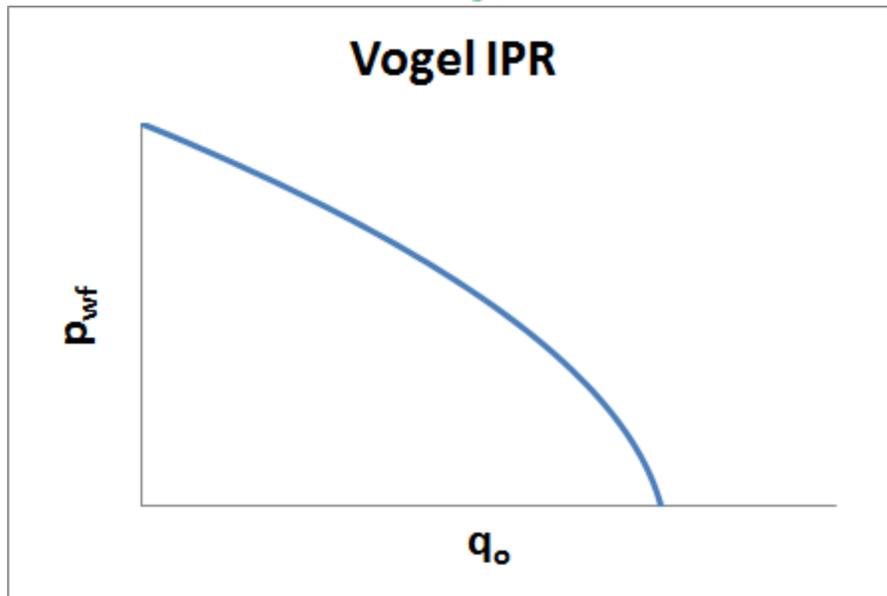

IPR with both single-phase and two-phase flow

Vogel's equation was derived for reservoirs whose bubble point pressure was equal to the reservoir pressure. For undersaturated reservoirs (that is, reservoir pressure higher than bubble point pressure), the straight line IPR equation applies for sandface pressures above p_{bp} while the Vogel IPR equation applies for pressures below p_{bp} .

Numerical model theory

Background

There are two main types of models used to simulate the flow of fluid through porous media: analytical models and numerical models. Both types have their advantages and disadvantages.

Analytical models

Analytical models have relatively short calculation times, so you can history match with these models quickly. More than that, you can even match the model automatically using automatic parameter estimation (APE).

The main disadvantage for these models is that they can only simulate single-phase flow – either liquid or gas, but not gas and liquid flowing together. Additionally, analytical models do not fully account for changing fluid properties with pressure. In case of liquid flow, fluid properties are assumed to be constant, and in case of gas flow, the change of fluid properties with pressure is accounted for by using pseudo-pressure and pseudo-time.

Unfortunately, pseudo-time is not an exact transformation. As a result, changing gas properties are only accounted for to a certain extent. Therefore, in cases where pressure varies significantly across the reservoir (for example, pays with low permeability), long-term forecasts for gas analytical models may be inaccurate. There is no known way to fully account for the change in fluid properties when using analytical models.

Numerical models

The numerical models have been significantly improved in Harmony Enterprise. One of the key benefits is the improvement in computation time, so that the model runs almost as fast as an analytical model. These modifications include:

- using the pseudo-pressure formulation
- optimized "gridding" — by using the pseudo-pressure formulation, you can use larger grid cells without affecting the accuracy of calculation results; using larger grid cells also makes calculations run faster.


With numerical models, you can model multiphase flow, and account for changing properties of each phase, and the interaction between phases.

The main disadvantage for these models is their long computation time. With the numerical model, the reservoir is divided into a number of cells, and then the flow is modeled simultaneously in all cells. To be able to assume constant pressure and constant fluid properties within each cell, the size of each cell needs to be relatively small. Therefore, the number of cells required for an accurate solution becomes large, which results in a long computation time. Note that decreasing the number of cells to reduce computation time may significantly affect calculation results.

Performing a manual history match for numerical models is time consuming. In addition, an automatic history match for numerical models is complicated, and thus not widely available in commercial software.

General formulation for the single-phase model

To calculate pressure across the reservoir, we divide it into a number of grid cells. At each timestep ($n+1$), we formulate a material balance for each cell.

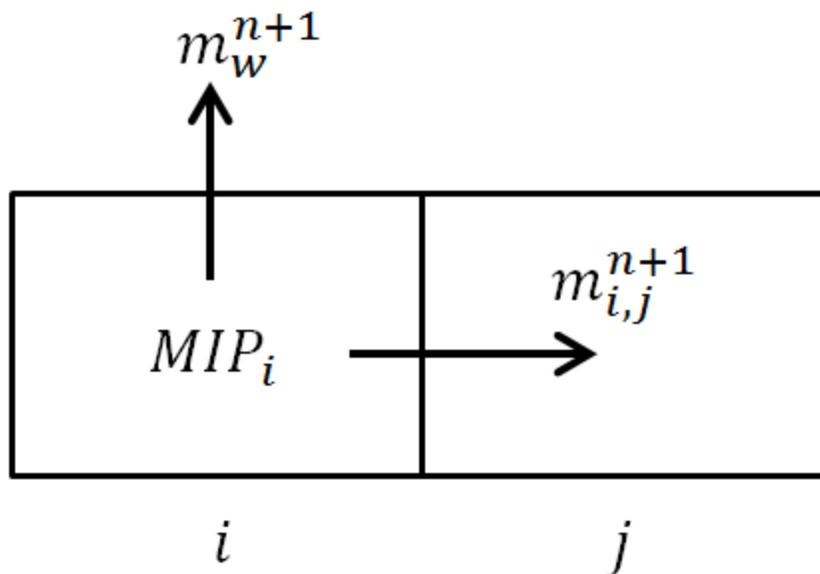

To define components of mass balance for cell i at timestep $n+1$:

Mass in place (MIP) for cell i at timestep $n+1$ can be calculated as:

Equation 1

$$MIP_i^{n+1} = MIP_i(p_i^{n+1}) = V_{bi}\varphi(p_i^{n+1})\rho(p_i^{n+1})$$

where:

V_{bi} = bulk volume for cell i

p_i^{n+1} = pressure for cell i at timestep $n+1$

ϕ = porosity

ρ = density

Mass flow from cell i to the adjacent cell j during timestep $n+1$ can be calculated as:

Equation 2

$$m_{i,j}^{n+1} = \rho(p) q_{i,j}^{n+1} \Delta t = \frac{A_{i,j} k}{L_{i,j}} \frac{\rho(p) k_m(p)}{\mu(p)} (p_i^{n+1} - p_j^{n+1}) \Delta t$$

(We used Darcy's Law to calculate flow rate.)

In equation 2:

$q_{i,j}^{n+1}$ = flow rate from cell i to cell j at timestep $n+1$

$A_{i,j}$ = cross-section area between cells i and j

$L_{i,j}$ = distance between the centers of cells i and j

μ = viscosity

k = permeability at the initial pressure

$k_m(p)$ = permeability multiplier (permeability at a certain pressure is calculated as $k_{effective} = k \cdot k_m(p)$).

Mass produced at the well during timestep $n+1$ (if well penetrates cell i) can be calculated as:

Equation 3

$$m_{i,w}^{n+1} = \rho(p) q_{i,w}^{n+1} \Delta t = WI \frac{\rho(p)k_m(p)}{\mu(p)} (p_i^{n+1} - p_{wb}^{n+1}) \Delta t$$

where:

WI = wellbore index (as per Peaceman 1978 or Babu and Oden, 1989)

p_{wb}^{n+1} = pressure at the wellbore at timestep $n+1$

Material balance for cell i at timestep n can be written as:

Equation 4

flow to other cells *flow to the well* *change in mass in place*

$$\sum_j m_{i,j}^{n+1} + m_{i,w}^{n+1} = MIP_i (p_i^{n+1}) - MIP_i (p_i^n)$$

Using equations 1, 2, and 3, and bringing all the terms to the left, we can rewrite equation 4 as:

Equation 5

$$\sum_j \left(\frac{A_{i,j} k}{L_{i,j}} \frac{\rho(p)k_m(p)}{\mu(p)} (p_i^{n+1} - p_j^{n+1}) \Delta t \right) + WI \frac{\rho(p)k_m(p)}{\mu(p)} (p_i^{n+1} - p_{wb}^{n+1}) \Delta t - (V_{bi} \varphi (p_i^{n+1}) \rho (p_i^{n+1}) - V_{bi} \varphi (p_i^n) \rho (p_i^n)) = 0$$

Assuming that the pressure distribution has been calculated for timesteps 1, 2, ... n , to calculate pressure distribution at timestep $n+1$, we formulate material balance (equation 5) for each cell, and solve all these equations simultaneously. Unknowns of the system are p_i^{n+1} for each cell i ; therefore, the number of equations is the same as the number of unknowns, and the system can be solved.

Well constraint considerations

For a well producing at a specified sandface pressure, the described system of equations can be used directly (because p_{wb}^{n+1} is known). However, for a well that produces at a specified surface q , an extra equation is required.

Equation 6

$$\sum_i \left(WI_i \frac{\rho(p)k_m(p)}{\mu(p)} (p_i^{n+1} - p_{wb}^{n+1}) \right) = q \rho_{sc}$$


where:

i = summation index for all cells penetrated by the well

ρ_{sc} = fluid density at standard conditions

Considerations when estimating fluid properties

In the above formulation, we use rock and fluid properties estimated at certain pressures. The term $\frac{\rho(p)k_m(p)}{\mu(p)}$ is used in $m_{i,j}^{n+1}$ (equation 2) and in $m_{i,w}^{n+1}$ (equation 3).

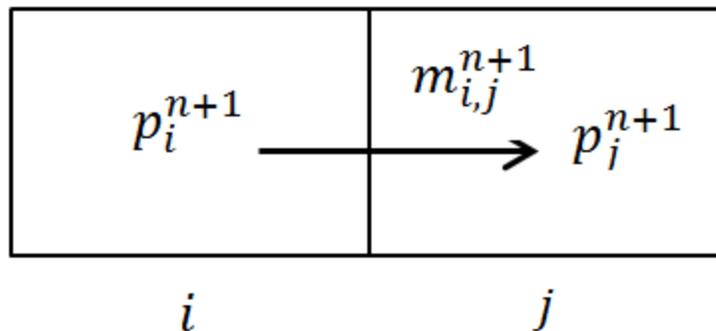

Some logical questions are:

- At what pressure should we estimate this term?
- Should we use pressure in one of the cells, or some kind of average?

Fluid properties may significantly vary with pressure (especially if the modeled fluid is gas); therefore, selecting the correct way of estimating properties becomes important.

In classical numerical simulation (including numerical models in Harmony), properties are estimated at the pressure of the upstream cell (i.e., the cell with the higher pressure). For such a simulation to be accurate, you should ensure that properties in the adjacent cells are close. **To achieve this, grid cells have to be small enough.** Unfortunately, having smaller grid cells results in longer computation times.

With the numerical model, we use the pseudo-pressure formulation to estimate fluid properties and calculate mass transfers.

Numerical model pseudo-pressure definition

The numerical model pseudo-pressure is defined as:

Equation 7

$$\psi_h(p) = \int_0^p \frac{\rho(p)k_m(p)}{\mu(p)} dp$$

Note: For gas, the definition of numerical model pseudo-pressure is very similar to a traditional pseudo-pressure. To see this, express density as $\rho = \frac{pM}{zRT}$ (z = gas compressibility factor, T = temperature, R = gas constant, M = molar mass). This results in the following equation:



Equation 8

$$\psi_h(p) = \int_0^p \frac{\rho(p)k_m(p)}{\mu(p)} dp = \frac{M}{2RT} \int_0^p \frac{k_m(p)p}{z(p)\mu(p)} dp = \frac{M}{2RT} \psi(p)$$

Therefore, the numerical model pseudo-pressure and traditional pseudo-pressure are different by a constant factor.

Numerical model pseudo-pressure formulation

As was mentioned in considerations when estimating fluid properties, the calculation of mass flow from one cell to another given in equation 2 has a deficiency: it does not account for a variation of fluid properties with pressure. The numerical model formulation modifies equation 2 to get a relationship between the mass flow rate and pressure drop when properties are changing with pressure.

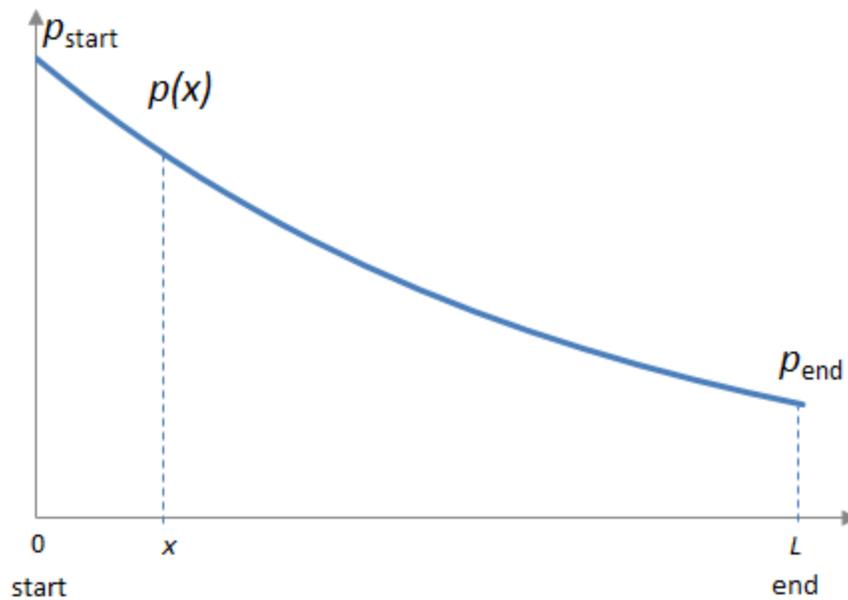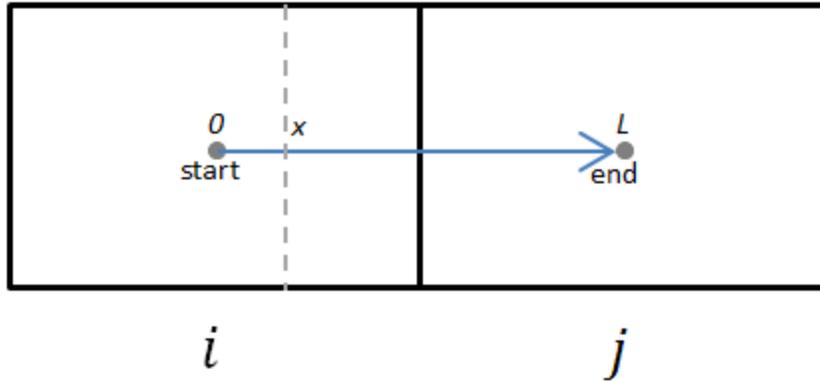

At each cross-section at any given distance (x), the pressure gradient across the cross-section can be expressed using the differential form of Darcy's Law:

Equation 9

$$-\frac{dp}{dx} = q \cdot \frac{\mu(p(x))}{k \cdot k_m(p(x)) \cdot A} = \underbrace{\frac{(m/\Delta t)}{\rho(p(x))}}_q \cdot \frac{\mu(p(x))}{k \cdot k_m(p(x)) \cdot A}$$

where $(m/\Delta t)$ is the mass flow rate across the cross-section. This can be re-arranged as:

Equation 10

$$\frac{(m/\Delta t)}{Ak} = - \frac{\rho(p(x))k_m(p(x))}{\mu(p(x))} \frac{dp}{dx}$$

Integrating both parts from 0 to L with respect to x , and using the left-side of the equation is a constant with respect to x , we get the following equation:

Equation 11

$$\frac{(m/\Delta t)}{Ak} \cdot L = - \int_{x=0}^{x=L} \frac{\rho(p(x))k_m(p(x))}{\mu(p(x))} \frac{dp}{dx} dx = - \int_{p_{start}}^{p_{end}} \frac{\rho(p)k_m(p)}{\mu(p)} dp = \psi_h(p_{start}) - \psi_h(p_{end})$$

Note: We used the definition given in [equation 7](#) for the last transformation.

To summarize, when fluid properties are changing with pressure, the mass flow rate through the cross-section can be calculated as:

Equation 12

$$m/\Delta t = \frac{Ak}{L} \left(\psi_h(p_{start}) - \psi_h(p_{end}) \right)$$

Therefore, [equation 2](#) can be modified to account for changing properties. The mass flow from cell i to cell j during timestep $n+1$ is calculated as:

Equation 13

$$m_{i,j}^{n+1} = \frac{Ak}{L} \left(\psi_h(p_i^{n+1}) - \psi_h(p_j^{n+1}) \right) \Delta t$$

[Equation 3](#) can be modified in a similar fashion. Mass produced at the well during timestep $n+1$ is calculated as:

$$m_{i,w}^{n+1} = WI \left(\psi_h(p_i^{n+1}) - \psi_h(p_{wb}^{n+1}) \right) \Delta t$$

As a result, the material balance equation for each cell ([equation 5](#)) is modified to:

Equation 14

$$\sum_j \left(\frac{A_{ij}k}{L_{ij}} (\psi_h(p_i^{n+1}) - \psi_h(p_j^{n+1})) \right) \Delta t + WI(\psi_h(p_i^{n+1}) - \psi_h(p_{wbj}^{n+1})) \Delta t - (V_{bi}\varphi(p_i^{n+1})\rho(p_i^{n+1}) - V_{bi}\varphi(p_i^n)\rho(p_i^n)) = 0$$

Assuming that the pressure distribution has been calculated for timesteps 1, 2, ... n , to calculate pressure distribution at timestep $n+1$, we formulate a modified material balance ([equation 14](#)) for each cell, and solve all these equations simultaneously. Unknowns of the system are p_i^{n+1} for each cell i ; therefore, the number of equations is the same as the number of unknowns, and the system can be solved.

Note: Well constraints are treated in a similar way to general numerical model formulations.

Modifications for the multiphase model

In the case where there are two or three phases flowing together, the multiphase solution follows similar logic as single-phase flow, with a few modifications.

- The mass balance equation ([equation 4](#)) has to be modified to account for the fact that fluid can change from one phase to another (e.g., oil can evaporate and become gas, or gas can condense to liquid).
- In the single-phase case, the mass balance equation is written for each cell; therefore, we get n equations (where n is the number of cells). In the multiphase case, the mass balance equation is written for each cell for each phase; therefore, we get $n \cdot \text{"number of phases"}$ as equations.
- In the single-phase case, the unknowns of the system are pressures in each cell; therefore, we get n unknowns. In the multiphase case, the unknowns of the system are pressures in each cell (n), and saturations for each cell; therefore, we get total $n \cdot \text{"number of phases"}$ as unknowns. (We use the fact that the sum of all saturations is equal to 1 for any of the grid cells.)
- When calculating a mass transfer from one cell to another ([equation 2](#)) and a mass transfer from the cell to the well ([equation 3](#)), we have to account for relative permeability.
- For the single-phase case, we re-write the mass transfer term in terms of pseudo-pressure ([equation 13](#)). In the multiphase case, we can do the same thing, but there will be different pseudo-pressure functions for different phases. (The pseudo-pressure formulation for each phase follows the definition given in [equation 7](#), but ρ , μ , and k are different for different phases.)
- For the single-phase case, the system of equations can be solved in terms of pseudo-pressures (the unknowns are pseudo-pressures in each cell). For the multiphase case, equations have to be solved in terms of pressure (the unknowns are pressures and saturations in each of the cells). The pseudo-pressure formulation is only used to calculate mass transfer between cells.

Advantages of using the pseudo-pressure formulation

Pseudo-pressure formulation makes simulation significantly faster than classical numerical simulation modeling for the following reasons:

1. **Smaller number of grid cells:** In classical numerical simulation, grid cells have to be small enough to consider constant fluid properties within each cell. Pseudo-pressure formulation accounts for a variation of fluid properties between the centers of two adjacent cells; therefore, it is possible to have larger grid cells. By having a smaller *number* of grid cells, calculation speed increases.
2. **Faster solution for a non-linear system:** While performing numerical modeling, [equation 5](#) is solved at each timestep. This system of equations is non-linear; therefore, it is solved iteratively, using the Newton-Raphson method. This method involves calculating derivatives of each matrix element with respect to each unknown. Calculating these derivatives is faster for pseudo-pressure formulation ([equation 14](#)), because we have to deal with one fluid property function ($\Psi_h(\mathbf{p})$) as opposed to a combination of three functions ($\rho(\mathbf{p})$, $k_m(\mathbf{p})$, $\mu(\mathbf{p})$) for traditional formulation. More than that, due to the integral nature of $\Psi_h(\mathbf{p})$, its derivative is calculated easily.

Probabilistic theory

In the presence of uncertainty re: input data required for determining the best estimate of a value, probabilistic methods are used. For example, there may be uncertainty in net pay or drainage area while estimating OGIP using volumetric calculations.


Probabilistic analysis is a technique to quantify the impact of these uncertainties on output variables, and to determine a range of possible outcomes, as opposed to a single deterministic solution. The uncertainty in the output also provides a measure of the validity of the model.

The Monte Carlo simulation (using Latin hypercube sampling) is an established approach of performing a probabilistic analysis. The Monte Carlo analysis involves a large number of runs, each of which is a deterministic calculation. The inputs to these deterministic calculations are randomly drawn from probability density functions (PDFs) that describe the likely values of an input parameter. The more realistic these PDFs are, the more realistic the estimate of the output parameter, as calculated by the Monte Carlo simulation.

Probability distribution types

In this section, we define the different probability distribution types used as part of the probabilistic analysis. The definitions include the equations for the PDF, cumulative distribution function (CDF), mean, median, and mode for each of the probability distribution types.

Normal distribution

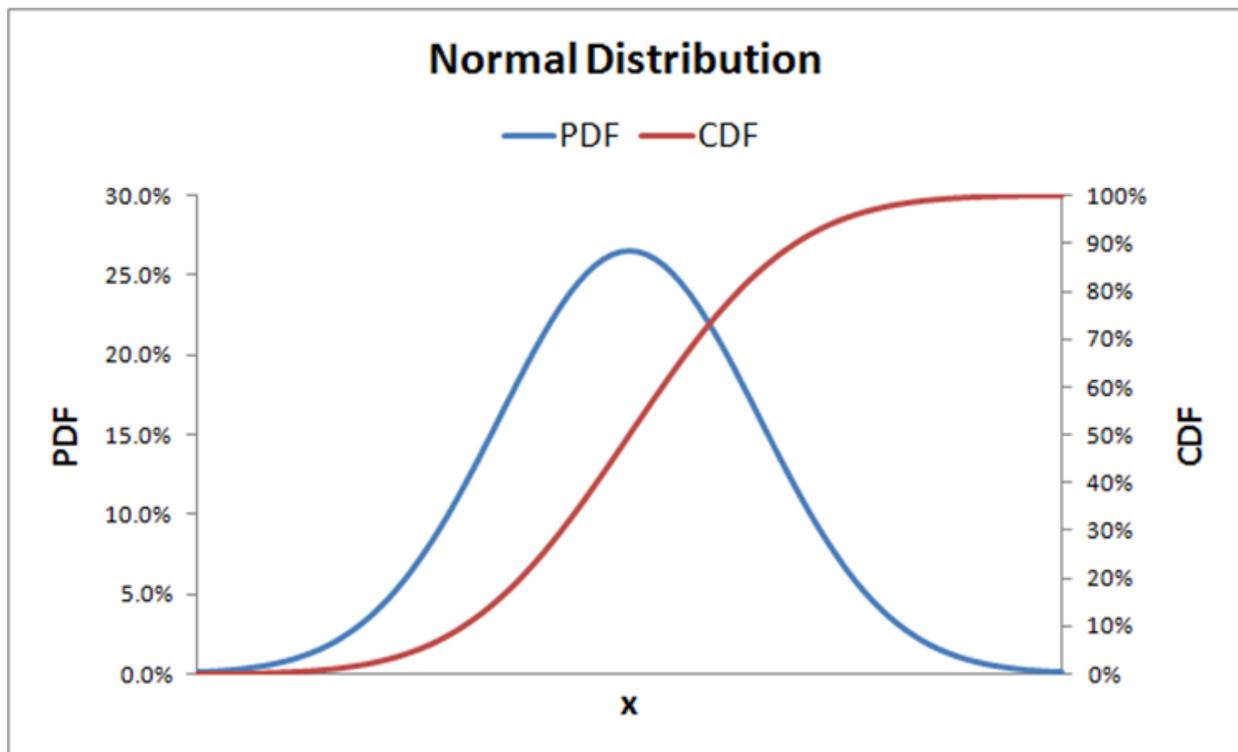

$$\text{PDF: } f(x) = \frac{1}{\sigma\sqrt{2\pi}} e^{-(x-\mu)^2/(2\sigma^2)}$$


$$\text{CDF: } F(x) = \frac{1}{2} \left[1 + \text{erf} \left(\frac{x-\mu}{\sigma\sqrt{2}} \right) \right]$$

$$\text{Mean} = \text{Median} = \text{Mode} = \mu = \bar{x} = \frac{1}{n} \sum_{i=1}^n x_i$$

$$\text{Variance} = \sigma^2 = s^2 = \frac{1}{n-1} \sum_{i=1}^n (x_i - \bar{x})^2$$

Note: The variance calculation uses the Bessel correction for bias.

Log-normal distribution

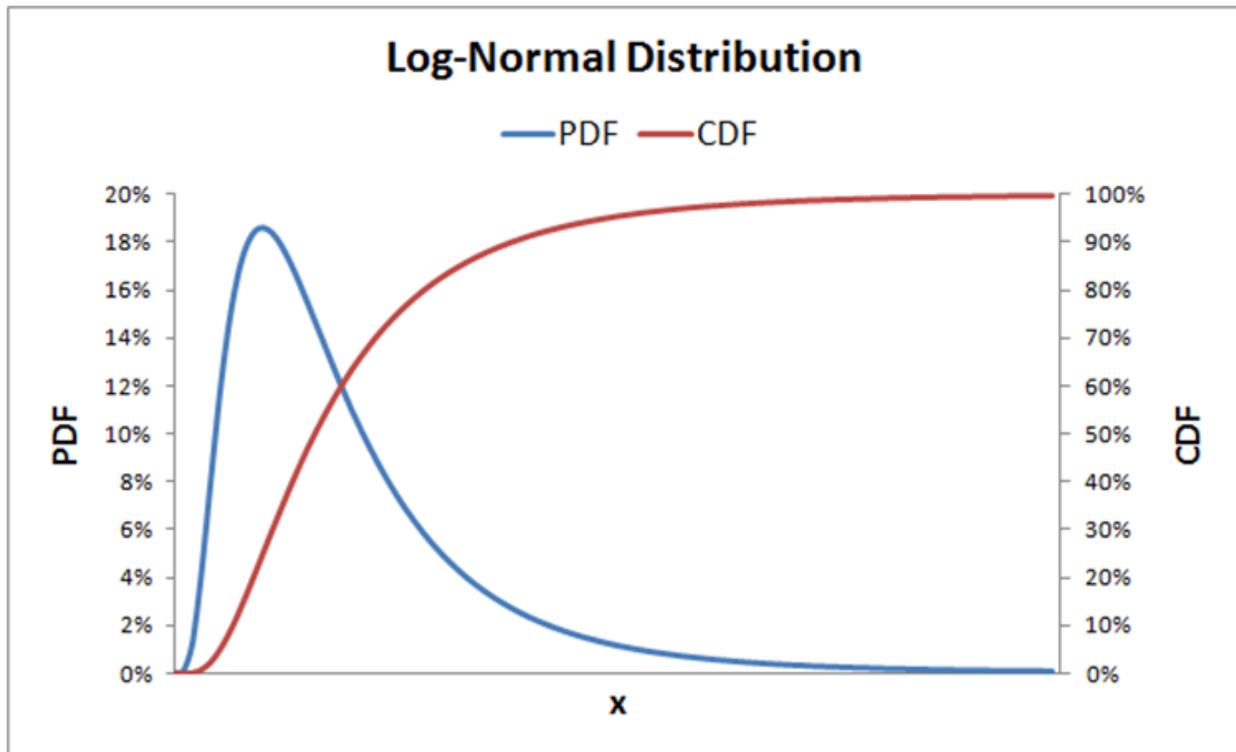

$$\text{PDF: } f(x) = \frac{1}{x\sigma\sqrt{2\pi}} e^{-(\ln(x)-\mu)^2/(2\sigma^2)}$$

$$\text{CDF: } F(x) = \frac{1}{2} + \frac{1}{2} \left[1 + \operatorname{erf} \left(\frac{\ln(x) - \mu}{\sigma\sqrt{2}} \right) \right]$$

$$\text{Mean} = e^{\mu + \sigma^2/2}$$


$$\text{Mode} = e^{\mu - \sigma^2}$$

$$\text{Median} = e^{\mu}$$

$$\text{Variance} = (e^{\sigma^2} - 1)e^{\sigma^2 + 2\mu}$$

A log-normal distribution is the probability distribution of a random variable whose natural logarithm follows a normal distribution. The log of a set of data that follows a log-normal distribution follows a normal distribution. As such, it should be noted that μ is the mean of the natural log of the dataset, and σ is the standard deviation of the natural log of the dataset (that is, the mean and standard deviation of the underlying normal distribution).

Triangular distribution

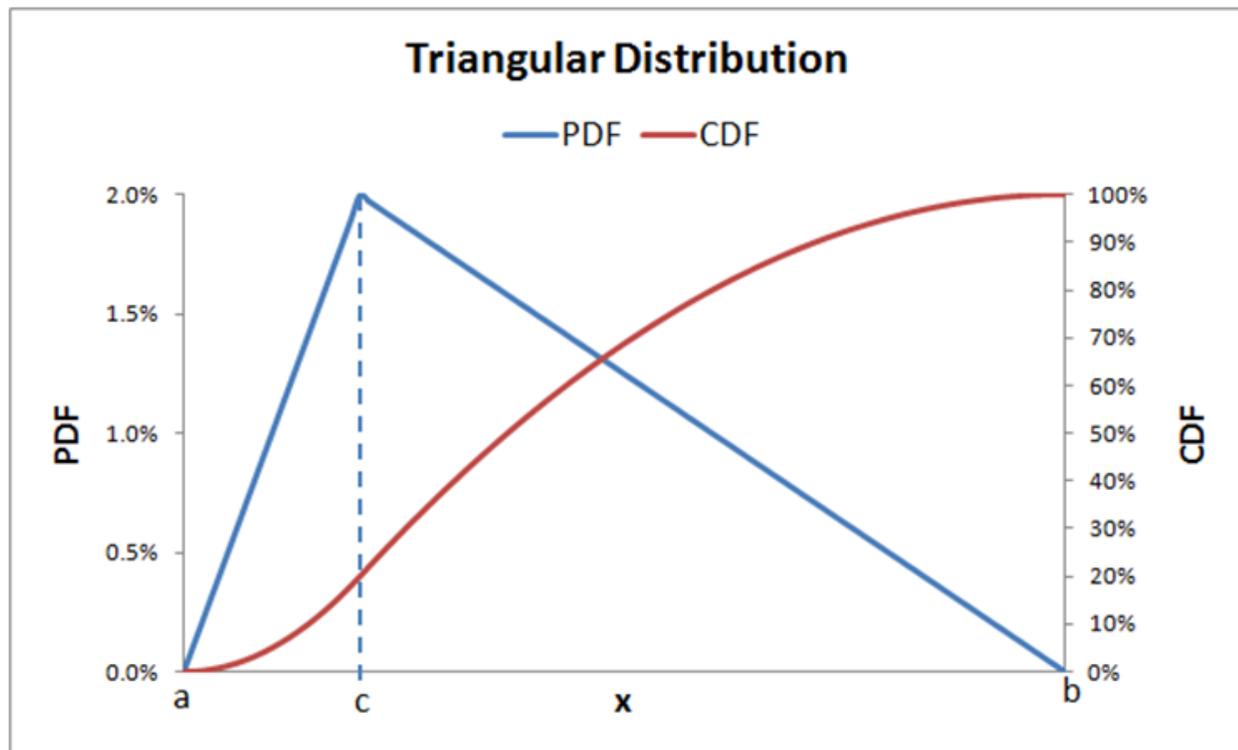

$$\text{PDF: } f(x) = \begin{cases} 0 & x < a \\ \frac{2(x-a)}{(b-a)(c-a)} & a \leq x \leq c \\ \frac{2(b-x)}{(b-a)(b-c)} & c < x \leq b \\ 0 & b < x \end{cases}$$



$$\text{CDF: } F(x) = \begin{cases} 0 & x < a \\ \frac{(x-a)^2}{(b-a)(c-a)} & a \leq x \leq c \\ 1 - \frac{(b-x)^2}{(b-a)(b-c)} & c < x \leq b \\ 1 & b < x \end{cases}$$


$$\text{Mean} = \frac{1}{3}(a + b + c)$$

$$\text{Median} = \begin{cases} a + \frac{\sqrt{(b-a)(c-a)}}{\sqrt{2}} & c \geq \frac{a+b}{2} \\ b - \frac{\sqrt{(b-a)(b-c)}}{\sqrt{2}} & c \leq \frac{a+b}{2} \end{cases}$$

$$\text{Mode} = c$$

$$\text{Variance} = \frac{a^2 + b^2 + c^2 - ab - ac - bc}{18}$$

Uniform distribution

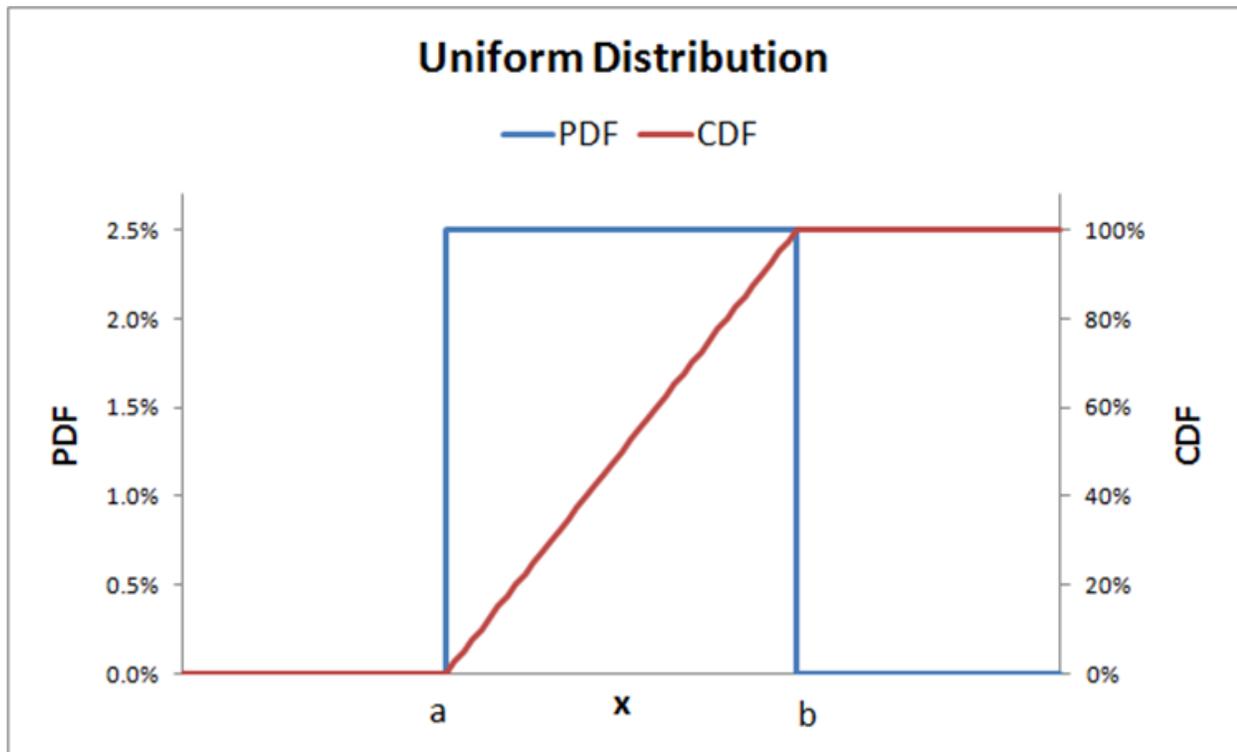

$$\text{PDF: } f(x) = \begin{cases} \frac{1}{b-a} & a \leq x \leq b \\ 0 & \text{otherwise} \end{cases}$$

$$\text{CDF: } F(x) = \begin{cases} 0 & x \leq a \\ \frac{x-a}{b-a} & a < x < b \\ 1 & x \geq b \end{cases}$$

$$\text{Mean} = \text{Median} = \frac{1}{2}(a+b)$$

$$\text{Mode} = \text{any value in } a \leq x \leq b$$

$$\text{Variance} = \frac{1}{12} (b - a)^2$$

Calculation methods

Calculation methods are described below.

Monte Carlo simulation

The Monte Carlo simulation is a stochastic modeling method to simulate real-world situations where there is uncertainty in the input variables. This uncertainty cannot be directly modeled using analytical solutions. While conceptually very simple, a trivial example provides the easiest route to developing an understanding of the Monte Carlo simulation procedure.

Consider the simple estimation of prospect reserves (*EUR*, stbo) calculated as the product of the prospect area (*A*, acres), average net hydrocarbon thickness (*h*, feet), and recovery factor (*RF*, stbo/acre-ft). The algebraic expression of this simple model is:

$$EUR = A \times h \times RF$$

The deterministic approach would simply multiply the "best estimate" for each of these quantities to obtain a single value of EUR. The deterministic approach assumes that the most likely value of every input is encountered simultaneously, which is generally very unrealistic.

Suppose that for each of the three input variables, *A*, *h*, and *RF*, independent cumulative probability distributions can somehow be defined, thereby describing the uncertainty in each of these variables. The Monte Carlo method can make use of these distributions to arrive at an overall cumulative probability distribution (overall uncertainty) for EUR. This analysis approach is superior to the single-valued deterministic approach because of the valuable insight gained into the "upside," "downside," "most likely outcome," and the "mean" level of reserves that would result from drilling a large number of similar prospects.

The following describes one pass in the Monte Carlo simulation procedure:

1. Generate a random number between zero and one (representing the value of the cumulative probability) for each of the three input variables.
2. Enter the cumulative probability distribution for each input variable at their respective random number to determine the "sampled" value for each input.
3. Multiply the three independent variable sampled values to yield a sample reserve estimate.

An individual calculation or run to estimate a prospect size in this fashion is known as a "pass". By itself, the individual value of EUR generated by a pass is meaningless. However, when repeated a large number of times, a cumulative distribution for the EUR emerges.

The minimum number of passes required depends on the number of input variables that are risked. Generally, enough runs are needed to ensure that the entire domain of input variables is examined. The larger the number of input variables, the larger the minimum number of passes required.

Typically, 1000 or more passes comprise a single Monte Carlo simulation. As a qualitative rule, a smooth CDF of output variables is an indication of an appropriate number of runs.

After a Monte Carlo simulation run is finished, an analysis of the results follows. Assuming a 1,000 pass simulation run, results are processed as follows:

1. Arrange EUR results in ascending order.
2. Number the sorted EUR values from 1 to the total number of samples (for example, 1,000).
3. Calculate the cumulative probability of each value by dividing the sample number by the total number of samples (in this case, 1000).
4. Plot the resultant cumulative probability function (Cumulative Probability vs. EUR) to ascertain the smoothness of the distribution. Lacking a smooth distribution necessitates re-running the simulation with a larger number of passes.
5. Calculate the mean, variance, P10, P50, P90, and any other desired statistical parameters.

This analysis yields the statistical parameters desired for the prospect analysis. Expect the values of these parameters to vary slightly with each simulation. An unacceptably large variation warrants an increase in the number of passes.

Latin hypercube sampling


Selecting random values for model parameters can require a large number of simulation passes to generate a smooth cumulative probability distribution. Latin hypercube sampling, also known as stratified sampling, is a process applied to multiple variables to reduce the required number of passes in a Monte Carlo simulation.

First, stratified sampling is used to force randomly generated numbers to conform to the CDF represented by their statistical distribution. Normally, you could generate a random number between zero and one representing the cumulative probability a number of times, and use those numbers to read the CDF. Instead, the span of zero to one is split between the number of samples to be taken, and points within those smaller spans are randomly selected. Each of the samples is generated by:

$$\frac{n-1}{N} + \frac{r}{N}$$

where n is the interval index, N is the number of non-overlapping intervals, and r is a randomly generated number between zero and one (newly generated for each sample).

The effects of stratified sampling can be dramatic. The figure below compares the Cumulative Frequency Plot of 100 random samples with 100 stratified samples.

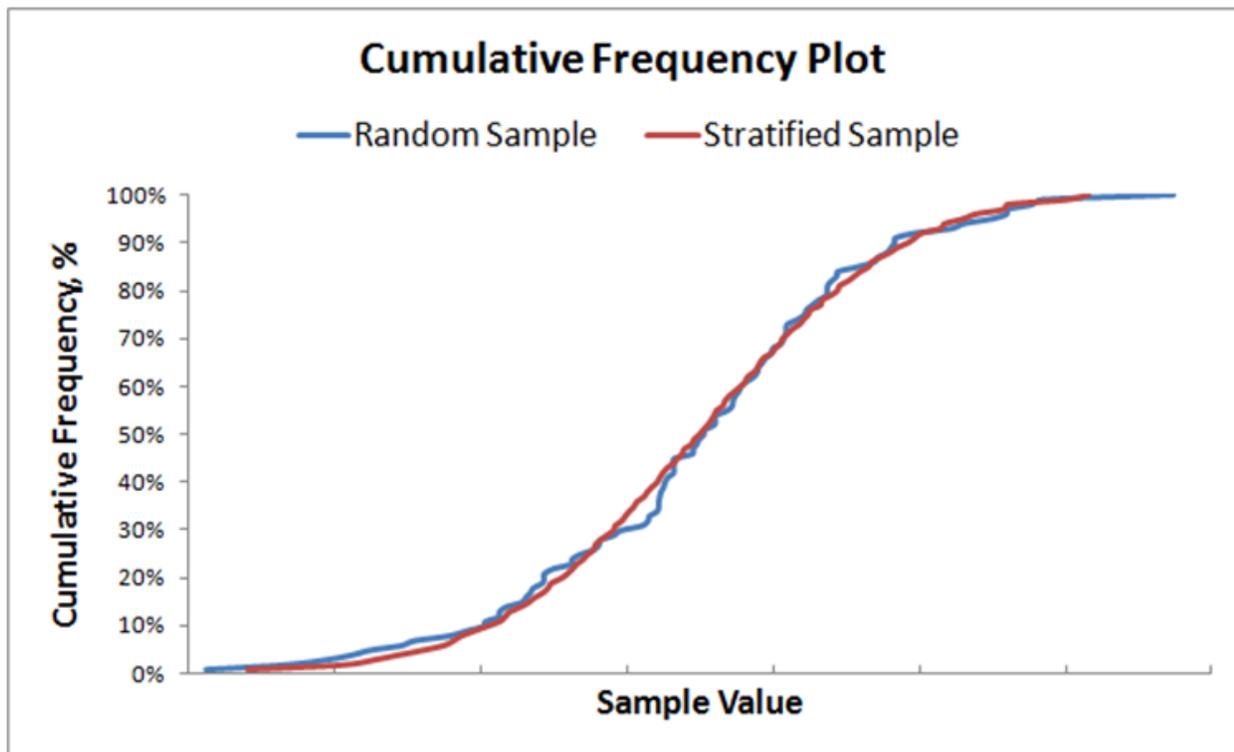


After the stratified sampling is performed on all variables, the samples are randomly grouped together to generate the parameters to be entered into the model for each simulation pass. Each value must only be used once.

Correlated sampling

This section describes methods for generating multiple sequences of correlated random variables. In other words, the values sampled in one distribution are correlated to the values sampled in another distribution, given the correlation coefficients between the two samples.

These screenshots show examples of two sequences of uncorrelated and correlated random data.

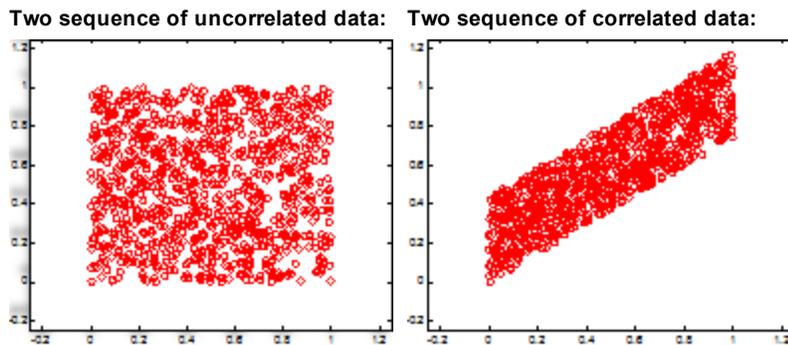

Creation of correlated random variables

The rank-order correlation approach of Spearman as presented by Iman and Conover (Iman & Conover, 1982) is used to create a set of multi-variable correlated random variables.

This approach is based on using rank correlations to define dependencies among input variables. By ranking the values and using them as opposed to the actual values, the Spearman rank correlation of the input values are kept as close as possible to the target rank correlation coefficient matrix, as specified.

Because this approach is distribution-free:

- it preserves the exact form of the probability distribution functions
- it may be used with any type of distribution function

Auto-correction to user-input correlation coefficient matrix

To generate a sequence of multi-variable correlated random numbers, we need to specify the applicable matrix of correlation coefficients. This matrix is required to be positive and definite (that is, all the eigenvalues of this matrix are to be greater than zero).

If the user-specified matrix of correlation coefficients fails to qualify as a positive-definite matrix, “The Method of Eigenvalues” is used to auto-correct the matrix. Through application of slight perturbation to negative or zero eigenvalues, this method attempts to repair the correlation coefficient matrix, and make it a positive-definite one, while introducing the smallest possible changes to the matrix.

Truncated distributions

Truncated distributions are described below.

Definitions and concept

A truncated distribution is a conditional distribution that results from restricting the domain of some other distribution. In practical statistics, a truncated distribution arises from situations where the ability to record, or even know about, occurrences is limited to values which lie above or below a given threshold, or specific range.

Assuming that a random variable x has a probability density function of $f(x)$ and a cumulative distribution function of $F(x)$, which both have infinite support ($-\infty < x < \infty$), then the probability density function after truncating the support to $a < x \leq b$ can be expressed as:

$$f(x|a < x \leq b) = \frac{g(x)}{F(b) - F(a)} = Tr(x)$$

where:

$$g(x) = \begin{cases} f(x) & a < x \leq b \\ 0 & \text{everywhere else} \end{cases}$$

Note that $Tr(x)$ itself is a distribution such that:

$$F(x|a < x \leq b) = \frac{1}{F(b) - F(a)} \int_a^b g(x) d(x) = 1$$

In general, the PDF of a truncated distribution function can be calculated as:

$$TrPDF(x) = \frac{g(x)}{F(b) - F(a)} \quad a < x \leq b$$

$$TrPDF(x) = \frac{g(x)}{1 - F(a)} \quad a < x$$

$$TrPDF(x) = \frac{g(x)}{F(b)} \quad x \leq b$$

The CDF of a truncated distribution function can be calculated as:



$$TrCDF(x) = \frac{\int_a^x g(x)dx}{F(b) - F(a)} \quad a < x \leq b$$

$$TrCDF(x) = \frac{\int_a^x g(x)dx}{1 - F(a)} \quad a < x$$

$$TrCDF(x) = \frac{\int_{-\infty}^x g(x)dx}{F(b)} \quad x \leq b$$

The mean of the truncated distributions are calculated as:

$$\text{mean}(x) = \frac{\int_a^x xg(x)dx}{F(b) - F(a)} \quad a < x \leq b$$

$$\text{mean}(x) = \frac{\int_a^x xg(x)dx}{1 - F(a)} \quad a < x$$

$$\text{mean}(x) = \frac{\int_{-\infty}^x xg(x)dx}{F(b)} \quad x \leq b$$

Special case: truncated normal distributions

Defining:

$$\phi(x) = \frac{1}{\sqrt{2\pi}} e^{-\frac{1}{2}x^2}$$

$$\Phi(x) = \frac{1}{2} \left[1 + \text{erf} \left(\frac{x}{\sqrt{2}} \right) \right]$$

The PDF of a truncated normal distribution can be calculated as:



$$TrPDF(x) = \frac{\frac{1}{\sigma} \phi\left(\frac{x-\mu}{\sigma}\right)}{\Phi\left(\frac{b-\mu}{\sigma}\right) - \Phi\left(\frac{a-\mu}{\sigma}\right)} \quad a \leq x \leq b$$

$$TrPDF(x) = \frac{\frac{1}{\sigma} \phi\left(\frac{x-\mu}{\sigma}\right)}{1 - \Phi\left(\frac{a-\mu}{\sigma}\right)} \quad a \leq x$$

$$TrPDF(x) = \frac{\frac{1}{\sigma} \phi\left(\frac{x-\mu}{\sigma}\right)}{\Phi\left(\frac{b-\mu}{\sigma}\right)} \quad x \leq b$$

The mean of a truncated normal distribution can be calculated as:

$$\text{mean}(x) = \mu + \frac{\phi\left(\frac{a-\mu}{\sigma}\right) - \phi\left(\frac{b-\mu}{\sigma}\right)}{\Phi\left(\frac{b-\mu}{\sigma}\right) - \Phi\left(\frac{a-\mu}{\sigma}\right)} \sigma \quad a \leq x \leq b$$

$$\text{mean}(x) = \mu + \frac{\phi\left(\frac{a-\mu}{\sigma}\right)}{1 - \Phi\left(\frac{a-\mu}{\sigma}\right)} \sigma \quad a \leq x$$

$$\text{mean}(x) = \mu + \frac{\phi\left(\frac{b-\mu}{\sigma}\right)}{\Phi\left(\frac{b-\mu}{\sigma}\right)} \sigma \quad x \leq b$$

The variance of a truncated normal distribution can be calculated as:

$$\text{variance}(x) = \sigma^2 \left[1 + \frac{\left[\left(\frac{a-\mu}{\sigma} \right) \phi\left(\frac{a-\mu}{\sigma}\right) \right] - \left[\left(\frac{b-\mu}{\sigma} \right) \phi\left(\frac{b-\mu}{\sigma}\right) \right]}{\Phi\left(\frac{b-\mu}{\sigma}\right) - \Phi\left(\frac{a-\mu}{\sigma}\right)} - \left[\frac{\phi\left(\frac{a-\mu}{\sigma}\right) - \phi\left(\frac{b-\mu}{\sigma}\right)}{\Phi\left(\frac{b-\mu}{\sigma}\right) - \Phi\left(\frac{a-\mu}{\sigma}\right)} \right]^2 \right] \quad a \leq x \leq b$$

$$\text{variance}(x) = \sigma^2 \left[1 + \frac{\left(\frac{a-\mu}{\sigma} \right) \phi\left(\frac{a-\mu}{\sigma}\right)}{1 - \Phi\left(\frac{a-\mu}{\sigma}\right)} - \left[\frac{\phi\left(\frac{a-\mu}{\sigma}\right)}{1 - \Phi\left(\frac{a-\mu}{\sigma}\right)} \right]^2 \right] \quad a \leq x$$

$$\text{variance}(x) = \sigma^2 \left[1 + \frac{\left(\frac{b-\mu}{\sigma} \right) \phi\left(\frac{b-\mu}{\sigma}\right)}{\Phi\left(\frac{b-\mu}{\sigma}\right)} - \left[\frac{\phi\left(\frac{b-\mu}{\sigma}\right)}{\Phi\left(\frac{b-\mu}{\sigma}\right)} \right]^2 \right] \quad x \leq b$$

Stretched exponential decline theory

One of the benefits of a stretched exponential decline is that for positive n , τ , q_0 , the model gives a finite value of EUR, even if no abandonment constraints are used in time or rate.

The Stretched Exponential Production Decline Model		
$\frac{dq}{dt} =$	$-n \left(\frac{t}{\tau}\right)^n \frac{q}{t}$	Defining the differential equation of the model
$q =$	$q_0 \exp\left[-\left(\frac{t}{\tau}\right)^n\right]$	Rate expression as a function of time
$Q =$	$\frac{q_0 \tau}{n} \left\{ \Gamma\left[\frac{1}{n}\right] - \Gamma\left[\frac{1}{n}, \left(\frac{t}{\tau}\right)^n\right] \right\}$	Cumulative production as a function of time
$EUR =$	$\frac{q_0 \tau}{n} \Gamma\left[\frac{1}{n}\right]$	EUR in terms of model parameters
Reference <u>SPE</u> papers: 134231, 143666, 137414, 144311, and 135616.		

Typecurve theory

Typecurve theory includes the following:

- Agarwal-Gardner
- Blasingame
- Compound Linear
- Fetkovich
- NPI
- Transient
- Wattenbarger

Agarwal-Gardner typecurve theory

Agarwal and Gardner have compiled and presented decline typecurves for analyzing production data. Their methods build upon the work of Fetkovich, Palacio, and Blasingame, using the concepts of the equivalence between constant rate and constant pressure solutions. Agarwal and Gardner present typecurves with dimensionless variables based on the conventional welltest definitions, as opposed to the Fetkovich dimensionless definitions used by Blasingame et al. They also include primary and semi-log pressure derivative plots (in inverse format for decline analysis). Furthermore, they present their decline curves in additional formats to the standard normalized rate vs. time plot. These include the rate vs. cumulative, and cumulative vs. time analysis plots.


Rate-cumulative production analysis

Dimensionless typecurves

Agarwal et al. propose the use of rate-cumulative typecurves for estimating gas- or oil-in-place. Dimensionless rate (q_D) is plotted against dimensionless cumulative production (Q_{DA}), which is defined as follows

$$Q_{DA} = \frac{t_{DA}}{p_D} = q_D t_{DA}$$

The resulting typecurves are straight lines on a Cartesian graph, which are anchored at the point 0.159, as shown in the following figure. A plot of dimensionless rate vs. dimensionless cumulative production yields a straight line that passes through $Q_{DA} = 0.159$ at $q_D = 0$, provided that fluid-in-place has been estimated correctly.

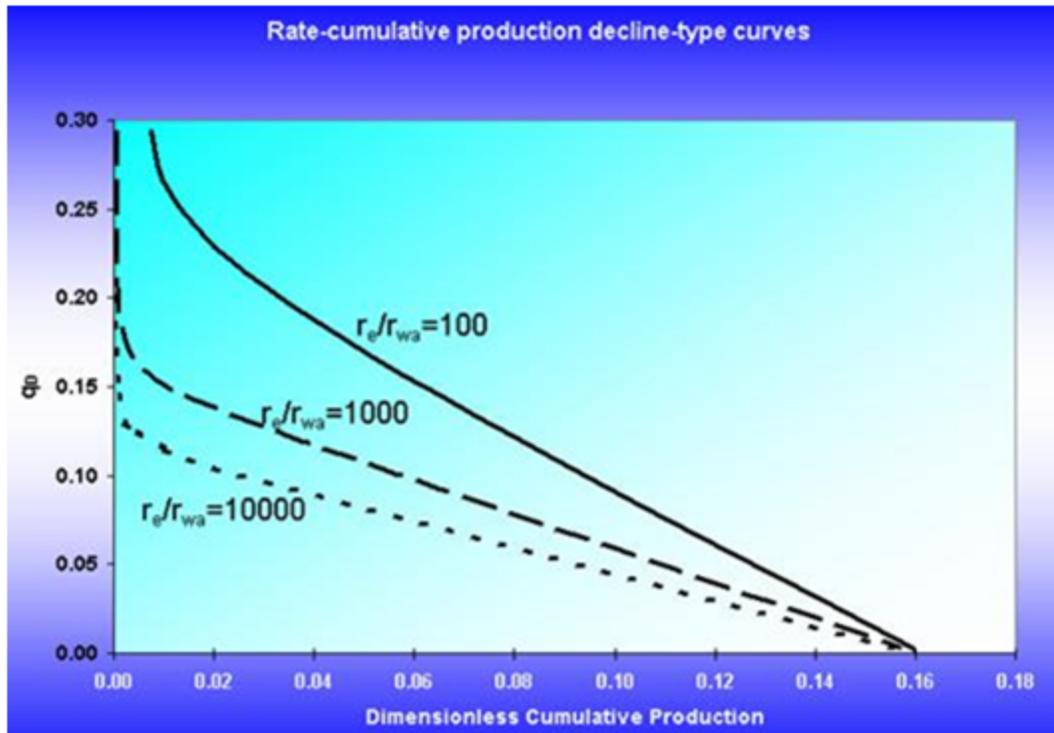

Modifications in RTA

The presentation of rate-cumulative analysis in rate transient analysis (RTA) is modified significantly from that of Agarwal and Gardner. See [methodology: rate-cumulative](#).

Data Preparation

The rate vs. cumulative production analysis is performed to estimate the hydrocarbons-in-place.

Oil wells

Plot pressure-drop normalized flow rate ($q / \Delta p$) vs. modified cumulative production on Cartesian coordinates, where:

$$Q_m = \frac{N_p}{c_t(p_i - p_{wf})}$$

Gas wells

Estimate original gas-in-place (a lower bound estimate can be obtained by performing a straight line extrapolation on a rate vs. cumulative production plot. Another estimate is the volumetric gas-in-place).

Plot pressure-drop normalized flow rate vs. modified cumulative production on Cartesian coordinates, where:

$$Q_m = \frac{G(p_{pi} - \bar{p}_p)}{(p_{pi} - p_{wf})} = \frac{2qt_{ca}p_i}{(c_t \mu Z)_i (p_{pi} - p_{pwf})}$$

Analysis

Oil wells

Perform a straight line extrapolation of the data. The value where the extrapolated line crosses the x-axis is the original oil-in-place.

Gas wells

Perform a straight line extrapolation of the data. If the extrapolated line crosses the x-axis short of the estimated gas-in-place, choose a smaller gas-in-place input value. If the extrapolated line crosses the x-axis beyond the estimated gas-in-place, choose a larger gas-in-place input value. Then, re-calculate the material balance pseudo-time function and re-plot the data.

Rate-time production analysis

Dimensionless typecurves

The Agarwal-Gardner rate-time analysis plot includes dimensionless typecurves, based on the constant rate solution. Unlike Blasingame, these typecurves are graphed using the well-test variables dimensionless rate and dimensionless time. Agarwal and Gardner also include typecurves for the primary pressure derivative and semi-logarithmic (well-test) derivative (plotted as an inverse). The result is a diagnostic analysis that clearly shows the transition point from transient to boundary-dominated flow. The dimensionless pressure for standard well-test analysis is defined as:

$$p_D = \frac{kh(p_i - p_{wf})}{141.2qB\mu}$$


The dimensionless flow rate is simply the inverse of the previous equation (note that in the well-test literature, dimensionless rate has a slightly different definition):

$$q_D = \frac{1}{p_D}$$

The primary and semi-log (inverse) derivative typecurves are as follows:

$$\frac{\partial p_D}{\partial t_D} \text{ and } \frac{1}{\partial p_D / \partial \ln t_D}$$

The resulting dimensionless typecurve plot is shown below.

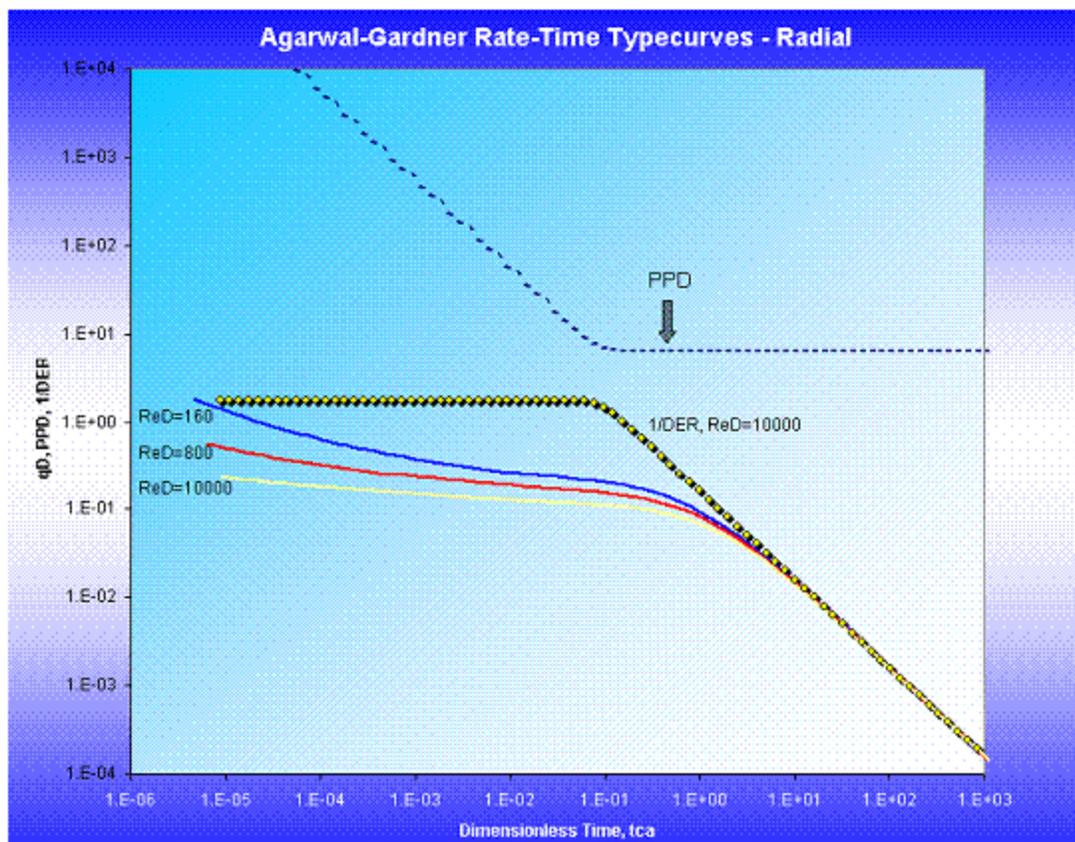


Modifications in RTA

In RTA, this analysis has been modified slightly; In addition to the semi-log derivative, a semi-log *integral* derivative curve is included. The advantage of the integral derivative curve is that the data has far

less scatter, while retaining a shape identical to the semi-log derivative, only offset in the time scale.

The RTA rendition of the Agarwal-Gardner Rate-Time plot is shown below. Note that the primary pressure derivative plot is not included in the RTA presentation.

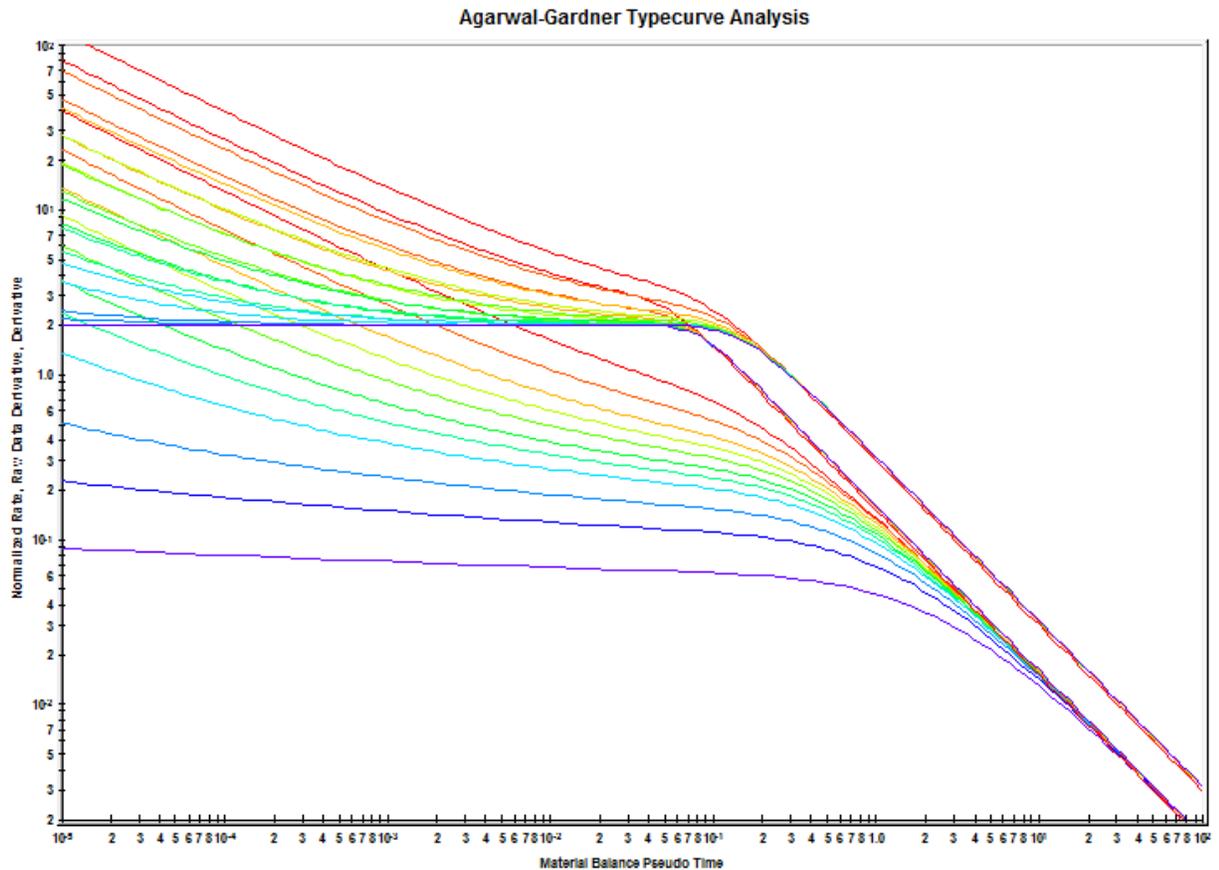

Data preparation

The horizontal axis is material balance time (pseudo-time for gas); the vertical axis is either normalized rate or inverse of semi-log derivative.

Oil wells

$$t_c = \frac{N_p}{q}$$

$$\frac{q}{\Delta p} = \frac{q}{p_i - p_{wf}}$$

$$\frac{1}{\partial} = \frac{1}{\left(\frac{\frac{\Delta p}{q}}{\partial \ln t_c} \right)}$$

Gas wells

$$t_{ca} = \frac{\mu_i c_{ti}}{q(t)} \int_0^t \frac{q(t)}{\mu(\bar{p}) c_t(\bar{p})} dt$$

$$\frac{q}{\Delta p_p} = \frac{q}{p_{pi} - p_{pwf}}$$

$$\frac{1}{\partial} = \frac{1}{\left(\frac{\frac{\Delta p_p}{q}}{\partial \ln t_{ca}} \right)}$$

Analysis

The normalized rate and inverse semi-log derivative data are plotted against material balance time on a log-log scale of the same size as the typecurves. This plot is called the "data plot". Any convenient units can be used for normalized rate or time because a change in units simply causes a uniform shift of the raw data on a logarithmic scale. It is recommended that daily operated-rates be plotted, and not the monthly rates; especially when transient data sets are analyzed.

The data plot is moved over the typecurve plot, while the axes of the two plots are kept parallel, until a good match is obtained. Several different typecurves should be tried to obtain the best fit of all the data. The typecurve that best fits the data is selected and its r_e/r_{wa} (r_e/x_f for fractured case) value is noted.

Typecurve analysis is done by selecting a match point, and reading its coordinates off the data plot ($q/\Delta p$ and t_c)_{match}, and the typecurve plot (q_D and t_{DA})_{match}. At the same time the stem value r_e/r_{wa} (r_e/x_f for fracture typecurves) of the matching curve is noted. To create a forecast, the selected typecurve is traced on to the data plot, and extrapolated. The future rate is read from the data plot, off the traced typecurve.

In the modified (RTA) plot, the inverse pressure integral derivative is also included.

Calculation of parameters

Radial typecurves

Oil wells

Using the definition of dimensionless rate:

$$q_D = \frac{141.2qB\mu}{kh(p_i - p_{wf})}$$

Permeability is calculated as follows, where pressure-drop normalized flow rate and dimensionless rate are read off each of the raw data and typecurve graphs at a selected match point:

$$k = \frac{141.2B\mu}{h} \left(\frac{q/\Delta p}{q_D} \right)_{match}$$

From the definition of dimensionless time based on area (t_{DA}):

$$t_{DA} = \frac{0.00633kt_c}{\pi\phi\mu c_t r_e^2}$$

Reservoir radius is calculated as follows:

$$r_e = \sqrt{\frac{0.00633k}{\pi\phi\mu c_t} \left(\frac{t_c}{t_{DA}} \right)_{match}}$$

Substituting the equation for permeability into the above:

$$r_e = \sqrt{\frac{0.00633}{\pi\phi c_t} \left(\frac{141.2B}{h} \right) \left(\frac{q/\Delta p}{q_D} \right)_{match} \left(\frac{t_c}{t_{DA}} \right)_{match}}$$

Additional reservoir parameters are now calculated:

$$r_{wa} = \frac{r_e}{(r_e/r_{wa})_{match}}$$

$$A [acres] = \frac{\pi r_e^2}{43560}$$

$$s = \ln \frac{r_w}{r_{wa}}$$

$$N [Mbbbls] = \frac{\pi r_e^2 \phi s_o h}{B_o} \left(\frac{1}{5615} \right) = \frac{0.00633}{c_t} \left(\frac{141.2 s_o}{5615} \right) \left(\frac{q/\Delta p}{q_D} \right)_{match} \left(\frac{t_c}{t_{DA}} \right)_{match}$$

Gas wells

For gas wells, dimensionless rate is defined as follows:

$$q_D = \frac{1.417 \cdot 10^6 T}{kh} \left(\frac{q}{\Delta p_p} \right)$$

According to this equation, the permeability can be calculated as:

$$k = \frac{1.417 \cdot 10^6 T}{h} \left(\frac{q/\Delta p_p}{q_D} \right)_{match}$$

From the definition of dimensionless time based on area:

$$t_{DA} = \frac{0.00633 k t_{ca}}{\pi \phi \mu_i c_{ti} r_e^2}$$

Reservoir radius is calculated as follows:

$$r_e = \sqrt{\frac{0.00633 k}{\pi \phi \mu_i c_{ti}} \left(\frac{t_{ca}}{t_{DA}} \right)_{match}}$$

Substituting the equation for permeability into the above:

$$r_e = \sqrt{\frac{0.00633}{\pi \phi \mu_i c_{ti}} \left(\frac{1.417 \cdot 10^6 T}{h} \right) \left(\frac{q/\Delta p_p}{q_D} \right)_{match} \left(\frac{t_{ca}}{t_{DA}} \right)_{match}}$$

Additional reservoir parameters are now calculated:

$$r_{wa} = \frac{r_e}{(r_e/r_{wa})_{match}}$$

$$A [acres] = \frac{\pi r_e^2}{43560}$$

$$s = \ln \frac{r_w}{r_{wa}}$$

$$G [bcf] = \left[\frac{\pi r_e^2 \phi h S_g p_i T_{sc}}{Z_i T p_{sc}} \right] * 10^{-9}$$

$$= \left[\frac{0.0633 * 1.417 * 10^6 S_g p_i T_{sc}}{\mu_i c_{ti} Z_i p_{sc}} \left(\frac{q/\Delta p_p}{q_D} \right)_{match} \left(\frac{t_{ca}}{t_{DA}} \right)_{match} \right] * 10^{-9}$$

Fracture typecurves

Oil wells

Using the definition of dimensionless rate:

$$q_D = \frac{141.2qB\mu}{kh(p_i - p_{wf})}$$

Permeability is calculated as follows, where pressure-drop normalized flow rate and dimensionless time are read off each of the raw data and typecurve graphs at a selected match point:

$$k = \frac{141.2B\mu}{h} \left(\frac{q/\Delta p}{q_D} \right)_{match}$$

From the definition of dimensionless time based on area:

$$t_{DA} = \frac{0.00633kt_c}{\pi\phi\mu c_i r_e^2}$$

Reservoir radius is calculated as follows:

$$r_e = \sqrt{\frac{0.00633k}{\pi\phi\mu c_t} \left(\frac{t_c}{t_{DA}}\right)_{match}}$$

Substituting the equation for permeability into the above:

$$r_e = \sqrt{\frac{0.00633}{\pi\phi c_t} \left(\frac{141.2B}{h}\right) \left(\frac{q/\Delta p}{q_D}\right)_{match} \left(\frac{t_c}{t_{DA}}\right)_{match}}$$

Additional reservoir parameters are now calculated:

$$x_f = \frac{r_e}{(r_e/x_f)_{match}}$$

$$A [acres] = \frac{\pi r_e^2}{43560}$$

$$N [Mbbbls] = \frac{\pi r_e^2 \phi S_o h}{B_o} \left(\frac{1}{5615}\right) = \frac{0.00633}{c_t} \left(\frac{141.2S_o}{5615}\right) \left(\frac{q/\Delta p}{q_D}\right)_{match} \left(\frac{t_c}{t_{DA}}\right)_{match}$$

Gas wells

For gas wells, dimensionless rate is defined as follows:

$$q_D = \frac{1.417 \cdot 10^6 T}{kh} \left(\frac{q}{\Delta p_p}\right)$$

The permeability is calculated from above, as follows:

$$k = \frac{1.417 \cdot 10^6 T}{h} \left(\frac{q/\Delta p_p}{q_D}\right)_{match}$$

From the definition of dimensionless time based on area:

$$t_{DA} = \frac{0.00633k t_{ca}}{\pi\phi\mu_i c_{ti} r_e^2}$$

Reservoir radius is calculated as follows:

$$r_e = \sqrt{\frac{0.0633k}{\pi\phi\mu_i c_{ti}} \left(\frac{t_{ca}}{t_{DA}}\right)_{match}}$$

Substituting the equation for permeability into the above, we get:

$$r_e = \sqrt{\frac{0.00633}{\pi\phi\mu_i c_{ti}} \left(\frac{1.417*10^6 T}{h}\right) \left(\frac{q/\Delta p_p}{q_D}\right)_{match} \left(\frac{t_{ca}}{t_{DA}}\right)_{match}}$$

Additional reservoir parameters are now calculated:

$$x_f = \frac{r_e}{(r_e/x_f)_{match}}$$


$$A [acres] = \frac{\pi r_e^2}{43560}$$

$$G [bcf] = \left[\frac{\pi r_e^2 \phi h S_g p_i T_{sc}}{Z_i T p_{sc}} \right] * 10^{-9}$$

$$= \left[\frac{0.00633 * 1.417 * 10^6 S_g p_i T_{sc}}{\mu_i c_{ti} Z_i p_{sc}} \left(\frac{q/\Delta p_p}{q_D}\right)_{match} \left(\frac{t_{ca}}{t_{DA}}\right)_{match} \right] * 10^{-9}$$

Methodology: rate-cumulative

Cumulative-time typecurves have a similar purpose to the rate-time typecurves, but have the added advantage of smoothing noisy production data. As such, they often help to provide a more unique type curve match, when used in conjunction with the other Agarwal-Gardner typecurves. The following figure is an example of a cumulative-time typecurve for an unfractured well in a circular reservoir:

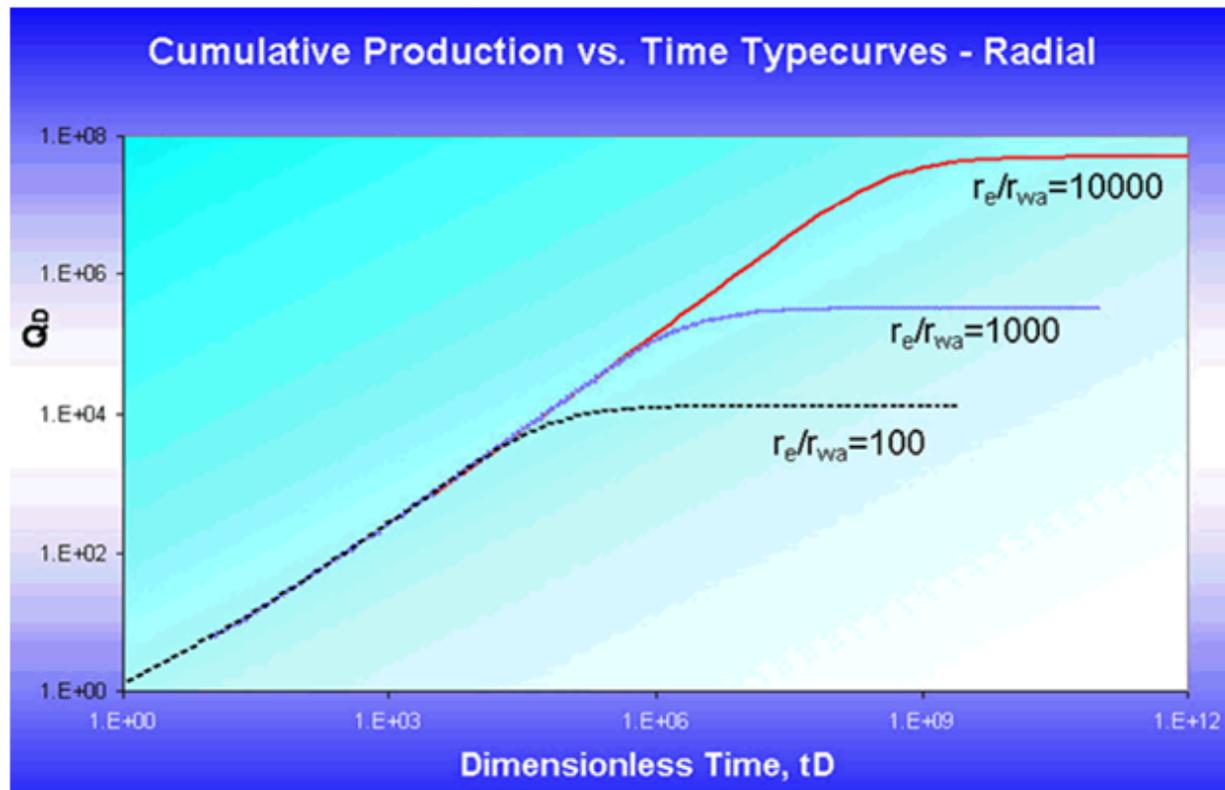

Plotting rate vs. cumulative production is a widely accepted and simple method for estimating movable reserves. In the absence of more sophisticated decline analysis techniques, many analysts use this method as a quick and effective way of estimating reserves. A straight-line extrapolation is equivalent to fitting the data to the exponential ($b = 0$) stem of the Arps decline typecurves. This method will almost always give a lower-bound estimate of recoverable hydrocarbons (this can be clearly seen when looking at the Arps decline typecurves, as the exponential stem has the steepest slope). A more rigorous decline analysis can be performed by fitting data to one of the full set of Arps decline typecurves. This type of analysis provides an empirical fit of the data to estimate the recoverable reserves.

There are two main limitations of the Arps decline analysis technique:

- The analysis does not account for changing production conditions, and thus cannot always provide a reliable estimate of recoverable hydrocarbons-in-place.
- Changing gas properties with time (reservoir pressure) are not accounted for; thus gas reserves are usually underestimated.

These limitations can be overcome through modification of the rate vs. cumulative production plotting functions. Changing production conditions are accommodated by incorporating variations in flowing



pressure as well as production rate, and by normalizing the production data using material balance time. Changing gas properties are handled using gas pseudo-time.

Blasingame typecurve theory

Background

The production decline analysis techniques of Arps and Fetkovich are limited in that they do not account for variations in sandface flowing pressure in the transient regime, and only account for such variations empirically during boundary-dominated flow (by means of the empirical depletion stems). In addition, changing pressure, volume, and temperature (PVT) properties with reservoir pressure are not considered for gas wells.


Blasingame and his colleagues have developed a production decline method that accounts for these phenomena. The method uses a form of superposition time function that only requires one depletion stem for typecurve matching - the harmonic stem. One important advantage of this method is that the typecurves used for matching are similar to those used for Fetkovich decline analysis, without the empirical depletion stems. When the typecurves are plotted using Blasingame's superposition time function, the analytical exponential stem of the Fetkovich typecurve becomes harmonic. The significance of this may not be readily evident until considering that, if the inverse of the flowing pressure is plotted against time, pseudo-steady state depletion at a constant flow rate follows a harmonic decline trend. In effect, Blasingame's typecurves allow depletion at a constant pressure to appear as if it were depletion at a constant flow rate. In fact, Blasingame et al. have shown that boundary-dominated flow with both declining rates and pressures appear as pseudo-steady state depletion at a constant rate, provided the rate and pressure decline monotonically.

Blasingame's improvements on the Fetkovich style of production decline analysis are further enhanced by the introduction of two additional typecurves which are plotted concurrently with the normalized rate typecurve. These 'rate integral' and 'rate integral derivative' typecurves aid in obtaining a more unique match. The derivation of these will be discussed in a later section.

Blasingame in RTA

Recall that the Fetkovich typecurves are based on combining the analytical solution to transient flow of a single-phase fluid at a constant wellbore flowing pressure with the empirical Arps equations for boundary-dominated flow. Fetkovich believed the exponent 'b' could vary between zero and one, and that it was correlatable with fluid properties as well as recovery mechanism. For example, single-phase oil flow would result in a 'b' value of zero, while single-phase gas flow would exhibit 'b' > 0 because of changes in gas properties. Later, Fraim and Wattenbarger showed that if the changes in gas fluid properties were taken into account (i.e., with the use of pseudo-time), boundary-dominated gas flow against a constant back pressure exhibits the same behavior that an oil reservoir would; the

decline would follow the exponential curve, in which 'b' = 0. These findings relate to flow at constant wellbore pressure. The subsequent development by Blasingame et al. was to account for changing wellbore flowing pressures by defining a superposition time function, which they called material balance time. They showed that if the material balance time were used instead of actual producing time, what was previously an exponential decline would follow the harmonic decline stem instead.

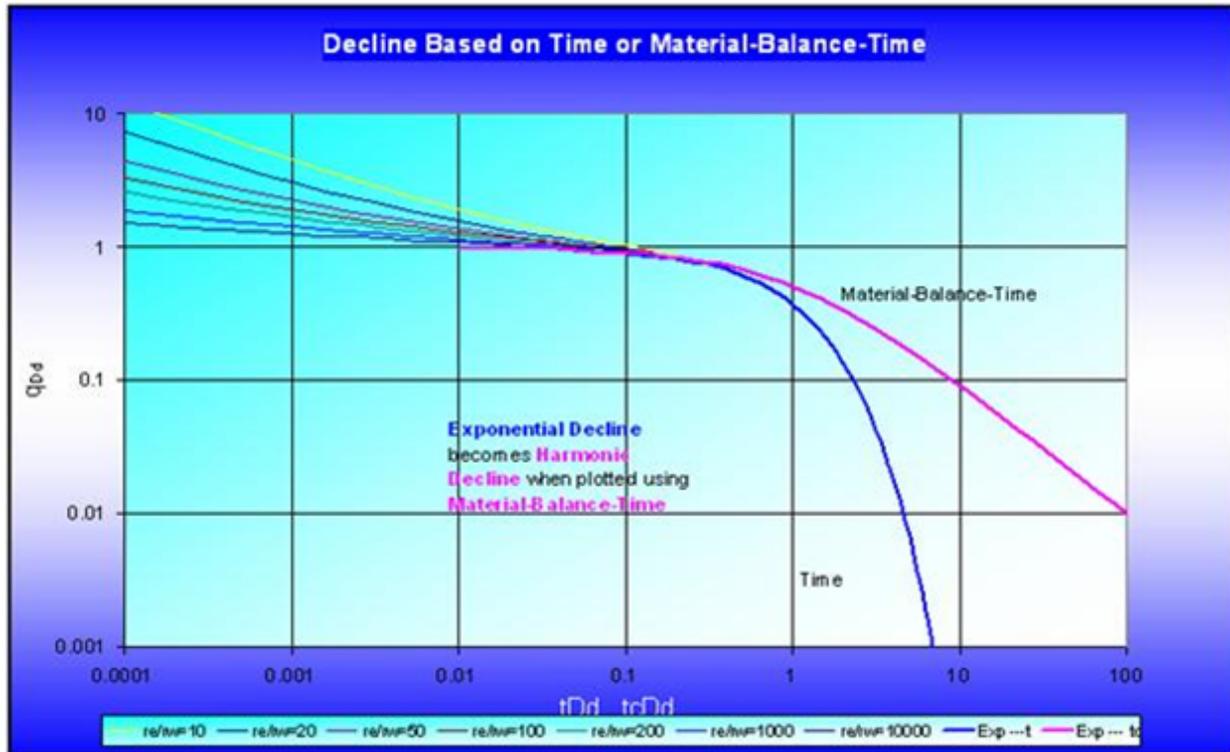


More importantly, data obtained when both the rate and the flowing pressure are varying can now be analyzed if material balance time is used. For example, if the production rate from a well is monotonically declining, and at the same time, its flowing sandface pressure is on continuous decline, a plot of pressure-drop normalized flow rate ($q / \Delta p$) vs. $Q(t) / q(t)$ would follow the harmonic curve (for a gas well, the changing gas properties should also be accounted for by using pseudo-time).

Blasingame, McCray, and Palacio developed typecurves which show the analytical transient stems along with the analytical harmonic decline (but with the rest of the empirical hyperbolic stems absent). In addition, they introduced two other functions; the rate integral function, and the rate integral derivative function, which help in smoothing the often noisy character of production data, and in obtaining a more unique match.

The Blasingame suite of typecurves are similar to the Fetkovich typecurves for constant pressure production. The only real difference is the absence of the empirical depletion stems on the Blasingame

typecurves. These are not required because the usage of material balance time forces the boundary-dominated data to fall only on the analytical harmonic stem.

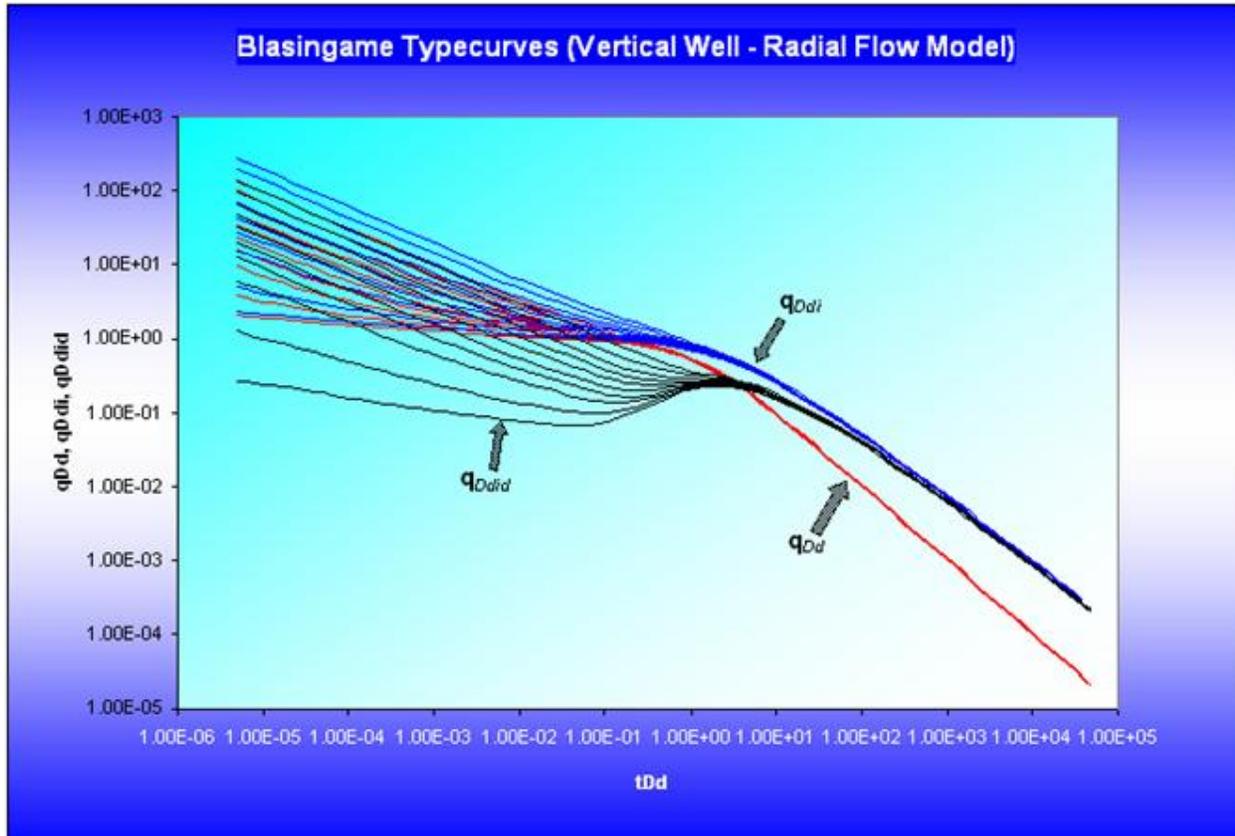

Models

The Blasingame suite of typecurves consists of a number of different models:

- Vertical well; radial flow model
- Vertical well; hydraulic fracture model (Infinite conductivity)
- Vertical well; hydraulic fracture model (Finite conductivity)
- Vertical well; hydraulic fracture model (Elliptical flow)
- Horizontal well model
- Waterflood model
- Well interference model (declining reservoir pressure)

All models assume a circular outer boundary, with the exception of Elliptical flow and Horizontal well typecurves, which assume an elliptical and a square outer boundary, respectively.

Methodology

In Blasingame typecurve analysis, three rate functions (normalized rate, rate integral, and rate integral derivative) can be plotted against Material Balance Time.

Normalized rate

Normalized rate is the primary plotting variable. It is very useful for production analysis where flowing pressures and rates change through time. It is defined as the rate divided by flowing pressure drop.

Oil

$$\frac{q}{\Delta p} = \frac{q}{p_i - p_{wf}}$$

Gas

$$\frac{q}{\Delta p_p} = \frac{q}{p_{pi} - p_{pwf}}$$


Rate integral

Conceptually, the rate integral may be thought of as the average rate at which the well has produced until any particular moment in time. The definition of the normalized rate integral is the cumulative average of the normalized rate when plotted against material balance time.

Surface (and even bottomhole) measured flowing rate and pressure data inherently contain a significant noise component. This noise often masks or distorts the sought after "reservoir signal". As a result, it is advantageous to have a way to remove this noise from the production data response.


Blasingame has identified a powerful method for removing noise from a production response, by using integration. The rate integral (the inverse of this is the pressure integral) is referred to as an auxiliary function, and is derived by integrating the normalized production rate response through time. Any discontinuities in the raw data are effectively removed through the integration process, yielding a smooth decline curve. The resulting curve resembles the original production decline response, but is much smoother. It can be used to perform a secondary typecurve match (simultaneously with the raw data). Furthermore, it may be used as base data for a well-test style semi-log derivative plot.

Conceptually, the rate integral function can be thought of as a cumulative average of the flow rate with time. The purpose of plotting a rate integral function is to smooth noisy rate data. This concept is most easily understood graphically:

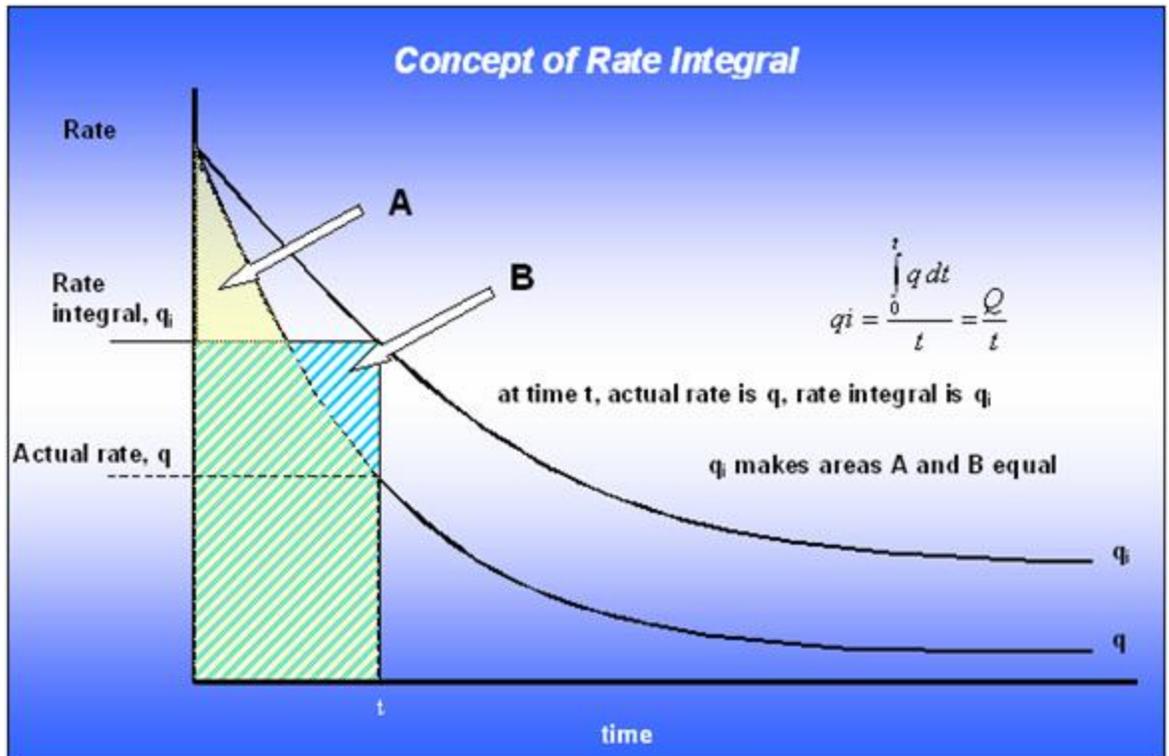

In terms of Blasingame typecurve analysis, the definition of the rate integral must account for two additional complications:

- Normalization of flow rate using pressure (for oil) or pseudo-pressure (for gas)
- Usage of material balance time (for oil) or material balance pseudo-time (for gas), instead of time

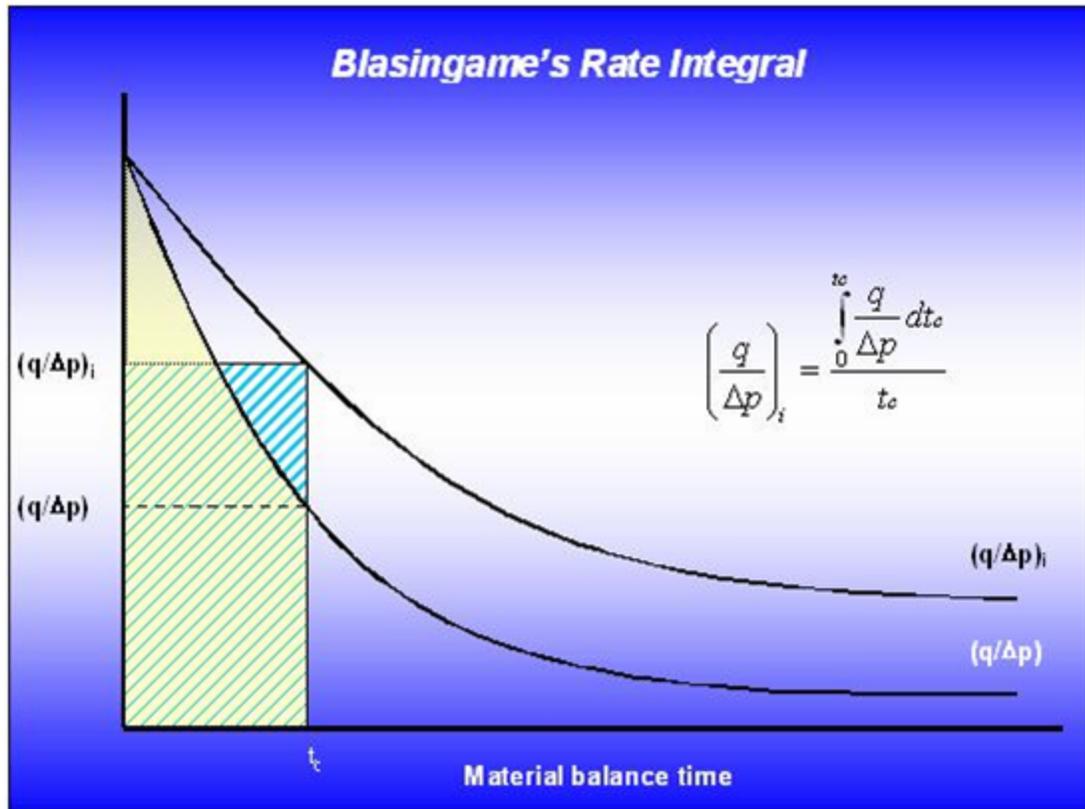

Oil

$$\left(\frac{q}{\Delta p}\right)_i = \frac{\int_0^{t_c} \frac{q}{\Delta p} dt_c}{t_c}$$

Gas

$$\left(\frac{q}{\Delta p_p}\right)_i = \frac{\int_0^{t_{ca}} \frac{q}{\Delta p_p} dt_{ca}}{t_{ca}}$$

Rate integral derivative

The rate integral derivative is defined as the semi logarithmic derivative of the rate integral function, with respect to material balance time.

Oil

$$\left(\frac{q}{\Delta p}\right)_{id} = -\frac{d\left(\frac{q}{\Delta p}\right)_i}{d \ln t_c} = -\frac{d\left(\frac{q}{\Delta p}\right)_i}{dt_c} t_c$$

Gas

$$\left(\frac{q}{\Delta p_p}\right)_{id} = -\frac{d\left(\frac{q}{\Delta p_p}\right)_i}{d \ln t_{ca}} = -\frac{d\left(\frac{q}{\Delta p_p}\right)_i}{dt_{ca}} t_{ca}$$

Calculation of parameters

The actual normalized rate, rate integral, and rate integral derivative are plotted vs. material balance time data on a log-log scale of the same size as the typecurves. This plot is called the data plot. Any convenient units can be used for normalized rate or time because a change in units simply causes a uniform shift of the raw data on a logarithmic scale. It is recommended that daily operated-rates be plotted, and not the monthly rates, especially when transient data is analyzed. Any one of the curves can be used individually but often using more than one curve helps in achieving a more unique match of the data with the typecurves.

Move the data plot over the typecurve plot, while the axes of the two plots are kept parallel, until a good match is obtained. The rate, rate integral, and rate integral derivative data should all fit the same corresponding typecurve. Try several different transient typecurves to obtain the best fit of all the data. Select the typecurve that best fits the data, and note and its r_e / r_{wa} value.

Typecurve analysis is done by selecting a match point and reading its coordinates off the data plot ($q / \Delta P$ and t_c for oil, $q / \Delta p_p$ and t_{ca} for gas) $_{match}$; and off the typecurve plot (q_{Dd} and t_{Dd}) $_{match}$. Note the stem value r_e / r_{wa} of the matching curve.

Given a curve match, the following reservoir parameters can be obtained if reservoir thickness, total compressibility, and wellbore radius are known:

- Permeability
- Skin
- Fracture half length
- Dimensionless fracture conductivity

- Area
- Original oil- or gas-in-place

To create a forecast, the selected typecurve is traced on to the data plot, and extrapolated beyond the last data points. The future rate is read from the data plot, off the traced typecurve.

Note: The above calculation parameters reflect a vertical well with a radial flow model. Selection of other typecurve models for matching requires some adjustments. For information on other model calculation parameters, see [transient typecurve matching equations](#).

Boundary-dominated flow

Harmonic stem of decline curves

Recall from the derivation of Material Balance Time:

$$\frac{\Delta p}{q} = m t_c + b_{pss}$$

Taking the reciprocal and rearranging provides the same form as the harmonic branch of Arps type-curve:

$$b_{pss} \frac{q}{\Delta p} = \frac{1}{\left(1 + \frac{m t_c}{b_{pss}}\right)}$$

To further show the similarity to the harmonic equation, the equation above can be written as follows:

$$q_{Dd} = \frac{1}{1+t_{Dd}}$$

where:

$$q_{Dd} = \frac{q/\Delta p}{(q/\Delta p)_i}$$

$$\left(\frac{q}{\Delta p}\right)_i = \frac{1}{b_{pss}}$$

$$t_{Dd} = a_i t_c$$

$$a_i = \frac{m}{b_{pss}}$$

The rearranged material balance time equation is significant; if the pressure-drop normalized flow rate is plotted vs. material balance time, the data will follow the harmonic branch of the Fetkovich or Arps typecurve (regardless of whether production is constant or variable flow rate, or constant or variable sandface pressure).

The relations that are used to compute oil-in-place and reservoir properties are given by Equations A14-A16 of Palacio and Blasingame (1993).

$$b_{pss} = \frac{(q_{Dd})_{match}}{\left(\frac{q_o}{(p_i - p_{wf})}\right)_{match}} \quad (\text{A14})$$

$$m = \frac{1}{N_{c_{ti}}} = b_{pss} \frac{(t_{Dd})_{match}}{(t_c)_{match}} \quad (\text{A15})$$

$$N = \frac{1}{c_{ti}} \frac{(t_c)_{match}}{(t_{Dd})_{match}} \frac{\left(\frac{q_o}{(p_i - p_{wf})}\right)_{match}}{(q_{Dd})_{match}} \quad (\text{A16})$$

Data preparation

In Blasingame typecurve analysis, boundary-dominated flow is represented by a single harmonic stem, into which all the transient stems converge.

To calculate original gas-in-place and original oil-in-place, the plotted data are matched against the harmonic stem, which is defined mathematically as follows:

$$q_{Dd} = \frac{1}{1 + t_{Dd}} \quad (1)$$

Oil

where:

$$q_{Dd} = \frac{\left(\frac{q}{\Delta p}\right)}{\left(\frac{q}{\Delta p}\right)_i}$$

and:

$$t_{Dd} = a_i t_c \quad (2)$$

The pseudo-steady-state equation for oil in decline form is as follows:

$$\frac{q}{\Delta p} = \frac{\frac{1}{b}}{\frac{1}{c_e N b} t_c + 1} \quad (3)$$

Through comparison of (1) and (3), it is clear that a graph of normalized rate vs. material balance time will follow the trend of the dimensionless harmonic stem.

From equations (1), (2), and (3) we get the following:

$$\frac{q}{\Delta p} = \frac{\left(\frac{q}{\Delta p}\right)_i}{1 + a_i t_c} \quad (4)$$

where:

$$\frac{q}{(\Delta p)_i} = \frac{1}{b}$$

$$a_i = \frac{1}{c_e N b}$$

Solving for N, we get:

$$N = \frac{1}{c_e \left(\frac{t_{Dd}}{t_c}\right) \left[\frac{q_{Dd}}{\left(\frac{q}{\Delta p}\right)}\right]} = \frac{1}{c_e} \left[\frac{t_c}{t_{Dd}}\right] \left[\frac{\frac{q}{\Delta p}}{q_{Dd}}\right] \quad (5)$$

Gas

The development for gas is similar to that of oil. However, pseudo-pressure and pseudo-time must be used in place of pressure and time.

The definitions of the dimensionless variables are as follows:

$$q_{Dd} = \frac{\left(\frac{q}{\Delta p_p}\right)}{\left(\frac{q}{\Delta p_p}\right)_i}$$

and:

$$t_{Dd} = a_i t_{ca} \quad (6)$$

The pseudo-steady-state equation for gas is as follows:

$$\frac{q}{\Delta p_p} = \frac{\frac{1}{b}}{\frac{2p_i}{(Z \mu c_t)_i G b} t_{ca} + 1} \quad (7)$$

Combining equations (1), (6) and (7):

$$\frac{q}{\Delta p_p} = \frac{\left(\frac{q}{\Delta p_p}\right)_i}{1 + a_i t_c}$$

where:

$$\left(\frac{q}{\Delta p_p}\right)_i = \frac{1}{b}$$

and:

$$a_i = \frac{2 p_i}{(Z \mu c_t)_i G b} \quad (8)$$

Solving for G, we get:

$$G = \frac{2 p_i}{\left(\frac{t_{Dd}}{t_{ca}} \right) (Z \mu c_t)_i \left(\frac{q_{Dd}}{\frac{q}{\Delta p_p}} \right)} = \frac{2 p_i}{(Z \mu c_t)_i} \left[\frac{t_{ca}}{t_{Dd}} \right] \left[\frac{\frac{q}{\Delta p_p}}{q_{Dd}} \right] \quad (9)$$

Transient typecurve matching equations

The evaluation of transient parameters is accomplished using the transient stems of the dimensionless typecurve model. Unlike the boundary-dominated flow case, the definition of the characteristic dimensionless variables changes according to the chosen transient model. Presented in this section are the typecurve matching equations for five different transient models:

- Radial (Vertical Well)
- Infinite Conductivity Fracture
- Finite Conductivity Fracture
- Horizontal Well
- Elliptical Flow Typecurves

The typecurves are plotted using the dimensionless decline rate q_{Dd} and dimensionless decline time t_{Dd} , which are defined as follows:

$$q_{Dd} = q_D b_{Dpss}$$

where:

$$q_D = \frac{141.2 B \mu}{k h} \frac{q}{\Delta p} \quad \text{for oil wells}$$

$$q_D = \frac{1.417 \times 10^6 T}{k h} \frac{q}{\Delta p_p} \quad \text{for gas wells}$$

$$t_{Dd} = \frac{2 \pi}{b_{Dpss}} t_{DA}$$

where:


$$t_{DA} = \frac{0.00633 k t_c}{\varphi \mu c_t A} \quad \text{for oil wells}$$

$$t_{DA} = \frac{0.00633 k t_{ca}}{\varphi \mu_i c_{ti} A} \text{ for gas wells}$$

The dimensionless pseudo-steady state constant b_{Dpss} is defined differently for each model.

Radial

The radial model simulates a vertical well in the center of a cylindrical reservoir.

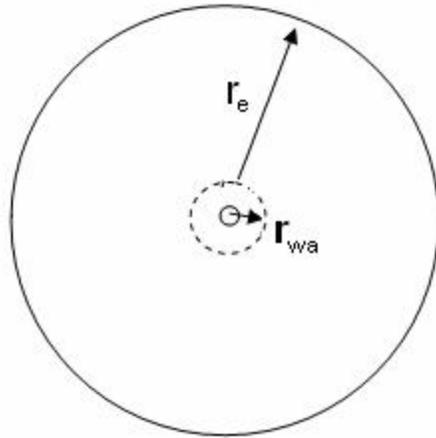

The characteristic dimensionless parameter $r_{eD} = r_e / r_{wa}$ represents the ratio of the external reservoir radius to the apparent wellbore radius.

The dimensionless pseudo-steady state constant b_{Dpss} is defined as follows for the radial model:

$$b_{Dpss} = \ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{1}{2}$$

Oil

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{q}{\Delta p} \left(\frac{141.2 B \mu}{k h} \right) b_{Dpss}$$

$$k = \left(\frac{q}{\Delta p} \right)_{match} \left(\frac{141.2 B \mu}{h} \right) b_{Dpss}$$

Solve for apparent wellbore radius from the definition of dimensionless decline time:

$$t_{Dd} = \frac{0.00633 k t_c}{\frac{1}{2} \varphi \mu c_t r_{wa}^2 \left[\left(\frac{r_e}{r_{wa}} \right)_{match}^2 - 1 \right] b_{Dps}}$$

$$r_{wa} = \sqrt{\left(\frac{t_c}{t_{Dd}} \right)_{match} \frac{0.00633 k}{\varphi \mu c_t \frac{1}{2} \left[\left(\frac{r_e}{r_{wa}} \right)_{match}^2 - 1 \right] b_{Dps}}}$$

Skin is calculated as follows:

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$

Gas

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{q}{\Delta p_p} \left(\frac{1.417 \times 10^6 T}{k h} \right) b_{Dps}$$

$$k = \frac{1.417 \times 10^6 T}{h} \left[\frac{\frac{q}{\Delta p_p}}{q_{Dd}} \right]_{match} b_{Dps}$$

Solve for apparent wellbore radius from the definition of dimensionless decline time:

$$t_{Dd} = \frac{0.00633 k t_{ca}}{\frac{1}{2} \varphi \mu_i c_{ti} r_{wa}^2 \left[\left(\frac{r_e}{r_{wa}} \right)_{match}^2 - 1 \right] b_{Dps}}$$


$$r_{wa} = \sqrt{\left(\frac{t_{ca}}{t_{Dd}} \right)_{match} \frac{0.00633 k}{\varphi \mu_i c_{ti} \frac{1}{2} \left[\left(\frac{r_e}{r_{wa}} \right)_{match}^2 - 1 \right] b_{Dps}}}$$

Skin is calculated as follows:

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$

Infinite conductivity fracture

The fractured model simulates an infinite conductivity hydraulic fracture (vertical) in the center of a cylindrical reservoir.

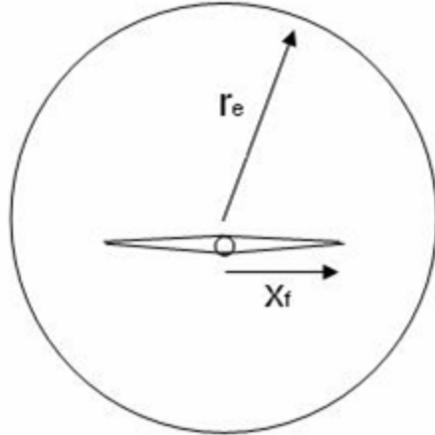

The characteristic dimensionless parameter $r_{eD} = r_e / x_f$ represents the ratio of external reservoir radius to fracture half-length.

The dimensionless pseudo-steady state constant is defined as follows for the infinite conductivity fracture model:

$$b_{Dpss} = \ln(r_{eD}) - 0.049298 + 0.434645 (r_{eD})^{-2}$$

Oil

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{q}{\Delta p} \left(\frac{141.2 B \mu}{k h} \right) b_{Dpss}$$

$$k = \left(\frac{q}{\Delta p} \right)_{match} \left(\frac{141.2 B \mu}{h} \right) b_{Dpss}$$

Solve for effective radius from the product of dimensionless decline rate and dimensionless decline time:

$$r_e = \sqrt{\left(\frac{t_c}{t_{Dd}} \right)_{match} \frac{2}{b_{Dpss}} \frac{0.00633 k}{\varphi \mu c_t}} = \sqrt{\left(\frac{t_c}{t_{Dd}} \right)_{match} \left(\frac{q}{\Delta p} \right)_{match} \frac{2 \times 0.00633 \times 141.2 B}{\varphi h c_t}}$$

Solve for fracture half-length from the definition of dimensionless effective radius:

$$x_f = \frac{r_e}{(r_{eD})_{match}}$$

Gas

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{q}{\Delta p_p} \left(\frac{1.417 \times 10^6 T}{k h} \right) b_{Dpss}$$

$$k = \left(\frac{\frac{q}{\Delta p_p}}{q_{Dd}} \right)_{match} \left(\frac{1.417 \times 10^6 T}{h} \right) b_{Dpss}$$

Solve for effective radius from the product of dimensionless decline rate and dimensionless decline time:

$$r_e = \sqrt{0.00633 \left(\frac{1.417 \times 10^6 T}{\frac{1}{2} h \varphi \mu_i c_{ti}} \right) \left(\frac{t_{ca}}{t_{Dd}} \right) \left(\frac{\frac{q}{\Delta p_p}}{q_{Dd}} \right)_{match}}$$

Solve for fracture half-length from the definition of dimensionless effective radius:


$$x_f = \frac{r_e}{(r_{eD})_{match}}$$

Finite conductivity fracture

A fracture with finite conductivity is defined as a planar crack penetrated by a well or propagated from a well by hydraulic fracturing having a non-zero pressure drop in the fracture during production. A fracture with finite conductivity is characterized by dimensionless fracture conductivity which is defined as:

$$F_{CD} = \frac{k_w w_f}{k x_f}$$

For $F_{CD} > 50$, the fracture is assumed to have infinite conductivity. The finite conductivity fracture model in RTA simulates a vertical fracture in the center of a cylindrical reservoir. The characteristic parameter $r_{eD} = r_e / x_f$ represents the ratio of external reservoir radius to fracture half length.

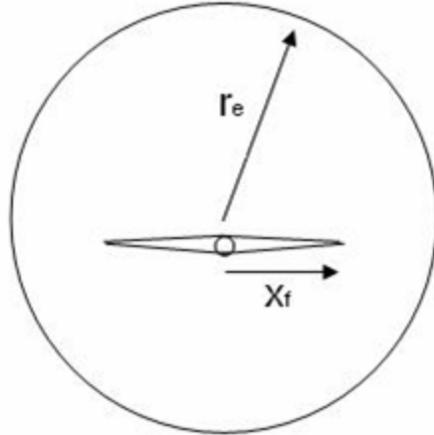

The dimensionless pseudo-steady state constant b_{Dpss} is defined as follows for the finite conductivity fracture model:

$$b_{Dpss} = \ln(r_{eD}) - 0.049298 + 0.43464 r_{eD}^{-2} + \frac{a_1 + a_2 u + a_3 u^2 + a_4 u^3 + a_5 u^4}{1 + b_1 u + b_2 u^2 + b_3 u^3 + b_4 u^4}$$

where:

$$u = \ln(\text{FCD})$$

$$a_1 = 0.936268$$

$$a_2 = -1.00489$$

$$a_3 = 0.319733$$

$$a_4 = -0.0423532$$

$$a_5 = 0.00221799$$

$$b_1 = -0.385539$$

$$b_2 = -0.0698865$$

$$b_3 = -0.0484653$$

$$b_4 = -0.00813558$$

Oil

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{q}{\Delta p} \frac{141.2 B \mu}{k h} b_{Dpss}$$

$$k = \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_{Dd}} \right]_{match} \frac{141.2 B \mu}{h} b_{Dpss}$$

Solve for effective radius from the product of dimensionless decline rate and dimensionless decline time:

$$r_e = \sqrt{\left(\frac{t_c}{t_{Dd}} \right)_{match} \frac{2}{b_{Dpss}} \frac{0.00633 k}{\varphi \mu c_t}} = \sqrt{\left(\frac{t_c}{t_{Dd}} \right)_{match} \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_{Dd}} \right]_{match} \frac{2 \times 0.00633 \times 141.2 B}{\varphi c_t h}}$$

Solve for fracture half-length from the definition of dimensionless effective radius:

$$x_f = \frac{r_e}{(r_{eD})_{match}}$$

Additional parameters are then calculated using the following equations:

$$N = \frac{0.00633}{c_t} \frac{141.2 S_o}{5.615 \times 10^3} \left(\frac{t_c}{t_{Dd}} \right)_{match} \quad (\text{Mbbbl})$$

$$A = \frac{\pi r_e^2}{43560} \quad (\text{Acres})$$

Radial flow skin factor:

$$s \approx \ln \frac{r_w}{x_f} + \frac{1.648546 - 3.002711 \times 10^{-1} u + 1.506532 \times 10^{-1} u^2}{1 + 2.136604 \times 10^{-1} u + 9.513761 \times 10^{-2} u^2 + 8.276998 \times 10^{-3} u^3}$$

where:

$$u = \ln(F_{CD})$$

Gas

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{q}{\Delta p_p} \frac{1.417 \times 10^6 T}{k h} b_{Dpss}$$

$$k = \left[\left(\frac{q}{\Delta p_p} \right) \right]_{match} \frac{1.417 \times 10^6 T}{h} b_{Dpss}$$

Solve for effective radius from the product of dimensionless decline rate and dimensionless decline time:

$$r_e = \sqrt{\left(\frac{t_{ca}}{t_{Dd}} \right)_{match} \frac{2}{b_{Dpss}} \frac{0.00633 k}{\varphi \mu c_t}} = \sqrt{\left(\frac{t_{ca}}{t_{Dd}} \right)_{match} \left[\left(\frac{q}{\Delta p_p} \right) \right]_{match} \frac{2 \times 0.00633 (1.417 \times 10^6)}{\varphi c_t h}}$$

Solve for fracture half-length from the definition of dimensionless effective radius:

$$x_f = \frac{r_e}{(r_{eD})_{match}}$$

Additional parameters are then calculated using the following equations:

$$G = \frac{(1.417 \times 10^6) \times 0.00633 \times 2\pi}{(\mu c_t)_i} \left(\frac{t_{ca}}{t_{Dd}} \right)_{match} \left(\frac{q}{\Delta p_p} \right)_{match} S_{gi} \times \frac{519.668}{Z_i} \frac{p_i}{14.65} \times E - 9 \text{ (Bscf)}$$

$$A = \frac{\pi r_e^2}{43560} \text{ (Acres)}$$

Radial flow skin factor:

$$s \approx \ln \frac{r_w}{x_f} + \frac{1.648546 - 3.002711 \times 10^{-1} u + 1.506532 \times 10^{-1} u^2}{1 + 2.136604 \times 10^{-1} u + 9.513761 \times 10^{-2} u^2 + 8.276998 \times 10^{-3} u^3}$$

where:


$$u = \ln(\text{FCD})$$

$$u = \ln(F_{CD})$$

Horizontal well

The horizontal well's typecurve-matching procedure is based on a square-shaped reservoir with uniform thickness (h), and the well is assumed to penetrate the center of the pay zone. Note that the horizontal well typecurve does *not* include any options for including hydraulic fractures.

The procedure for matching horizontal wells is similar to that of vertical wells. However, for horizontal wells, there is more than one choice of model. Each model presents a suite of typecurves representing a different penetration ratio ($L / 2x_e$) and dimensionless wellbore radius (r_{wD}). The definition of the penetration ratio is illustrated in the following diagram:

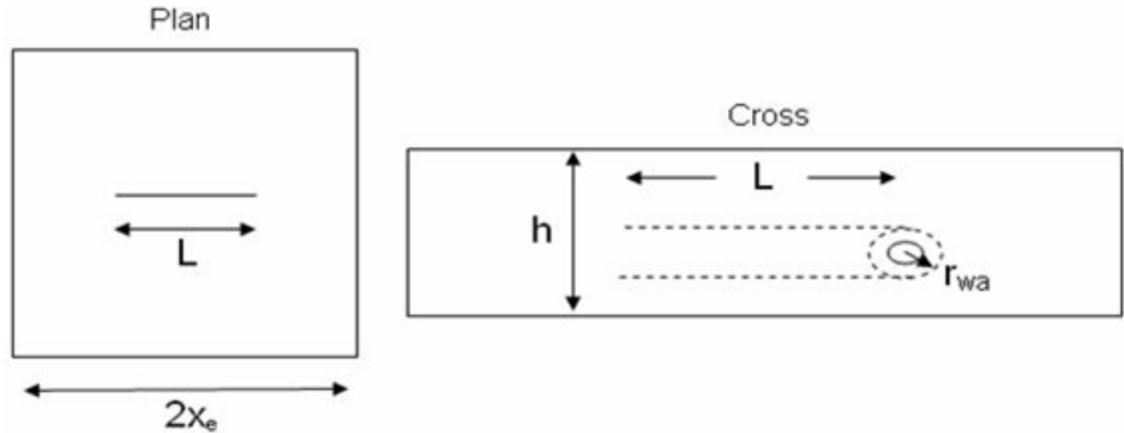

$$r_{wD} = \frac{2 r_{wa}}{L}$$

The characteristic dimensionless parameter for each suite of horizontal typecurves is defined as follows:

$$L_D = \frac{L}{2 \beta h}$$

where β is the square root of the anisotropic ratio:

$$\beta = \sqrt{\frac{k_h}{k_v}}$$

The dimensionless pseudo-steady state constant b_{Dpss} is defined as follows for the horizontal well model:

$$b_{Dpss} = \left[\frac{1}{2} \ln \left(\frac{16}{e^\gamma} \frac{1}{C_{Ah}} \frac{4A}{\left(\frac{L}{2x_e}\right)^2} \right) \right]$$

where:

$$\gamma = \text{Euler's constant} = 0.57721$$

Oil

Dimensionless decline rate is defined differently for horizontal oil wells, than for the radial or fractured cases:

$$q_{Dd} = \frac{q}{\Delta p} \left(\frac{141.2 B \mu}{k h} \right) b_{Dpss}$$

Horizontal permeability (k_h) is obtained by rearranging the above definition of dimensionless decline rate:

$$k_h = \left(\frac{\frac{q}{\Delta p}}{q_{Dd}} \right)_{match} \left(\frac{141.2 B \mu}{h} \right) b_{Dpss}$$

Vertical permeability (k_v) is calculated using the anisotropic ratio:

$$k_v = \frac{k_h}{\beta^2}$$

Gas

Dimensionless decline rate is defined differently for horizontal gas wells, than for the radial or fractured cases:

$$q_{Dd} = \frac{q}{\Delta p_p} \left[\frac{(1.417 \times 10^6) B \mu}{k h} \right] b_{Dpss}$$

Now, permeability is obtained by rearranging the above definition of dimensionless decline rate:


$$k = \left(\frac{\frac{q}{\Delta p_p}}{q_{Dd}} \right)_{match} \left[\frac{(1.417 \times 10^6) B \mu}{h} \right] b_{Dpss}$$

Vertical permeability is calculated exactly the same as for the oil case, using the anisotropic ratio.

Elliptical flow typecurves

Elliptical flow is considered to be the governing flow regime for low permeability gas reservoirs when the reservoir has some sort of an elliptical outer or inner boundary. Cases such as production from an elliptical wellbore, an elliptical fracture, or a circular wellbore in an anisotropic reservoir system can be considered to be examples of an elliptical inner boundary. An elliptic reservoir surrounded by an elliptic aquifer is the example of an elliptical outer boundary.

The elliptical flow typecurves in RTA are generated for a hydraulically fractured well in the center of a reservoir with a closed elliptical boundary.

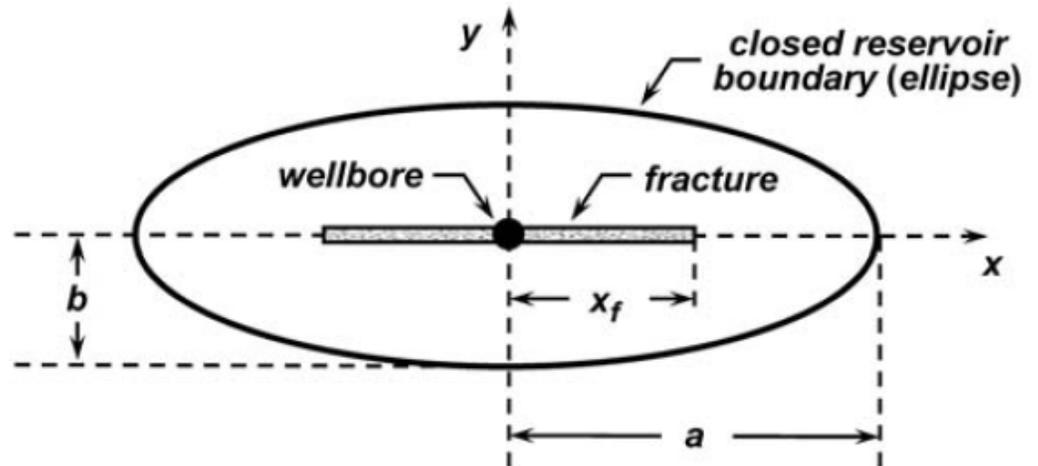

Schematic of the elliptical reservoir model (Amini et al. 2007).

The following assumptions are made in order to develop these typecurves (Amini et al. 2007):

- The reservoir is assumed to be a single-layer system that is isotropic, horizontal, and uniform thickness with constant reservoir characteristics.
- The fracture is assumed to have elliptical shape. It is also assumed that the fracture is very narrow compared to length of the fracture.
- The elliptical outer boundary is assumed to have a focal length equal to fracture half length.

In the case of infinite conductivity fracture, we do not need to consider the flow in the fracture because of constant pressure along the fracture. However, when we are dealing with a finite conductivity fracture, the flow through fracture should be considered, as the pressure drop within the fracture becomes significant compared to the total pressure drop of the fracture and reservoir. In this case, we should solve the diffusivity equations for reservoir and fracture. However, these equations cannot be solved separately and they are coupled together. In the following sections the diffusivity equation, as well as initial and boundary conditions for reservoir and fracture domains are presented.

Calculation of parameters

Oil wells

Using the definition of dimensionless rate for oil wells:

$$q_D = \frac{141.2 B \mu}{k h} \frac{q}{\Delta p}$$

Permeability is calculated as follows:

$$k = \frac{141.2 B \mu}{h} \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D} \right]_{match}$$

From the definition of area-based dimensionless time (t_{DA}) for oil wells:

$$t_{DA} = \frac{0.00633 k t_c}{\varphi \mu c_t A}$$

Area is calculated as follows:

$$A = \frac{0.00633 k}{\varphi \mu c_t} \left(\frac{t_c}{t_{DA}} \right)_{match}$$

Substituting the equation for permeability into the above leads to:

$$A = \left(\frac{t_c}{t_{DA}} \right)_{match} \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D} \right]_{match} \frac{0.00633 \times 141.2 B}{\varphi c_t h} \times \frac{1}{43560} \text{ (Acres)}$$

Additional parameters are then calculated using the following equations:

$$N = \left(\frac{t_c}{t_{DA}} \right)_{match} \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D} \right]_{match} \frac{0.00633 \times 141.2}{c_t} \frac{S_{oi}}{5.615 \times 10^3} \text{ (Mbbls)}$$

$$x_f = \sqrt{\frac{2A}{\pi \sin(h) (2 \zeta_o)_{match}}} = \sqrt{\frac{2}{\pi \sin(h) (2 \zeta_o)_{match}} \times \left(\frac{t_c}{t_{DA}} \right)_{match} \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D} \right]_{match} \frac{0.00633 \times 141.2 B}{\varphi c_t h}}$$

$$a = x_f \cos(h) (\zeta_o)_{match}$$

$$b = x_f \sin(h) (\zeta_o)_{match}$$

$$\text{Drainage Aspect Ratio} = \frac{a}{b} = \cot(h) (\zeta_o)_{match}$$

$$\text{Penetration Ratio} = \frac{x_f}{a} \frac{1}{\cos(h) (\zeta_o)_{match}}$$

$$\text{Where } (\zeta_o)_{match} = \sin(h)^{-1} \left(\frac{b}{x_f} \right)_{match}$$

Gas wells

Using the definition of dimensionless rate for gas wells:

$$q_D = \frac{1.417 \times 10^6 T}{k h} \frac{q}{\Delta p_p}$$

Permeability is calculated as follows:

$$k = \frac{1.417 \times 10^6 T}{h} \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D} \right]_{match}$$

From the definition of area-based dimensionless time for gas wells:

$$t_{DA} = \frac{0.00633 k t_{ca}}{\varphi \mu c_t A}$$

Area is calculated as follows:

$$A = \frac{0.00633 k}{\varphi \mu c_t} \left(\frac{t_{ca}}{t_{DA}} \right)_{match}$$

Substituting the equation for permeability into the above leads to:

$$A = \left(\frac{t_{ca}}{t_{DA}} \right)_{match} \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D} \right]_{match} \frac{0.00633 \times (1.417 \times 10^6) T}{(\varphi \mu c_t)_i h} \times \frac{1}{43560} \text{ (Acres)}$$

Additional parameters are then calculated using the following equations:

$$G = \left(\frac{t_{ca}}{t_{DA}} \right)_{match} \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D} \right]_{match} \frac{0.00633 \times (1.417 \times 10^6) T}{(\varphi \mu c_t)_i h} \frac{S_{gi}}{5.615 \times 10^3} \times 10^{-9} \text{ (Bscf)}$$

$$x_f = \sqrt{\frac{2A}{\pi \sin(h) (2 \zeta_o)_{match}}} = \sqrt{\frac{2}{\pi \sin(h) (2 \zeta_o)_{match}} \times \left(\frac{t_{ca}}{t_{DA}} \right)_{match} \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D} \right]_{match} \frac{0.00633 \times (1.417 \times 10^6) T}{(\varphi \mu c_t)_i h}}$$

$$a = x_f \cos(h) (\zeta_o)_{match}$$

$$b = x_f \sin(h) (\zeta_o)_{match}$$

$$\text{Drainage Aspect Ratio} = \frac{a}{b} = \cot(h) (\zeta_o)_{match}$$


$$\text{Penetration Ratio} = \frac{x_f}{a} = \frac{1}{\cos(h) (\zeta_o)_{match}}$$

$$\text{Where } (\zeta_o)_{match} = \sin(h)^{-1} \left(\frac{b}{x_f} \right)_{match}$$

Compound linear typecurve theory

The most popular well design for exploiting unconventional oil & gas resources is long horizontals with multiple hydraulic fractures. Liang et al (2012) proposed a new set of typecurves for analyzing horizontal multifrac wells with the following geometry:


Figure 1: Horizontal Well Geometry

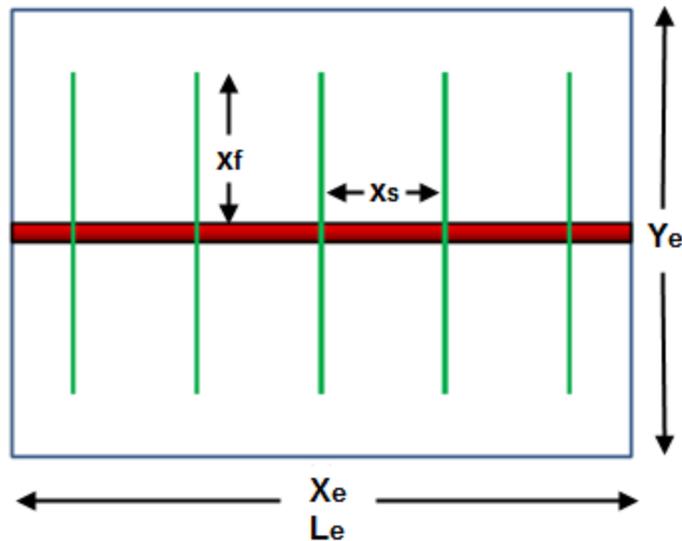

The following six flow regimes have been proposed for such a geometry:


1. Bi-linear flow caused by finite conductivity fractures
2. Primary linear flow from the formation into the fractures

Figure 2

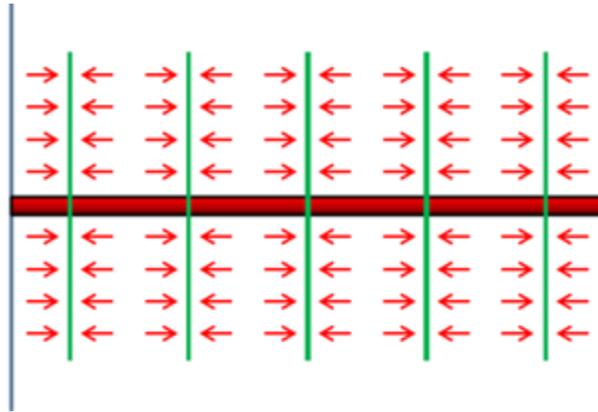

3. Transition period between primary linear flow and compound linear flow
4. Compound linear flow, which is perpendicular to the primary linear flow

Figure 3

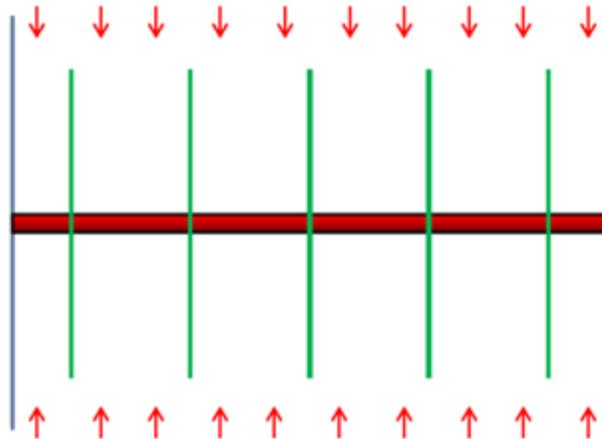

5. Transition between compound linear flow and boundary-dominated flow
6. Boundary-dominated flow

For unconventional reservoirs, the primary flow regimes of interest for rate-transient analysis are the primary linear flow into the fracture, the transition between primary linear and compound linear, and compound linear flow. The compound linear typecurves available in IHS RTA are based on these three flow regimes.

If the following assumptions are made regarding the horizontal multi-fractured well, [Figure 1](#) can be reduced to a single fracture in an infinitely large reservoir:

- Fractures are equally spaced along the horizontal well
- Fractures have the same half-length and conductivity
- The horizontal well contributes negligible flow as compared to the fractures
- The reservoir is a single-layer, homogenous, isotropic system with single porosity and uniform thickness
- The fractures penetrate the entire formation thickness
- The spacing between horizontal wells is infinitely large

With these assumptions in mind, the following reservoir model was used to generate the typecurves:

Figure 4



The complete solution of the above reservoir model is based on Green's function method of Gringarten and Ramey (1974). The dimensionless variables are defined as follows:

$$t_{Dxf} = \frac{0.00633kt}{\phi\mu c_i x_f^2}$$

$$p_D = \frac{\Delta p kh}{141.2qB\mu}$$

The constant rate solution of the equation for various x_s/x_f ratios results in the following set of type-curves for normalized pressure and semi-log derivative (DER):

Figure 5



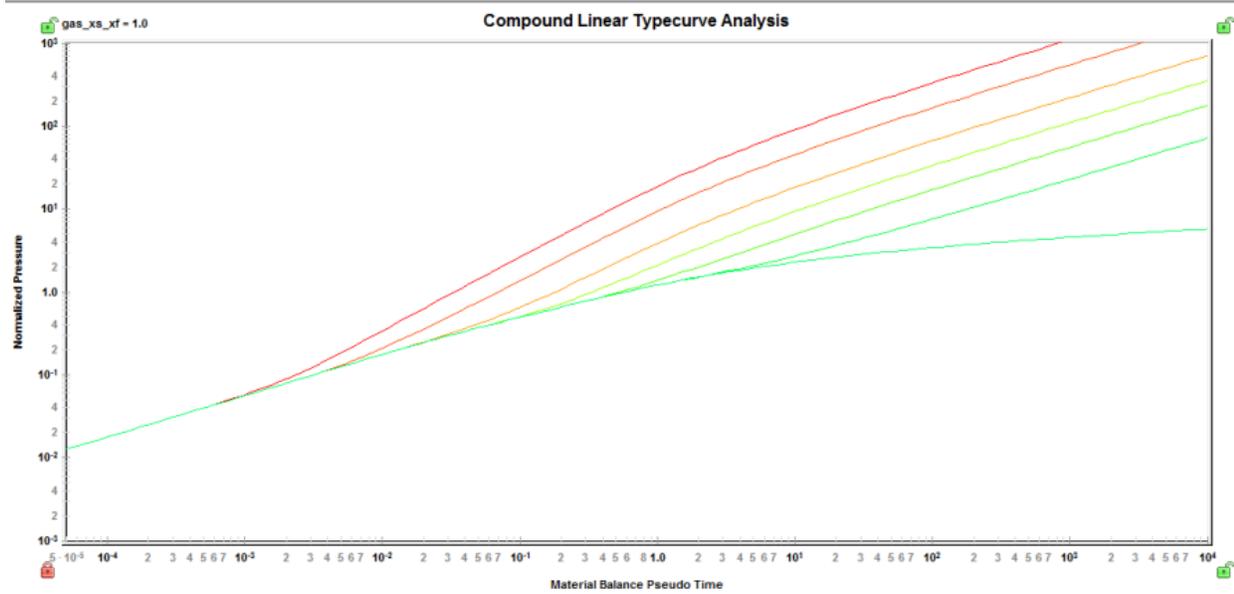


Figure 6

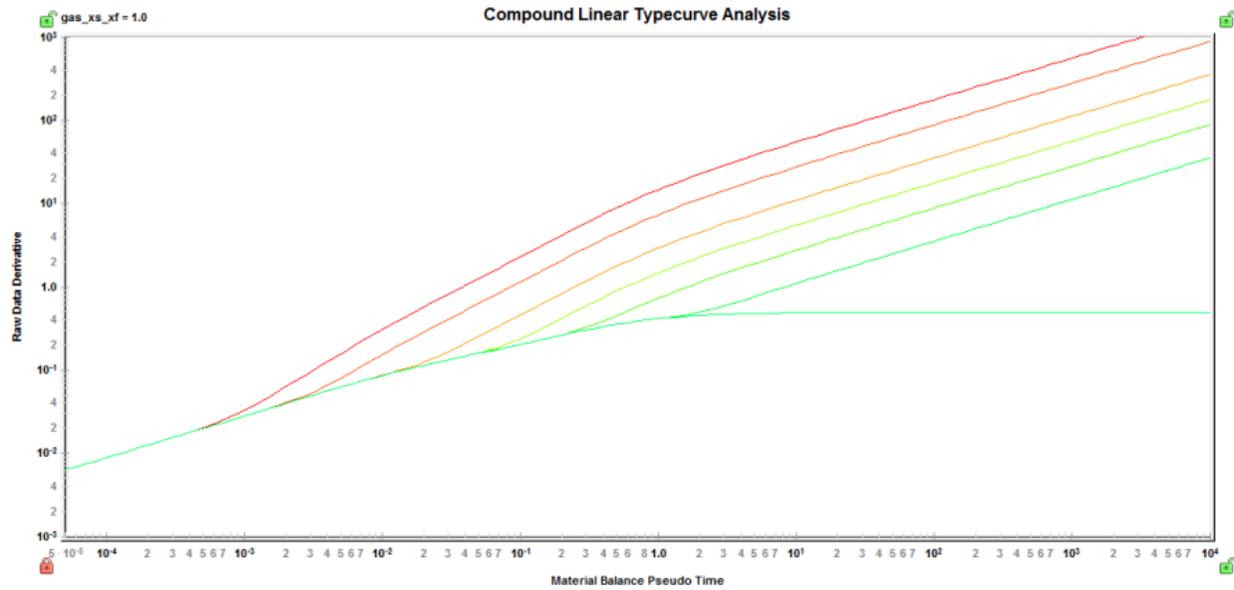


The square root derivative has also been introduced for the compound linear typecurve, and simply rotates the DER typecurve, resulting in a flat line during linear flow.

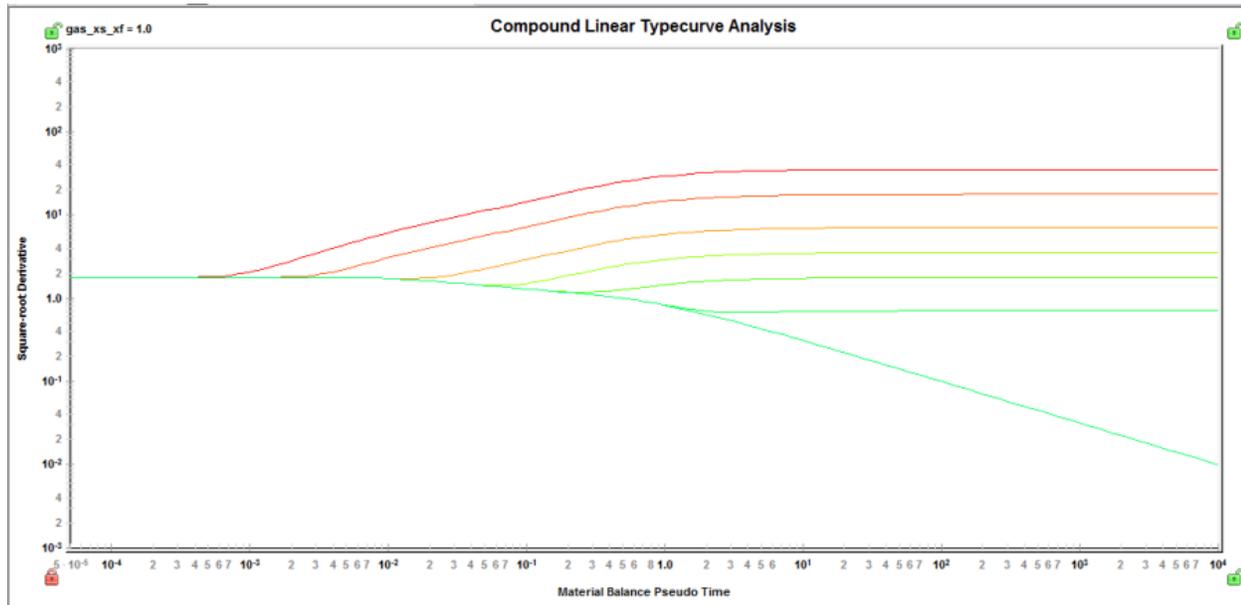

The typecurves presented above are based on an infinite conductivity fracture with no skin. In reality however, it is quite possible to experience a pressure drop caused by flow convergence, or finite conductivity of the hydraulic fractures. The existence of such a skin will change the shape of the data on a log-log plot, and can have a significant effect on typecurve matching if not accounted for properly. The figure below shows the effect of skin on the typecurve shape:

Figure 8

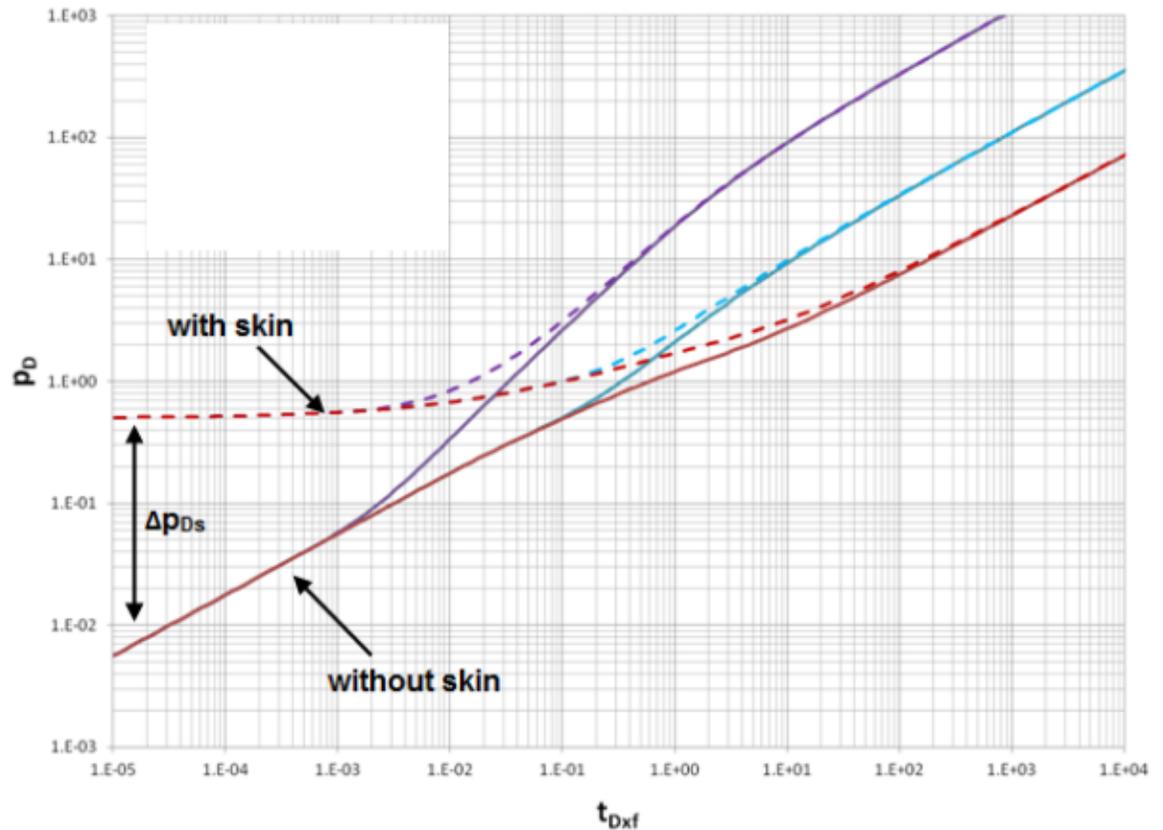

The dimensionless pressure drop illustrated in Figure 8 can be expressed as a total apparent skin using the following equation:

$$s' = \Delta p_{Ds} \times n_f \times \left(\frac{2x_f}{h} \right)$$

The same dimensionless pressure drop can be expressed in terms of an apparent FCD as follows:

$$FCD' = \frac{1}{\Delta p_{Ds}} \times \frac{1}{n_f} \times \left(1 + \frac{h}{x_f} \left(\ln \left(\frac{h}{2r_w} \right) - \frac{\pi}{2} \right) \right)$$

The actual pressure drop due to skin is estimated using the average flow rate of the last five data points ($q_{@ \Delta p_{Ds}}$), and the following equation:

$$\Delta p_s = q_{@ \Delta p_{Ds}} \times \frac{141.2B\mu(\Delta p_{Ds})}{kh}$$

Methodology

Data preparation

The horizontal axis is material balance time (pseudo-time for gas).

Pressure – time

For the Pressure - Time family of typecurves, the vertical axis plots are:

- Normalized pressure
- Semi-log pressure derivative
- Integral derivative
- Square root derivative

Normalized pressure

Oil wells

$$\frac{\Delta p}{q} = \frac{(p_i - p_{wf})}{q}$$

Gas wells

$$\frac{\Delta p_p}{q} = \frac{(p_i - p_{pwf})}{q}$$

Raw data derivative

Oil wells

$$DER = t_c \frac{\partial \left(\frac{\Delta p}{q} \right)'}{\partial (t_c)}$$

Gas wells

$$DER = t_{ca} \frac{\partial \left(\frac{\Delta p_p}{q} \right)'}{\partial(t_{ca})}$$

Derivative

Oil wells

$$t_c \frac{\partial \left(\frac{1}{t_c} \int \left(\frac{\Delta p}{q} \right)' dt \right)}{\partial(t_c)}$$

Gas wells

$$t_{ca} \frac{\partial \left(\frac{1}{t_{ca}} \int \left(\frac{\Delta p_p}{q} \right)' dt \right)}{\partial(t_{ca})}$$

Square-root pressure derivative

Oil wells

$$2\sqrt{t_c} \frac{\partial \left(\frac{\Delta p}{q} \right)'}{\partial(t_c)}$$

Gas wells

$$2\sqrt{t_{ca}} \frac{\partial \left(\frac{\Delta p_p}{q} \right)'}{\partial(t_{ca})}$$

Calculation of parameters

Oil wells

Once a satisfactory match is achieved, the match point is defined as follows:

$$X_{Match} = \frac{t_c}{t_{Dxf}}$$

$$Y_{Match} = \frac{n_f \left(\frac{\Delta p}{q} \right)'}{(p_D)}$$

Using the dimensionless variable definitions:

$$p_D = \frac{\Delta p k h}{141.2 q B \mu}$$

$$t_{Dxf} = \frac{0.00633 k t}{\phi \mu c_t x_f^2}$$

along with the match point, the following variable can be calculated:

$$k = \frac{141.2 B \mu}{h(Y_{Match})}$$

$$x_f = \sqrt{\frac{0.00633 k}{\phi \mu c_t} (X_{Match})}$$

$$x_s = x_f \times \left(\frac{x_s}{x_f} \right)_{Typecurve}$$

$$L_e = x_s \times n_f$$

Gas wells

Once a satisfactory match is achieved, the match point is defined as follows:

$$X_{Match} = \frac{t_{ca}}{t_{Dxf}}$$

$$Y_{Match} = \frac{n_f \left(\frac{\Delta p_p}{q} \right)'}{p_D}$$

Using the dimensionless variable definitions:

$$p_D = \frac{\Delta p k h}{141.2 q B \mu}$$

$$t_{Dxf} = \frac{0.00633 k t}{\phi \mu c_t x_f^2}$$

along with the match point, the following variable can be calculated:

$$k = \frac{1.417 E 6 T}{h(Y_{Match})}$$

$$x_f = \sqrt{\frac{0.00633 k}{\phi \mu c_t} (X_{Match})}$$

$$x_s = x_f \times \left(\frac{x_s}{x_f} \right)_{Typecurve}$$

$$L_e = x_s \times n_f$$

Rate – time

For the Rate - Time family of typecurves, the vertical axis plots are:

- Normalized rate
- Semi-log pressure derivative
- Integral derivative
- Square root derivative

Normalized rate

Oil wells

$$\frac{q}{\Delta p} = \frac{q}{(p_i - p_{wf})}$$

Gas wells

$$\frac{q}{\Delta p_p} = \frac{q}{(p_{pi} - p_{pwf})}$$

Raw data derivative

Oil wells

$$DER = \frac{1}{t_c \frac{\partial \left(\frac{\Delta p}{q} \right)'}{\partial (t_c)}}$$

Gas wells

$$DER = \frac{1}{t_{ca} \frac{\partial \left(\frac{\Delta p_p}{q} \right)'}{\partial (t_{ca})}}$$

Derivative

Oil wells

$$\frac{1}{t_c \frac{\partial \left(\frac{1}{t_c} \int \left(\frac{\Delta p}{q} \right)' dt \right)}{\partial(t_c)}}$$

Gas wells

$$\frac{1}{t_{ca} \frac{\partial \left(\frac{1}{t_{ca}} \int \left(\frac{\Delta p_p}{q} \right)' dt \right)}{\partial(t_{ca})}}$$

Square-root pressure derivative

Oil wells

$$\frac{1}{2\sqrt{t_c} \frac{\partial \left(\frac{\Delta p}{q} \right)'}{\partial(t_c)}}$$

Gas wells

$$\frac{1}{2\sqrt{t_{ca}} \frac{\partial \left(\frac{\Delta p_p}{q} \right)'}{\partial(t_{ca})}}$$

Calculation of parameters

Oil wells

Once a satisfactory match is achieved, the match point is defined as follows:

$$X_{Match} = \frac{t_c}{t_{Dxf}}$$

$$Y_{Match} = \frac{\left(\frac{q}{\Delta p}\right)'}{(n_f q_D)}$$

Using the dimensionless variable definitions:

$$q_D = \frac{1}{p_D}$$

$$t_{Dxf} = \frac{0.00633kt}{\phi\mu c_t x_f^2}$$

along with the match point, the following variable can be calculated:

$$k = \frac{141.2B\mu}{h) \left(Y_{Match}\right)}$$

$$x_f = \sqrt{\frac{0.00633k}{\phi\mu c_t} \left(X_{Match}\right)}$$

$$x_s = x_f \times \left(\frac{x_s}{x_f}\right)_{Typecurve}$$

$$L_e = x_s \times n_f$$

Gas wells

Once a satisfactory match is achieved, the match point is defined as follows:

$$X_{Match} = \frac{t_{ca}}{t_{Dxf}}$$

$$Y_{Match} = \frac{\left(\frac{q}{\Delta p_p}\right)'}{n_f q_D}$$

Using the dimensionless variable definitions:

$$q_D = \frac{1}{p_D}$$

$$t_{Dxf} = \frac{0.00633kt}{\phi\mu c_t x_f^2}$$

along with the match point, the following variable can be calculated:

$$k = \frac{1.417E6T}{h} (Y_{Match})$$

$$x_f = \sqrt{\frac{0.00633k}{\phi\mu c_t} (X_{Match})}$$

$$x_s = x_f \times \left(\frac{x_s}{x_f} \right)_{Typecurve}$$

$$L_e = x_s \times n_f$$

Boundary-dominated flow


The compound linear typecurves described above were developed for an infinitely large reservoir. Most unconventional reservoirs will, however, experience boundary-dominated flow eventually. The time at which this happens will generally depend on well spacing.

Boundary-dominated flow will appear as a straight line with a unit slope on a log-log plot, and can be expressed by the following equation using the raw data derivative:

$$RawData\ DER = \left(2\pi \frac{x_f^2}{X_e Y_e} \right) t_{Dxf}$$

This boundary-dominated flow line is represented by a dotted line intersecting the compound linear flow curve, and will be displayed only when a valid area or reservoir length has been entered.

Figure 9

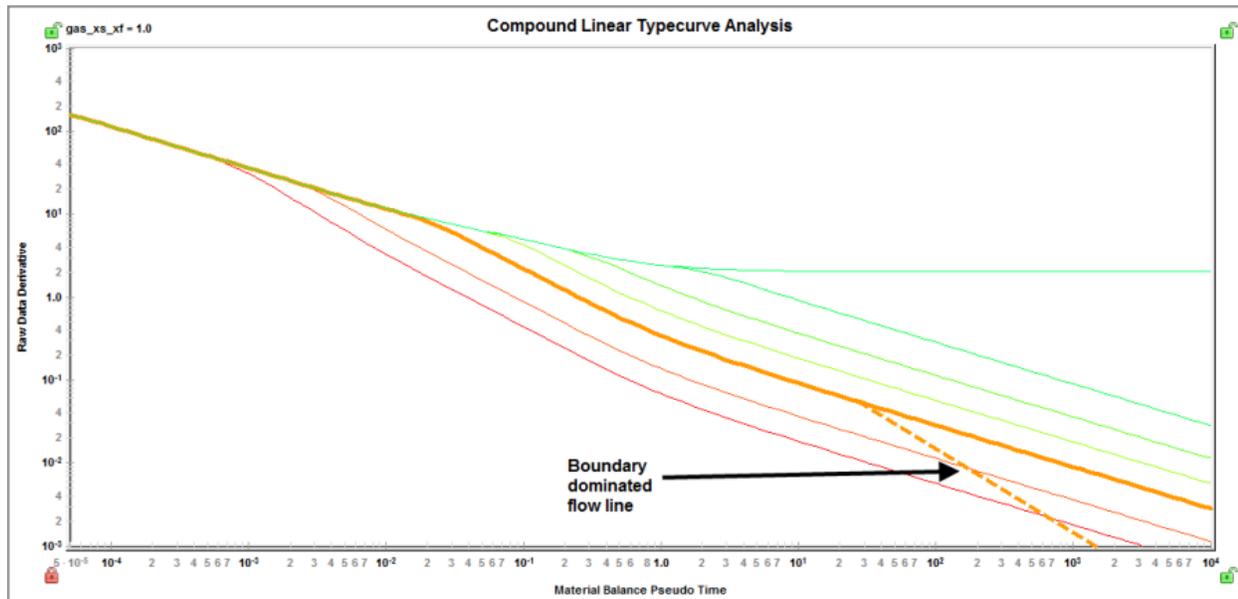

Fetkovich typecurve theory

Fetkovich recognized that decline curve analysis was only applicable during the depletion period (ie. when production is in boundary-dominated flow), and thus the early production life of a well (ie. when production is in transient flow) was not analyzable by the conventional decline curve methods.

Fetkovich used analytical flow equations to generate typecurves for transient flow, which he combined with the empirical decline curve equations originally documented by J.J. Arps. For more information, see [decline analysis theory](#). In doing so, Fetkovich presented a new set of typecurves that extended the Arps typecurves into the transient flow region.

Typecurve derivation

The Fetkovich typecurve graph consists of the following two sections which have been blended to be continuous and thereby encompass the entire production life, from transient to boundary-dominated flow:

- Early-time curves (left-side)
- Late-time curves (right-side)

The early-time portion is derived from transient flow equations which come from the field of well-test analysis, whereas the late-time portion consists simply of the Arps typecurve. The common link between the two sections is the exponential decline curve. It is the limiting behavior of all the transient curves when they reach boundary-dominated flow. It is also the first curve in the Arps family of hyperbolic decline curves ($b = 0$).

Early-time curves

The reservoir that Fetkovich considered in developing the transient flow equations was that of a closed circular reservoir with a well at the center, producing at a constant sandface flowing pressure. The mathematical model has the same standard assumptions as those used when describing reservoirs in the field of well-testing:

- Homogeneous reservoir
- Constant thickness
- Single-phase fluid of constant and small compressibility
- No-flow outer boundary
- Constant flowing pressure at the wellbore

The problem was originally solved by Van Everdingen and Hurst (1949).

The transient portion of the flow rate equations can be represented by numerical curve fit equations (Edwardson et al., 1961). These are given by:

$$q_D = \frac{26.7544 + 43.5537 t_D^{0.5} + 13.3818 t_D + 0.492949 t_D^{1.5}}{47.421 t_D^{0.5} + 35.5372 t_D + 2.60967 t_D^{1.5}}, t_D < 200$$

$$q_D = \frac{3.90086 + 2.02623 \cdot t_D \cdot (\ln t_D - 1)}{t_D \cdot (\ln t_D)^2}, t_D > 200$$


Note: These definitions of dimensionless time (t_D) and dimensionless rate (q_D) are based on well-test applications. For the definitions of these variables as they apply to decline curve analysis, see [late-time curves](#).

Fetkovich modified the definitions of dimensionless rate and time as follows:


$$q_{Dd} = q_D \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{1}{2} \right]$$

$$t_{Dd} = \frac{t_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_{wa}} \right)^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{1}{2} \right]}$$


The early-time behavior of the solution to the reservoir problem (transient flow) is the basis of transient well-test analysis, and represents the condition when the reservoir is infinite-acting; when the boundary has not been felt. Obviously transient flow is, by definition, independent of reservoir size; and this would be clearly evident if the flow rate were plotted as dimensionless rate vs. dimensionless time. As shown below, all reservoirs would follow the same curve at early-time and would only deviate at later times, when the reservoir boundary is felt. As the reservoir size increases, transient flow lasts longer, and the deviation to boundary-dominated flow occurs later.

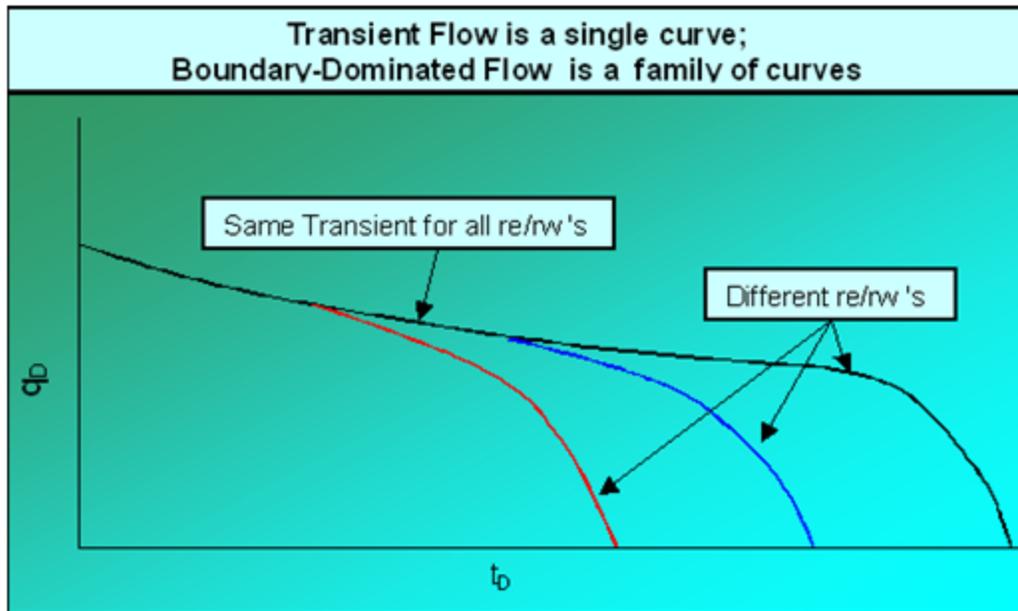

If the same curves were re-plotted on different axes, the shapes would vary significantly. A particularly useful format is to plot dimensionless decline time (t_{Dd}) on the x-axis, and dimensionless decline rate (q_{Dd}) on the y-axis (see the sub-section [late-time curves](#) for definitions of dimensionless decline rate and time). This merges all of the late-time branches into a single curve, because the variable dimensionless reservoir size (r_e/r_w) is now incorporated into the axes. As a result however, the transient data, instead of forming a single line, now becomes a family of lines, with dimensionless reservoir size as a variable as seen below: (Note that this figure represents the early-time portion of the collective Fetkovich typecurves.)

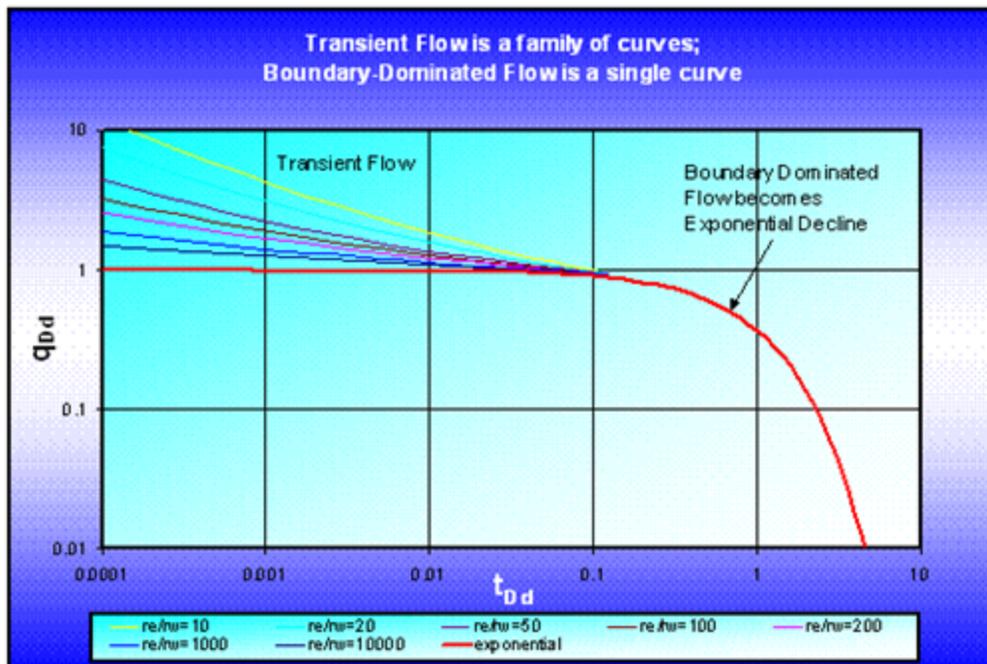

The above figure shows that for all sizes of reservoirs, when transient flow ends, the boundary-dominated flow can be represented by an exponential decline. A well producing at constant pressure will follow one of these curves. One reason for the success of Fetkovich type curves is that most oil wells are produced at wide-open conditions (ie. at the lowest possible constant pressure). In addition, the above early-time plot gives the impression that by matching the early-time data on one of these curves, it is possible to identify the dimensionless reservoir size. Hence by implication, if the wellbore radius were known, the reservoir size could be determined. However this is a false impression which occurs because of the axes used for plotting. Keep in mind at all times, that the early-time curves represent transient flow, and by definition, the reservoir size cannot be determined from this data alone. If the only data available were in the early-time regime, a unique match could not be obtained. What appears as a possible match on one dimensionless reservoir size curve will also match another dimensionless reservoir size curve at a different location (note that the curves extend to earlier times). An example of a non-unique match of transient data is shown below.

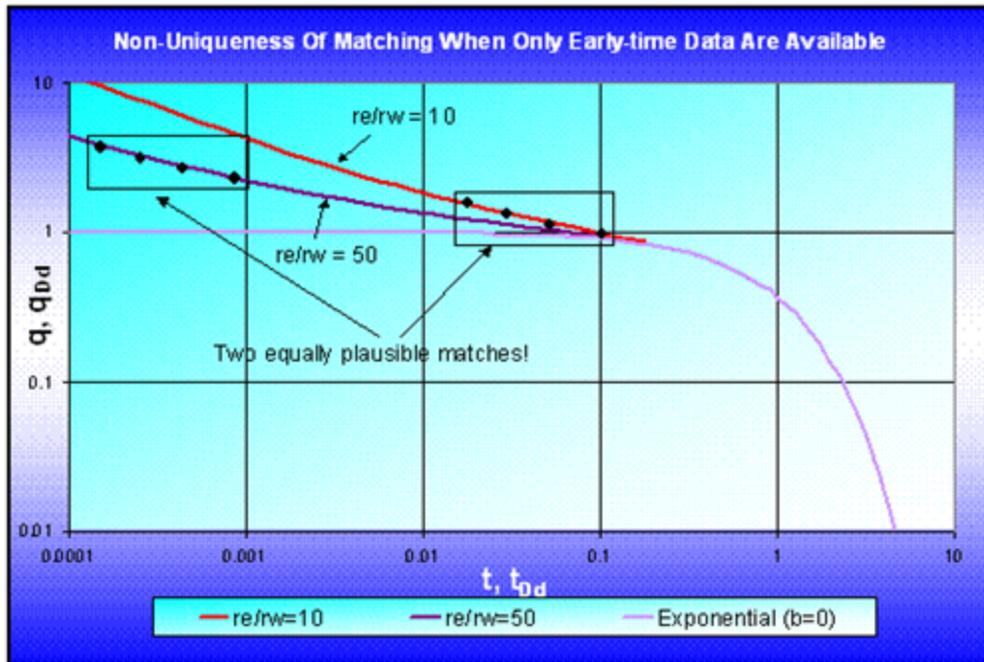

It is only when the production data extends into the boundary-dominated flow region that the different dimensionless reservoir size branches can be used to determine the actual reservoir size. Matching of the data to the typecurves becomes much more unique. Matching of the late-time data gives an indication of the reserves, which in turn is a direct function of the reservoir size. With the knowledge of reservoir size and the match of the transient data, the dimensionless reservoir size parameter can then be used to calculate the effective wellbore radius (r_{we}), from which the skin factor (s) can be obtained using the following equation:

$$r_{we} = r_w e^{-s}$$

Late-Time Curves

The boundary-dominated equations, which are used when dimensionless decline time exceeds 0.3, are obtained from the Arps decline equations. The dimensionless quantities used in the Arps dimensionless decline curve are defined differently from those used in the well-test literature. This section will relate the two sets of dimensionless definitions.

In the well-testing domain, dimensionless rate and dimensionless time are defined as follows:

$$q_D = \frac{141.2 q \mu B}{k h (p_i - p_{wf})}$$

and:

$$t_D = \frac{0.00633 k t}{\phi \mu c_t r_w^2}$$

Fetkovich used van Everdingen and Hurst's solution (1949) to show that during boundary-dominated flow (i.e. when the reservoir boundary has been felt and the reservoir is in depletion), the dimensionless flow rate can be expressed as an exponential function of dimensionless time and dimensionless reservoir size. This equation can be written in terms of the Arps dimensionless exponential decline equation, which is defined as follows:

$$q_{Dd} = e^{-t_{Dd}}$$

where:

$$q_{Dd} = q_D \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{1}{2} \right]$$

and:

$$t_{Dd} = \frac{t_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_{wa}} \right)^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{1}{2} \right]}$$

Using the definitions of dimensionless decline rate and dimensionless decline time in combination with the exponential decline equation, it can be shown that the exponential decline rate (a) is given by:

$$a = \frac{\frac{0.00633 k}{\phi \mu c_t r_w^2}}{\frac{1}{2} \left[\left(\frac{r_e}{r_{wa}} \right)^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{1}{2} \right]}$$

Thus, Fetkovich has demonstrated that Arps' empirical exponential decline curve has a solid theoretical basis, as the late-time solution to the "constant wellbore flowing pressure" case. From the above equations, the decline coefficient (a) is seen to be a function of rock and fluid properties as well as drainage size, and is independent of the wellbore flowing pressure (for slightly compressible fluids).

The constant q_i for use in the exponential decline equation at $t = 0$, ($q_{Dd} = 1$) can be calculated from:



$$q = q_i = \frac{k h(p_i - p_{wf})}{141.2 \mu B \left[\ln\left(\frac{r_e}{r_{wa}}\right) - \frac{1}{2} \right]}$$

If the hyperbolic decline equation:

$$q = \frac{q_i}{(1 + b a_i t)^{\frac{1}{b}}}$$

is presented in graphical form it can be seen to encompass the whole range of conditions from exponential decline ($b = 0$) to harmonic decline ($b = 1$), where each value of initial rate (q_i), initial nominal decline rate (a_i), and decline exponent (b) will produce its own unique curve. Fetkovich generalized these curves by making the equation dimensionless.

He defined a dimensionless decline rate as:

$$q_{Dd} = \frac{q(t)}{q_i}$$


and a dimensionless decline time as:

$$t_{Dd} = a_i t$$


The resulting dimensionless equation is:

$$q_{Dd} = \frac{1}{(1 + b t_{Dd})^{\frac{1}{b}}}$$

If this equation is plotted using dimensionless decline time and rate as the axes, a unique set of curves is obtained that represents all decline conditions for all wells. Notice that the obtained curves are independent of initial nominal decline rate and initial flow rate when plotted on these dimensionless coordinates.

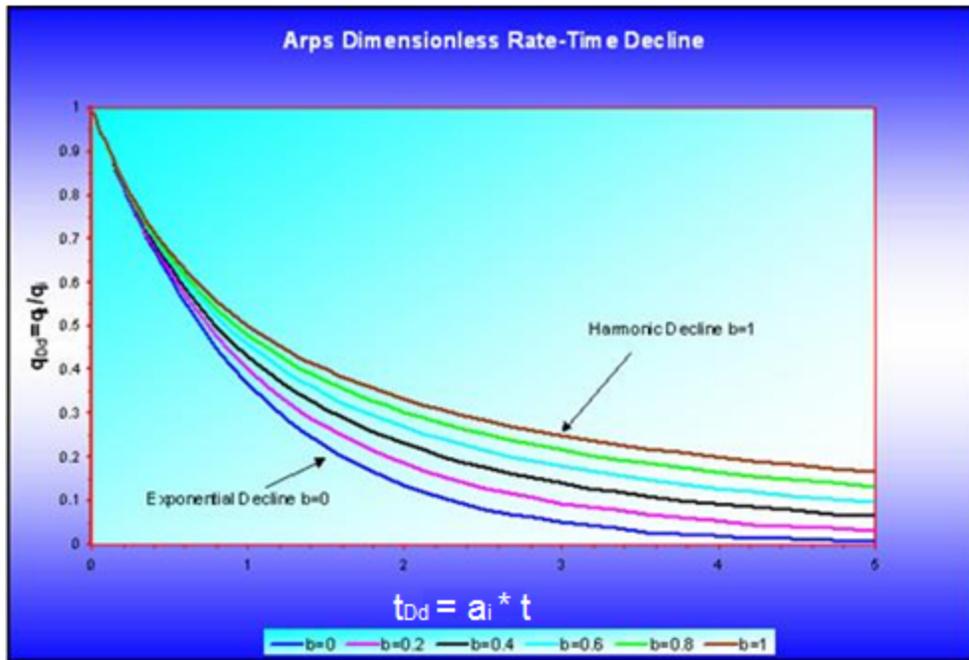


When these dimensionless curves are plotted on log-log scales as shown below, they are called type-curves, and can be used for graphical analysis of actual production data. (Note that these typecurves represent the late-time portion of the collective Fetkovich typecurves.)

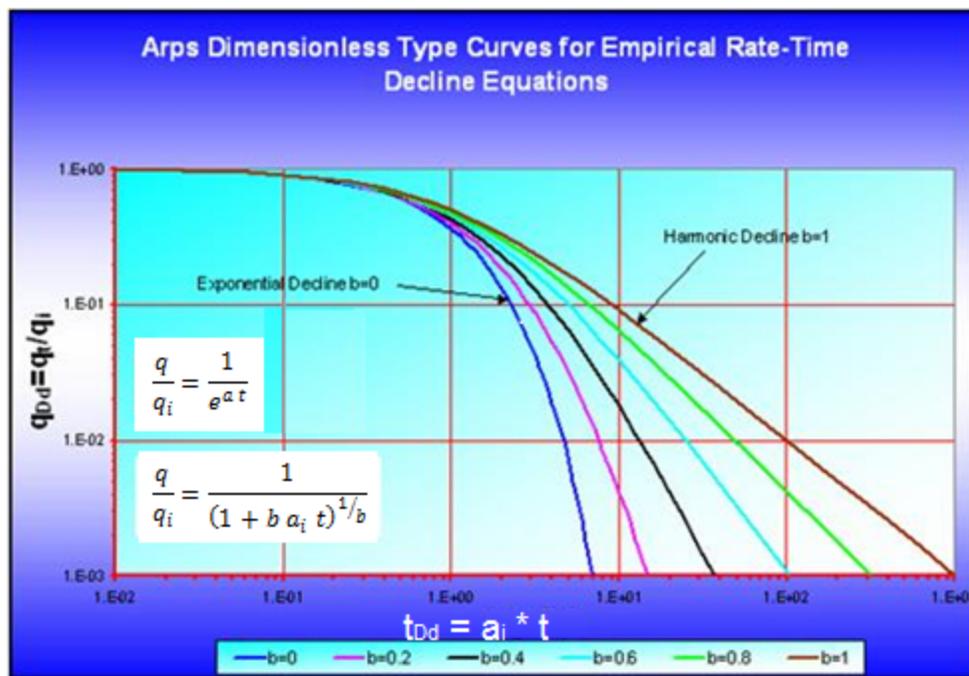

Typecurves can be used for graphical interpretation of a well's production decline. The production rate of the well is plotted on transparent graph paper of the same scale as the typecurve, and overlain on the typecurve (keeping the axes parallel). The data plot is moved over the typecurves until the best fitting curve is determined. This gives the value of the decline exponent. The values of initial flow rate and initial nominal decline rate are determined by selecting any point on the data plot and the corresponding point on the typecurve. The value of initial flow rate is obtained by dividing the "match point" values off the data plot and the typecurve, $q_i = (q_t / q_{Dd})_{match}$. The value of initial nominal decline rate is obtained by dividing the "match point" values off the typecurve and the data plot, $a_i = (t_{Dd} / t)_{match}$. The production forecast is obtained by tracing the matched curve onto the data plot and extrapolating.

Fetkovich typecurves – combined early and late-time portions

Combining the Fetkovich transient curves (early-time portion) with the Arps decline curves (late-time portion), and blending them where the two sets of curves meet results in the Fetkovich decline typecurves, shown below.

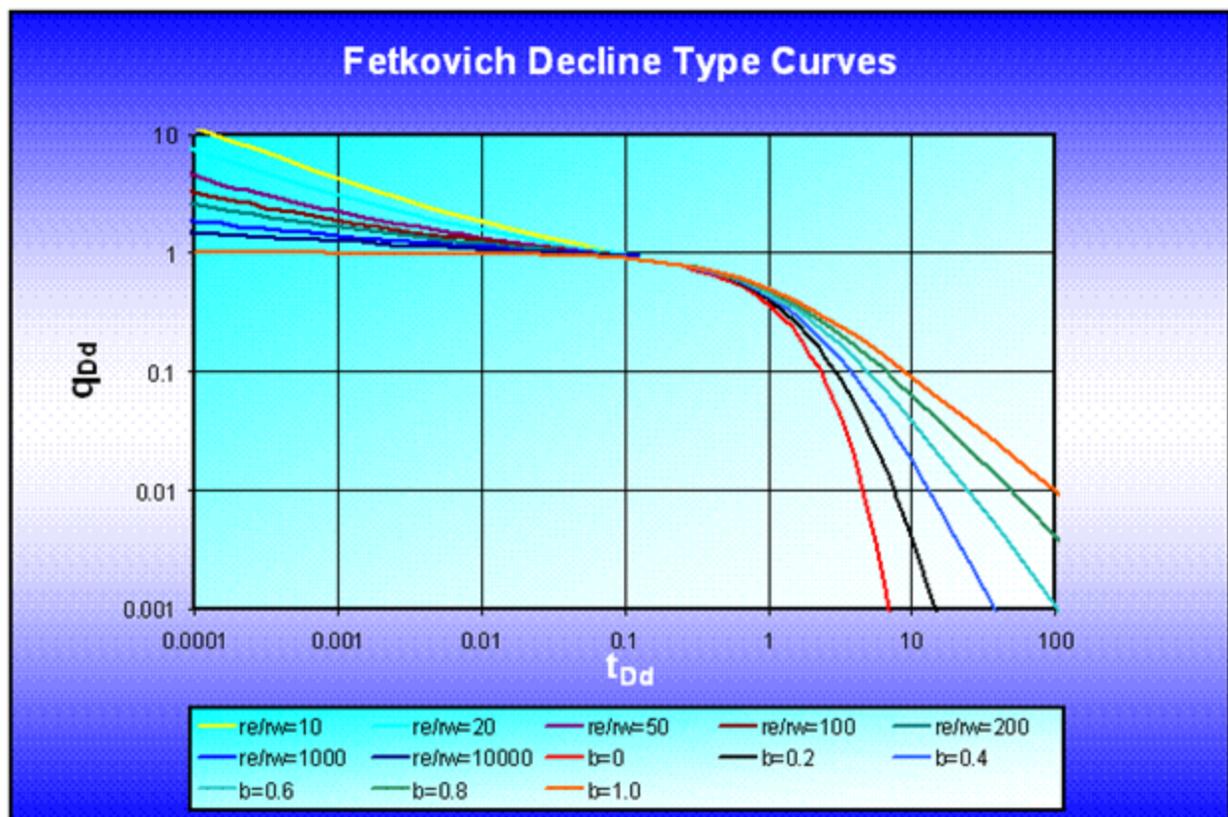

From the Fetkovich typecurve plot it is evident that the transition from transient to depletion behavior occurs at a dimensionless time of 0.1. Until the dimensionless time exceeds 0.1, it is impossible to know the type of decline that ultimately develops.

Fetkovich noted that sometimes the hyperbolic decline coefficient 'b', as determined using the Arps decline curves, was larger than 1 (it is normally expected to be between 0 and 1). The explanation that he postulated for this was that the data being analyzed was still in the transient regime, and had not reached the boundary-dominated regime. If data still in the transient flow regime is forced to match a hyperbolic decline, then b-values larger than 1 will result.

Typecurve calculations

Typecurve calculations are described below.

Rate – time typecurves

The actual rate-time data are plotted on a log-log scale of the same size as the typecurves. This plot is called the "data plot". Any convenient units can be used for rate or time because a change in units simply causes a uniform shift of the raw data on a logarithmic scale. It is recommended that daily operated-rates be plotted, and not the monthly rates; especially when transient data are analyzed. However, for very noisy and cyclic data, Fetkovich suggests 6-month averaging of the data. In addition, a log-log plot of the cumulative production data vs. time, if matched simultaneously with the rate data, should help in achieving a more unique match of the data with the typecurves.

The data plot is moved over the typecurve plot, while the axes of the two plots are kept parallel, until a good match is obtained. The rate and the cumulative data should both fit the same corresponding typecurve. Several different typecurves should be tried to obtain the best fit of all the data. The typecurve that best fits the data is selected and its " r_e/r_{wa} " and "b" values are noted.


To make a forecast, the selected typecurve is traced on to the data plot, and extrapolated beyond the last data points. The future rate is then read from the data plot off the traced typecurve.

Typecurve analysis is done by selecting a match point and reading its co-ordinates off the data plot (q and t)_{match}, and off the typecurve plot (q_{Dd} and t_{Dd})_{match}. At the same time the stem values (" r_e/r_{wa} " and "b") of the matching curve are noted.

From the right-hand-set of typecurves, the following decline curve parameters can be obtained:

$$q_i = \frac{q(\text{match})}{q_{Dd}(\text{match})}$$

$$a_i = \frac{t_{Dd}(match)}{t(match)}$$

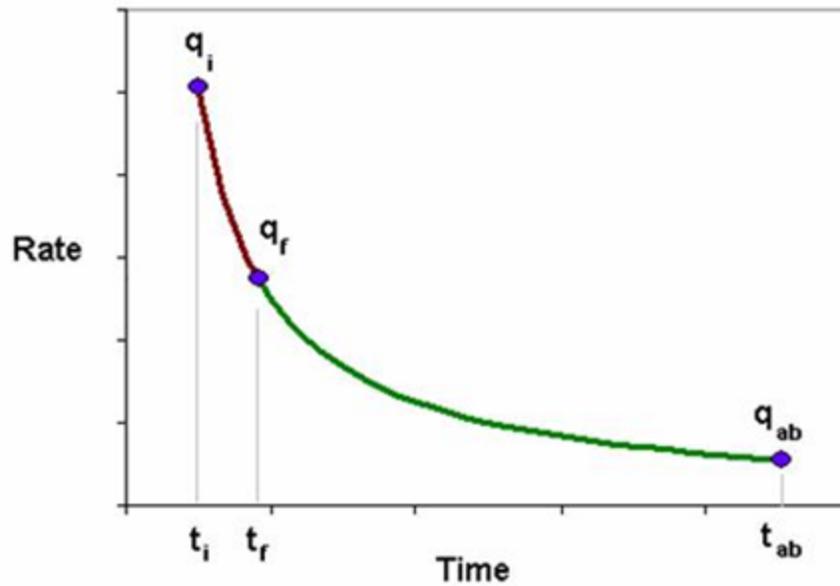

The subscript 'f' denotes conditions at the beginning of the forecast period.

With these, we can now calculate the expected ultimate recovery.

Exponential

$$EUR = Q_f + \frac{q_f - q_{ab}}{a}$$

$$q_f = q_i e^{(-a t_f)}$$

Hyperbolic

$$EUR = Q_f + \frac{q_i^b}{(1-b)a_i} \left(q_i^{1-b} (1 + b a_i t_f)^{\left(1-\frac{1}{b}\right)} - q_{ab}^{1-b} \right)$$



$$q_f = q_i (1 + b a_i t_f)^{-\frac{1}{b}} \quad (b \text{ not equal to } 0)$$

$$a_f = a_i (1 + b a_i t_f)^{-1}$$

Harmonic

$$EUR = Q_f + \frac{q_i}{a_i} \left(\frac{q_i}{q_{ab} (1 + a_i t_f)} \right)$$

$$q_f = q_i (1 + a_i t_f)^{-1}$$

$$a_f = a_i (1 + a_i t_f)^{-1}$$

Now, we can estimate fluid-in-place and drainage area.

Oil

$$N = \frac{EUR}{c_t (p_i - p_{wf})} \quad (\text{Mbbbls})$$

$$A = \frac{N B_o}{\phi h S_o (43560)} \quad (\text{Acres})$$

Gas

$$G = \frac{EUR * p_i Z_{wf}}{p_i Z_{wf} - p_{wf} Z_i} \quad (\text{bcf})$$

$$A = \frac{Z_i T p_{sc} G}{\phi h S_g p_i T_{sc} (43560)} \text{ (Acres)}$$

From the left-hand set of typecurves, the reservoir parameters can be obtained if initial reservoir pressure, wellbore flowing pressure, net pay, total compressibility, and wellbore radius are known.

$$\left(\frac{r_e}{r_{wa}}\right)_{match} = \text{value of typecurve stem (left-hand set of curves)}$$

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = q \left(\frac{141.2 B \mu}{k h (p_i - p_{wf})} \right) \left(\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right)$$

$$k = \left(\frac{q}{q_{Dd}} \right)_{match} \left(\frac{141.2 B \mu}{h (p_i - p_{wf})} \right) \left(\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right)$$

Permeability can be also obtained by rearranging the definition of dimensionless decline rate as follows:

$$q_{Dd} = q \left(\frac{1.417 * 10^6 T}{k h (p_{pi} - p_{pwf})} \right) \left(\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right)$$

$$k = \left(\frac{q}{q_{Dd}} \right)_{match} \left(\frac{1.417 * 10^6 T}{h (p_{pi} - p_{pwf})} \right) \left(\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right)$$

Solve for apparent wellbore radius from the definition of dimensionless decline time:

$$t_{Dd} = \frac{0.00633 k t}{\frac{1}{2} \phi \mu c_t r_{wa}^2 \left(\left(\frac{r_e}{r_{wa}} \right)_{match}^2 - 1 \right) \left(\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right)}$$

$$r_{wa} = \sqrt{\left(\frac{t}{t_{Dd}}\right)_{match} \frac{0.00633 k}{\phi \mu c_t \frac{1}{2} \left(\left(\frac{r_e}{r_{wa}}\right)^2 - 1 \right) \left(\ln \left(\frac{r_e}{r_{wa}}\right) - \frac{3}{4} \right)}}$$

Skin factor is calculated as follows:

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$

Cumulative – time typecurves

Production data is often quite noisy, and thus difficult to analyze. To reduce the effect of this noise, the cumulative production can be used. It is a smoother curve than production data and can make the analysis more reliable. Fraim and Lee developed cumulative typecurves of dimensionless cumulative decline production (Q_{Dd}) vs. dimensionless decline time (t_{Dd}); where the dimensionless cumulative decline production is defined as the ratio of cumulative production to the ultimate movable fluid.

Oil

$$Q_{Dd} = \frac{B N_p 1.787}{c_t h \phi (r_e^2 - r_w^2) (p_i - p_{wf})} = \frac{N_p}{N_{p,n}}$$

Gas


$$Q_{Dd} = \frac{637.8 p_{sc} T G_p}{T_{sc} h \phi \bar{\mu} c_t (r_e^2 - r_w^2) (\Psi_i - \Psi_{wf})} = \frac{G_p}{G_{p,n}} s$$

where (oil and gas):

$$Q_{Dd} = \int_0^{t_{Dd}} q_{Dd} dt_{Dd} = \frac{\int_0^{t_{Dd}} q_D dt_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_w}\right)^2 - 1 \right]} = \frac{Q_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_w}\right)^2 - 1 \right]}$$

$$t_{Dd} = \frac{t_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_w} \right)^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_w} \right) - \frac{3}{4} \right]}$$

From the Fetkovich typecurves, the rate can be integrated to determine the cumulative production, and plotted in typecurve format.

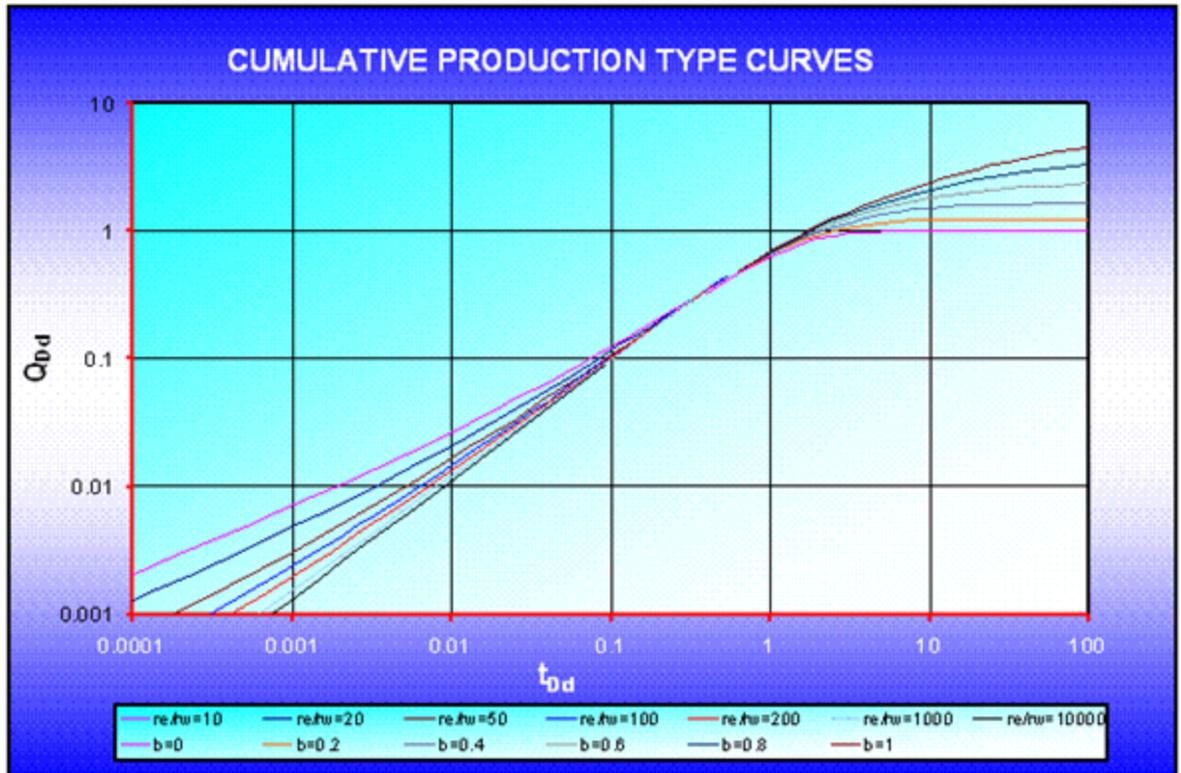

Cumulative graphs show that, at dimensionless decline time (t_{Dd}) = 100, harmonic decline leads to five times more cumulative production as compared to exponential decline.

The authors indicated that the dimensionless decline time-function used for the cumulative plots above has 3/4 in the denominator, whereas in the Fetkovich type curves, the dimensionless decline time-function has 1/2 in the denominator. The factor 3/4 appears in the inflow equation when the drawdown is referenced to the average reservoir pressure, and the factor 1/2 appears when the reference is the initial pressure at reservoir radius (r_e). Fetkovich tried using 1/2, 5/8, and 3/4; and found that using 1/2 reduced the discontinuity between the transient stems and the hyperbolic stems.

Typecurve equations

Typecurve equations are described below.

Cumulative typecurves

Fraim and Lee (1987), and Spivey et al. (1992) provide detailed equations for generating the transient and the boundary-dominated stems of the cumulative production typecurves. Transient flow rate and cumulative production are reported as functions of time by Edwardson et al. (1961). The cumulative values are given by:

$$Q_D = \frac{1.12838 t_D^{0.5} + 1.19328 t_D + 0.269872 t_D^{1.5} + 0.00855294 t_D^2}{1 + 0.616599 t_D^{0.5} + 0.0413008 t_D}, t_D < 200$$

$$Q_D = \frac{-4.29881 + 2.02566 t_D}{(\ln t_D)}, t_D > 200$$

The well test-based dimensionless cumulative production (Q_D) and dimensionless time (t_D) are converted to decline-based dimensionless cumulative production (Q_{Dd}) and decline-based dimensionless time (t_{Dd}) by:

$$Q_{Dd} = \int_0^{t_{Dd}} q_{Dd} t_{Dd} = \frac{\int_0^{t_D} q_D t_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_w} \right)^2 - 1 \right]} = \frac{Q_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_w} \right)^2 - 1 \right]}$$

$$t_{Dd} = \frac{t_D}{\frac{1}{2} \left[\left(\frac{r_e}{r_w} \right)^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_w} \right) - \frac{3}{4} \right]}$$

The transition from transient equations to boundary-dominated flow equations for cumulative production occurs at $t_{Dd} = 0.6$.

Boundary-dominated flow is obtained from the following equations:

Exponential

$$Q_{Dd} = 1 - e^{-t_{Dd}} = 1 - q_{Dd}$$

Hyperbolic

$$Q_{Dd} = \frac{1}{1-b} \left[1 - (1 + b t_{Dd})^{1-\frac{1}{b}} \right] = \frac{1 - q_{Dd}^{1-b}}{1-b}$$

Harmonic

$$Q_{Dd} = \ln(1 + t_{Dd}) = \ln\left(\frac{1}{q_{Dd}}\right)$$

Cumulative / derivative typecurves

Spivey et al. showed that typecurves of cumulative production can be combined with their (semi-log) derivative to give a set of typecurves that uses only cumulative production data and not rate. Because cumulative production tends to be much smoother than the original rate data, these plots tend to have less scatter than the traditional Fetkovich typecurves. The derivative typecurves are obtained from:

$$Derivative = \frac{d(Q)}{d(\ln t)}$$


This can be shown to be mathematically equivalent to:

$$Derivative = q * t$$

and, in dimensionless form:

$$Derivative = q_{Dd} * t_{Dd}$$

Simply multiplying the rate by time gives the semi-log derivative of cumulative production. The type-curve plot of cumulative production and its derivative are shown in the following plot.

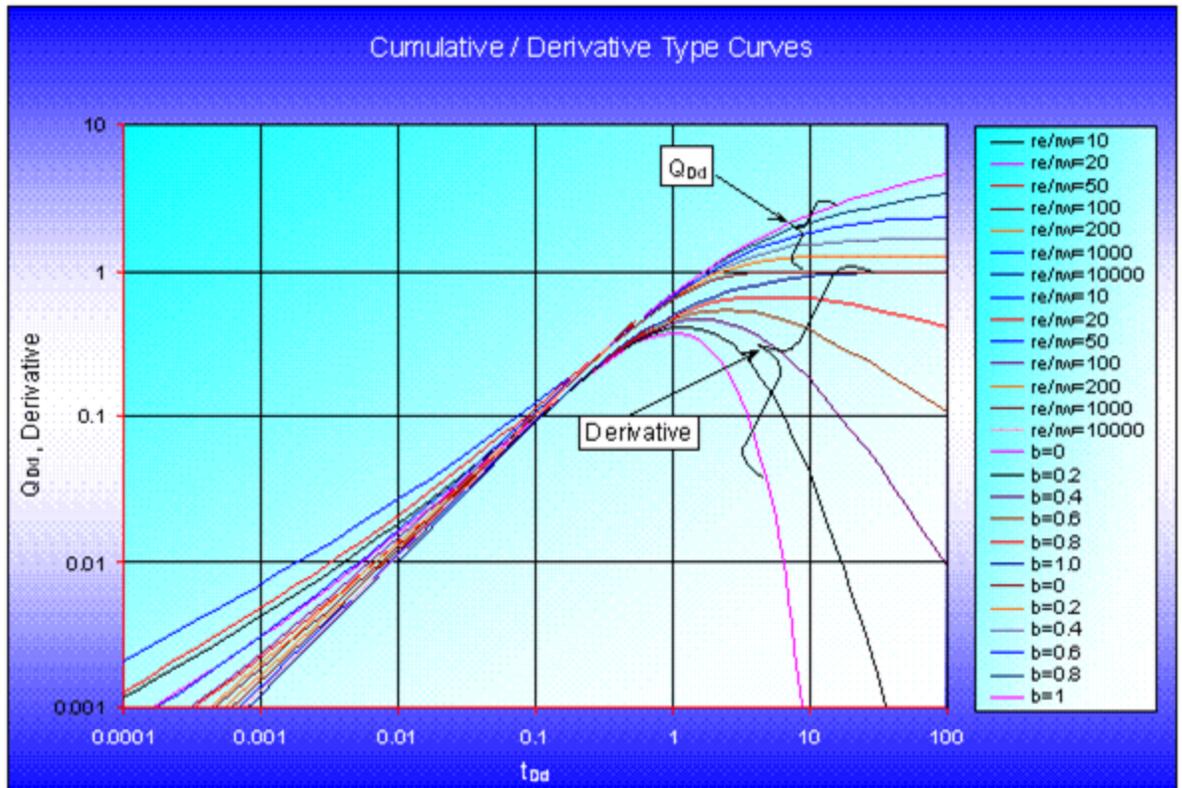

Rate-integral typecurves

Blasingame et al. (1989) introduced the concept of integral typecurves in the field of well testing. Spivey et al. (1992) extended the concept to decline curve analysis, and they state that as production data is usually very noisy, plotting a rate-integral or cumulative production should reduce the noise and make the data much more analyzable. The rate-integral is related to the cumulative production, and is defined as:


$$q_{integral} = \frac{Q}{t}$$

and, in dimensionless form:

$$q_{Dd,integral} = \frac{Q_{Dd}}{t_{Dd}}$$

The rate-integral is obtained by dividing the cumulative production by the time of flow, as seen in the equations above. The direct physical interpretation of the rate-integral is the average production rate,

from the beginning of production to the current time. The relationship between rate and rate-integral is shown in the following diagram:

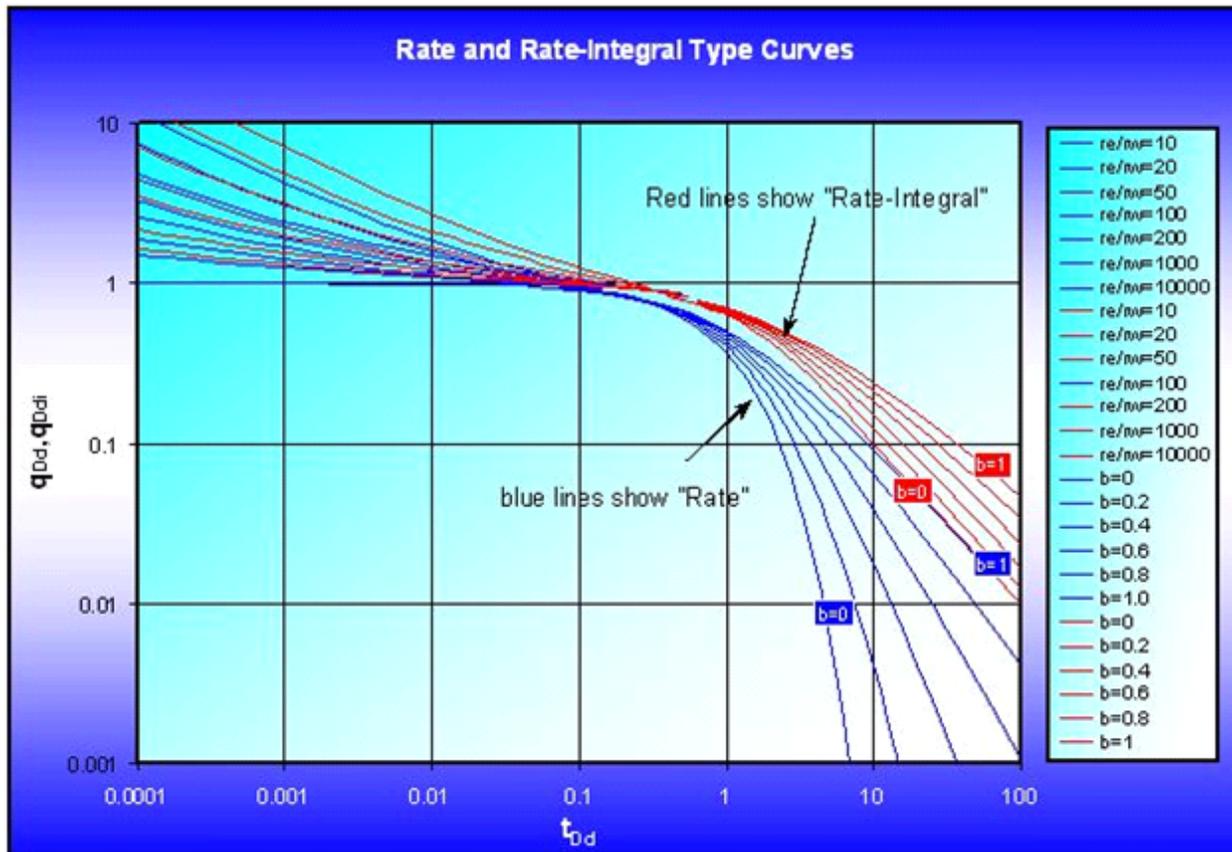

It is seen above that the rate and the rate-integral have very similar characteristics. The advantage of the rate-integral is that it tends to be smoother and less noisy than the rate data. This is consistent with the fact that the rate-integral is essentially a time-dependent average rate, and like all averaging, is less noisy than the original data.

Matching equations (variable flowing pressure)

Matching equations are described below.

Oil

The Fetkovich typecurve matching equations can be extended for use with production at variable flowing pressure. Instead of simply plotting production rate, normalized rate ($q / \Delta p$) is plotted.

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{141.2 q B \mu}{k h \Delta p} \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$

$$k = \frac{141.2 B \mu}{h} \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_{Dd}} \right]_{match} \left[\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right]$$

where $q / \Delta p$ and q_{Dd} are read off the raw data and typecurve graphs at a selected match point.

Solve for apparent wellbore radius from the definition of dimensionless decline time:

$$t_{Dd} = \frac{0.00633 k t}{\frac{1}{2} \phi \mu c_t r_{wa}^2 \left[\left(\frac{r_e}{r_{wa}} \right)^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]}$$

$$r_{wa} = \sqrt{\left(\frac{t}{t_{Dd}} \right)_{match} \frac{0.00633 k}{\frac{1}{2} \phi \mu c_t \left[\left(\frac{r_e}{r_{wa}} \right)_{match}^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right]}}$$

Finally, skin factor can be calculated as follows:

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$

For exponential, hyperbolic and harmonic, expected ultimate recovery is calculated as follows:

Exponential

$$EUR = Q_f + \frac{\left(\frac{q}{\Delta p} \right)_f (\Delta p)_{forecast} - q_{ab}}{a}$$

$$\left(\frac{q}{\Delta p}\right)_f = \left(\frac{q}{\Delta p}\right)_i e^{(-a_i t_f)}$$

$$\left(\frac{q}{\Delta p}\right)_i = \left[\frac{\left(\frac{q}{\Delta p}\right)}{q_{Dd}}\right]_{match}$$

$$a = \left(\frac{t_{Dd}}{t}\right)_{match}$$

It is assumed that the flowing pressure is constant during the forecast period, and this constant flowing pressure (p_{wf})_{forecast} should be entered for analysis.

Hyperbolic

$$EUR = Q_f + \frac{\left(\frac{q}{\Delta p}\right)_f^b (\Delta p)_{forecast}^b}{(1-b)a_f} \left[\left(\frac{q}{\Delta p}\right)_f^{1-b} (\Delta p)_{forecast}^{1-b} - q_{ab}^{1-b} \right]$$

$$\left(\frac{q}{\Delta p}\right)_f = \left(\frac{q}{\Delta p}\right)_i (1 + b a_i t_f)^{-\frac{1}{b}}$$

$$\left(\frac{q}{\Delta p}\right)_i = \left[\frac{\left(\frac{q}{\Delta p}\right)}{q_{Dd}}\right]_{match}$$

$$a_i = \left(\frac{t_{Dd}}{t}\right)_{match}$$

$$a_f = a_i (1 + b a_i t_f)^{-1}$$

Harmonic

$$EUR = Q_f + \frac{\left(\frac{q}{\Delta p}\right)_f (\Delta p)_{forecast}}{a_f} \ln \left[\frac{\left(\frac{q}{\Delta p}\right)_f (\Delta p)_{forecast}}{q_{ab}} \right]$$

$$\left(\frac{q}{\Delta p}\right)_f = \left(\frac{q}{\Delta p}\right)_i (1 + a_i t_f)^{-1}$$

$$\left(\frac{q}{\Delta p}\right)_i = \left[\frac{\left(\frac{q}{\Delta p}\right)}{q_{Dd}} \right]_{match}$$

$$a_i = \left(\frac{t_{Dd}}{t} \right)_{match}$$

$$a_f = a_i (1 + a_i t_f)^{-1}$$

Gas

Permeability is obtained by rearranging the definition of dimensionless decline rate:

$$q_{Dd} = \frac{1.417 * 10^6 T}{k h \Delta p_p} \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]$$

$$k = \frac{1.417 * 10^6 T}{h} \left[\frac{\left(\frac{q}{\Delta p_p}\right)}{q_{Dd}} \right]_{match} \left[\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right]$$

Where $q / \Delta p_p$ and q_{Dd} are read off the raw data and typecurve graphs at a selected match point.

Solve for apparent wellbore radius from the definition of dimensionless decline time:

$$t_{Dd} = \frac{0.00633 k t}{\frac{1}{2} \phi \mu c_t r_{wa}^2 \left[\left(\frac{r_e}{r_{wa}} \right)^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_{wa}} \right) - \frac{3}{4} \right]}$$

$$r_{wa} = \sqrt{\left(\frac{t}{t_{Dd}} \right)_{match} \frac{0.00633 k}{\frac{1}{2} \phi \mu c_t \left[\left(\frac{r_e}{r_{wa}} \right)_{match}^2 - 1 \right] \left[\ln \left(\frac{r_e}{r_{wa}} \right)_{match} - \frac{3}{4} \right]}}$$

Finally, skin factor can be calculated as follows:

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$

For exponential, hyperbolic and harmonic, expected ultimate recovery is calculated as follows:

Exponential

$$EUR = Q_f + \frac{\left(\frac{q}{\Delta p_p} \right)_f (\Delta p_p)_{forecast} - q_{ab}}{a_i}$$

$$\left(\frac{q}{\Delta p_p} \right)_f = \left(\frac{q}{\Delta p_p} \right)_i e^{(-a_i t_f)}$$

$$\left(\frac{q}{\Delta p} \right)_i = \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_{Dd}} \right]_{match}$$

$$a_i = \left(\frac{t_{Dd}}{t} \right)_{match}$$

It is assumed that the flowing pressure is constant during the forecast period, and this constant flowing pressure $(p_{wf})_{forecast}$ should be entered for analysis.

Hyperbolic

$$EUR = Q_f + \frac{\left(\frac{q}{\Delta p_p}\right)_f^b (\Delta p_p)_{forecast}^b}{(1-b)a_f} \left[\left(\frac{q}{\Delta p_p}\right)_f^{1-b} (\Delta p_p)_{forecast}^{1-b} - q_{ab}^{1-b} \right]$$

$$\left(\frac{q}{\Delta p_p}\right)_f = \left(\frac{q}{\Delta p_p}\right)_i (1 + b a_i t_f)^{-\frac{1}{b}}$$

$$\left(\frac{q}{\Delta p}\right)_i = \left[\frac{\left(\frac{q}{\Delta p}\right)}{q_{Dd}} \right]_{match}$$

$$a_i = \left(\frac{t_{Dd}}{t}\right)_{match}$$

$$a_f = a_i (1 + b a_i t_f)^{-1}$$

Harmonic

$$\left(\frac{q}{\Delta p}\right)_f = \left(\frac{q}{\Delta p}\right)_i (1 + a_i t_f)^{-1}$$

$$EUR = Q_f + \frac{\left(\frac{q}{\Delta p_p}\right)_f (\Delta p_p)_{forecast}}{a_f} \ln \left[\frac{\left(\frac{q}{\Delta p_p}\right)_f (\Delta p_p)_{forecast}}{q_{ab}} \right]$$



$$\left(\frac{q}{\Delta p_p}\right)_f = \left(\frac{q}{\Delta p_p}\right)_i (1 + a_i t_f)^{-1}$$

$$\left(\frac{q}{\Delta p}\right)_i = \left(\frac{\left(\frac{q}{\Delta p}\right)}{q_{Dd}}\right)_{match}$$

$$a_i = \left(\frac{t_{Dd}}{t}\right)_{match}$$

$$a_f = a_i (1 + a_i t_f)^{-1}$$

Matching equations (normalized data)

In this analysis, normalized rate and normalized cumulative production are used for analysis instead of rate and cumulative production. The same typecurves are used for analysis as for Fetkovich analysis but the equations to calculate reservoir parameters and reserves are slightly different.

Normalized rate and normalized cumulative production are defined as follows:

Normalized rate: oil

$$\frac{q}{\Delta p} = \frac{q}{p_i - p_{wf}}$$

Normalized rate: gas

$$\frac{q}{\Delta p_p} = \frac{q}{p_{pi} - p_{pwf}}$$

Normalized cumulative production: oil

$$Q_n = \int_0^t \frac{q}{\Delta p} dt$$

Normalized cumulative production: gas

$$Q_n = \int_0^t \frac{q}{\Delta p_p} dt$$

NPI typecurve theory

The normalized pressure integral (NPI) was initially developed by Blasingame et al. (1989). The objective of the method was to present a robust diagnostic method for drawdowns that did not suffer from noise and data scatter, as is typical of the standard well-test derivative. The solution involves using a pressure integral curve as the base curve for noisy drawdown analysis.

The dimensionless pressure integral is defined as follows:

$$p_{Di} = \frac{1}{t_{DA}} \int_0^{t_{DA}} p_D(t) dt$$

where:


$$p_D = \frac{k h \Delta p}{141.2 q B \mu}$$

Conceptually, the pressure integral is a "cumulative average flowing pressure drop" (see also [rate integral](#)). The distinguishing characteristic of the pressure integral is its smoothness. Thus, it is an ideal base curve for the standard pressure derivative if the raw data contains any degree of noise or scatter.

The dimensionless pressure integral derivative is defined as follows:

$$p_{Did} = t_{DA} \frac{dp_{Di}}{dt_{DA}} = p_D - p_{Di}$$

Below is a graph of the three dimensionless typecurves (that is, p_D , p_{Di} and p_{Did}), representing the solution for a vertical well in the center of a bounded reservoir (circle).

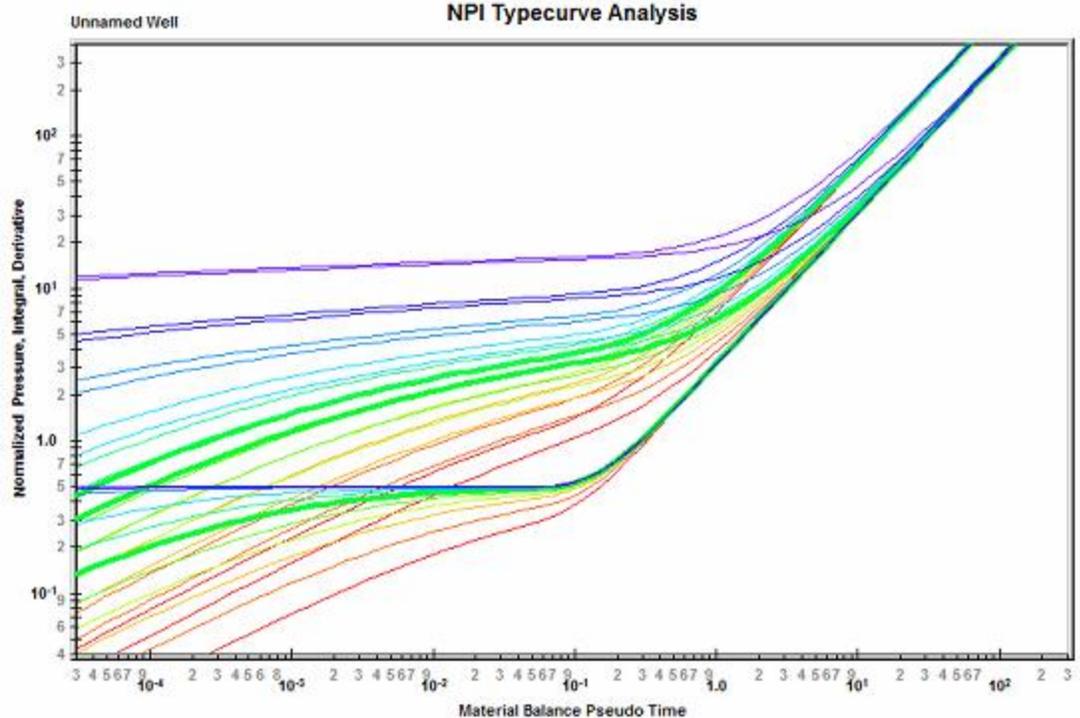

Methodology

Modifications in RTA

The original development of pressure integral typecurves was for pressure transient analysis. However, the theory can be extended to production data analysis (Rate Transient Analysis), using the following concepts:

- Equivalence of constant rate and pressure
- Material balance time

As a production data analysis method, the normalized pressure integral has the advantage of blending seamlessly with transient well-test interpretation. In fact, the diagnostic plot is equivalent to that of an extended drawdown test. The perspective is quite different from decline curves, and provides a useful benchmark for comparison of results.

Data preparation

In normalized pressure integral typecurve analysis, the following three rate functions can be plotted against material balance time.

Normalized pressure

Oil wells

$$\frac{\Delta p}{q}$$

Gas wells

$$\frac{\Delta p_p}{q}$$

Normalized pressure integral

The pressure integral is defined at any point in the producing life of a well, as the average normalized flowing pressure drop at which the well has produced until that moment in time. The normalized pressure integral is defined as follows:

Oil wells

$$\left(\frac{\Delta p}{q}\right)_i = \frac{1}{t_c} \int_0^{t_c} \frac{\Delta p}{q} dt_c$$

Gas wells

$$\left(\frac{\Delta p_p}{q}\right)_i = \frac{1}{t_{ca}} \int_0^{t_{ca}} \frac{\Delta p_p}{q} dt_{ca}$$

Pressure integral derivative

The pressure integral derivative is defined as the semi-logarithmic derivative of the pressure integral function, with respect to material balance time. It is defined as follows:

Oil wells

$$\left(\frac{\Delta p}{q}\right)_{id} = t_c \frac{d\left(\frac{\Delta p}{q}\right)_i}{dt_c}$$

Gas wells

$$\left(\frac{\Delta p_p}{q}\right)_{id} = \frac{t_{ca} d\left(\frac{\Delta p_p}{q}\right)_i}{dt_{ca}}$$

Analysis

The actual normalized pressure, pressure integral, and pressure integral derivative are plotted vs. material balance time data on a log-log scale of the same size as the typecurves. This plot is called the “data plot”. Any convenient units can be used for normalized rate or time because a change in units simply causes a uniform shift of the raw data on a logarithmic scale. It is recommended that daily operated-rates be plotted, and not the monthly rates, especially when transient data are analyzed. Any one of the curves can be used individually but often using more than one curve helps in achieving a more unique match of the data with the typecurves.

The data plot is moved over the typecurve plot, while the axes of the two plots are kept parallel, until a good match is obtained. The pressure, pressure integral, and pressure integral derivative data should all fit the same corresponding typecurve. Several different typecurves should be tried to obtain the best fit of all the data. The typecurve that best fits the data is selected and its r_e / r_{wa} (r_e / x_f for fractured case) value is noted.

Typecurve analysis is done by selecting a match point, and reading its co-ordinates off the data plot $(\Delta p / q \text{ and } t_{ca})_{\text{match}}$, and the typecurve plot $(p_D \text{ and } t_{DA})_{\text{match}}$. At the same time the stem value r_e / r_{wa} (r_e / x_f for fracture typecurves) of the matching curve is noted. To create a forecast, the selected typecurve is traced on to the data plot, and extrapolated. The future rate is read from the data plot, off the traced typecurve.

Given a curve match, the following reservoir parameters can be obtained if net pay, total compressibility, and wellbore radius are known: permeability, skin (or fracture half length, depending on which model is chosen), area, and original fluids-in-place.

Calculation of parameters

Radial typecurves

Oil wells

$$p_D = \frac{k h \Delta p}{141.2 q B \mu}$$

$$t_{DA} = \frac{0.00633 k t_c}{\pi \phi \mu c_t r_e^2}$$

$$k = \frac{141.2 B \mu}{h} \left(\frac{p_D}{\frac{\Delta p}{q}} \right)_{match}$$

$$r_e = \sqrt{\frac{0.00633 k}{\pi \phi \mu c_t} \left(\frac{t_c}{t_{DA}} \right)_{match}}$$

$$r_{wa} = \frac{r_e}{\left(\frac{r_e}{r_{wa}} \right)_{match}}$$

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$



$$N = \frac{0.00633}{c_t} \left(\frac{141.2 S_0}{5.615 * 10^3} \right) \left(\frac{p_D}{\frac{\Delta p}{q}} \right)_{match} \left(\frac{t_c}{t_{DA}} \right)_{match} \text{ (Mbbbls)}$$

Gas wells

$$p_D = \frac{k h \Delta p_p}{1.417 * 10^6 T q}$$

$$t_{DA} = \frac{0.00633 k t_{ca}}{\pi \phi \mu_i c_{ti} r_e^2}$$

$$k = \frac{1.417 * 10^6 T}{h} \left(\frac{p_D}{\frac{\Delta p_p}{q}} \right)_{match}$$

$$r_e = \sqrt{\frac{0.00633 k (t_{ca})}{\pi \phi \mu_i c_{ti} (t_{DA})_{match}}}$$

$$r_{wa} = \frac{r_e}{\left(\frac{r_e}{r_{wa}} \right)_{match}}$$

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$



$$G = \frac{(0.00633)(1.417 * 10^6) S_g p_i T_{sc}}{\mu_i c_{ti} Z_i p_{sc}} \left(\frac{t_{ca}}{t_{DA}} \right)_{match} \left(\frac{p_D}{\frac{\Delta p_p}{q}} \right)_{match} * 10^9 \text{ (Bscf)}$$


Fracture typecurves

The NPI fracture typecurves are the inverse of the Agarwal-Gardner rate-time fracture typecurves.


Transient typecurve theory

The transient typecurve analysis method provides an alternative perspective that is ideal for analysis of very short (early) production periods, and/or analysis of very low permeability reservoirs.

In the Blasingame, Agarwal-Gardner and Normalized Pressure Integral methods, the typecurves are scaled such that there is convergence onto a single boundary-dominated stem (unit slope). This is achieved through the use of a dimensionless time that is based on area (t_{DA} or t_{Dd}). One consequence of this type of scaling is that there are numerous transient stems. If a dimensionless time based on well radius (t_D) is chosen instead, there will be a single transient stem with a series of boundary-dominated curves. When viewing a single typecurve (e.g., $r_eD = 28$) there is no difference between these two scaling formats (see figure below). However, when viewing all the typecurves together, the transient presentation provides a more convenient base for analysis of transient data. This follows from the fact that selection of an appropriate transient stem is not required.

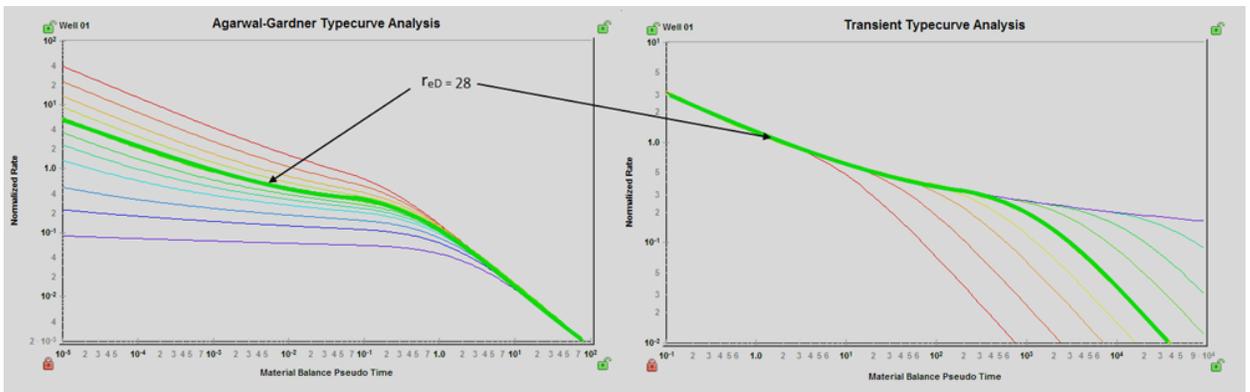

Consider a transient production data set (either very low permeability, or limited production life). A comparison of the typecurve match using Agarwal-Gardner Rate-Time analysis with that of the Transient format is shown below.

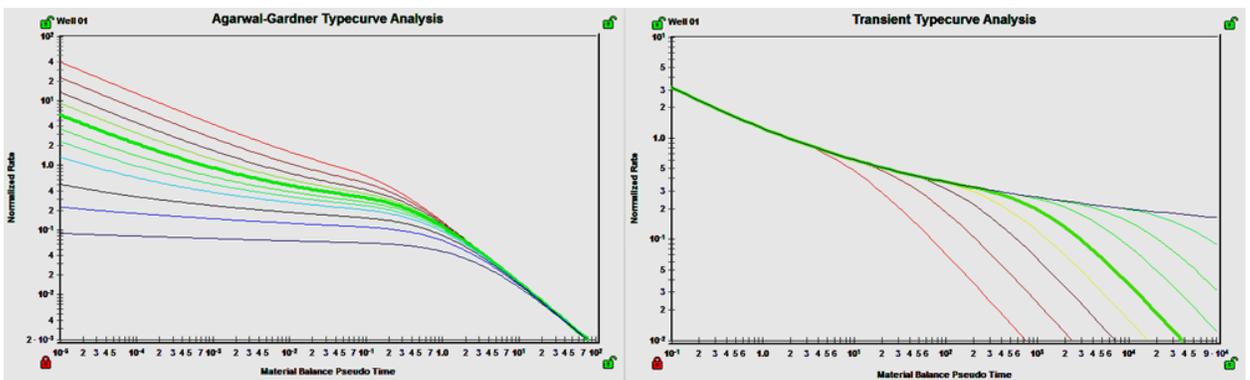

It is clear from this example that the transient presentation of the typecurves provides a more unique typecurve match. For the same reason that transient data works better with the transient format (q_D vs. t_D), it should be noted that boundary-dominated flow analysis is not advised using this method.

The accepted time-superposition function for Rate Transient Analysis is material balance time. Since material balance time is rigorous for boundary-dominated flow, it is a natural standard for evaluating variable rate production data. However, when dealing with transient data, it is clearly not the best option. The standard time-superposition for transient flow (pressure transient analysis) is radial-superposition time. When using the transient typecurves in RTA, both the radial and linear superposition time options are available.

Inverse pressure integral derivative

This derivative can make typecurve matching easier by exaggerating features in the data. In most cases, the inverse pressure derivative was found to be too sensitive to be useful. The inverse pressure integral derivative is less sensitive and so can be interpreted more handily, while still providing detail about the character of the data.

We start with dimensionless pressure:

$$q_D = \frac{1}{p_D}$$

Next we define the dimensionless pressure integral:

$$p_{Di} = \frac{1}{t_D} \int p_D dt_D$$

This is used to define the inverse pressure integral derivative:

$$\frac{1}{p_{Di d}} = \frac{1}{\left(\frac{dp_{Di}}{d \ln(t_D)} \right)}$$

This can also be written as:

$$\frac{1}{p_{Di d}} = \frac{1}{\left(t_{DA} \frac{dp_{DI}}{dt_D}\right)}$$

Data preparation

The horizontal axis is material balance time (pseudo-time for gas).

On the vertical axis, two variables are plotted:

- Normalized Rate vs. Material Balance Time
- Inverse of Semi-log Derivative vs. Material Balance Time

Normalized rate

Oil wells

$$\frac{q}{\Delta p} = \frac{q}{p_i - p_{wf}}$$

$$\frac{1}{DER} = \left[\frac{\frac{\partial \Delta p}{q}}{\partial \ln(t_c)} \right]$$

Gas Wells

$$\frac{q}{\Delta p_p} = \frac{q}{p_{pi} - p_{pwf}}$$

$$\frac{1}{DER} = \frac{1}{\left[\frac{\partial \frac{\Delta p_p}{q}}{\partial \ln(t_{ca})} \right]}$$

Note: In the modified (RTA) plot, the $1 / DER_i$ (inverse pressure integral derivative) is also included.

Analysis

The normalized rate and inverse semi-log derivative data are plotted against material balance time on a log-log scale of the same size as the typecurves. This plot is called the "data plot". Any convenient units can be used for normalized rate or time because a change in units simply causes a uniform shift of the raw data on a logarithmic scale. It is recommended that daily operated-rates be plotted, and not the monthly rates; especially when transient data are analyzed.

The data plot is moved over the typecurve plot, while the axes of the two plots are kept parallel, until a good match is obtained. Several different typecurves should be tried to obtain the best fit of all the data. The typecurve that best fits the data is selected and its " r_e / r_{wa} " (r_e / x_f for fractured case) value is noted.

Typecurve analysis is done by selecting a match point, and reading its coordinates off the data plot ($q / \Delta p$ and t_c)_{match}, and off the typecurve plot (q_D and t_D)_{match}. At the same time the stem value " r_e / r_{wa} " (r_e / x_f for fracture typecurves) of the matching curve is noted.

To create a forecast, the selected typecurve is traced on to the data plot, and extrapolated. The future rate is read from the data plot, off the traced typecurve.

Calculation of parameters: radial typecurves

Oil wells

Permeability is obtained by rearranging the definition of dimensionless rate:

$$q_D = \frac{141.2 q B \mu}{k h (p_i - p_{wf})}$$

$$k = \frac{141.2 B \mu \left(\frac{q/\Delta p}{q_D} \right)_{match}}{h}$$

$$t_D = \frac{0.00633 k t_c}{\phi \mu c_t r_{wa}^2}$$

Solve for apparent wellbore radius from the definitions of dimensionless time and permeability:

$$r_{wa} = \sqrt{\frac{0.00633 \left(\frac{141.2 B}{h} \right) \left(\frac{q/\Delta p}{q_D} \right)_{match} \left(\frac{t_c}{t_D} \right)_{match}}{\phi c_t}}$$

Skin factor is calculated as follows:

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$

Volume and area parameters are calculated as follows:

$$N = \pi \frac{S_o}{c_t} \left(\frac{0.00633 * 141.2 B}{h} \right) \left(\frac{q/\Delta p}{q_D} \right)_{match} \left(\frac{t_c}{t_D} \right)_{match} \left(\frac{(r_{eD})^2}{5.615 * 10^3} \right) \text{ (Mbbls)}$$

$$A = \frac{5.615 * 10^3 N B_o}{\phi S_o h} \frac{1}{43560} \text{ (Acres)}$$

Gas wells

Permeability is obtained by rearranging the definition of dimensionless rate:



$$q_D = \frac{1.417 * 10^6 T_R}{k h} \frac{q}{\Delta p_p}$$

$$k = \frac{1.417 * 10^6 T_R}{h} \left(\frac{q/\Delta p_p}{q_D} \right)_{match}$$

$$t_D = \frac{0.00633 k t_{ca}}{\phi \mu_i c_{ti} r_{wa}^2}$$

Solve for apparent wellbore radius from the definitions of dimensionless time and permeability:

$$r_{wa} = \sqrt{\frac{0.00633 \left(\frac{1.417 * 10^6 T_R}{h} \right) \left(\frac{t_{ca}}{t_D} \right)_{match} \left(\frac{q/\Delta p_p}{q_D} \right)_{match}}$$

Skin factor is calculated as follows:

$$s = \ln \left(\frac{r_w}{r_{wa}} \right)$$


Volume and area parameters are calculated as follows:

$$G = \frac{\pi (0.00633) (1.417 * 10^6) S_g p_i T_{sc}}{\mu_i c_{ti} Z_i p_{sc}} \left(\frac{t_{ca}}{t_D} \right)_{match} \left(\frac{q/\Delta p_p}{q_D} \right)_{match} (r_{eD})_{match}^2 * 10^{-9} \text{ (Bcf)}$$

$$A = \frac{G Z_i T p_{sc}}{\phi h S_g p_i T_{sc}} \frac{1}{43560} \text{ (Acres)}$$

Calculation of parameters: finite conductivity fracture typecurves

The finite conductivity fracture typecurves are based on a square-shaped reservoir with a hydraulic fracture in the center. They are plotted using dimensionless time format, and are therefore categorized as transient format curves. The transient stems represent three different dimensionless fracture conductivity (FCD) values (0.5, 5, and 500). The boundary dominated stems diverge at each of four (1, 2, 5, 25) dimensionless reservoir length (x_{eD}) values.

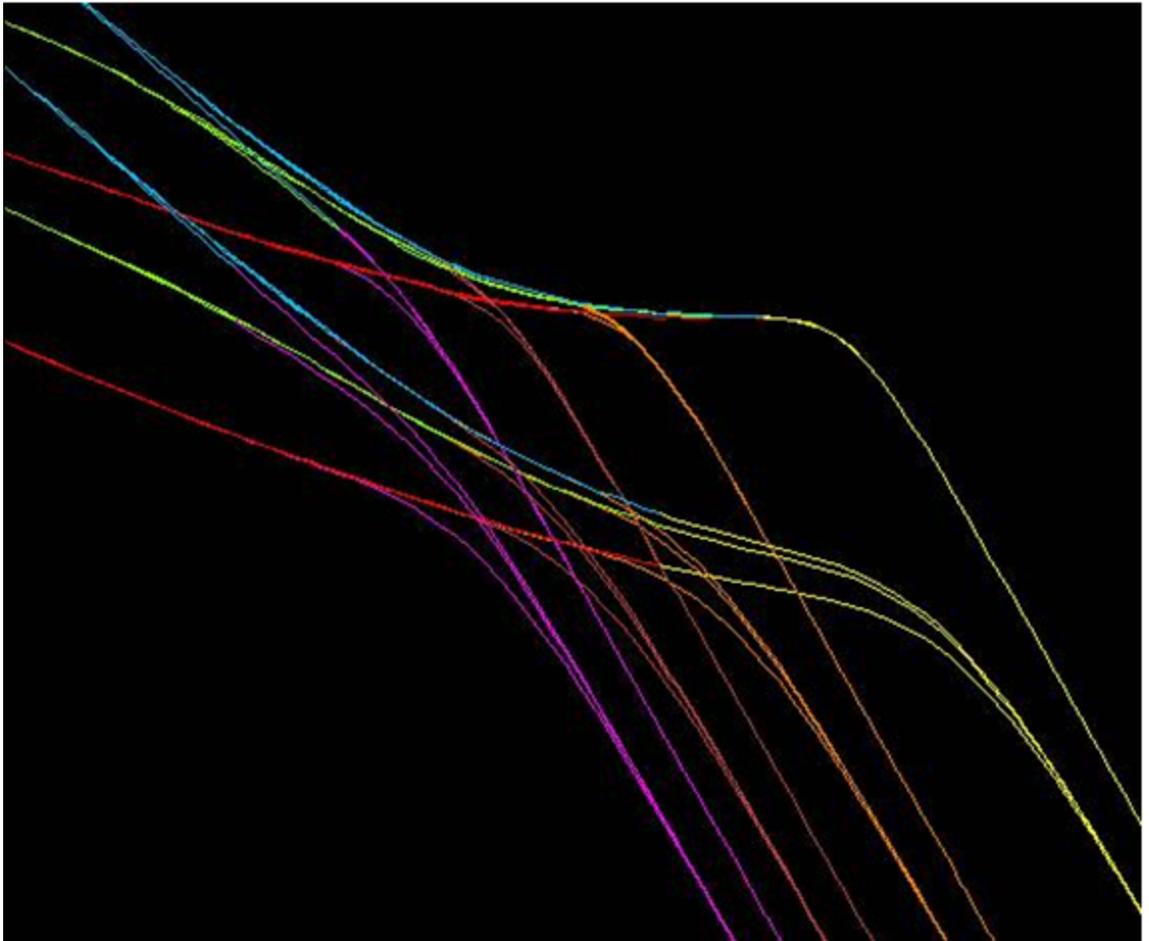

Definitions

Dimensionless fracture conductivity:

$$F_{CD} = \frac{k_f w}{k x_f}$$

Dimensionless reservoir length / width:

$$X_{eD} = \frac{X_e}{x_f}$$

Where $2X_e$ = primary reservoir dimension

Oil wells

Permeability is obtained by rearranging the definition of dimensionless rate:

$$q_D = \frac{141.2 q B \mu}{k h (p_i - p_{wf})}$$

$$k = \frac{141.2 B \mu}{h} \left(\frac{q/\Delta p}{q_D} \right)_{match}$$

$$t_D = \frac{0.00633 k t_c}{\phi \mu c_t x_f^2}$$

Solve for fracture half-length from the definitions of dimensionless time and permeability:

$$x_f = \sqrt{\frac{0.00633 (141.2 B)}{\phi c_t} \left(\frac{q/\Delta p}{q_D} \right)_{match} \left(\frac{t_c}{t_D} \right)_{match}}$$

Volume and area parameters are calculated as follows:



$$N = \frac{S_o}{c_t} \left(\frac{0.00633 * 141.2 B}{h} \right) \left(\frac{q / \Delta p}{q_D} \right)_{match} \left(\frac{t_c}{t_D} \right)_{match} \left(\frac{(2 X_{eD})^2}{5.615 * 10^3} \right) \text{ (Mbbbls)}$$

$$A = \frac{5.615 * 10^3 N B_o}{\phi S_o h} \frac{1}{43560} \text{ (Acres)}$$

Gas wells

Permeability is obtained by rearranging the definition of dimensionless rate:

$$q_D = \frac{1.417 * 10^6 T_R}{k h} \frac{q}{\Delta p_p}$$

$$k = \frac{1.417 * 10^6 T_R}{h} \left(\frac{q / \Delta p_p}{q_D} \right)_{match}$$

$$t_D = \frac{0.00633 k t_{ca}}{\phi \mu_i c_{ti} x_f^2}$$

Solve for fracture half-length from the definitions of dimensionless time and permeability:

$$x_f = \sqrt{\frac{0.00633}{\phi \mu_i c_{ti}} \left(\frac{1.417 * 10^6 T_R}{h} \right) \left(\frac{t_{ca}}{t_D} \right)_{match} \left(\frac{q / \Delta p_p}{q_D} \right)_{match}}$$



Volume and area parameters are calculated as follows:


$$G = \frac{(0.00633)(1.417 * 10^6) S_g p_i T_{sc}}{\mu_i c_{ti} Z_i p_{sc}} \left(\frac{t_{ca}}{t_D} \right)_{match} \left(\frac{q/\Delta p_p}{q_D} \right)_{match} (2 X_{eD})_{match}^2 * 10^{-9} \text{ (Bcf)}$$

$$A = \frac{G Z_i T p_{sc}}{\phi h S_g p_i T_{sc}} \frac{1}{43560} \text{ (Acres)}$$

Wattenbarger typecurve theory

Extended periods of linear flow have been observed in many gas wells. These wells are usually in very tight gas reservoirs with hydraulic fractures designed to extend to the drainage boundary of the well. Wattenbarger et al. (1998) presented new typecurves to analyze the production data of these gas wells.

They assumed a hydraulically fractured well in the center of a rectangular reservoir. The fracture is assumed to be extended to the boundaries of the reservoir.

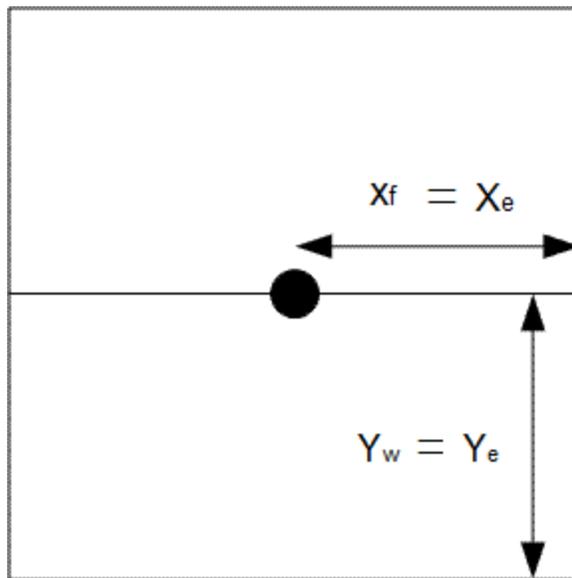

They showed that the solution in case of constant rate production and closed reservoir is:


$$p_D = \frac{\pi}{2} \left(\frac{Y_e}{X_f} \right) \left[\frac{1}{3} + \left(\frac{X_f}{Y_e} \right)^2 t_{Dxf} \right] - \frac{2}{\pi^2} \left(\frac{Y_e}{X_f} \right) \sum_{n=1}^{\infty} \frac{1}{n^2} e \left[-n^2 \pi^2 \left(\frac{X_f}{Y_e} \right)^2 t_{Dxf} \right]$$

Where dimensionless variables are defined as:

$$p_D = \frac{k h (p_i - p_{wf})}{141.2 q B \mu}$$

$$t_{Dxf} = \frac{0.00633 k t}{\phi \mu c_t x_f^2}$$

The typecurves based on this equation are shown below. Wattenbarger et al. (1998) showed that there are different typecurves for different values of x_f / Y_e .

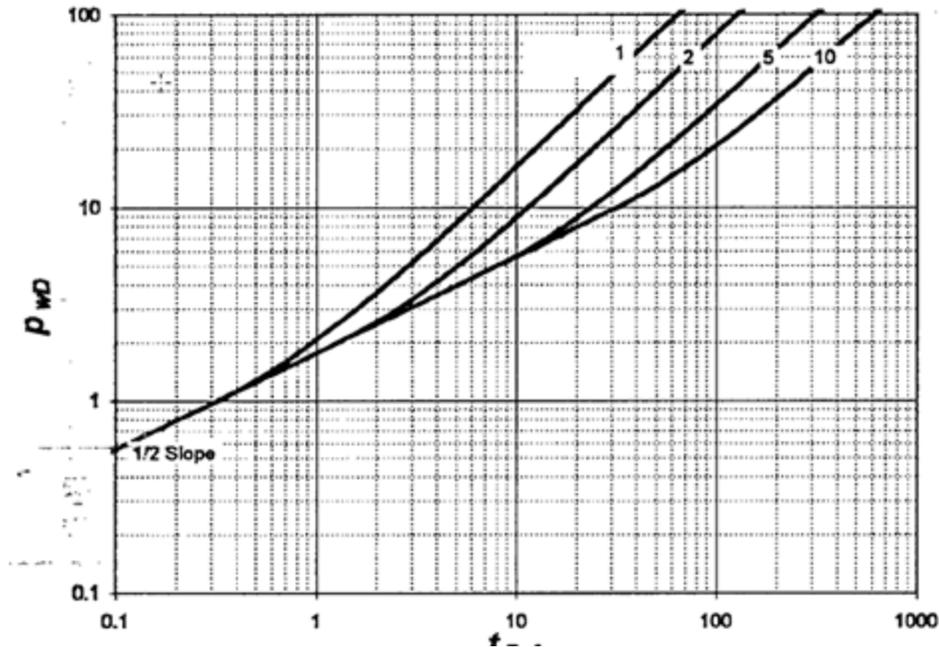

The solution for linear flow can be rewritten as:

$$\left(\frac{x_f}{Y_e}\right) p_D = \frac{\pi}{2} \left[\frac{1}{3} + t_{Dye} \right] - \frac{2}{\pi^2} \sum_{n=1}^{\infty} \frac{1}{n^2} e \left[-n^2 \pi^2 t_{Dye} \right]$$

where:

$$t_{Dye} = \frac{0.00633 k t}{\phi \mu c_t Y_e^2} = \left(\frac{x_f}{Y_e}\right)^2 t_{Dxf}$$

This equation shows that plotting $[(x_f / Y_e) * p_D]$ against t_{Dye} gives only one curve for any rectangular geometry, rather than families of typecurves with different values of x_f / Y_e .

In RTA, this analysis has been modified as follows:

- $[(Y_e / x'_e) * q_D]$ is plotted against t_{Dye} instead of $[(x_f / Y_e) * p_D]$.
- The typecurves are generated for cases where the well is not in the center of the reservoir (different values for Y_e / Y_w).
- In addition to dimensionless rate, the inverse of semi-log pressure derivative curve is included.

Methodology

Data preparation

The horizontal axis is material balance time (pseudo-time for gas).

On the vertical axis, two variables are plotted:

- Normalized rate
- Inverse of semi-log pressure derivative

Normalized rate

Oil wells

$$\frac{q}{\Delta p} = \frac{q}{p_i - p_{wf}}$$

Gas wells

$$\frac{q}{\Delta p_p} = \frac{q}{p_{pi} - p_{pwf}}$$

Inverse of semi-log pressure derivative

Oil wells

$$\frac{1}{DER} = \left[\frac{\frac{\partial \frac{\Delta p}{q}}{\partial \ln(t_c)}}{1} \right]$$

Gas wells

$$\frac{1}{DER} = \left[\frac{\frac{\partial \frac{\Delta p_p}{q}}{\partial \ln(t_{ca})}}{1} \right]$$

Analysis

The normalized rate and inverse semi-log pressure derivative are plotted against the material balance time on a log-log scale of the same size as the typecurves. This plot is called the “data plot”. Any convenient units can be used for normalized rate or time because a change in units simply caused a uniform shift of the raw data on a logarithmic scale. It is recommended that daily operated-rates be plotted, and not the monthly rates; especially when transient data are analyzed.

The data plot is moved over the typecurve plot, while the axes of the two plots are kept parallel until a good match is obtained. Several different typecurves should be tried to obtain the best fit of all the data. The typecurve that best fits the data is selected and Y_e / Y_w value is noted.

Calculation of parameters

Oil wells

Using the definition of $[q_D (Y_e / X_e)]$:

$$q_D \frac{Y_e}{X_e} = \frac{141.2 B \mu q}{k h} \frac{Y_e}{\Delta p X_e}$$

$k X_e / Y_e$ is calculated as follows:

$$\frac{k X_e}{Y_e} = \frac{141.2 B \mu}{h} \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match}$$

where $(q / \Delta p)$ and $[q_D (Y_e / X_e)]$, are read off from each of the raw data and typecurve graphs at a selected match point.

From the definition of dimensionless time based on reservoir width (t_{Dye}):

$$t_{Dye} = \frac{0.00633 k t_c}{\phi \mu c_t Y_e^2}$$

(Y_e / \sqrt{k}) is calculated as follows:

$$\frac{Y_e}{\sqrt{k}} = \sqrt{\frac{0.00633}{\phi \mu c_t} \left(\frac{t_c}{t_{Dye}} \right)_{match}}$$

Substituting the equation for $[(k X_e / Y_e)]$ into the above, we get:

$$\sqrt{k} X_e = \sqrt{\frac{0.00633}{\phi \mu c_t}} * \frac{141.2 B \mu}{h} * \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match} * \sqrt{\left(\frac{t_c}{t_{Dye}} \right)_{match}}$$

Additional reservoir parameters are now calculated:



$$A = 4 X_e Y_e = 4 * (\sqrt{k} X_e) \frac{Y_e}{\sqrt{k}} \frac{1}{43560}$$

$$= \frac{4 * 0.00633}{\phi c_t} * \frac{141.2 B}{h} * \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match} * \left(\frac{t_c}{t_{Dye}} \right)_{match} * \frac{1}{43560}$$

(Acres)

$$N = \frac{4 X_e Y_e h \phi S_{oi}}{B} * \frac{1}{5.615 * 10^3}$$

$$= \frac{4 * 0.00633 * 141.2}{c_t} * \left[\frac{\left(\frac{q}{\Delta p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match} * \left(\frac{t_c}{t_{Dye}} \right)_{match} * \frac{S_{oi}}{5.615 * 10^3}$$

(Mbbbl)

Gas wells

Using the definition of $[q_D(Y_e / X_e)]$:

$$q_D \frac{Y_e}{X_e} = \frac{1.417 * 10^6 T}{k h} \frac{q}{\Delta p_p} \frac{Y_e}{X_e}$$

$(k X_e / Y_e)$ is calculated as follows:

$$\frac{k X_e}{Y_e} = \frac{1.417 * 10^6 T}{h} \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match}$$

where $(q / \Delta p_p)$ and $[q_D (Y_e / X_e)]$ are read off from each of the raw data and typecurve graphs at a selected match point.

From the definition of t_{Dye} ,

$$t_{Dye} = \frac{0.00633 k t_{ca}}{\phi \mu c_t Y_e^2}$$



(Y_e / \sqrt{k}) is calculated as follows:

$$\frac{Y_e}{\sqrt{k}} = \sqrt{\frac{0.00633}{\phi \mu c_t} \left(\frac{t_{ca}}{t_{Dye}} \right)_{match}}$$

Substituting the equation for $(k X_e / Y_e)$ into the above, we get:

$$\sqrt{k} X_e = \sqrt{\frac{0.00633}{\phi \mu c_t} * \frac{1.417 * 10^6 T}{h} * \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match}} * \sqrt{\left(\frac{t_{ca}}{t_{Dye}} \right)_{match}}$$

Additional reservoir parameters are now calculated:

$$\begin{aligned} A &= 4 X_e Y_e = 4 * (\sqrt{k} X_e) * \frac{Y_e}{\sqrt{k}} * \frac{1}{43560} \\ &= \frac{4 * 0.00633}{\phi \mu c_t} * \frac{1.417 * 10^6 T}{h} * \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match} * \left(\frac{t_{ca}}{t_{Dye}} \right)_{match} * \frac{1}{43560} \end{aligned}$$

(Acres)

$$\begin{aligned} G &= \frac{4 X_e Y_e h \phi S_{gi}}{B_{gi}} * 10^{-9} \\ &= \frac{4 * 0.00633 * 1.417 * 10^6 T}{\mu c_t} \left[\frac{\left(\frac{q}{\Delta p_p} \right)}{q_D \frac{Y_e}{X_e}} \right]_{match} * \left(\frac{t_{ca}}{t_{Dye}} \right)_{match} * \frac{S_{gi}}{B_{gi}} * 10^{-9} \end{aligned}$$

(Bscf)

Typewell theory

The distribution of rates is used to generate the range of production history lines corresponding with P90, P50, P10 cases. (For example, for each period, the P90 point is determined as the value for which 90% of the data points are higher—or for the more common description, the value for which 10% of the values are smaller.) The data points in this case are the rates for each well at a specific period. If a group of groups is selected, the aggregate rates for each group are used.

To determine this value, all data points for a period must be sorted in ascending order. N is the number of data points in the period. P is the percentile. (In the P90 example P is 10.) The position of the percentile value is n .

$$n = \frac{P}{100} (N - 1) + 1$$

The value of n is split into its integer (k) and decimal (d) components such that $n = k + d$

The percentile value (v_p) is calculated by:

$$v_p = v_k + d(v_{k+1} - v_k)$$

The production volume for each period is calculated in the same way as the rate.

The cumulative production track is calculated by summing the calculated volumes for each period.

For example:

We have the following dataset:

1.18	1.28	0.95	2.49	1.35	1.82	1.46	3.96	1.33	1.40
3.72	3.11	2.32	2.20	1.75	4.57	2.22	4.12	2.79	3.95

The values are set to ascending order:

0.95	1.18	1.28	1.33	1.35	1.40	1.46	1.75	1.82	2.20
2.22	2.32	2.49	2.79	3.11	3.72	3.95	3.96	4.12	4.57

The percentile to be found is 10 (P90). $N=20$.

Next, n is determined:

$$n = \frac{10}{100} (20 - 1) + 1 = 2.9$$

From $n = 2.9$, $k = 2$ and $d = 0.9$.

Then we find v_2 is 1.18 and v_3 is 1.28.

Finally $v_k + d(v_{k+1} - v_k) = 1.18 + 0.9(1.28 - 1.18) = 1.27$.


The P90 rate for this period is 1.27.

Unconventional reservoir theory

Production behavior of unconventional reservoirs

The term "unconventional" refers to production from very low-permeability formations. This often includes shale and very tight sands. When the permeability of a formation is very low, an enormous amount of surface area is required between the well completion and the reservoir to be able to produce at economic rates. This required area is achieved through multiple stages of massive fracture stimulations. The flow regime most often observed in these wells is linear flow. Linear flow may last several years and is often the only flow regime observed in the analysis. In addition to fractures created in the reservoir, linear flow can be caused by natural fracturing or enhancements to the natural fractures. For more information see [fracture properties](#).

The effective drainage boundaries for these wells often coincide with the fracture length. In other words, drainage beyond the stimulated region is not significant and in the analysis method presented, this contribution is neglected. The base reservoir geometry used to develop this method is that of a single fracture centered in a rectangular reservoir, where the fracture width extends to the reservoir boundary. In this geometry, linear flow is observed until the reservoir width (Y_e) boundary is reached, and the well enters boundary-dominated flow. The reservoir geometry is shown below:

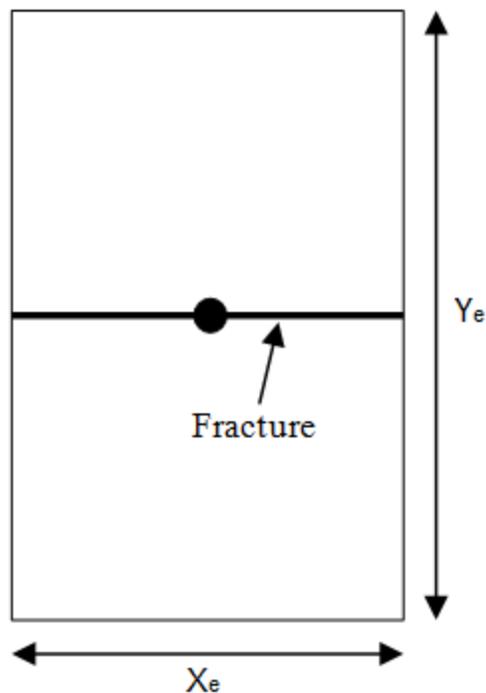

Constant flowing pressure

Current analysis techniques in the industry use material balance time. Since material balance time is actually boundary-dominated flow superposition time, these analyses may appear to show boundary-dominated flow even when the reservoir is still exhibiting transient flow. In the method presented, no superposition functions are used, which avoids a bias towards any flow regimes. The production data is analyzed using a plot of reciprocal rate versus square-root time. In this plot, linear flow appears as a straight-line trend. The basic assumption is of infinite conductivity in the fracture; finite conductivity manifests itself as a positive intercept on the plot. The equations presented are based on the assumption of a constant flowing pressure at the well. This is a reasonable simplification for tight gas and shale production, where wells are typically produced under high drawdown.

Based on the straight-line behavior of the square root time plot, the simplest form of the linear flow equation is:

Equation 1

$$\frac{1}{q} = m\sqrt{t} + b'$$

In this equation, the intercept captures a number of near well effects, such as skin and finite fracture conductivity, and the slope is given by:

For oil:

Equation 2a

$$m = \frac{31.3 B}{h x_f \sqrt{k}} \sqrt{\frac{\mu}{\varphi c_t}} \times \frac{1}{p_i - p_{wf}}$$

For gas:

Equation 2b

$$m = \frac{315.4 T}{h \sqrt{(\varphi \mu_g c_t)_i}} \times \frac{1}{p_{pi} - p_{wf}} \times \frac{1}{x_f \sqrt{k}}$$

From the slope of the equation, fracture half-length and permeability are determined as a single product. To determine either explicitly, the other parameter must be known.

To determine the skin effect, the intercept of the line is used with the following:

For oil:

Equation 2c

$$s' = \frac{b' (p_i - p_{wf}) k (2 x_f)}{141.2 B \mu}$$

Equation 2d

$$F'_{CD} = \frac{141.2 B \mu}{b' (p_i - p_{wf}) k h n_f} \times \left(1 + \frac{h}{x_f} \left(\ln \left(\frac{h}{2 r_w} \right) - \frac{\pi}{2} \right) \right)$$

For gas:

Equation 2e

$$s' = \frac{b' (p_{pi} - p_{pwf}) k (2 x_f)}{1.417 \times 10^6 T}$$

Equation 2f

$$F'_{CD} = \frac{1.417 \times 10^6 T}{b' (p_{pi} - p_{pwf}) k h n_f} \times \left(1 + \frac{h}{x_f} \left(\ln \left(\frac{h}{2 r_w} \right) - \frac{\pi}{2} \right) \right)$$

Duration of linear flow

When a well is producing under constant flowing pressure, the distance of investigation can be obtained from the following equation during the linear flow period:

Equation 3

$$Y = 0.159 \sqrt{\frac{k t}{(\varphi \mu c_t)_i}}$$

Combining this equation with the reservoir geometry detailed in the diagram presented previously, the end of linear flow is given by the following:

Equation 4

$$\frac{Y_e}{2} = 0.159 \sqrt{\frac{k t_{elf}}{(\varphi \mu c_t)_i}}$$

Equation 4 can be rearranged as follows:

Equation 5

$$t_{elf} = \left(\frac{Y_e \sqrt{(\varphi \mu c_t)_i}}{2 \times 0.159 \sqrt{k}} \right)^2$$

This is not a practical form of the equation, since permeability (k) and reservoir width (Y_e) are usually not explicitly known. The permeability is tied into the ($x_f \sqrt{k}$) term and reservoir width is related to the drainage area (A); however, both of these are related to fracture half-length (x_f). Using the definition of drainage area ($A = 2 * x_f * Y_e$), equation 5 becomes:

Equation 6a

$$t_{elf} = \left(\frac{A \sqrt{(\varphi \mu c_t)_i}}{4 \times 0.159} \times \frac{1}{x_f \sqrt{k}} \right)^2$$

The ($x_f \sqrt{k}$) term is determined from the slope of the square-root time plot using a rearranged form of [equation 2](#). For unconventional gas reservoirs, $x_f \sqrt{k}$ departs from its analytical value as the pressure drawdown, D_D , becomes higher. To correct for this drawdown effect, a correction factor, f_{cp} , is implemented in the gas constant pressure module, which allows for a more accurate determination of $x_f \sqrt{k}$.

D_D and f_{cp} are defined as follows:

Equation 6b

$$D_D = \frac{[p_{pi} - p_{pwf}]}{p_{pi}}$$

Equation 6c

$$f_{CP} = 1 - 0.0852 D_D - 0.0857 D_D^2$$

$x_f \sqrt{k}$ can be determined by using following equations:

For oil:

Equation 7a

$$x_f \sqrt{k} = \frac{31.3 B}{m h} \times \frac{1}{p_i - p_{wf}} \times \sqrt{\frac{\mu}{\varphi c_t}}$$

For gas:

Equation 7b

$$x_f \sqrt{k} = f_{cp} \frac{315.4 T}{m h (p_{pi} - p_{pwf})} \sqrt{\frac{1}{(\varphi \mu c_t)_i}}$$

Substituting equation 7 into equation 6a, the duration of linear flow (and hence the beginning of boundary-dominated flow) is determined using the following equation:

For oil:

Equation 8a

$$t_{elf} = \left[\frac{A h (\varphi c_t) m (p_i - p_{wf})}{19.9 B} \right]^2$$

For gas:

Equation 8b

$$t_{elf} = \left[\frac{A h (\varphi \mu_g c_t) m (p_{pi} - p_{pwf})}{200.6 T} \right]^2$$

An approximation of the gas equation can be obtained by replacing pseudo-pressure terms with:

Equation 8c

$$\frac{p_i^2 - p_{wf}^2}{(\mu_g Z)_i}$$

and c_{ti} by the inverse of p_i

The major unknown in determining the end of linear flow is the effective drainage area. Analog wells can be used to determine an appropriate range of drainage areas for the subject well. Well spacing can provide an upper bound on drainage area in high-density developments. Interpretation of flowing material balance can be used to determine a minimum area based on the current production data.

Boundary-dominated flow

Given the geometry of the reservoir considered, linear flow is followed directly by boundary-dominated flow. There are two ways to represent this flow regime for purposes of forecasting: (a) pseudo-steady state equations, material balance time, and pseudo-time; (b) traditional (Arps) hyperbolic decline. In the interest of keeping the method simple and practical, the hyperbolic decline method is used. Hyperbolic decline is defined in the following equation:

Equation 9

$$q = \frac{q_i}{[1 + b a_i t]^{\frac{1}{b}}}$$

In this equation, q_i and a_i are flow rate and decline rate (respectively) at the start of the forecast period; and t is the time that has elapsed since the start of the forecast. Since the hyperbolic decline forecast starts at the end of linear flow, the flow rate, decline rate, and time will be with respect to time at the end of linear flow (t_{elf}). The decline exponent (b) is selected to be between 0 and 0.5, which are typical values for boundary-dominated flow in gas. Equation 9 is then rewritten to represent this:

Equation 10

$$q = \frac{q_{elf}}{[1 + b a_{elf} (t - t_{elf})]^{\frac{1}{b}}}$$

Equation 1 is rewritten to show how rate at the end of linear flow (q_{elf}) is determined based on the interpretation of the square-root time plot:

Equation 11

$$q_{elf} = \frac{1}{m \sqrt{t_{elf}} + b'}$$

Decline rate from the hyperbolic decline equation is defined as:

Equation 12

$$a = - \frac{1}{q} \frac{dq}{dt}$$

In order to determine decline rate at the end of linear flow (a_{elf}), an expression is needed for decline rate during linear flow. This is obtained by combining Equation 1 and Equation 12:

Equation 13

$$a = \frac{1}{m \sqrt{t} + b'} \frac{m}{2 \sqrt{t}}$$

This equation is now written to reflect the decline rate at the end of linear flow:

Equation 14

$$a_{elf} = \frac{1}{m \sqrt{t_{elf}} + b'} \frac{m}{2 \sqrt{t_{elf}}}$$

From Equation 14, it is also apparent that if b is negligible, the equation reduces to:

Equation 15

$$a = \frac{1}{2t}$$

Once a decline exponent (b) is selected, [Equation 10](#) can be used for any duration of forecast, and even to determine the production forecast based on an abandonment rate.

Variable flowing pressure

In the initial development of this interpretation technique, constant flowing pressure has been assumed. An additional case for variable flowing pressure may also be considered when interpreting

the square-root time plot. The standard y-axis of reciprocal rate is simply replaced with normalized pressure to account for changes in flowing pressure during the linear flow portion of the data. Transient linear flow appears to be a straight line in the normalized pressure versus square-root of time plot. The slope of the straight line, m , is used to calculate $x_f \sqrt{k}$ with the following:

For oil:

Equation 16a

$$x_f \sqrt{k} = \frac{19.927 B}{m h} \sqrt{\frac{\mu}{\varphi c_t}}$$

For gas:



Equation 16b

$$x_f \sqrt{k} = f_{cp} \frac{200.8 T}{m h} \sqrt{\frac{1}{(\varphi \mu c_t)_i}}$$

As stated earlier, the observation has been that most unconventional wells are produced at very high drawdown rates to maximize recovery. Because of this common practice, the forecasting approach in the variable pressure module uses hyperbolic decline with the assumption of constant pressure for the duration of the forecast.

Superposition time

Superposition is a mathematical tool. You can use simple solutions (such as constant rates) to produce complex ones (such as variable rates). Superposition uses the theory that a rate that changes from q_1 at time t to a new rate q_2 is equivalent to q_1 continuing forever, superposed, or added on ($q_2 - q_1$) starting at time t and continuing forever.

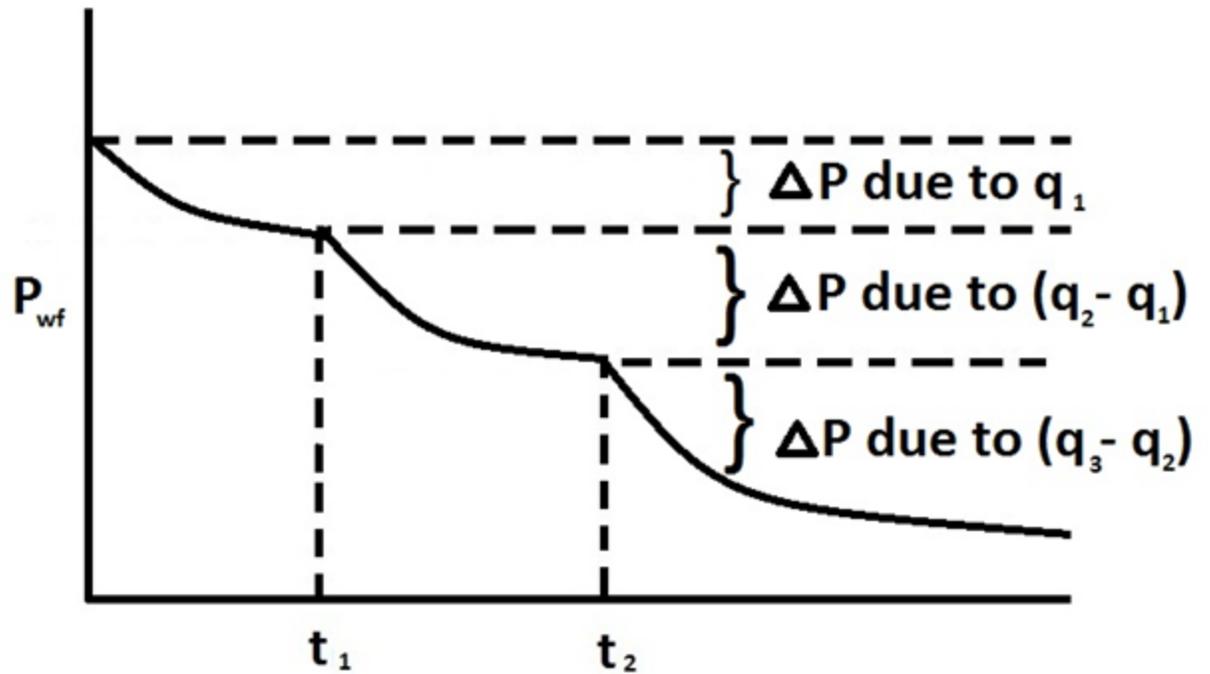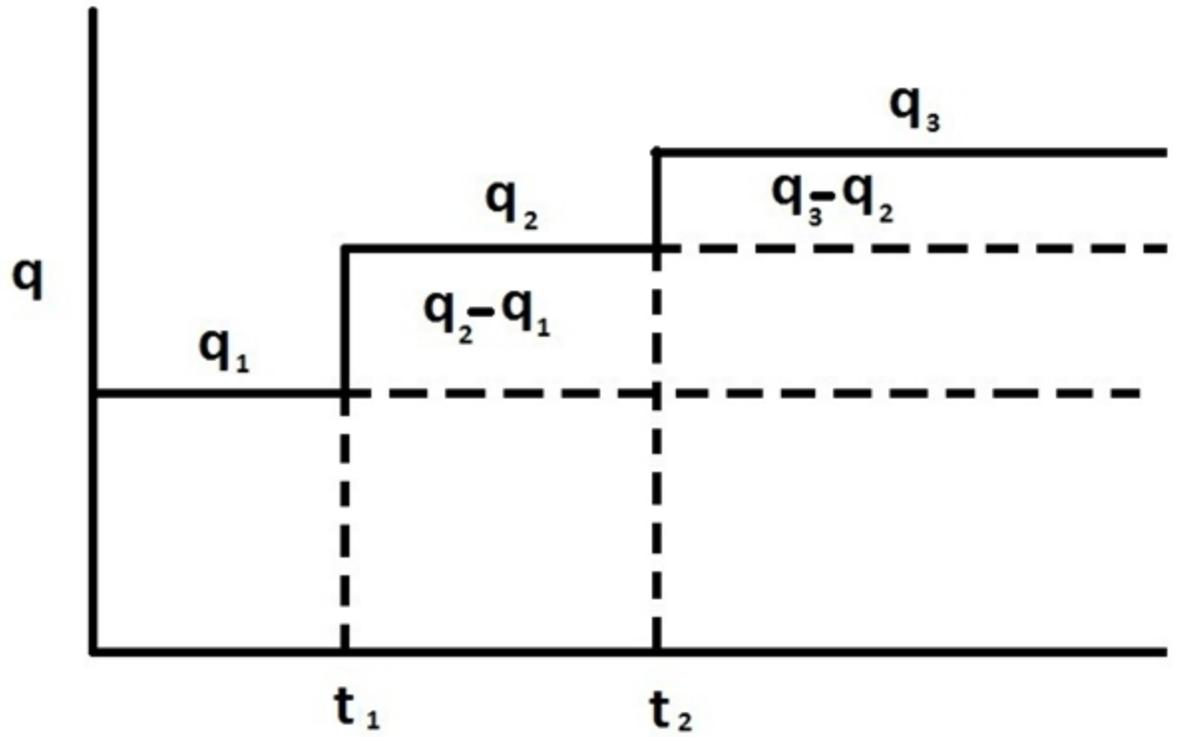

For unconventional reservoirs, two superposition time functions are commonly used in production analysis: linear superposition time and material balance time.

Linear superposition time is given by:

Equation 17a

$$t_n = \sum_{j=1}^n \frac{q_j - q_{j-1}}{q_n} \sqrt{t - t_{j-1}}$$

Material balance time is given by:

Equation 17b

$$t_c = \frac{Q_n}{q_n}$$

Both two superposition time functions can effectively convert variable rates to their equivalent constant rates solutions. Therefore, the plot of $\frac{p_i - p_{wf}}{q}$ versus linear superposition time (or square root of material balance time) on a Cartesian graph results in a straight line. The slope of this line (m') can be used to calculate $x_f \sqrt{k}$:

For oil:

Equation 17c

$$x_f \sqrt{k} = \frac{19.927 B}{m' h} \sqrt{\frac{\mu}{\varphi c_t}}$$

For gas:

Equation 17d

$$x_f \sqrt{k} = \frac{200.8 T}{m' h} \sqrt{\frac{1}{(\varphi \mu c_t)_i}}$$

Using pseudo-time

The above derivations used for the unconventional reservoir model (URM) analysis do not account for variation in total compressibility. It is possible to account for variation in total compressibility and fluid

viscosity by using pseudo-time.

Pseudo-time is defined as follows:

For oil:

$$t_a(t) = \frac{\mu_o(p_i) c_t(p_i)}{k(p_i)} \int_0^t \frac{k(\bar{p}_{inv})}{\mu_o(\bar{p}_{inv}) c_t(\bar{p}_{inv})} dt$$

For gas:

$$t_a(t) = \frac{\mu_g(p_i) c_t(p_i)}{k(p_i)} \int_0^t \frac{k(\bar{p}_{inv})}{\mu_g(\bar{p}_{inv}) c_t(\bar{p}_{inv})} dt$$

In these equations, \bar{p}_{inv} , is average pressure over the volume investigated at a given time t .

Note: The correction factor, f_{CP} , (defined in *Equation 6c*) is another way to account for variation in gas compressibility. Therefore, when pseudo-time is used, there is no need to use the correction factor, f_{CP} , in calculations.

Accounting for variation in rock and fluid properties in the oil URM

In the descriptions above, URM analysis for gas is done in terms of pseudo-pressure, and URM analysis for oil is done in terms of pressure. This is done because for the oil case, a variation of oil properties (such as viscosity, compressibility, and the formation volume factor) is considered to be negligible, and formation compressibility and permeability are assumed to be constant (no geo-mechanical effects).

However in some cases, it is important to account for a variation in oil and formation properties. This can be done similarly to how it is done for gas cases, by introducing oil pseudo-pressure:


$$p_{po}(p) = \frac{B_o(p_i) \mu_o(p_i)}{k(p_i)} \int_0^p \frac{k(p)}{B_o(p) \mu_o(p)} dp$$

When the oil URM calculation is modified to use pseudo-pressure, the FMB plot within the URM dashboard is also modified. For information on modifications for the oil FMB plot, see [accounting for variation in oil properties \(FMB\)](#).

Note: This approach is used and described in literature, including [Behmanesh et al. \(2015\)](#), [Stalgorova and Mattar \(2016\)](#).

Application to horizontal wells

The majority of wells in unconventional gas production are horizontal wells with multiple stage fracturing. The approach first considered with the development of this method is to treat the horizontal wellbore as a fracture, and incorporate fracture stimulation in this well as part of the effective permeability interpreted on the square-root time plot. An additional method has been incorporated using the same process as that developed for a single fracture. If the horizontal well is cased, or contributes very little production compared to the fractures, the well can be treated as a series of fractures in the reservoir. In a well with n equally spaced and identically sized fractures, the single fracture model can be multiplied by n fractures to represent the whole well. The linear flow into the fractures is followed by boundary-dominated flow when no-flow boundaries are formed between adjacent fractures. This layout is displayed below with its relationship to the single-fracture model.

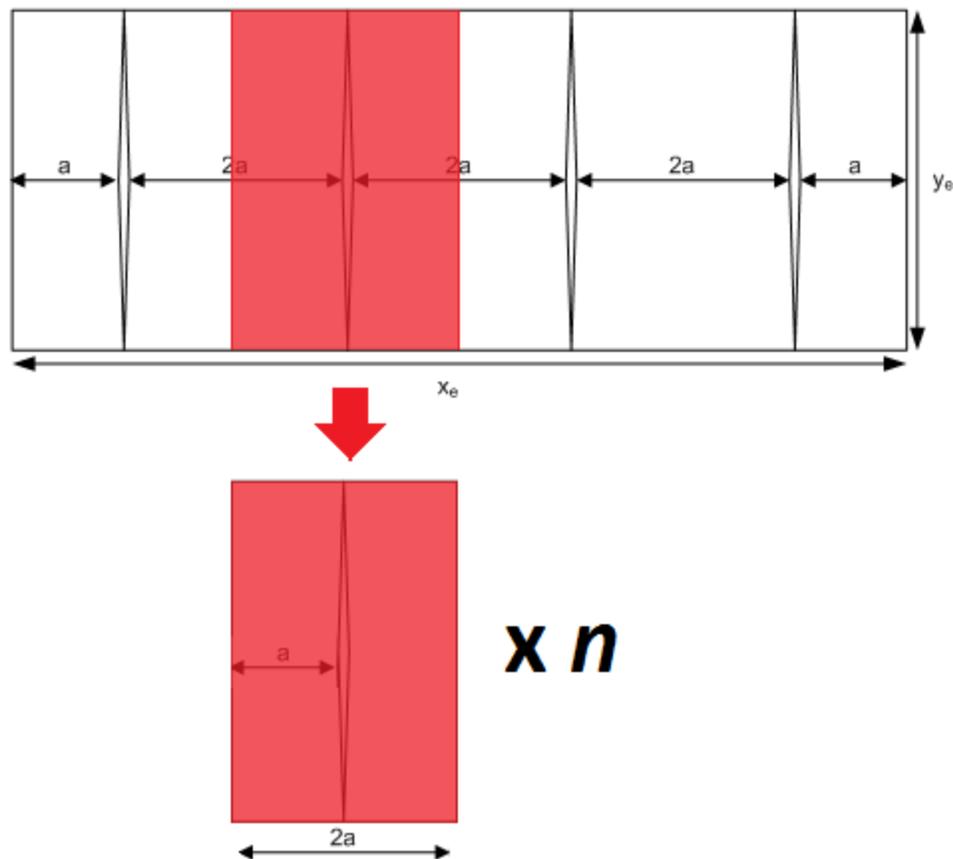

Applying this theory to Harmony Reservoir™

This theory applies to using production data to identify the linear flow parameter and interpret the linear flow parameter for different completion types.

Using production data to identify the linear flow parameter

Equations 16a and 16b can be rewritten as:

For oil:

Equation 18a

$$4hx_f \sqrt{k} = 4 \cdot \frac{19.927 B}{m} \sqrt{\frac{\mu}{\varphi c_t}}$$

For gas:

Equation 18b

$$4hx_f \sqrt{k} = 4 \cdot \frac{200.8T}{m} \sqrt{\frac{1}{(\varphi \mu c_t)_i}}$$


Note: Equations 17c and 17d can be rewritten in a similar way.

These equations are derived for the case where the well is being produced through a single fracture.

For this case, the total area to flow (A_c) can be calculated as:

Equation 19

$$A_c = 4h x_f$$

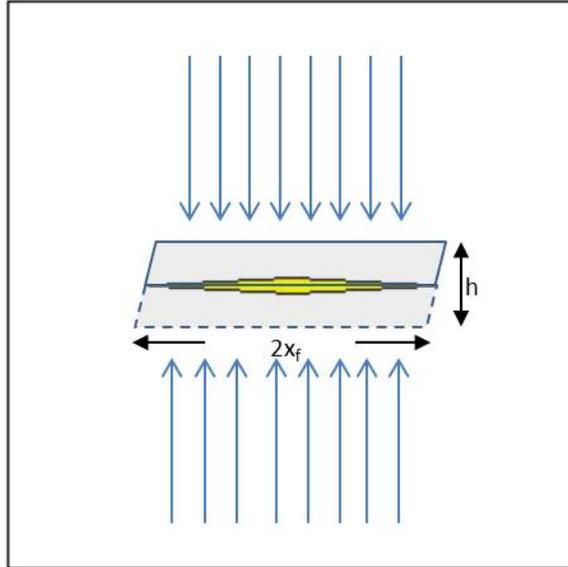

Therefore, equations 20a and 20b can be rewritten in a general form:

For oil:

Equation 20a

$$A_c \sqrt{k} = 4 \cdot \frac{19.927 B}{m} \sqrt{\frac{\mu}{\varphi c_t}}$$


For gas:

Equation 20b

$$A_c \sqrt{k} = 4 \cdot \frac{200.8T}{m} \sqrt{\frac{1}{(\varphi \mu c_t)_i}}$$

Where A_c is total area to flow.

In equations 20a and 20b, the right-side of the equation is known: m , and is defined by production data (the slope of the line for normalized pressure plotted against a \sqrt{t} function), and the remaining parameters are known for reservoir and fluid properties. Therefore, we can calculate the linear flow parameter $A_c \sqrt{k}$ using the top-left plot on the unconventional reservoir model (URM) dashboard.

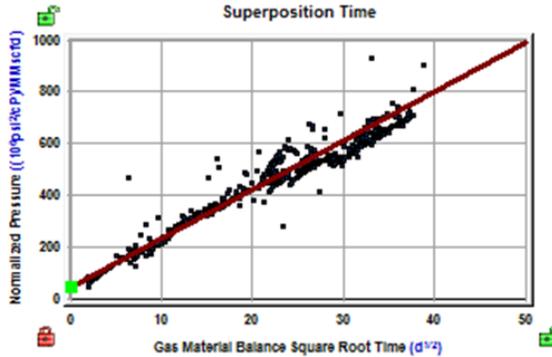

→ slope of the line → $A_c \sqrt{k}$

Note: A_c represents the total area to flow, without any assumptions whether the well is producing through a single fracture, through multiple fractures, or through a non-fractured horizontal well-bore.

Interpreting the linear flow parameter for different completion types

Once the value for the linear flow parameter $A_c \sqrt{k}$ is calculated, it can be interpreted differently depending on the type of completion. With URM analysis, three types of completion are selectable from the Model Type drop-down list.

The following sections describe how the linear flow parameter is interpreted for each model type.

Vertical – single frac model type


In this case, it is assumed that the well is being produced through a single fracture. We can observe linear flow towards the fracture from both sides. The total area to flow (A_c) can be calculated as:

Equation 21

$$A_c = 4 h x_f$$

Where h is the known net pay. Once $A_c \sqrt{k}$ is calculated, $x_f \sqrt{k}$ is also calculated and reported.

If you enter the value for permeability, x_f will be calculated based on the known value of permeability, and the previously calculated $x_f \sqrt{k}$.

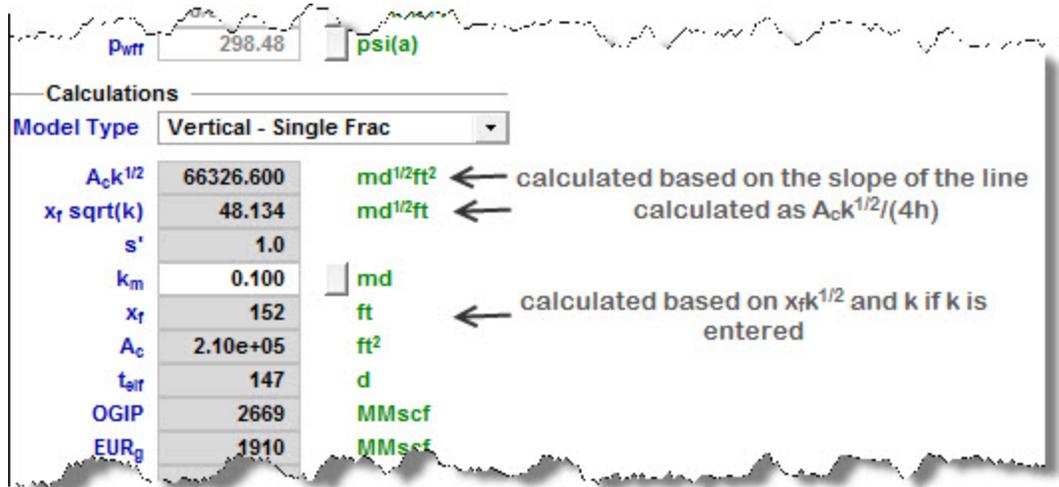


Horizontal Multifrac – effective k model type

In this case, it is assumed that the well is being produced through a horizontal wellbore without fractures. This model can also be used when the well is fractured, but we do not model each individual fracture; instead we account for all the fractures by using higher effective permeability. Then, we can observe linear flow towards the wellbore.

Total area to flow (A_c) can be calculated as:

Equation 22


$$A_c = 2 h L_e$$

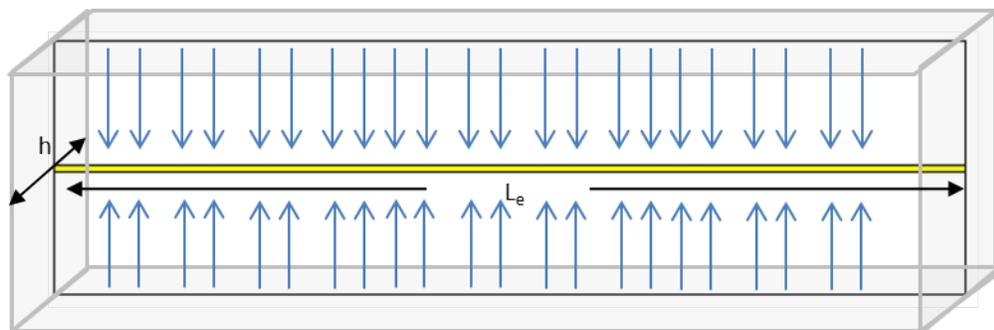

Where h is the known net pay. Once $A_c \sqrt{k}$ is calculated, $L_e \sqrt{k}$ can also be calculated.

Note: As there is no x_f in this model type, the parameter $x_f \sqrt{k}$ should be interpreted as $(L_e/2) \sqrt{k}$.

If you enter the value for effective horizontal wellbore length, L_e , effective permeability k_e will be calculated based on the known L_e and the previously calculated $L_e \sqrt{k}$.

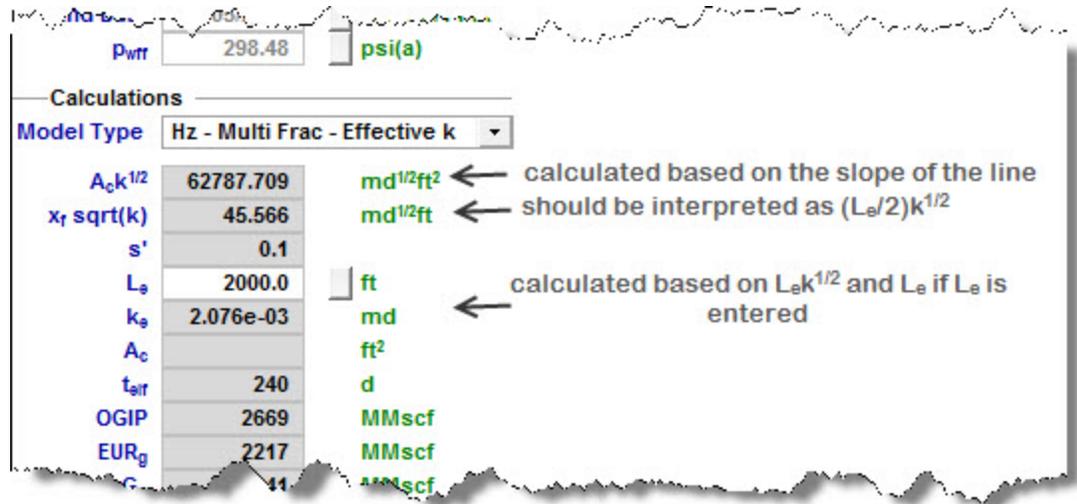


Horizontal Multifrac – SRV model type

In this case, it is assumed that the well is being produced through multiple fractures (n_f = number of fractures). Then, we can observe linear flow towards each fracture.

The total area to flow (A_c) can be calculated as:

Equation 23

$$A_c = 4 n_f x_f h$$

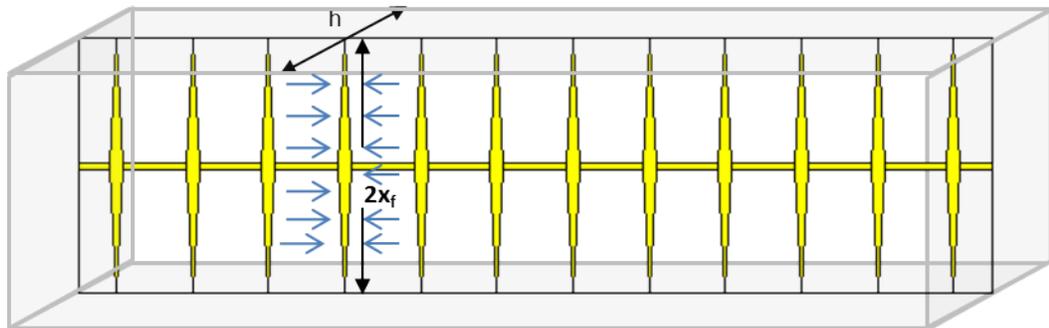

Where h is the known net pay. Once $A_c \sqrt{k}$ is calculated, $n_f x_f \sqrt{k}$ can also be calculated.

For this completion type, there is another relationship between model parameters:

Equation 24

$$OFIP = 2x_f \cdot L_e \cdot h \cdot \varphi \cdot S_{fi} / B_{fi}$$

Where:

OFIP: original fluid in place – this value can be obtained from the Flowing Material Balance plot

h: net pay; known reservoir property

φ : porosity; known reservoir property

S_{fi} : initial saturation of the modeled fluid (oil or gas); known reservoir property


B_{fi} : initial formation volume factor of the modeled fluid (oil or gas); known fluid property

L_e : effective horizontal well length

x_f : fracture half-length

In Equation 24, all parameters except for L_e and x_f are known. Therefore, if you enter the value for L_e , x_f can be calculated.

If you enter the value for n_f , permeability can be calculated based on the previously calculated $n_f x_f \sqrt{k}$, x_f , and the given n_f .

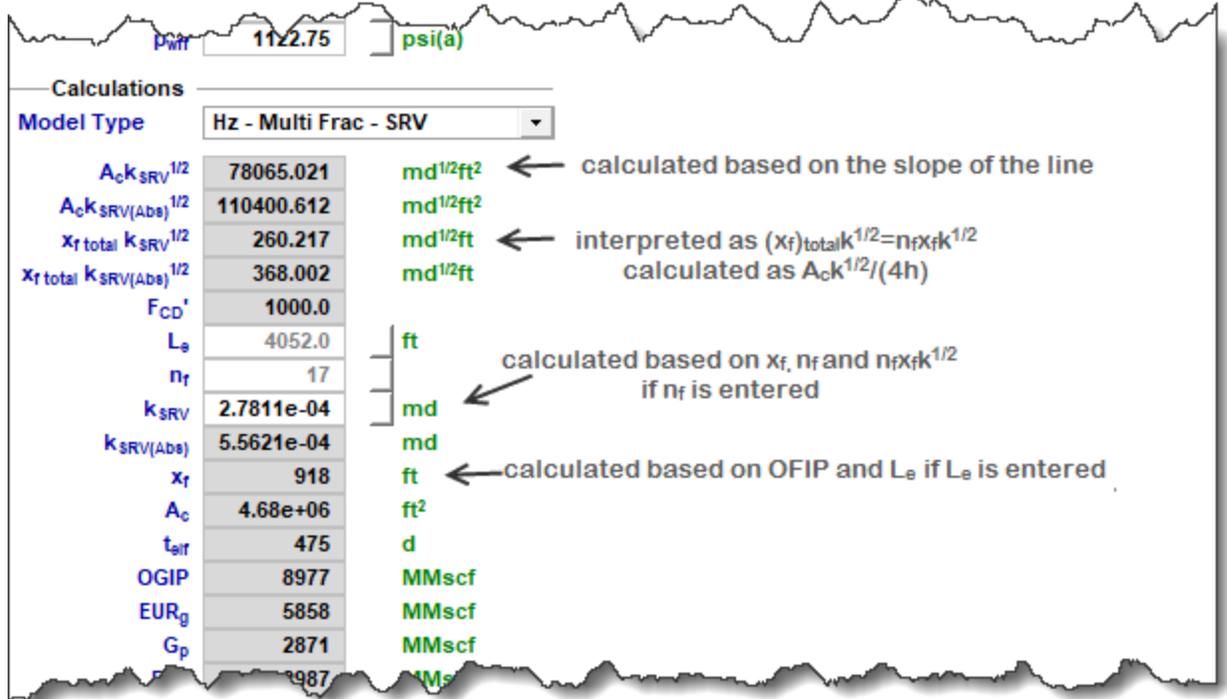


Most likely model

This model is a new methodology for identifying the possible range of stimulated reservoir volume (SRV) configurations based on specified well performance data, assumed system geometry, and known external system constraints.

The method is based on providing single values for known completion and petrophysical properties, and lower / upper limits for unknown parameters. The method is suitable for early well performance data, where transient linear flow is dominant.

The method is graphics-based with a plot of the exposed area of the fractures (A_x) versus drainage area of the reservoir (A_d). Based on user-defined constraints and limits, this plot defines a region that contains the full set of possible SRV configurations.

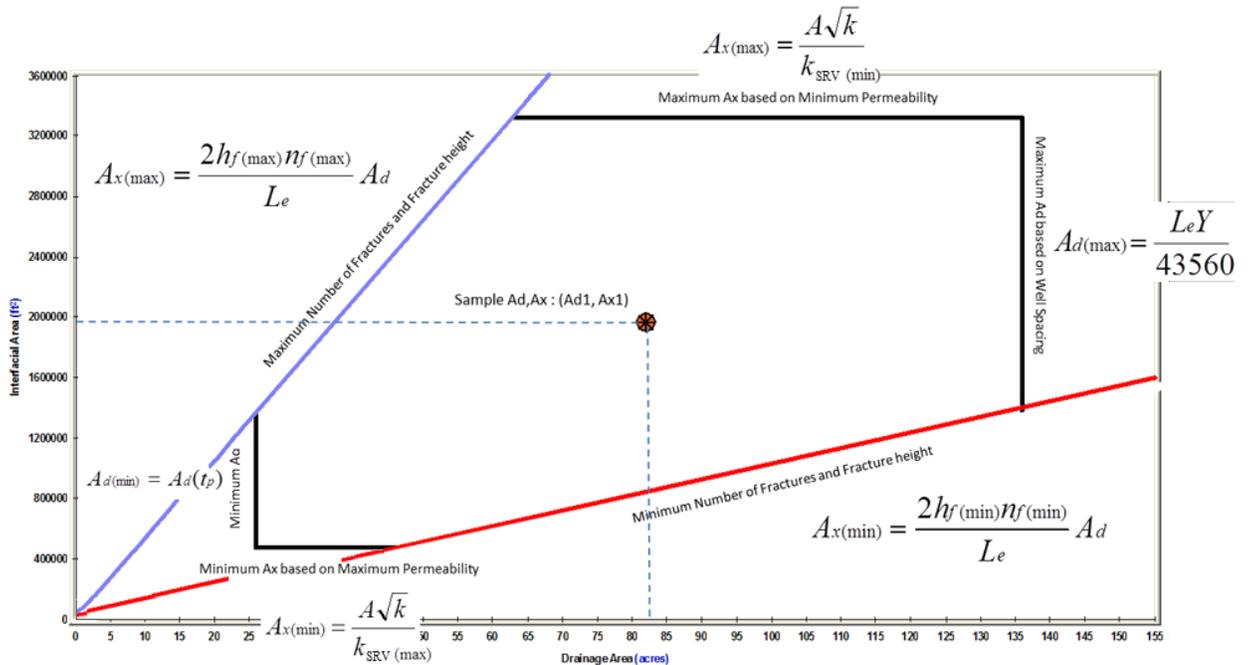

The definition of the allowable range of A_x versus A_d is identified in two parts.

Part 1: identify the region that defines minimum & maximum values for A_x and A_d

Limiting values for A_x are determined as follows:

Important: All of the equations below are referenced *earlier* in this topic.

Equation 18a

$$A_{x(\min)} = \frac{A \sqrt{k}}{\sqrt{k_{SRV(\max)}}}$$

Equation 18b

$$A_{x(\max)} = \frac{A \sqrt{k}}{\sqrt{k_{SRV(\min)}}}$$

Where $A\sqrt{k}$ is extracted from the slope of the square root straight line on the specialized plot, and $k_{SRV(\min)}$ and $k_{SRV(\max)}$ define the acceptable range of the unknown parameter, Stimulated Region Permeability.

The parameter k_{SRV} is considered to be an effective permeability, inclusive of any natural or induced fractures that have been activated (or are naturally active) and are connected to the primary hydraulic fracture network, but it does not include the primary fracture permeability. In other words, it is the permeability that acts directly on the primary hydraulic fracture system. A_x is defined as the total area exposed to fractures. For a fracture of half-length (x_f), A_x is defined as:

Equation 18c

$$A_c = 4hx_f$$

Limiting values for A_d are determined as follows:

Equation 18d

$$A_{d(\min)} = A_d(t_p)$$

Equation 18e

$$A_{d(\max)} = L_e Y \text{ or } A_{d(\max)} = \frac{L_e Y}{43560} \text{ if } A_d \text{ is in acres}$$

Where:

$A_d(t_p)$ equals the currently contacted drainage area, which is determined from a combined analysis of the square root straight line and the flowing material balance (Anderson et al. 2010).

Y equals the projected average distance between adjacent laterals once the field has been fully developed.

Based on the above, a box-shaped region can be defined on a plot of A_x versus A_d .

Part 2: identify the functional relationship between A_x and A_d

Assuming parallel transverse fractures (slab model) of uniform distribution and length, A_d is a linear function of A_x as follows:

Equation 19a

$$A_x = \frac{2 h_f n_f}{L_e} A_d$$

If the fracture network is assumed to be 2-dimensional (matchstick geometry), the coefficient in the above equation becomes 4. If the fracture network is assumed to be 3-dimensional (sugar cube geometry), the coefficient becomes 6.

Since h_f and n_f are unknowns, we can define the minimum and maximum functional relationship between A_x and A_d , assuming that we can provide allowable ranges for h_f and n_f .

Equation 19b

$$A_{x(\min)} = \frac{2 h_{f(\min)} n_{f(\min)}}{L_e} A_d$$

Equation 19c

$$A_{x(\max)} = \frac{2 h_{f(\max)} n_{f(\max)}}{L_e} A_d$$

The above equations plot as straight lines through the origin on the A_x versus A_d plot. The intersection of the previously defined rectangular region with these straight lines yields a region that contains all the possible A_d and A_x combinations.

Formulae for calculating reservoir / completion properties, given a sample configuration (A_{d1} , A_{x1}) from the A_x - A_d region, are shown as follows:

Equation 19d

$$x_f(A_{d1}, A_{x1}) = \frac{A_{d1}}{2 L_e}$$

Equation 19e

$$k_{SRV}(A_{d1}, A_{x1}) = \left(\frac{A \sqrt{k}}{A_{x1}} \right)^2$$

Equation 19f

$$h_f n_f(A_{d1} A_{x1}) = \frac{A_{x1} L_e}{2 A_{d1}}$$

Equation 19g

$$FCD'_{(A_{d1} A_{x1})} = \frac{1.417 E6 T}{b' k h_f n_f} \left(1 + \frac{h_f}{x_f} \left(\ln \left(\frac{h_f}{2 r_w} \right) - \frac{\pi}{2} \right) \right)$$

The mass center of the Allowable A_x versus A_d region is used to calculate the "most likely" values.

Volumetrics theory

Volumetric analysis is a technique that uses geological observations and information to estimate original fluids-in-place. It is often referred to as a "static method" as it primarily sources its data from core samples, wireline logs, and geological maps. Volumetric calculations are typically used prior to production to estimate reserves, and after considerable production to determine the efficiency of recovery, the areal extent of the reservoir, and as a basis for advanced studies, such as reservoir simulations.

Volume Parameter Equations and Equalities	
Rock Volume	$V_R = A \times h$
Pore Volume	$V_P = V_R \times \phi = A \times h \times \phi$
Hydro-carbon Pore Volume	$V_{HCP} = V_P \times (S_{HC}) = A \times h \times \phi \times (S_{HC})$ Where S_{HC} = the hydrocarbon saturation of interest (either S_o or S_g)

A comprehensive geologic study of the prospect is necessary to increase the confidence and reliability of determined reservoir properties, such as volume, porosity, and fluid saturations. In calculating the volume of the reservoir, accurate determinations of the areal extent and thickness must be made with respect to the geological structure and depositional environment. The use of isopach maps in combination with planimetry is a commonly used method in the determination of reservoir volume. Conclusions drawn concerning lithofacies and depositional settings are used to provide an assessment of porosity, while wireline log and core data provide the analyst with measurements of fluid saturations.

Oil reservoir calculations

Original Oil-in-Place (OOIP) Calculations		
Field Units [stb]	$OOIP = 7758 \times \frac{V_{HCP}}{B_{oi}}$ Or, in expanded form: $OOIP = 7758 \times A \times h \times \phi \times (S_{oi}) \times \frac{1}{B_{oi}}$	Where: A = acres h = feet ϕ = fraction S_{oi} = fraction B_{oi} = bbl/stb
Metric Units [m³]	$OOIP = \frac{V_{HCP}}{B_{oi}}$ Or, in expanded form: $OOIP = A \times h \times \phi \times (S_{oi}) \times \frac{1}{B_{oi}}$	Where: A = square meters h = meters ϕ = fraction S_{oi} = fraction B_{oi} = m ³ /m ³

Gas reservoir calculations

Historically, in a gas reservoir, only *free* gas-in-place was considered. Because of this, only one name was required: OGIP. However, with the increasing use of adsorbed gas reservoirs in the industry, Fekete / IHS has adopted the name “OGIP_F” to define the gas-in-place for a free-gas reservoir. Likewise, the name “OGIP_A” is used to define the gas-in-place in a reservoir. The name OGIP has been retained to describe the total original gas-in-place.

Free gas equations

Original Free Gas-in-Place (OGIP _F) Calculations		
Field Units [scf]	$OGIP_F = 43560 \times \frac{V_{HCP}}{B_{gi}}$ <p>Or, in expanded form:</p> $OGIP_F = 43560 \times A \times h \times \phi \times (S_{gi}) \times \frac{1}{B_{gi}}$	Where: A = acres h = feet φ = fraction S _{gi} = fraction B _{gi} = ft ³ /scf
Metric Units [m ³]	$OGIP_F = \frac{V_{HCP}}{B_{gi}}$ <p>Or, in expanded form:</p> $OGIP_F = A \times h \times \phi \times (S_{gi}) \times \frac{1}{B_{gi}}$	Where: A = square meters h = meters φ = fraction S _{gi} = fraction B _{gi} = m ³ /m ³

Adsorbed gas equations – shale reservoirs

Shale gas reservoirs usually contain much more adsorbed gas than free gas. Therefore, OGIP calculations for shale reservoirs should also account for adsorption. For shale reservoirs, total gas in place is calculated as:

$$OGIP = OGIP_F + OGIP_A$$

The following equations are used to calculate the original adsorbed gas-in-place (OGIP_A).

Original Adsorbed Gas-in-Place (OGIP _A) Calculations		
Field Units [scf]	$OGIP_A = 43560 \times A \times h \times \rho_b \times \frac{V_{L\$} \times p}{p_{L\$} + p}$	Where: A = acres h = feet ρ_b = ton/ft ³ p = psi(a) V _{L\$} = scf/ton p _{L\$} = psi(a)
Metric Units [m ³]	$OGIP_A = A \times h \times \rho_b \times \frac{V_{L\$} \times p}{p_{L\$} + p}$	Where: A = square meters h = meters ρ_b = g/cm ³ p = kPa(a) V _{L\$} = cm ³ /g p _{L\$} = kPa(a)

Adsorption saturation option

Adsorbed gas may occupy a portion of the measured porosity. To account for this, you can use the Adsorption Saturation option. If this option is selected, the calculation for OGIP_A remains unchanged, but the calculation for OGIP_F uses a decreased value for gas saturation. For information on the calculation for this adjusted S_g, see the [shale adsorption correction](#).

For adsorption theory, see [shale properties](#).

Calculations for liquid-rich gas reservoirs

With liquid-rich gas, it is important to calculate the original dry gas-in-place (OGIP_d), as well as the original condensate-in-place (OCIP).

Original dry gas in-place comes from free gas and dissolved gas:

$$OGIP_d = OGIP_{dF} + OGIP_S$$

Original condensate in-place comes from free condensate and vaporized condensate:

$$OCIP = OCIP_F + OCIP_V$$

The following equations are used to calculate OGIP_{dF}, OGIP_S, OCIP_F, and OCIP_V:

Calculations for Liquid-Rich Gas		
Field Units [scf, stb]	$OGIP_{dF} = 43560 \times A \times h \times \emptyset \times S_{gi} \times \frac{1}{B_{gdi}}$	Where: A = acres h = feet

Calculations for Liquid-Rich Gas		
	$OCIP_F = 7758 \times A \times h \times \phi \times S_{ci} \times \frac{1}{B_{ci}}$ $OGIP_S = OCIP_F \times R_{si}$ $OCIP_V = OGIP_{dF} \times R_{vi}$	ϕ = fraction S_{gi}, S_{ci} = fraction B_{gi} = ft ³ /scf B_{ci} = bbl/stb R_{si} = stb/scf R_{vi} = scf/stb
Metric Units [m ³ , m ³]	$OGIP_{dF} = A \times h \times \phi \times S_{gi} \times \frac{1}{B_{gdi}}$ $OCIP_F = A \times h \times \phi \times S_{ci} \times \frac{1}{B_{ci}}$ $OGIP_S = OCIP_F \times R_{si}$ $OCIP_V = OGIP_{dF} \times R_{vi}$	Where: A = square meters h = meters ϕ = fraction S_{gi}, S_{ci} = fraction B_{gi} = m ³ /m ³ B_{ci} = m ³ /m ³ R_{si} = m ³ /m ³ R_{vi} = m ³ /m ³

Note that the formation volume factor used to calculate the original dry gas-in-place is B_{dgi} — the formation volume factor for *dry* gas. It is different from B_{gi} — the formation volume factor for *recombined* gas displayed in the Properties editor. The dry gas formation volume factor (B_{dgi}) is defined as the ratio of the gas phase volume at reservoir conditions (V_g) to the equivalent volume of its gas component at standard conditions. The formation volume factor for recombined gas is the value obtained using given gas correlations based on the recombined gas gravity. For more information, see [recombination](#).

WOR forecasting theory


Water-oil ratio (WOR) forecasting is a method of trending future water production for the purpose of forecasting oil production and determining expected ultimate recoverable s (EUR). Water-oil ratio forecasting is an empirical analysis method; there is no formal model or equations. Plots of both water-oil ratio and water-oil ratio +1 are used in forecasting, and the plots are typically semi-log with cumulative oil production as the x-axis. Water-oil ratio, water-oil ratio +1, and water cut are defined below:

$$WOR = \frac{q_w}{q_o}$$

$$WOR + 1 = \frac{q_w + q_o}{q_o}$$


$$Water\ cut = \frac{WOR}{WOR + 1}$$

Ratio interpretation in combination with rate interpretation (traditional decline analysis) can increase confidence in the forecasts. In exponential or harmonic rate decline, slope dependencies are often observed between the rate and ratio trends. By plotting a forecast on both rate and ratio data, the slope dependencies can be used to match historical data on both the rate and ratio trends. These interpretations are less likely to show personal bias, as the forecast would only look reasonable if it matched both trends. Exponential decline is best analyzed on a semi-log plot of a water-oil ratio or a water-oil ratio +1 vs. time. Harmonic decline is best analyzed on a semi-log plot of a water-oil ratio or a water-oil ratio +1 vs. cumulative oil. The plot below shows slope dependence (the rate slope is the inverse of the ratio slope) between the oil rate and the water-oil ratio +1, while the total fluid rate (oil + water) is constant.

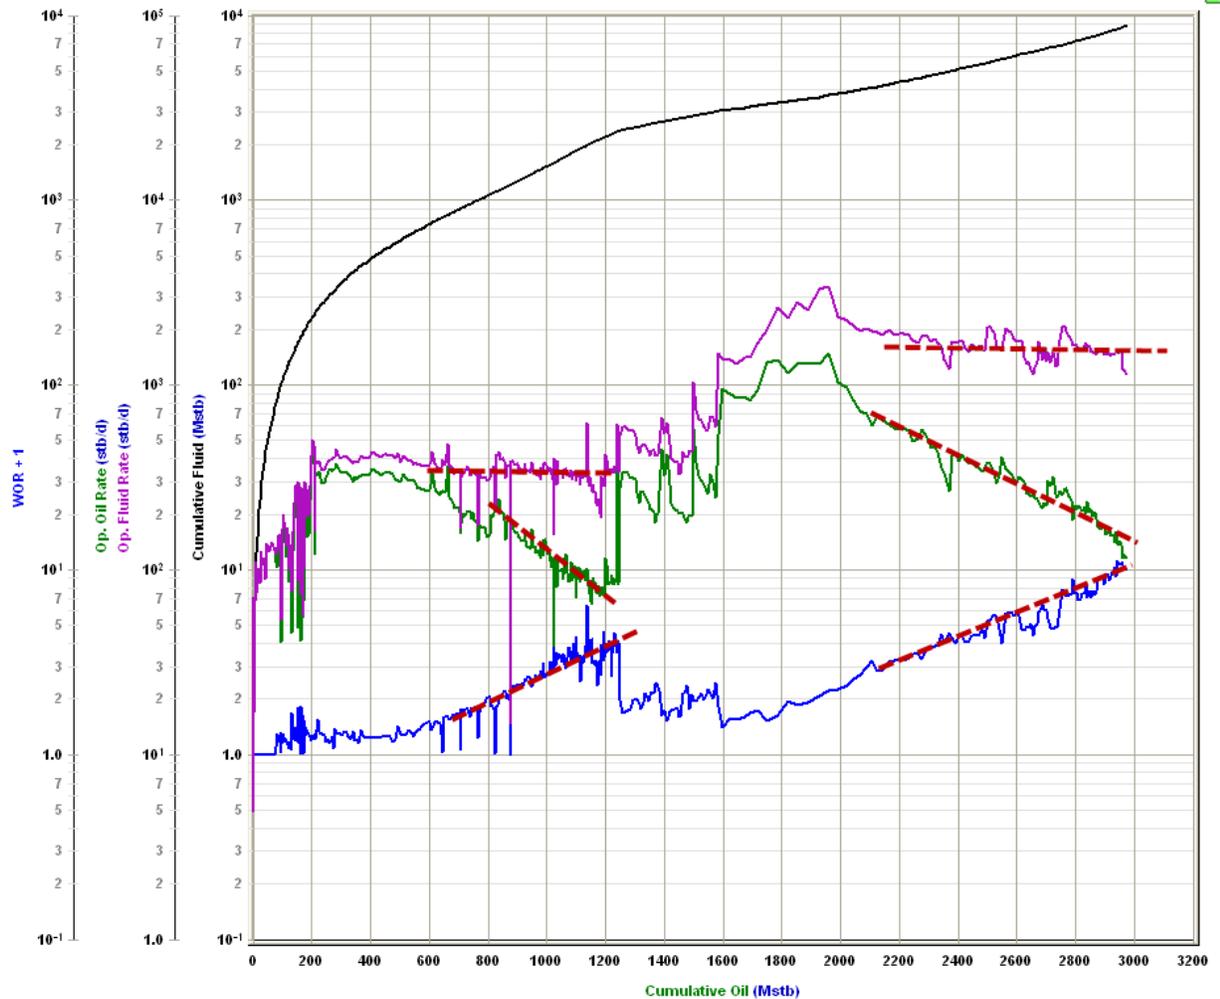

The WOR and WOR +1 are often used interchangeably. The advantage of WOR +1 in some situations is that periods with zero water production can be plotted. In some cases, the ratio trend appears more linear on WOR or WOR +1. It could be that the WOR behaves linearly when water rates are constant, and WOR +1 behaves linearly when total fluid rates are constant. This may guide you in determining which plot to select, but both should be considered uncertain. To create the forecast, a linear trend is placed on the WOR or WOR +1 semi-log plot, and a maximum WOR or water cut is used to truncate the forecast. An oil rate forecast is calculated by combining the ratio forecast with a total fluid rate.

Hp: 2975.1 Mstb
Wp: 5794.140 Mstb

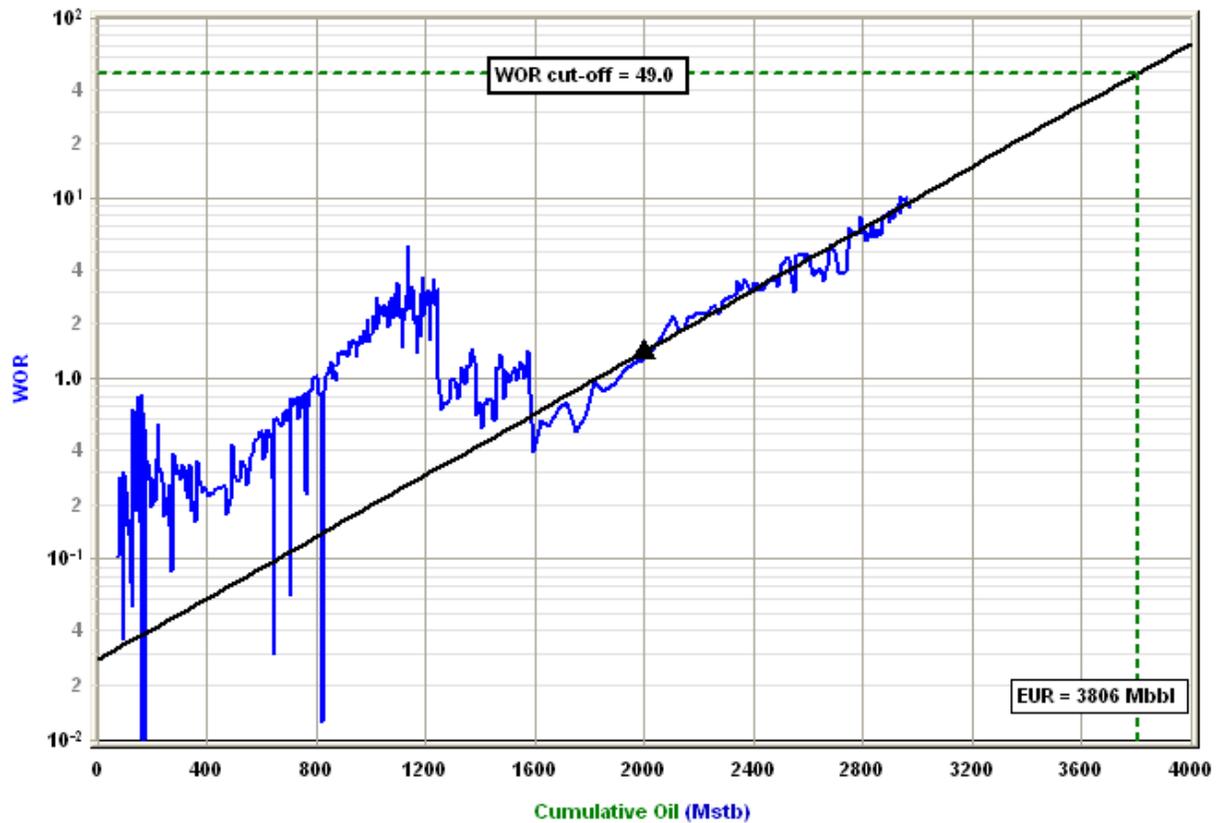

Water-oil ratio forecasting provides the most useful result in water drive or waterflood scenarios (for example, scenarios with high water production). However, linearizing the data removes the diagnostic aspects that may be desired for these reservoirs and production scenarios. Similar to decline forecasts, the trends created with WOR plots should be considered under constant operating conditions. Changing conditions, such as infill drilling or recompletions, often appear as changing the slope in the WOR trend.



Calculations & correlations


Calculations and correlations include the following:

- Annular diameters
- Average reservoir pressure calculations
- Capillary correlations
- Flow rate calculations
- Geomechanical correlations
- Liquid lift calculations
- Gas calculations & correlations
- Oil correlations
- Pressure loss calculations
- Recombination
- Relative permeability correlations
- Water correlations

Annular diameters

Pressure loss calculations for an annulus flow path require some extra steps to complete because the standard cylindrical tube model cannot be directly applied. Instead, the annular space is converted into a single cylindrical tube through the use of one of the following methods:

- Equivalent diameter method
- Hydraulic (or wetted) diameter method

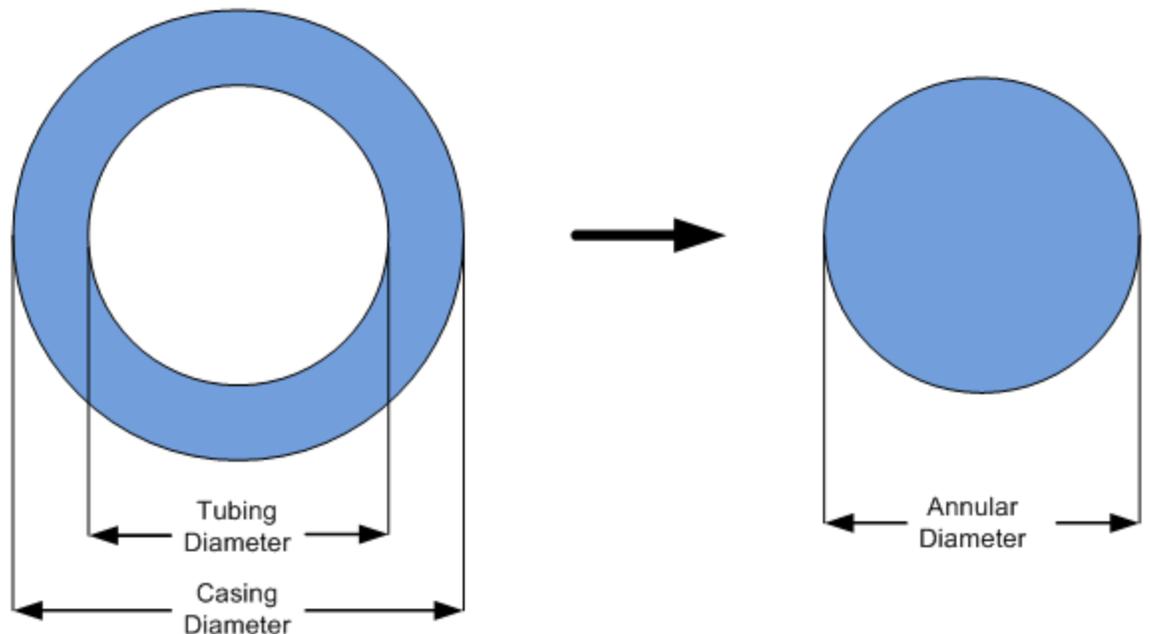

Equivalent diameter

With the equivalent diameter solution, the objective is to find a single tube that has the same cross-sectional area as the annulus. While this method seems logical at first glance, it does not account for frictional differences on both pipe walls (that is, the inside wall of the casing and the outside wall of the tubing).

$$\textit{Equivalent Diameter} = \sqrt{D_2^2 - D_1^2}$$

where:

- D_1 = outer diameter of the tubing
- D_2 = inner diameter of the casing

Hydraulic (wetted) diameter

With the hydraulic diameter solution, the objective again is to find a diameter for a single tube that represents the annulus, but also accounts for the extra friction that annular flow would experience.

$$\mathbf{Hydraulic\ Diameter} = \frac{4(\mathbf{Area})}{\mathbf{Wetted\ Perimeter}}$$

$$\mathbf{Hydraulic\ Diameter} = \frac{4\left(\frac{\pi D_2^2}{4} - \frac{\pi D_1^2}{4}\right)}{\pi(D_2 + D_1)}$$

this simplifies down to $\mathbf{Hydraulic\ Diameter} = D_2 - D_1$

where:

- D_1 = outer diameter of the tubing
- D_2 = inner diameter of the casing

Average reservoir pressure calculations

Average reservoir pressure at the end of the production period is calculated for oil and gas reservoirs provided that the original oil-in-place and original gas-in-place are known. The calculated average reservoir pressure value is reported under the calculations part for all the applicable typecurves.

Oil wells

Using the definition of compressibility, we can write:

$$c_t = \frac{1}{N} \cdot \frac{N_p}{(p_i - \bar{p})}$$

The above equation can be changed to:

$$\bar{p} = p_i - \frac{N_p}{c_t N}$$

Gas wells

For a gas reservoir, we can write:

$$\frac{\bar{p}}{\bar{Z}} = \frac{p_i}{Z_i} \left(1 - \frac{G_p}{G} \right)$$

Capillary correlations

Capillary pressure correlations

Analytical: Developed based on theory and generally applicable for calculating capillary pressures.

$$p_{cow} = p_{cgw} = a_0 + a_1 (1 - S_{wn}) + a_2 (1 - S_{wn})^2 + a_3 (1 - S_{wn})^3$$

$$S_{wn} = \frac{(S_w - S_{wirr})}{(1 - S_{wirr})}$$

$$p_{cog} = a_0 + a_1 S_{gn} + a_2 S_{gn}^2 + a_3 S_{gn}^3$$

$$S_{gn} = \frac{S_g}{(1 - S_{org})}$$

where: a_0 = Coefficient 0, a_1 = Coefficient 1, ...

Brooks-Corey: An empirical approach to calculate capillary pressures and works satisfactorily in many cases. It requires residual wetting-phase saturation. Uses a lithology factor that allows the correlations to be generalized to any lithology.

$$p_{cow} = p_{cgw} = C_w (S_{wn})^{-A_w}$$

$$A_w = 1/\lambda$$

$$S_{wn} = \frac{(S_w - S_{wirr})}{(1 - S_{wirr})} \text{ for drainage}$$

$$S_{wn} = \frac{(S_w - S_{wirr})}{(1 - S_{wirr} - S_{orw})} \text{ for imbibition}$$

$$A_o = 1/\lambda$$

$$S_{on} = \frac{(S_o - S_{org})}{(1 - S_{org})}$$

Custom Table: Allows you to enter laboratory measurements for capillary pressure values.

Analytical

Water-oil system

$$p_{cow} = Coeff0 + Coeff1(1 - S_{wn}) + Coeff2(1 - S_{wn})^2 + Coeff3(1 - S_{wn})^3$$

$$S_{wn} = \frac{S_w - S_{wirr}}{1 - S_{wirr}}$$

where:

Coeff0 = capillary pressure coefficient 0

Coeff1 = capillary pressure coefficient 1

Coeff2 = capillary pressure coefficient 2

Coeff3 = capillary pressure coefficient 3

Gas-oil system

$$p_{cgo} = Coeff0 + Coeff1(1 - S_{gn}) + Coeff2(1 - S_{gn})^2 + Coeff3(1 - S_{gn})^3$$

$$S_{gn} = \frac{S_g}{1 - S_{org}}$$

where:

Coeff0 = capillary pressure coefficient 0

Coeff1 = capillary pressure coefficient 1

Coeff2 = capillary pressure coefficient 2

Coeff3 = capillary pressure coefficient 3

Brooks Corey

The Brooks Corey model is widely accepted to calculate capillary pressure for relative permeability calculations. This model is a modified representation of Corey's model and represents the capillary pressure in a more general form.

Water-oil system

$$p_{cow} = (p_{ce})_{ow}^{-\frac{1}{\lambda_{ow}}}$$

$$S_{wn} = \frac{S_w - S_{wirr}}{1 - S_{wirr}}$$

where:

$(p_{ce})_{ow}$ = oil-water pore entry capillary pressure

λ_{ow} = oil-water pore size distribution index

Gas-oil system

$$p_{cgo} = (p_{ce})_{go}^{-\frac{1}{\lambda_{go}}}$$

$$S_{on} = \frac{S_o - S_{org}}{1 - S_{org}}$$

where:

$(p_{ce})_{go}$ = gas-oil pore entry capillary pressure

λ_{go} = gas-oil pore size distribution index

Flow rate calculations

When viewing production data and when using that data to generate forecasts of future production, it is critical that the method used to calculate the rates be known, understood, and used properly. Four commonly used terms used in this regard are "operated-day rate" (op-day), "calendar-day rate" (cal-day), "time on-production", and "load factor".

Note: The term "injection" can be substituted in all the definitions below where "production" is used.

Operated-day rate

Operated-day rate is defined as the volume of fluid produced or forecast over a period of time divided by the actual on-time during the period in days. For example, if a well produced 300 barrels of oil in a 30 day month, but was only actually producing for 15 days, then:

$$\text{Operated-Day Rate} = 300 \text{ Bbls} / 15 \text{ days} = 20 \text{ Bbls} / \text{day}$$

Calendar-day rate

Calendar-day rate is defined as the volume of fluid produced or forecast over a period of time divided by the number of days in the period, regardless of actual on-time. For example, if a well produced 300 barrels of oil in a 30-day month, but was only actually producing for 15 days, then:

$$\text{Calendar-Day Rate} = 300 \text{ Bbls} / 30 \text{ days} = 10 \text{ Bbls} / \text{day}$$

Time on-production

Time on-production is defined as the period of time a well is actually producing. It is typically expressed in hours or days.

Load factor

Load factor is defined as the ratio of the actual on-time and the period time. For example, if a well produced for 15 days in a 30-day period, then its load factor expressed as a percentage would be:

$$15/30 * 100 = 50\%$$

Geomechanical correlations

There are two types of geomechanical correlations: permeability and compressibility.

Permeability correlations

Yilmaz and Nur: A generic correlation suitable for extremely low permeability reservoirs.

Dobrynin: A more detailed correlation designed for over-pressurized reservoirs that require porosity as an input. Valid in the pressure range of 0 – 20,000 psi.

Custom Table: Allows you to enter laboratory measurements for the permeability ratio.

Compressibility correlations

Dobrynin: A more detailed correlation designed for over-pressurized reservoirs that require porosity as an input. Valid in the pressure range of 0 – 20,000 psi.

Custom Table: Allows you to enter laboratory measurements for formation compressibility. The formation compressibility ratio is calculated using the formation compressibility entered for each pressure divided by the initial formation compressibility coming from the basic reservoir properties.

Liquid lift calculations

Liquid lift calculations use the Turner correlation, which determines the minimum gas velocity required to continuously lift liquids. The intent of these calculations is to determine the minimum gas rate for a given wellbore configuration and pressure, below which liquid loading problems may start to occur.

The Turner correlation is as follows:

$$v_g \left(\textit{water} \right) = \frac{5.62 (67 - kp)^{0.25}}{(kp)^{0.5}}$$

$$v_g \left(\textit{Oil/ Condensate} \right) = \frac{4.02 (45 - kp)^{0.25}}{k p^{0.5}}$$

$$k = \frac{2.693 G}{Z T}$$

$$q_g = \frac{3.06 p v_g A}{Z T}$$

Gas calculations & correlations

Gas correlations

There are three types of gas correlations: pressure volume temperature (PVT), viscosity, and gas type.

PVT

B.W.R. (Table): The Benedict-Webb-Rubin is an empirical relationship that predicts the state of liquids and gases. Tables were developed for approximately fifty substances, mostly hydrocarbons that related gas density, formation volume factor, and temperature to pressure.

B.W.R. (8-constant): The Benedict-Webb-Rubin (8-constant) equation of state developed a set of generalized coefficients in order to permit widespread application to all types of gases.

B.W.R. (11-constant): The Benedict-Webb-Rubin (11-constant) equation of state is a further refined method to predict the state of liquids and gases. Used for all types of gases, it uses 11 empirical constants to achieve a more accurate interpolation of the data.

AGA8 Detail: Calculates the Z-factor based on the physical chemistry of the gas components at specified temperatures and pressures. It can be used when the exact composition (fraction mole percents) of the gas is available.

Carbon Dioxide: The Carbon Dioxide tables are for computing the Z factor for 100% CO₂ content.

Nitrogen: The Nitrogen tables are for computing the Z factor for 100% N₂ content.

Hydrogen Sulfide: The Hydrogen Sulfide tables are for computing the Z factor for 100% H₂S content.

Custom Table: Allows you to enter laboratory measurements for the gas Z-factor or formation volume factor. The Z factor is calculated from the formation volume factor or vice versa. Gas compressibility is subsequently calculated from these two values.

Viscosity

Carr et al: Developed to predict the viscosity of gas hydrocarbon mixtures for temperatures between 32°F and 400°F and pressures up to 12,000 psi. Applies to both sweet and sour gas and is designed to handle non-hydrocarbon components (CO₂, H₂S, N₂) in concentrations of up to 15% each.

Lee, Gonzalez, Eakin: Applies to sweet gas and does not account for the presence of non-hydrocarbon components. Applicable for pressure ranges of 100 - 8,000 psi and temperatures between 100°F - 340°F. Less accurate for gases with specific gravity above 1.0.

Optimized Lee et al: Developed using the Lee, Gonzalez, and Eakin method, but uses a optimized temperature history to achieve more accurate results, thus resulting in different coefficients in the equations. Less than 5% difference in extreme cases from original correlations.

Lucas et al: Uses the method of corresponding states to calculate gas viscosity. Better suited for higher density gases at lower pressures.

Custom Table: Choosing this correlation allows you to enter custom gas viscosity values from laboratory measurements.

Gas type

Selecting wet or dry gas changes the results obtained from gas correlations, as different coefficients have been developed for these gas types. The Liquid-rich Gas option allows for the recombination of gas and condensate into a single gas stream. For more information, see [reservoir fluid types](#).

Ovalle et al.'s correlation for R_v

Ovalle et al.'s correlation is based solely on commonly available field data. Required field data is as follows: the initial producing gas / condensate ratio from the first separator, the initial stock tank liquid gravity in API, the specific gravity of initial reservoir gas, and reservoir temperature. This correlation does not need require the dew point pressure to calculate the "Rv" curve vs. pressure.

$$R_v = \exp[3.684 + 0.61967 \times Z + 0.015359 \times Z^2]$$

$$Z = \sum_{n=0}^4 Z_n$$

n	Varn	CO _n	C1 _n	C2 _n	C3 _n	C4 _n
1	ln P, psi	20.809	-6.7095	0.5136	0	0
2	API _d	11.175	-1.2965	0.042311	-0.0005438	2.49E-06
3	γ_{RD}	-13.365	27.652	-18.598	4.3658	0

n	Varn	CO _n	C1 _n	C2 _n	C3 _n	C4 _n
4	TR, °F	-1.5309	0.0058453	1.40E-06	0	0

API _d	Gravity of stock-tank liquid, oAPI, determined when P ≥ Pd
P	Pressure, psi
γ_{gRd}	Reservoir gas specific gravity at P ≥ Pd (This value is the recombined gas specific gravity)
TR	Reservoir temperature, °F
RV	Vaporized oil ratio, Stb / MMscf

Calculation of the vaporized oil ratio

The vaporized oil ratio (R_v) can be calculated from the liquid drop-out (V_L / V_{sat}) measured in the lab.

$$R_v = \frac{(V_L / V_{sat}) B_{gd,sat} - B_o C G R_i}{(V_L / V_{sat}) B_{gd,sat} R_s - B_o}$$

where

(V_L / V_{sat}) : the liquid drop-out of a liquid-rich gas, meaning the retrograde liquid volume at any pressure (below the dew point pressure) and reservoir temperature relative to the volume of the gas sample at the dew point pressure and reservoir temperature.

$B_{gd,sat}$: the dry gas formation factor at the dew point pressure (saturation pressure)

Oil correlations

Oil / condensate correlations

Oil condensate PVT correlations are described below.

PVT

Vasquez and Beggs: Developed from data obtained from fields all over the world and generally applicable for all oil types. Covers a wide range of pressures, temperatures, and oil properties.

Al-Marhoun: Developed for Saudi Arabian oils. Valid for all types of gas-oil mixtures ranging from 14 - 45 °American Petroleum Institute (API) gravity.

De Ghetto et al: Developed for heavy oils ($10 < \text{°API} < 22.3$) and extra-heavy oils ($\text{°API} < 10$) from the Mediterranean Basin, Africa, and the Persian Gulf. Requires separator pressure and temperature.

Glaso: Developed for North Sea oils and it is suitable for oil mixtures ranging from 22-48 °API. Valid for all types of oil and gas mixtures after correcting for non-hydrocarbons in the surface gases and the paraffinicity of the oil.

Hanafy et al: Developed for Egyptian oils gathered from the Gulf of Suez, Western Desert, and Sinai regions. Independent of oil gravity and reservoir temperature. Although authors claim that the correlations are applicable to a wide range of crude oils ranging from heavy to volatile oils (14.3 – 47 °API), it appears to be more applicable for light oils.

Petrosky and Farshad: Developed for Gulf of Mexico oils gathered from offshore regions in Texas and Louisiana. Applicable for oil mixtures ranging from 16 - 45 °API. Provides improved results for the Gulf of Mexico oils compared to Standing, Vasquez and Beggs, Glaso, and Al-Marhoun correlations.

Standing: Developed for California oils. Applicable for oil mixtures ranging from 16 - 64 °API.

Velarde et al: Developed for black oils, applicable for oil mixtures ranging from 12 - 55 °API.

Constant Properties: Allows you to enter values for oil compressibility, the solution gas-oil ratio, and the oil formation volume factor at initial reservoir conditions.

Custom Table: Allows you to enter laboratory measurements for oil compressibility, the solution gas-oil ratio, and the oil formation volume factor.

Viscosity

Beggs and Robinson: Developed from data obtained from fields all over the world and generally applicable for all oil types. Covers a wide range of pressures, temperatures, and oil properties.

De Ghetto et al: Developed for heavy oils ($10 < \text{°API} < 22.3$) and extra-heavy oils ($\text{°API} < 10$) from the Mediterranean Basin, Africa, and the Persian Gulf. Requires separator pressure and temperature.

Hanafy et al: Developed for Egyptian oils gathered from the Gulf of Suez, Western Desert, and Sinai regions. Independent of oil gravity and reservoir temperature. Although the authors claim that the correlations are applicable to a wide range of crude oils ranging from heavy to volatile oils ($14.3 - 47 \text{°API}$), it appears to be more applicable for light oils.

Khan et al: Developed using oil samples collected from Saudi Arabian reservoirs. Gives more accurate predictions for Saudi Arabian oils, compared to the Beggs and Robinson.

Ng and Egbogah: This correlation contains two methods for calculating dead oil viscosity using a modified Beggs and Robinson viscosity correlation and a correlation that uses the pour-point temperature, which is the lowest temperature at which the oil is observed to flow when cooled. The purpose of introducing the pour-point temperature into the correlation is to reflect the chemical composition of crude oil into the viscosity correlation. To obtain the viscosity for live oils, the dead oil correlations are used with the Beggs and Robinson viscosity correlation. This correlation is applicable for oil mixtures ranging from 5 - 58 °API.

Constant Properties: Allows you to enter the value for oil viscosity at initial reservoir conditions.

Custom Table: Allows you to enter laboratory measurements for oil viscosity.

Vasquez and Beggs (generally applicable)

Vasquez and Beggs is a generally applicable correlation containing equations for the solution gas oil ratio, oil formation volume factor, and oil compressibility. The correlation was developed from data obtained from over 600 laboratory pressure volume temperature (PVT) analyses gathered from fields all over the world. The data used in the development of the correlation covers a wide range of pressures, temperatures, and oil properties. The correlation divides the data into two groups: one for oil gravity over 30°API and one at and below 30°API.

Note: This is the default setting for oil correlations.

Bubble point pressure

$$p_{bp} = \left(\frac{R_{so}}{C_1 G e^{C_3 \left(\frac{\gamma_o}{T + 460} \right)}} \right)^{\frac{1}{C_2}}$$

Coefficient	$\gamma_o \leq 30^\circ$ API	$\gamma_o > 30^\circ$ API
C_1	0.0362	0.0178
C_2	1.0937	1.1870
C_3	25.7240	23.9310

Solution gas oil ratio

$$R_{so} = C_1 G p^{C_2} \cdot e^{C_3 \left(\frac{\gamma_o}{T + 460} \right)}$$

Oil formation volume factor (FVF) – saturated

$$B_o = 1 + A_1 R_{so} + A_2 (T - 60) \left(\frac{\gamma_o}{G} \right) + A_3 R_{so} (T - 60) \left(\frac{\gamma_o}{G} \right)$$

Coefficient	$\gamma_o \leq 30^\circ$ API	$\gamma_o > 30^\circ$ API
A_1	4.677E-04	4.670E-04
A_2	1.751E-05	1.100E-05
A_3	-1.811E-08	1.337E-09

Oil FVF – undersaturated

$$B_o = B_{ob} \cdot e^{c_o (p_{bp} - p)}$$

where B_{ob} is the formation volume factor at the bubble point pressure

Compressibility – saturated

$$c_o = \frac{-1433 + 5 R_{sob} + 17.2T - 1180G + 12.61 \gamma_o}{10^5 p} + \frac{\frac{B_g}{B_o} \cdot \frac{dR_{so}}{dp}}{5.615}$$

where R_{sob} is the solution gas-oil ratio at the bubble point pressure

Compressibility – undersaturated

$$c_o = \frac{-1433 + 5 R_{sob} + 17.2T - 1180G + 12.61 \gamma_o}{10^5 p}$$

Al-Marhoun (Middle East oil)

The Al-Marhoun correlation contains equations for estimating bubble point pressure, solution gas oil ratio, and oil formation volume factor for Middle East oils. 75 bottomhole fluid samples from 62 reservoirs in the Middle East were used in the development of these correlations. The author claims that the correlations should be valid for all types of gas-oil mixtures that share similar properties as those used in the derivation. According to the author, the average errors and standard deviations were lower with the Al-Marhoun correlation than with the Standing and Glaso correlations for Middle Eastern crude oils. Note that temperature is measured in Rankine.

Bubble point pressure

$$p_{bp} = -64.138910 + 0.702362 \cdot 10^{-2} \cdot x - 2.278475 \cdot 10^{-9} \cdot x^2$$

$$x = R_s^{0.722569} \cdot \gamma_g^{-1.879109} \cdot \gamma_o^{3.04659} \cdot T^{1.302347}$$

Solution gas oil ratio

$$R_s = \left(\frac{x}{\gamma_g^{-1.879109} \cdot \gamma_o^{3.04659} \cdot T^{1.302347}} \right)^{\frac{1}{0.722569}}$$

$$x = \frac{-b \pm \sqrt{b^2 - 4ac}}{2a}$$

where:

$$a = -2.278475 \cdot 10^{-9}$$

$$b = 7.02362 \cdot 10^{-3}$$

$$c = -64.13891 - p$$

Oil FVF – saturated

$$B_o = 0.574095 + 7.723532 \cdot 10^{-4} \cdot T + 2.454005 \cdot 10^{-3} \cdot y + 3.727676 \cdot 10^{-5} \cdot y^2$$

$$y = R_s^{0.501538} \cdot \gamma_g^{-0.145526} \cdot \gamma_o^{-5.220726}$$

Oil FVF – undersaturated

$$B_o = B_{ob} \cdot e^{(c_o(p_b - p))}$$

The oil compressibility used in this equation is obtained from the Vasquez and Beggs correlation.

Beggs and Robinson

Beggs and Robinson developed an empirical correlation for determining the viscosity of dead oil. The correlation originated from analyzing 460 dead oil viscosity measurements. The dataset from which the results were obtained ranged from 16°API to 58°API and 70°F to 295°F. The correlation tends to overstate the viscosity of the crude oil when dealing in temperature ranges below 100°F to 150°F.

Viscosity

$$\mu_{od} = 10^x - 1$$

where:

$$x = y T^{-1.163}$$

$$y = 10^z$$

$$z = 3.0324 - 0.02023 G$$

De Ghetto et al. (heavy and extra-heavy oils)

The De Ghetto et al. correlation contains modified PVT correlations for estimating bubble point pressure, solution gas oil ratio, oil formation volume factor (FVF), oil compressibility, and oil viscosity for heavy ($10^\circ < \text{API} < 22.3^\circ$) and extra-heavy oils ($\text{API} < 10^\circ$). The oils used for developing the correlation came from reservoir fluid samples taken from the Mediterranean Basin, Africa, and the Persian Gulf. When comparing published correlations, De Ghetto et al. decided that the Vasquez and Beggs correlation estimated the oil formation volume factor with minimal error, and therefore no further modification was needed. Note that in contrast with other correlations, the De Ghetto et al. correlation requires the pressure and temperature at the separator.

Heavy oils ($10^\circ < \text{API} < 22.3^\circ$)

Bubble point pressure

$$p_b = \left(\frac{56.434 \cdot R_s}{\gamma_g(p_{sp}) \cdot 10^{10.9267 \left(\frac{\gamma_{API}}{T+459.67} \right)}} \right)^{\frac{1}{1.2057}}$$

$$\gamma_g(p_{sp}) = \gamma_g \left(1 + 0.5912 \cdot \gamma_{API} \cdot T_{sp} \cdot \log \left(\frac{p_{sp}}{114.7} \right) \cdot 10^{-4} \right)$$

Solution gas oil ratio

$$R_s = \frac{\gamma_g (p_{sp}) \cdot p^{1.2057}}{56.434} \cdot 10^{10.9267} \cdot \left(\frac{\gamma_{API}}{T + 459.67} \right)$$

Oil FVF – saturated

$$B_o = 1 + A_1 R_s + A_2 (T - 60) \left(\frac{\gamma_{API}}{\gamma_g} \right) + A_3 R_s (T - 60) \left(\frac{\gamma_{API}}{\gamma_g} \right)$$

where:

A_1 , A_2 , and A_3 are Vasquez and Beggs constants for $API \leq 30^\circ$:

$$A_1 = 4.677 \cdot 10^{-4}$$

$$A_2 = 1.751 \cdot 10^{-5}$$

$$A_3 = -1.811 \cdot 10^{-8}$$

Oil FVF – undersaturated

$$B_o = B_{ob} \cdot e^{(c_o(p_b - p))}$$

Compressibility – saturated

$$c_o = \frac{-2841.8 + 2.9646 \cdot R_{sb} + 25.5439 \cdot T - 1230.5 \cdot \gamma_g (p_{sp}) + 41.91 \cdot \gamma_{API}}{p \cdot 10^5} + \frac{B_g}{5.6145835 \cdot B_o} \cdot \frac{dB_g}{dp}$$

Compressibility – undersaturated

$$c_o = \frac{-2841.8 + 2.9646 \cdot R_{sb} + 25.5439 \cdot T - 1230.5 \cdot \gamma_g (p_{sp}) + 41.91 \cdot \gamma_{API}}{p \cdot 10^5}$$

Viscosity – dead oil

$$\log(\mu_{od} + 1) = 2.06492 - 0.0179 \cdot \gamma_{API} - 0.70226 \cdot \log(T)$$

Viscosity – saturated

$$\mu_{os} = -0.6311 + 1.078 \cdot x - 0.003653 \cdot x^2$$

$$x = \left(0.2478 + 0.6144 \cdot 10^{-0.000845R_s}\right) \cdot \mu_{od}^{(0.4731+0.5158)}$$

$$y = 10^{-0.00081 R_s}$$

Viscosity – undersaturated

$$\mu_o = 0.9886 \cdot \mu_{os} + 0.002763(p - p_b) (-0.01153 \cdot \mu_{os}^{1.7933} + 0.0316 \cdot 0.0316 \cdot \mu_{os}^{1.5939})$$

Extra heavy oils (API < 10°)

Bubble point pressure

$$p_b = \left(\frac{R_s}{\gamma_g}\right)^{\frac{1}{1.1128}} \cdot \frac{10.7025}{10^{(0.0169 \cdot \gamma_{API} - 0.00156T)}}$$

Solution gas oil ratio

$$R_s = \gamma_g \left(\frac{p}{10.7025} \cdot 10^{(0.0169 \cdot \gamma_{API} - 0.00156T)}\right)^{1.1128}$$

Oil FVF – saturated

$$B_o = 1 + A_1 R_s + A_2 (T - 60) \left(\frac{\gamma_{API}}{\gamma_g}\right) + A_3 R_s (T - 60) \left(\frac{\gamma_{API}}{\gamma_g}\right)$$

where:

A_1 , A_2 , and A_3 are Vasquez and Beggs constants for API ≤ 30°:

$$A_1 = 4.677 \cdot 10^{-4}$$

$$A_2 = 1.751 \cdot 10^{-5}$$

$$A_3 = -1.811 \cdot 10^{-8}$$

Oil FVF – undersaturated

$$B_o = B_{ob} \cdot e^{(c_o(p_b - p))}$$

Compressibility – saturated

$$c_o = \frac{-889.6 + 3.1374 \cdot R_{sb} + 20 \cdot T - 627.3 \cdot \gamma_g(p_{sp}) - 81.4476 \cdot \gamma_{API}}{p \cdot 10^5} + \frac{B_g}{5.6145835 \cdot B_o} \cdot \frac{dB_g}{dp}$$

Compressibility – undersaturated

$$c_o = \frac{-889.6 + 3.1374 \cdot R_{sb} + 20 \cdot T - 627.3 \cdot \gamma_g(p_{sp}) - 81.4476 \cdot \gamma_{API}}{p \cdot 10^5}$$

Viscosity – dead oil

$$\log(\mu_{od} + 1) = 1.090296 - 0.012619 \cdot \gamma_{API} - 0.61748 \cdot \log(T)$$

Viscosity – saturated

$$\mu_{os} = 2.3945 + 0.8927 \cdot x + 0.001567 \cdot x^2$$

$$x = \left(-0.0335 + 1.0785 \cdot 10^{-0.000845 R_s} \right) \cdot \mu_{od}^{(0.5798 + 0.3432y)}$$

$$y = 10^{-0.00081 R_s}$$

Viscosity – undersaturated

$$\mu_o = \mu_{os} - \left(1 - \frac{p}{p_b} \right) \left(\frac{10^{-2.19} \cdot \mu_{od}^{1.055} \cdot p_b^{0.3132}}{10^{0.0099 \gamma_o}} \right)$$

Glaso (North Sea oil)

The Glaso correlation contains equations for estimating the bubble point pressure, solution gas oil ratio, and the oil formation volume factor for North Sea oils. The author claims that the correlation should be valid for all types of oil and gas mixtures after correcting for non-hydrocarbons in the surface gases and the paraffinicity of the oil. According to the author, the correlation more accurately predicts the oil properties of North Sea oils than the Standing correlation.

Bubble point pressure

$$\log(p_b) = 1.7669 + 1.7447 \cdot \log(x) - 0.30218 \cdot \log(x)^2$$

$$p_b = 10^{\log(p_b)}$$

$$x = \left(\frac{R_s}{\gamma_g} \right)^{0.816} \frac{T^{0.172}}{\gamma_{API}^{0.989}}$$

Solution gas oil ratio

$$R_s = \left(\frac{x \cdot \gamma_{API}^{0.989}}{T^{0.172}} \right)^{\frac{1}{0.816}} \gamma_g$$

$$\log(x) = \frac{-b \pm \sqrt{b^2 - 4ac}}{2a}$$

where:

$$x = 10^{\log(x)}$$

$$a = -0.30218$$

$$b = 1.7447$$

$$c = 1.7669 - \log(p)$$

Oil FVF – saturated

$$\log(B_o - 1) = -6.58511 + 2.91329 \cdot \log(y) - 0.27683 \cdot \log(y)^2$$

$$y = R_s \left(\frac{\gamma_g}{\gamma_o} \right)^{0.526} + 0.968 T$$

Oil FVF – undersaturated

$$B_o = B_{ob} \cdot e^{(c_o(p_b - p))}$$

Note: The oil compressibility used in this equation is obtained from the Vasquez and Beggs correlation.

Hanafy et al. (Egyptian oil)

The Hanafy et al. correlation contains equations for estimating the bubble point pressure, solution gas oil ratio, oil formation volume factor, oil compressibility, oil viscosity, and oil density for Egyptian oils. The compressibility correlation assumes constant compressibility after the bubble point. This correlation is independent of oil gravity and reservoir temperature. The pressure volume temperature (PVT) data used in the derivation of the correlations was gathered from the Gulf of Suez, Western Desert, and Sinai regions. The authors claim that the correlations can be used to estimate oil properties for a wide range of crude oils ranging from heavy to volatile oils. However, our observations are that it appears to be closer to the properties of light oils.

Bubble point pressure

$$p_b = 3.205 \cdot R_s + 157.27$$

Solution gas oil ratio

$$R_s = -49.069 + 0.312p$$

$R_s = 0$ when $p \leq 157.28$

Oil FVF – saturated

$$B_o = 0.0006 \cdot R_s + 1.079$$

Oil FVF – undersaturated

$$B_o = B_{ob} e^{(c_o(p_b - p))}$$

Density – saturated

$$\rho_o = \left(2.366 - \left(\frac{1.358}{B_o} \right) \right)^{-1}$$

Density – undersaturated

$$\rho_o = \rho_{ob} e^{(c_o(p - p_b))}$$

Compressibility – saturated

$$c_o = e^{\left(\frac{2.582}{\rho_o} - 0.99 \right)} \cdot 10^{-6} + \frac{B_g}{5.6145835 \cdot B_o} \cdot \frac{dR_s}{dp}$$

Compressibility – undersaturated

$$c_o = e^{\left(\left(\frac{2.582}{\rho_{ob}} \right) - 0.99 \right)} \cdot 10^{-6}$$

Oil viscosity

$$\mu_o = e^{(7.296 \cdot \rho_0^3 - 3.095)}$$

Khan et al. (Saudi Arabian oil)

The Khan et al. correlation contains equations for estimating oil viscosity at, above, and below the bubble point for Saudi Arabian oils. The study used data from 75 sandface samples, which were taken from 62 Saudi Arabian reservoirs. The authors claim that this correlation gives the most accurate predictions for Saudi Arabian crude oils, as compared to the Beggs and Robinson, Beal, and Chew and Connally correlations.

Oil viscosity

$p = p_b$

$$\mu_{ob} = \frac{0.09 \sqrt{\gamma_g}}{\sqrt[3]{R_s \cdot \theta_r^{4.5} (1 - \gamma_0)^3}}$$

where:

$$\theta_r = \frac{T + 459.67}{459.67} = \textit{relative temperature}$$

$p > p_b$

$$\mu_o = \mu_{ob} e^{(9.6 \cdot 10^{-5} (p - p_b))}$$

$p < p_b$

$$\mu_{os} = \mu_{ob} \left(\frac{p}{p_b} \right)^{-0.14} e^{(-2.5 \cdot 10^{-4} (p - p_b))}$$

Ng and Egbogah

The Ng and Egbogah correlation contains two methods for calculating dead oil viscosity using a modified Beggs and Robinson viscosity correlation and a correlation that uses the pour point temperature. Pour point temperature is the lowest temperature at which the oil is observed to flow when cooled and examined under conditions prescribed in ASTM D97. The purpose of introducing the pour point temperature into the correlation is to reflect the chemical composition of crude oil into the viscosity correlation. To obtain the viscosity for live oils, the dead oil correlations are used with the Beggs and Robinson viscosity correlation. The data used to derive the correlations was taken from the Reservoir Fluids Analysis Laboratory of AGAT Engineering Ltd., using a total of 394 oil systems.

Dead oil

$$\log(\mu_{od} + 1) = -1.7095 - 0.0087917 \cdot T_{pp} + 2.7523 \cdot \gamma_o + (-1.2943 + 0.0033214 \cdot T_{pp} + 0.9581957 \cdot \gamma_o) \cdot \log(T - T_{pp})$$

$$-50^\circ\text{C} < T_{pp} < 15^\circ\text{C}$$

Live oil – saturated

$$\mu_{os} = x \cdot \mu_{od}^y$$

$$x = 10.715 (R_s + 100)^{-0.515}$$

$$y = 5.44 (R_s + 150)^{-0.338}$$

where μ_{od} is defined using the modified Beggs and Robinson correlation.

$$\log(\mu_{od} + 1) = 1.8653 - 0.025086 \cdot \gamma_o - 0.5644 \cdot \log(T)$$

Live oil - undersaturated

$$\mu_o = \mu_{ob} \left(\frac{p}{p_b} \right)^x$$

$$x = 2.6p^{1.187} e^{(-11.513 - 8.98 \cdot 10^{-5}p)}$$

Petrosky and Farshad (Gulf of Mexico)

The Petrosky and Farshad correlation contains equations for estimating the bubble point pressure, solution gas oil ratio, oil formation volume factor, and oil compressibility for Gulf of Mexico oils. The correlation was developed using fluid samples taken from offshore regions in Texas and Louisiana (Galveston Island eastward through Main Pass). The authors claim that these correlations provide improved results over other correlations for the Gulf of Mexico, including those published by Standing, Vasquez and Beggs, Glaso, and Al-Marhoun.

Bubble point pressure

$$p_b = 112.727 \left(\frac{R_s^{0.5774}}{\gamma_g^{0.8439}} \cdot 10^x - 12.34 \right)$$

where:

$$x = 4.561 \cdot 10^{-5} \cdot T^{1.3911} - 7.916 \cdot 10^{-4} \cdot \gamma_{API}^{1.541}$$

Solution gas oil ratio

$$R_s = \left(\left(\frac{p}{112.727} + 12.34 \right) \cdot \gamma_g^{0.8439} \cdot 10^x \right)^{1.73184}$$

where:

$$x = 7.916 \cdot 10^{-4} \cdot \gamma_{API}^{1.541} - 4.561 \cdot 10^{-5} \cdot T^{1.3911}$$

Oil FVF – saturated

$$B_o = 1.0113 + 7.2046 \cdot 10^{-5} \cdot \left(R_s^{0.3738} \left(\frac{\gamma_g^{0.2914}}{\gamma_o^{0.6265}} \right) + 0.24626 \cdot T^{0.5371} \right)^{3.0936}$$

Oil FVF – undersaturated

$$B_o = B_{ob} e^{(c_o (p_b - p))}$$

Compressibility – saturated

$$c_o = 1.705 \cdot 10^{-7} \cdot R_{sb}^{0.69357} \cdot \gamma_g^{0.1885} \cdot \gamma_{API}^{0.3272} \cdot T^{0.6729} \cdot p^{-0.5906} + \frac{B_g}{5.6145835 \cdot B_o} \cdot \frac{dR_s}{dp}$$

Compressibility – undersaturated

$$c_o = 1.705 \cdot 10^{-7} \cdot R_{sb}^{0.69357} \cdot \gamma_g^{0.1885} \cdot \gamma_{API}^{0.3272} \cdot T^{0.6729} \cdot p^{-0.5906}$$

where $2.464 \cdot 10^{-5} < c_o < 3.507 \cdot 10^{-5}$

Standing (California oil)

The Standing correlation contains equations for estimating the bubble point pressure, solution gas oil ratio, and the oil formation volume factor for California oils. There were 105 experimentally determined data points on 22 different oil-gas mixtures from California used in the development of the correlations.

Bubble point pressure

$$p_b = 18.2 \left(\left(\frac{R_s}{G} \right)^{0.83} \cdot \frac{10^{0.00091 T}}{10^{0.0125 \gamma_{API}} - 1.4} \right)$$

Solution gas oil ratio

$$R_s = \left(\left(\frac{p}{18.2} + 1.4 \right) \cdot \frac{10^{0.0125 \gamma_{API}}}{10^{0.00091 T}} \right)^{\frac{1}{0.83}} \cdot G$$

Oil FVF – saturated

$$B_o = 0.972 + 1.47 \cdot 10^{-4} \left(R_s \left(\frac{G}{\gamma_o} \right)^{0.5} + 1.25 \cdot T \right)^{1.175}$$

Oil FVF – undersaturated

$$B_o = B_{ob} e^{(c_o (p_b - p))}$$

The oil compressibility used in this equation is obtained from the Vasquez and Beggs correlation.

Velarde et al. (reduced variable approach)

The Velarde et al. correlation contains equations for estimating the bubble point pressure, solution gas oil ratio, and the oil formation volume factor. The bubble point pressure correlation was based on 728 datasets. The solution gas oil ratio was based on 2097 datasets.

Bubble point pressure

$$p_b = 1091.47 \left(R_{sb}^{0.081465} \cdot \gamma_g^{-0.161488} \cdot 10^x - 0.740152 \right)^{5.354891}$$

$$x = 0.013098 \cdot T^{0.282372} - 8.2 \cdot 10^{-6} \cdot \gamma_{API}^{2.176124}$$

Solution gas oil ratio (p = p_b)

$$R_s = \left(\frac{\left(\frac{p_b}{1091.47} \right)^{\frac{1}{5.354891}} + 0.740152}{\gamma_g^{-0.161488} \cdot 10^x} \right)^{\frac{1}{0.081465}}$$

Solution gas oil ratio ($p < p_b$)

$$R_{sr} = a_1 p_r^{a_2} + (1 - a_1) p_r^{a_3}$$

$$R_{sr} = \frac{R_s}{R_{sb}}$$

$$p_r = \frac{p}{p_b}$$

$$a_1 = A_o \gamma_g^{A_1} \gamma_{API}^{A_2} T^{A_3} p_b^{A_4}$$

$$a_2 = B_o \gamma_g^{B_1} \gamma_{API}^{B_2} T^{B_3} p_b^{B_4}$$

$$a_3 = C_o \gamma_g^{C_1} \gamma_{API}^{C_2} T^{C_3} p_b^{C_4}$$

Note: All pressures in the above equations are measured in p_{sig} .

Reduced variable approach

The reduced solution gas oil ratio is defined as the solution gas oil ratio divided by the solution gas oil ratio at the bubble point. The reduced pressure is defined as the pressure divided by the bubble point pressure. Using the above relationship, the reduced solution gas oil ratio and the solution gas oil ratio at the bubble point are used to solve for the actual solution gas oil ratio at any pressure below the bubble point.

A Coefficients	B Coefficients	C Coefficients
$A_0 = 9.73 \times 10^{-7}$	$B_0 = 0.022339$	$C_0 = 0.725167$
$A_1 = 1.672608$	$B_1 = 1.004750$	$C_1 = 1.485480$
$A_2 = 0.929870$	$B_2 = 0.337711$	$C_2 = 0.164741$
$A_3 = 0.247235$	$B_3 = 0.132795$	$C_3 = 0.091330$

A Coefficients	B Coefficients	C Coefficients
$A_4 = 1.056052$	$B_4 = 0.302065$	$C_4 = 0.047094$

Oil FVF – saturated

$$B_o = \frac{\rho_{st} + 0.01357 \cdot R_s \gamma_g}{\rho_{oR}}$$

$$\rho_{oR} = \rho_{bs} - \left(0.00302 + 1.505 \rho_{bs}^{-0.951}\right) (T - 60)^{0.938} + \left(0.0233 \left(10^{-0.0161 \cdot \rho_{bs}}\right)\right) (T - 60)^{0.475}$$

$$\rho_{bs} = \rho_{po} + \left(0.167 + 16.181 \left(10^{-0.0425 \cdot \rho_{po}}\right)\right) \left(\frac{\rho}{1000}\right) - 0.01 \left(0.299 + 263 \left(10^{-0.0603 \cdot \rho_{po}}\right)\right) \left(\frac{\rho}{1000}\right)^2$$

In the above equation, an initial estimate of ρ_{po} is calculated as follows:

$$\rho_{po} = 52.8 - 0.01 R_{sb}$$

After this initial value is known, ρ_{po} is calculated through a 10-step iteration process using the following equations. The values from the ninth and tenth iterations are averaged to yield a final value for ρ_{po} .

$$\rho_a = -49.893 + 85.0149 \cdot \gamma_g - 3.70373 \cdot \gamma_g \rho_{po} + 0.047981 \cdot \gamma_g \rho_{po}^2 + 2.98914 \cdot \rho_{po} - 0.035688 \cdot \rho_{po}^2$$

$$\rho_{po} = \frac{R_s \gamma_g + 4600 \cdot \gamma_o}{73.71 + \frac{R_s \gamma_g}{\rho_a}}$$

Oil FVF – undersaturated

$$B_o = B_{ob} e^{(c_o (p_b - p))}$$

The oil compressibility used in this equation is obtained from the Vasquez and Beggs correlation. All pressures in the above equations are measured in psia.

Correlation limits

Variable	Rs Correlation Limits	pbp Correlation Limits
T	70 - 307 °F	74 - 327 °F
p _b	106 - 5312 psia	70 - 6700 psia
B _{ob}	1.040 - 2.082 bbl/stb	N/A
R _s or R _{sb}	102 - 1808 scf/stb	10 - 1870 scf/stb
Y _g	0.561 - 1.101	0.556 - 1.367
Y _o	11.6 - 53.4 °API	12 - 55 °API

Oil correlation limits

Correlation	T (°F)	p (psia)	p _b (psia)	B _o (Rbbl/st-bbl)	R _s (scf/st-bbl)
Al-Marhoun (Middle East Oil)	75 - 240		107 - 4315	1.02 - 2.42	24 - 1901
De Ghetto et al. (Heavy and Extra-Heavy Oils)	131.4 - 250.7	1038.49 - 7411.54	208.86 - 4021.96	1.057 - 1.362	17.21 - 640.25
Glaso (North Sea Oil)	80 - 280	400 - 4000	150 - 7127	1.087 - 2.588	90 - 2637
Hanafy et al. (Egyptian Oil)	107 - 327		36 - 5003	1.032 - 4.35	7 - 4272
Khan et al. (Saudi Arabian Oil)	75 - 240	14.7 - 5015	107 - 4315		24 - 1901
Ng and Egbogah	70 - 295				
Petrosky and Farshad (Gulf of Mexico Oil)	114 - 288	1700 - 10692	1574 - 6523	1.1178 - 1.6229	217 - 1406
Standing (California Oil)	60 - 260 (p _{bp}) 100 - 260 (B _o)		200 - 6000	1.024 - 2.15	20 - 1425
Vasquez and Beggs (Generally Applicable)		140.7 - 9514.7			
Velarde et al. (Reduced Variable Approach)	See Velarde		See Velarde	See Velarde et al	See Velarde et



Correlation	T (°F)	p (psia)	p _b (psia)	B _o (Rbbl/st-bbl)	R _s (scf/st-bbl)
	<u>et al</u>		<u>et al</u>		<u>al</u>

Correlation	g _g	Y _o (°API)	μ _o (cp)	μ _{os} (cp)	μ _{od} (cp)
Al-Marhoun (Middle East Oil)	0.752 - 1.367	14.3 - 44.6			
De Ghetto et al. (Heavy and Extra-Heavy Oils)	0.623 - 1.517	6 - 22.3	2.4 - 354.6	2.1 - 295.9	7.7 - 1386.9
Glaso (North Sea Oil)	0.65 - 1.276	22.3 - 48.1	0.119 - 106.6		
Hanafy et al. (Egyptian Oil)	0.752 - 1.367	17.8 - 47.7	0.13 - 71		
Khan et al. (Saudi Arabian Oil)		14.3 - 44.6		0.13 - 77.4	
Ng and Egbogah		5 - 58			
Petrosky and Farshad (Gulf of Mexico Oil)	0.5781 - 0.8519	16.3 - 45			
Standing (California Oil)	0.5 - 1.5	16.5 - 63.8			
Vasquez and Beggs (Generally Applicable)	0.511 - 1.351	15.3 - 59.5			
Velarde et al. (Reduced Variable Approach)	See <u>Velarde et al</u>	See <u>Velarde et al</u>			

Correlation	T _{sp} (°F)	p _{sp} (psia)
De Ghetto et al. (Heavy and Extra-Heavy Oils)	59 - 177.8	14.5 - 752.2

Correlation	ρ _o (g/cm ³)	ρ _{ob} (g/cm ³)
Hanafy et al. (Egyptian Oils)	0.648 - 1.071	0.428 - 0.939

Pressure loss calculations

In order to have flow in a pipe system, a pressure difference is needed, as fluids flow from a high pressure point to a low pressure point. You can identify three components that define this pressure difference:

1. Hydrostatic pressure loss
2. Frictional pressure loss
3. Kinetic pressure loss

For most applications, kinetic losses are minimal and can be ignored. Thus, the equation that describes the overall pressure losses can be expressed as the sum of two terms:

$$\Delta P_T = \Delta P_{HH} + \Delta P_f$$

Note: The phrases "pressure loss," "pressure drop," and "pressure difference" can be used interchangeably.

In upward (or "uphill" in the context of pipelines) flow, fluids must overcome the back-pressure exerted by the effective column of fluid acting against the direction of flow. Fluids must also overcome friction losses due to the interaction of the fluid with the pipe wall.

In downward (or "downhill" in the context of pipelines) flow, friction effects act against the direction of flow, but in this case, the effective hydrostatic column helps the fluid to overcome such friction losses.

Hydrostatic pressure losses are a function of the density of the fluid in the pipe. Frictional losses depend on the fluid properties and flowing conditions within the pipe.

There are a number of calculation methods used to account for hydrostatic and frictional fluid losses under a variety of flow conditions. The correlations that are included in Harmony™ are as follows:

Single-phase flow (internally used when single-phase flow is found):

- Fanning gas
- Fanning liquid

Multiphase flow:

- Beggs & Brill
- Gray

- Hagedorn & Brown
- Petalas and Aziz

Single-phase flow

Single-phase flow pressure calculations include the density, friction component, hydrostatic component, and flow correlations.

Density

Density (ρ) is used in hydrostatic pressure difference calculations. The method for calculating ρ depends on whether flow is compressible or incompressible (multiphase or single-phase). It follows that:

- For a single-phase liquid, calculating the density is easy, and ρ is simply the liquid density.
- For a single-phase gas, ρ varies with pressure (since gas is compressible), and the calculation must be done sequentially, in small steps, to allow the density to vary with pressure.

Friction component

During pipe flows, friction results from the resistance of the fluid to movement. Friction can be thought of as energy that is “lost” or “dissipated” (transformed into non-useful thermal energy) in the system. In single-phase flow scenarios, the frictional component can be found by the general Fanning equation:

$$\Delta P_f = \frac{2f\rho v^2 L}{144g_c D}$$

This correlation can either be used for single-phase gas or for single-phase liquid pipe flows.

Osborne Reynolds (1842–1912) experimentally investigated the relationship between the pressure drop and flow rate in a pipe. He found that at low rates, the pressure drop was directly proportional to the flow rate. He also observed that as he increased the flow rate, the measured data started to behave erratically. It was only when he used extremely high rates that he was able to reproduce his experimental data again.

After introducing a dye into the flow, Reynolds observed that at low rates of flow, the dye described a smooth flow path (linear) along the pipe. After increasing the flow rate, the dye presented perturbations, and if the rate was increased even further, the dye fluctuated erratically throughout the

pipe. He named the smooth (stable) flow 'laminar flow regime', and the disturbed (unstable) flow 'turbulent flow regime'. Reynolds proposed to make use of the dimensionless ratio of inertia to viscous forces (now named after him) as an indication of the transition from flow regimes:

$$Re = \frac{\rho v^2}{\mu v / D}$$

In field units, the Reynolds number can be rewritten as:

$$Re = \frac{1488 \rho v D}{\mu}$$

Considering the interaction of the fluid with the pipe wall, the friction factor results from the analysis (momentum flux) of the wall shear stress, and the kinetic energy per unit volume due to the movement of the fluid inside the pipe:

$$f = \frac{2\tau_w}{\rho v^2}$$

In other words, the friction factor depends on the fluid properties and flowing conditions in the system.

Blasius was the first to present a correlation between the Reynolds number and the friction factor for a very limited range of applications.

Nikuradse experimentally identified a relationship between the flow regimes (using the Reynolds number), the pipe roughness, and friction. Nikuradse found that pressure losses were higher for rougher pipes than for smooth ones due to frictional effects. He also observed that for small Reynolds numbers (in the laminar flow regime), the friction factor was the same for rough and smooth pipes. Several authors have since tried to relate the Reynolds number and the absolute roughness of the pipe to estimate the friction factor.


In Harmony, the Fanning friction factor for Reynolds numbers in the laminar flow regime ($Re \leq 2000$) is found by:

$$f = \frac{16}{Re}$$

In the turbulent flow regime ($Re \geq 4000$), the friction factor is obtained from the Chen (1979) equation.



Fanning Friction Factor - Chen

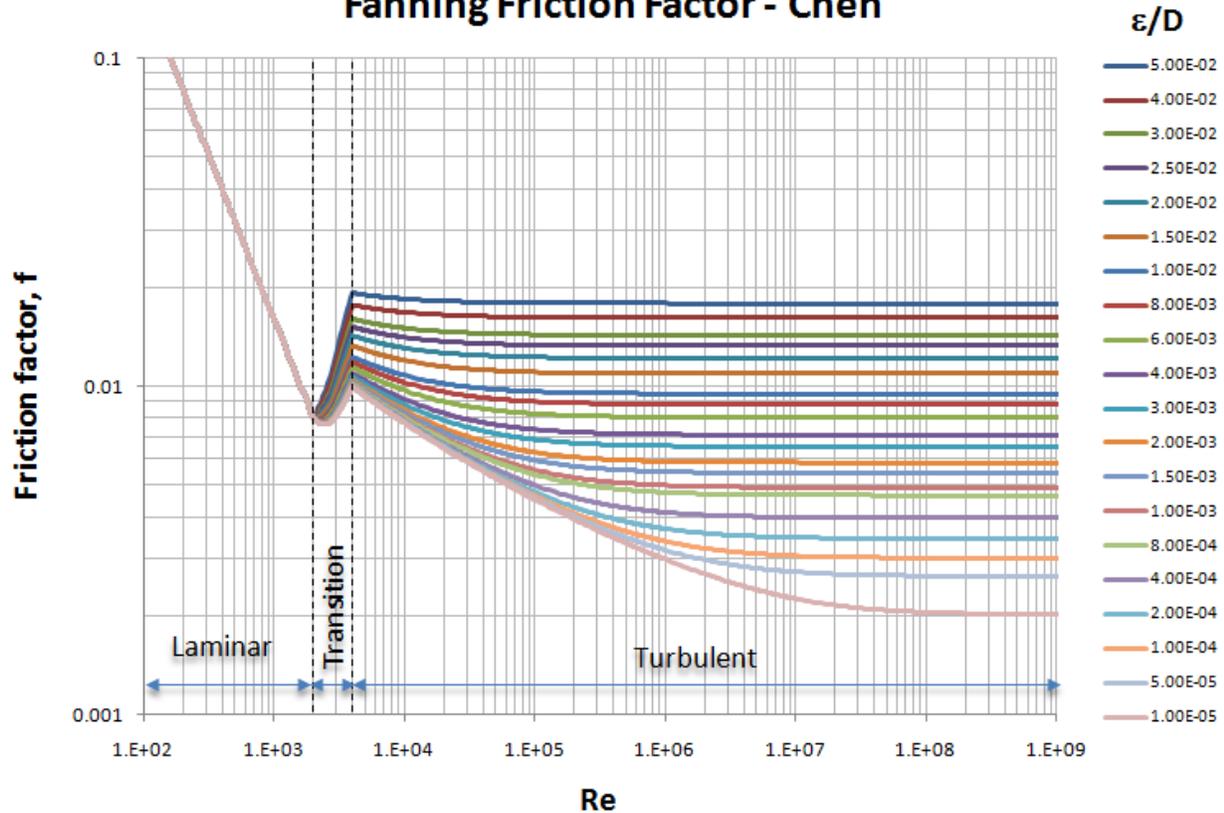

$$\frac{1}{\sqrt{f}} = -4.0 \log_{10} \left[0.2698 \left(\frac{\epsilon}{D} \right) - \frac{5.0452}{Re} \log_{10} \left\{ 0.3539 \left(\frac{\epsilon}{D} \right)^{1.1098} + \frac{5.8506}{Re^{0.8981}} \right\} \right]$$

The friction factor in the transition from laminar to turbulent flow (2000 < Re < 4000) is approximated using the following expression:


$$f = \frac{f_{Lam}(4000 - Re) + f_{Turb}(Re - 2000)}{2000}$$

Hydrostatic component

This component is of importance only when there are differences in elevation from the inlet end to the outlet end of a pipe segment. (In horizontal pipes this component is zero.) The hydrostatic pressure difference (ΔP_{HH}) can be applied to all correlations simply by adding it to the friction component. The hydrostatic pressure drop (ΔP_{HH}) is defined for a vertical pipe as follows:

$$\Delta P_{HH} = \frac{\rho g}{144g_c} \cdot h$$

A generalized form accounting for pipe inclination (using the angle with respect to the horizontal) can be written as:

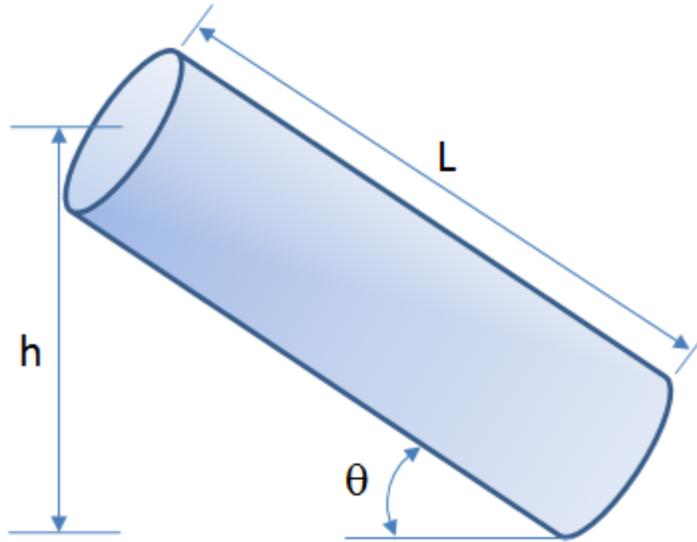

$$\Delta P_{HH} = \frac{\rho g}{144g_c} L \cdot \sin(\theta)$$

Note: To use the angle with respect to the vertical (for example, in well deviation surveys), change the trigonometric function to cosine.

For liquids, the density (ρ) is constant, and the above equation is easily evaluated.

For gases, density varies with pressure. Therefore, to evaluate the hydrostatic pressure loss or gain, the pipe (or wellbore) is subdivided into a sufficient number of segments, such that the density in each segment can be assumed to be constant. Note that this is equivalent to a Multi-Step Cullender and Smith calculation.

Flow correlations

Many single-phase correlations exist that were derived for different operating conditions or from laboratory experiments. Generally speaking, these only account for the friction component (that is, they are applicable to horizontal flow). Typical examples are:

- Fanning gas (also known as Multi-Step Cullender and Smith when applied to well-bores)
- Fanning liquid

In Harmony™, for cases that involve a single phase, the Gray, Hagedorn and Brown, Beggs and Brill and Petalas and Aziz methods revert to the Fanning single-phase correlations. For example, if the Gray correlation was selected, but there was only gas in the system, the Fanning gas correlation is used.

Note: Single-phase correlations can be used for vertical or inclined flow provided that the hydrostatic pressure drop is accounted for in addition to the friction component. Even though a particular correlation may have been developed for flow in a horizontal pipe, incorporation of the hydrostatic pressure drop allows the correlation to be used for flow in a vertical pipe. This adaptation is rigorous, and has been implemented into all of the correlations used in Harmony™. Nevertheless, for identification purposes, the correlation's name has been left unchanged.

Multiphase flow

Multiphase pressure loss calculations parallel single-phase pressure loss calculations. Essentially, each multiphase correlation makes its own specific modifications to the hydrostatic pressure difference and the friction pressure loss calculations, in order to make them applicable to multiphase situations.

The presence of multiple phases greatly complicates pressure drop calculations. This is due to the fact that the properties of each fluid present must be taken into account. Also, the interactions between each phase must be considered. Mixture properties must be used, and therefore the gas and liquid in-situ volume fractions throughout the pipe need to be determined. In general, multiphase correlations are essentially two-phase, and not three-phase. Accordingly, the oil and water phases are combined, and treated as a pseudo single-liquid phase, while gas is considered a separate phase.

The hydrostatic pressure difference calculation is modified by defining a mixture density. This is determined by a calculation of in-situ liquid holdup (amount of liquid in the pipe section). Some correlations determine holdup based on defined flow patterns.

The friction pressure loss is modified in several ways by adjusting the friction factor (f), the density (ρ), and velocity (v) to account for multiphase mixture properties.

The multiphase pressure loss correlations in Harmony™ are based on the Fanning friction pressure loss equation. They can be grouped as follows:

Do not account for flow patterns:

- **Gray** — Developed using data from gas and condensate wells.
- **Hagedorn and Brown** — Derived using a test well running different oils and air

Consider flow patterns:

- **Beggs and Brill** — Correlation derived from experimental data for vertical, horizontal, inclined uphill, and downhill flow of gas-water mixtures
- **Petalas and Aziz** — Mechanistic model combined with empirical correlations. This multi-purpose correlation is applicable for all pipe geometries, inclinations, and fluid properties.

These models can be used for gas-liquid multiphase flow, single-phase gas, or single-phase liquid, because in single-phase mode, they revert back to the Fanning equation, which is equally applicable to either gas or liquid.

Note: The Gray and Hagedorn and Brown correlations were derived for vertical wells and may not apply to horizontal pipes.

Flow fluid properties

Superficial Velocities

The superficial velocity of each phase is defined as the volumetric flow rate of the phase divided by the cross-sectional area of the pipe (as though that phase alone was flowing through the pipe). Therefore:

$$v_{sL} = \frac{Q_L}{\frac{\pi}{4} \cdot D^2}$$

$$v_{sG} = \frac{Q_G \cdot B_G}{\frac{\pi}{4} \cdot D^2}$$

Since the liquid phase accounts for both oil and water:

$$Q_L = Q_O B_O + (Q_W - Q_{WC} Q_G) B_W$$

and the gas phase accounts for the solution gas going in and out of the oil as a function of pressure:

$$Q_G = Q_G - Q_O R_S$$

the superficial velocities can be rewritten as:

$$v_{sL} = \frac{Q_o \cdot B_o + (Q_w - Q_{wc} - Q_G) B_w}{\frac{\pi}{4} \cdot D^2}$$

$$v_{sG} = \frac{(Q_G - Q_o R_s) B_g}{\frac{\pi}{4} \cdot D^2}$$

The oil, water, and gas formation volume factors (B_o , B_w , and B_g) are used to convert the flow rates from standard (or stock tank) conditions to the prevailing pressure and temperature conditions in the pipe.

Since the actual cross-sectional area occupied by each phase is less than the cross-sectional area of the entire pipe, the superficial velocity is always less than the true in-situ velocity of each phase.


Mixture velocity

Mixture velocity is another parameter that is often used in multiphase flow correlations. The mixture velocity is given by:

$$V_m = v_{sL} + v_{sG}$$

Slippage and the liquid holdup effect

When two or more phases are present in a pipe, they tend to flow at different in-situ velocities. These in-situ velocities depend on the density and viscosity of each phase. Typically the phase that is less dense flows faster than the other. This causes a "slip" effect between the phases. As a consequence, the in-situ volume fractions of each phase (under flowing conditions) differ from the input volume fractions of the pipe.

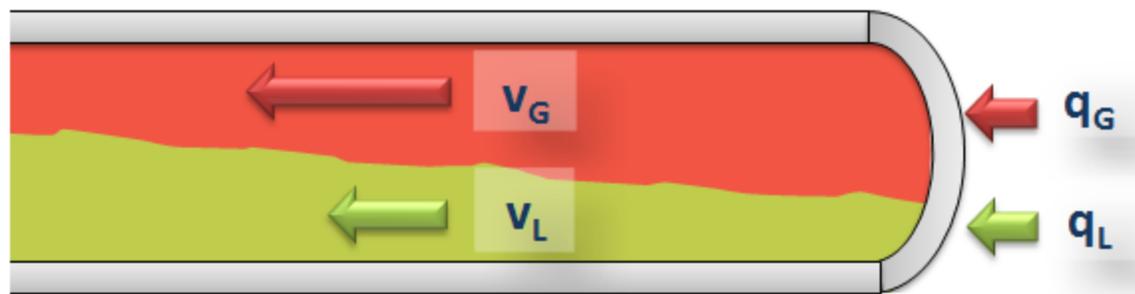

If the slippage condition is omitted, the in-situ volume fraction of each phase is equal to the input volume fraction.

In-situ volume fraction (liquid holdup with slip)

The in-situ volume fraction, E_L (or H_L), is often the value that is estimated by multiphase correlations. Because of slippage between phases, the liquid holdup (E_L) can be significantly different from the input liquid fraction (C_L). In other words, the liquid slip holdup (E_L) is the fraction of the pipe that is filled with liquid when the phases are flowing at different velocities. It can be defined as follows:

$$E_L = \frac{V_L}{V_p} = \frac{A_L}{A_p}$$

Input volume fraction (no-slip holdup)

The input volume fractions are defined as:

$$C_L = \frac{Q_L}{Q_L + Q_G B_g}$$

$$C_G = \frac{Q_G B_g}{Q_L + Q_G B_g}$$

We can also write them as a function of the superficial velocities as:

$$C_L = \frac{v_{sL}}{v_m}$$

$$C_G = \frac{v_{sG}}{v_m}$$

Note: Q_L is the liquid rate at the prevailing pressure and temperature. Similarly, $Q_G B_g$ is the gas rate at the prevailing pressure and temperature.

The input volume fractions, C_L and E_L , are known quantities, and are often used as correlating variables in empirical multiphase correlations. In the event that slip effects are neglected (gas and liquid traveling at the same velocity), the in-situ liquid fraction is equal to the input liquid fraction ($E_L = C_L$).

Actual velocities

Once the liquid holdup has been determined, the actual velocities for each phase can be determined as follows:

$$v_L = \frac{v_{sL}}{E_L}$$

$$v_G = \frac{v_{sG}}{1 - E_L}$$

Density

Density (ρ) is used in hydrostatic pressure difference calculations. The method for calculating ρ depends on whether flow is compressible or incompressible (multiphase or single-phase). For multiphase flow, the calculations become even more complicated than for single-phase flow because ρ is calculated from the in-situ mixture density, which in turn is calculated from the "liquid holdup." The liquid holdup, or in-situ liquid volume fraction, is obtained from one of the multiphase flow correlations, and depends on several parameters including the gas and liquid rates and the pipe diameter. Note that this is in contrast to the way density is calculated for friction pressure loss.

Mixture density

Mixture density is a measure of the in-situ density of the mixture, and is defined as follows:

$$\rho_m = \rho_L E_L + \rho_G E_G = \rho_L E_L + \rho_G (1 - E_L)$$

Note: Mixture density is defined in terms of in-situ volume fractions (E_L), whereas no-slip density is defined in terms of the input volume fractions (C_L).

No-slip density

"No-slip" density is the density that is calculated with the assumption that both phases are moving at the same in-situ velocity. No-slip density is therefore defined as follows:

$$\rho_{NS} = \rho_L C_L + \rho_G C_G = \rho_L C_L + \rho_G (1 - C_L)$$

Note: No-slip density is defined in terms of the input volume fractions (C_L), whereas the mixture density is defined in terms of the in-situ volume fractions (E_L).

Mixture viscosity

Mixture viscosity is a measure of the in-situ viscosity of the mixture and can be defined in several different ways. In general, unless otherwise specified, is defined as follows:

$$\mu_m = \mu_L E_L + \mu_G E_G = \mu_L E_L + \mu_G (1 - E_L)$$

Note: Mixture viscosity is defined in terms of in-situ volume fractions (E_L), whereas no-slip viscosity is defined in terms of input volume fractions (C_L).

No-slip viscosity

"No-slip" viscosity is the viscosity that is calculated with the assumption that both phases are moving at the same in-situ velocity. There are several definitions of "no-slip" viscosity. In general, unless otherwise specified, μ_{NS} is defined as follows:

$$\mu_{NS} = \mu_L C_L + \mu_G C_G = \mu_L C_L + \mu_G (1 - C_L)$$

Surface tension

The surface tension (interfacial tension) between the gas and liquid phases has very little effect on two-phase pressure drop calculations. However, a value is required for calculating certain dimensionless numbers used in some of the pressure drop correlations. Empirical relationships for estimating the gas / oil interfacial tension and the gas / water interfacial tension were presented by Baker and Swerdloff, Hough and by Beggs.

Gas / oil interfacial tension

The dead oil interfacial tension at temperatures of 68°F and 100°F is given by:

$$\sigma_{68} = 39 - 0.2571 (\text{API})$$

$$\sigma_{100} = 37.5 - 0.2571 (\text{API})$$

If the temperature is greater than 100°F, the value at 100°F is used. If the temperature is less than 68°F, the value at 68°F is used. For intermediate temperatures, linear interpolation is used.

As pressure is increased and gas goes into solution, the gas / oil interfacial tension is reduced. The dead oil interfacial tension is corrected for this by multiplying by a correction factor:

$$C = 1.0 - 0.024P^{0.45}$$

The interfacial tension becomes zero at miscibility pressure, and for most systems this is at any pressure greater than about 5000 psia. After the correction factor becomes zero (at about 3977 psia), 1 dyne/cm is used for calculations.

Gas / water interfacial tension

The gas / water interfacial tension at temperatures of 74°F and 280°F is given by:

$$\sigma_{W(74)} = 75 - 1.108P^{0.349}$$

$$\sigma_{W(280)} = 53 - 0.1048P^{0.637}$$

If the temperature is greater than 280°F, the value at 280°F is used. If the temperature is less than 74°F, the value at 74°F is used. For intermediate temperatures, linear interpolation is used.

Friction component

In pipe flow, friction pressure loss is the component of total pressure loss caused by viscous shear effects. Friction pressure loss **always acts against the direction of flow**. It is combined with the hydrostatic pressure difference (which may be positive or negative, depending on whether the flow is upward (also known as uphill) or downward (downhill)) to give the total pressure loss.

Friction pressure loss is calculated from the Fanning friction factor equation as follows:

$$\Delta P_f = \frac{2f\rho v^2 L}{144g_c D}$$

In the above equation, the variables f , ρ , and v are treated differently by each correlation.

Each multiphase flow correlation finds the friction factor differently. This calculation depends, in part, on the gas and liquid flow rates, but also on the standard Fanning (single-phase) friction factor chart. When evaluating the Fanning friction factor, there are many ways of calculating the Reynolds number depending on how the density, viscosity, and velocity of the two-phase mixture are defined. For example, the Beggs and Brill calculation of the Reynolds number uses mixture properties that are calculated by prorating the property of each individual phase in the ratio of the *input* volume fraction (and not of the *in-situ* volume fraction).

Hydrostatic component

Hydrostatic pressure difference is the component of pressure loss (or gain) attributed to the earth's gravitational effect. It is of importance only when there are differences in elevation from the inlet end to the outlet end of a pipe segment. This pressure difference can be positive or negative depending on the reference point (inlet higher vertically than outlet, or outlet higher than inlet). **Under ALL circumstances**, regardless of what sign convention is used, the contribution of the hydrostatic pressure calculation must be such that it tends to make the pressure at the vertically-lower end higher than that at the upper end.

The hydrostatic pressure difference is calculated as follows:

$$\Delta P_{HH} = \frac{\rho g}{144g_c} L \cdot \sin(\theta)$$

In the equation above, the problem lies in finding an appropriate value for density, as discussed below:

- For a single-phase liquid, the density of the mixture is equal to the liquid density.
- For a single-phase gas, density varies with pressure, and the calculation must be done sequentially in small steps to allow density to vary with pressure.
- For multiphase flow, density is calculated from the in-situ mixture density, which in turn is calculated from the liquid holdup. The liquid holdup is obtained from multiphase flow correlations, such as Beggs and Brill, and depends on the gas and liquid rates, pipe diameter, etc.
- For a horizontal pipe segment, $\theta = 0.0$, and there is NO hydrostatic pressure loss.

Flow correlations

Many of the published multiphase flow correlations are applicable for vertical flow only, while others apply for horizontal flow only. Other than the Beggs and Brill correlation and the Petalas and Aziz mechanistic model, there are not many correlations that were developed for the whole spectrum of flow situations that can be encountered in oil and gas operations — namely, uphill, downhill, horizontal, inclined, and vertical flow. However, we have adapted all of the correlations (as appropriate) so that they apply to all flow situations. This includes these multiphase flow correlations:

- **Beggs and Brill** — one of the few published correlations capable of handling all of the flow directions. It was developed using sections of pipeline that could be inclined at any angle.
- **Gray** — developed for vertical flow in wet gas wells. We have modified it, so that it applies to flow in all directions by calculating the hydrostatic pressure difference using only the vertical elevation of the pipeline segment, and the friction pressure loss based on the total length of the pipeline.
- **Hagedorn and Brown** — developed for vertical flow in oil wells. We have modified it, so that it applies to flow in all directions by calculating the hydrostatic pressure difference using only the vertical elevation of the pipe segment, and the friction pressure loss based on the total pipeline length.
- **Petalas and Aziz** — developed to overcome the limitations imposed by using previous correlations. It applies to all pipe geometries, fluid properties, and flow in all directions. A mechanistic approach is combined with empirical closure relationships to provide a model that is more robust than other models and can be used predict pressure drop and holdup in pipes over a more extensive range of conditions.

Each of these correlations was developed for its own unique set of experimental conditions, or designed using a mechanistic modeling approach, and accordingly, results vary between them.

For multiphase flow in essentially vertical wells, the available correlations are Beggs and Brill, Petalas and Aziz, Gray and Hagedorn and Brown. If used for single-phase flow, these four correlations devolve to the Fanning gas or Fanning liquid correlation as needed.

When creating a new wellbore, Harmony sets a default multiphase correlation depending upon the type of well that exists in the Entity Viewer. This default correlation is based on our expected use cases, and thus may not apply to every wellbore. Of course, the correlation for the wellbore configuration can be changed at any time.

Note: The Gray and Hagedorn and Brown correlations were derived for vertical wells and may not apply to horizontal pipes. In Harmony, the Gray, the Hagedorn and Brown, the Beggs and Brill, and the Petalas and Aziz models revert to the appropriate single-phase Fanning correlation (Fanning liquid or Fanning gas).

Beggs and Brill correlation

The Beggs and Brill (1973) correlation is one of the few published correlations capable of handling all these flow directions. It was developed measuring the flow of water and air through 1" and 1-1/2" sections of acrylic pipe that could be inclined at different angles from the horizontal.

The Beggs and Brill multiphase correlation deals with both friction pressure loss and hydrostatic pressure difference. First, the corresponding flow pattern for the particular combination of gas and liquid rates (segregated, intermittent, or distributed) is determined. The liquid holdup, and hence, the in-situ density of the gas-liquid mixture, is then calculated according to the identified flow pattern to obtain the hydrostatic pressure difference. A two-phase friction factor is calculated based on the input gas-liquid ratio and the Fanning friction factor. From this, friction pressure loss is calculated using input gas-liquid mixture properties.


In our implementation, whenever single-phase flow is encountered during pressure loss calculations, the Beggs and Brill correlation devolves to the Fanning gas or Fanning liquid correlation.

Flow pattern map

Unlike the Gray or Hagedorn and Brown correlations, the Beggs and Brill correlation needs to identify the flow pattern at the given flowing conditions in order to calculate the liquid holdup and friction. For this purpose, the Beggs and Brill correlation makes use of a horizontal flow-pattern map built based on the Froude number of the mixture (Fr_m) and input liquid content (no-slip liquid holdup, C_L).

In order to build the flow map, the observed flow patterns were grouped as: segregated (stratified, wavy, and annular flow), intermittent (plug and slug flow), distributed (bubble and mist flow), and transition (flow pattern included after a modification of the original publication that considers the region between the segregated and intermittent grouped patterns).

The boundaries between these groups of flow patterns appear as curves in a log-log plot in the original publication by Beggs and Brill. This was later revised so that straight lines could be used instead. We use this modified flow-pattern map in our calculations. The revised lines that define the boundaries are defined as follows (where * stands for the modification of the original curve to a straight line in a log-log plot):

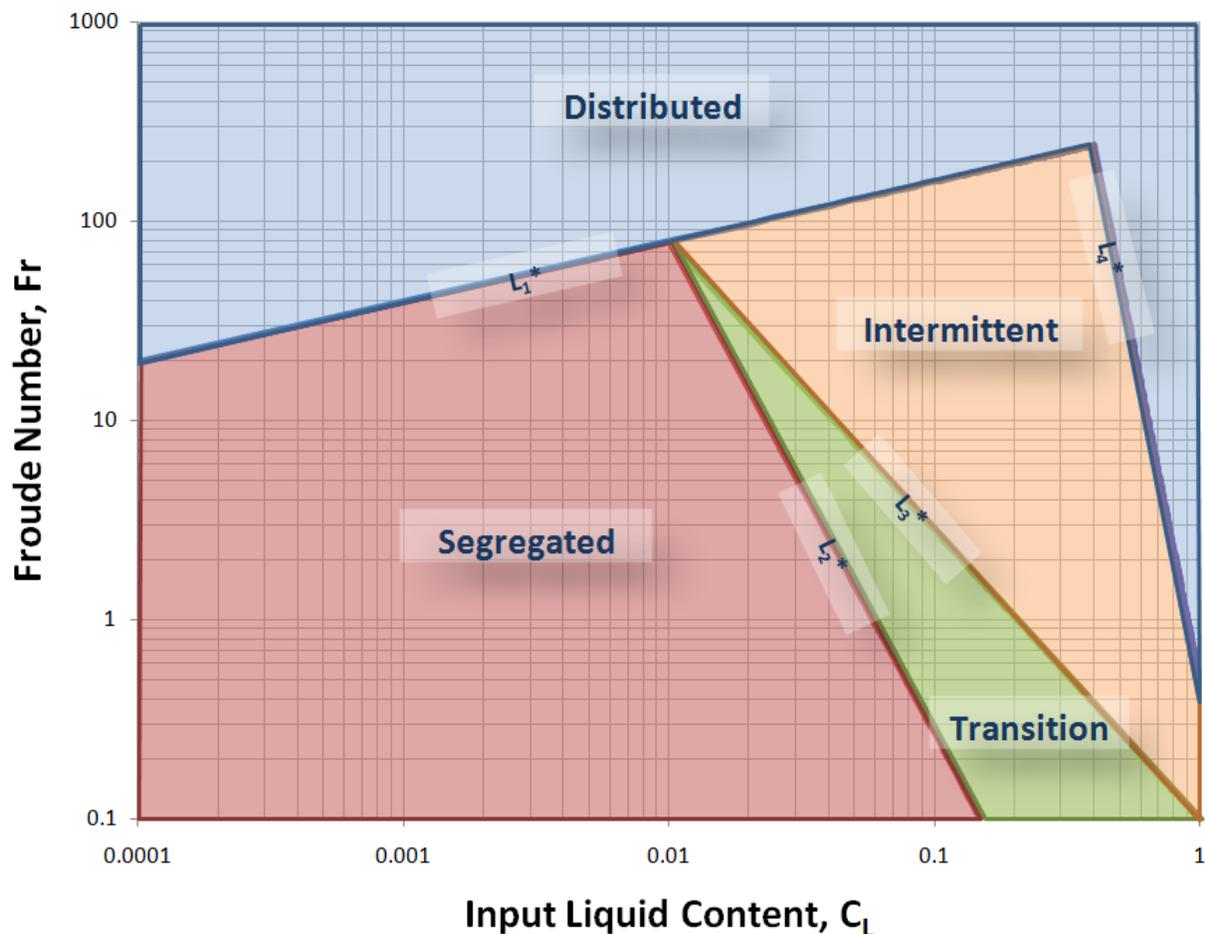

$$L_1^* = 316C_L^{0.302}$$

$$L_2^* = 0.0009252 C_L^{-2.4684}$$

$$L_3^* = 0.1 C_L^{-1.4516}$$

$$L_4^* = 0.5 C_L^{-6.738}$$

The identified flow pattern is the one that would exist if the pipe were horizontal. Unless the pipe is actually in the horizontal position, the Beggs and Brill correlation is not able to recognize the actual flow pattern under the given conditions. Therefore, to calculate the liquid holdup, we first determine the liquid holdup for the horizontal flow, and this value is then corrected for the angle of interest.

The Froude number is a dimensionless number that relates the inertia with respect to the gravitational forces. For a mixture, it can be obtained by:

$$Fr_m = \frac{v_m^2}{gD}$$

Once the input liquid content (C_L) and Froude number of the mixture (Fr_m) are determined, the corresponding flow pattern is identified when the following inequalities are satisfied.

Segregated

$$\text{if } C_L < 0.01 \text{ and } Fr_m < L_1^*$$


$$\text{or } C_L \geq 0.01 \text{ and } Fr_m < L_2^*$$



Intermittent

if $0.01 \leq C_L < 0.4$ and $L_3^* < Fr_m \leq L_1^*$

or $C_L \geq 0.4$ and $L_3^* < Fr_m \leq L_4^*$

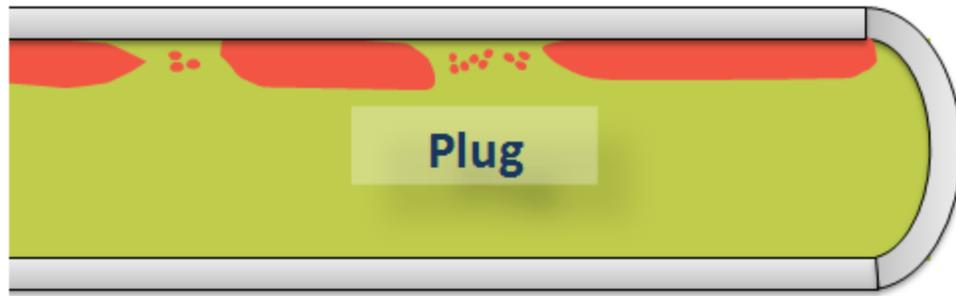

Distributed

if $C_L < 0.4$ and $Fr_m \geq L_1^*$

or $C_L \geq 0.4$ and $Fr_m > L_4^*$



Transition

$$\text{if } C_L \geq 0.01 \text{ and } L_2^* < Fr_m < L_3^*$$

Hydrostatic Pressure Difference

Once the flow pattern has been determined, the liquid holdup is then calculated. Beggs and Brill divided the liquid holdup calculation into two parts. First, the liquid holdup for horizontal flow, $E_L(0)$, is determined. Afterward, this horizontal holdup is corrected for inclined flow to obtain the actual holdup, $E_L(\theta)$. The horizontal holdup must be $E_L(0) \geq C_L$. Therefore, in the event that $E_L(0) < C_L$, the horizontal holdup is set to $E_L(0) = C_L$. The expression used to calculate the horizontal holdup changes per flow pattern group as follows:

Segregated

$$E_L(0) = \frac{0.98 C_L^{0.4846}}{Fr_m^{0.0868}}$$

Intermittent

$$E_L(0) = \frac{0.845 C_L^{0.5351}}{F r_m^{0.0173}}$$

Distributed

$$E_L(0) = \frac{1.065 C_L^{0.5824}}{F r_m^{0.0609}}$$

Transition

$$E_{L(0)_{\text{transition}}} = A E_{L(0)_{\text{segregated}}} + B E_{L(0)_{\text{intermittent}}}$$

where:

$$A = \frac{L_3^* - F r_m}{L_3^* - L_2^*}$$

$$B = 1 - A$$

Once the horizontal in-situ liquid volume fraction is determined, the actual liquid volume fraction is obtained by correcting $E_L(0)$ by an inclination factor $B(\theta)$:

$$E_L(\theta) = B(\theta) \cdot E_L(0)$$

where:

$$B(\theta) = 1 + \beta \left[\sin(1.8\theta) - \frac{1}{3} \sin^3(1.8\theta) \right]$$

β is a function of the flow pattern and is also related to the direction of inclination of the pipe (uphill or downhill flow).

For **uphill** flow

Segregated

$$\beta = \left(1 - C_L\right) \ln \left[\frac{0.011 N_w^{3.539}}{C_L^{3.768} Fr_m^{1.614}} \right]$$

Intermittent

$$\beta = \left(1 - C_L\right) \ln \left[\frac{2.96 C_L^{0.305} Fr_m^{0.0978}}{N_w^{0.4473}} \right]$$

Distributed

$$\beta = 0$$

For **downhill** flow

ALL flow pattern groups

$$\beta = \left(1 - C_L\right) \ln \left[\frac{2.96 C_L^{0.305} Fr_m^{0.0978}}{N_w^{0.4473}} \right]$$

where Fr_m is the Froude number of the mixture and N_{Lv} is the liquid velocity number given by:

$$N_{Lv} = 1.938 v_{sL} \sqrt[4]{\frac{P_L}{\sigma}}$$

Note: β must always be ≥ 0 . Therefore, if a negative value is calculated for β , $\beta = 0$.

Once the actual liquid holdup $E_L(\theta)$ is calculated, the mixture density ρ_m is obtained. Mixture density, in turn, is used to calculate the pressure change due to the hydrostatic head of the vertical component of the pipe or well.

$$\Delta P_{HH} = \frac{\rho_m g}{144g_c} L \cdot \sin(\theta)$$

Beggs and Brill - Friction Pressure Loss

In order to calculate frictional losses, a normalizing friction factor (f_{NS}) is used. To determine f_{NS} , we use the Fanning friction factor calculated using the Chen equation. For this purpose, the no-slip

Reynolds number is used:

$$Re_{NS} = \frac{\rho_{NS} v_m D}{\mu_{NS}}$$

Based on experimental data, Beggs and Brill presented a correlation for the ratio of the two-phase friction factor (f_{tp}) and the normalizing (no-slip) friction factor resulting in the following exponential equation:

$$\frac{f_{tp}}{f_{NS}} = e^S$$

The value of S depends on the no-slip and the actual liquid holdup:

$$S = \frac{\ln y}{-0.0523 + 3.182(\ln y) - 0.8725(\ln y)^2 + 0.01853(\ln y)^4}$$

where:

$$y = \frac{C_L}{(E_L)^2}$$

Severe instabilities have been observed when the equation for S is used as published. To solve for them, the following considerations are used:

- If $y = 0$, then $S=0$ (to ensure that the expression is reduced to single-phase liquid)
- If $1 < y < 1.2$, then $S = \ln(2.2y - 1.2)$

After a valid value for S has been found, you can solve for the two-phase friction factor:

$$f_{tp} = f_{NS} e^S$$

Finally, the expression for pressure loss due to friction is:

$$\Delta P_f = \frac{2 f_{tp} v_m^2 \rho_{NS} L}{144 g_c D}$$

Gray Correlation

The Gray correlation was developed by H.E. Gray (1978) specifically for wet gas wells. Although this correlation was developed for vertical flow, we have implemented it to be used in both vertical and inclined pipe pressure-drop calculations. To correct pressure drop for situations with a horizontal

component, the hydrostatic head has only been applied to the vertical component of the pipe, while friction is applied to the entire length of pipe.

First, the in-situ liquid volume fraction is calculated. The in-situ liquid volume fraction is then used to calculate mixture density, which in turn is used to calculate the hydrostatic pressure difference. The input gas-liquid mixture properties are used to calculate an effective roughness of the pipe. This effective roughness is then used in conjunction with a constant Reynolds number of 10^7 to calculate the Fanning friction factor. The pressure difference due to friction is calculated using the Fanning friction pressure-loss equation.

Gray – Hydrostatic Pressure Difference

The Gray correlation uses three dimensionless numbers in combination to predict the in-situ liquid volume fraction. These three dimensionless numbers are:

$$N_1 = \frac{\rho_{NS}^2 v_m^4}{g \sigma_L^* (\rho_L - \rho_G)}$$

$$N_2 = \frac{g D^2 (\rho_L - \rho_G)}{\sigma_L^*}$$

$$N_3 = 0.0814 \left[1 - 0.0554 \ln \left(1 + \frac{730 R_v}{R_v + 1} \right) \right]$$

where:

$$R_v = \frac{v_{sL}}{v_{sG}}$$

$$\sigma_L^* = \alpha \frac{q_o \sigma_o + 0.617 q_w \sigma_w}{q_o + 0.617 q_w}$$

$$\alpha = \frac{0.00220462 \left[\frac{lbm}{s^2} \right]}{1 \left[\frac{dyne}{cm} \right]}$$

The dimensionless numbers are then combined as follows:

$$E_L = 1 - (1 - C_L) \cdot (1 - ef_1)$$

where:

$$f_1 = -2.314 \left[N_1 \left(1 + \frac{205}{N_2} \right) \right]^{N_3}$$

Once the liquid holdup (E_L) is calculated, it is used to obtain the mixture density (ρ_m). Mixture density, in turn, is used to compute the pressure change due to the hydrostatic head of the vertical component of the pipe.

$$\Delta P_{HH} = \frac{p_m g}{144g_c} L \cdot \sin(\theta)$$

Gray – Friction Pressure Loss

The Gray Correlation assumes that the effective (also known as apparent) roughness of the pipe (k_e) is dependent on the value of R_v . The conditions are as follows:

If $R_v \geq 0.007$ then:

$$k_e = k^o$$

if $R_v < 0.007$ then:

$$k_e = k + R_v \left[\frac{k^o - k}{0.007} \right]$$

where:

$$k^o = \frac{28.5 \sigma_L^*}{\rho_{NS} V_m^2}$$

$$R_v = \frac{v_{sL}}{v_{sG}}$$

and k is the absolute roughness of the pipe (single-phase dry gas flow). The resulting effective roughness (k_e) must be larger than or equal to 2.77×10^{-5} .

The relative roughness of the pipe is then calculated by dividing the effective roughness by the diameter of the pipe. The Fanning friction factor is obtained using the Chen equation and assumes a Reynolds number of 107. Finally, the expression for the friction pressure loss is:

$$\Delta P_f = \frac{2f_{tp} v_m^2 \rho_{NS} L}{144g_c D}$$

Note: The original publication contains a misprint in the calculation of k_e : the constant should be 0.007 instead of 0.0007. We include this correction in our calculations. Additionally, the volume of water condensation is estimated using Bukacek's correlation (including the corrections by McKetta and Wehe) and is considered in the pressure-drop calculations.

Hagedorn and Brown

Experimental data obtained from a 1500 ft deep instrumented vertical test well was used in the development of the Hagedorn and Brown correlation. Pressures were measured for flow in tubing sizes of 1", 1 ¼" and 1 ½" OD. A wide range of liquid rates and gas / liquid ratios were used. As with the Gray correlation, our software calculates pressure drops for horizontal and inclined flow using the Hagedorn and Brown correlation, although the correlation was developed strictly for vertical wells. The software uses only the vertical depth to calculate pressure loss due to hydrostatic head, and the entire pipe length to calculate friction.

The Hagedorn and Brown method has been modified for the bubble flow regime (Economides et al, 1994). If bubble flow exists, the Griffith correlation is used to calculate the in-situ volume fraction. In such cases, the Griffith correlation is also used to calculate pressure drop due to friction. If bubble flow does not exist, then the original Hagedorn and Brown correlation is used to calculate the in-situ liquid volume fraction. Once the in-situ volume fraction is determined, it is compared with the input volume fraction. If the in-situ volume fraction is smaller than the input volume fraction, the in-situ fraction is set to equal the input fraction ($E_L = C_L$). Next, the mixture density is calculated using the in-situ volume fraction and used to calculate the hydrostatic pressure difference. The pressure difference due to friction is calculated using a combination of in-situ and input gas-liquid mixture properties.

Hagedorn and Brown - Hydrostatic Pressure Difference

The Hagedorn and Brown correlation uses four dimensionless parameters (based on the work of Duns and Ros) to correlate liquid holdup. These four parameters are:

$$N_{Lv} = 1.938 v_{sL} \sqrt[4]{\frac{\rho_L}{\sigma}}$$


$$N_{Gv} = 1.938 v_{sG} \sqrt[4]{\frac{\rho_L}{\sigma}}$$

$$N_d = 120.872 D \sqrt{\frac{\rho_L}{\sigma}}$$

$$N_d = 0.15726 \mu_L \sqrt[4]{\frac{1}{\rho_L \sigma^3}}$$

The method of calculation is based on the use of several plots where various combinations of these parameters are calculated and plotted against some correlated terms to determine the liquid holdup. For programming purposes, these curves were discretized into equations.


The first curve provides a value for a dimensionless parameter called N_{LC} , which is correlated with the dimensionless number N_{LL} . Therefore, once N_L is calculated, it is possible to obtain N_{LC} from the following plot:

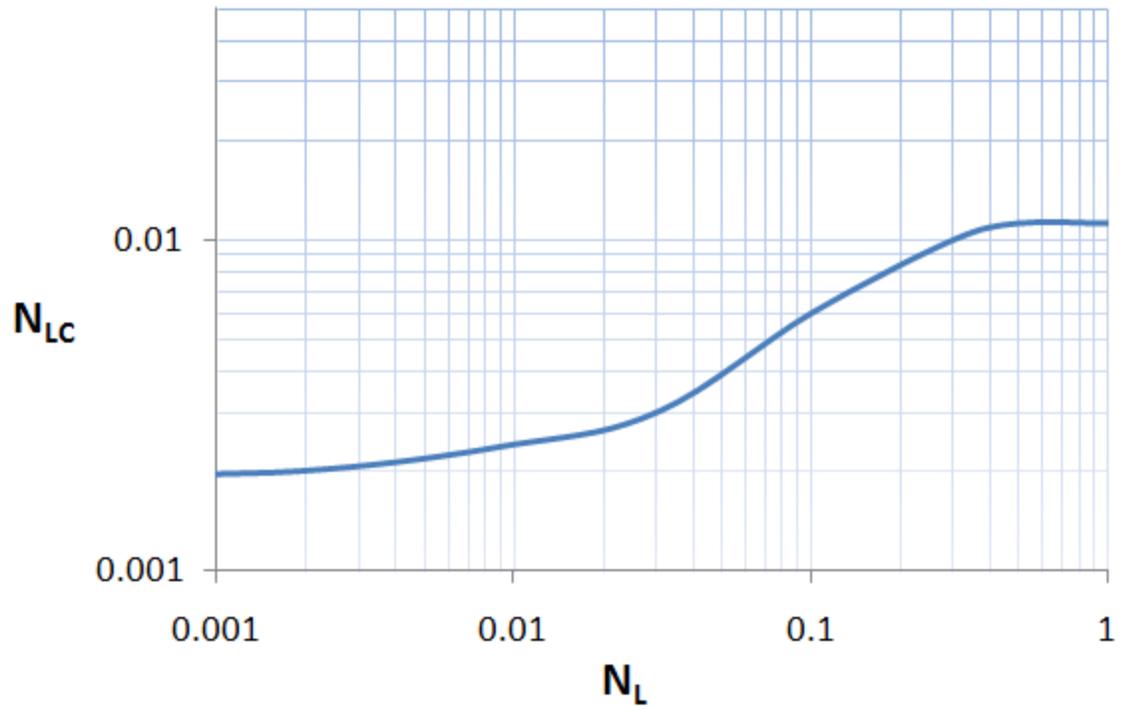

The value of N_{LC} is then used to calculate the dimensionless number, \bar{X}_h :

$$\bar{X}_h = \left(\frac{N_{Lv}}{N_{Gv}^{0.575}} \right) \left(\frac{\rho}{\rho_{sc}} \right)^{0.10} \left(\frac{N_{LC}}{N_d} \right)$$


The next plot contains a curve correlating the liquid holdup divided by a correction factor (E_L / Ψ) against the dimensionless group, \bar{X}_h . After \bar{X}_h is calculated, you can then find the value of E_L / Ψ by making use of the following plot:

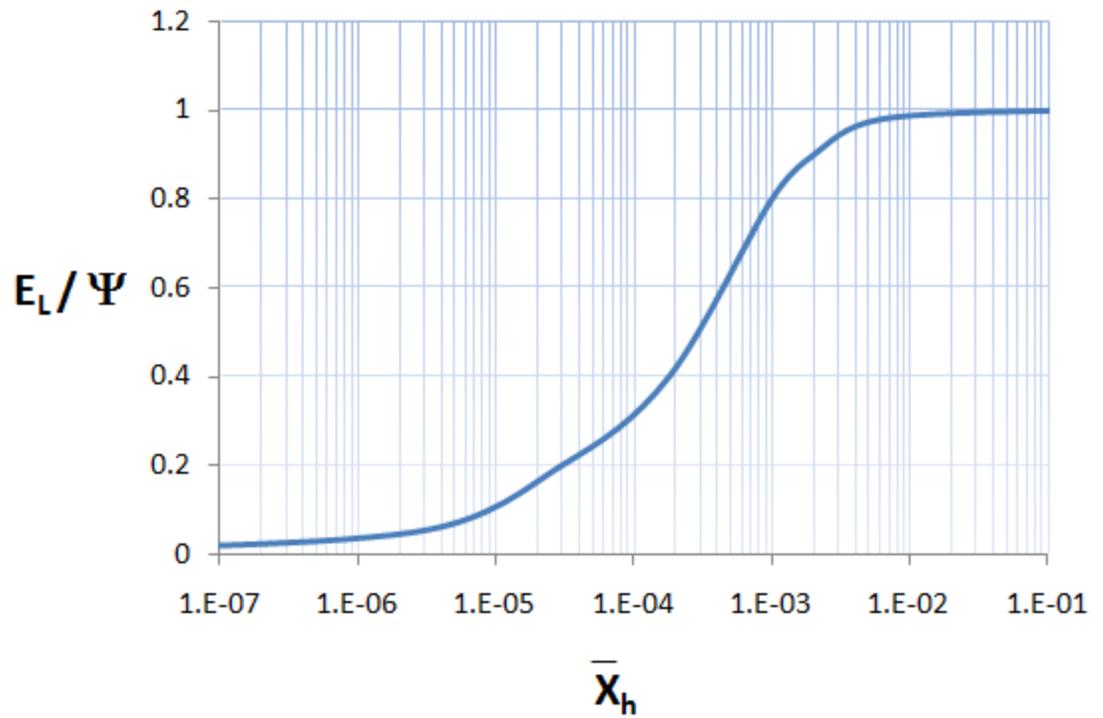

Finally, the third curve correlates the correction factor Ψ with the dimensionless number, \bar{X}_Ψ :

$$\bar{X}_\Psi = \frac{N_{Gv} N_L^{0.38}}{N_d^{2.14}}$$

A typical discretized curve to find Ψ can be as follows:

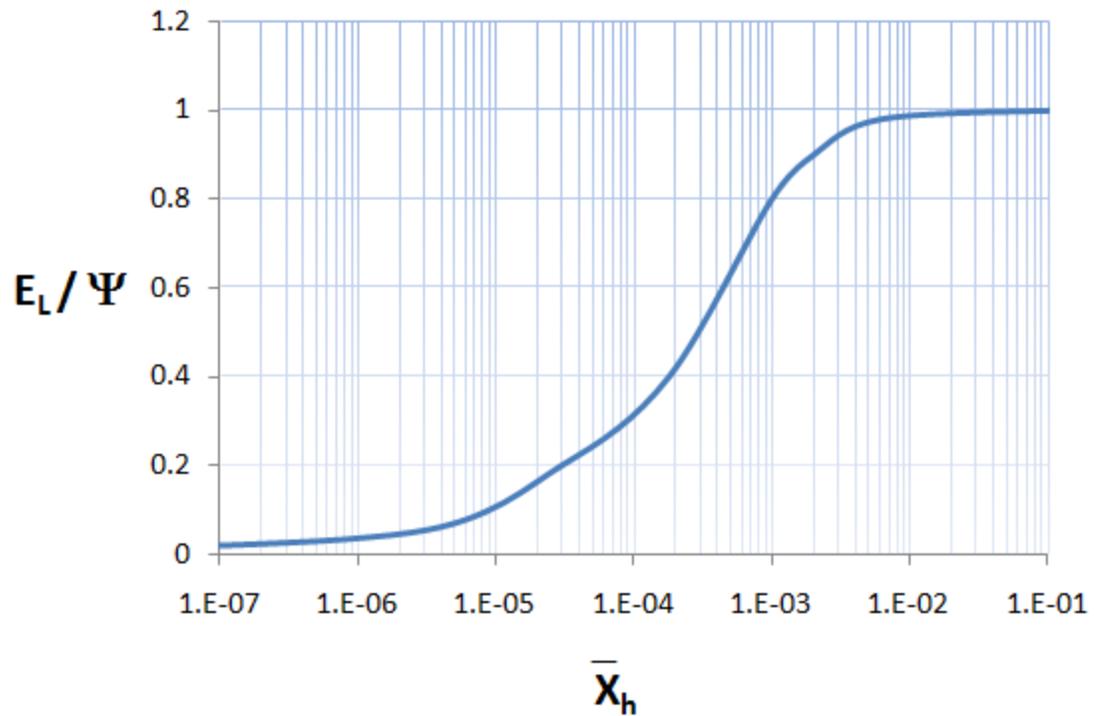

After finding Ψ , the in-situ liquid volume fraction (E_L) can be calculated taking the previously found E_L / Ψ :

$$E_L = \left(\frac{E_L}{\Psi} \right) \cdot \Psi$$

We have implemented a correction to replace the liquid holdup value with the "no-slip" (input) liquid volume fraction, if the calculated liquid holdup is less than the no-slip liquid volume fraction:

$$\text{if } E_L < C_L, \text{ then } E_L = C_L$$

After finding E_L , the hydrostatic head is calculated by the standard equation:

$$\Delta P_{HH} = \frac{\rho_m g}{144g_c} L \cdot \sin(\theta)$$

where:

$$\rho_m = \rho_L E_L + \rho_G (1 - E_L)$$

Hagedorn and Brown - Friction Pressure Loss

The friction factor is calculated using the Chen equation using a Reynolds number equal to:

$$Re = \frac{\rho_{NS} V_m D}{\mu_m}$$

Note: In the Hagedorn and Brown correlation, mixture viscosity is given by:

$$\mu_m = \mu_L^{E_L} \mu_G^{(1-E_L)}$$

The pressure loss due to friction is then given by:

$$\Delta P_f = \frac{2f \rho_f v_m^2 L}{144g_c D}$$

where:

$$\rho_f = \frac{\rho_{NS}^2}{\rho_m}$$

Modification to the Hagedorn and Brown Correlation: the Griffith Correlation for Bubble Flow

The Hagedorn and Brown correlation makes use of the Griffith correlation (1961) for the bubble flow regime. Bubble flow exists if $C_G < L_B$, where:

$$L_B = 1.071 - 0.2218 \left(\frac{v_m^2}{D} \right)$$

If the calculated value of L_B is less than 0.13, then L_B is set to 0.13. If the flow regime is found to be bubble flow, then the Griffith correlation is applied. Otherwise, the original Hagedorn and Brown correlation is used.

In the Griffith correlation, liquid holdup is given by:

$$E_L = 1 - \frac{1}{2} \left[1 + \frac{v_m}{v_s} - \sqrt{\left(1 + \frac{v_m}{v_s}\right)^2 - 4 \left(\frac{v_{sg}}{v_s}\right)} \right]$$

Griffith suggested a constant value of $v_s = 0.8$ ft/s as a good average value, which is the one considered in our calculations.

The true in-situ liquid velocity is given by:

$$v_L = \frac{v_{sL}}{E_L}$$

The hydrostatic head is then calculated the standard way.

The pressure drop due to friction is also affected by the use of the Griffith correlation because E_L enters into the calculation of the Reynolds number via the in-situ liquid velocity. The Reynolds number is calculated using the following format:

$$Re_L = \frac{\rho_L v_L D}{\mu_L}$$

The single-phase liquid density, in-situ liquid velocity, and liquid viscosity are used to calculate the Reynolds number. This is unlike the majority of multiphase correlations, which usually define the Reynolds number in terms of mixture properties rather than single-phase liquid properties. The Reynolds number is used to calculate the friction factor using the Chen equation. The liquid density and the in-situ liquid velocity are then used to calculate the pressure drop due to friction:

$$\Delta P_f = \frac{2f \rho_f v_L^2 L}{144g_c D}$$

Petalas and Aziz Mechanistic Model


The Petalas and Aziz mechanistic model (2000) was not built for a specific set of data or fluid properties. Instead, the authors applied first principles to the possible flow patterns that can be observed at different inclinations. For this reason, it is applicable to any pipe inclination and fluid properties. The model is a refinement of a previous study by the authors (1996) where subsets of a database of over 20,000 laboratory measurements and data from approximately 1,800 wells were used.

The method could be summarized as follows:

- Assume the existence of a flow pattern
- Evaluate if this flow pattern is stable:
 - If the check fails, go back and select another flow pattern
 - If stable conditions are met, go ahead with the calculation of liquid holdup and the friction factor

- Calculate pressure losses using the found values for the friction factor and liquid holdup

With the continuous evaluation of the stability of the flow patterns, you can create the corresponding flow-pattern map to the given flowing conditions. This screenshot shows a typical flow-pattern map for vertical upward gas-oil flow:

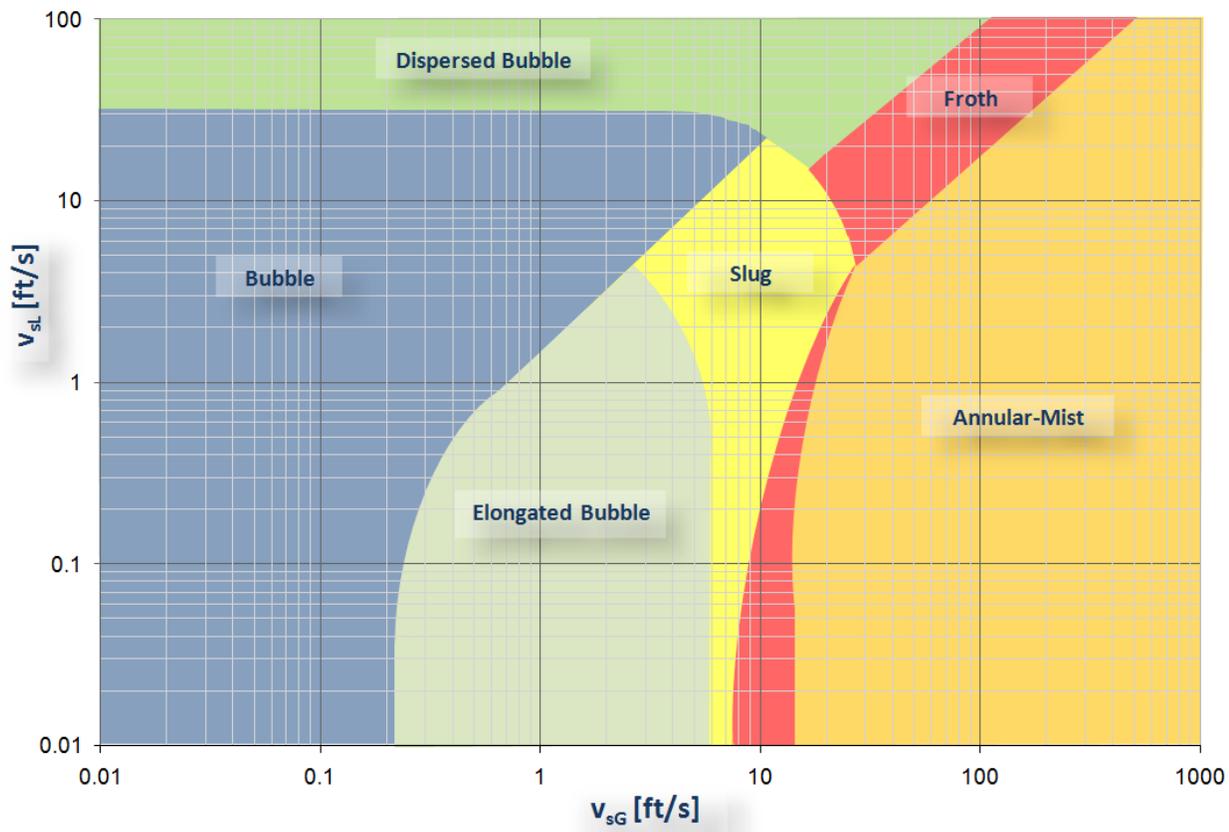

Flow Pattern Map

Dispersed Bubble flow

In order to have dispersed bubble flow, two requirements must be fulfilled.

The first criterion is based on Barnea's transition from dispersed to slug flow while using the slug liquid holdup calculation based on Gregory et al:

$$\frac{1}{1 + \left(\frac{v_m}{8.66}\right)^{1.39}} < 0.48$$

where:

$$V_m = V_{sG} + V_{sL}$$

Also, to be able to sustain dispersed bubble flow, the ratio of the superficial gas velocity with respect to the mixture velocity should be:

$$\frac{v_{sG}}{v_m} > 0.52$$

Stratified Flow

The consideration here is that stratified flow can be possible only in downward (downhill) or horizontal flow. A momentum balance is obtained based on the one proposed by Taitel and Dukler. The first step consists in calculating \tilde{h}_L (dimensionless liquid height) by solving:

$$-A_L \left(\frac{dp}{dL} \right) - \tau_{wL} S_L + \tau_i S_i - p_L A_L \left(\frac{g}{g_c} \right) \sin(\theta) = 0$$

$$-A_G \left(\frac{dp}{dL} \right) - \tau_{wG} S_G - \tau_i S_i - p_G A_G \left(\frac{g}{g_c} \right) \sin(\theta) = 0$$

where:

$$\tau_{wG} = \frac{f_G \rho_G v_G^2}{2g_c}$$

$$\tau_{wL} = \frac{f_L \rho_L v_L^2}{2g_c}$$

$$\tau_{wi} = \frac{f_i \rho_G v_i |v_i|}{2g_c}$$

and

f_G is obtained from standard methods where:

$$Re_G = \frac{\rho_G v_G D_G}{\mu_G}$$

where the hydraulic diameter of the gas phase, D_G , is obtained by:

$$D_G = \frac{4 A_G}{S_G + S_i}$$

f_L from:

$$f_L = 0.452 f_{sL}^{0.731}$$

where f_{sL} is a friction factor based on the superficial velocity, which is calculated from standard methods using the pipe roughness and the Reynolds number:

$$Re_{sL} = \frac{\rho_L v_{sL} D}{\mu_L}$$

f_i from:

$$f_i = \left(0.004 + 0.5 \cdot 10^{-6} Re_{sL} \right) Fr_L^{1.335} \left(\frac{\rho_L D_G}{\rho_G v_G^2} \right)$$

using a liquid Froude number defined as:

$$Fr_L = \frac{v_L}{\sqrt{gh_L}}$$

use Lockhart-Martinelli parameters:

$$X^2 F_2 - F_1 - 4Y = 0$$

where:

$$X^2 = \frac{\left(\frac{\delta P}{\delta L} \right)_{sL}}{\left(\frac{\delta P}{\delta L} \right)_{sG}} = \frac{f_{sL} v_{sL}^2 \rho_L}{f_{sG} v_{sg}^2 \rho_G}$$

$$Y = \frac{(\rho_L - \rho_G) g \sin(\theta)}{\left(\frac{\delta P}{\delta L}\right)_{sG}} = \frac{(\rho_L - \rho_G) g \sin(\theta)}{2f_{sG} v_{sG}^2 \rho_G}$$

$$F_1 = \left(\frac{f_G}{f_{sG}}\right) \tilde{v}_G^2 \left[\frac{\tilde{S}_G}{\tilde{A}_G} + \frac{f_i}{f_G} \frac{|\tilde{v}_i|}{\tilde{v}_G} \left(\frac{\tilde{S}_i}{\tilde{A}_G} + \frac{\tilde{S}_i}{\tilde{A}_L} \right) \right]$$

$$F_2 = \frac{f_L}{f_{sL}} \tilde{v}_L^2 \frac{\tilde{S}_L}{\tilde{A}_L}$$

where:

$$\tilde{v}_i = \tilde{v}_G - \tilde{v}_L$$

with the geometric variables:

$$\tilde{h}_L = \frac{h_L}{D}$$

$$\tilde{S}_L = \frac{S_L}{D}$$

$$\tilde{A}_L = \frac{A_L}{D^2}$$

$$\tilde{A}_G = \frac{A_G}{D^2}$$

$$\tilde{v}_L = \frac{v_L}{v_{sL}}$$

$$\tilde{v}_G = \frac{v_G}{v_{sG}}$$

$$\tilde{v}_L = \frac{\tilde{A}}{\tilde{A}_L}$$

Solve for h_L / D iteratively. Afterwards, we verify that stratified flow exists if:

$$v_G = \left(1 - \frac{h_L}{D}\right) \sqrt{\frac{(\rho_L - \rho_G) g A_G \cos(\theta)}{\rho_G \frac{dA_L}{dh_L}}}$$

and if:

$$v_L > \sqrt{\frac{g D (1 - \tilde{h}_L) \cos(\theta)}{f_L}}$$

Note: When $\cos\theta \leq 0.02$, then, $\cos\theta = 0.02$.

To distinguish between stratified smooth and stratified wavy flow regimes:

stratified smooth flow exists if:

$$v_G \leq \sqrt{\frac{4 \mu_L (\rho_L - \rho_G) g \cos(\theta)}{s \rho_L \rho_G v_L}}$$

where $s=0.06$, and if:

$$Fr = \frac{v_L}{\sqrt{g h_L}} > 1.4$$

Annular-Mist Flow

Calculate the dimensionless liquid film thickness ($\tilde{\delta}_L$), making the momentum balance on the liquid film and gas core with liquid droplets:

$$-A_f \left(\frac{dp}{dL} \right) - \tau_{wL} S_L + \tau_i S_i - p_L A_L \left(\frac{g}{g_c} \right) \sin(\theta) = 0$$

$$-A_c \left(\frac{dp}{dL} \right) - \tau_i S_i - p_c A_c \left(\frac{g}{g_c} \right) \sin(\theta) = 0$$

Annular-mist flow exists if:

$$\tilde{\delta}_L < \tilde{\delta}_{L, \min}$$

where $\tilde{\delta}_{L, \min}$ is determined from the following equations:

$$2 f_f \frac{\rho_L}{(\rho_L - \rho_c)} \frac{v_{sL}^2}{g D \sin(\theta)} = \frac{E_f^3 \left(1 - \frac{3}{2} E_f \right)}{2 - \frac{3}{2} E_f}$$

$$E_f = \frac{A_f}{A} = 4 \tilde{\delta}_L (1 - \tilde{\delta}_L)$$

Solve for $\tilde{\delta}_{L, \min}$ iteratively.

Bubble Flow

Bubble flow exists if:

$$D > 19 \left[\frac{(\rho_L - \rho_G)}{g \rho_L^2} \right]^{\frac{1}{2}}$$

and if:

$$\cos(\theta) \leq \frac{3}{4\sqrt{2}} v_b^2 \left(\frac{C_1 Y^2}{g d_b} \right)$$

where:

$$C_1 = 0.8$$

$$\gamma = 1.3$$

$$d_b = 7\text{mm}$$

with:

$$v_b = 1.41 \left[\frac{g(\rho_L - \rho_G) \sigma}{\rho_L^2} \right]^{\frac{1}{4}} \sin(\theta)$$

Also, transition to bubble flow from intermittent flow occurs when:

$$E_L > 0.25$$

where:

$$E_L = \frac{E_{LS} v_t + v_{Gdb}(1 - E_{LS}) - v_{sG}}{v_t}$$

Intermittent Flow

Note: The intermittent flow model used here includes slug and elongated bubble flow regimes.

Intermittent flow exists if:

$$E_L > 0.24$$

where:

$$E_L = \frac{E_{LS} v_t + v_{Gdb}(1 - E_{LS}) - v_{sG}}{v_t}$$

If $E_L > 1$, then $E_L = C_L$.

and if:

$$E_L = \frac{1}{1 + \left(\frac{v_m}{8.66}\right)^{1.39}}$$

where:

$$v_m = v_{sL} + v_{sG}$$

- If $E_L > 0.24$ and $ELs < 0.9$, then slug flow
- If $E_L > 0.24$ and $ELs > 0.9$, then elongated bubble flow

Froth Flow

If none of the transition criteria for intermittent flow are met, the flow pattern is then designated as froth. Froth flow implies a transitional state between the other flow regimes.

Recombination

Many gas-condensate systems exist as a single-phase liquid in the reservoir. Condensation generally takes place at the separator, in the wellbore, or in the reservoir very near the wellbore. When modeling gas condensate systems at reservoir conditions, gas and condensate rates measured at surface conditions are combined into a single-phase rich gas using recombination.

The recombination calculation takes the volume of condensate, vaporizes it, and adds it to the gas volume to obtain a single-phase rich gas as it exists in the reservoir. A recombined gas gravity is also calculated for use in analytical models.

Given the specific gravity of measured separator gas, the condensate gas ratio (CGR), and the specific gravity of the condensate, the recombined gas gravity can be calculated using the following equation:

$$G_{Rec} = \frac{\frac{10^6 * G}{CGR} + 4602 \gamma_o + Q_{pa}}{\frac{10^6}{CGR} + V_{eq}}$$

Where:

$$Q_{pa} = 1.4599(p - 14.65)^{1.3394} G^{7.0943} \gamma_{API}^{1.1436} T^{-0.93446}$$

$$V_{eq} = 635.53 + 0.36182p^{1.0544} G^{5.0831} \gamma_{API}^{1.5812} T^{-0.79130}$$

The recombined gas rate is calculated using the following equation:

$$q_{Recombined} = q_{Measured} \left(1 + \frac{V_{eq} CGR}{10^6} \right)$$

The recombined gas rate factor (RGRF) is defined as recombined gas rate divided by the measured gas rate:

$$RGRF = \frac{q_{Recombined}}{q_{Measured}}$$

Relative permeability correlations

Relative permeability correlations

There are two types of relative permeability correlations: 2-phase models and 3-phase models.

2-phase models

Corey: This model assumes the wetting and non-wetting phase relative permeabilities to be independent of the saturations of the other phases, and requires only a single suite of gas / oil relative permeability data.

Honarpour: Developed using data from oil and gas fields in the continental US, Alaska, Canada, Libya, Iran, Argentina, and the United Arab Republic.

Generalized-Corey: Similar to the Corey correlation, but developed for a wider range of rock and wettability characteristics.

Custom Table: Allows you to enter laboratory measurements for 2-phase relative permeability.

3-phase models


Stone 1: Based on the channel flow theory, and it is used widely in the industry as the benchmark for oil simulation. It is a better predictor than Stone 2 in low oil-saturation regions. More appropriate for water-wet systems, and not suited for intermediate wettability.

Stone 2: A modified version of Stone 1. It is a better predictor than Stone 1 in high-oil saturation regions. More appropriate for water wet-systems, and not suited for intermediate wettability.

Baker: Based on saturation-weighted interpolation between the 2-phase relative permeability values. Well suited for intermediate wettability or oil-wet systems.

Two-phase correlations

In a two-phase system, the fluids consist of oil and water, oil and gas, or gas and water. An example of an oil-water system is shown below:

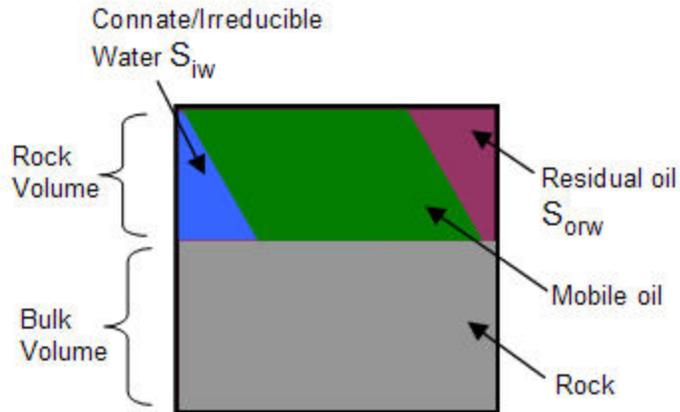

Corey

This model assumes the wetting and non-wetting phase relative permeabilities to be independent of the saturations of the other phases and requires only a single suite of gas / oil relative permeability data.

Water / oil system

$$k_{ro} = \left[\frac{1-S_o}{1-S_{iw}} \right]^2 \left[1 - \left(\frac{S_o-S_{iw}}{1-S_{iw}} \right)^2 \right]$$

$$k_{rw} = \left[\frac{S_w-S_{iw}}{1-S_{iw}} \right]^4$$

Gas / oil system

$$k_{rg} = \left[\frac{S_g}{1-S_{org}} \right]^2 \left[1 - \left(\frac{1-S_g-S_{org}}{1-S_{org}} \right)^2 \right]$$

$$k_{ro} = \left[\frac{S_o-S_{org}}{1-S_{org}} \right]^4$$

Gas / Water System

$$k_{rg} = \left[\frac{S_g}{1-S_{iw}} \right]^2 \left[1 - \left(\frac{1-S_g-S_{iw}}{1-S_{iw}} \right)^2 \right]$$

$$k_{rw} = \left[\frac{S_w-S_{iw}}{1-S_{iw}} \right]^4$$

Honarpour

Developed using data from oil & gas fields in the continental US, Alaska, Canada, Libya, Iran, Argentina, and the United Arab Republic.

Sandstone

Water wet

$$k_{rw} = 0.035388 \left[\frac{S_w-S_{iw}}{1-S_{iw}-S_{orw}} \right] - 0.0108074 \left[\frac{S_w-S_{orw}}{1-S_{iw}-S_{orw}} \right]^{2.9} + 0.56556(S_w)^{3.6} (S_w - S_{iw})$$

Intermediate wet

$$k_{rw} = 1.5814 \left[\frac{S_w-S_{iw}}{1-S_{iw}} \right]^{1.91} - 0.58617 \left[\frac{S_w-S_{orw}}{1-S_{iw}-S_{orw}} \right]^{2.9} (S_w - S_{iw}) + 1.2484 \phi (1 - S_{iw}) (S_w - S_{iw})$$

Any wettability

$$k_{row} = 0.76067 \left[\frac{\left(\frac{S_o}{1-S_{iw}} \right) - S_{or}}{1-S_{orw}} \right]^{1.8} \left[\frac{S_o-S_{orw}}{1-S_{iw}-S_{orw}} \right]^{2.0} + 2.6318 \phi (1 - S_{orw}) (S_o - S_{orw})$$

$$k_{rog} = 0.98372 \left[\frac{S_o}{1-S_{iw}} \right]^4 \left[\frac{S_o-S_{org}}{1-S_{iw}-S_{org}} \right]^2$$

$$k_{rg} = 1.1072 \left[\frac{S_g - S_{gc}}{1 - S_{iw}} \right]^2 k_{rgo} + 2.7794 S_{org} \left[\frac{S_g - S_{gc}}{1 - S_{iw}} \right] k_{rgro}$$

Limestone

Water wet

$$k_{rw} = 0.0020525 \left[\frac{S_w - S_{iw}}{\phi^{2.15}} \right] - 0.051371 \left[\frac{S_w - S_{iw}}{k_{abs}^{0.43}} \right]$$

Intermediate wet

$$k_{rw} = 0.29986 \left[\frac{S_w - S_{iw}}{1 - S_{iw}} \right] - 0.32797 \left[\frac{S_w - S_{orw}}{1 - S_{iw} - S_{orw}} \right]^2 (S_w - S_{iw}) + 0.413259 \left[\frac{S_w - S_{iw}}{1 - S_{iw} - S_{orw}} \right]^4$$

Any wettability

$k_{row} = 1.2624 \left[\frac{S_o - S_{orw}}{1 - S_{orw}} \right] \left[\frac{S_w - S_{iw}}{1 - S_{iw} - S_{orw}} \right]^2$
$k_{rog} = 0.93752 \left[\frac{S_o}{1 - S_{iw}} \right]^4 \left[\frac{S_o - S_{org}}{1 - S_{iw} - S_{org}} \right]^2$
$k_{rg} = 1.8655 S_g \left[\frac{S_g - S_{gc}}{1 - S_{iw}} \right] k_{rgro} + 8.0053 (S_{org})^2 \left[\frac{S_g - S_{gc}}{1 - S_{iw}} \right] - 0.025890 (S_g - S_{gc}) \left[\frac{1 - S_{iw} - S_{org} - S_{gc}}{1 - S_{iw}} \right]^2 \left[1 - \frac{1 - S_{iw} - S_{org} - S_{gc}}{1 - S_{iw}} \right]^2 \left[\frac{k_{abs}}{\phi} \right]^{0.5}$

Generalized Corey

Similar to the Corey correlation, but developed for a wider range of rock and wettability characteristics. This correlation can be used to change the endpoints of water-oil and gas-liquid relative permeability curves while still retaining the shape of the curves.

Gas / oil system

$$k_{rog} = k_{rocw} \left[\frac{S_o - S_{iw} - S_{org}}{1 - S_{iw} - S_{org}} \right]^{n_{og}}$$



$$k_{rgo} = k_{rgro} \left[\frac{S_g - S_{go}}{1 - S_{gc} - S_{iw} - S_{org}} \right]^{n_g}$$

Gas / water system

$$k_{rg} = k_{rgcw} \left[\frac{S_g - S_{gc}}{1 - S_{gc} - S_{iw}} \right]^{n_g}$$

$$k_{rw} = k_{rwcg} \left[\frac{S_w - S_{iw}}{1 - S_{iw}} \right]^{n_w}$$

Water / oil system

$$k_{ro} = k_{rocw} \left[\frac{1 - S_w - S_{orw}}{1 - S_{iw} - S_{orw}} \right]^{n_{ow}}$$

$$k_{rw} = k_{rwro} \left[\frac{S_w - S_{iw}}{1 - S_{iw} - S_{orw}} \right]^{n_w}$$

Three-phase correlations

Three-phase relative permeability can be generated from the two-phase relative permeability curves of the oil-water system, and the relative permeability curves of the gas-oil system. The two-phase curves represent the end curves when either the gas saturation or water saturation equals zero.

Stone I

This probability model estimates three-phase permeability data from laboratory measured two-phase data. It uses the channel flow theory in porous media to obtain a simple result for determining the relative permeability to oil in the presence of water and gas flow. The model implies that water-relative permeability and water-oil capillary pressure in three-phase systems are functions of water saturation alone, regardless of the relative saturations of oil and gas. Similarly, the gas-phase relative permeability and gas-oil capillary pressure are the same functions for gas saturation in the three-phase system as in the two-phase gas-oil system.

Stone I is widely used in the industry as the benchmark for oil simulation. It is a better predictor than Stone 2 in low oil saturation regions, is more appropriate for water-wet systems, and is not suited for intermediate wet systems.

$$S_o^* = \frac{S_o - S_{orw}}{1 - S_{iw} - S_{orw}}$$

$$S_w^* = \frac{S_w - S_{iw}}{1 - S_{iw} - S_{orw}}$$

$$S_g^* = \frac{S_g}{1 - S_{iw} - S_{orw}}$$

$$k_{ro} = k_{rocw} S_o^* \left[\frac{k_{row}(@S_w)}{k_{rocw}(1 - S_w^*)} \right] \left[\frac{k_{rog}(@S_g)}{k_{rocw}(1 - S_g^*)} \right]$$

Stone II

Stone's Model II is a modified version of Stone I. It is a better predictor than Stone 1 in high-oil saturation regions. It is more appropriate for water-wet systems, and is not suited for intermediate wet systems.

$$k_{ro} = k_{rocw} \left[\left(\frac{k_{row}}{k_{rocw}} + k_{rw} \right) \left(\frac{k_{rog}}{k_{rocw}} + k_{rg} \right) - \left(k_{rw} + k_{rg} \right) \right]$$

Baker

Baker's three-phase model is based on saturation-weighted interpolation between the two-phase relative permeability values. It is well suited for intermediate wet or oil-wet systems.

$$k_{ro} = \frac{(S_w - S_{iw})(k_{rocw}) + (S_g - S_{gc})(k_{rog})}{(S_w - S_{iw}) + (S_g - S_{gc})}$$

Water correlations

Correlations

Meehan: Generally applicable to calculate water properties while accounting for salinity.

Constant Properties: Allows you to enter values for the solution water gas ratio, water formation volume factor, water compressibility, and water viscosity at initial reservoir conditions.

Custom Table: Allows you to enter laboratory measurements for water properties.

Meehan (generally applicable)

Water compressibility is affected by the presence of solution gas, which evolves below the bubble point. The bubble point pressure of a gas-saturated brine is equal to the bubble point pressure of the co-existing oil. In a gas / water system, the water is considered to be at its bubble point at the initial reservoir pressure. Meehan presented an empirical correlation to determine the isothermal compressibility coefficient of gas-free water and gas-saturated water.

Compressibility

Gas-free water

$$c_{\tau, wf} = 10^{-6} \left(A + BT + CT^2 \right)$$

where:

$$A = 3.8546 - 0.000134$$

$$B = -0.01052 + 4.77 * 10^{-7} p$$

$$C = 3.9267 * 10^{-5} - 8.8 * 10^{-10} p$$

Gas-saturated water

$$c_{T, wg} = c_{T, wf} \left(1.0 + 8.9 + 10^{-3} R_{sw} \right)$$

where R_{sw} is the gas solubility in water

Saline solution

$$c_{T, w} = c_{T, wg} * C_z$$

$$C_z = 1.0 + \left(-0.052 + 2.7 \cdot 10^{-4} T - 1.14 \cdot 10^{-6} T^2 + 1.121 \cdot 10^{-9} T^3 \right) S^{0.7}$$

where S is the salinity of saline solution (brine)

General concepts

General concepts include the following:


- Artificial lift
- Automatic parameter estimation theory
- Capillary pressure
- Continuous time track
- Data diagnostics theory
- Data diagnostics flowchart
- Equivalence of constant rate / pressure
- Fracture properties
- Geomechanical reservoir models
- GIS theory
- Interpolation theory
- Langmuir isotherm
- Material balance time theory
- Probabilistic
- Pseudo-pressure
- Pseudo-time
- Relative permeability
- Reserve evaluation
- Reservoir flow
- Reservoir fluid types
- Reservoir properties
- Shale properties
- Terminal / limiting decline rate
- Time-dependent skin
- Time to stabilization
- Water drive reservoir
- Well linking logic

Artificial lift

Pumping

For pumping wells with recorded liquid levels, use the Pumping flow path.

Open the Wellbore editor, and click **Profile**. Click the **Flow Path** drop-down menu in the Pressure Loss Calculation Parameters section, and select **Pumping**.

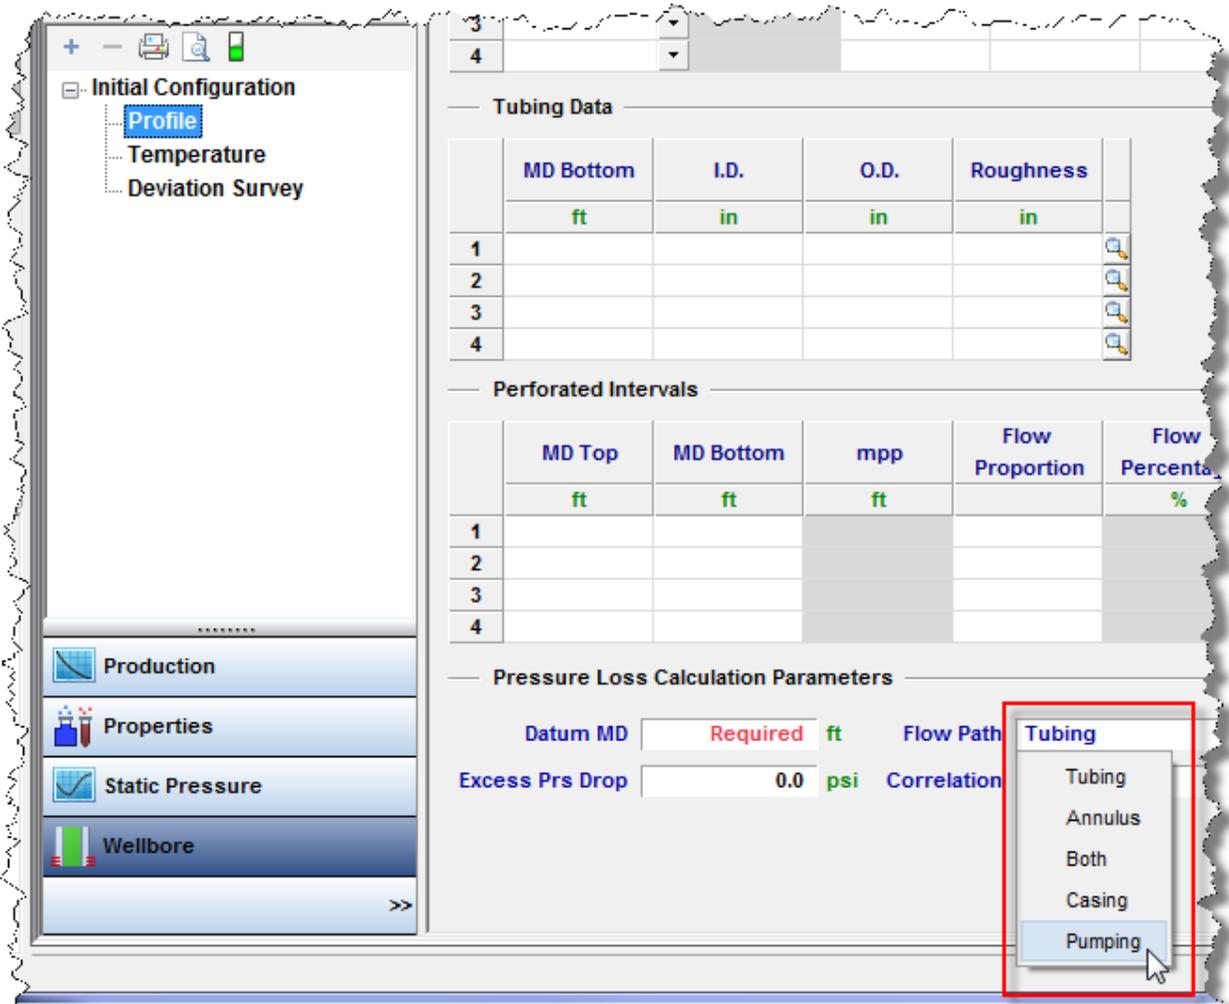

The Pumping flow path makes the assumption that all liquids are pumped up the tubing (the wellbore requires a tubing string), that all gas is produced up the annulus, and that the pump is at the end of tubing (EOT). The Pumping flow path ignores tubing pressures; only entered or imported casing pres-

pressures are used to perform wellbore calculations. The final calculated sandface pressure is determined by breaking up the wellbore into individual sections.

A flowing row in the Production editor is a row that contains production information (gas or liquid). A non-flowing (shut-in) row has a value of “0” or null (that is, blank) for all volumes / rates.

With tubing landed below datum:

- The pressure drop is determined from the wellhead to the top of the liquid level using single-phase gas.
- Then, the hydrostatic pressure drop is determined from the top of the liquid level to the datum by multiplying the height of the liquid column by the liquid gradient.

With tubing landed above datum:

- The pressure drop is determined from the wellhead to the top of the liquid level using single-phase gas.
- The hydrostatic pressure drop is determined from the top of the liquid level to the end of tubing by multiplying the height of the liquid column by the liquid gradient.
- Finally, a multiphase flowing gradient is performed from the EOT to the datum.

The following columns are available in the Production editor:

- Liquid Level (MD)
- Liquid Level (TVD)
- Gas Gradient
- Water Gradient
- Oil Gradient
- Emulsion Gradient
- Average Liquid Gradient

Harmony Enterprise calculates and displays the average gradient for gas, oil, and water. Based on the water-oil ratio (WOR), it then calculates and displays an Emulsion Gradient (if applicable). Finally, Harmony Enterprise divides the entire hydrostatic pressure drop of the liquid column by the column height to determine the average liquid gradient. You can overwrite any and all gradients, with the exception of the emulsion gradient, which is a calculated value.

Calculated sandface pressure for a flowing row:

	Start Date	End Date	Gas Volume	Oil Volume	Water Volume	Casing Pressure	Pressure Source	Calculated Sandface Pressure	Liquid Level (MD)	Average Liquid Gradient	Gas Gradient	Oil Gradient	Water Gradient	Emulsion Gradient
	DD/MM/YYYY	DD/MM/YYYY	MMscf	stb	stb	psi(a)		psi(a)	ft	psi/ft	psi/ft	psi/ft	psi/ft	psi/ft
1	01/01/2012	02/01/2012	1.000	10.0	10.0	300.00	Casing Pressure	583.54	9500.00	0.340	0.011	0.340		

In cases where oil and water rates are entered, Harmony Enterprise assumes that when the well is flowing, only the lightest liquid (oil) is present in the static liquid column. Therefore, a water and emulsion gradient is not displayed, and the Average Liquid Gradient value is identical to the Oil Gradient.

Calculated sandface pressure for a shut-in row:

	Start Date	End Date	Gas Volume	Oil Volume	Water Volume	Casing Pressure	Pressure Source	Calculated Sandface Pressure	Liquid Level (MD)	Average Liquid Gradient	Gas Gradient	Oil Gradient	Water Gradient	Emulsion Gradient
	DD/MM/YYYY	DD/MM/YYYY	MMscf	stb	stb	psi(a)		psi(a)	ft	psi/ft	psi/ft	psi/ft	psi/ft	psi/ft
1	01/01/2012	02/01/2012	1.000	10.0	10.0	300.00	Casing Pressure	583.54	9500.00	0.340	0.011	0.340		
2	02/01/2012	03/01/2012	0.000	0.0	0.0	300.00	Casing Pressure	616.32	9500.00	0.351	0.007	0.340	0.417	0.379
3	03/01/2012	04/01/2012	0.000	0.0	0.0	300.00	Casing Pressure	814.67	9000.00	0.374	0.007	0.358	0.396	0.377
4	04/01/2012	05/01/2012	0.000	0.0	0.0	300.00	Casing Pressure	995.70	8500.00	0.372	0.008	0.351	0.403	0.377
5	05/01/2012	06/01/2012	0.000	0.0	0.0	300.00	Casing Pressure	1187.06	8000.00	0.376	0.007	0.357	0.400	0.379
6	06/01/2012	07/01/2012	1.000	10.0	10.0	300.00	Casing Pressure	583.54	9500.00	0.340	0.011	0.340		


The first shut-in row sets the height of the static oil column. If the liquid level rises, the oil column also rises, followed by an emulsion. The WOR of the last producing row is used to calculate the emulsion gradient for all of the following shut-in rows in this period until the well begins to flow again.

Note: Gradients are not calculated when the pressure source is Gauge depth pressure.

Gas lift

For wells on gas lift, use the Gas Lift flow path. To select the Gas Lift flow path:

Open the Wellbore editor, and click **Profile**. Click the **Flow Path** drop-down menu in the Pressure Loss Calculation Parameters section, and select **Gas Lift**.

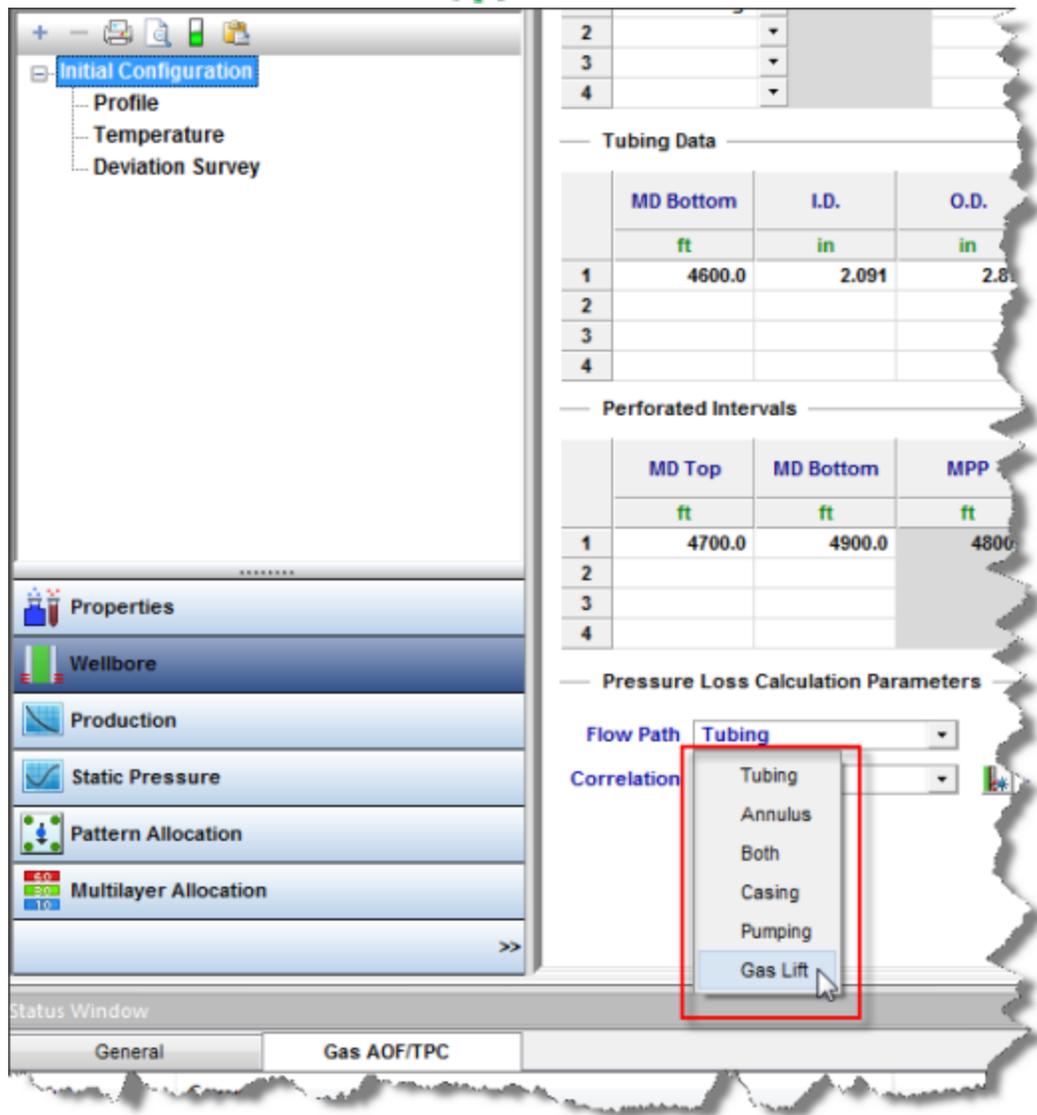

The screenshot displays the 'Initial Configuration' window with a sidebar on the left containing the following sections:

- Initial Configuration
 - Profile
 - Temperature
 - Deviation Survey
- Properties
- Wellbore
- Production
- Static Pressure
- Pattern Allocation
- Multilayer Allocation

The main area shows configuration tables and parameters:

Tubing Data

	MD Bottom	I.D.	O.D.
	ft	in	in
1	4600.0	2.091	2.8
2			
3			
4			

Perforated Intervals

	MD Top	MD Bottom	MPP
	ft	ft	ft
1	4700.0	4900.0	4800
2			
3			
4			

Pressure Loss Calculation Parameters


Flow Path: Tubing

Correlation: **Gas Lift** (highlighted in a red box)

Other options in the dropdown: Tubing, Annulus, Both, Casing, Pumping.

Status Window: General | Gas AOF/TPC

Additional options become available.

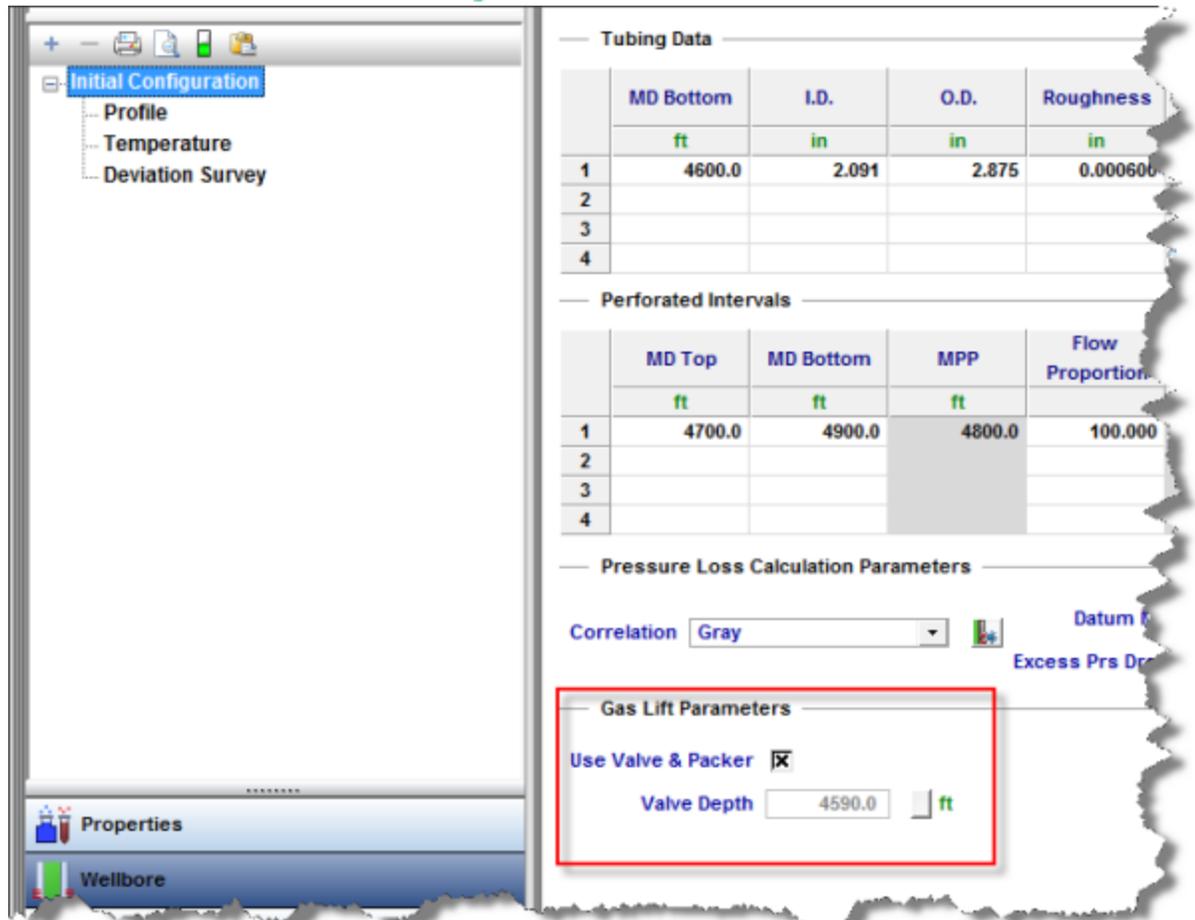

You can choose to model your gas lift system conventionally, with an operating valve and a packer, or as a “poor boy” system with no packer / valve.

Conventional gas lift

To model your gas lift system conventionally, click the **Use Valve & Packer** box. You must also specify the depth of the operating valve. If you do not specify a depth, Harmony Enterprise uses a default valve location 10 feet above EOT. With a packer in place, you must use tubing pressure as your pressure source. Sandface pressures cannot be calculated using the casing side pressure source.

The wellbore calculations assume that none of the injected gas is lost to the reservoir(s), and that all of it is returned up the tubing. Sandface pressure calculations occur as follows:

- The pressure drop from the surface to the operating valve is determined using the sum of all production rates, plus the rate of gas injection.

- The pressure drop from the operating valve to the datum(s) is determined using production rates only.

"Poor boy" gas lift

To model your gas lift system as “poor boy”, deselect the **Use Valve & Packer**box. Because there is no packer in place, it is possible to use either casing or tubing as your pressure source in order to perform sandface pressure calculations.

Just as in the conventional case, the wellbore calculations assume that none of the injected gas is lost to the reservoir(s). Note that pressure calculations differ depending on your pressure source (that is, tubing or casing).

For tubing, the calculations occur as follows:

- The pressure drop from the surface to EOT is determined using the sum of the production rates, plus the rate of gas injection.
- The pressure drop from EOT to the datum(s) is determined using production rates only.

For casing side pressure, the calculations occur as follows:

- The pressure drop from the surface to EOT (or the most shallow layer above EOT, if applicable) is determined using only the gas injection rate.
- If there are layers above EOT, the pressure drop from the most shallow layer above EOT to EOT is determined using the gas injection rate, plus the rate of any fluids produced from the layer(s) above EOT.
- The pressure drop from EOT to the remaining datum(s) is determined using only the production rates from the layers below EOT.

Properties of injected gas

The properties of the injected gas may be different from the properties of the produced gas. You must enter your gas lift properties separately from produced gas properties in the Properties editor.

Note: In Harmony Enterprise, gas lift injection is treated differently than gas injection. If you want to model your well on gas lift, you must ensure that the injection rates (or volumes) are entered in the Production editor in the Gas Lift Injection fields, *not* the Gas Injection fields.

Entering rates into the production editor

Harmony Enterprise supports three natural gas streams:

1. Under the Production node, click **Gas**. This is gas produced from the reservoir. If you have gas lift operations, this is a “net produced gas”; which is gas produced from the well minus the gas injected for gas lift.
2. Under the Injection node, click **Gas Lift**. This is the gas injected into the wellbore for gas lift injection purposes only.
3. Under the Injection node, click **Gas Inj**. This is gas injected into the reservoir for pressure maintenance, enhanced oil recovery (EOR), or disposal. This gas injection has nothing to do with gas lift.

Therefore, in the following screenshot, the total gas received at the wellhead (gross produced gas) is the sum of Gas Volume and Gas Lift Inj Volume.

Pressure for Analysis Pressure Interpolation										
	Start Date	End Date	Gas Volume	Oil Volume	Gas Lift Inj Volume	Tubing Pressure	Casing Pressure	Active Pressure	Pressure Source	Calculated Sandface Pressure
	MM/DD/YYYY	MM/DD/YYYY	MMscf	stb	MMscf	psi(a)	psi(a)	psi(a)		psi(a)
1	05/15/2009	05/16/2009	5.000	500.0	0.000	1000.00	1500.00	1000.00	Tubing Pressure	2454.40
2	05/16/2009	05/17/2009	5.000	500.0	1.000	1000.00	1600.00	1000.00	Tubing Pressure	2572.90
3	05/17/2009	05/18/2009	5.000	500.0	2.000	1000.00	1700.00	1000.00	Tubing Pressure	2710.13
4	05/18/2009	05/19/2009	5.000	500.0	3.000	1000.00	1800.00	1000.00	Tubing Pressure	2860.28
5	05/19/2009	05/20/2009	5.000	500.0	4.000	1000.00	1900.00	1000.00	Tubing Pressure	3019.90

Automatic parameter estimation theory

Automatic parameter estimation (APE) is a mathematical process, known as multi-variable optimization, which automatically adjusts a specified set of function parameters to minimize error between the function and measured data. The mathematical function being minimized is called the objective function.

With analytical modeling in Harmony Enterprise, the objective function is calculated as follows:

- If Calculate Pressure mode is used:

$$E_{avg} = \frac{\sum_i \left(\frac{|(p_{calc})_i - (p_{hist})_i|}{(p_{hist})_i} w_i \right)}{\sum_i w_i}$$

- If Calculate Rate mode is used:

$$E_{avg} = \frac{\sum_i \left(\frac{|(q_{calc})_i - (q_{hist})_i|}{(q_{hist})_i} w_i \right)}{\sum_i w_i}$$


Where (summation is done for all history points, and i is the number of the point):

- $(p_{hist})_i$ — historical pressure for the i -th point
- $(p_{calc})_i$ — calculated pressure for the i -th point
- $(q_{hist})_i$ — historical rate for the i -th point
- $(q_{calc})_i$ — calculated rate for the i -th point
- w_i — weight for the i -th point

Note: $w_i = 0$ if the point is deselected; $w_i = 1$ if the point is selected; $w_i = 10$ if the point is weighted.

If Calculate Both mode is used, the objective function is calculated as the sum of the objective functions for Calculate Pressure and Calculate Rate modes.

E_{avg} reflects the difference between calculated and historical data; therefore a smaller E_{avg} indicates a better history match. The value of the objective function E_{avg} is displayed under the APE group in the Analytical Model pane.

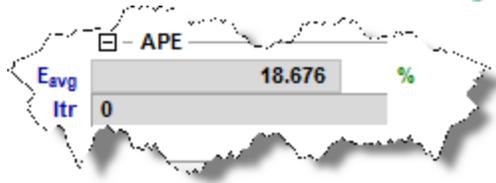

Over an iterative process, the selected modeling parameters are adjusted using the Mead (Simplex) optimization method to minimize the objective function.

Automatic parameter estimation should not be used exclusively because it is possible to find several sets of parameters that yield an acceptable model match. In other words, the solution can be non-unique. It is always recommended to start with parameters obtained from diagnostic analyses, and then fine-tune these parameters manually to obtain a close match. You can use APE for unknown parameters, or parameters which are not known with confidence. The more parameters that are selected for APE (or fitting), the longer the fitting process will take, with a greater chance of finding non-unique solutions. Note that if you include more data points in the fit, it will reduce performance.

Mead (Simplex)

This is a variation of the downhill Simplex method. The Simplex routine is a non-linear regression algorithm used for APE for reservoir and well parameters (k , s , C_D , etc.) when modeling pressure-transient data. The Mead method only requires function evaluations of the objective function, and not the derivatives.

To achieve greater convergence, the downhill Simplex method is modified by imposing constraints on the parameters during the search. Estimates of the parameters are always checked against preset maximum and minimum values for each parameter. Once the routine has converged on some parameters, it is restarted, with a slight perturbation away from the final values, and then it is allowed to converge again. This ensures that the parameter estimates are not the result of some local minimum in the residual, but rather a more global minimum.

Compared to other non-linear regression methods, this method is not always very efficient because it can require a large number of function evaluations. This tends to make it extremely slow in some cases. However, it is straightforward and not encumbered by the requirement of derivatives, and hence tends to be more robust under any conditions.


Capillary pressure

Capillary pressure (P_c) is the pressure difference across the interface between two immiscible fluids arising from capillary forces. These capillary forces are surface tension and interfacial tension. In porous media, the capillary pressure is the difference between the pressure in the non-wetting phase and the pressure in the wetting phase. It is defined by:

$$P_c = p_{non-wettingphase} - p_{wettingphase}$$


In oil-water systems, water is typically the wetting phase; while for gas-oil systems, oil is typically the wetting phase.

In a drop of water in oil, the interfacial tension is denoted by σ and has the following capillary pressure:

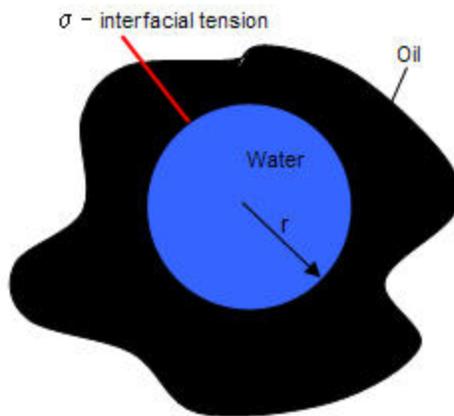


$$P_c = p_w - p_o = \Delta p = \frac{2\sigma}{r}$$

A drop of water on a surface with contact angle θ (where $\theta < 90^\circ$ is water wet) has the following capillary pressure:

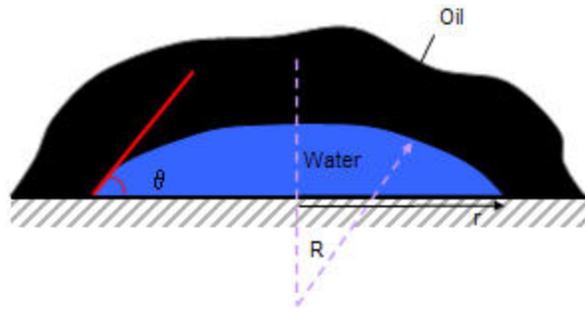


$$P_c = p_w - p_o = \Delta p = \frac{2\sigma \cos(\theta)}{r}$$

Water in a capillary tube with contact angle θ , where h is the height the water rises, has the following capillary pressure:

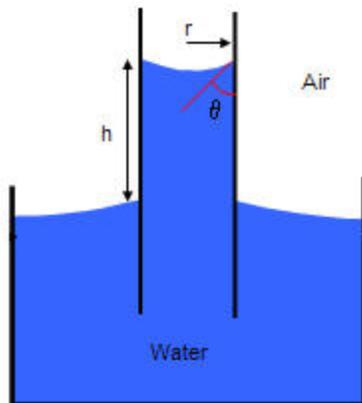

$$P_c = p_{air} - p_o = \Delta p = \frac{2\sigma \cos(\theta)}{r} = (\rho_w - \rho_{air})$$

The shape of the curve depends on pore sizes, size distribution, and fluid properties. The permeability of the reservoir rock can alter the capillary pressure curve. If the value of the permeability is lower, the pore size is smaller, and the capillary pressure is higher.

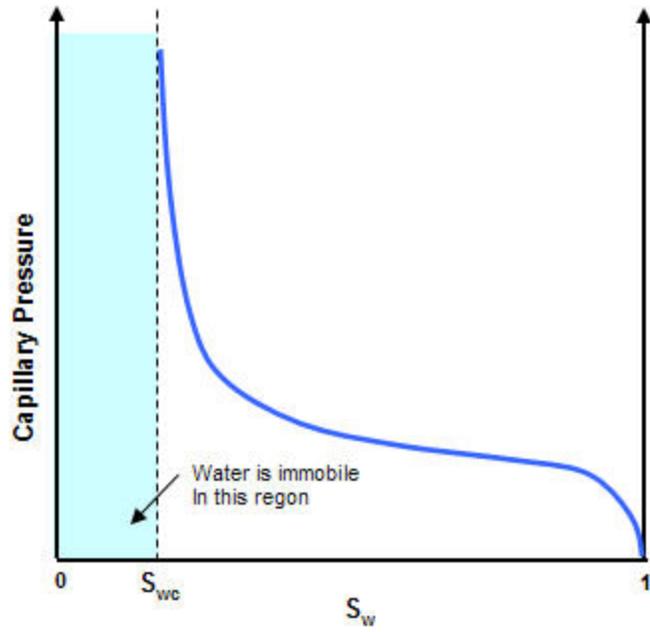

Continuous time track

This feature is used to adjust your data depending on your shut-in conditions. It is extremely important that you use this feature correctly, as your volume and rate data is influenced by this setting. The time track on import is interpreted based on the state of this setting:

- If this option is *selected*, no adjustment to the time track is made. The start dates in Harmony Enterprise match the data imported.
- If this option is *deselected*, Harmony Enterprise analyzes the time track. If the time between two reported dates is greater than a day, but less than a month, a day is assumed. If the time is greater than a month, but less than a year, a month is assumed.

The Continuous Time Track checkbox is located in the Import Options pane (Import Data dialog box) and the Select Wells to Import dialog box. By default, this option is selected for cumulative time.

Example: demonstrating the effect of the Continuous Time Track option

Given the following data, there are noticeable differences in the values Harmony Enterprise uses based on whether or not you select this feature:

Timestep (t)	Rate (q)
1	10
2	20
4	30
5	40

If you select the Continuous Time Track option, Harmony Enterprise uses the following values:

t_{start}	t_{end}	Rate (q)	Volume (V)	Cumulative Volume (Q)
1	2	10	10	10
2	4	20	40	50
4	5	30	30	80



t_{start}	t_{end}	Rate (q)	Volume (V)	Cumulative Volume (Q)
5	6	40	40	120

If you deselect the Continuous Time Track option, Harmony Enterprise uses the following values:

t_{start}	t_{end}	Rate (q)	Volume (V)	Cumulative Volume (Q)
1	2	10	10	10
2	3	20	20	30
3	4			30
4	5	30	30	60
5	6	40	40	100

Data diagnostics theory

The analysis of production data to determine reservoir characteristics, completion effectiveness, and hydrocarbons-in-place is becoming more prevalent. The methods of analysis have been documented and verified in numerous publications. The concepts underlying modern production data analysis are the same as pressure transient analysis. Even though both these domains use the same underlying theory of fluid flow through porous media and can determine the same variables (permeability, skin, reservoir size), it should not be assumed that they can replace each other. Pressure transient analysis and production data analysis must be viewed as complementary and not substitutes for each other. Pressure transient analysis deals mostly with “high frequency / high resolution” shut-in data, while production data analysis deals with “low frequency / low resolution” flowing data. This in itself, presents significant differences in data quality and interpretations.

Like all mathematical solutions, production data analysis methods are subject to numerous assumptions, which often can be justified. In this case, if the data is complete, consistent and of good quality, meaningful results can be obtained. However, if the quality of the data is questionable, then the production data analysis methods should be used with caution. In this case, the analyst’s ability to filter out the bad data and extract the true reservoir signal becomes extremely important. As mentioned by Anderson et al. 2006, blind application of production data analysis methods without consideration of data quality issues can lead to misinterpretation of the reservoir characteristics. An analyst, who is not experienced in recognizing such inconsistencies, can obtain an answer that appears to be mathematically correct, yet be completely wrong because of using “bad data” for analysis.

There is no complete set of criteria that covers all of the challenges and pitfalls in production data analysis. Some inconsistencies in data measurement or reporting are more critical than others, while the same issue may be critical in one situation, but not in another. This makes data diagnostics complicated and very dependent on the expertise of the analyst. Nonetheless, there are some issues that are worse than others, and cause “bad” or inconsistent production data a lot of the time. Some of the more common issues are listed below:

- **Missing flowing pressures** — Even though the rate history is carefully obtained from daily records, the pressure history is infrequent, inaccurate, or often non-existent.
- **Missing flow rates** — Even though the flowing pressure of an individual well is obtained accurately and frequently from permanently installed downhole gauges, the corresponding flow rate is often non-existent, or has been pro-rated on a monthly basis from a group meter of several wells.
- **Rate or pressure averaging** — Often the flow rate and/or the flowing pressure are measured at high frequency (every minute), but for data storage efficiency, are

averaged to daily quantities. Depending on the rate variations during that period, this may result in meaningless numbers.

- **Wrong initial pressure** — The initial pressure is unknown or wrong, especially in tight gas or infill drilling.
- **Liquid loading** — The calculation of sandface pressures is wrong due to the unknown “standing liquid column” in the wellbore.
- **Wrong pressure source and flow path** — If the source of the wellhead pressure measurement or the flow path are specified incorrectly (tubing, annulus or both, or changing from one to the other) the calculated sandface pressures will be incorrect.
- **Wrong production data** — Rate allocations to individual wells based on group metering can be in error, as the distribution is based on infrequent tests.
- **Wrong production data** — The water production rate of individual wells is often poorly monitored or misreported. While small quantities of water may have little effect on the reservoir interpretation, they can have a significant effect on the wellbore performance and on the calculation of sandface pressures from wellhead data.
- **Significant increase in water / gas ratio** — When the water-gas ratio is high (>100 bbl/MMscf), the assumption of single-phase Darcy flow in the reservoir may not be valid, or the skin due to water coning may be variable, which affects the validity of the permeability and skin calculations.
 - Operational modifications:
 - Opening up of new perforations / shutting off old perforations
 - Refracturing of the well
 - Changing tubulars
 - Changing flow path
- **Wrong location of pressure gauge** — Often the only flowing pressure available is the pressure downstream of the choke. If the choke is wide open, this pressure is usable, but if the choke is being used to control the flow rate, then the downstream pressure is not of much value.
- **Wrong rate and pressure synchronization** — The original rate and pressure data often have different time tracks, and if they have not been synchronized properly, the interpretation may be invalid.

Sometimes a simple look at the reported production data (flowing pressure, gas and liquid flow rates and time) can reveal obvious or potential inconsistencies, or provide insight for interpretation. Here are some examples:

- If the flow rate suddenly increases, the flowing pressure should abruptly decrease correspondingly.
- If the flow rate is below the “critical liquid lift velocity” calculated using Turner correlation (Turner et al. 1969) or Coleman correlation (Coleman et al., 1991), there is the likelihood of liquid loading.
- If the tubing and casing pressure profiles are diverging, it is an indication of liquid load-up.
- The pressure is measured every minute but reported daily, along with the daily average rate. If there have been interruptions or significant rate changes during the 24-hour interval, an average daily rate is meaningful, but an average daily pressure is not.
- Sometimes the flow rate is pro-rated from a group-meter measurement instead of being measured at the individual well. The pro-rating formula honors the total production from all the wells, but may be completely incorrect at the individual well level, especially when there have been undocumented production disruptions at various wells.
- A rapid increase in the water-gas ratio could indicate water coning, and wellbore operational problems.
- A rapid decrease in the water-gas ratio or condensate-gas ratio could indicate liquid loading in the wellbore.
- A high frequency of scatter in production rates, pressures, the water-gas ratio, or condensate-gas ratio can indicate unstable flow in the well and/or unstable operating conditions.
- Flat (constant) liquid production rates, with large step changes, usually indicate infrequent measurement. The presence of this kind of data can make the quality of the calculated sandface pressures low, even if the wellhead pressures are of high quality.
- No liquid rates are reported, yet either the pressure data indicates “slugging”, or it is a known fact that liquids are being produced. In this case, the quality of the calculated sandface flowing pressure may not be high, even if the wellhead pressures are of high quality.
- Flat (constant) pressures with step changes usually indicate infrequent pressure measurement. This means that one pressure is recorded per week or month, and then it is reported as a constant value until another reading is taken.
- Straight-line trends in pressures or rates usually indicate infrequent measurements and interpolation between them (rather than actual measurement).

Note: For additional data diagnostic examples, see the [data diagnostics flowchart](#).

When an analysis is performed, the analyst must always review the interpretation to make sure it makes sense. This is the ultimate test and must never be avoided. Although it is preferable to identify and eliminate inconsistent data before the analysis is undertaken, sometimes inconsistencies do not become evident until after the analysis has been completed. For example, a sudden change in the slope of the flowing material balance plot (p/Z plot) is a diagnostic that depends on information about original-gas-in-place, which is obtained from interpretation.

Recognizing the fact that the analysis and interpretation of production data is influenced significantly by the quality and consistency of the data, it is the objective of this topic to develop a series of diagnostic plots and guidelines that can help analysts to identify “bad data” and prevent misleading answers resulting from analyzing poor-quality data. The diagnostic plots are independent of any interpretations as they are considered pre-analysis diagnostics.

To achieve the objective of this topic, a number of diagnostic plots are proposed. These plots are then used in a number of case studies using field examples. The intent was to investigate if these diagnostics plots could differentiate between “good data” and “bad data”. The results of this study allow production engineers to recognize poor-quality data, and avoid being misled by their results, or at least to make a reasonable judgments as to the quality of their interpretations.

Production data diagnostics

There are four areas of investigation in production data diagnostics:

1. Outlier removal
2. Liquid loading in the wellbore
3. Single phase flow in the reservoir
4. Consistency (correlation) between rate and pressure

Outlier removal

The first step in production data diagnostics is the removal of outliers. Apart from adding extraneous noise to what is often an already confusing mass of data, these outliers can cause incorrect interpretation if they are not removed. For example, often outliers show a unit slope on typecurves. This unit slope may be easily misdiagnosed as reservoir depletion. It should *not* be used as an indication of original-gas-in-place or of boundary-dominated flow. A simple solution is to simply identify and remove the outliers from the analysis.

Liquid loading in the wellbore

In this step, the analyst should investigate if there is any issue with liquids loading up in the well, or if there is any unstable flow in the well. If liquid loading exists, and the sandface flowing pressure is being calculated from wellhead measurements, it is very easy to get the wrong answer, because multiphase flow calculations do not account for “stagnant” liquid columns in the wellbore. The following points should be considered in this step:

- If the pressure data is measured at the mid-point of perforations (MPP), then liquid loading or any other wellbore issues will not affect production data analysis. However, any correction from the gauge depth to the MPP can be a source of error (sometimes significant, depending on the distance between them).
- If the sandface pressure is being calculated from wellhead measurements, and the “quiet side” is being used (for example, the well is flowing through tubing and the pressure source is the annulus), the calculation down to end-of-tubing (EOT) is often very good. However, from the EOT to the MPP, there often exists a “stagnant” liquid column, which must be accounted for by estimating a “flowing” gradient (estimated at 0.2 - 0.3 psi/ft or 4-7 kPa/m for water).
- If the sandface pressure is being calculated from wellhead measurements, and the “flowing side” is being used, multiphase flow calculations must be used, and their accuracy (unless calibrated to similar flowing conditions) is questionable.

The following plots can be used to identify liquid loading. (Some of the plots can be used to identify productivity issues as well as liquid loading.)

- **Gas rate and sandface pressure versus time** — If there is a high degree of scatter in production rates and pressures, then it indicates unstable flow in the well, like slugging, and/or unstable operating conditions.
- **Difference between casing and tubing pressure versus time** — The tubing and casing pressure profiles should track each other if there is no problem in the wellbore. The plot shows that if the difference between casing pressure and tubing pressure is changing (diverging tubing and casing pressures with time), then there is possibility of liquid loading.
- **Water-gas-ratio or condensate-gas-ratio versus time** — A fluctuation or rapid decrease in the water-gas ratio and condensate-gas ratio is an indication of unstable flow in the well. Fluctuation is an indication of slug flow and a rapid decrease is an indication of liquid loading. If slug flow is indicated, yet no water rate is reported, then the quality of calculated sandface pressures may be questionable, even if the wellhead pressures are of high quality.

The water-gas ratio versus time plot has another practical importance. A rapid increase in the water-gas ratio could indicate possible productivity issues related to water (for example, water coning), as gas relative permeability decreases significantly at high water-gas ratios.

- **log (q) versus log (t)** — This plot has diagnostic value in cases where the gas rate is decreasing abnormally as a result of liquid loading or any other productivity issues. The log scale tends to compress the late-time data and accentuate the declining rate trend in the late-time data. This plot may also accentuate the fluctuation in gas rate, which can be useful to identify slug flow.

All the above indicators of wellbore liquid problems must be viewed together, as they are often complementary effects, but some of them may be more evident than others.

Single-phase flow in the reservoir

A plot of the water-gas ratio versus time is used in this step. If the water-gas ratio is high, the assumption of single-phase flow in the reservoir may not be acceptable. A threshold value for the water-gas ratio should be defined (suggested value of 100 bbl / MMscf), and the portion of the data with a water-gas ratio higher than the threshold value should not be used for analysis using typecurves and analytical models, as these analysis methods are developed assuming single-phase flow inside the reservoir.

Consistency (correlation) between rate and pressure

After removing the outliers, and the data which indicates liquid loading and productivity issues in the wellbore, and/or multiphase flow inside the reservoir, the analyst should look for consistency between pressure and rate data. If the rate and pressure data are inconsistent with each other, they should be identified and should *not* be used to interpret reservoir effects (permeability, skin or gas-in-place). The series of *Diagnostic Plots* described in the following section are recommended for use in identifying or accentuating any such inconsistency.

The concept of a diagnostic plot implies that a certain feature or behavior emerges from a given data profile. More specifically, diagnostic plots should highlight that the data is “bad” by indicating that a certain expected feature does not exist, or that the displayed profile deviates significantly from expectations. When this occurs, the apparent signal is potentially misleading and the wrong reservoir interpretation would be extracted, if the analyst proceeds. As explained by Anderson et al. 2006, a diagnostic plot for production data should:

- Highlight that there is something wrong with the production data.
- Identify the causes of misbehavior, if any exist.
- Show if the flow rate and flowing pressure are correlated or not.


The diagnostic plots for identifying inconsistent production data are described below:

- **Gas rate and sandface pressure versus time** — Visually check for a negative correlation between rate and pressure data. This means that if the flow rate suddenly increases (or decreases), then the flowing pressure should decrease (or increase) correspondingly. If that does not happen, the rate and pressure data are inconsistent with each other, which may be because the rate is wrong, or the pressure is wrong, or the completion has changed (for example, refrac, tubing change).
- If the rate changes by an order of magnitude, it is better to use $\log(q)$ instead of q .
- **Normalized rate versus time** — This is a plot of $q / \Delta p_p$ versus time. In the absence of step changes in rate and pressure, theory indicates that $q / \Delta p_p$ must decrease continuously with time. Therefore, an increasing trend in $q / \Delta p_p$ with time indicates that non-reservoir effects are present. Note that if there are different stems in the $q / \Delta p_p$ versus time plot and $q / \Delta p_p$ is decreasing with time in each stem, (see Figure 1a), the analyst should not conclude that the rate and pressure data are inconsistent, as these different stems can be caused by step changes in rate and/or pressure. However, it forces the analyst to ask the question: Is there any inconsistency between rate and pressure data?
- **Normalized pressure versus time**—This is a plot of $\Delta p_p / q$ versus time. The trend of the plot is the reverse of the $q / \Delta p_p$ versus time plot. However, the signature and diagnostic value tends to be the same. In general, whenever a plot of $q / \Delta p_p$ is used, pretty much the same information could have been obtained by plotting $\Delta p_p / q$ instead. The choice of one or the other is a personal preference.
- **Percentage drawdown versus time** — This plot shows $[(\Delta p / p_i) * 100]$ versus time, and indicates the degree of drawdown. Knowing the degree of drawdown can be an important issue in production data diagnostics because theory indicates that the pressure variable to be used for analysis should be $D_p (= p_i - p_{wf})$. If D_p / p_i is close to unity, then we are dealing with a well with high drawdown, and in this case, the effect of p_i overshadows that of p_{wf} , and makes the rate insensitive to variations in the flowing pressure. In other words, any discrepancies in flowing pressure will not have much of an effect on rate. For example, if there is a step change in flowing pressure, this step change may not be reflected in the rate (given normal data scatter). In the case of high drawdown, even if the flow rate and pressure are *not* correlated, the diagnostic plots which depend on D_p may not indicate that there is a problem.
- The fact that high drawdown yields pressure-insensitive rates is a diagnostic onto itself. This is very useful when public data is analyzed, as often, all or part of the pressure data is missing from the production file. If we know that the well is producing under high drawdown conditions, then the rate is insensitive to flowing pressure and any discrepancies in flowing pressure do not really matter.
- **Blasingame typecurve** — This is a log-log plot of normalized rate ($q / D_p p_p$) versus material balance time, (that is, G_p / q), where G_p is the cumulative production of gas and q is the gas rate. Theoretically, normalized rate must decrease continuously with material balance time. Therefore, an increasing trend indicates that

non-reservoir effects are present. If there are step pressure or rate changes, they will cause a sudden deviation from the decreasing trend, but the general trend will be resumed if the data is consistent. However, if there are different stems in this plot, it is an indication of inconsistency between rate and pressure data (see Figure 1b).

- **NPI typecurve** — This is a log-log plot of normalized pressure (Dp_p / q) versus material balance time (Gp / q). This plot is the inverse of the Blasingame plot. Theoretically, the normalized pressure must increase continuously with material balance time. Therefore, a decreasing trend indicates that non-reservoir effects are present. If there are different stems in this plot, it is an indication of inconsistency between rate and pressure data.
- **FMB rate** — This is based on the flowing material b Balance (FMB) concept. It is a Cartesian plot of normalized rate (q / Dp_p) versus normalized cumulative (Gp / Dp_p). Theoretically, the normalized rate must decrease continuously with normalized cumulative. Therefore, an increasing trend indicates non-reservoir effects. If there are different stems in this plot, it is an indication of inconsistency between rate and pressure data.
- **FMB pressure** — This is the inverse of the FMB rate plot. It is a Cartesian plot of normalized pressure (Dp_p / q) versus material balance time (Gp / q) and should be increasing continuously. Therefore, a decreasing trend indicates that non-reservoir effects are present. If there are different stems in this plot, it is an indication of inconsistency between rate and pressure data.
- **Blasingame-Cartesian** — This is a Cartesian plot of normalized rate (q / Dp_p) versus material balance time (Gp / q). Theoretically, normalized rate must decrease continuously with material balance time. Therefore, an increasing trend in normalized rate with material balance time indicates that non-reservoir effects are present. If there are different stems in this plot, it is an indication of inconsistency between rate and pressure data.

Figure 1: Example of step change in rates or pressures in normalized rate versus time and Blasingame typecurve plots

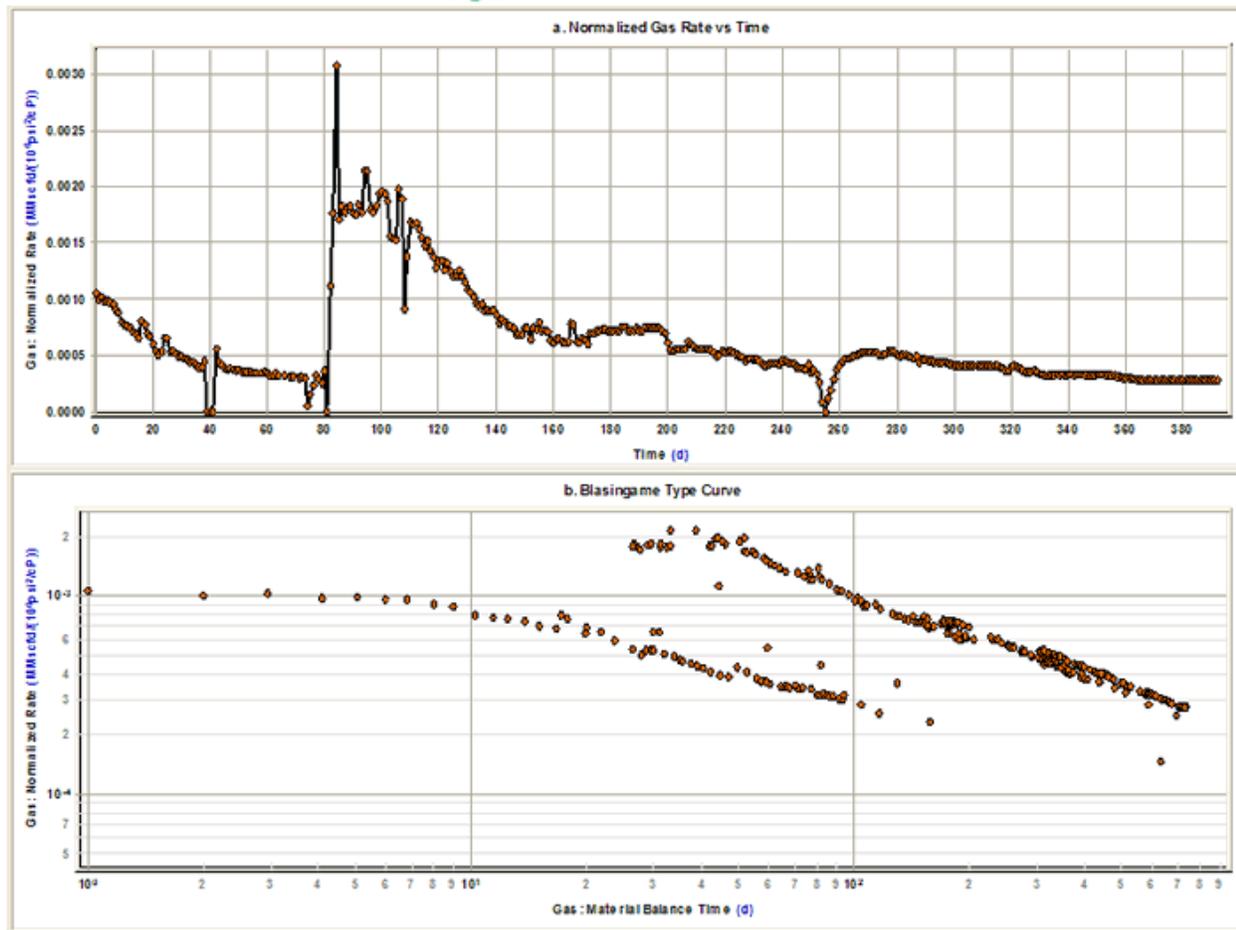

All of the above plots do not always show the same inconsistencies. Depending on the data quality, the variations in operating conditions, rate fluctuations, source of measurements, and the degree of drawdown, some plots highlight an inconsistency, while others may not. We therefore recommend that all these plots be drawn and inspected, and if any one of them shows an inconsistency, the data should be examined in detail to understand the cause and severity of the problem. The case studies below demonstrate how plots can be used.

Case studies

To demonstrate the performance of the proposed diagnostic plots in evaluating the quality of production data, we use relevant field examples to illustrate specific issues. In each example, all or some of the useful plots are presented. All of the diagnostics plots were constructed from raw data, with no interpretation required, and most often, using sandface flowing pressure calculated from wellhead measurements. It is worth noting that not all of the proposed plots provide diagnostic insight in every case. This is why the analyst should always look at a combination of the plots, in the hope that one or

more of them indicates an anomaly that is worth investigating, or highlights an inconsistency in the data.


Note: The term "sandface" is now used instead of "bottomhole".

Case 1

This case represents a well that was stimulated after three months of production. Some of the useful diagnostic plots are shown in Figure 2.

Figure 2a shows the rate and sandface flowing pressure versus time plot. From this plot, we can see that the well was shut in for two days in February 2005 and after that the rate and pressure increases rapidly. Looking at Figure 2b, it is evident from this plot that there are two stems in the typecurve. One stem is for data before February 2005 and one is for data after February 2005. It can also be seen that the productivity of the well ($q / \Delta p_p$) has increased after February 2005. This is due to the fact that the well was fractured on February 5, 2005. Figure 2c is a plot of $q / \Delta p_p$ versus $G_p / \Delta p_p$. Extrapolation of this plot to the x-axis gives an estimate of the original-gas-in-place. It is obvious from this plot that the frac not only improved the productivity of the well, but also added more reserves as shown by the increase from the original-gas-in-place to the ultimate-gas-in-place. Only data collected after February 5, 2005 should be used in any interpretation, as the reservoir model has changed.

Figure 2: Case 1 diagnostic plots

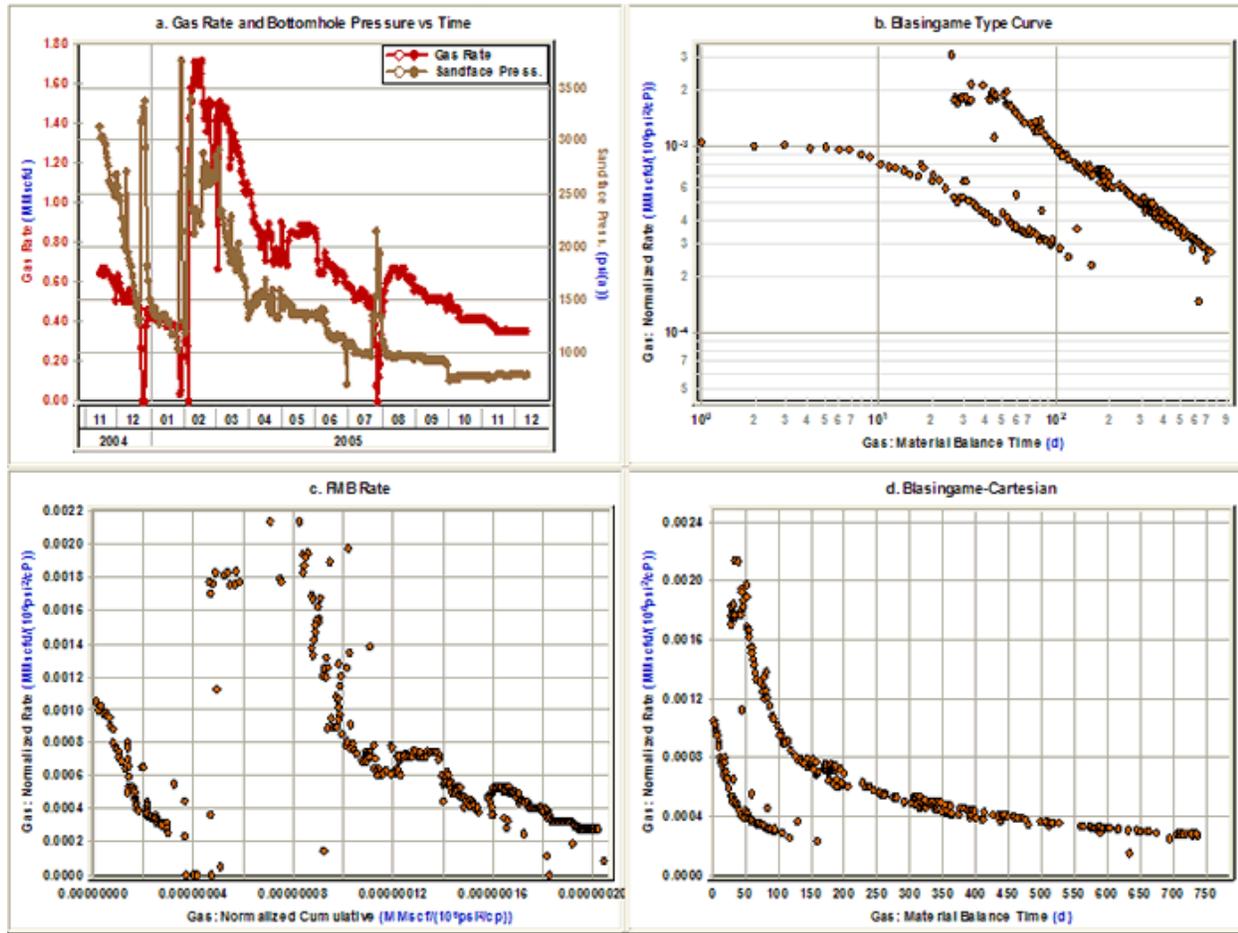


Case 2

Figure 3a shows the gas rate and sandface flowing pressure versus time. It can be seen from this plot that the sandface flowing pressure is almost a straight line from the beginning of March 2004 until the middle of April 2004. The same thing can be seen for tubing pressure in Figure 3b. In practice, it is not likely that the tubing pressure profile would be a straight line for a period of time. If the tubing pressure has a straight line profile for a period of time, it implies that it was not measured frequently and the data has been interpolated and not measured. This will be reflected in the reliability of the calculated sandface flowing pressure data.

This well also produced water and oil. Figure 3c shows the oil rate and water rate versus time plot. Looking at this plot, it is obvious that the oil rate and water rate have flat profiles with large step changes. This again means that oil rate and water rate were not measured frequently and this will have a significant effect on the quality of the calculated sandface flowing pressure data, because multiphase flow calculations depend directly on gas-liquid ratios.

Figure 3d shows the gas rate / critical-Turner-rate ratio versus time plot. This plot shows that the well may be loaded by liquid from the beginning of March 2004 to the end of August 2004. This is consistent with fluctuations in the gas rate during this period. This plot also shows that the gas rate is higher than the critical-Turner rate from the beginning of September 2004 to the end. The tubing pressure during this period is constant and equal to 13.0 psi (apparently a gauge pressure of 0, converted to absolute). This is not a valid pressure. Therefore, the calculated flowing sandface pressure and the critical-Turner-rate calculations after September 2004 are not valid, and should be discounted in any interpretation.

Figure 3: Case 2 diagnostic plots

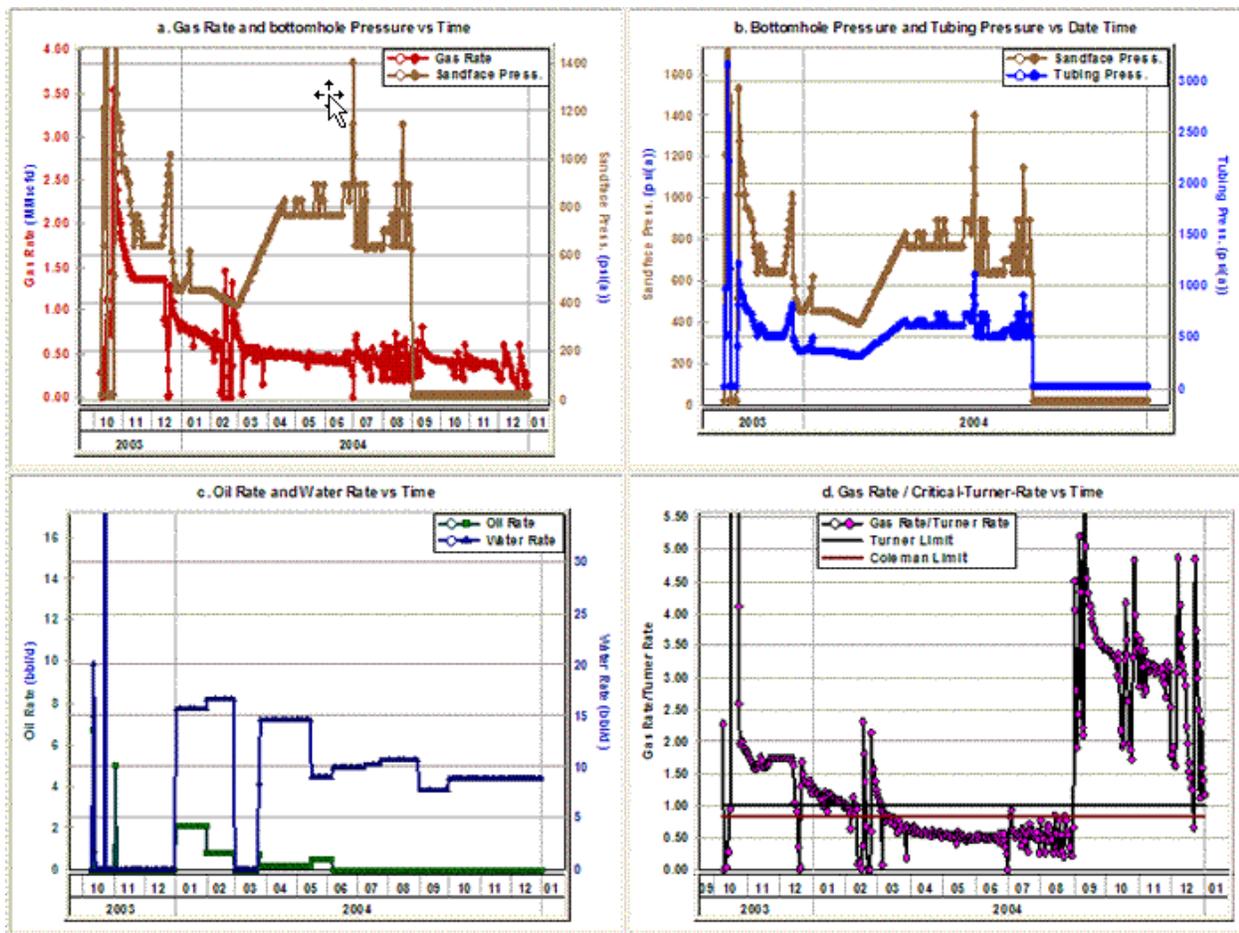


Case 3

Figure 4a shows the gas rate and calculated sandface flowing pressure versus time. Looking at this plot, everything seems to be normal. Figure 4b shows the ratio of gas-rate / critical-Turner-rate versus

time plot. According to this plot, the rate is less than both the Coleman and Turner critical lift rates, which indicates that the well is probably loaded with liquids. However, there is no liquid production reported at all. The gas rate is higher than 2 MMscfd and there is no indication of slugging or liquid loading in the trend of the gas rate and flowing pressure. The Blasingame typecurve and FMB rate plots are well behaved. The problem in this case is that the specified tubing ID was wrong. This directly affects the values for critical-Turner rate, but has little effect on the calculated flowing sandface pressure, as it only affects the friction component of the pressure loss inside the wellbore, which is very small compared to hydrostatic pressure loss. Therefore, the flowing sandface pressures calculated using the wrong tubing ID, in this case of dry gas production, can still be used for analysis.

Figure 4: Case 3 diagnostic plots

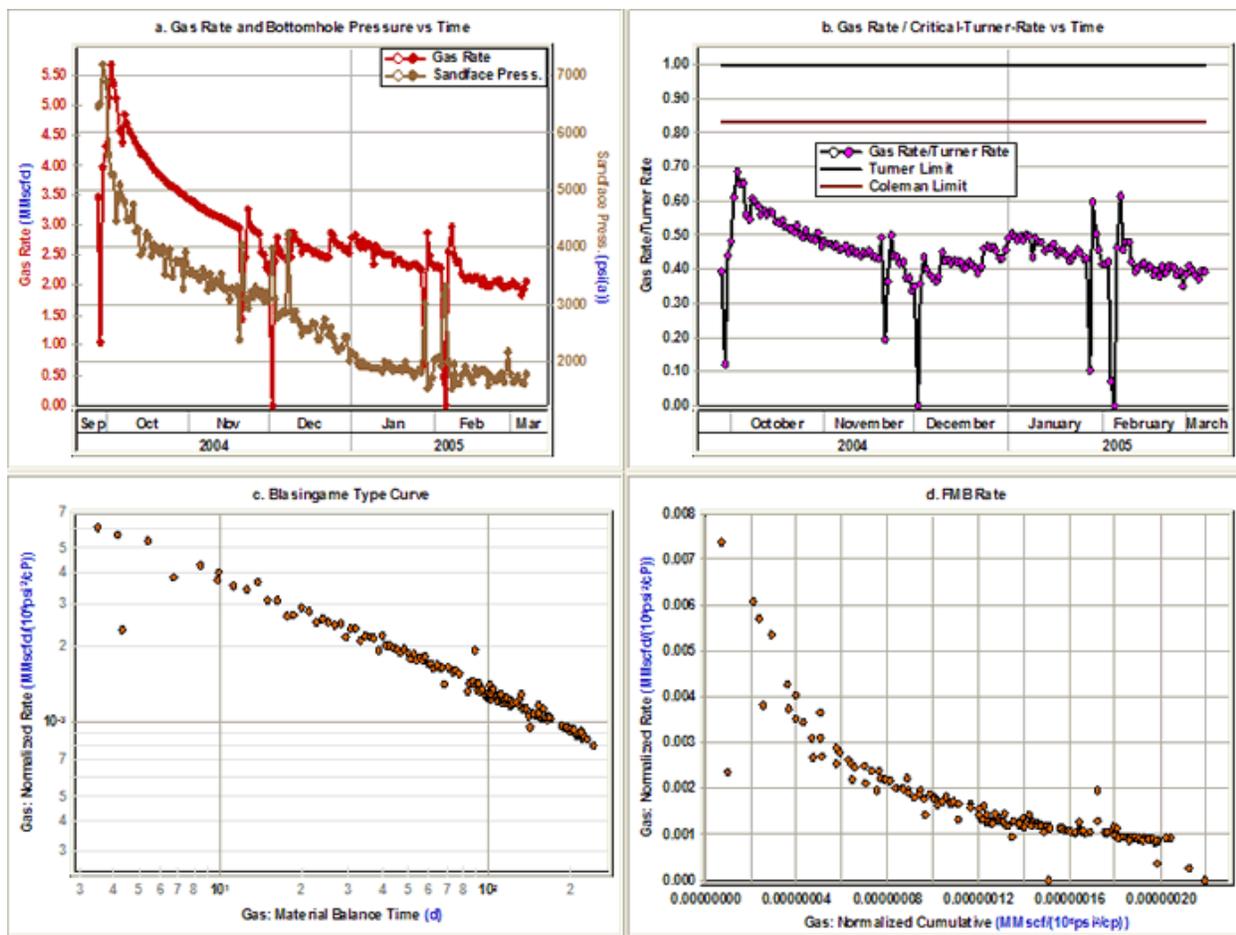


Case 4

Figure 5a shows the gas rate and sandface flowing pressure versus time for a high permeability gas well. Figure 5b shows the ratio of gas-rate / critical-Turner-rate versus time plot for this well. This plot shows that the gas rate is lower than the Turner rate before July 1, 2002. Looking at the gas rate and sandface flowing pressure versus time and water-gas ratio versus time plot shows that something happened on July 1, 2002. There is a step change in the rate and the flowing pressure, and a significant increase in the water-gas ratio (Figure 5c). This behavior is consistent with a tubing change-out (where tubing is replaced with a smaller diameter to lift liquids and eliminate the liquid lifting problem). This tubing change was not documented for this well.

Looking at the Blasingame typecurve and FMB rate plots also shows there is some inconsistency between rate and flowing pressure data, as there are two stems on these plots. One of the stems is for data before July 1, 2002 and the other stem is for the data after July 1, 2002. The main reason for having two stems is because of having “stagnant” liquid column in the wellbore before July 1, 2002. This liquid column was not considered when calculating the sandface pressure during this period, and therefore, the calculated sandface pressure data for this part of data is wrong. Only data collected after July 1, 2002 should be used in any interpretation, as the calculated flowing sandface pressure data is more reliable.

Figure 5: Case 4 diagnostic plots

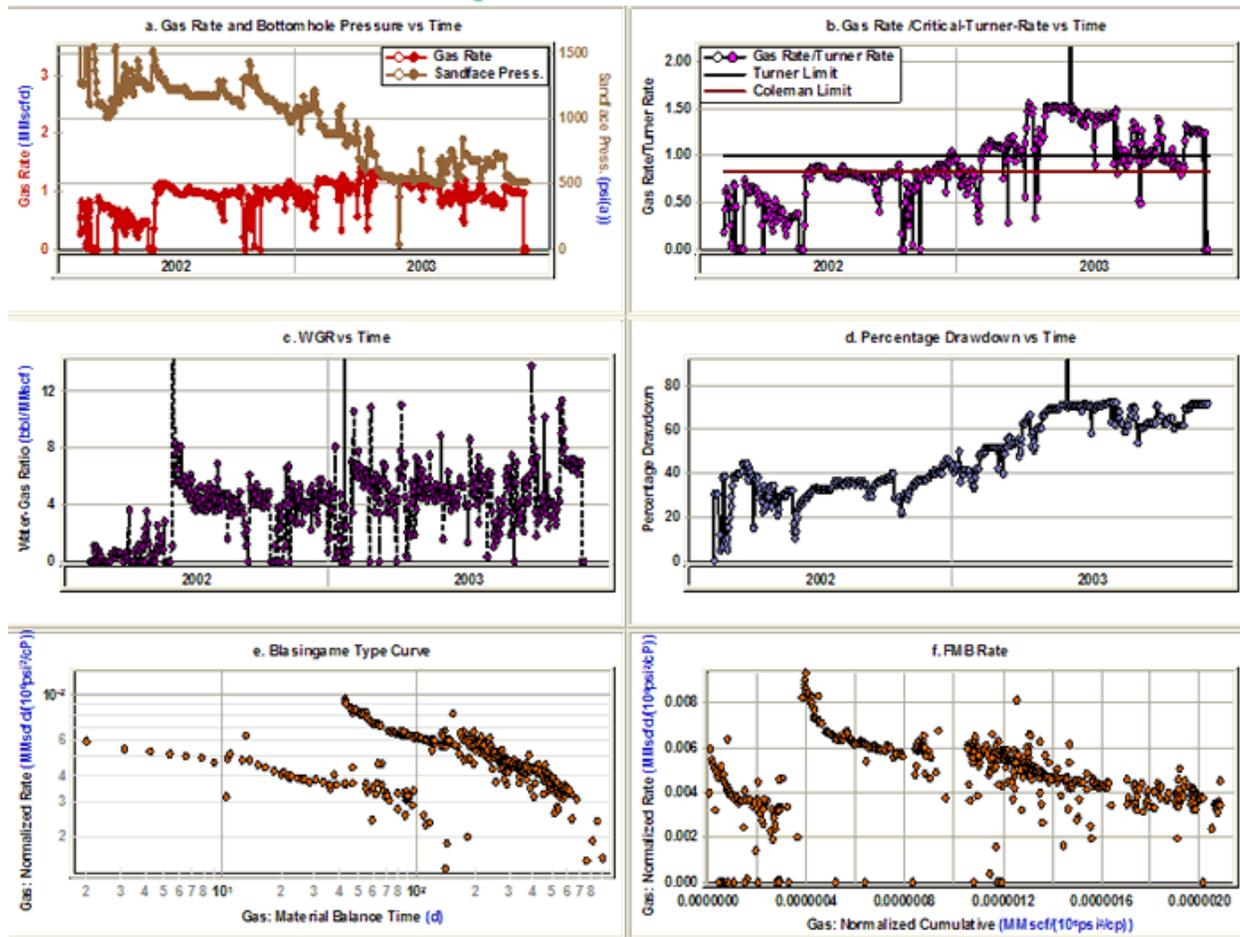


Case 5

Figure 6a shows the gas rate and sandface flowing pressure versus time for a hydraulically fractured well. Figure 6 (that is, plots b-to-e) shows some of the proposed diagnostic plots. These plots do not show any inconsistency between rate and pressure.

Figure 6f shows the ratio of gas-rate / critical-Turner-rate versus time plot. According to this plot, the gas rate is less than the critical liquid lift rate throughout the whole producing life. In addition, Figure 6a shows fluctuation in gas rate and this indicates that there is slug flow. Although there is indication of slug flow in Figure 6a and liquid loading in Figure 6f, no water production has been reported. Therefore, sandface pressure calculations from wellhead pressure are likely incorrect.

Figure 6: Case 5 diagnostic plots

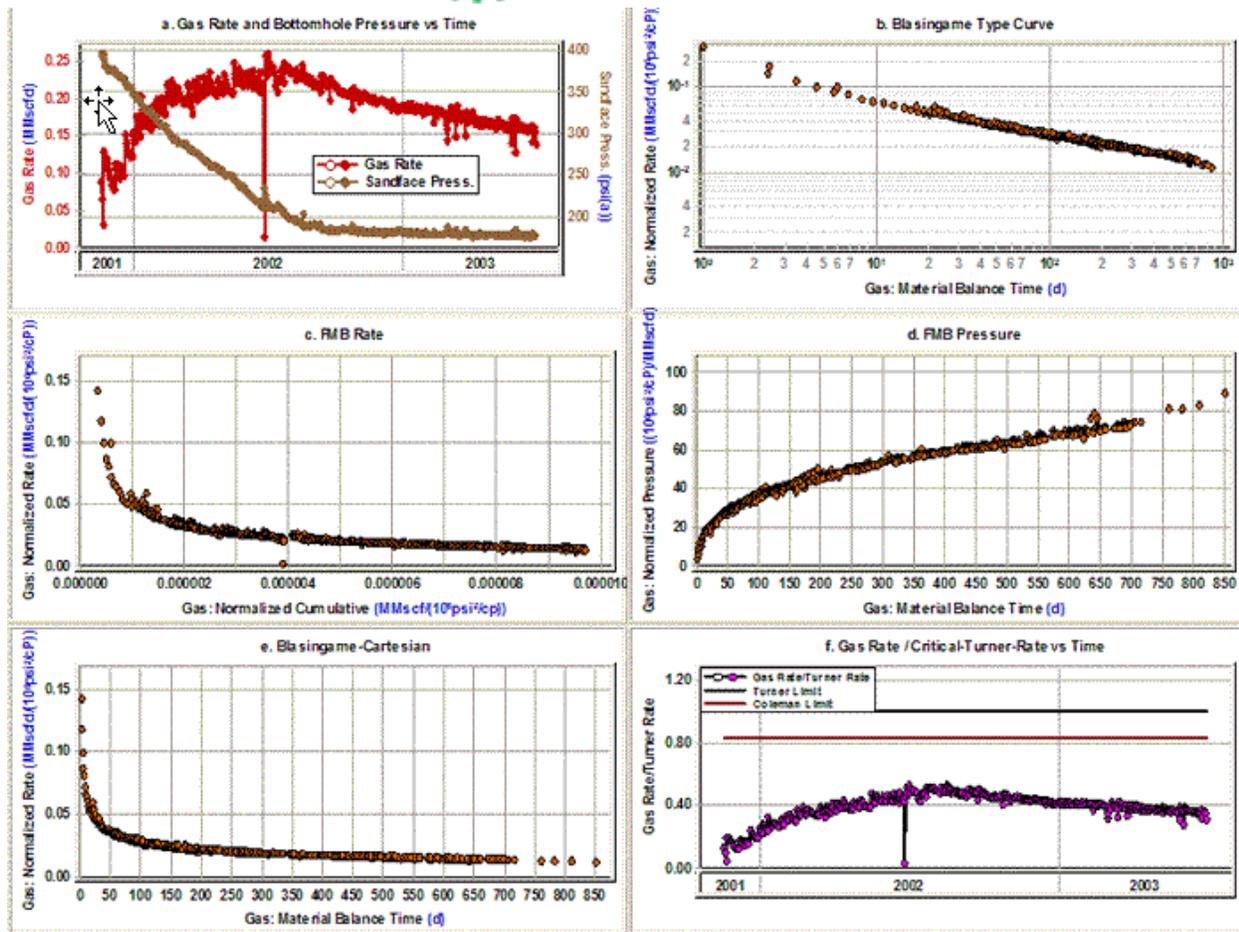

Case 6


Figure 7a shows the gas rate and calculated sandface flowing pressure versus time for a horizontal gas well. Visual inspection of Figure 7a indicates some inconsistencies between pressure and rate. It can be seen from this plot that:

- The pressure profile is flat from July 2002 to December 2002.
- There is a step change in pressure at the end of July 2003, but this step change is not reflected in the gas- rate data.

Some of the proposed diagnostic plots are shown in Figures 7 b-f. There is no evidence of these inconsistencies in Figures 7 b-e. Figure 7f shows the plot of percentage drawdown $[(\Delta p / p_i) * 100]$ versus time for this well. According to this plot, except for the first two months of production, the well is producing under almost 85% drawdown. This means that we are dealing with a high drawdown well, and that the rate is insensitive to flowing pressure and that any discrepancies in flowing pressure have very little effect on interpretation. This is the reason why no inconsistency was observed in Figures 7b-e.



Figure 7: Case 6 diagnostic plots

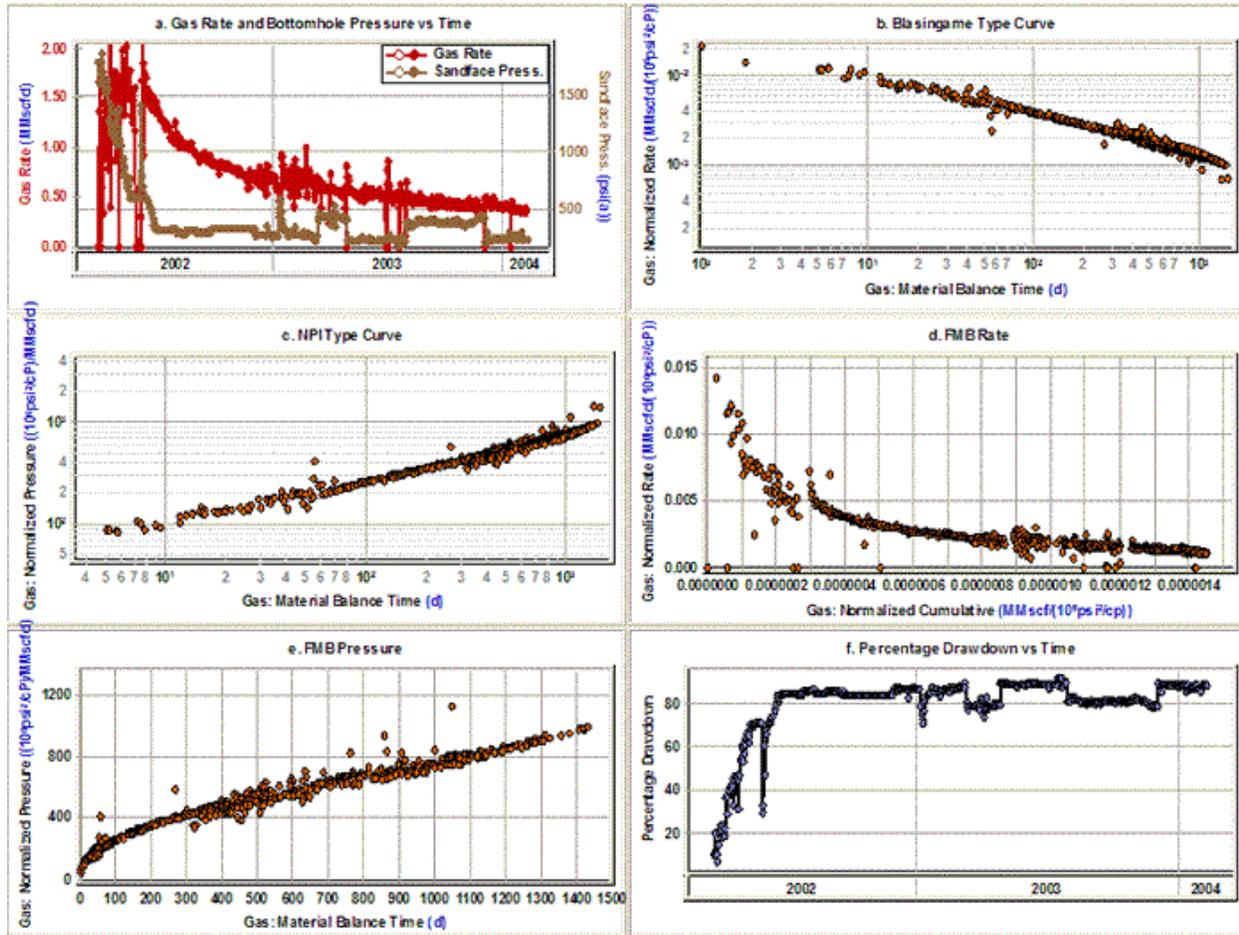

Case 7

This is a high-permeability gas well. This well is producing through tubing and only tubing pressure data is available. Figure 8a-f shows some of the diagnostic plots for this well. Figure 8a shows the gas rate and sandface flowing pressure versus time for this well. Everything seems normal except for the data between the beginning of May 2002 until the end of July 2002:


- The sandface flowing pressure suddenly decreases in early May 2002, but this step change is not reflected in gas-rate data.
- The gas rate suddenly decreases in late June 2002, but this step change is not reflected in the sandface flowing pressure data.

To find out why the rate and pressure are not consistent in this period, we reviewed at the water-rate data. The plot of water rate and sandface flowing pressure is shown in Figure 8b. This plot shows that the well was producing almost 50 bbl/d of water from the beginning of 2001 until the beginning of May

2002, and no water rate was reported from the beginning of May 2002 until the end of July 2002. The water rate affects both hydrostatic and friction pressure losses in the wellbore, and has a huge effect on the magnitude of the calculated sandface pressures. This can explain the inconsistency between rate and sandface pressure from the beginning of May 2002 until the end of July 2002, as the water rate is not reported. If the casing pressure had been available, the problem would have been less severe because the sandface pressure could have been calculated using casing pressure data instead. This would not have been affected by an incorrect liquid rate, as it involves a hydrostatic head calculation of a dry gas column to the end-of-tubing.

Figure 8c shows the plot of percentage drawdown versus time for this well. According to this plot, except for the first two months of production, the well is producing under almost 95% drawdown. This means that the diagnostic plots which use Δp or Δp_p may not show any inconsistency between rate and flowing pressure data even when they are not consistent. Looking at Figures 8d-f does not indicate any sign of inconsistency, which was expected because of high drawdown.

Figure 8: Case 7 diagnostic plots

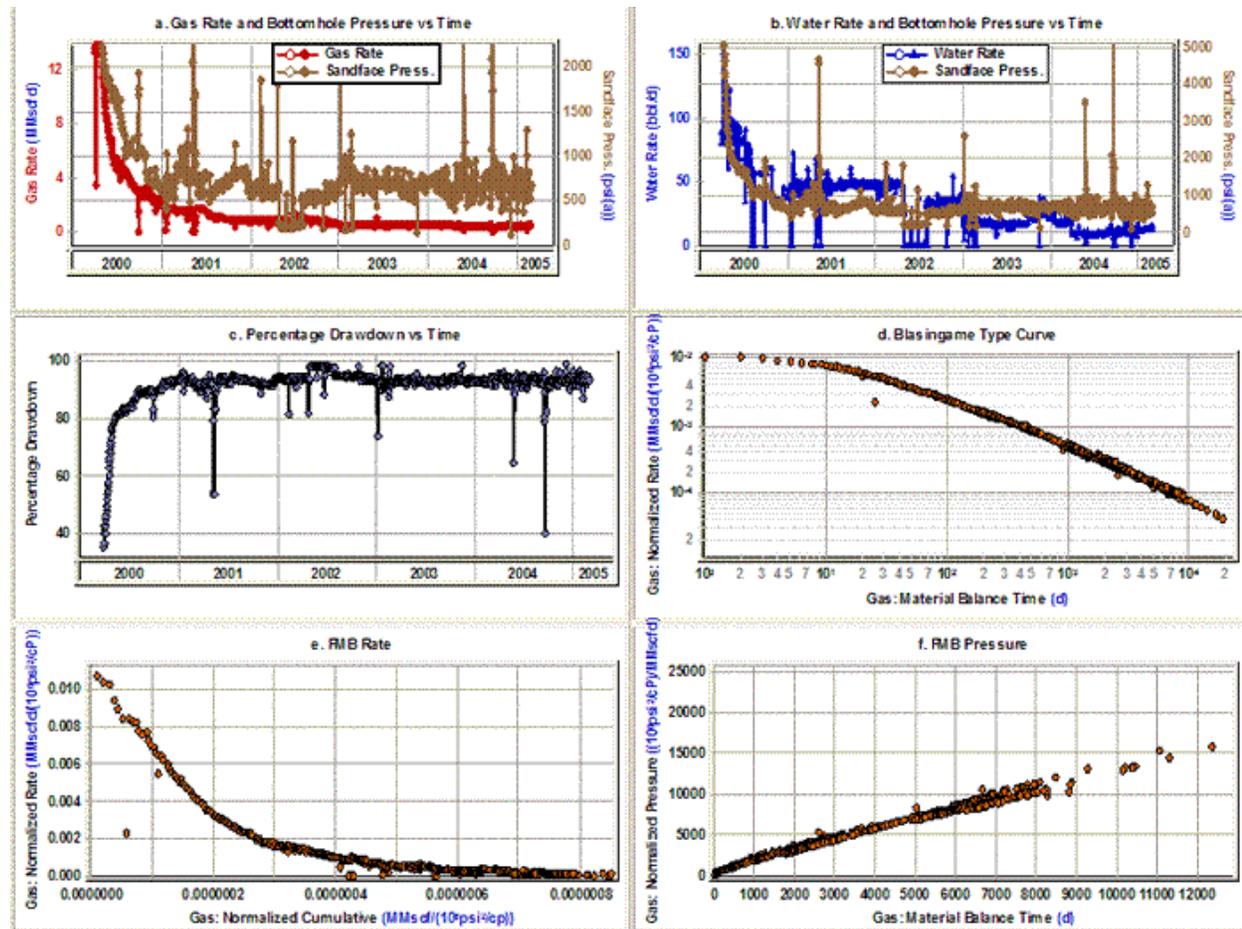


Case 8

This is a high-permeability gas well. In this example, we do not emphasize the consistency between pressure and rate data. We just want to point out the value of diagnostic plots for indicating reservoir productivity issues. The gas rate and flowing sandface pressure versus time is plotted in Figure 9a. It can be seen from this figure that there are two step changes in rate, which are not reflected in pressure data. This plot also shows that the rate declines rapidly from September 2004. Figure 9b shows $\log q$ versus $\log t$ for this well. As can be seen, this log-log plot accentuates the declining trend in rate, as it compresses the late-time data. Liquid loading can sometimes cause this abnormal decrease in gas rate.

To investigate the possibility of liquid loading, the ratio of gas-rate / critical-Turner-rate is plotted versus time and presented in Figure 9c. It can be seen from this figure that when the gas rate started to decline, the gas rate was much higher than the critical liquid lift rate. The rapid decline in rate therefore indicates a decrease in reservoir productivity and not liquid loading. Figure 9d shows the water-gas ratio versus time for this well. This plot shows a rapid increase in the water-gas ratio at the same time that rate declines rapidly. Therefore, the rapid decline in gas rate was because of water reaching the well inside the reservoir and not liquid loading, and in fact, it is a reservoir problem not a wellbore problem. The fact that this well is producing this much water could mean that we are dealing with an active water-drive reservoir, or that a secondary gas cap is pushing water ahead of it to the well. The well was shut in for six months, but after that, the same problem occurred very quickly (that is, a high water-gas ratio).


Figure 9: Case 8 diagnostic plots

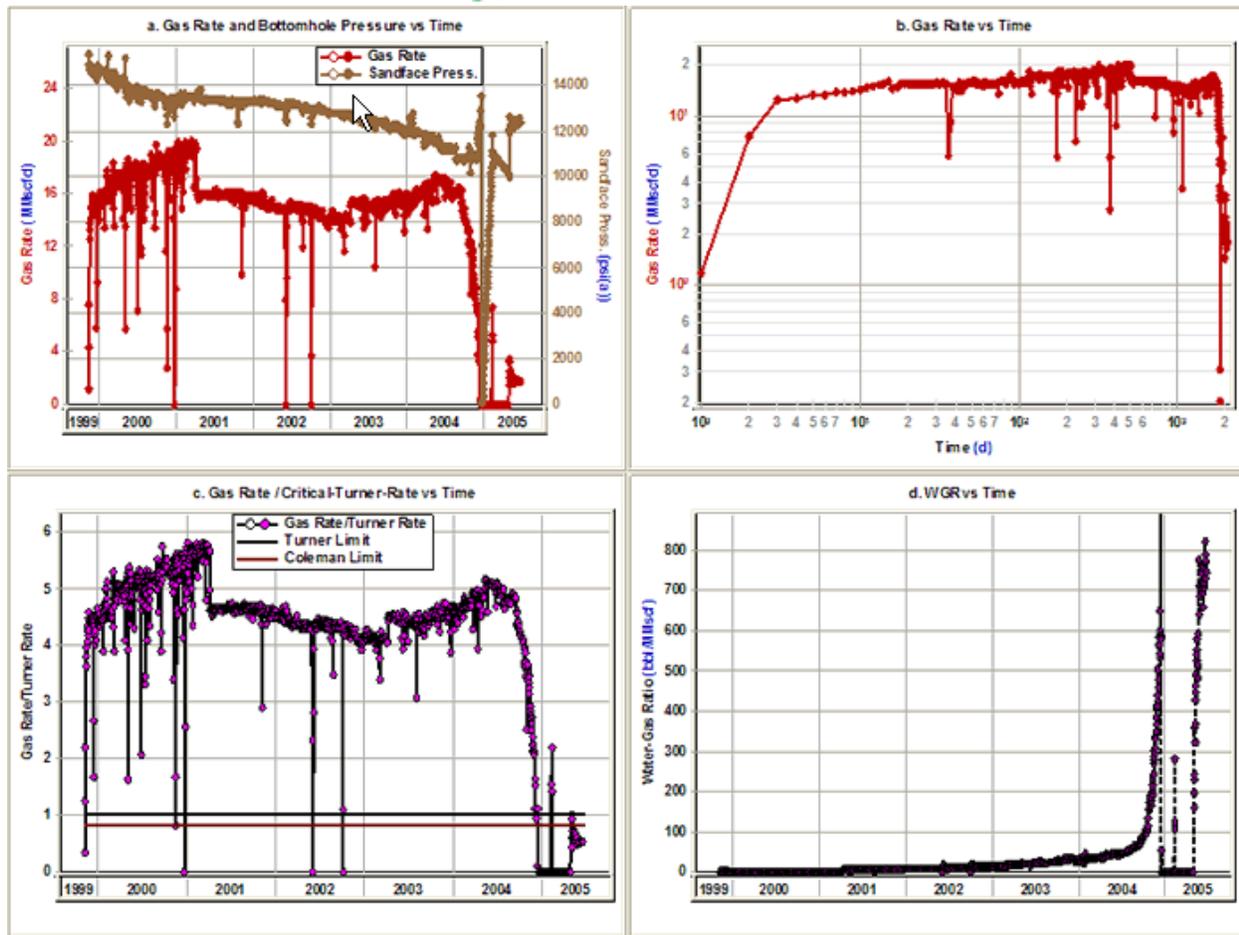

Case 9

As mentioned earlier, the first step in production data diagnostics is the removal of outliers to eliminate any incorrect interpretation caused by these outliers. It was also mentioned that often outliers show a unit slope on typecurves. In this example, we present a dataset that shows this problem. Figure 10a shows the gas rate and sandface flowing pressure versus time. The outliers are shown by hollow points, so they can be distinguished from the rest of the data. Figure 10b shows the Blasingame type-curve plot for this case. The outliers are also shown by hollow points in this plot. It can be seen from this plot that the unit slope on this typecurve is caused by outliers, not depletion. Therefore, this unit slope should not be used as an indication of original-gas-in-place or boundary-dominated flow.

Figure 10: Case 9 diagnostic plots

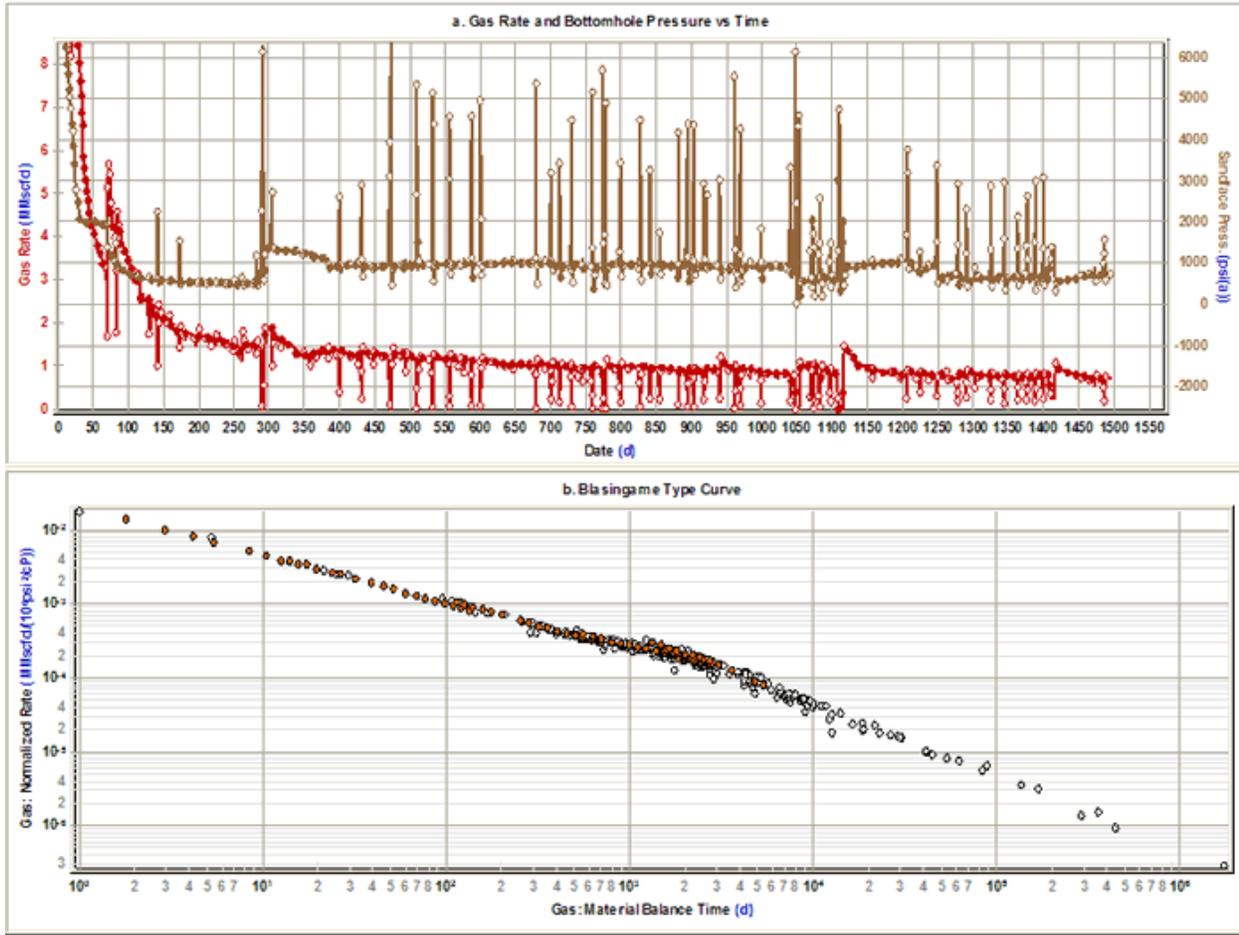



Data diagnostics flowchart



Common causes for data inconsistencies are as follows:

- Recompletion, reperf, refrac
- Fracture cleanup
- Wellbore cleanup
- Liquid loading
- Slugging
- Tubing change-out
- Changing flowpath
- Under-reported work-overs
- Incorrect pressure source and flow path
- Pressure or rate averaging
- Out of sync pressure and rate time-tracks
- Missing flowing pressures or rates
- Incorrect initial pressure
- Misreported water production
- Significant increase in water gas ratio (WGR)

Use the flowchart below to evaluate the quality of your data:

**Start pre-
analysis dia-
gnostics
here**



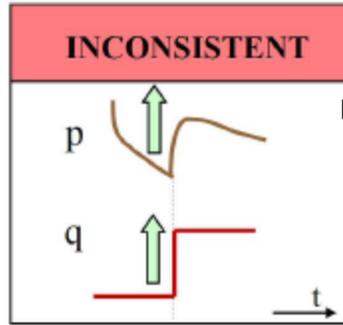
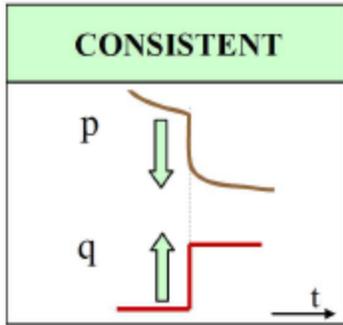


Do the instantaneous changes in pressure and rate correlate?

NO

See the step change correlation on the rate & pressure vs. time plot.

YES

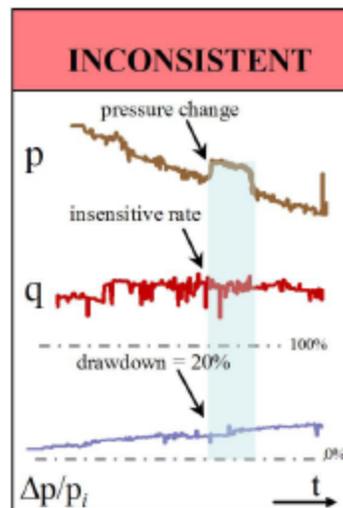
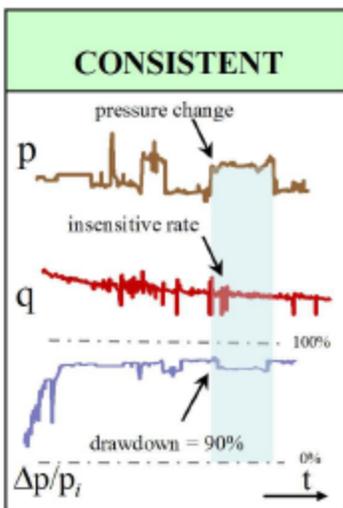


Is the well operating under high drawdown?

NO

See the drawdown plot.

YES

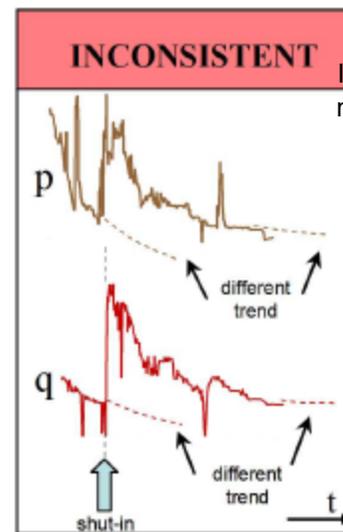
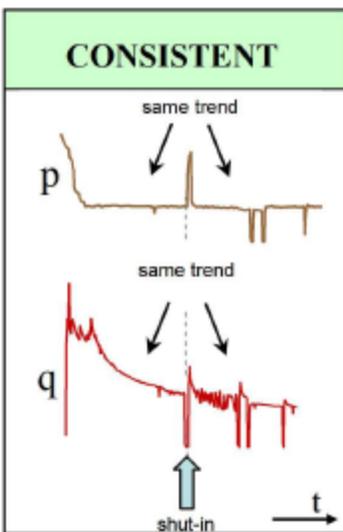


Is the trend in rate and pressure consistent?

NO

See the trend correlation on the rate & pressure vs time plot.

YES

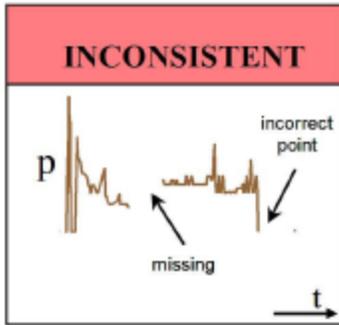
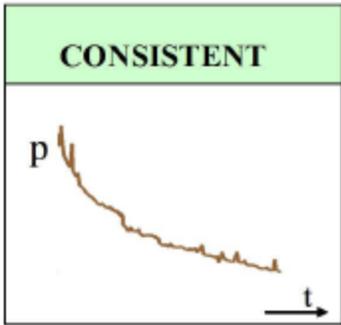


Is the data smooth?
Is the data continuous?

NO

See the stable data and continuous smooth data plots on the rate & pressure vs time plot.

YES

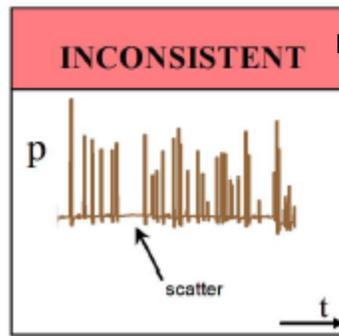
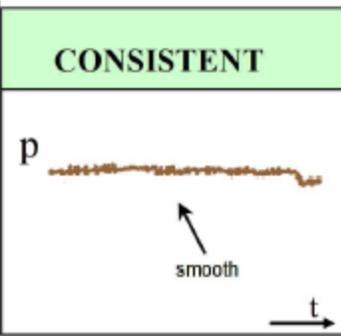


Have the outliers been removed?

NO

See the continuous smooth data plot on the rate & pressure vs time plot.



YES

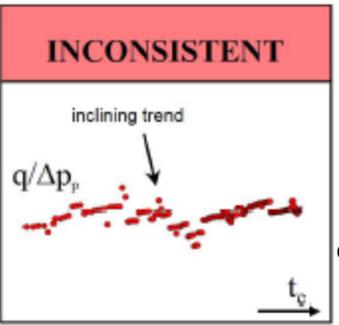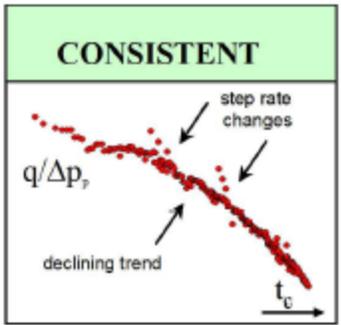



Does the Blasingame graph continuously decline?
Or, does the NPI graph continuously incline?

NO

See the Blasingame and NPI plots

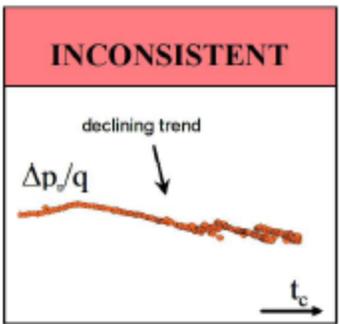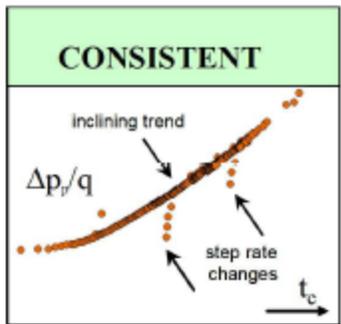



YES

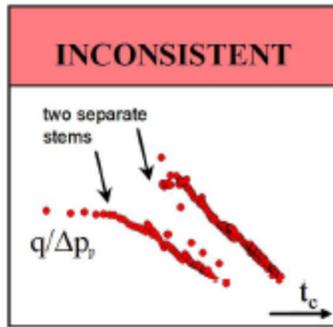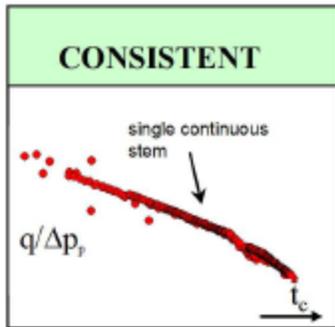



Do the Blasingame or NPI plots contain a single continuous stem?

NO

See the Blasingame and NPI plots

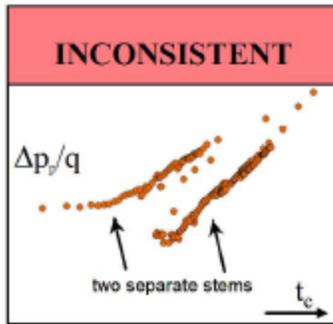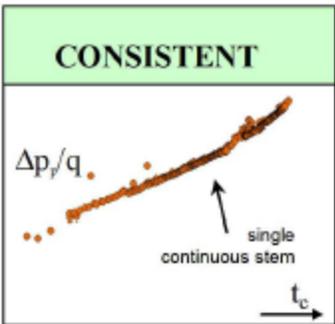



YES

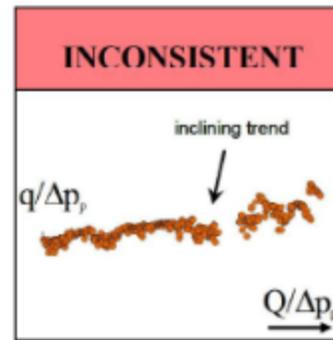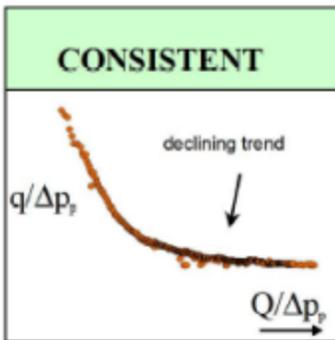



Does the FMB rate plot trend decline?
Or, does the FMB pressure plot trend incline?

NO

See the FMB rate and FMB pressure plots

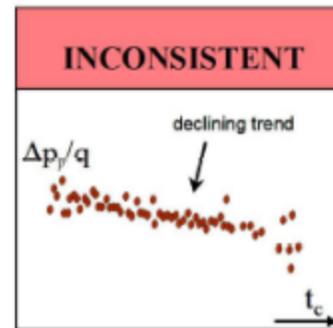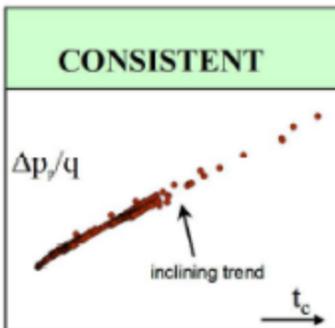

YES



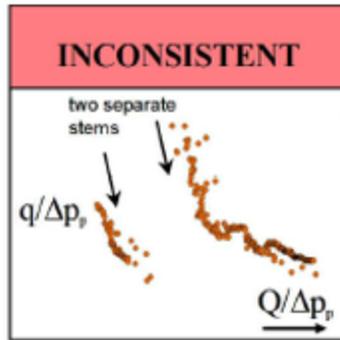
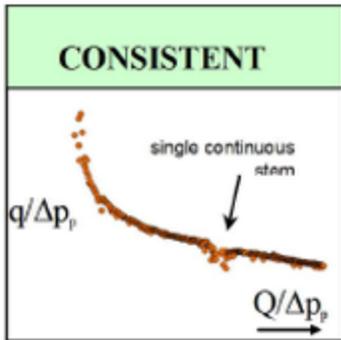


Do the FMB rate or pressure plots have a single continuous stem?

NO

See the FMB rate and FMB pressure plots

YES

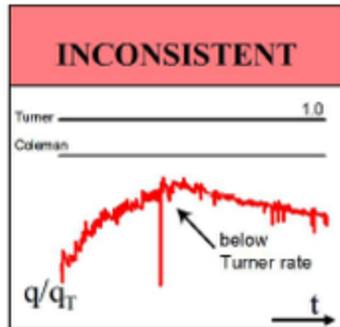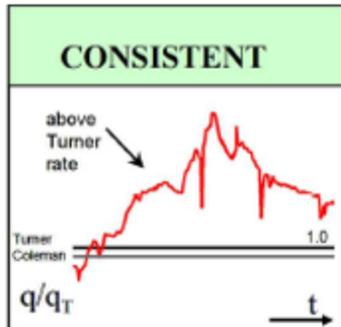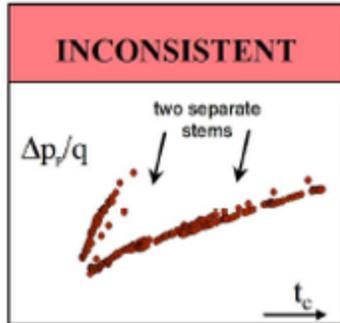
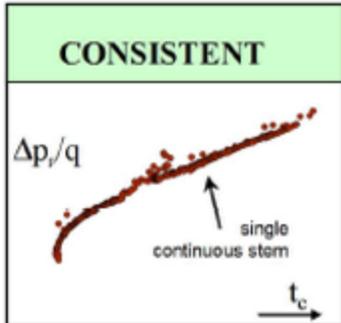


Is the gas rate above the critical Turner rate?

NO

See the Turner rate plot

YES

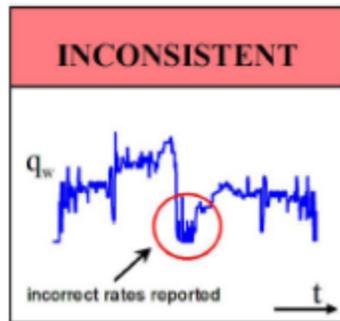
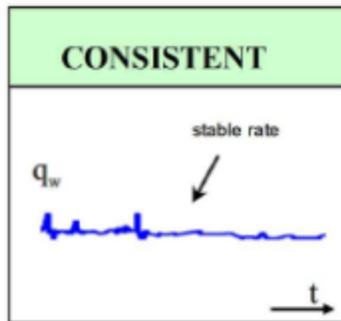


Is the water rate reported? Does it appear to be correct?

NO

See the WGR & water rate plot

YES

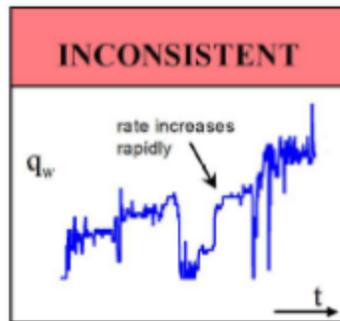
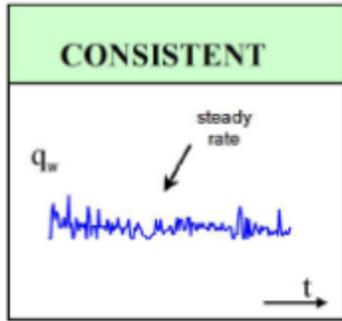


Is the water rate free of rapid increases?

NO

See the WGR & water rate plot

YES

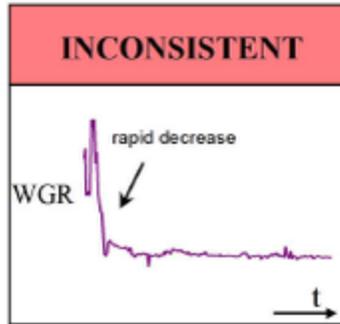
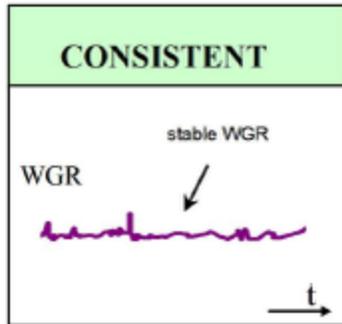


Is WGR free of rapid decreases?

NO

See the WGR & water rate plot

YES

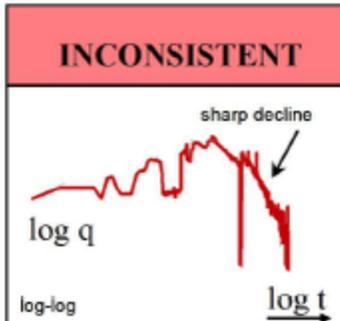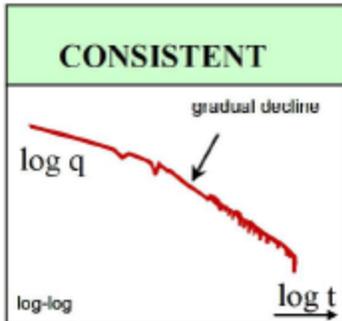

Is the gas rate on the log-log plot free of sharp declines?

NO

See the log gas rate plot

YES

Finish. Proceed to analysis


Rate & pressure vs. time (Cartesian) plot

[Return to the data diagnostics flowchart](#)

Examine the rate & pressure vs. time (Cartesian) plot to answer the following questions:

- Do step changes in pressure and rate correlate with each other?
- Is the general trend in the rate reflected in the pressure, and vice versa?
- Is the production rate and pressure data stable?
- Is the rate and pressure data smooth, continuous, and free of scatter?

Do step changes in pressure and rate correlate with each other?

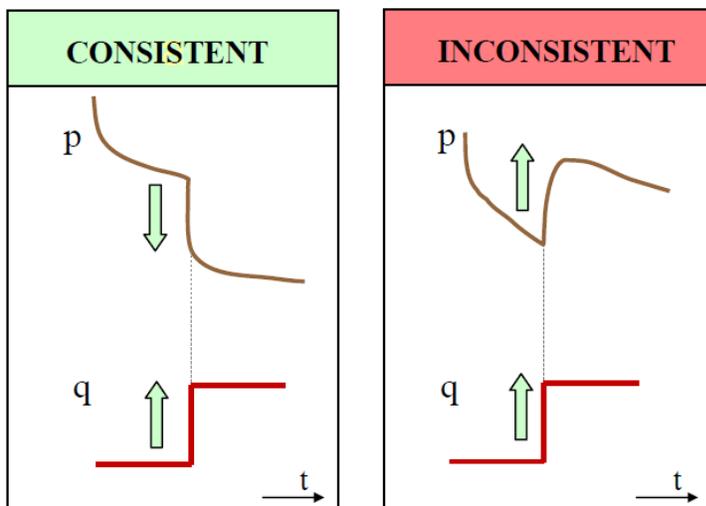

- A sharp *increase* in rate should correspond to a sharp *decrease* in pressure, and vice versa.
- The response to a step change should be immediate and not gradual.



Reasons for inconsistencies:

Incorrect pressure

- The pressure may have been measured on the other side of the choke / valve.
- A change in liquid holdup in the wellbore.
- At high drawdown, the rate becomes insensitive to pressure changes. For additional information, see the [percentage drawdown](#) plot. If changes in pressure are not reflected in the rate data, this may not be a cause for concern.
- Pressures may be measured every minute, but reported daily. An aver-



age daily rate is meaningful, but an average daily pressure is not.

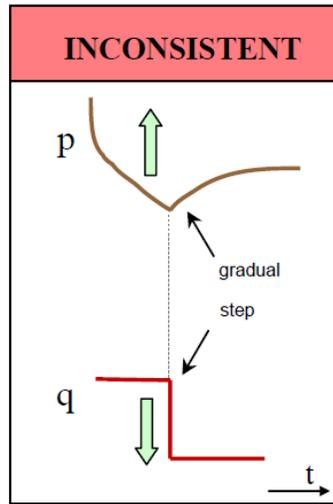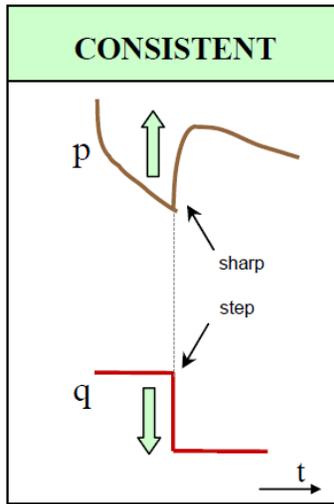



Incorrect rate

- The rate may be averaged from group metering.
- The rate may be a daily or monthly average.
- Unreported liquid production from a gas well.

Time periods

- If the data in different time periods is inconsistent, the data in the low-flow-rate region is more likely to be in error.

Is the general trend in the rate reflected in the pressure, and vice versa?

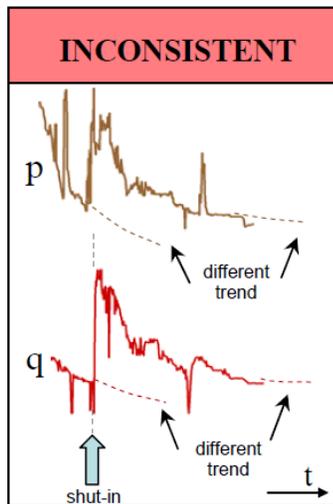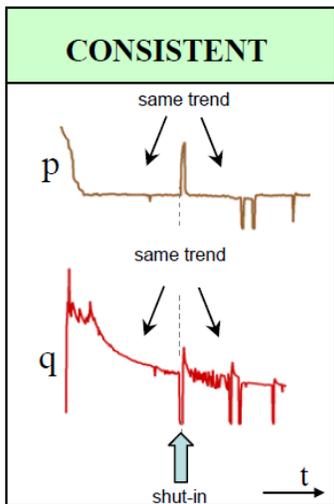


- If the rate is disrupted but comes back to the original trend, the pressure should also return to its original trend.
- If there is a change in the rate trend, the change in the pressure trend should be consistent with these bulleted items.)

Reasons for inconsistencies:

- A change in operations (for example, location of pressure measurement, metering, etc.).
- Tubing change-outs, hydraulic fractures, work-overs, recompletions, etc. The Blasingame, NPI, FMB rate, and FMB pressure plots tend to be better suited for this diagnosis.

Is the production rate and pressure data stable?

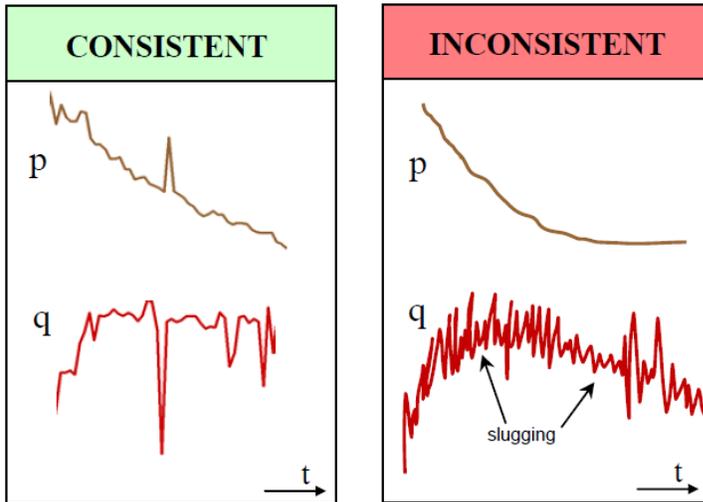



- Unstable rates indicate slugging, even though no water is reported.
- Sometimes rates are smoothed by reporting an average day rate.
- Sometimes pressure data is smoothed for supervisory control and data acquisition (SCADA) systems.
- These smoothing actions obscure fluctuations.

Reasons for inconsistencies:

- Liquid production may only be measured at the plant, and not at the well.
- Often water production is not properly reported.
- Liquid loading in the wellbore.
- The WGR & water rate plot provides further insight.
- The Turner rate plot is a valuable diagnostic tool.
- Sandface pressures can fluctuate, even though wellhead pressures are smooth. This is due to the multiphase calculations of sandface pressures.





Is the rate and pressure data smooth, continuous, and free of scatter?

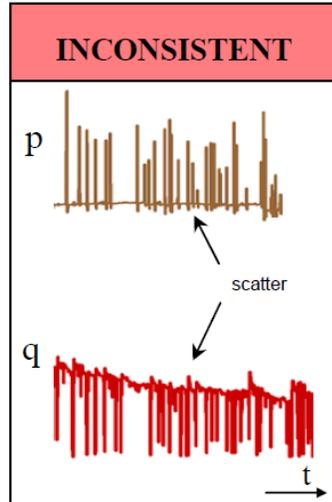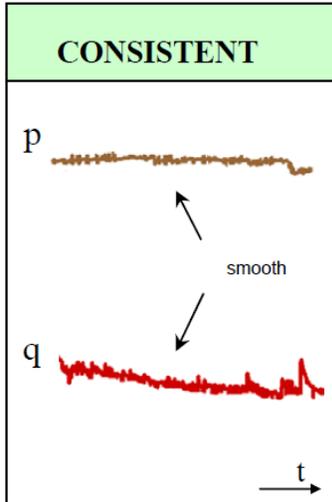

- Outliers can create a false unit slope (which suggests boundary-dominated flow) on typecurves that use the concept of "material balance time".
- Interpolation of missing pressures is often misleading.
- If the reported data appears too smooth, it is possible that interpolations are used, instead of measurements.

Reasons for inconsistencies:

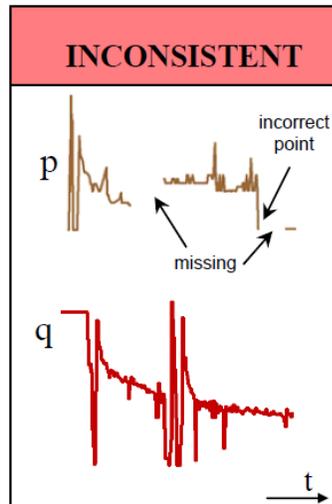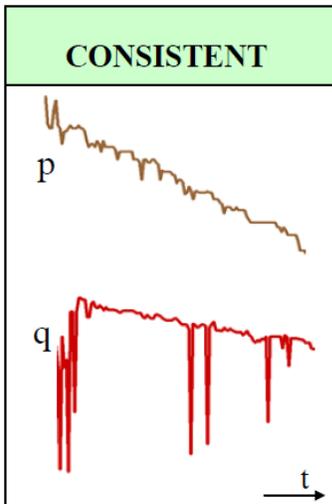

- Pressure and rate data often contain outliers. This scatter can be removed from the production dataset using a median filter.
- Sometimes failing to exclude these outliers can result in false conclusions about the reservoir, because they tend to line up on a unit slope on a typecurve log-log plot. For additional information, see the [Blasingame plot](#).
- These outliers can be recognized because they are sparse.
- Linear interpolation or averaging of pressures is not a true representation of reservoir characteristics.
- The rule of thumb is that if the data appears too straight, it is most likely incorrect, not measured, or interpolated.




Turner rate

[Return to the data diagnostics flowchart](#)

These questions apply to the Turner rate:

- Is the gas rate above the critical Turner rate?
- Do the casing and tubing pressures track one another?

Is the gas rate above the critical Turner rate?

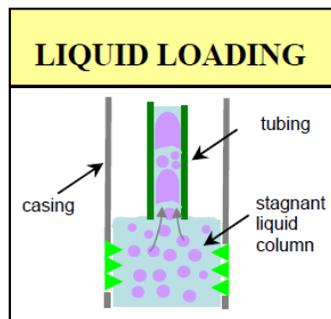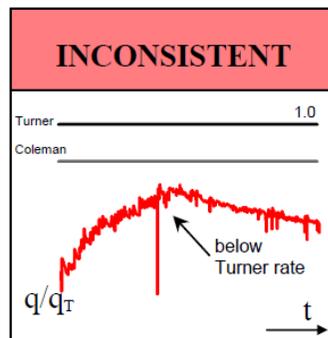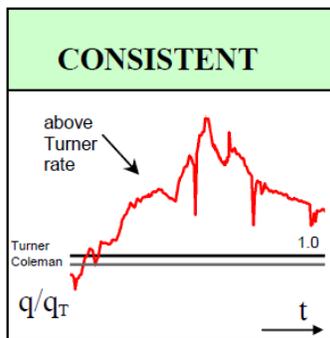

- The critical Turner rate is defined as the minimum rate required to lift liquids in the wellbore. The plot is the ratio of gas rate / critical-Turner rate (q/q_T).
- If the ratio < 1 , there is a likelihood of liquid loading.
- The critical Coleman rate is an alternative to the Turner rate. The Turner rate is approximately 20% higher than the Coleman rate, and many operators prefer the Coleman calculation to that of Turner.
- If the ratio is < 1 , calculations for sandface pressures from wellhead measurements are likely to be in error, due to not accounting for a “stagnant” liquid column. For additional information, see the [WGR & water rate plot](#).

Reasons for inconsistencies:


- The gas rate below which liquid loading occurs depends on the diameter of the pipe and the pressure of the gas. Liquid loading occurs more often when producing through the casing.
- When liquid loading is indicated (ratio < 1), it is often accompanied by a reduced production of liquids,



or a reduced liquid / gas ratio. For additional information, see the WGR & water rate plot.

- Usually following the onset of liquid loading, the tubing is replaced with a smaller diameter tubing to increase the gas rate and lift the liquids. This event may not be recorded.
- If the specified tubing ID is incorrect, the Turner rate calculation may also be incorrect. This affects the value of the critical Turner rate, but has little effect on the calculated sandface flowing pressures.

Do the casing and tubing pressures track one another?

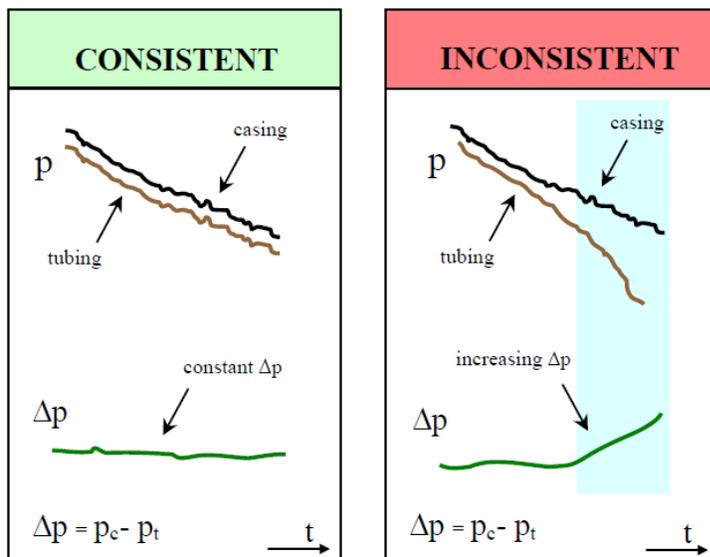

- Tubing and casing pressures track each other when there are no problems in the wellbore (for example, liquid loading, hydrating).

Reasons for inconsistencies:


- Diverging tubing (p_t) and casing (p_c) pressures are an indication of liquid loading or hydrating in the wellbore.
- To convert from wellhead to sandface pressure, use the quiet-side pressure (usually the casing) and assume the liquid level is at the end of tubing (EOT).
- If sandface pressure is being calculated from wellhead measurements, and the flowing side is being used, multiphase flow calculations must be used, and their accuracy is poor.



Log gas rate (log-log)

[Return to the data diagnostics flowchart](#)

Does the rate have a sharp decline when plotted on a logarithmic scale?

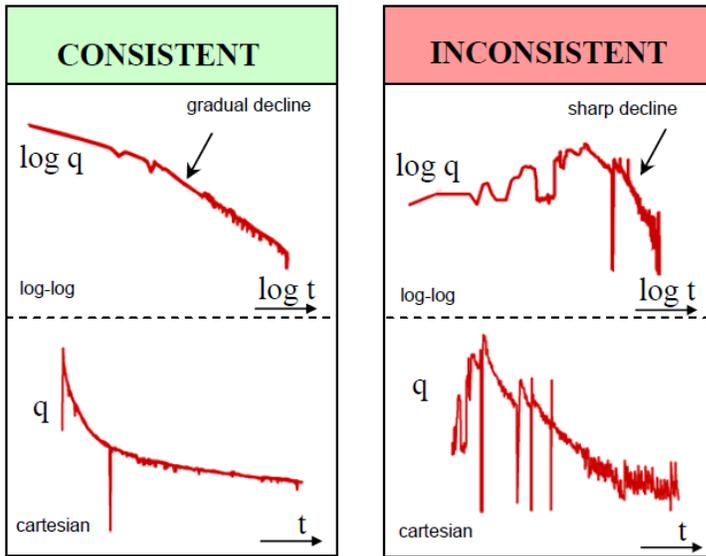

- The log scales tend to accentuate the problem, which may not be evident in Cartesian coordinates. The scale compression of large-time values accompanied by the scale expansion of low rates makes the problem more visible.
- A sharp decline on a log-log plot indicates a problem.

Reasons for inconsistencies:

- An abnormal decrease in the gas rate can indicate liquid loading.
- Often accompanied by the production of liquids.
- For additional information, see the [WGR & water rate plot](#).


WGR & water rate

[Return to the data diagnostics flowchart](#)

These questions apply to the water gas rate (WGR) and water rate:

- Are the water rate and WGR stable and relatively constant?
- Is the flow in the reservoir effectively single phase?
- Is there a rapid decrease in the WGR?
- Are there significant fluctuations in the WGR?

Are the water rate and WGR stable and relatively constant?

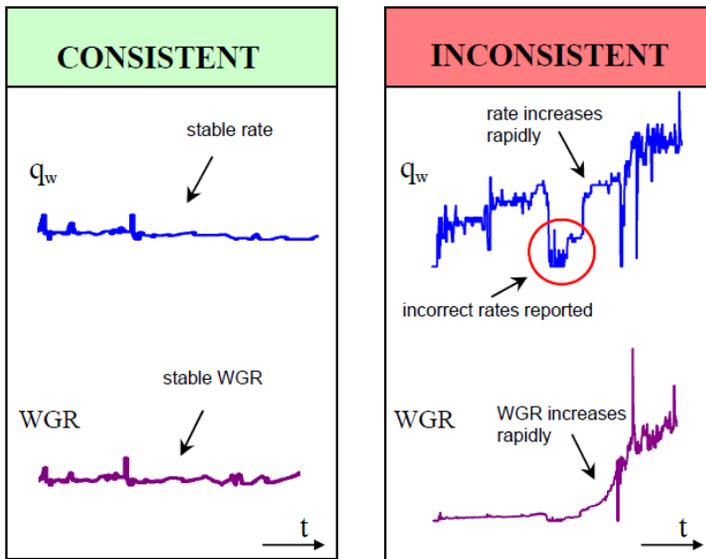

- A sudden increase in the water rate could indicate future productivity problems.
- The data following a rapid increase in WGR should be treated with caution, especially if the pressure measurements are at the wellhead.
- If pressure data is measured at the midpoint of perforations (MPP), then liquid loading or any other wellbore issues will not affect the production data analysis.


Reasons for inconsistencies:

- A sudden increase in the water rate could be due to coning, or a reservoir water influx. Either way, operating problems due to wellbore effects are likely to result in reduced productivity.
- The conversion of wellhead pressure to sandface pressure changes if water production is present (because of liquid hold-up in the wellbore).



- If the water rate is not reported, the quiet-side pressure data can be used instead, as it is not affected by an incorrect liquid rate at the end of tubing (EOT).

Is the flow in the reservoir effectively single phase?

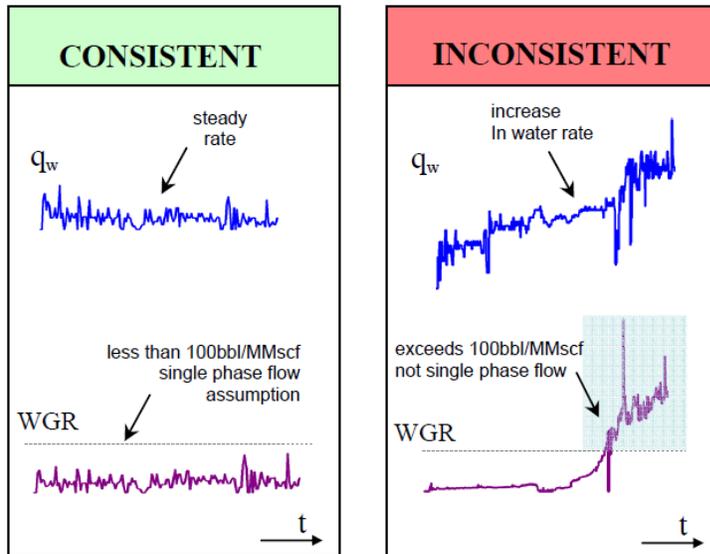


- For gas wells with low WGR, the assumption of single-phase gas flow may still be valid.
- For high WGR, the assumption of single-phase flow may not be valid. Data exceeding an approximate threshold value of 100 bbl / MMScf should be used with caution, as typecurves and analytical models assume single-phase flow.

Reasons for inconsistencies:

- Water coning results in a changing skin, which can invalidate the reservoir models in use.
- Saturation changes in the reservoir result in varying effective permeability.

Is there a rapid decrease in the WGR?

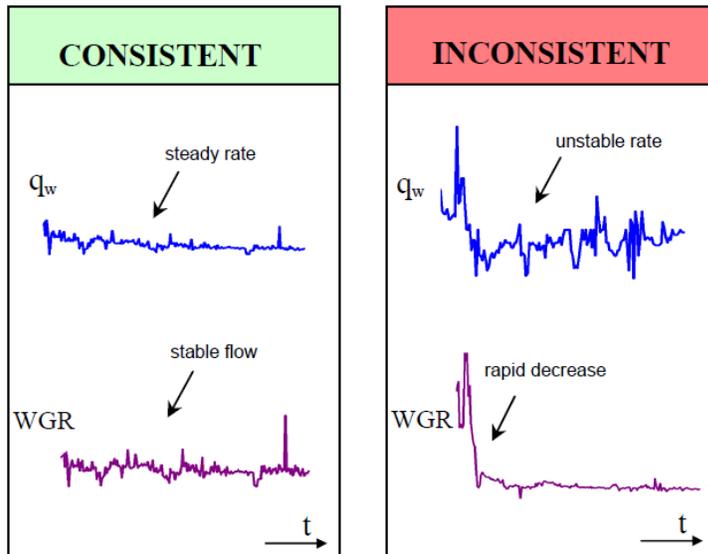


- A sudden decrease in WGR coupled with an unstable water rate could indicate liquid loading.

Reasons for Inconsistencies:

- When the gas rate decreases below a certain value known as the critical rate, the gas can no longer lift the liquids in the wellbore, and liquids start to accumulate. This is known as liquid loading and can result in a decrease in apparent water production. For more information, see the [Turner rate plot](#).
- If sandface pressures are being calculated from wellhead measurements, an additional pressure drop may need to be added to represent the “stagnant” column of liquid.



Are there significant fluctuations in the WGR?

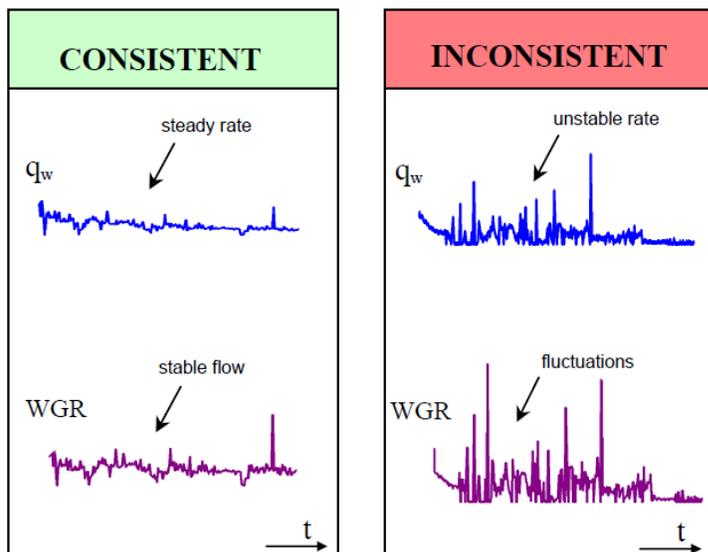

- Fluctuations in WGR are an indication of slug flow.

Reasons for inconsistencies:



- If slug flow is indicated, yet no water rate is reported, then the quality of the calculated sandface pressures may be questionable, even if the wellhead pressures are of good quality.

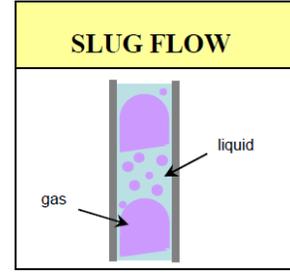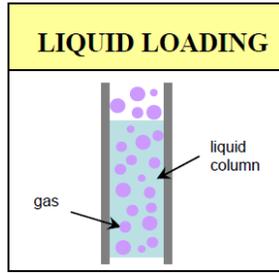

Drawdown %


[Return to the data diagnostics flowchart](#)

Is the well producing under high drawdown conditions?

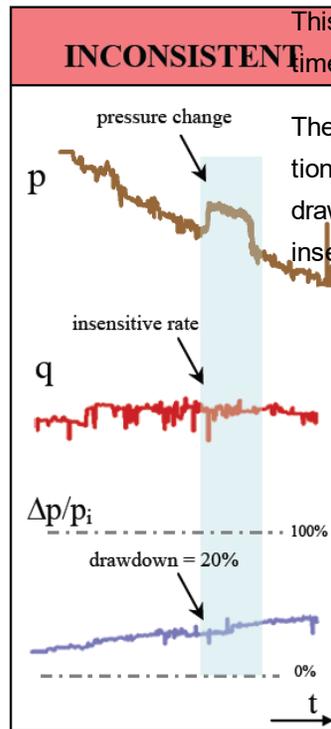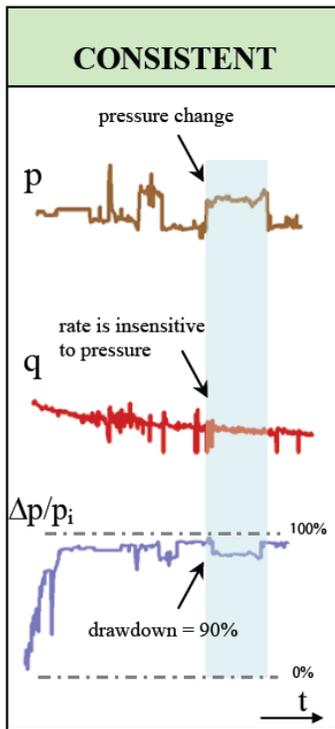


This is a plot of $\Delta p / p_i \times 100\%$ versus time. It indicates the degree of drawdown.

The shape of the inflow performance relationship (IPR) curve shows that in high drawdown situations, the rate becomes insensitive to pressure.

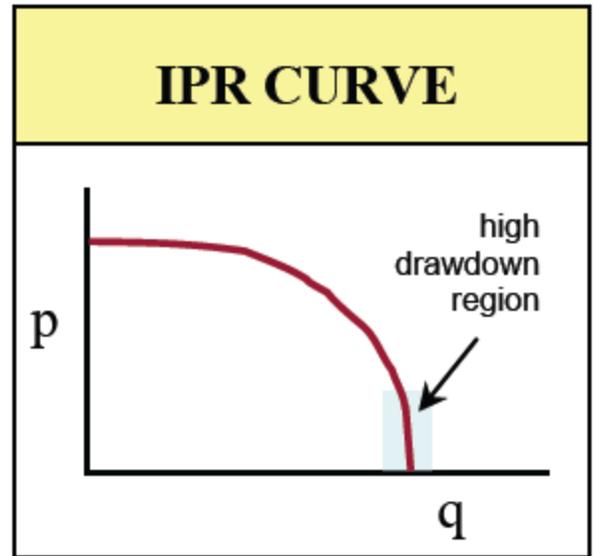

Reasons for inconsistencies:

- At low drawdown, if the flowing pressure decreases (increases), and the rate does not increase (decrease), it means that one or the other is incorrect.
- At high drawdown, the well is operating in the low pressure region of the IPR curve. If the flowing pressure changes but the flow rate does not, it is not a cause for concern.
- At high drawdown, a lack of correlation between rate and pressure is not a cause for concern.

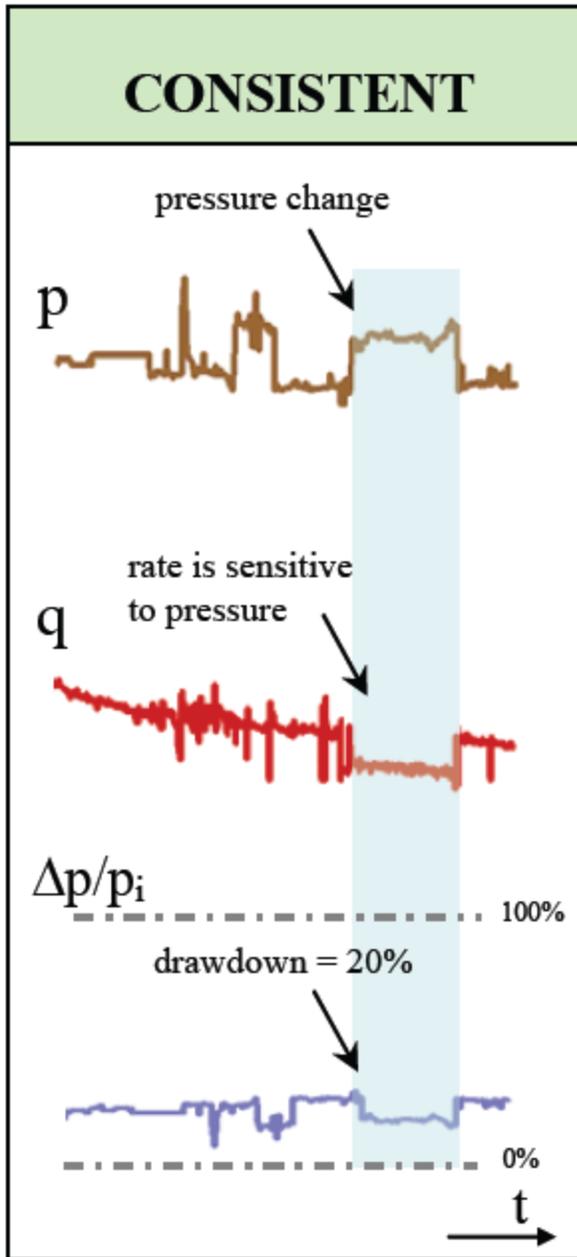





Blasingame (log-log)

[Return to the data diagnostics flowchart](#)

These questions apply to Blasingame (log-log):

- Does the normalized rate continuously decline?
- Does the Blasingame plot have a single continuous stem?
- Are outliers being misinterpreted as boundary-dominated flow?

Does the normalized rate continuously decline?

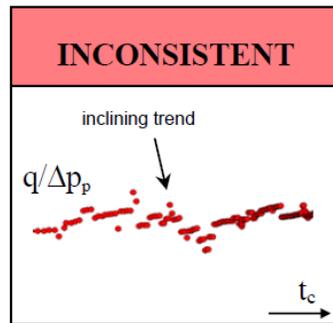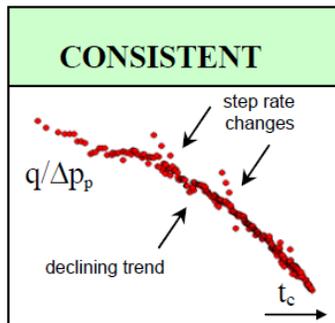



- The log-log plot of normalized rate (q/Ap_p) versus material balance time (G_p/q) should have a declining trend.
- A step change in rate causes a sudden deviation from the declining trend, but if the data is consistent, it reverts to the original declining trend.

Reasons for inconsistencies:

- An increasing trend indicates non-reservoir effects, such as near wellbore cleanup, improving skin, wellbore liquid unloading (if pressures have been calculated from wellhead data).



Does the Blasingame plot have a single continuous stem?

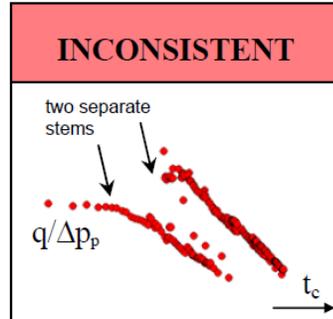
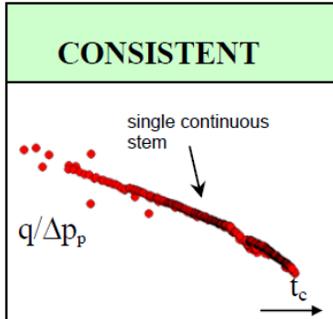


- Changes in rate or pressure are accounted for in the Blasingame plot, and should *not* cause it to develop multiple stems.
- In the case of multiple stems, the stem that represents the correct reservoir model should be used for analysis.

Reasons for inconsistencies:

- The reservoir model has changed (for example, work-over, recompletion, refrac, etc.).
- The wellhead pressures measurement location may have changed (for example, tubing, casing, before / after valve), or there may have been a change of flow path or tubulars.

Are outliers being misinterpreted as boundary-dominated flow?

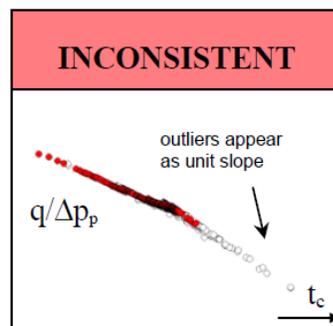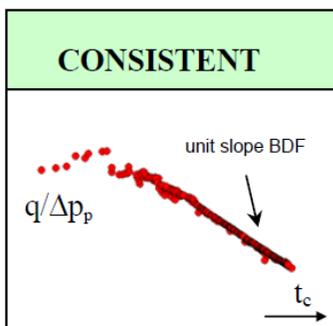

- Outliers often appear on a unit slope on the Blasingame plot. This can lead to an incorrect diagnosis of reservoir depletion or boundary-dominated flow (BDF).

Reasons for inconsistencies:

- Outliers have been included in the analyses. Apply the median filter to remove the outliers.



NPI (log-log)

[Return to the data diagnostics flowchart](#)

These questions apply to the normalized pressure integral (NPI) – log-log:

- Does the normalized pressure continuously increase?
- Does the NPI plot have a single continuous stem?
- Are outliers being misinterpreted as boundary-dominated flow?

Does the normalized pressure continuously increase?

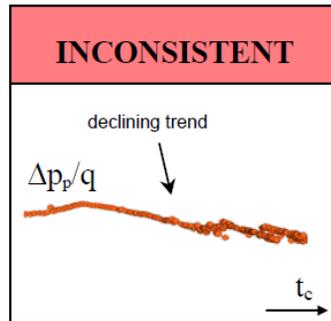
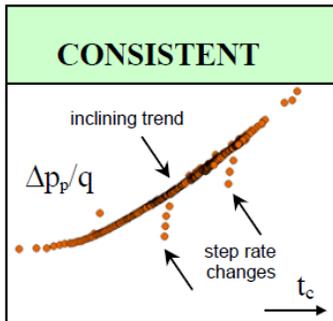


- The log-log plot of normalized pressure ($\Delta p_p/q$) versus material balance time (G_p/q) should have an increasing trend.
- A step change in rate causes a sudden deviation from the inclining trend, but if the data is consistent, it reverts to the original trend.

Reasons for inconsistencies:

- A decreasing trend indicates non-reservoir effects, such as near wellbore cleanup, improving skin, wellbore liquid unloading (if pressures have been calculated from wellhead data).

Does the NPI plot have a single continuous stem?

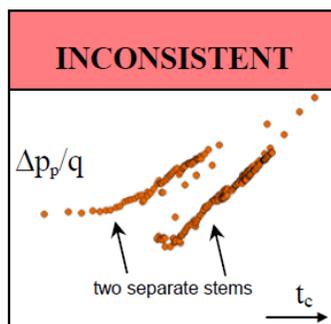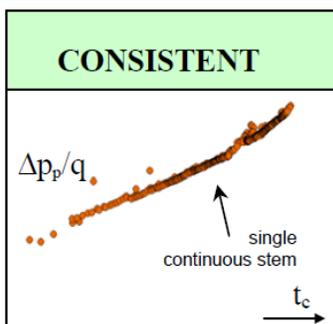



- Changes in rate or pressure are accounted for in the NPI plot, and should *not* cause it to develop multiple stems.
- In the case of multiple stems, the stem that represents the correct reservoir model should be used for analysis.



Reasons for inconsistencies:

- The reservoir model has changed (for example, work-over, recompletion, refrac, etc.).
- The wellhead pressures measurement location may have changed (for example, tubing, casing, before / after valve), or there may have been a change of flow path or tubulars.

Are outliers being misinterpreted as boundary-dominated flow?

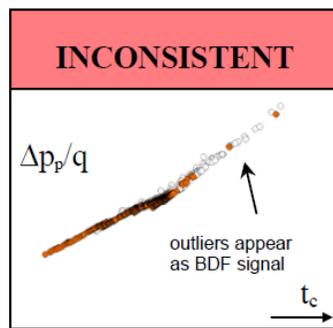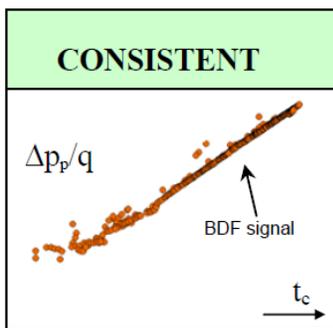

- Outliers often appear on a unit slope on the NPI plot. This can lead to an incorrect diagnosis of reservoir depletion, or boundary-dominated flow (BDF).

Reasons for inconsistencies:

- Outliers have been included in the analyses. Apply the median filter to remove outliers.





FMB rate (Cartesian)

[Return to the data diagnostics flowchart](#)

These questions apply to the flowing material balance (FMB) rate – Cartesian:

- Does the normalized rate continuously decline?
- Does the FMB-Rate plot have a single continuous stem?

Does the normalized rate continuously decline?

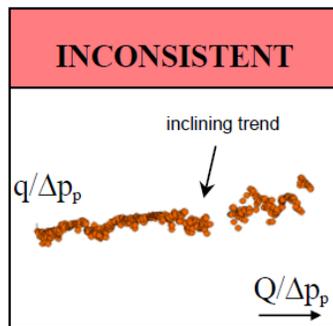
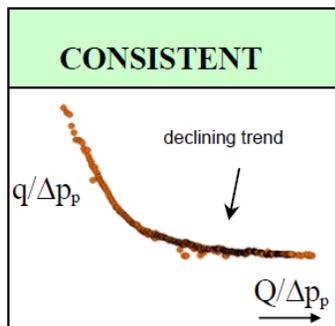


- The Cartesian plot of normalized rate ($q/\Delta p_p$) versus normalized cumulative production ($Q/\Delta p_p$) should have a declining trend, and tend towards a straight line.

Reasons for inconsistencies:

- An increasing trend indicates non-reservoir effects, such as near wellbore cleanup, improving skin, wellbore liquid unloading (if pressures have been calculated from wellhead data).

Does the FMB-Rate plot have a single continuous stem?

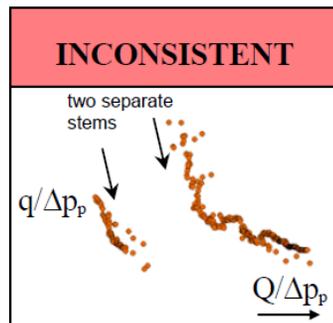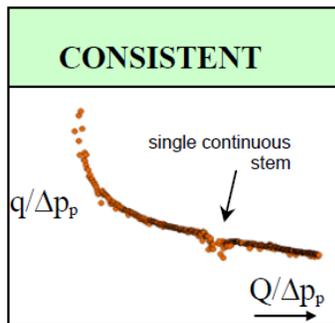

- Changes in rate or pressure are accounted for in the FMB-rate plot, and should *not* cause it to develop multiple stems.
- In the case of multiple stems, the stem representing the correct reservoir model should be used for the analysis.

Reasons for inconsistencies:

- The reservoir model has changed (for example, work-over, recompletion, refrac, etc.).



- The wellhead pressures measurement location may have changed (for example, tubing, casing, before / after valve), or there may have been a change of flow path or tubulars.





FMB pressure (Cartesian)

[Return to the data diagnostics flowchart](#)

These questions apply to flowing material balance (FMB) pressure – Cartesian:

- Does the normalized pressure continuously increase?
- Does the FMB-Pressure plot have a single continuous stem?

Does the normalized pressure continuously increase?

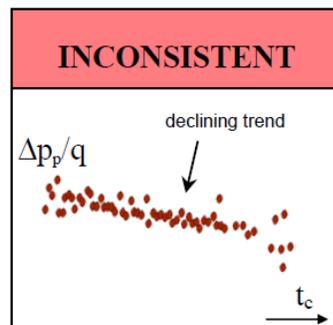
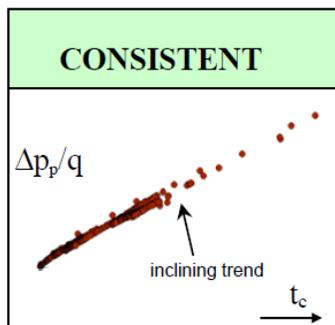


- The Cartesian plot of normalized pressure ($\Delta p_p/q$) versus material balance time (G_p/q) should have an inclining trend and tend towards a straight line.

Reasons for inconsistencies:

- A decreasing trend indicates non-reservoir effects, such as near wellbore cleanup, improving skin, wellbore liquid unloading (if pressures have been calculated from wellhead data).

Does the FMB-Pressure plot have a single continuous stem?

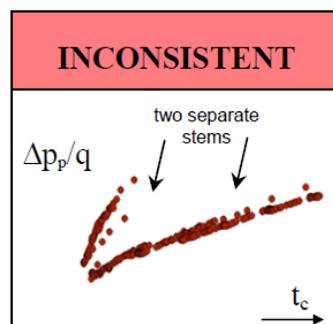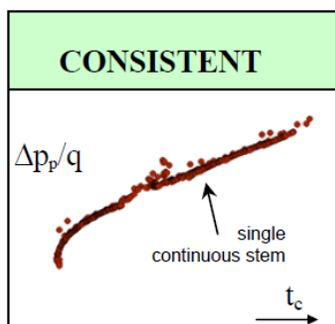

- Changes in rate or pressure are accounted for in the FMB-pressure plot, and should *not* cause it to develop multiple stems.

- In the case of multiple stems, the stem that represents the correct reservoir model should be used for the analysis.

Reasons for inconsistencies:

- The reservoir model has changed (for example, work-over, recom-



pletion, refrac, etc.).

- The wellhead pressures measurement location may have changed (for example, tubing, casing, before / after valve), or there may have been a change of flow path or tubulars.


Equivalence of constant rate and constant pressure solutions

A well produced at a constant rate exhibits a varying (declining) sandface flowing pressure, whereas a well produced at a constant sandface pressure exhibits a varying decline rate. There is a strong symmetry between the two solutions, as both are obtained from the same equation, namely the equation that governs fluid flow in porous media. The symmetry is not exact, however, because the boundary conditions under which the two solutions are obtained are different.

The constant rate solution can be converted to a constant sandface pressure solution (and vice versa) using the principle of superposition. The constant sandface pressure solution is obtained by superposing a large number of very short constant rate solutions in time. When plotted against superposition time, the superposed constant rate solution is very similar to the constant pressure solution, provided the discretization intervals are sufficiently small. It turns out that the two solutions are quite similar during transient flow anyway, and therefore, superposition is not required to make one look like the other. However, they quickly diverge after boundary-dominated flow begins. The constant rate solution behaves like the harmonic stem of the Arps type curves, while the constant pressure solution declines exponentially. The figure below compares the two solutions by plotting the dimensionless typecurves of each.



Comparison of q_D with $1/p_D$
Cylindrical Reservoir with Vertical Well in Center

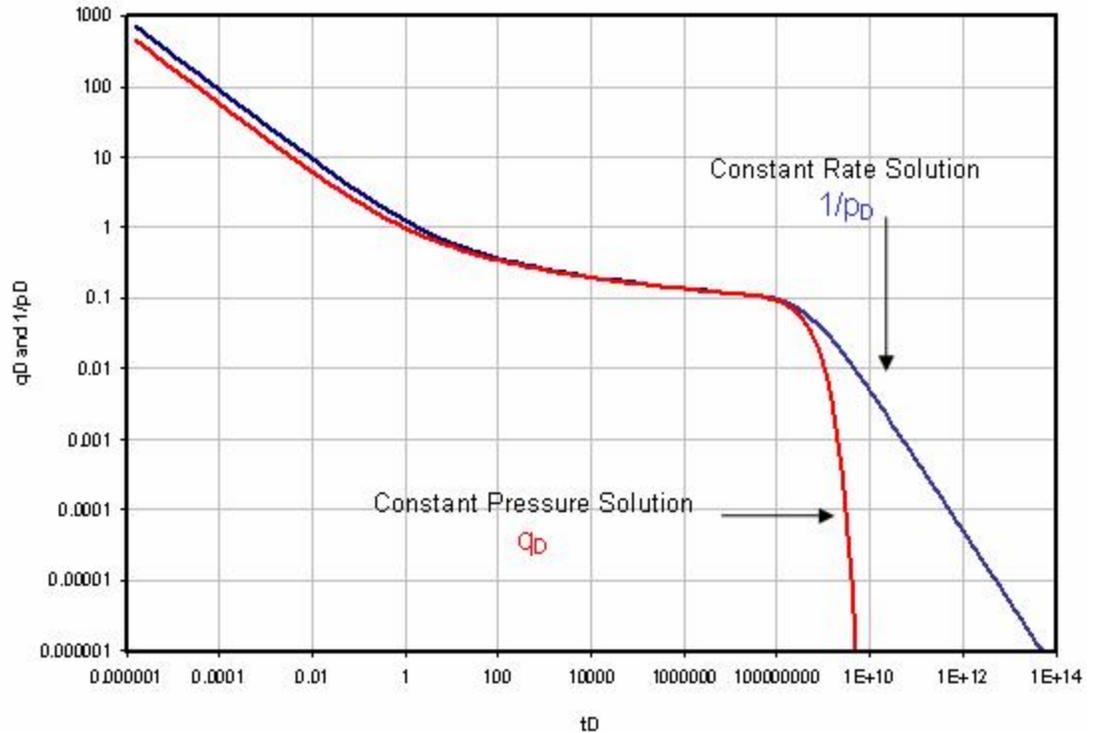


A method for forcing one solution to look like the other during boundary-dominated flow is useful because the necessity of using superposition in time would be avoided completely. Because of pressure transient analysis, diagnostic tools for analyzing the constant rate solution are widely known and understood. Therefore, there is value in being able to analyze other types of solutions using the same diagnostic tools. The concept of material balance time provides the normalization necessary to make constant pressure and constant rate solutions equivalent. Material balance time converts the boundary-dominated flow portion of the constant pressure solution into the pseudo-steady state portion of the equivalent constant rate solution. Plotting using material balance time also allows solutions with both declining rates and pressures to look like the equivalent constant rate solution.

Fracture properties

Fracture flow capacity ($k_f w_f$)

Fracture flow capacity is a measure of how conductive or how easily fluid moves through a fracture. It is defined as the product of fracture permeability (k_f) and fracture width (w_f), as shown below:

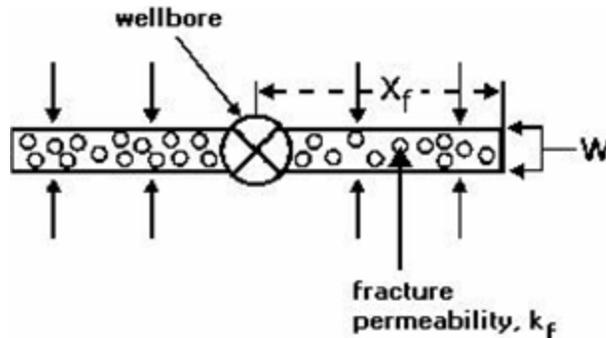


A large value of fracture flow capacity ($>10,000$ md ft) represents an infinite conductivity fracture, and yields a linear fracture flow response on the derivative. A small value of the fracture flow capacity ($<10,000$ md ft) represents a finite conductivity fracture and may yield a bilinear fracture flow response on the derivative. When the value of fracture flow capacity is divided by the product of formation permeability and fracture half-length, the result is known as the dimensionless fracture conductivity, defined as:

$$F_{CD} = \frac{k_f w_f}{k x_f}$$

This dimensionless form is a more common measure of fracture conductivity that is found in the literature.

Fracture half-length (x_f)

A hydraulic fracture is typically modeled by assuming it extends in a straight line equally on each side of the wellbore as shown in the following diagram.

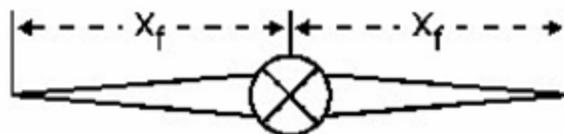



As shown, the fracture half-length is the distance from the well to the tip of the fracture.

The fracture half-length depends on the size of the fracture treatment and varies from a few feet to a few hundred feet. In pressure and rate transient analysis it is estimated from the linear fracture flow analysis.

Geomechanical reservoir models

Geomechanical models simulate changes in rock properties with time and pressure. In performance-based reservoir analysis, a geomechanical model may be coupled with a flowing material balance, typecurve, analytical, numerical, or unconventional reservoir module analysis. In addition, geomechanical models are useful for, and may be necessary additions to, analyses of overpressured reservoirs. The primary properties of interest are porosity, formation compressibility (pore compressibility), and permeability. The impact of these properties on the fluid flow model are discussed in the following sections.

Porosity and formation compressibility


Pore volume and pore volume compressibility are related through the following equation:

$$c_f = \frac{1}{V_p} \frac{dV_p}{dp}$$

In normally pressured reservoirs, the pore volume change with pressure is considered minimal, and thus the pore volume (formation) compressibility retains a very small, constant value. However, in overpressured reservoirs, the natural compaction process is incomplete, as a large portion of the overburden remains supported by high internal pore pressure. As this pressure is released through fluid production, the pore space may reduce significantly. Thus, under overpressured conditions, formation compressibility is relatively large, and may have significant variation with pressure. This becomes important to the material balance equation, as pore compressibility is a significant energy term in overpressured reservoirs.

In normally pressured gas reservoirs, the energy of the formation is usually negligible, compared to the energy of the gas. In oil reservoirs, the formation compressibility may be significant at any pressure. The graph below compares the energies (compressibilities) of formation and fluid (gas) over a large pressure range. In areas where they are near the same order of magnitude, the formation compressibility cannot be ignored.

Compressibility vs. Pressure (Typical Gas Reservoir)

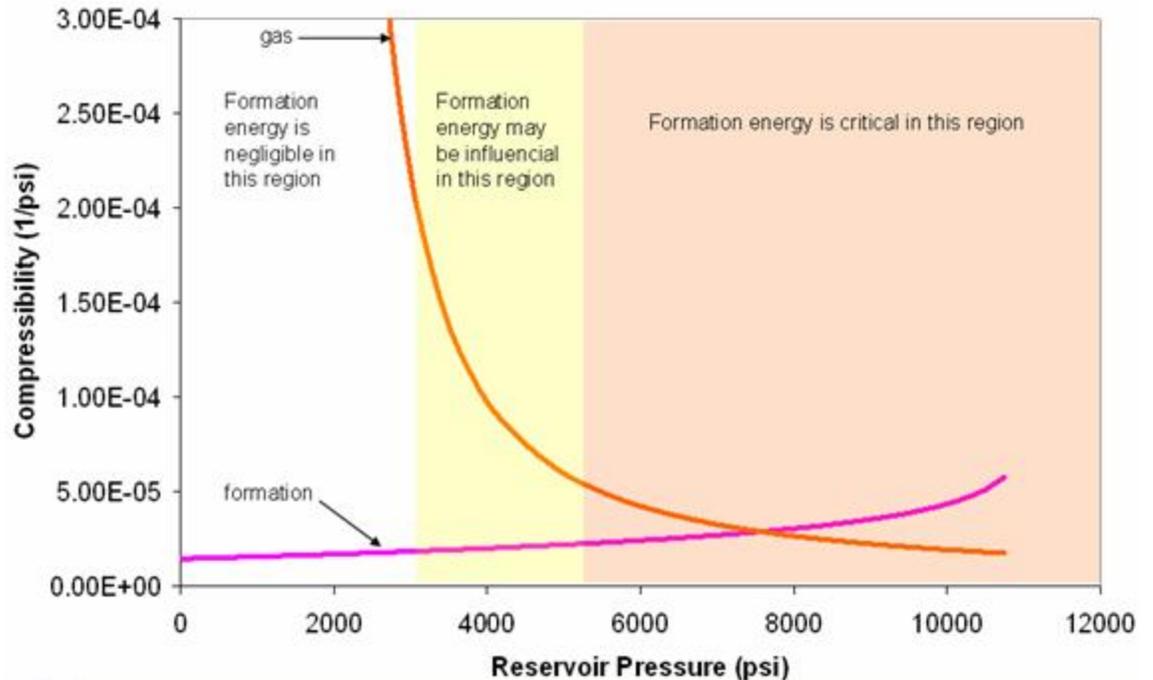

For overpressured reservoirs, there are very few published correlations. Most appear to be highly specific to area and rock type, and thus are not useful for universal application.

Hall

The most well-known and widely used correlation for formation compressibility was developed by Hall, and is a function of porosity. The Hall correlation is based on laboratory data and is considered reasonable for normally pressured sandstones. It tends to under-predict formation compressibility under high pressure conditions. This correlation is used when calculating initial formation compressibility on the Basic Reservoir Properties view.

$$c_f = 1.87 \cdot 10^{-6} \phi^{-0.415}$$

Dobrynin

The Dobrynin (1962) correlation can predict a relative change in formation compressibility over a range of net overburden pressures. It is designed for overpressured reservoirs. The correlation assumes a

semi-logarithmic relationship between formation compressibility and net overburden pressure between two limiting pressures, p_{\min} and p_{\max} . However, it does not predict the initial formation compressibility.

$$c_f = \frac{c_{f \max}}{\log \left(\frac{p_{\max}}{p_{\min}} \right)} \log \left(\frac{p_{\max}}{p_n} \right)$$

$$f_c = \frac{c_f}{c_{fi}} = \frac{\log \left(\frac{p_{\max}}{p_n} \right)}{\log \left(\frac{p_{\max}}{p_{ni}} \right)}$$

$$p_{\max} = 30000 \text{ psi}$$

$$p_n = p_e + \alpha (p_i - p)$$

Laurent et al. (1993) propose an empirical correlation for Biot Coefficient (α):

$$\alpha = 1.75 \phi^{0.51}$$

The Dobrynin correlation is considered a reasonable predictor of variation in formation compressibility, provided that the following conditions are met:

- Net overburden pressure must lie within the range of p_{\min} and p_{\max} (usually 150 to 30,000 psi)
- Overburden pressure must be higher than the product of the initial pressure and Biot's number (initial net overburden pressure must be greater than zero)

The Dobrynin correlation may be used to generate a continuous compressibility profile using a known formation compressibility value:

- Initial formation compressibility (usually between 10 and 80 microcips for over-pressured reservoirs)
- Overburden pressure gradient (Pgrd, psi/ft)
- Reservoir depth (ft)

Formation compressibility is then solved for any value of pressure.

Pressure-dependent permeability

In the standard pressure transient equations, permeability is usually considered to be constant. However, there are several situations in which this assumption may not be a valid:

- Compaction in overpressured reservoirs
- Very low permeability reservoirs (in general)
- Unconsolidated and/or fractured formations

Variable permeability is an important (and sometimes critical) consideration, with regards to the fluid flow model. As a result of pore volume reduction during fluid withdrawal, the available flow area is reduced, and thus the permeability decreases with pressure. As with formation compressibility, the variable permeability effect is greatest in overpressured conditions. The process of pore volume collapse in overpressured reservoirs is referred to as compaction.

One way to account for a variable permeability over time is to modify the definition of pseudo-pressure and pseudo-time. Another way to account for variable permeability is through the use of formation compressibility correlations.

Yilmaz and Nur

Yilmaz and Nur present a generic correlation, suitable for the pressure variable permeability observed in extremely low permeability reservoirs. The correlation introduces a "permeability modulus" (γ) which has a form identical to compressibility. The magnitude of the permeability modulus is a strong function of the formation compressibility.

$$\gamma = \frac{1}{k} \frac{dk}{dp}$$

$$\frac{k}{k_i} = e^{-\gamma(p_i - p)}$$

Dobrynin

Dobrynin presents a more detailed correlation, designed for overpressured reservoirs, which relates the fractional change in permeability due to formation compressibility, overburden pressure, and a dimensionless correlation factor (γ). Between a certain minimum and maximum pressure range (p_{\min} and p_{\max}), this correlation produces a semi-log straight line.

$$\frac{\Delta k}{k} = 2(1 + \gamma) c_f^{\max} \left[p_{\min} + \frac{p_o}{\log\left(\frac{p_{\max}}{p_{\min}}\right)} \left[\log\left(\frac{p_{\max}}{p_o}\right) + 0.434 - \frac{p_{\min}}{p_o} \left[\log\left(\frac{p_{\max}}{p_{\min}}\right) + 0.434 \right] \right] \right]$$

where:

γ is 0.33 for uniform pore distribution or very high pore compressibility, higher for poorly sorted sandstones with low pore compressibility.

The equation below relates the permeability at any pore pressure to that at conditions of zero net overburden pressure:

$$\frac{k_p}{k} = 1 - 2(1 + \gamma) c_f^{\max} \left[p_{\min} + \frac{p_e - \alpha \bar{p}}{\log\left(\frac{p_{\max}}{p_{\min}}\right)} \left[\log\left(\frac{p_{\max}}{p_e - \alpha \bar{p}}\right) + 0.434 - \frac{p_{\min}}{p_e - \alpha \bar{p}} \left[\log\left(\frac{p_{\max}}{p_{\min}}\right) + 0.434 \right] \right] \right]$$

It is more suitable to have an equation that relates permeability at any pressure to permeability at initial conditions, thus we rewrite the above as follows.

$$\frac{k_p}{k_i} = \frac{\frac{k_p}{k}}{\frac{k_i}{k}} = \frac{1 - 2(1 + \gamma) c_f^{\max} \left[p_{\min} + \frac{p_e - \alpha \bar{p}}{\log\left(\frac{p_{\max}}{p_{\min}}\right)} \left[\log\left(\frac{p_{\max}}{p_e - \alpha \bar{p}}\right) + 0.434 - \frac{p_{\min}}{p_e - \alpha \bar{p}} \left[\log\left(\frac{p_{\max}}{p_{\min}}\right) + 0.434 \right] \right] \right]}{1 - 2(1 + \gamma) c_f^{\max} \left[p_{\min} + \frac{p_e - \alpha p_i}{\log\left(\frac{p_{\max}}{p_{\min}}\right)} \left[\log\left(\frac{p_{\max}}{p_e - \alpha p_i}\right) + 0.434 - \frac{p_{\min}}{p_e - \alpha p_i} \left[\log\left(\frac{p_{\max}}{p_{\min}}\right) + 0.434 \right] \right] \right]}$$

where:

Biot's Number default: 0.85 to 1

Maximum Formation Compressibility default: 30 to 80 microcips

P_{\max} = 30,000 psi

P_{\min} = 150 psi

Geomechanical effects for oil analytical models

This content applies to water analytical models as well.

Background

Geomechanical effects are useful for (and may be necessary additions to) the analysis of over-pressured reservoirs. The major geomechanical effects are:

- Pressure-dependent permeability effect (Yilmaz and Nur correlation)
- Pressure-dependent formation compressibility effect (Dobrynin correlation)

Permeability changes are incorporated into a special formulation of pseudo-pressure for oil, but they also enter into the definition of pseudo-time. In addition, formation compressibility changes are incorporated into the definition of pseudo-time.

Implementation notes: 2014v2 release

For the limited scope of the 2014v2 release, only the pseudo-pressure aspect of pressure-dependent permeability has been implemented. To be consistent with standard analytical model formulations, the pseudo-pressure for oil assumes a constant formation volume factor and constant viscosity.

Pseudo-time (which is affected by both changing permeability and by compressibility) *has not been implemented*.

Consequences:


- By using regular time instead of pseudo-time for oil, forecasts tend to be more conservative. The degree of conservativeness is directly related to the combined effect of permeability, and formation compressibility variations with pressure.
- By using constant oil properties, slight changes in pressure, volume, temperature (PVT) are not be tracked (this is a relatively minor issue).

Recommended Usage:

- For oil reservoirs that stay above the bubble point
- For oil reservoirs that are at or below the bubble point, but with total compressibility that accounts for gas coming out of solution.

GIS theory

The geographic information system (GIS) is a system for gathering, processing, and presenting data based on geographical references.

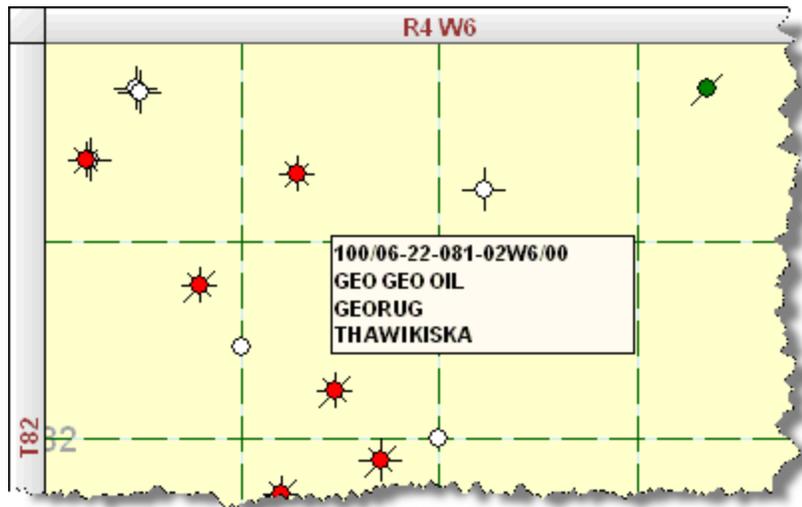

This section describes how locations are displayed using the different mapping systems. There are five grid display modes supported in Harmony Enterprise:

1. Cartesian
2. Dominion Land Survey (DLS)
3. Latitude / Longitude
4. National Topographic Map Numbering System (NTS)
5. Universal Transverse Mercator (UTM)

Cartesian

Cartesian coordinates describe a location in terms of distance from a defined reference point. The X axis, which represents longitude, increases in the east direction. The Y axis, which represents latitude, increases in the north direction.

Example location: -317 km, 6532 km

X Axis (East/West)	Y Axis (North/South)
317 km west	6532 km north


East / West: The negative sign indicates that the location is to the west of the defined reference point.

North / South: The location is to the north of the reference point. In most cases this reference will be the equator.

Dominion land survey

The Dominion Land Survey (DLS) system is used in the Canadian provinces of Alberta, Saskatchewan, Manitoba, and a small portion of British Columbia.

Areas in Canada where the DLS system is used:

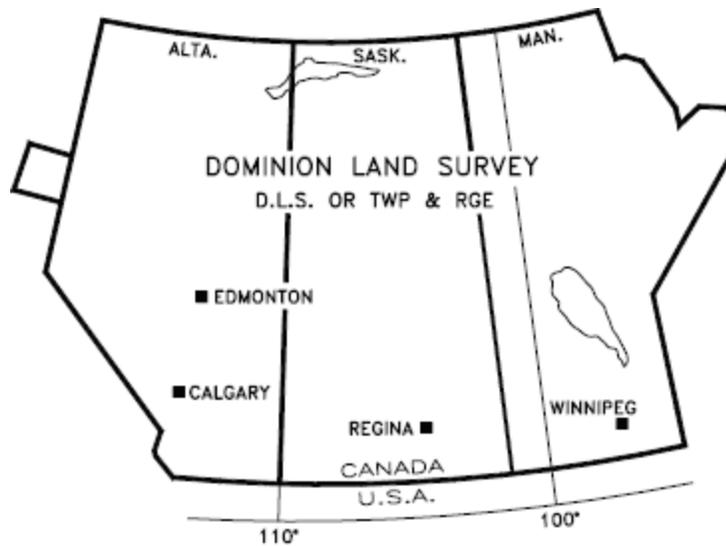

Example Location: 100/04-11-082-04W6/0

We can read the parts of the unique well identifier (UWI) as the following:

UWI Format	Location Exception	Legal Sub-division	Section	Township	Range	Meridian	Event Sequence Code
1	00	04	11	082	04	w6	0

UWI format

This number identifies the use of a DLS system.


Location exception code

This is used when there is more than one well drilled per legal subdivision. For more details on what can be included in the exception code, see Energy Resource Conservation Board's Guide 59.

Meridian

The meridians are 4 degrees of longitude wide that divide the DLS provinces. The First or Primary Meridian is located at 97°27' 28.41" west, which is just west of Winnipeg, Manitoba. Meridians west of the Primary Meridian are designated sequentially as "W1M", "W2M" to "W6M". Similarly, meridians east of the Primary Meridian are designated sequentially as "E1M", "E2M", etc. The fourth meridian west of the Primary (W4M) corresponds to 110 degrees west, and forms the Alberta-Saskatchewan border.

The meridians corresponding to Alberta, Canada:

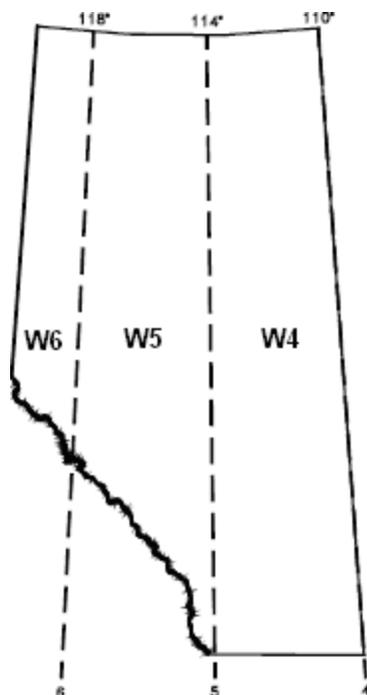


Range

The ranges further divide the meridians. At the southern edge of Alberta, there are 30 range lines per meridian. The number of ranges per meridian decreases as the latitude increases. Each range is 6 miles (9.7 kilometers) wide.

Sections

A square one range wide by one township north-south contains 36 sections. Each section is 1 mile (1.6km) per side.


Expanded view of sections:

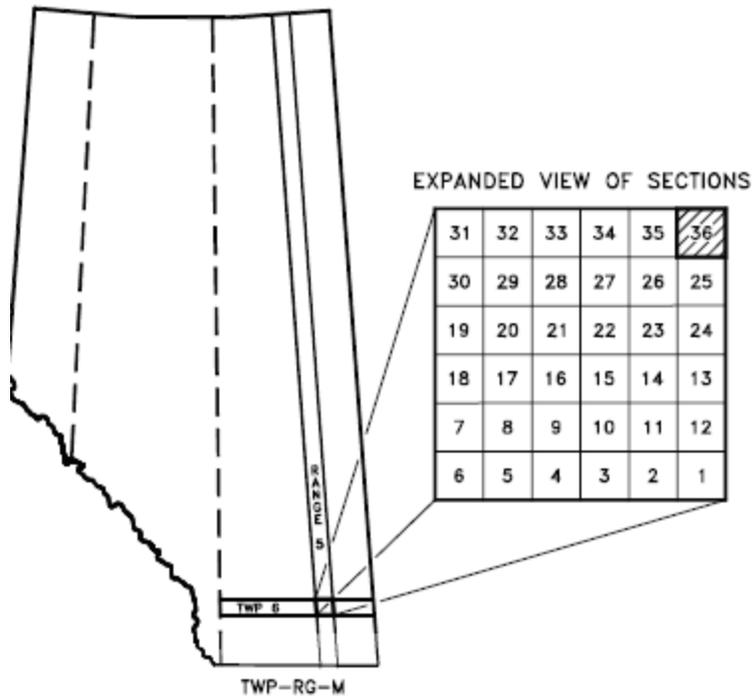

Legal subdivision

Each section is further divided into 16 legal subdivisions (LSD). An LSD is the smallest division in the DLS system. Each LSD is a square of one-quarter-mile, or 1320 ft (402m) per side.

Expanded view of LSD:

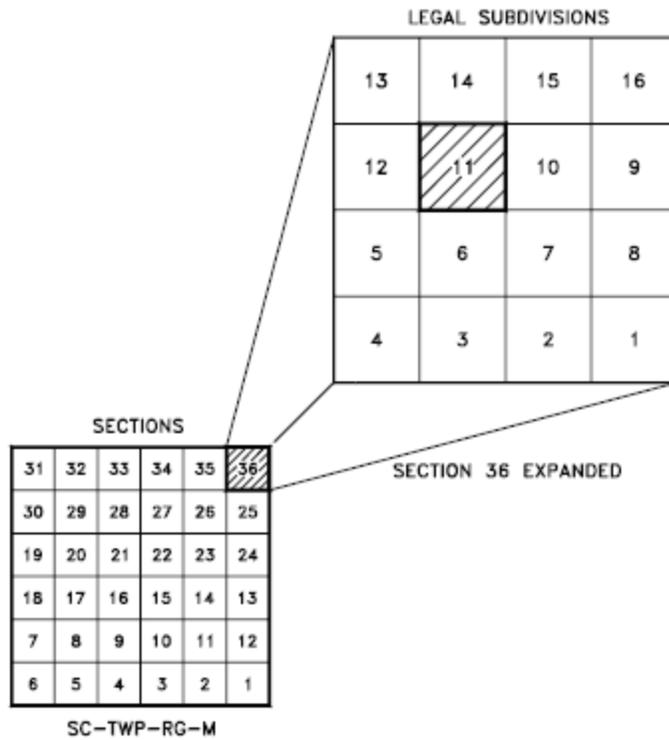


Event sequence


Indicates chronological sequence of drilling or completion activities.

Latitude / longitude

Latitude is a measure of how far a point is from the Earth's equator. Latitudes may vary from 0 to 90 in both north and south directions. Latitude lines are all parallel. There is a constant distance separating latitude lines of about 110 km (69 miles) per degree.

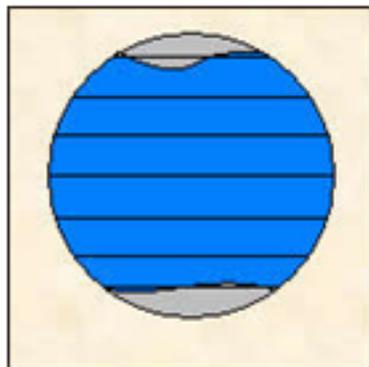


Longitude is an angular distance that is measured using the prime meridian as a reference. The prime meridian is an imaginary line that connects the North and South poles while passing through Greenwich, England. The ranges for longitudes are 0 - 180 East and West. Longitude lines are not parallel. The distance between two points that are separated by a fixed longitude depends on their latitude. Longitude varies from about 110 km (69 miles) per degree at the equator to a few meters (or feet) per degree at the poles.

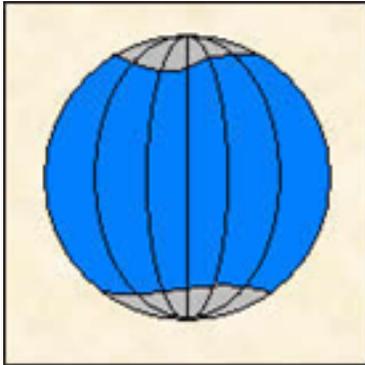

To further divide degrees of latitude and longitude seconds and minutes are used:

- 1 degree = 1° = 60 minutes
- 1 minute = 60 seconds

Since Harmony Enterprise only accepts a decimal notation for latitude and longitude, you need to convert your values. You can use an online calculator. Or convert by hand, by dividing the minutes by 60 and the seconds by 3600 (60 x 60), followed by adding these values together with the degrees. If you attempt to bring in latitude / longitude, Harmony Enterprise does not read the directional script typically given at the end of a coordinate pair (e.g., N for "Northing", etc.). Instead, Harmony Enterprise reads whether the number is positive or negative.

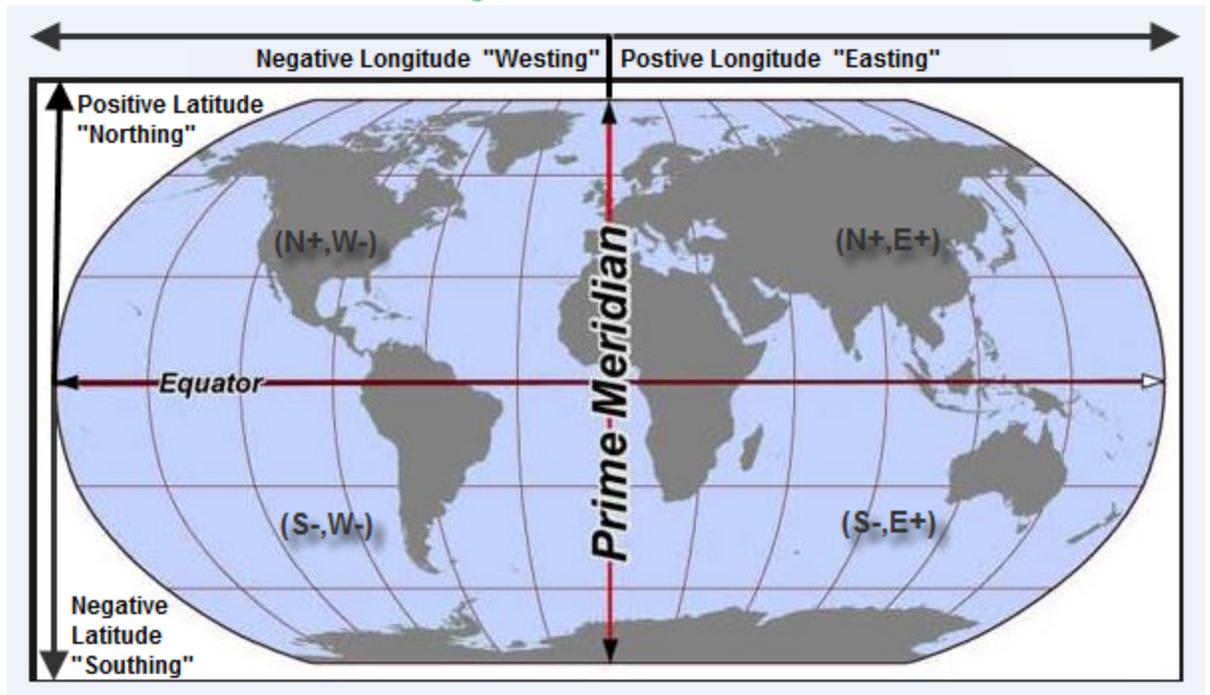


As an example of latitude and longitude, here are the approximate locations of a few cities around the world:

Location	Latitude	Longitude	Notes
Greenwich, England	51°, 29 min N	00°, 0 min	This is the reference point for longitude.
Calgary, Canada	51°, 3 min N	114°, 3 min W	This city is located north of the Equator and to the west of Greenwich.
Perth, Australia	31°, 57 min S	115°, 52 min E	This city is located south of the Equator and to the east of Greenwich.


National topographic map numbering system

The National Topographic Map Numbering System (NTS) is a system used by Canada to provide general purpose maps of the country.

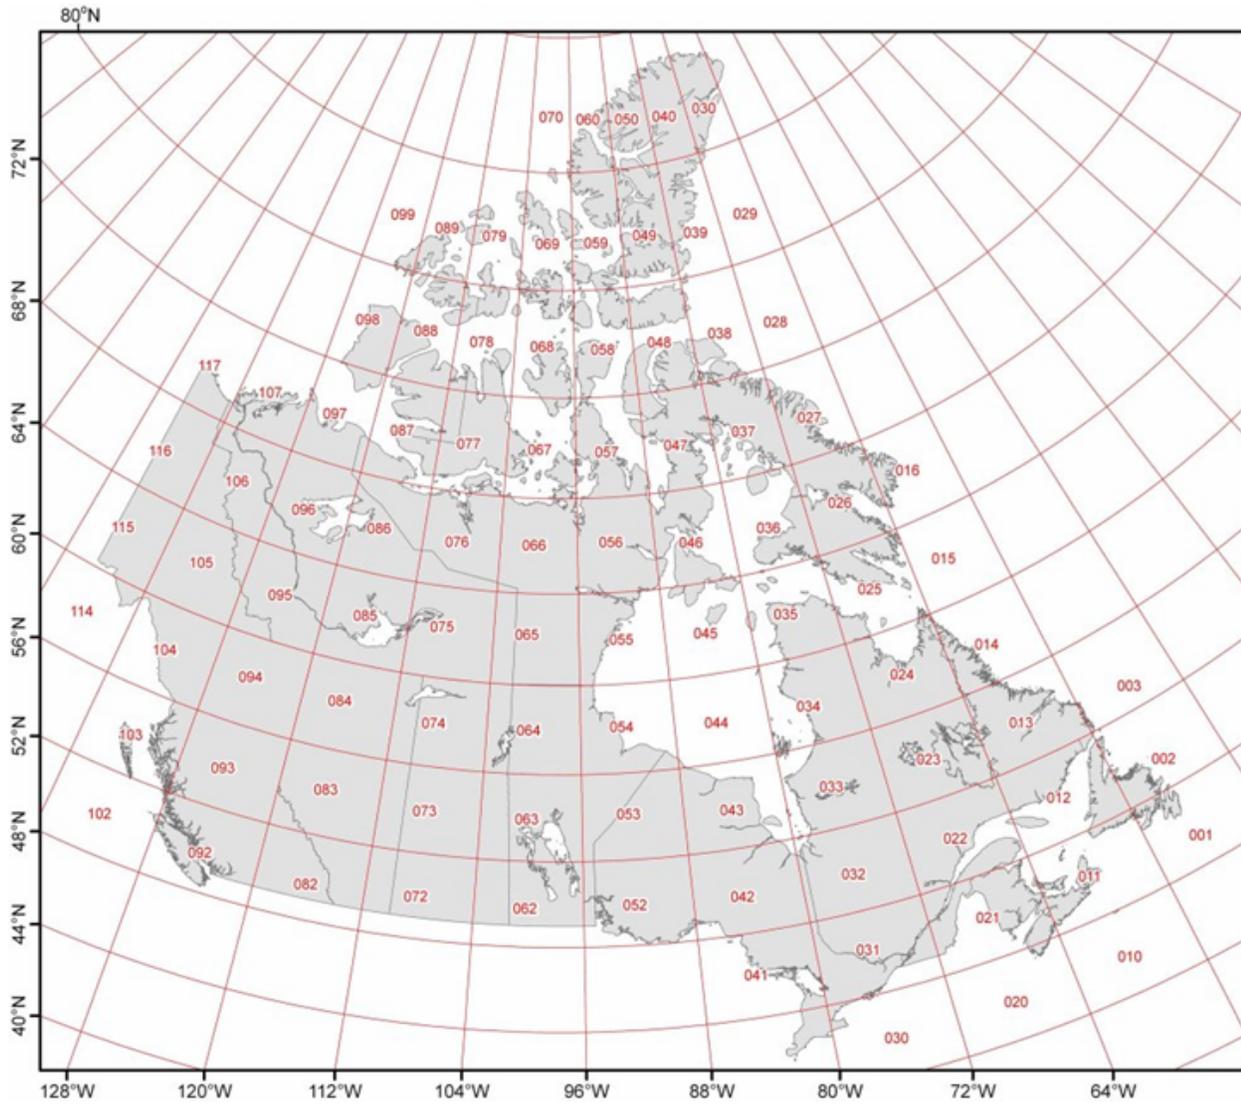

Example Location: a-10-D-93-P-2

Quarter Units	Units	Blocks	Series Numbers	Map Areas	Map Sheets
a	10	1	93	P	8

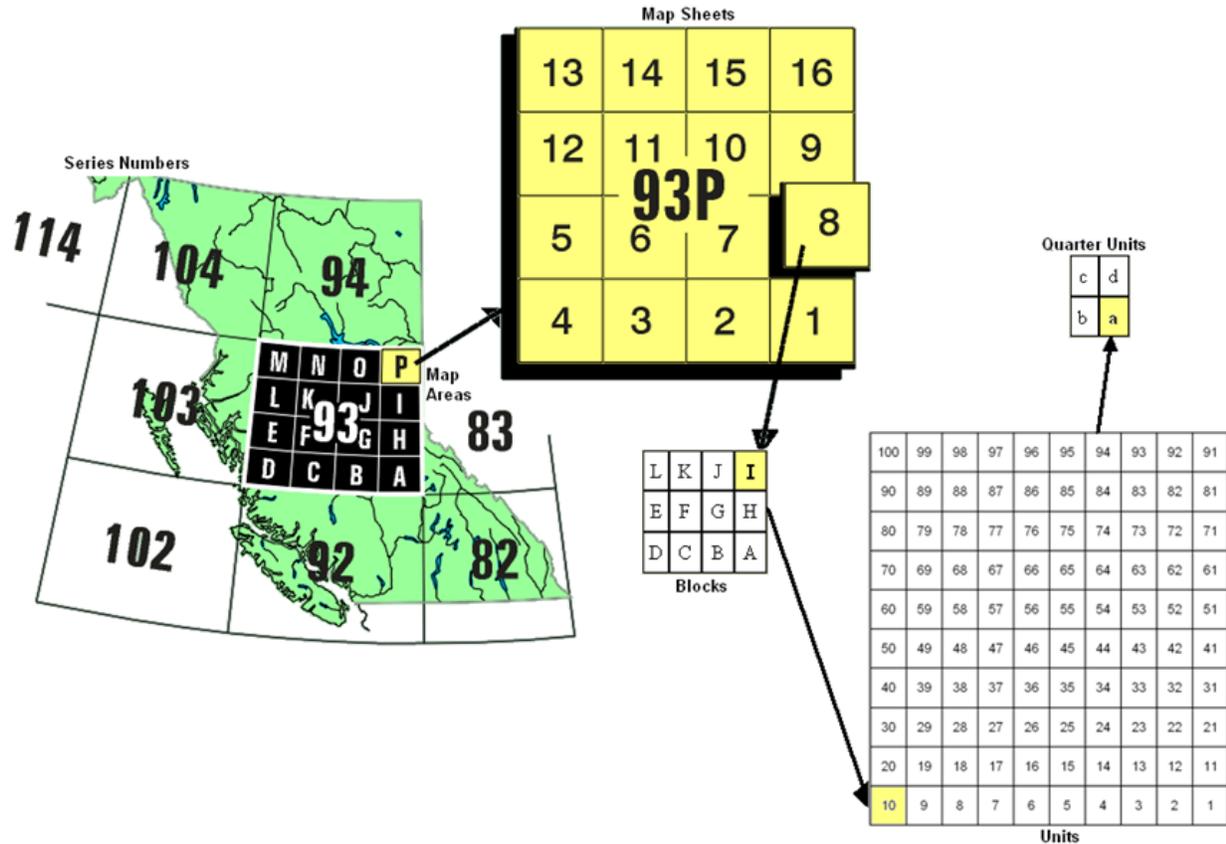

Series numbers

The series numbers identify rectangular areas that have a width of 8 degrees of longitude (width) and 4 degrees of latitude (north south). Series number 93 is located in the province of British Columbia.

Map areas

The map areas divide the series numbers into 16 pieces that are labeled A to P. Each map area is 2 degrees of longitude (width) and 1 degrees of latitude (north south).

Map sheets

Each map area is divided into 16 numbered map sheets.

Blocks

The map sheets are divided into 12 blocks that are labeled from A to L.

Units


The blocks are subdivided into 100 units. The direction of the numbers is always towards the left, unlike the numbering of map sheets.

Quarter units

Each block is subdivided into quarter units labeled a to d.

Universal transverse mercator

The universal transverse mercator (UTM) grid is an attempt to draw the earth on a cylindrical projection. The word transverse implies that the cylinder is "wrapped" around the earth in a north-south direction, as shown in the following figure.

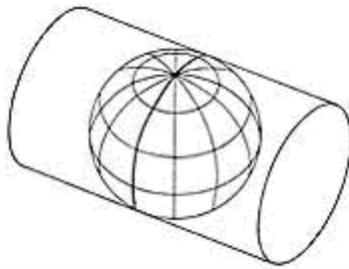

The equator is used as the reference point in the north/south direction. The east/west reference is decided upon by the user. Caution should be used in using coordinates that are very far apart as UTM zones are intended to be only 6 degrees longitude in width.

Example location: 317km W, 6532km N

East/West	North/South
317 km west	6532 km north

East / West: The location is 317 km (198 miles) to the west (W) of longitudinal reference point.

North / South: The location is that the well is 6532 km (4083 miles) to the north (N) of the equator.

Interpolation theory

Values should be interpolated using the following equation:

$$y = y_1 + \frac{(y_2 - y_1)(t - t_1)}{(t_2 - t_1)}$$

Where:

y = Interpolated value

y_1 = Known lower-bound value

y_2 = Known upper-bound value

t = Mid-period time at the interpolate value

t_1 = Mid-period time at the known lower-bound value

t_2 = Mid-period time at the known upper-bound value

Langmuir isotherm

Adsorption

Shale reservoirs have immense capacity for methane storage. The mechanism by which this occurs is called *adsorption*. In adsorption, molecules of gas become attached to the surface of organic material in shale. Nearly all the gas stored by adsorption exists in a condensed, near-liquid state. Adsorption can be visualized by imagining a magnet attached to a metal surface, or lint attached to a sweater. This is different from *absorption* where one substance becomes trapped inside another, such as a sponge soaking up water. Adsorption is a reversible process, because it involves weak attraction forces.

Typically, shale reservoirs can store far more gas in the adsorbed state than conventional reservoirs can hold by compression at pressures below 1000 psia. Since the volume of a cleat or fracture system is small when compared to the volume of the reservoir, free gas only accounts for a small portion of the gas stored in shale. As a result, the pressure volume relationship is often described by the desorption isotherm only.

Langmuir isotherm formulation

The release of adsorbed gas is commonly described by a pressure relationship called the Langmuir isotherm. The Langmuir adsorption isotherm assumes that the gas attaches to the surface of the shale, and covers the surface as a single layer of gas (a monolayer). At low pressures, this dense state allows greater volumes to be stored by sorption than is possible by compression.


The typical formulation of the Langmuir isotherm is:

$$C_g = \frac{V_L p}{p_L + p}$$

where C_g is the gas content measured in scf / ton of shale.

Langmuir volume


The Langmuir volume is the maximum amount of gas that can be adsorbed at infinite pressure. The following plot of a Langmuir isotherm demonstrates that gas content asymptotically approaches the Langmuir volume as pressure increases to infinity.

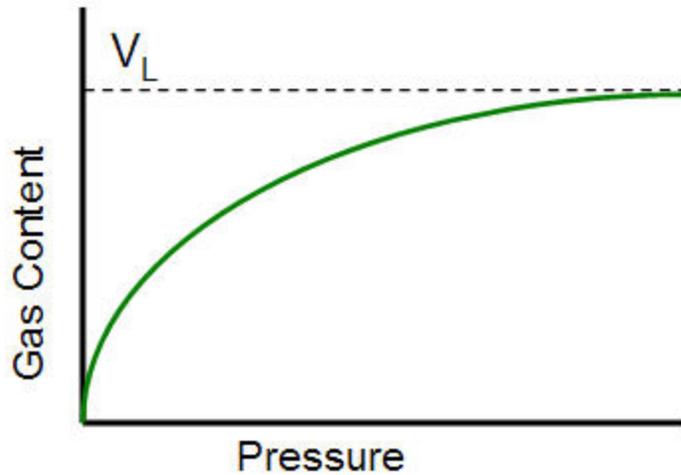

The units for Langmuir volume are scf / ton (volume gas per mass of shale). This can be converted to scf/ft³ (volume of gas per volume of shale) by multiplying it by the bulk density.

Langmuir pressure

The Langmuir pressure, or critical desorption pressure, is the pressure at which one half of the Langmuir volume can be adsorbed. As seen in the figure below, it changes the curvature of the line and thus affects the shape of the isotherm.

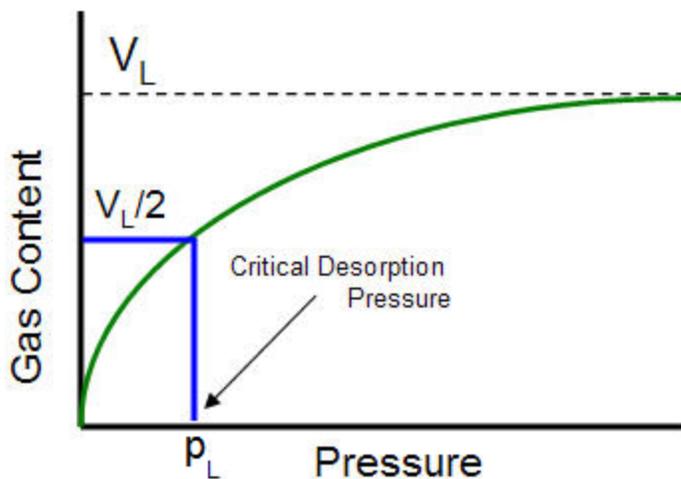

Isotherm variability

An isotherm is based on the assumption that the temperature is constant. The adsorption capacity decreases as temperature increases. When doing any analysis on shale, it is important to use the isotherm based on the reservoir temperature.


Material balance time theory

The Fetkovich typecurves are applicable to wells that produce at constant sandface pressure. Many wells, particularly gas wells, experience a decline in sandface pressure during their life. Blasingame and his students / co-workers (McCray, Palacio) developed a time function that enables the matching of production rate data on Fetkovich typecurves, even when the flowing pressure is varying. After developing different time functions, they came up with a simple function they called "material balance time" which works very well when the change in sandface pressure is smooth, as is often the case in production operations. They, and Agarwal-Gardner et al., also demonstrated that using material balance time converts the constant pressure solution into the constant rate solution, which is the solution widely used in the field of well testing.

Conceptually, material balance time is defined as the ratio of cumulative production to instantaneous rate:

$$t_c = \frac{Q}{q} \quad (1)$$


The symbol t_c has been adopted as it represents a corrected time based on cumulative production. It is also similar to the corrected "Horner" time that is used in build-up analysis in well testing, for correcting the effect of a varying flow rate. It is the value of time that a well has to flow at the current rate in order to produce the same amount of fluid (and hence honor the material balance principle). In the figure below, the cumulative production is represented by the area under the graph. The definition of material balance time makes these areas the same.

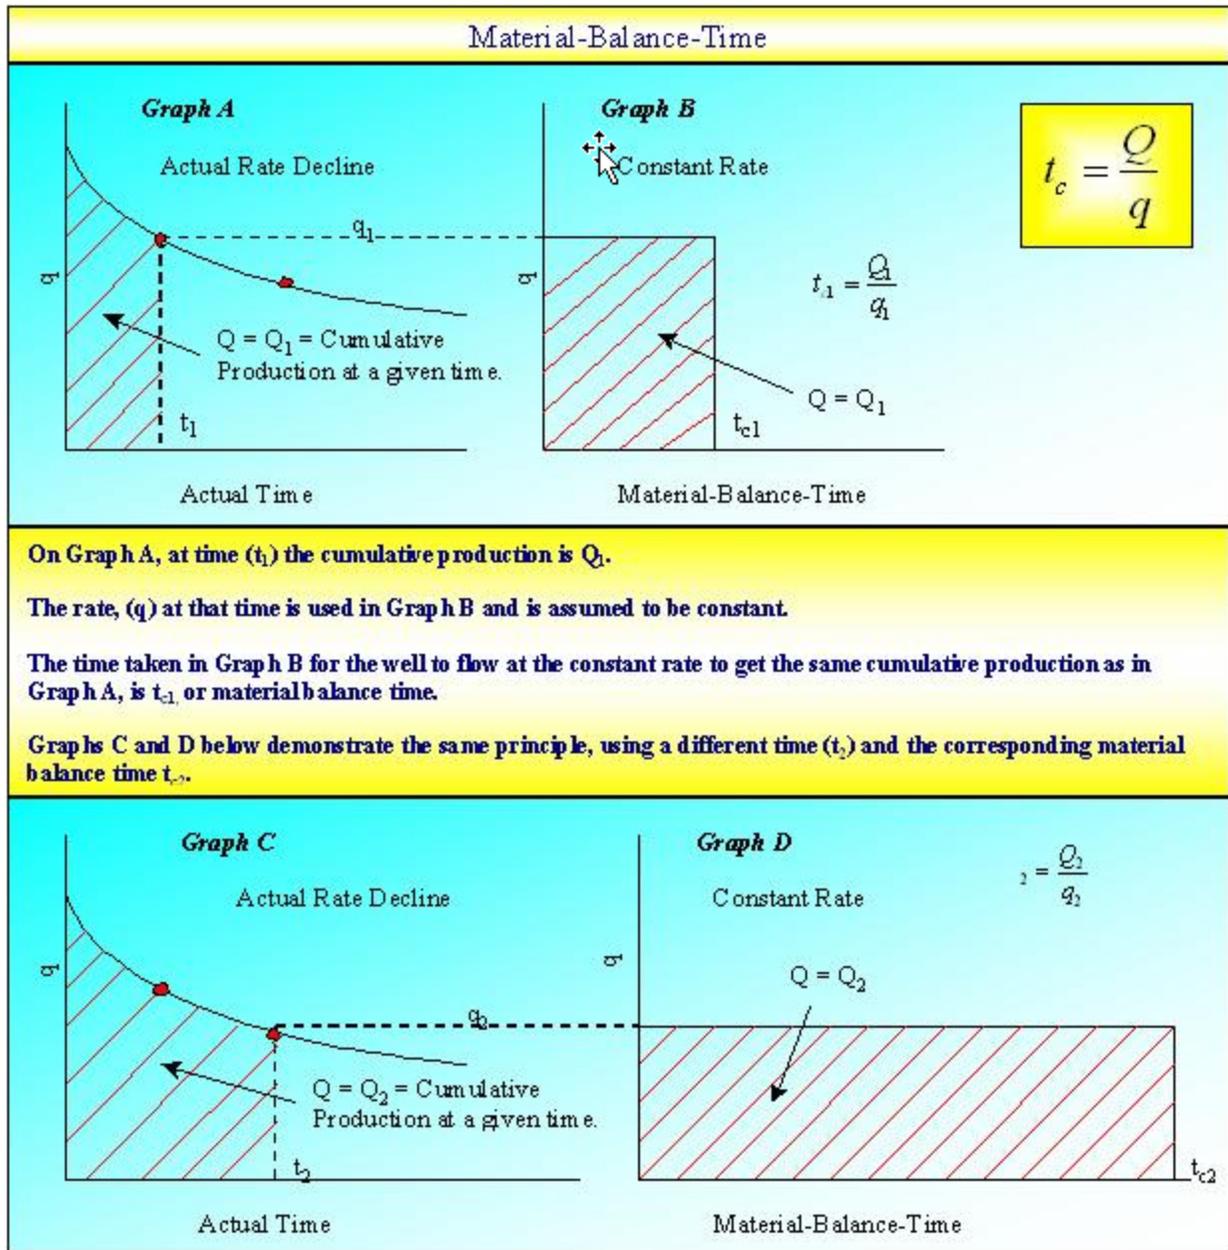

Derivation of material balance time for slightly compressible systems focuses on the flow of liquids, and does not address the pseudo-time issues for gas reservoirs. It is fundamental to two basic ideas, namely the equivalence of constant pressure and constant rate solutions, and the harmonic stem of decline curves. Material balance pseudo-time for gas accounts for changing pressure-volume-temperature (PVT) properties with reservoir pressure.

Constant compressibility fluids

Consider an oil reservoir. A comparison of the constant rate (declining pressure) and constant pressure (declining rate) typecurves obtained when plotting against dimensionless time (based on area) shows the equivalence of the two solutions during the transient period, and their divergence during boundary-dominated flow.

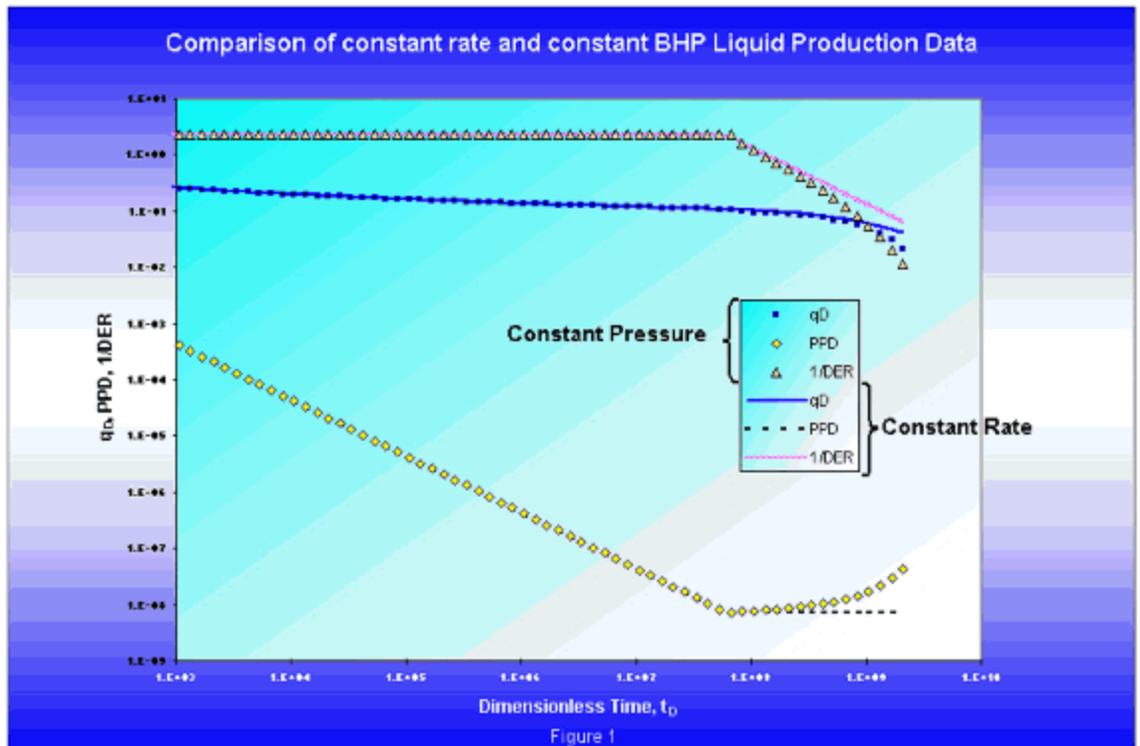


Material balance time also normalizes production histories in which both the rate and the pressure decline, provided that both sets of data decline monotonically.

Another way to state the functionality of material balance time is to say that it is effective in normalizing any rate / pressure history, so that it looks like the constant rate solution, provided that the rate / pressure history does not contain any disturbances large enough to disrupt boundary-dominated flow. A disturbance that is large enough to disrupt boundary-dominated flow, such as a sudden (and significant) decrease in back pressure, would introduce a new transient flow period. Since material balance time is designed to normalize boundary-dominated flow only, it loses its effectiveness if a new transient is introduced.

When the same typecurves (in figure 1) are plotted against dimensionless material balance time, the late time portion of the constant pressure overlays the constant rate solution precisely. This is an

important result because it illustrates that the same diagnostic plots used in pressure transient analysis can be inverted and used for rate transient analysis, provided that the material balance time function is used.

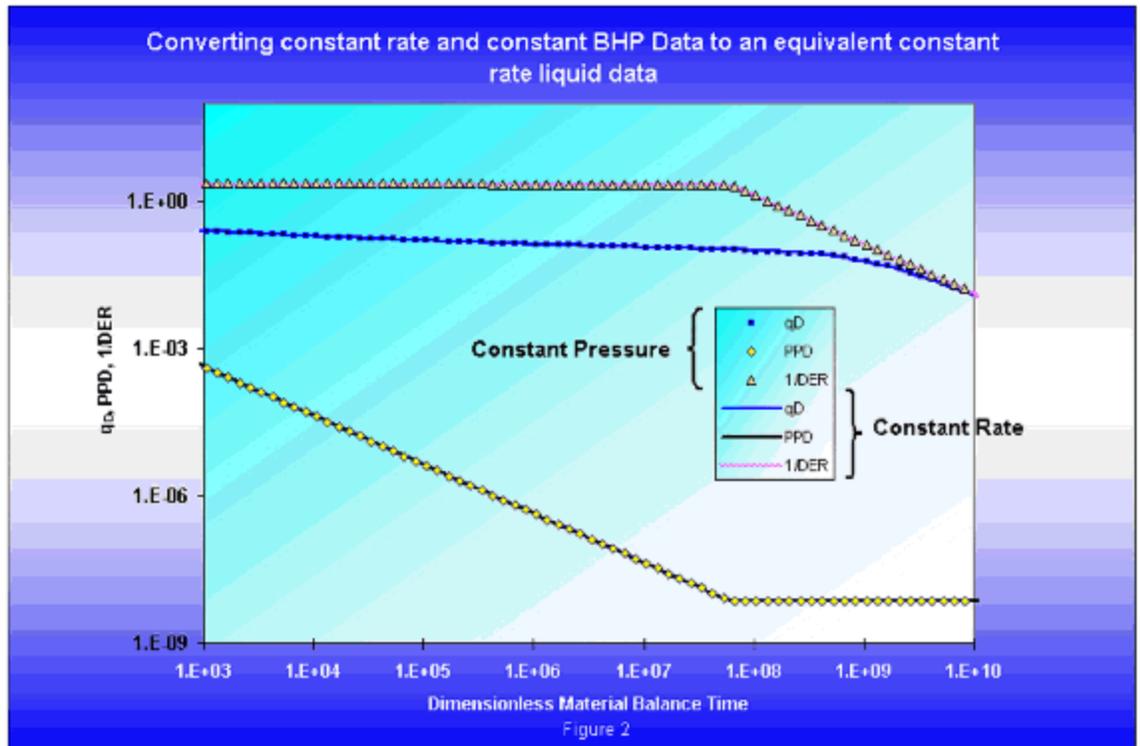


From the above figure, it can be seen that the inverse logarithmic derivative behaves very similarly to the logarithmic derivative on a welltest typecurve. During transient (radial) flow, it has a constant value of 2 (1 divided by $\frac{1}{2}$). Upon reaching boundary-dominated flow, the inverse logarithmic derivative falls off with a constant slope of 1 on the log-log plot. The primary pressure derivative has the opposite behavior to the inverse log derivative, in that it exhibits a slope of negative 1 during transient flow, and becomes constant during boundary-dominated flow. This follows from the fact that the pressure decline for a well produced at a constant rate has a constant slope on log-log paper, during pseudo-steady state.

The $1/p_D$ (q_D) data, for different combinations of r_e / r_w , exhibit a fan of transient stems that converge into one harmonic depletion stem when plotted against dimensionless time based on area. If the data is plotted against a dimensionless time based on effective wellbore radius rather than reservoir area, the transient stems merge together while the depletion stems fan out.

The main difference in appearance between Agarwal-Gardner (A-G) typecurves and Fetkovich typecurves is that the depletion stems for A-G typecurves all collapse to the harmonic case. This follows

from the fact that the A-G typecurve normalizes all rate and pressure solutions, so that they behave like the constant rate solution for slightly compressible fluids. Figure 3 shows the A-G typecurves for a vertical, unfractured well.

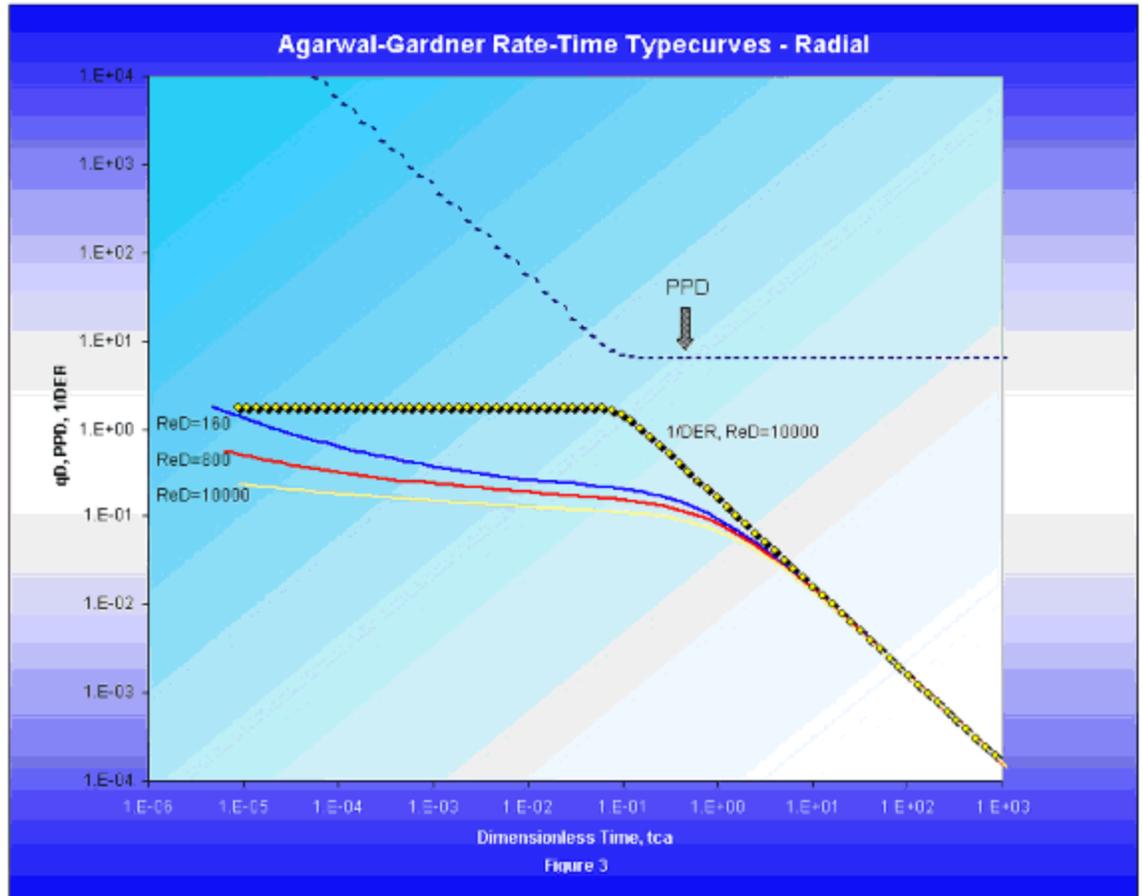

The presence of the inverse log derivative and pressure derivative plots on the A-G typecurve aids in the identification of transient and boundary-dominated flow regimes, in the same way that the logarithmic pressure derivative aids in flow regime identification on welltest typecurves.

Material balance time for oil

When analyzing oil wells:

$$t_c = \frac{N_p}{q_o} \quad (1a)$$

The following development (see Palacio and Blasingame, 1993) applies rigorously to a system with constant compressibility, such as an undersaturated oil reservoir.

Using the definition of compressibility, the oil production from a reservoir is related to the drop in average reservoir pressure, as follows:

$$c = -\frac{1}{V} \frac{\partial V}{\partial p}$$

$$c_t = \frac{5.615 (q B) dt}{A h \phi d\bar{p}} \quad (2)$$

Separating the variables and integrating:

$$\int_0^t q dt = -\frac{A h \phi c_t}{5.615 B_o} \int_{p_i}^{\bar{p}} d\bar{p} \quad (3)$$

Recognizing that the left side is the cumulative oil production, the average reservoir pressure can be calculated from:

$$\bar{p} = p_i - \frac{1}{N c_t} N_p \quad (3a)$$

The important characteristic of equation (3a) is that it is always valid — regardless of time, flow regime, or production scenario (constant or variable flow rate). This is because equation (3a) is a material balance equation.

Note that if p is plotted vs. N_p , then a straight line of slope $1/N c_t$ and intercept p_i is obtained. Of course, p_i is typically not available in practice, so we must use an alternate approach to applying this concept. Before doing so, we recast equation (3a) by including the definition of t_c , as in Equation (1a):

$$\frac{p_i - \bar{p}}{q} = \frac{1}{N c_t} t_c \quad (3b)$$

The second equation to be used is the steady-state solution for single-phase liquid flow in a rectangular reservoir containing a vertical well:

$$\frac{k h}{141.2 q B \mu} (\bar{p} - p_{wf}) = \frac{1}{2} \ln \left(\frac{4}{e^\gamma} \frac{A}{C_A r_w^2} \right) \quad (4)$$

where:

$$\gamma = \text{Euler's constant} = 0.57721$$

Although equation (4) was derived for constant rate (variable p_{wf}), Blasingame and Lee (1986) showed that it is also valid when the sandface pressure is constant (variable rate). Combining the material balance equation (3b) and the steady-state flow equation (4) gives:

$$\frac{p_i - p_{wf}}{q} = \frac{\Delta p}{q} = m t_c + b_{pss} \quad (5)$$

where:

$$m = \frac{1}{N c_i}$$

and:

$$b_{pss} = \frac{141.2 B \mu}{k h} \frac{1}{2} \ln \left(\frac{4}{e^\gamma} \frac{A}{C_A r_w^2} \right)$$

Equation (5), called the pseudo-steady state equation, suggests that a plot of $\Delta p / q$ as a function of material balance time yields a straight line. If we assume q is constant, then equation (5) reduces to:

$$\Delta p = m q t_c + q b_{pss}$$

and a plot of Δp vs t_c yields a straight line.

Blasingame and Lee state that the importance of equation (5) is that it is also valid for moderately changing flow rate and sandface pressure conditions, so long as the transients caused by the changing inner boundary condition do not obscure the boundary-dominated flow behavior. In particular, equation

(5) is directly related to two concepts: the equivalence of the constant pressure and constant rate solutions, and the harmonic stem of decline curves.

Material balance pseudo-time for gas

The application of material balance time to gas is more complex than it is for oil because of the varying PVT properties of gas. Accordingly, the simple concept of material balance time given by:

$$t_c = \frac{G_p}{q_g} \quad (1b)$$

has limited application, and is considered to be only an approximation of the more rigorous formulation, which must be defined in terms of pseudo-time, t_a . Material balance pseudo-time, t_{ca} , is defined as follows:

$$t_{ca} = \frac{(\mu_g c_g)_i}{q_g} \int_0^t \frac{q_g}{\bar{\mu}_g \bar{c}_g} dt \quad (6)$$

Equation (6) can be coupled with the steady-state flow equation for the flow of single-phase gas (which is the gas equivalent of equation (4) of this section), to give:

$$\frac{\bar{p}_p - p_{pwf}}{q} = \frac{1.417 * 10^6 T}{k h} \frac{1}{2} \ln \left(\frac{4}{e^\gamma} \frac{A}{C_A r_{wa}^2} \right) \quad (7)$$

where:

$$\gamma = \text{Euler's constant} = 0.57721$$

Addition of equations (6) and (7) results in the following equation:

$$\frac{\Delta p_p}{q} = m_a t_{ca} + b_{a,pss} \quad (8)$$

where:

$$m_a = \frac{2 p_i}{(\mu c_t Z)_i G}$$

and:

$$b_{a,pss} = \frac{1.417 * 10^6 T}{k h} \frac{1}{2} \ln \frac{4}{e^{\gamma}} \frac{A}{C_A r_{wa}^2}$$

Total compressibility

The definition of material balance pseudo-time described in equation (6) accounts only for the compressibility of gas. This is often a reasonable approximation as gas compressibility is typically much larger than that of liquid or rock. However, in some cases, the compressibilities of other fluids cannot be ignored. Thus, we require a more general definition of pseudo-time that accounts for the total system compressibility. Total compressibility includes gas compressibility, as well as water influx and production, formation and residual fluids compressibilities, and gas desorption.

$$t_{ca} = \frac{(\mu_g c_t)_i}{q_g} \int_0^t \frac{q_g}{\bar{\mu}_g \bar{c}_t} dt \quad (6)$$

The following is a derivation for total compressibility in a general form.

Material balance equation

Refer to [material balance analysis theory - gas material balance](#) for the general gas material balance equation. The general gas material balance equation can be expanded to include water influx and production, formation and residual fluids compressibilities, and desorption of gas (ΔV_{wip} , ΔV_{ep} and ΔV_d , respectively) as follows:

$$G_f B_{gi} = (G_f - G_p) B_g + \Delta V_{wip} + \Delta V_{ep} + \Delta V_d \quad (9)$$

where:

$$\Delta V_{wip} = 5.615 (W_e - W_p B_w)$$

$$\Delta V_{ep} = \frac{B_{gi} G_f}{S_{gi}} \left[\left(1 - e^{-\int_p^{p_i} c_f dp} \right) + S_{wi} \left(e^{\int_p^{p_i} c_w dp} - 1 \right) + S_{oi} \left(e^{\int_p^{p_i} c_o dp} - 1 \right) \right]$$

$$\Delta V_d = \rho_B B_g \frac{B_{gi} G_f}{S_{gi} \phi} \left(\frac{V_L p_i}{p_L + p_i} - \frac{V_L p}{p_L + p} \right)$$

The relative change of the pore volume due to water influx and production, formation and residual fluid expansion, and desorption of gas (c_{wip} , c_{ep} , and c_d , respectively), can then be defined as:

$$c_{wip} = \frac{\Delta V_{wip}}{B_{gi} G_f / S_{gi}} = \frac{5.615 (W_e - W_p B_w)}{B_{gi} G_f / S_{gi}}$$

$$c_{ep} = \frac{\Delta V_{ep}}{B_{gi} G_f / S_{gi}} = \left(1 - e^{-\int_{p_i}^p c_f dp} \right) + S_{wi} \left(e^{\int_{p_i}^p c_w dp} - 1 \right) + S_{oi} \left(e^{\int_{p_i}^p c_o dp} - 1 \right)$$

$$c_d = \frac{\Delta V_d}{B_{gi} G_f / S_{gi}} = \frac{\rho_B B_g}{\phi} \left(\frac{V_L p_i}{p_L + p_i} - \frac{V_L p}{p_L + p} \right)$$

If the adsorption saturation correction has been enabled, c_d is modified as follows:

$$c_d' = \frac{\rho_b \left(B_g - \frac{1.38 \times 10^{-6} M}{\rho_s} \right)}{\phi} \left[\frac{V_L p_i}{p_i + p_L} - \frac{V_L p}{p + p_L} \right]$$

For more information, see material balance analysis theory - advanced gas material balance.

Solving for total compressibility (c_t)

The solution for total compressibility comes from the definition of pseudo-time:

$$t_a = \int_0^t \frac{k_r dt}{\mu c_t}$$

By taking the partial derivative of pseudo-time with respect to time, total compressibility is exposed:

$$\frac{\partial t_a}{\partial t} = \frac{k_r}{\mu c_t} \quad (10)$$

The following chain rule of derivatives is applied:

$$\frac{\partial t_a}{\partial t} = \frac{\partial t_a}{\partial p_p} \frac{\partial p_p}{\partial p} \frac{\partial p}{\partial t}$$

Therefore, equation (10) may be expressed as:

$$\frac{k_r}{\mu c_t} = \frac{\partial t_a}{\partial p_p} \frac{\partial p_p}{\partial p} \frac{\partial p}{\partial t} \quad (11)$$

Note that the inclusion of a permeability term in the above definition of pseudo-time accounts for a pressure-dependent permeability. For more information on theory and equations, see [geomechanical reservoir models](#).

Solving for $\partial t_a / \partial p_p$

Defining pseudo-pressure:

$$p_p = 2 \int_{p_o}^p \left(\frac{k_r p}{\mu Z} \right) dp$$

Relating pseudo-pressure to pseudo-time (Rahman et al., 2006):

$$\frac{\partial p_p}{\partial t_a} = \frac{-2 k_r q p_i S_{gi}}{Z_i G_f}$$

$$\frac{\partial t_a}{\partial p_p} = \frac{Z_i G_f}{-2 k_r q p_i S_{gi}} \quad (12)$$

Solving for $\partial p_p / \partial p$

From the above definition of pseudo-pressure:

$$\frac{\partial p_p}{\partial p} = \frac{2 k_r p}{\mu Z} \quad (13)$$

Solving for $\partial p / \partial t$

Dividing both sides of equation (9) by $(G_f B_{gi} / S_{gi})$ and recalling that $B_g = (p_{sc} Z T) / (T_{sc} P)$:

$$\frac{p}{Z} (S_{gi} - c_{wip} - c_{ep} - c_d) = \frac{p_i}{Z_i} \left(\frac{G_f - G_p}{G_f} \right) S_{gi}$$

Letting c equal the summation of c_{wip} , c_{ep} , and c_d ; and rearranging:

$$\frac{p}{Z} = \frac{p_i S_{gi}}{Z_i G_f} \left(\frac{G_f - G_p}{S_{gi} - c} \right) \quad (14)$$

$$\frac{\partial p}{\partial t} \frac{p}{Z} = \frac{\partial}{\partial t} \frac{p_i S_{gi}}{Z_i G_f} \left(\frac{G_f - G_p}{S_{gi} - c} \right)$$

$$\frac{\partial p}{\partial p} \frac{p}{Z} \frac{\partial p}{\partial t} = \frac{p_i S_{gi}}{Z_i G_f} \frac{\partial}{\partial t} \left((G_f - G_p)(S_{gi} - c)^{-1} \right)$$

Where: $\frac{\partial}{\partial t} G_p = q$, $\frac{\partial}{\partial t} c = \frac{\partial c}{\partial p} \frac{\partial p}{\partial t}$, $c_g = \frac{1}{p} - \frac{1}{Z} \frac{\partial Z}{\partial p}$

$$\frac{p}{Z} \left(\frac{1}{p} - \frac{1}{Z} \frac{\partial Z}{\partial p} \right) \frac{\partial p}{\partial t} = \frac{p_i S_{gi}}{Z_i G_f} \left[\frac{-q}{(S_{gi} - c)} - \frac{(G_f - G_p) \left(-\frac{\partial c}{\partial p} \frac{\partial p}{\partial t} \right)}{(S_{gi} - c)^2} \right]$$

$$\frac{p}{Z} c_g \frac{\partial p}{\partial t} = \frac{p_i S_{gi}}{Z_i G_f} \left[\frac{-q}{(S_{gi} - c)} - \frac{(G_f - G_p) \left(-\frac{\partial c}{\partial p} \frac{\partial p}{\partial t} \right)}{(S_{gi} - c)^2} \right] \quad (15)$$

Rearranging equation (14) such that:

$$\frac{p Z_i G_f}{Z p_i S_{gi}} = \left(\frac{G_f - G_p}{S_{gi} - c} \right)$$

Equation (15) can now be written as:

$$\frac{p Z_i G_f}{Z p_i S_{gi}} \left(c_g - \frac{\frac{\partial c}{\partial p}}{(S_{gi} - c)} \right) \frac{\partial p}{\partial t} = \frac{-q}{(S_{gi} - c)}$$

And then solved for $\partial p / \partial t$:

$$\frac{\partial p}{\partial t} = \frac{-q Z p_i S_{gi}}{p Z_i G_f} \frac{1}{c_g (S_{gi} - c) - \frac{\partial c}{\partial p}} \quad (16)$$

Substitution

Equations (12), (13), and (16) are substituted into the chain rule of derivatives from equation (11) and simplified:

$$\frac{k_r}{\mu c_t} = \frac{1}{\mu \left(c_g (S_{gi} - c) - \frac{\partial c}{\partial p} \right)}$$

$$c_t = k_r \left(c_g (S_{gi} - c) - \frac{\partial c}{\partial p} \right)$$

As c equals the summation of c_{wip} , c_{ep} , and c_d :

$$c_t = k_r \left(c_g (S_{gi} - c_{wip} - c_{ep} - c_d) - \frac{\partial c_{wip}}{\partial p} - \frac{\partial c_{ep}}{\partial p} - \frac{\partial c_d}{\partial p} \right)$$

Probabilistic

The probabilistic analysis is designed to address uncertainty in well performance in the following areas:

- Expected performance and recovery in new wells (that is, proven, and undeveloped locations)
- True analytical probabilistic forecasting for wells with established production history

The probabilistic module uses Monte Carlo simulation to generate stochastic outputs for reservoir parameters such as OFIP, EUR, linear flow parameters (when applicable), and the production forecast. The model can be constrained to a known well history using automatic parameter estimation, which optimizes key input parameters to ensure there is a minimum level of conformance with production history. Dependencies between input parameters can be specified using a correlation matrix. Results are displayed with histograms, shaded plots, and cross-plots of statistical outputs.

Pseudo-pressure (ψ)

Pseudo-pressure is a mathematical pressure function that accounts for the variable compressibility and viscosity of gas viscosity (μ_g) with respect to pressure.

Note: If there is geomechanical reservoir behavior, see the modification for geomechanical models.

The equation for the flow of gas in the reservoir is very similar to that for liquid flow. In well testing and rate transient analysis, analytical equations are solved after making certain assumptions. In particular, five assumptions are very important.

1. Total system compressibility (c_t) is constant
2. Fluid density ($\rho \propto p / Z$) is constant
3. Fluid viscosity (μ) is constant
4. Total porosity (ϕ) is constant
5. Fluid saturations are constant

For liquids, these assumptions are reasonable because liquid compressibility, density, and viscosity do not vary significantly with pressure, and the equations can be solved analytically. These analytical solutions are referred to as the liquid-flow solutions, and form the basis of all well test and rate transient analysis. The result is an analytical relationship between pressure and time. Liquid-flow solutions for different wellbore and reservoir configurations are available in the literature. For example, for the case of an infinite-acting reservoir and a vertical well producing at a constant rate, pressure can be calculated as:

$$\text{Pressure} \approx \text{Constant} * \log(\text{time})$$

For gas, most of the assumptions listed above are no longer valid because gas density ($\rho \propto p / Z$) can vary significantly with pressure. Gas viscosity (μ_g) also varies with pressure, but not to the same degree. To deal with these changing gas properties, the concept of pseudo-pressure (ψ) was developed by Al-Hussainy et al. (1966) and is defined as follows:

$$\psi(p) = 2 \int_0^p \frac{p}{\mu Z} dp$$

This transformation of pressure to pseudo-pressure is an exact transformation, which accounts for variation of gas density and viscosity. If we assume that changes of total compressibility (c_t), porosity,

and fluid saturations are insignificant, the gas flow equation can be written in a manner similar to the liquid equation. Therefore, the liquid-flow solution can be used for gas well test analysis and rate transient analysis provided pressure is replaced by pseudo-pressure. For the above mentioned example, pseudo-pressure can be calculated as:

$$\text{Pseudo-Pressure} \approx \text{Constant} * \log(\text{time})$$

Modification for geomechanical models

If there is geomechanical reservoir behavior, where rock permeability is changing with pressure, you can account for this behavior in the pseudo-pressure.

Changing permeability can be expressed as $k_{effective}(p) = k \cdot k_m(p)$ where k is the permeability at the initial pressure, and $k_m(p)$ is a (dimensionless) permeability multiplier.

To incorporate a variation of permeability with pressure into the pseudo-pressure term, the definition of pseudo-pressure is modified as follows:

$$\psi(p) = 2 \int_0^p \frac{p \cdot k_m(p)}{\mu Z} dp$$

Note: In some sources, pseudo-pressure is also referred to as the real gas potential ($m(p)$).

Pseudo-time

Pseudo-time is a mathematical time function that accounts for the variable total compressibility (c_t) and viscosity (μ_g) of gas, as well as the variable porosity (ϕ) with respect to time and pressure.

The equation for flow of gas in the reservoir is very similar to that for liquid flow. In well testing and rate transient analysis, analytical equations are solved after making certain assumptions. In particular, five assumptions are very important.

1. Total system compressibility (c_t) is constant
2. Fluid density ($\rho \propto p/Z$) is constant
3. Fluid viscosity (μ) is constant
4. Total porosity (ϕ) is constant
5. Fluid saturations are constant

For liquids, these assumptions are reasonable, since liquid compressibility and viscosity do not vary significantly with pressure, and the equations can be solved analytically. These analytical solutions are referred to as the liquid flow solutions, and form the basis of all well test and rate transient analysis. The result is an analytical relationship between pressure and time. For example, for the case of an infinite-acting reservoir and a vertical well producing at a constant rate, pressure can be calculated as:

$$\text{Pressure} \approx \text{Constant} * \log(\text{time})$$

For gas, most of the assumptions listed above are no longer valid, since gas density ($\rho \propto p/Z$), viscosity (μ_g) and total compressibility (c_t) can vary significantly with pressure. Pseudo-pressure (ψ) and pseudo-time (t_a) are used to deal with these changing properties and linearize the flow equations for gas. With the introduction of pseudo-pressure and pseudo-time, the gas flow equation can be written in a manner similar to the liquid equation. Therefore, the liquid flow solution can be used for gas well test analysis and forecasting provided pressure is replaced by pseudo-pressure, and time is replaced by pseudo-time. For the above mentioned example, pseudo-pressure can be calculated as:

$$\text{Pseudo-pressure} \approx \text{Constant} * \log(\text{pseudo-time})$$

Development of pseudo-time

It should be noted that the concept of pseudo-time is not amenable to a completely rigorous solution, as is the case for pseudo-pressure, because the gas properties change with pressure, not time.

Pseudo-time was developed by Agarwal (1980) and he defined pseudo-time in terms of the viscosity (μ_g) and compressibility (c_t) at the wellbore (see [buildup pseudo-time](#)). This definition accounted for the large change in total compressibility (c_t) that occurs at low pressures (early time in a buildup). It had little effect on late time data, and was generally used for buildups only.

In the 90s, when the gas flow equations were being used for analyzing or forecasting data affected by reservoir depletion, it was realized that the Agarwal definition of pseudo-time for buildups, was inappropriate for boundary dominated flow (depleting systems). Palacio and Blasingame (1993) introduced a new definition of pseudo-time to account for the depletion effects. Instead of defining the pseudo-time transformation in terms of wellbore conditions like Agarwal did, they defined it in terms of the average reservoir pressure (see [drawdown pseudo-time](#)). This pseudo-time is appropriate for boundary dominated flow.

Anderson and Mattar (2005) found that, in a reservoir with significant transient flow, it was more appropriate to define pseudo-time in terms of the average pressure within the region of investigation rather than the average reservoir pressure (see [corrected pseudo-time](#)).

Different pseudo-time formulations are needed for buildup, for drawdown in a boundary dominated flow regime, and for a transient flow regime. The equations look similar, but they are radically different from each other.

Buildup pseudo-time

Pseudo-time for use in buildup analysis is defined in terms of pressure at the wellbore:

$$t_a(t) = (\mu_g c_t)_i \int_0^t \frac{dt}{\mu_g(p_{wb})c_t(p_{wb})}$$

If the wellbore has significant storage, a difference in the early time behavior will be noted, since pressure and thus compressibility and viscosity are changing most near the wellbore. Late time behavior is not typically affected by buildup pseudo-time since the pressure, viscosity, and compressibility become constant at the wellbore and in the reservoir.

Drawdown pseudo-time

Pseudo-time for use in drawdown analysis is defined in terms of average reservoir pressure:

$$t_a(t) = (\mu_g c_t)_i \int_0^t \frac{dt}{\mu_g(\bar{p})c_t(\bar{p})}$$

Note that the gas in place (GIP) must be known in order to perform the material balance calculations necessary to determine the average reservoir pressure.

Corrected pseudo-time

In the conventional definition of pseudo-time, the compressibility and viscosity terms are evaluated at average reservoir pressure conditions. Clearly, the average reservoir pressure is only a function of Original-Gas-In-Place (OGIP) and cumulative production. During the transient flow period, before any boundary effects are observed, the flow behavior of two different-sized reservoirs should be similar, and independent of the OGIP – they are both infinite-acting reservoirs. However using the conventional definition of pseudo-time, the result would be that the producing rates would be different because their average reservoir pressures are different due to the different OGIPs.

If a well is producing under boundary-dominated conditions, the average reservoir pressure is a very reasonable datum at which to establish fluid properties such as c_g . However, if the well production is still in transient flow and no reservoir boundaries have been observed, the average reservoir pressure based on total reservoir volume is not an appropriate datum to use. Consequently, pseudo-time can cause anomalous model responses under certain conditions.

Anderson and Mattar (2005) proposed that the average reservoir pressure used in the pseudo-time calculation during the transient flow period should be calculated based on the gas-in-place of the investigated volume at that time.

$$t_a(t) = (\mu_g c_t)_i \int_0^t \frac{dt}{\mu_g(\bar{p}_{ir}) c_t(\bar{p}_{ir})}$$

This way, during transient flow, pseudo-time is independent of OGIP. As soon as the reservoir enters boundary-dominated flow, the conventional definition of pseudo-time is automatically resumed, because at that time the region of investigation is the whole reservoir.

The volume of investigation is calculated based on the radius of investigation formula:

$$r_{inv} = \sqrt{\frac{kt}{948 \cdot \phi \mu c_t}}$$

This volume is adjusted for the effect of the reservoir boundaries and the coalescence of regions of influence caused by interference between wells.

Modification for geomechanical models

If there is geomechanical reservoir behavior, where rock permeability and formation compressibility are changing with pressure, you can account for this behavior in the pseudo-time.

Changing permeability can be expressed as $k_{effective}(p) = k \cdot k_m(p)$ where k is the permeability at the initial pressure, and $k_m(p)$ is a (dimensionless) permeability multiplier.

To incorporate a variation of permeability with pressure into the pseudo-time term, the definition of pseudo-time is modified as follows:


$$t_a(t) = (\mu_g c_t)_i \int_0^t \frac{k_m(\bar{p}) dt}{\mu_g(\bar{p}) c_t(\bar{p})}$$

Note: Variation of the formation compressibility with pressure is incorporated in the $c_t(p)$ term.

Relative permeability

Relative permeability is a concept used to convey the reduction in flow capability due to the presence of multiple mobile fluids. It is dependent upon pore geometry, wettability, fluid distribution, and the fluid saturation history. Relative permeability measurements are conducted on core samples in a laboratory, and are both time-consuming and expensive to produce. Consequently, relative permeability measurements are most often requested for projects where secondary and/or tertiary recovery is being considered.

In a single-phase system such as a dry-gas or an under-saturated oil reservoir, the effective permeability of flow of the mobile fluid through the reservoir varies little during production because the fluid saturations do not change. However, when more than one phase is mobile, the effective permeability to each mobile phase will change as the saturations of the fluids change in the reservoir.

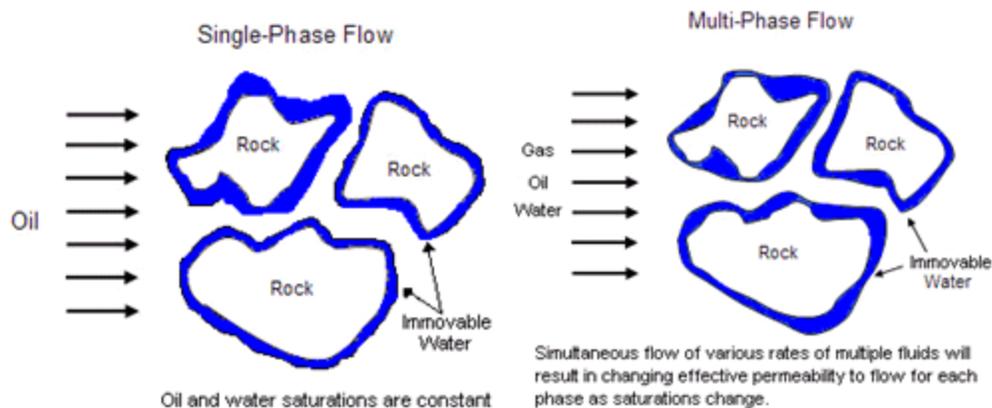

In a two-phase system, the fluids might consist of oil and water, or oil and gas. In a three-phase system, all three fluid phases occur. Each fluid, as it flows through the porous media, interferes with the fluids because capillary forces exist that reduce the flow rate of each individual phase in a non-linear fashion. Consequently, the sum of the relative permeabilities of each phase is always less than one.

$$k_{ro} + k_{rw} + k_{rg} < 1$$

Relative permeability terms and equations

Typical phases in a reservoir are oil, water, and gas; and the effective permeability of each is designated as k_o , k_w , and k_g , respectively. The relative permeability for each phase is calculated by dividing the effective permeability to flow by the absolute permeability. The absolute permeability is the "Klinkenberg" or theoretical "air" permeability, which is measured by cleaning and completely drying a

core sample, and then measuring the effective permeability of flow to air. The units of relative permeability are dimensionless.

$$k_{ro} = \frac{k_o}{k}, k_{rw} = \frac{k_w}{k}, k_{rg} = \frac{k_g}{k}$$


Wettability

Wettability in a reservoir is a measurement of the ability of a fluid to coat the rock surface. Wettability and heterogeneity have a significant impact on the shape of the relative permeability curves. The wetting fluid relative permeability curve is concave upwards, whereas the non-wetting fluid has an “s” shape. In the case where there is no interfacial tension between the fluid phases, the relative permeability curves simplify to straight lines between the endpoints.

Water-wet relative permeability curves (oil and water)


A schematic of oil-water relative permeability curves in a water-wet reservoir is shown below. In water-wet rock, a water layer wets the rock surface and acts like a lubricant for the oil located in the central parts of the pores.

- S_{wc} is the connate or irreducible water saturation. This is the water saturation below which water is not mobile because of capillary forces. The relative permeability of water at water saturations below S_{wc} is zero.
- S_{orw} is the residual oil saturation or critical oil saturation. This is the oil saturation below which the oil is immobile, that is, its relative permeability is zero.

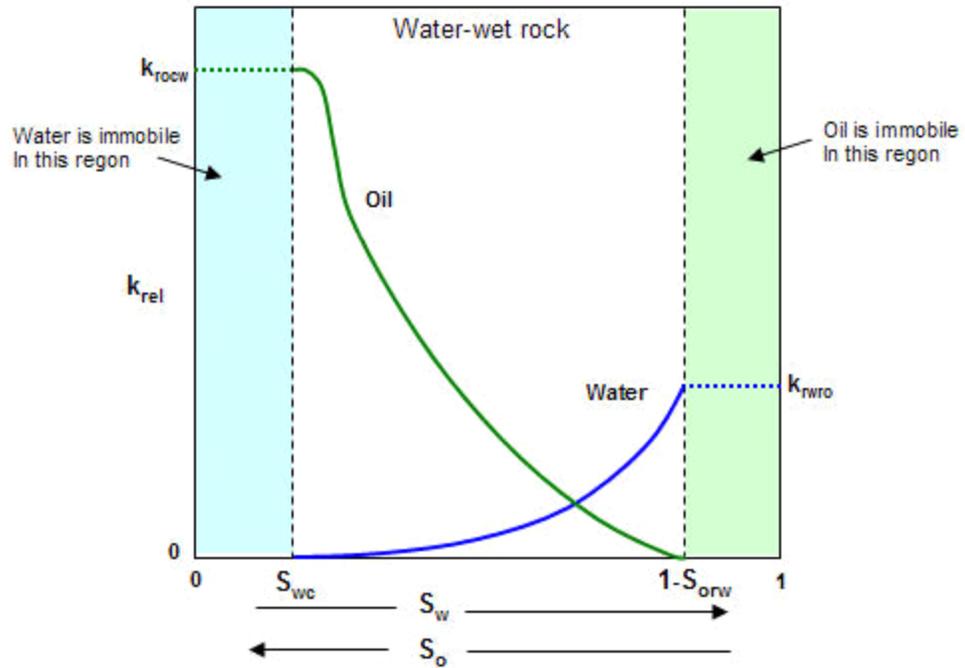

Oil-wet relative permeability curves (oil and water)


The figure below displays a schematic of water-oil relative permeability curves in an oil-wet reservoir rock. In oil-wet rock, oil wets the pore surfaces and water occupies the central regions of the pores. Typically, the irreducible water saturation in oil-wet reservoir rock is lower than that in water-wet rock.

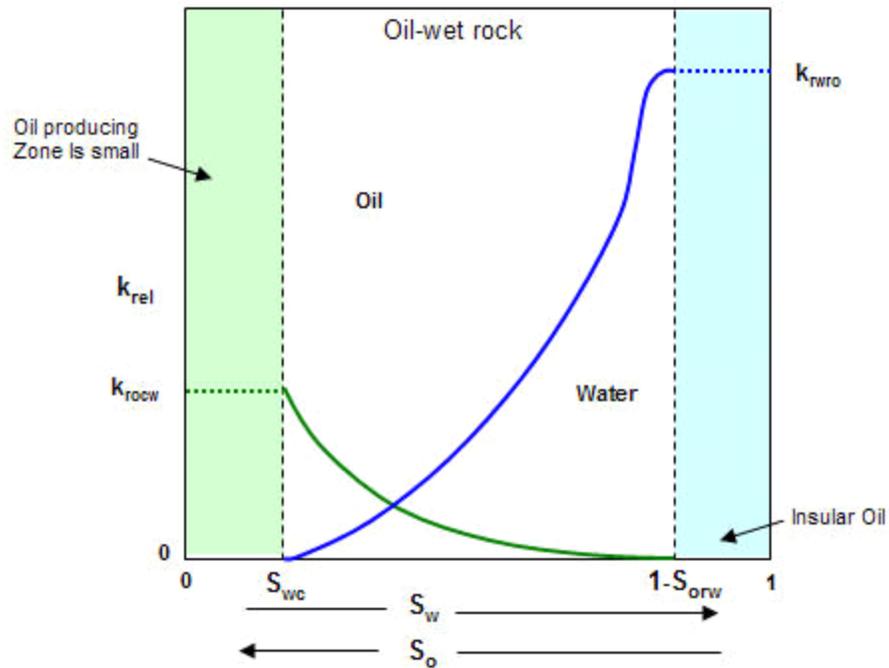

Gas-oil relative permeability curves

The schematic below displays a set of gas-oil relative permeability curves. In this case, the wetting phase (the oil phase) impedes the flow of gas. The water saturation in the reservoir rock is taken to not exceed its irreducible value. This means that the water is not mobile, but exists in the pore space and simply reduces the available pore space that the gas and oil can occupy.

- S_{gc} is the critical gas saturation. This is the minimum saturation for gas to become mobile.
- S_{org} is the residual oil saturation to gas. This is the immobile oil when gas is the displacing fluid.
- k_{rogc} is the relative permeability of oil at the critical gas saturation.
- k_{rgc} is the relative permeability of the gas at the residual oil saturation.

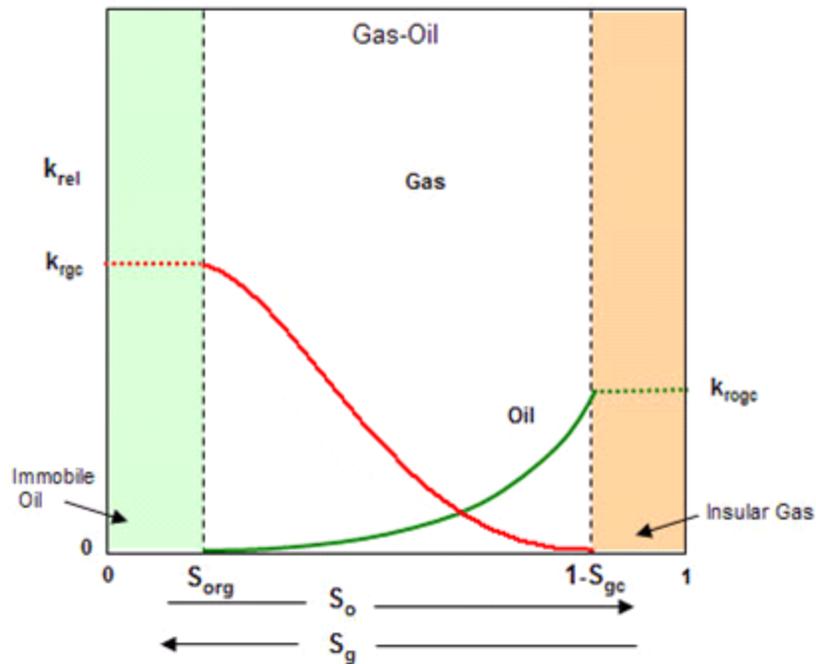

Normalized relative permeability

When using water-oil relative permeability, there is a second term that is often encountered. This is “normalized” relative permeability. Normalized relative permeability defines the oil relative permeability at the critical water saturation (where water becomes mobile) as a value of one (1.0). Normalized relative permeability defines the absolute permeability as the effective permeability at the critical water saturation.

Reserve evaluation

Reserve evaluation is the process of forecasting the production of existing and planned wells and using these forecasts in combination with economic data to estimate monetary value. This value can be used for determining whether to develop a reservoir, buy or sell a field, or to try and attract investment in a company. In order to provide consistent comparisons between projects, properties, and total companies, evaluation of current and future production values use a classification system. This classification system is used to categorize the uncertainty of production forecasts. Generally, the desired result of the evaluation is to obtain the net present value (NPV) of the project, property, or company.

The process of conducting a reserve evaluation entails the application of a consistent set of rules across several disciplines. Key elements of a reserve evaluation include:

- Estimation of remaining reserves
- Generation of production forecasts
- Categorization of risk and designation of current production status
- Summary of interests and burdens
- Estimation of future capital costs
- Fixed and variable operating costs
- Generation of cash flow analysis to evaluate for net present value and other key economic parameters, such as payout and rate of return on investment.

Purpose

Two useful products of a reserve evaluation are the net present value and the production forecasts used to generate net present value. These two estimates can be used in different ways depending on the purpose and required information. The table below shows examples of typical parties who have an interest in reserves evaluations.

Party	Reserves and Production Forecasts	Reserves and Net Present Value
Accountants	--	Creation of financial reports, ceiling tests and depletion calculations
Banks / lending institutions	--	Act as a basis for securing loans
Financial insti-	--	Evaluate the performance of a

Party	Reserves and Production Forecasts	Reserves and Net Present Value
tutions and investors		company
Gas Marketers	Contracts for how much can be produced and pipeline transportation services	--
Governments	Resource development policy decision making	--
Investors and others	Rely on producer information to determine supply and demand	--
Lawyers	--	Used to settle disputes over reserves and values, estates
Pipeline companies	Planning for pipeline capacity	--
Producers	Development decisions, allocation of future capital Equipment sizing calculations	Determining the market value of a company Making investment decisions
Securities Commissions (SEC, ASC, etc.)	--	Require reserves and cashflow statements of publicly traded companies

Reserve Classifications

The oil / gas in a reservoir can be divided into two categories: reserves and resources. Reserves refer to oil / gas in a reservoir that has been confirmed to exist and is economically recoverable with current technology. Resources refer to oil/gas in a reservoir that is believed to exist but part or all of this volume has not been demonstrated to be productive or commercially recoverable. The volume classified as reserves can be contained within the resource volume.

Further classifications divide these volumes based on their certainty. The classifications from most to least certain are:

- **Proved (1P)** — “Those quantities of petroleum, which, by analysis of geoscience and engineering data, can be estimated with reasonable certainty to be commercially recoverable, from a given date forward, from known reservoirs and under defined economic conditions, operating methods, and government regulations. If deterministic methods are used, the term reasonable certainty is intended to express a high degree of confidence that the quantities will be recovered. If

probabilistic methods are used, there should be at least a 90% probability that the quantities actually recovered will equal or exceed the estimate.”

- **Probable (2P)** — “Those additional Reserves which analysis of geoscience and engineering data indicate are less likely to be recovered than Proved Reserves but more certain to be recovered than Possible Reserves. It is equally likely that actual remaining quantities recovered will be greater than or less than the sum of the estimated *Proved plus Probable Reserves* (2P or PP). In this context, when probabilistic methods are used, there should be at least a 50% probability that the actual quantities recovered will equal or exceed the 2P estimate.”
- **Possible (3P)** — “Those additional reserves which analysis of geoscience and engineering data suggest are less likely to be recoverable than Probable Reserves. The total quantities ultimately recovered from the project have a low probability to exceed the sum of *Proved plus Probable plus Possible* (3P or PPP) Reserves, which is equivalent to the high estimate scenario. In this context, when probabilistic methods are used, there should be at least a 10% probability that the actual quantities recovered will equal or exceed the 3P estimate.”

The certainty can also be referred to in a probabilistic form as well. P90, P50, P10 are often used in place of 1P, 2P, 3P, even in situations where deterministic methods are used to estimate reserves volumes. P50 represents the quantity for which there is a 50% probability the quantities actually recovered will match or exceed the estimated recovery value. The same definition applies to P90 (90%) and P10 (10%).

The status of reserves is another classification type used. It describes the current ability of a well to produce. There are three status types used:

- **Developed / Producing** — The wells and facilities required for production are in place. Expected to be recovered from completion intervals that are open and producing at the time of the estimate.
- **Developed / Non-producing** — The wells and facilities required for production are in place. The well or zone is not currently producing, but requires little or no capital expenditure to be brought on production.
- **Undeveloped** — Significant capital expenditure is required for the well to come on production.

The following acronyms are typically used to define reserve classifications:

Acronym	Definition
PDP	Proved Developed Producing
PPDP	Proved plus Probable Developed Producing
PPPDP	Proved plus Probable plus Possible Developed Producing

Acronym	Definition
PNP	Proved Developed, Non-Producing
PPNP	Proved plus Probable Developed, Non-Producing
PPPNP	Proved plus Probable plus Possible Developed, Non-Producing
PUD	Proved Undeveloped
PPUD	Proved plus Probable Undeveloped
PPPUD	Proved plus Probable plus Possible Undeveloped
TP	Total Proved
TPP	Total Proved plus Probable
TPPP	Total Proved plus Probable plus Possible

Reservoir flow


Flow in a reservoir is often characterized as being one of two types: transient or boundary-dominated.

Transient flow takes place during the early life of a well, when the reservoir boundaries have not been felt, and the reservoir is said to be infinite-acting. During this period, the size of the reservoir has no effect on the well performance, and reservoir size cannot be determined except to deduce minimum contacted volume. Since the boundary of the reservoir has not been contacted during the transient flow period, static pressure at the boundary remains constant.


Pressure transient analysis / well testing theory relies heavily on the assumption that the well flows at a constant rate. Several terms are often used when describing flow from a well at constant rate:

- **Transient Flow** — The pressure transient migrates outward from the well without encountering any boundaries.
- **Steady State Flow** — The pressure transient has reached all of the boundaries but the static pressure at the boundary does not decline. This is often called “constant pressure boundary”.
- **Pseudo-Steady State Flow** — The pressure transient has reached all of the boundaries and the static pressure is declining at the boundary and declining uniformly throughout the reservoir.
- **Boundary-Dominated Flow** — The pressure transient has reached all of the boundaries and the static pressure is declining at the boundary, but not uniformly because the flow rate is not constant. This is also often called “tank-type flow”.

The following schematic chart shows the pressure distribution in the reservoir for a constant flow rate. The red lines represent the transient portion and the blue lines the pseudo-steady-state portion. The yellow line indicates the transition from transient to a pseudo-steady state. Note that the vertical distance between each line is uniform from near wellbore to the boundary.

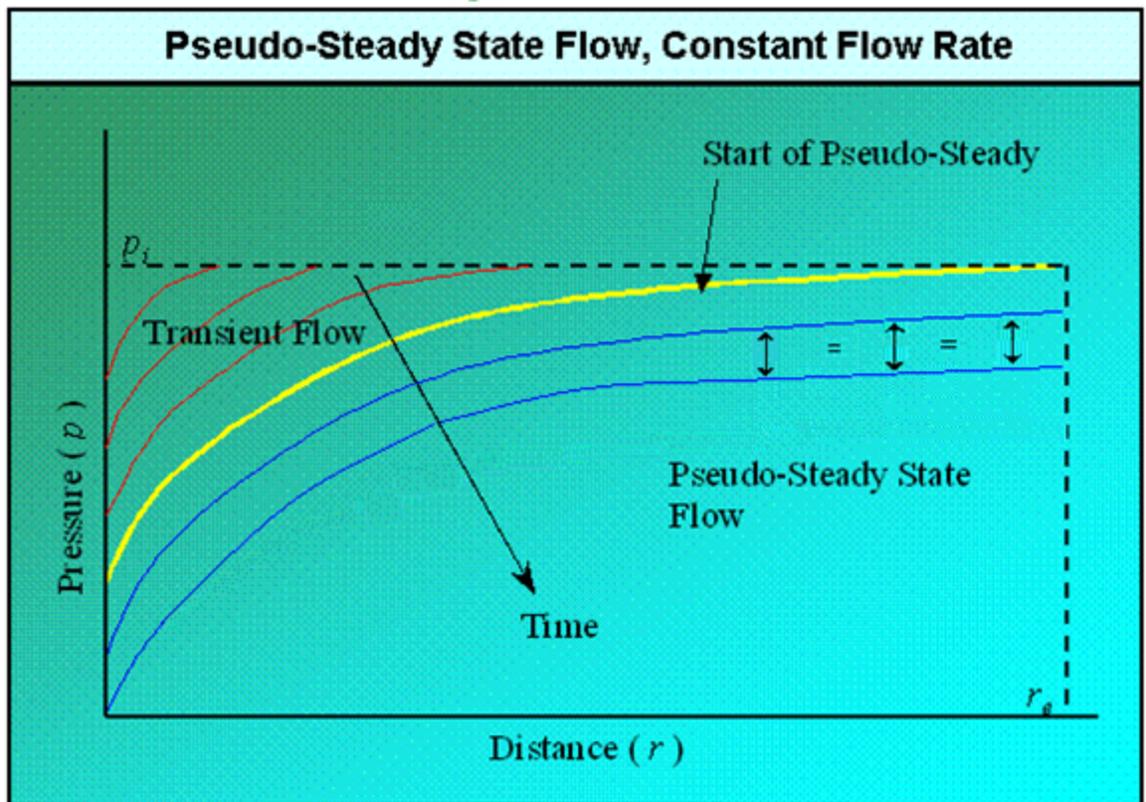

The following schematic chart shows the pressure distribution in the reservoir for a constant-flowing pressure solution. Note that the flowing pressure of the wellbore is constant and the pressure distribution through the reservoir is not uniform.

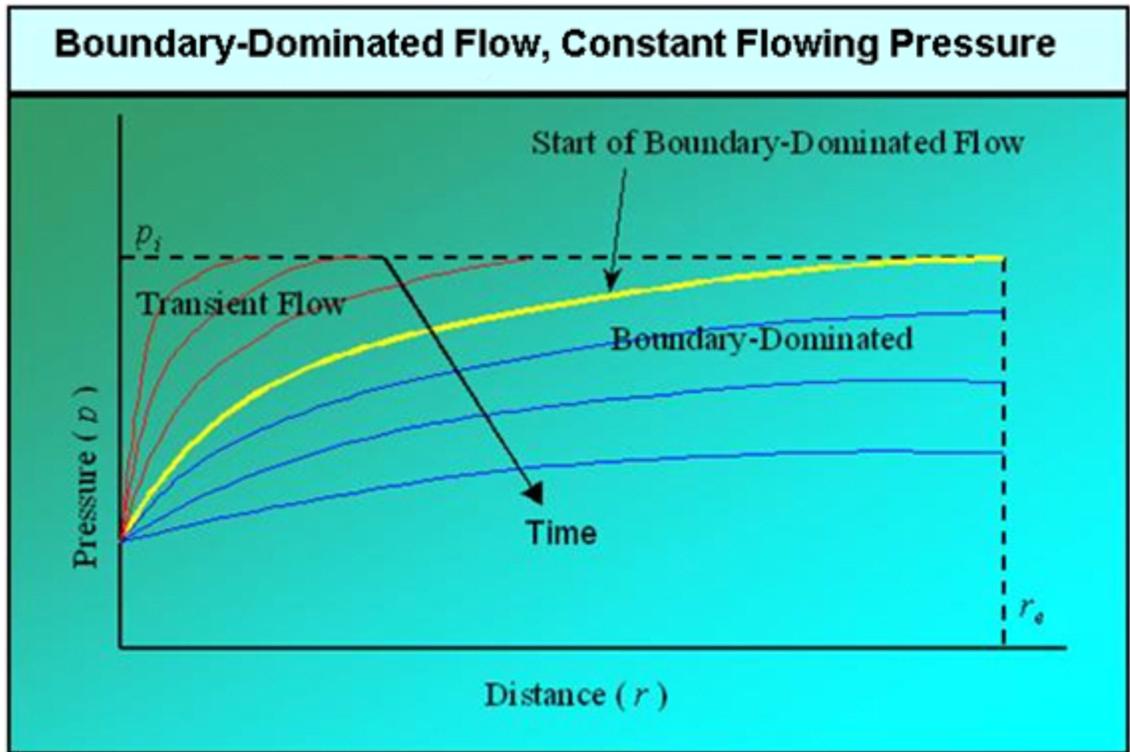

The constant rate and constant-pressure solutions are boundaries that the actual wells approach, but never really achieve. Early production and formal production tests often very closely approach the constant-rate solution, whereas late time production generally very closely approaches the constant-pressure solution. Constant-rate solutions are important for conducting pressure transient analysis (PTA) for determination of key reservoir parameters such as permeability and damage, whereas the constant-pressure solutions are important for determination of original in-place volumes and recoverable reserves.



Reservoir fluid properties

Gas

A gas can be defined as a homogenous fluid of low density and low viscosity, which has neither independent shape nor volume. It expands to completely fill the vessel in which it is contained. The properties of gases differ from liquids mainly because the molecules in gases are much further apart than liquids. The ideal gas law states:

$$pV = nRT$$

This equation has limited practical value because no known gas behaves as an ideal gas. However, this equation does describe the behavior of most real gases at low pressures, and it serves as a starting point to develop equations of states for real gases at elevated pressures. Furthermore, the behaviors of most real gases do not deviate drastically from the behavior predicted by this equation. By inserting a correction factor (Z) into the ideal gas equation, real gas behavior can be accurately predicted.

$$pV = ZnRT$$

The correction factor is called the gas compressibility factor; and represents the deviation from ideal gas behavior.

Gravity

Gas gravity is the molar mass (molecular weight) of the natural gas divided by the molar mass of air (28.94 kg / kmol). It ranges from 0.55 for dry sweet gas to approximately 1.5 for wet sour gas. Petroleum gases typically have a gravity of about 0.65.

The gas gravity affects the calculations of gas viscosity, compressibility, compressibility factor, and solution gas-oil-ratio.

Compressibility factor

The gas compressibility factor of a natural gas is a measure of its deviation from ideal gas behavior. The gas compressibility factor is the ratio of the volume actually occupied by a gas at a given pressure and temperature to the volume the gas would occupy at the same pressure and temperature, if it behaved like an ideal gas.

$$Z = \frac{V_{actual}}{V_{ideal}}$$

The gas compressibility factor is usually between 0.8 and 1.2, but it can be as low as 0.3 and as high as 2.0. It is used in the calculation of gas pseudo-pressures, and in converting gas volumes and rates from standard conditions to reservoir conditions (and vice versa). It is sometimes called the super-compressibility factor, and is often confused with the term "compressibility", which is the change in volume per unit change in pressure. The gas compressibility factor directly affects the gas compressibility.

Compressibility

Gas compressibility is the relative change in volume per unit change in pressure. The gas compressibility should not be confused with the gas compressibility factor. The gas compressibility is a very strong function of pressure and increases as the pressure decreases.

Gas compressibility, when plotted versus pressure, shows a discontinuity at the dew point pressure. When the gas is undersaturated (that is, the pressure is greater than the dew point pressure), mathematically it can be expressed as:

$$c_g = -\frac{1}{B_{gd}} \frac{dB_{gd}}{dp}$$

or

$$c_g = \frac{1}{p} - \frac{1}{Z} \frac{dZ}{dp}$$

Where p is the specified pressure, B_{gd} is the dry gas formation volume factor, and Z is the gas compressibility factor at that pressure. Thus, the magnitude of gas compressibility is of the order of $1/p$.

When the gas is saturated (that is, pressure is less than the dew point pressure), it is expressed as:

$$c_g = -\frac{1}{B_{gd}} \frac{dB_{gd}}{dp} + \frac{1}{B_{gd}} \frac{B_o - B_{gd}R_s}{1 - R_sR_v} \frac{dR_v}{dp}$$

Where B_o is the oil formation volume factor, R_s is the solution gas ratio, and R_v is the vaporized oil ratio.

Formation volume factor

The gas formation volume factor is the gas volume at reservoir conditions divided by gas volume at standard conditions. It is used to convert surface measured volumes to reservoir conditions, assuming that the fluid is in a single-gas phase despite temperature and pressure changes. Defined below, it is a function of the fluid composition and the pressure / temperature ratio between reservoir (in-situ) and standard conditions (14.65 psia and 519.67 °R or 60 °F):

$$B_g = \frac{V_{reservoir}}{V_{surface}} = \frac{14.65TZ}{519.67p}$$

It is a very strong function of pressure, and a weak function of temperature and gas composition.

The dry gas formation volume factor is the gas volume at reservoir conditions divided by the gas volume at standard conditions. It is used to describe the gas volume change from the reservoir to the surface, taking into account the phase change between gas and liquid.

$$B_{gd} = \frac{V_{reservoir}}{V_{surface}}$$

Vaporized oil ratio (R_v)

For condensate gas and volatile oil reservoirs with a gas cap, the liquid component in the reservoir gas needs to be considered. This is described by the vaporized oil rRatio (R_v). R_v is defined as the ratio of the volume of produced stock tank condensate or oil to the volume of produced separator gas (commonly used unit is stb/MMscf). It is used in the modified black oil (MBO) models.

Viscosity

Gas viscosity is a measure of the resistance to flow exerted by the gas and is given in units of centipoises (cp). Higher values indicate more resistance to flow. For gas, the viscosity increases with increasing temperature and pressure. As pressure decreases, gas viscosity decreases. The molecules are simply further apart at lower pressure and move past each other more easily.

Experimental determination of gas viscosity is difficult. Usually it is not measured but obtained from correlations, which include corrections for H_2S , CO_2 , and N_2 . Gas viscosity is used in numerous equations, most notably in the definitions of pseudo-pressure and pseudo-time. Typically, gas viscosity is in the range of 0.015 to 0.03 cp or 15 to 30 micro-Pa-s.

Critical temperature

Gases can be converted to liquids by compressing the gas at a suitable temperature. As the temperature increases, the kinetic energies of the particles that make up the gas also increase, and the gases become more difficult to liquefy. The critical temperature of a substance is the temperature at and above which vapor of the substance cannot be liquefied, no matter how much pressure is applied. For example, the critical temperature of water is 374°C and carbon dioxide is 31.2°C.

Critical temperature represents the temperature above which distinct liquid and gas phases do not exist. As the critical temperature is approached, the properties of the gas and liquid phases become the same, resulting in one phase known as supercritical fluid. The critical temperature value is used in the definition of reduced temperature ($T_r = T / T_c$), which in turn is used directly in correlations or equations of state to determine various PVT properties of natural gases (for example, viscosity, compressibility, gas compressibility factor, etc.).

Critical pressure

The critical pressure of a substance is the pressure required to liquefy a gas at its critical temperature. For example, the critical pressure of water is 217.7 atm and carbon dioxide is 73.0 atm.

Critical pressure represents the pressure above which distinct liquid and gas phases do not exist. As the critical pressure is approached, the properties of the gas and liquid phases become the same, resulting in one phase known as supercritical fluid. The critical pressure value is used in the definition of reduced pressure ($p_r = p / p_c$), which in turn is used directly in correlations or equations of state to determine various PVT properties of natural gases (for example, viscosity, compressibility, gas compressibility factor, etc.).

Oil

Correlations of physical properties of reservoir crude oils are more complicated than those for natural gas because of the many different components they contain. Although most components are hydrocarbons, the larger molecule components can be different chemical classes. These larger, heavier components can strongly influence the behavior of the mixture. Also the mixing rules for liquids are considerably different than those for gases because of the complex nature of hydrocarbon liquids.

There are three main sources for developing key oil properties.

1. Subsurface sampling of the produced fluid at reservoir conditions. This is the best method because the complex mixtures of hydrocarbons make each oil unique. The individual properties can then be determined empirically in a laboratory.

2. Surface sampling at a separator where the rate of flow for each fluid, gas and liquids, is measured along with their respective compositions. These fluids are then recombined in the laboratory at reservoir conditions, and the resulting fluid is used to empirically determine key oil properties.
3. Correlations are often used when only key parameters, such as the density of the produced oil and the volume of solution-gas evolved, are known. Correlations should be used only after being proved / tuned with laboratory measurements for subsurface samples of analogous oils.

Gravity

Oil gravity relates the density of oil to that of the density of water. The oil gravity has a very strong effect on the calculated oil viscosity and solution gas-oil ratio. It has an indirect effect on the oil compressibility and the oil formation volume factor because these variables are affected by the solution gas-oil ratio.

The American Petroleum Institute (API) developed a specific gravity scale that measures the relative density of various petroleum liquids. API gravity is graduated in degrees on a hydrometer instrument and was designed so that most values would fall between 10° and 70° API.

Usually the oil gravity is readily known. It ranges from 45 °API (light oil) through 20 °API (medium density) to 10 °API (heavy oil). The conversion from API gravity (oil field units) to relative gravity (relative to water) is:

$$\gamma_o = \frac{141.5}{^\circ API + 131.5}$$

The conversion of oil relative gravity to oil density is:

$$\rho_o = \gamma_o \cdot \rho_w$$

where:


$$\rho_w \approx 62.37 \text{ lb} \cdot \text{m} / \text{ft}^3 \text{ or } 1000 \text{ kg} / \text{m}^3$$

Formation volume factor


The oil formation volume factor (FVF) is defined as the ratio of the volume of oil and dissolved gas at reservoir (in-situ) conditions to the volume of oil at stock tank (surface) conditions. Since most measurements of oil and gas production are made at the surface, and the fluid flow takes place in the

formation, volume factors are needed to convert measured surface volumes to reservoir conditions. It is defined as:

$$B_o = \frac{V_{res}}{V_{surface}}$$

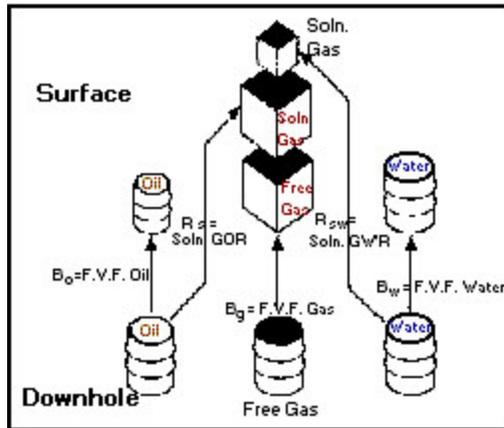

The oil formation volume factor is influenced by two main factors: solution gas and the compressibility of oil. The dominant factor is solution gas. As pressure increases, the amount of solution gas that the oil can dissolve increases such that the oil swells, and so the formation volume factor exceeds 1.0. After there is no remaining free gas available to dissolve in the oil, further increases in pressure result in a decline in formation volume factor due to the second influencing factor – the compressibility of oil. As shown in the diagram below, the oil formation volume factor is dominated by swelling below the bubble point pressure (due to dissolved gas), and by compressibility above the bubble point pressure (because all available gas is now dissolved).

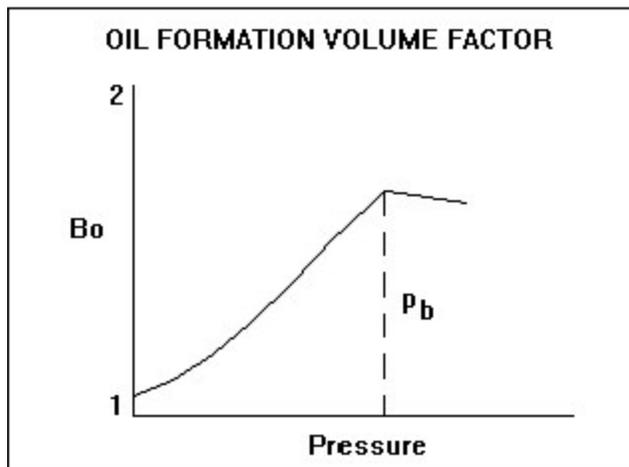

Shrinkage

Shrinkage is the inverse of the formation volume factor for oil, and represents the difference between the volume of oil in the reservoir and its volume when produced to the surface (standard pressure and temperature). The value of shrinkage is generally between 0.5 and 1, and the change in volume is due to solution gas coming out of the oil as the pressure decreases.

Compressibility

Oil compressibility is defined as the relative change in oil volume per unit change in pressure. Oil compressibility is a source of energy for fluid flow in a reservoir. In an undersaturated reservoir, it is a dominant drive mechanism, but for a saturated reservoir, it is overshadowed by gas compressibility effects due to the evolution of dissolved gas. Oil compressibility is a component of total compressibility, which is used in the determination of skin, dimensionless time, and material balance.

Oil compressibility, when plotted versus pressure, shows a significant discontinuity at the bubble point pressure. Above this pressure (undersaturated condition), the oil is a single-phase liquid consisting of oil and dissolved gas. The compressibility of this liquid can be measured in the laboratory, and it is a weak function of pressure. Mathematically, it can be expressed as:


$$c_o = -\frac{1}{B_o} \frac{dB_o}{dp}$$

Where B_o is oil formation volume factor.

Below the bubble point pressure (saturated condition), gas comes out of solution causing a sharp increase in compressibility, which causes the discontinuity shown in the plot. While below the bubble point pressure, oil compressibility becomes a much stronger function of pressure. It can be expressed as:


$$c_o = -\frac{1}{B_o} \frac{dB_o}{dp} + \frac{1}{B_o} \frac{B_{gd} - B_o R_v}{1 - R_s R_v} \frac{dR_s}{dp}$$

Where B_{gd} is the dry gas formation volume factor, R_s is the solution gas ratio, and R_v is the vaporized oil ratio.

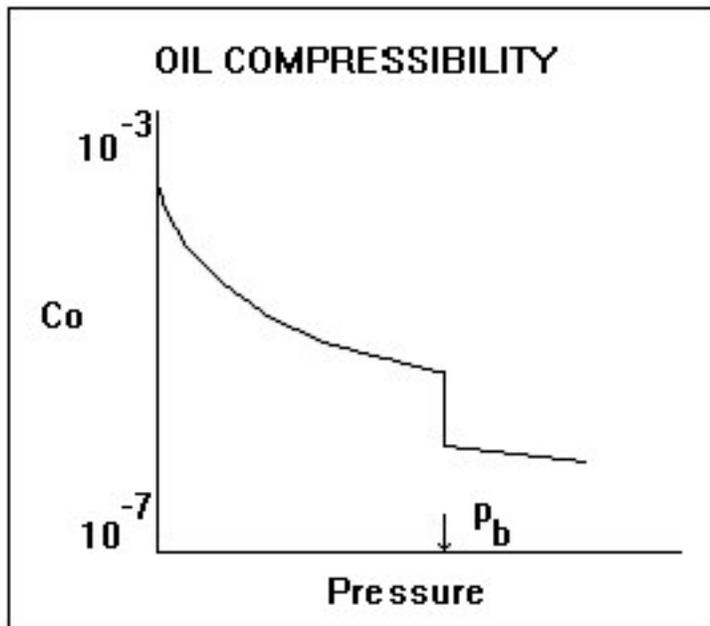

Solution gas-oil ratio


The solution gas-oil ratio is the amount of gas dissolved in the oil at any pressure. It increases approximately linearly with pressure and is a function of the oil and gas composition. A heavy oil contains less dissolved gas than a light oil. In general, the solution gas-oil ratio varies from 0 (dead oil) to approximately 2000 scf/bbl (very light oil). The solution gas-oil ratio increases with pressure until the bubble point pressure is reached, after which it is a constant, and the oil is said to be undersaturated.

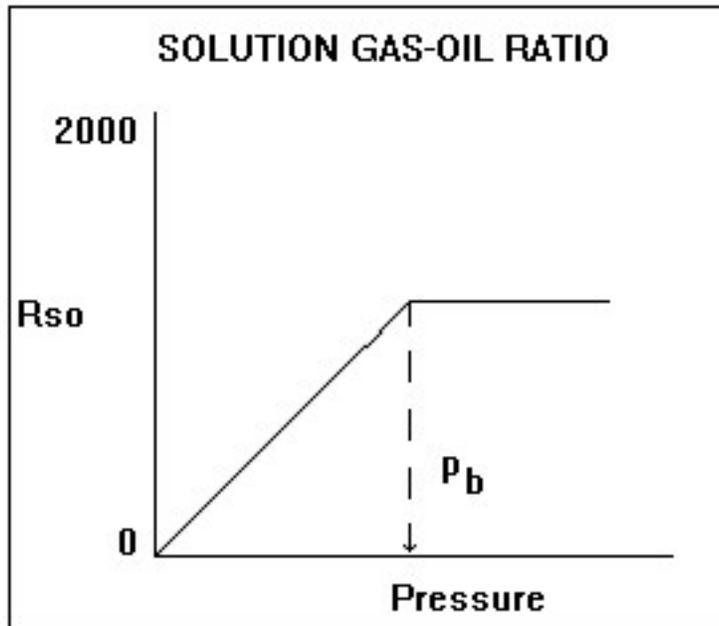

The solution gas-oil ratio is a significant component of the PVT correlations. It has a very significant influence on the oil formation volume factor, the oil viscosity, and the oil compressibility.

Viscosity


Oil viscosity is a measure of the resistance to flow exerted by the oil, and is given in units of centipoises (cP). Higher values indicate greater resistance to flow. For oil, the viscosity decreases with increasing temperature and pressure (up to the bubble point). Above the bubble point pressure, oil viscosity increases minimally with increasing pressure as shown below. It is a very strong function of reservoir temperature, oil gravity, and the solution gas-oil ratio.

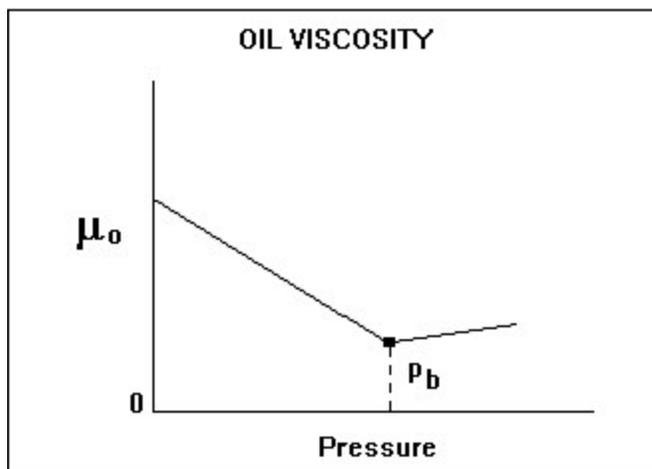

Oil viscosity is measured as a function of pressure in most PVT laboratory measurements. Occasionally, a routine oil analysis report quotes the oil viscosity (and the kinematic viscosity). These measurements are at stock tank conditions and should not be used as the in-situ oil viscosity. Dead-oil viscosity is defined as the viscosity of crude oil at atmospheric pressure (no gas in solution) and system temperature. There are several correlations available for estimating oil viscosity at reservoir conditions, but great care must be taken since they are very sensitive to the oil gravity and solution gas-oil ratio inputs. The oil viscosity at reservoir conditions can vary from 10,000 cP for a heavy oil to less than 1 cP for a light oil.

Bubble point pressure

The bubble point pressure is defined as the pressure at which the first bubble of gas comes out of solution. At this point, we can say the oil is saturated – it cannot hold anymore gas. Above this pressure, the oil is undersaturated, and the oil acts as a single-phase liquid. At and below this pressure, the oil is saturated, and any lowering of the pressure causes gas to be liberated resulting in two-phase flow.

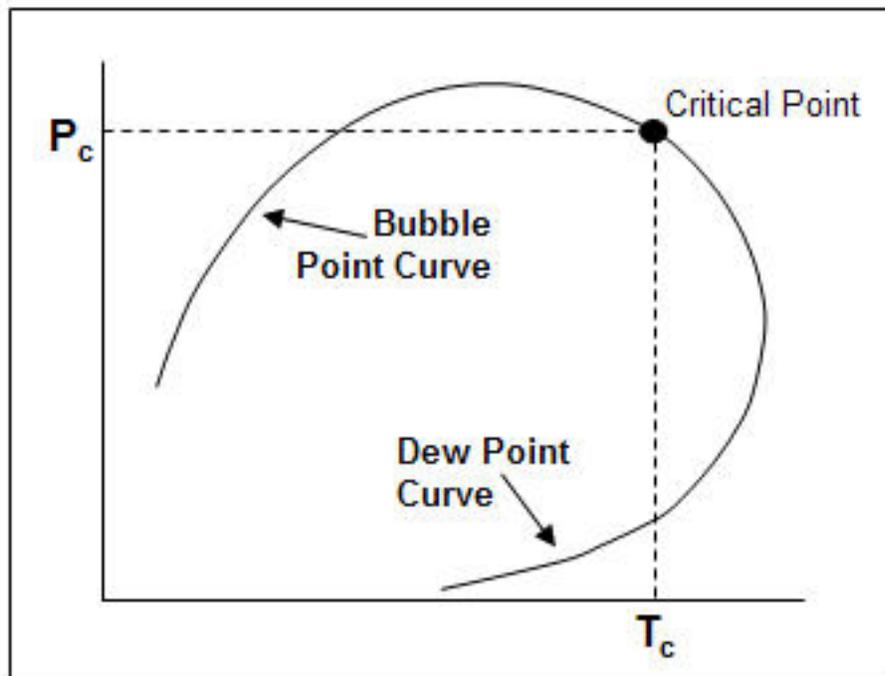

Water

Estimating reservoir water properties is important for reservoir engineering calculations, specifically for those with water influx. Also, water is often a very important liquid component of an oil and gas pro-

duction system. The physical properties of water play an important role in multiphase flow calculations.

Because water composition is only generally affected by dissolved solids, correlating water properties is relatively simple. Also, changes in the physical properties of water as a function of temperature and pressure are relatively small and usually can be predicted.

Water-specific gravity

Water-specific gravity is defined as the density of the water divided by the density of water at standard conditions (62.3 lb / ft³). Water contained in a reservoir is saline and usually has a specific gravity greater than 1.0. Water-specific gravity has no effect on calculated properties such as water compressibility, formation volume factor, and viscosity. It is used however, in the wellbore pressure-drop calculations when converting pressures from wellhead to sandface.

Salinity

Salinity is the quantity of dissolved salt in water, and is usually expressed as the mass of dissolved salt in a unit volume solution, in mg / L, or parts per million (ppm). Salinity is often reported as total dissolved solids (TDS).

Viscosity

Water viscosity is a measure of the resistance to flow exerted by water. Higher values indicate more resistance to flow. For water, the viscosity decreases with increasing temperature, and increases with increasing pressure. Water viscosity is a very weak function of pressure. Water at room temperature is approximately equal to 1 cP. In a reservoir, it is typically between 0.5 to 1 cP. This is due to the higher temperature, salinity, and the solution-gas content of water.

Compressibility

The compressibility of any substance is the change in volume per unit volume per unit change in pressure. Water compressibility is a source of energy for fluid flow in a reservoir, but it is only significant when there is no free gas present in the reservoir. The value of water compressibility can be obtained from laboratory PVT measurements, or it can be determined from correlations. The magnitude is approximately between 1.0×10^{-6} and 9.0×10^{-6} psi⁻¹. It is a weak function of pressure, temperature, and salinity.

Formation volume factor

The water formation volume factor is defined as the ratio of the volume of water at reservoir (in-situ) conditions to that at stock tank (surface) conditions. This factor is used to convert the flow rate of water (at stock tank conditions) to reservoir conditions.

$$B_w = \frac{V_{res}}{V_{surface}}$$

The water formation volume factor can be measured in the laboratory, or it can be determined from correlations. In most situations, the water formation volume factor is very close to one, and so most practitioners tend to set it to one. It is a very weak function of pressure, temperature, and salinity.

Dissolved gas / water ratio


The solution gas / water ratio is the amount of gas dissolved in the water. It increases approximately linearly with pressure, and is a function of the water and gas composition. Quantitatively, the solubility of gas in water is considerably less than that of gas in oil.

Reservoir fluid types

Typically, there are five main types of reservoir fluids: black oil, volatile oil, condensate (retrograde gas), wet gas, and dry gas. Each of these fluid types require different approaches when analyzing the reservoir, so it is important to identify the correct fluid type early on in the reservoir's life. Laboratory analysis is our primary method for determining and quantifying fluid type, but production information such as initial production gas-oil ratio (GOR), gravity of the stock-tank liquid, and the color of the stock-tank liquid are also useful indicators.

Black oils

Black oils are made up of a variety of components including large, heavy, and non-volatile hydrocarbons. The phase diagram is shown below. When the reservoir pressure lies anywhere along line 1 → 2, the oil is said to be undersaturated - meaning the oil could dissolve more gas if more gas were present. If the pressure is at 2, the oil is at its bubble point, and is said to be saturated - meaning the oil contains the maximum amount of dissolved gas and can't hold any more gas. A reduction in pressure at this point will release gas to form a free gas phase inside the reservoir. Additional gas evolves from the oil as it moves from the reservoir to the surface. This causes some shrinkage of the oil. Black oil is often called low shrinkage crude oil or ordinary oil.

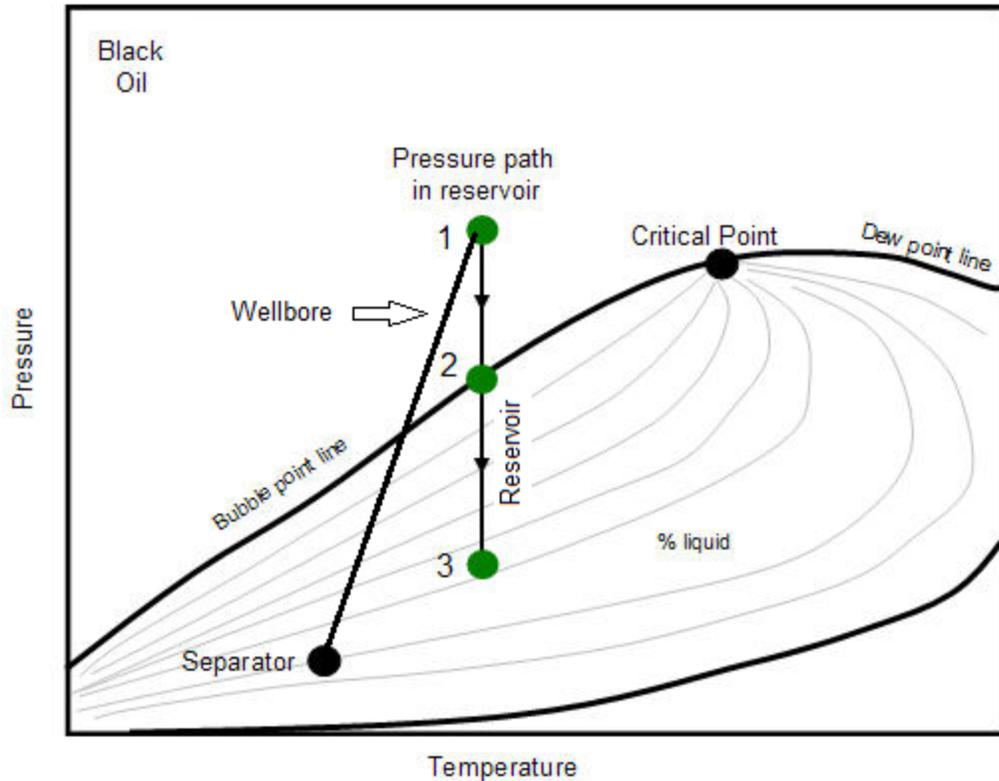


Black oils are dark in color indicating the presence of heavy hydrocarbons. It is characterized as having initial gas-oil ratios of 2000 scf/stb or less. Producing GOR will increase during production when reservoir falls below bubble point pressure, 2 → 3 as the gas evolves from the solution inside the reservoir and flows preferentially to the oil.

Volatile oils

Volatile oils contain fewer heavy molecules and more intermediate components (ethane through hexane) than black oils. Volatile oils generally have initial gas-oil ratios in the 2000 to 3300 scf/Bbl range, and the stock tank gravity is usually 40° API or higher. The color is generally lighter than black oil – brown, orange, or green. Gas associated with volatile oils tends to be very rich and similar to retrograde condensate gas.


The phase envelope for a volatile oil tends to cover a much narrower temperature range when compared to a black oil; but like a black oil, the reservoir temperature is always lower than the critical temperature for the fluid. As the reservoir temperature approaches the critical temperature a volatile oil will become more gas-like such that with even moderate depletion, a volatile oil reservoir can flash mainly to gas and have a relatively low liquid content.

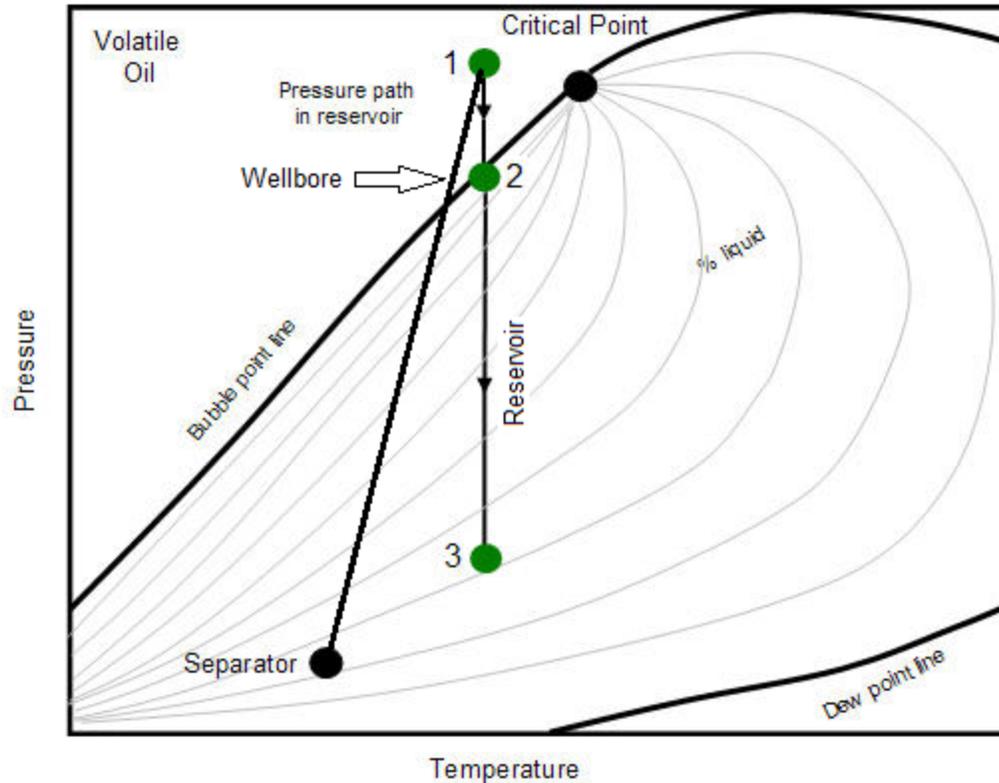

Condensate (retrograde gas)

Condensate gas is very similar to volatile oils in terms of the color (green, orange, brown, even clear) and gravity (40° to 60° API) of the produced oil. However, the reservoir temperature of a condensate gas reservoir is greater than the critical temperature of the fluid, and so where a volatile oil is a liquid at original reservoir pressure and temperature, a condensate gas is a gas.

As pressure is reduced in a condensate gas reservoir, the fluid will pass through the dew point and large volumes of liquid will condense in the reservoir. Since the gas flows preferentially to oil, much of this oil will be unrecoverable. Consequently, it is important to recognize that a reservoir contains a condensate gas and re-inject dry gas to maintain reservoir pressure above the dew point to maximize recovery of the liquids. In the diagram below, the retrograde gas exists completely in a gaseous state inside the reservoir at point 1. As the pressure decreases, the condensate exhibits a dew point at point 2. As the reservoir further depletes and the pressure drops, liquid condenses from the gas to form a free liquid *inside* the reservoir.

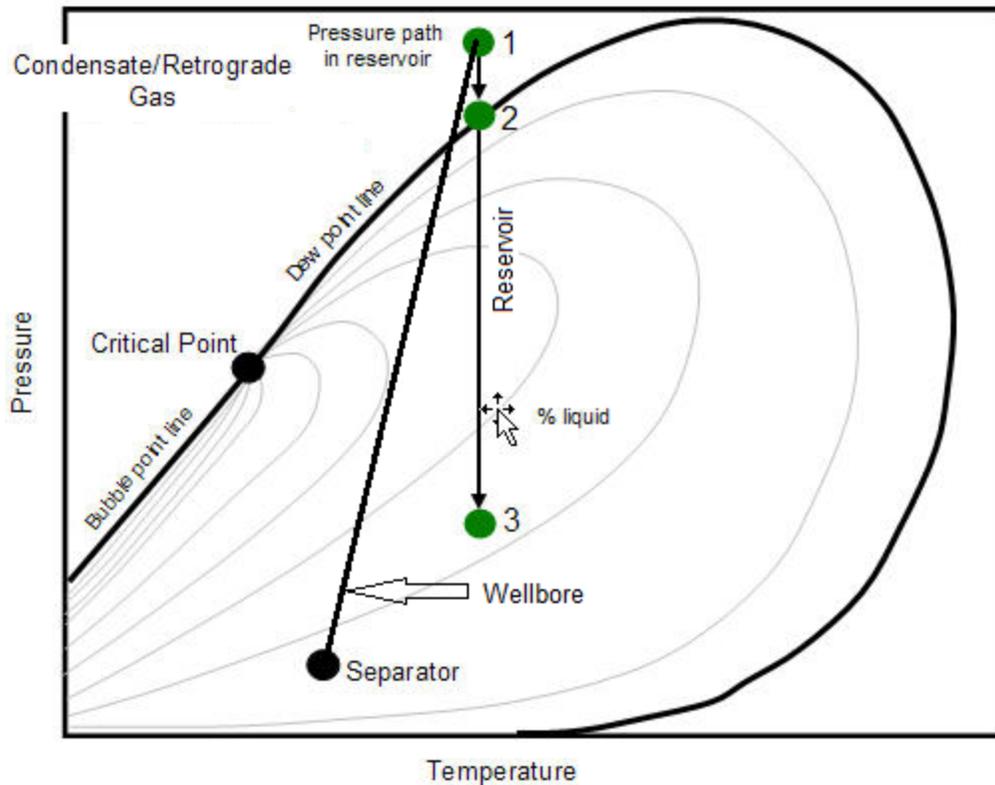


Wet gas (rich gas)

Natural gas that contains significant heavy hydrocarbons such as propane, butane and other liquid hydrocarbons is known as wet gas or rich gas. The general rule of thumb is if the gas contains less methane (typically less than 85% methane) and more ethane, and other more complex hydrocarbons, it is labeled as wet gas.

Wet gas exists solely as a gas in the reservoir throughout the reduction in reservoir pressure. Unlike retrograde condensate, no liquid is formed inside the reservoir. However, separator conditions lie within the phase envelope, causing some liquid to be formed at the surface. This surface liquid is normally called condensate, and the reservoir gas is sometimes called condensate-gas, which leads to a lot of confusion between wet gasses and retrograde condensate.


The entire phase diagram of a wet gas will lie below the reservoir temperature. Note that the pressure path line does not enter the phase envelope, meaning no liquid is ever formed inside the reservoir.

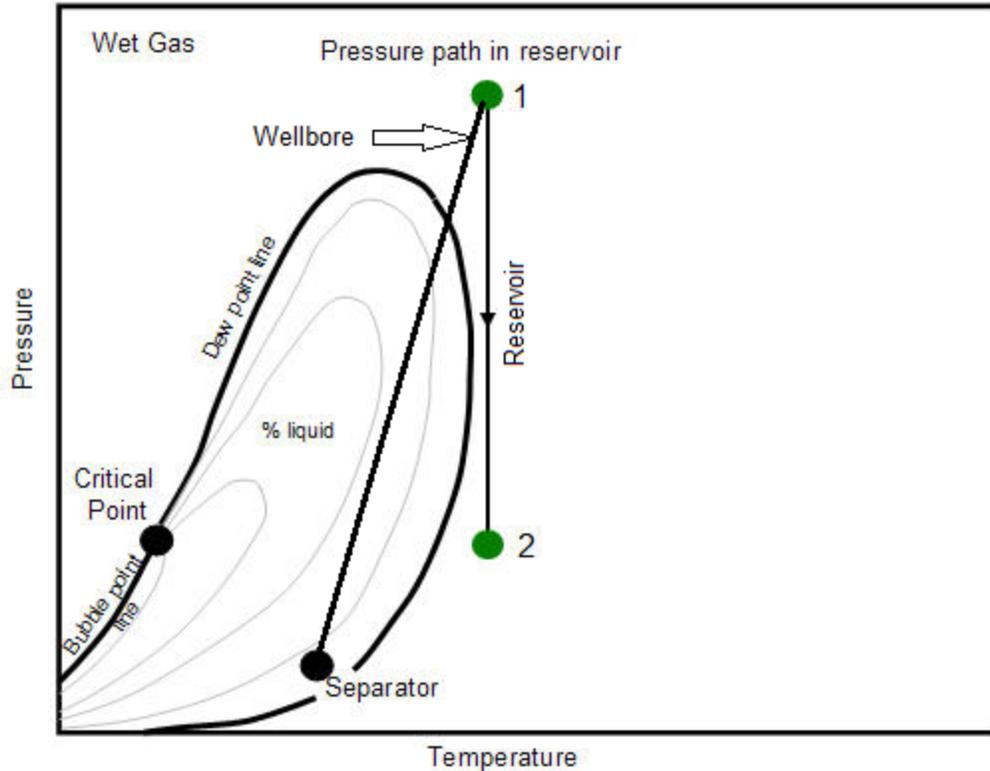

Wet gases produce stock tank liquid with the same range of gravities as the liquids from retrograde gases. However, the gravity of the stock tank liquid does not change during the life of the reservoir. Also, producing GOR are very high (> 50000 scf/stb) for wet gases and remains constant.

Dry gas

Natural gas that occurs in the absence of condensate or liquid hydrocarbons, or gas that had condensable hydrocarbons removed, is called dry gas. It is primarily methane with some intermediates. The hydrocarbon mixture is solely gas in the reservoir and there is no liquid (condensate surface liquid) formed either in the reservoir or at surface. The pressure path line does not enter into the phase envelope in the phase diagram, thus there is only dry gas in the reservoir. Note, the surface separator conditions also fall outside the phase envelope (in contrast to wet gas); hence no liquid is formed at the surface separator.

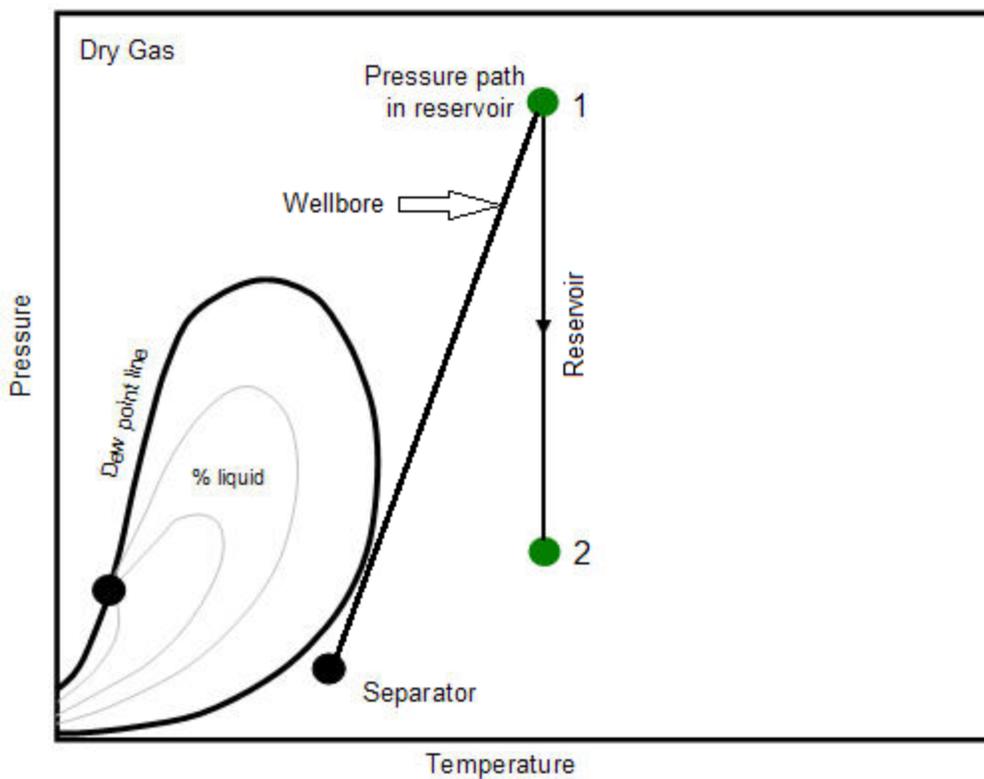

Reservoir properties

This topic describes the key terminology for reservoir properties.

Drainage area

This is the areal extent of the reservoir. It is most often determined from geological information about the formation / region, but it can also be estimated from performance studies such as material balance, interference analysis, and simulation studies.

Expected ultimate recovery

The expected ultimate recovery (EUR) is the amount of oil or gas that can be economically recovered from a reservoir under current operating and economic conditions.

Formation compressibility

Formation compressibility is the change in pore volume per unit of pore volume per unit change in pressure. Even though the formation is a solid material, it is compressible. The formation compressibility is used in the calculation of total compressibility. It is of the same order of magnitude as the oil compressibility, or the water compressibility, approximately 10^{-6} psi^{-1} .

Thus, in the absence of gas saturation, the formation compressibility is relatively significant and must not be ignored. However, when there is gas present in the pores, the gas compressibility is often one or two orders of magnitude higher, and so the formation compressibility is relatively small and may be ignored.

The formation compressibility may be measured in the laboratory, but it is usually derived from correlations. It is obvious that the nature of the formation, its degree of consolidation, its stress field, etc. all affect the formation compressibility, yet the correlations that exist do not take all of these factors into account. They are very simplified and relate the formation compressibility to the total porosity. The correlation used in Harmony Enterprise is derived from laboratory measurements [Hall, 1953], and is applicable to sandstones and carbonates. For overpressured reservoirs, the formation compressibility can be 10 times larger than suggested by the Hall correlation. In practice, it has been found that formation compressibility for overpressured reservoirs is approximately equal to 10^{-5} psi^{-1} .

Gas saturation

Gas saturation is the fraction of the pore space occupied by gas. Most gas reservoirs also contain some connate (non-movable) water. If the gas reservoir is part of a gas cap in a saturated oil reservoir, the space may contain gas, oil, and water. Thus, the gas saturation is rarely 100% but varies from 30% to 90%.


Gas saturation is used directly in the calculation of the reserves, and also in the calculation of total compressibility.


Note that the gas saturation has a significant effect on the total compressibility because the gas compressibility is much higher than the fluid compressibility of oil and water.

Initial pressure

Reservoir pressure is the pressure of fluids within the pores of a reservoir measured at a specific point in time. The initial reservoir pressure is the average reservoir pressure measured in a discovery well before any fluid is produced. This value is necessary for many reservoir engineering calculations, such as reserve determination. Units are typically psi (field units) or kilopascals (SI).

For well testing, the initial pressure is the average reservoir pressure before the start of a test. For a new well, a well that has not been put on production, the initial pressure equals the virgin or original pressure and corresponds to a drillstem test pressure. For a well that has been on production for a long time, the initial pressure may or may not be equal to the original reservoir pressure. The following example illustrates this concept.

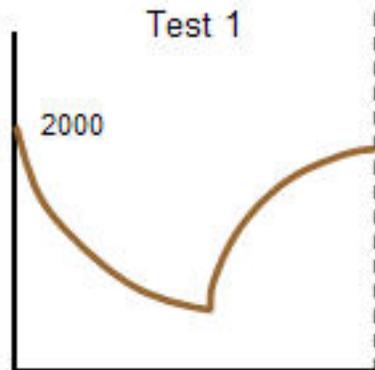

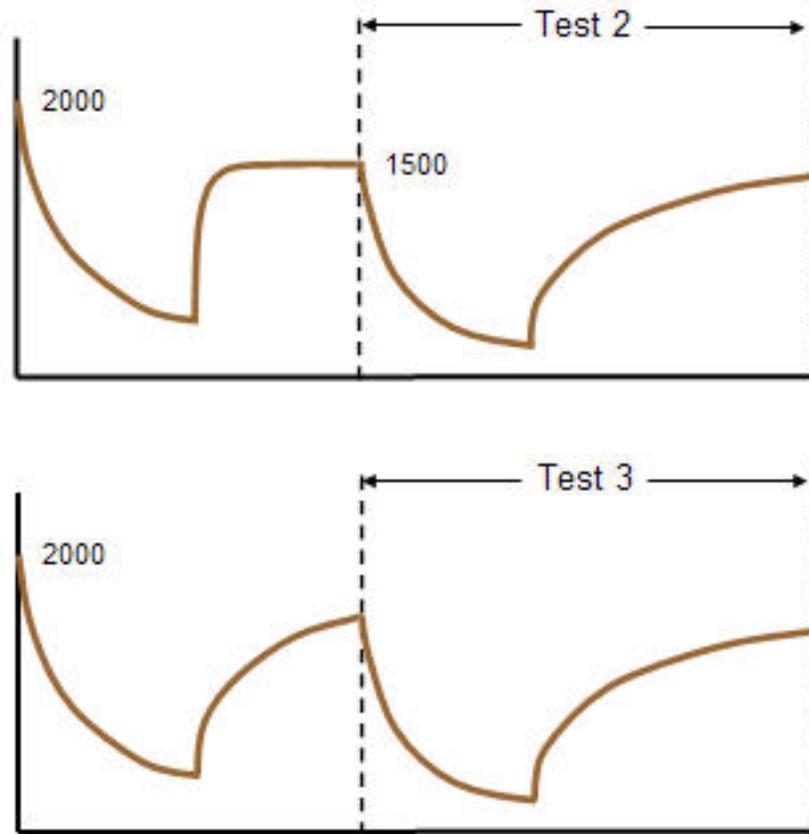

- If Test 1 is being analyzed, the initial pressure is 2000.
- If Test 2 is being analyzed, the initial pressure is 1500 because the reservoir pressure is fully built up before this test, and the historical pressure prior to Test 2 does not apply. Thus, it behaves like a new well with an initial pressure 1500.
- If Test 3 (which is a combination of Test 2 and some production prior to Test 2) is being analyzed, the initial pressure is 2000, because it must reflect the reservoir pressure before the production that is being analyzed during the test.

Mid-point of perforations


Perforations are the communication tunnel created from the casing or liner into the reservoir formation through which the oil or gas is produced. The mid-point of perforations is the measured depth from the surface to the mid-point of the perforated interval of the formation.

Net pay

Net pay is the thickness of the formation that contributes to the flow of fluids, or the sum of the productive intervals of a reservoir. It is determined from core or log analysis, and can be different from the gross pay or the perforated interval. In the case of an inclined or deviated wellbore in a declining formation, the net pay is measured perpendicular to the angle of decline. Several examples of net pay are shown below.




①

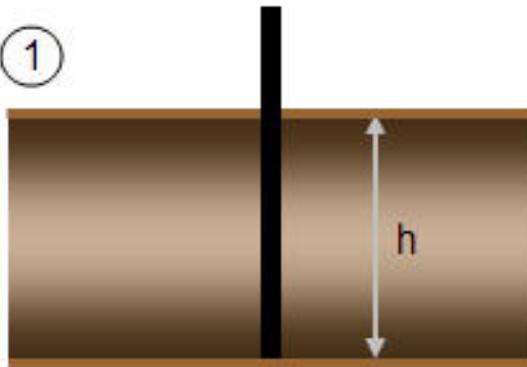


net pay = h

②

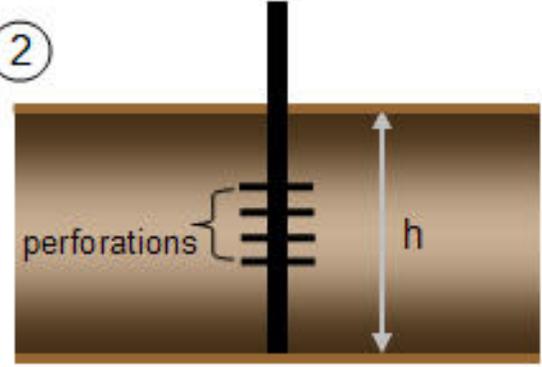


net pay = h

③

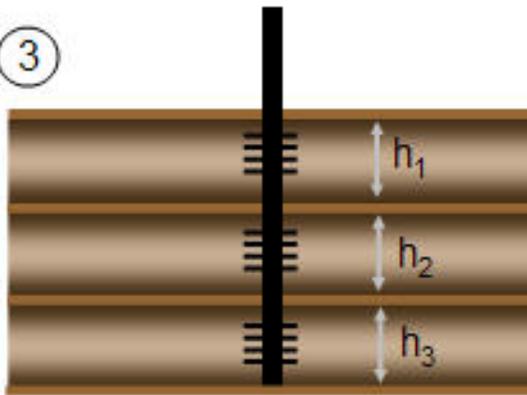


net pay = $h_1 + h_2 + h_3$

④

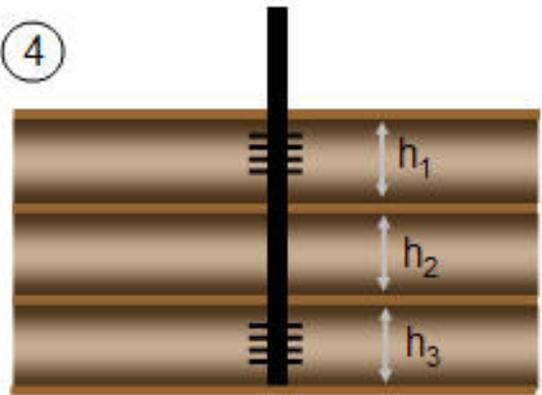

net pay = $h_1 + h_3$

⑤

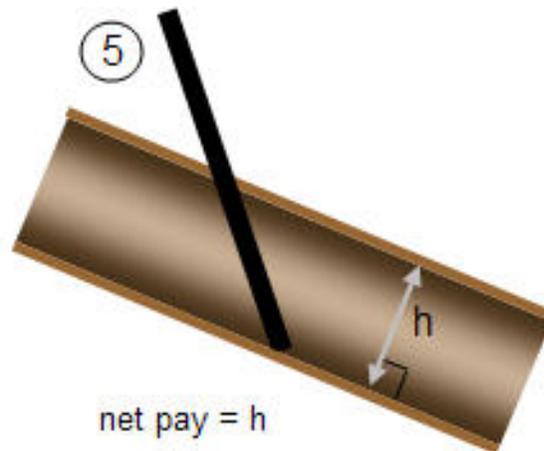

net pay = h

Oil saturation

Oil saturation is the fraction of the pore space occupied by oil. Most oil reservoirs also contain some connate (non-movable) water. Thus, the oil saturation is rarely 100% and usually ranges from 10% to 90% (in the oil / water transition zones). The oil saturation affects the oil and gas reserves, and is also used in the calculation of total compressibility.

Original fluid-in-place

Original fluid-in-place (OFIP) is the amount of fluid contained in a reservoir at standard conditions, as calculated from the reservoir and fluid properties. It is a general term that refers to the calculation of original gas-in-place (OGIP) and/or original oil-in-place (OOIP).

Porosity

The total porosity is the percentage volume occupied by the pore space, regardless of the type of fluids contained in the pore space. It is obtained from core or log analysis. Total porosity is used to calculate volumetric reserves and formation compressibility, and is used in the pressure transient flow equations.

The total porosity has only a small effect during the transient flow period (it occurs within the log term in the skin calculation equation for radial flow), but it has a significant effect during pseudo-steady state (PSS) flow, as it directly affects the reserves contained in the reservoir.

Rock volume

The total volume of reservoir rock, often referred to as the bulk volume.

Pore volume

The total volume of pore space within the reservoir as determined by the porosity of the rock.

Hydrocarbon pore volume

The total pore volume containing hydrocarbons. This is generally the product of pore volume and water saturation.

Recovery factor

The recovery factor (RF) is the ratio of the expected ultimate recovery and original gas/oil-in-place. It indicates how much of the original gas/oil-in-place can be recovered under current operating and economic conditions.

Reservoir temperature

The reservoir temperature represents the temperature of the formation. It increases with reservoir depth and differs widely depending on the reservoir location's geothermal gradient. The geothermal gradient is the rate of increase in temperature per unit depth in the earth. Although the gradient is variable depending on location, a typical average value is 15°F / 1000 ft.

In the analysis of gas wells, the reservoir temperature is used directly in the pressure transient analysis calculations, as well as calculating all the gas fluid properties, such as the gas formation volume factor, gas viscosity, and gas compressibility.

In the analysis of oil wells, the reservoir temperature does not enter into the pressure transient analysis equations directly; rather it is used in calculating oil fluid properties such as the oil formation volume factor, oil viscosity, oil compressibility, and solution gas-oil ratio.

Units are typically Rankine (field units) or Kelvin (SI).

Total compressibility

The compressibility of a substance is the change in volume per unit volume per unit change in pressure. In a reservoir that consists of rock and pore space occupied by oil, water, and gas, the total compressibility is defined as follows:

$$c_t = c_g S_g + c_o S_o + c_w S_w + c_f$$

From this definition, the total compressibility takes into account the compressibility and saturation of gas, oil, and water, as well as the (rock) formation compressibility. Note that the gas saturation has a significant effect on the total compressibility because the gas compressibility is much higher than the other fluid compressibility (oil and water). Thus, if there is any gas present in the reservoir, the total compressibility is dominated by the gas compressibility component.

In well testing and rate transient analysis, the analysis of pressure and production data is based on the solution of the diffusivity equation. The analytical solution of this equation assumes that the total compressibility is constant. This assumption is valid for single-phase liquid systems. In gas systems, because compressibility of gas is highly dependent on pressure, the assumption of a constant value of

total compressibility can lead to serious errors, especially when the reservoir has started to deplete (that is, during boundary-dominated flow). To account for this changing gas compressibility, the concept of pseudo-time is invoked. It accounts for the variation with pressure of compressibility, viscosity, and permeability.

The units of compressibility are 10^{-6} psi^{-1} . ($1 * 10^{-6} \text{ psi}^{-1}$ (sometimes referred to as 1 Microsip.)

- $c_o \approx c_w \approx c_f \approx 10^{-6} \text{ psi}^{-1}$
- $c_g \approx 10^{-3} \text{ psi}^{-1}$ @ 500 psi
- $c_g \approx 10^{-3} \text{ psi}^{-1}$ @ 1000 psi
- $c_g \approx 10^{-4} \text{ psi}^{-1}$ @ 2500 psi
- $c_g \approx 10^{-4} \text{ psi}^{-1}$ @ 5000 psi
- $c_g \approx 10^{-5} \text{ psi}^{-1}$ @ 10,000 psi
- $c_g \approx 10^{-5} \text{ psi}^{-1}$ @ 15,000 psi

Water saturation

Water saturation is the fraction of the pore space occupied by water. Most reservoirs are water wet and contain connate water. Water saturation may range from 10% to 50% for an oil or gas reservoir, and it is 100% for an aquifer. The water saturation obviously affects oil and gas reserves, and it is also used in the calculation of total compressibility.

Wellbore radius

The wellbore radius is half of the measured inside diameter of the borehole at the point of perforation. This is not to be confused with the effective wellbore radius, which accounts for changing skin during production or after stimulation. The wellbore radius and effective wellbore radius are equivalent when the skin is equal to zero.


Shale properties

Tight / shale gas reservoirs have very low matrix permeability, and in some instances contain organic-rich rocks where gas can also be adsorbed. For additional information, see [shale adsorption correction](#). Production from these reservoirs requires long horizontal wells with multiple- staged hydraulic fracture treatments to create extensive artificial fracture networks near the wellbore.

To estimate original gas-in-place in tight / shale gas reservoirs, you require:

- Conventional volumetric calculations using rock volume, porosity, fluid saturations, and pressure.
- Use of [Langmuir isotherms](#) to estimate the volume of adsorbed gas.

Typically, all water in a tight / shale gas reservoir is not moveable, so the reported water production is almost always attributable to production of load fluids (completion / fracture treatment fluid).

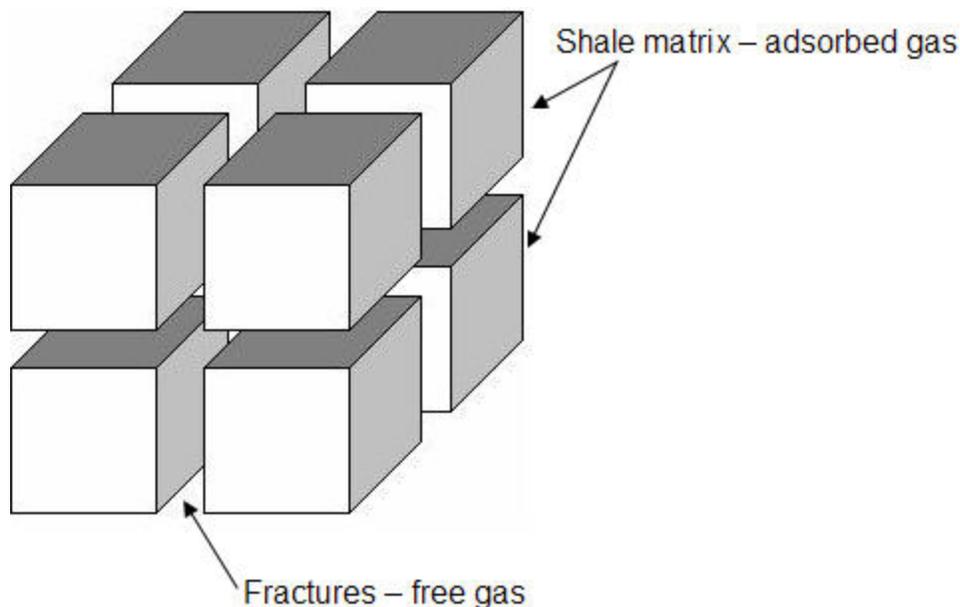

Conventional vs. tight / shale gas reservoirs

A comparison of conventional and tight / shale gas reservoirs is shown below:

Characteristic	Conventional	Shale
Gas Generation	Gas is generated in the source rock and then migrates into the reservoir.	Gas is generated and trapped within the source rock.
Gas Storage	Compression.	Compression and adsorption.

Characteristic	Conventional	Shale
Mechanism		
Gas Produced	Free gas only.	Free and adsorbed gas.
Production Performance	<p>Minimal transient period followed by a long boundary-dominated flow period.</p> <p>Production rates are mainly related to permeability and declining reservoir pressure.</p> <p>From a traditional decline perspective, 'b' values typically range from 0 to 0.5 but can be somewhat larger if there are commingled layers.</p> <p>Recovery factor = 50% – 90%</p>	<p>Very long transient (linear) flow period that can extend many years. In some cases, it is debatable if boundary-dominated flow will ever be fully realized.</p> <p>Production rates are mainly related to the success of creating a large fracture network around a long horizontal wellbore and to the matrix permeability.</p> <p>From a traditional decline perspective, 'b' values initially equal 2.0 (indicating linear flow), and then transition to <1.0 as boundary-dominated flow becomes prevalent.</p> <p>Recovery factor = 5% – 20%</p>

A comparison of conventional vs. tight / shale gas rate-time plots is shown below:



Shale adsorption correction

The shale adsorption correction is based on SPE paper 131772 by R. Ambrose et al.

In shale reservoirs that display adsorption, it has traditionally been thought that the adsorbed gas resides in the matrix of the organic-rich portion of the rock, which does not contribute significantly to the porosity of the rock. New evidence (Ambrose et al.) suggests that this organic-rich portion of the shale does, in fact, contain the majority of the porosity, as well as the adsorbed gas. If this assumption is valid, it is possible that the adsorbed gas is occupying a portion of the measured porosity, thus decreasing the pore space available to free gas. The volume occupied by the adsorbed gas must therefore be subtracted from the measured pore volume when calculating the volume available for free gas storage. The **Ads. Sat.** (Adsorption Saturation) option in Harmony Enterprise performs this correction.

When gas is adsorbed, the molecules are so close to each other that they exist in a near liquid phase. The adsorption volume correction in Harmony Enterprise converts the measured adsorbed gas content into a liquid, and subsequently treats this phase as an extra saturation term, similar to water saturation.

When the correction is enabled, an Adsorbed Saturation, “ S_{ads} ” is calculated, and gas saturation is calculated as follows:

$$S_g = (1 - S_w - S_o - S_{ads})$$

To calculate adsorbed saturation, define:

$$\phi = \frac{PoreVolume}{RockVolume} \text{ and } \phi_{ads} = \frac{AdsorbedVolume}{RockVolume} \text{ and } S_{ads} = \frac{AdsorbedVolume}{PoreVolume}$$

The adsorbed saturation can therefore be calculated as follows:

$$S_{ads} = \frac{\phi_{ads}}{\phi}$$

From SPE 131772, ϕ_{ads} is defined as:

$$\phi_{ads} = 1.318 \times 10^{-6} M \left[\frac{V_L p_i}{p_i + p_L} \right] \frac{\rho_b}{\rho_{ads}}$$

where

ϕ_{ads} = Fractional volume occupied by adsorbed phase

M = Molecular weight of the gas (lbm/lbmole)

V_L = Langmuir Volume (scf/ton)

p_L = Langmuir Pressure (psi(a))


p_i = Initial reservoir pressure (psi(a))

ρ_b = Bulk density of the rock (g/cm³)

ρ_{ads} = Density of the adsorbed phase (g/cm³)


Note: P_{ads} is the density of the adsorbed “liquid” phase. The default in Harmony Enterprise for this value corresponds to the liquid methane density of 0.42 g/cm^3 .

The adsorption saturation correction is available for gas volumetric and gas analytical models. In gas volumetric analyses, the correction is available under Adsorption Properties. To use the correction, click the **Enable** checkbox and then the **Ads. Sat.** checkbox.

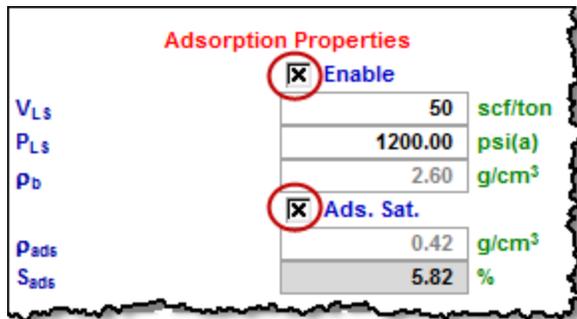

Adsorption Properties		
<input checked="" type="checkbox"/> Enable		
V_{Ls}	50	scf/ton
P_{Ls}	1200.00	psi(a)
P_b	2.60	g/cm^3
<input checked="" type="checkbox"/> Ads. Sat.		
P_{ads}	0.42	g/cm^3
S_{ads}	5.82	%

In gas analytical models, click the **Adsorption** checkbox, then click the **Ads. Sat.** checkbox.

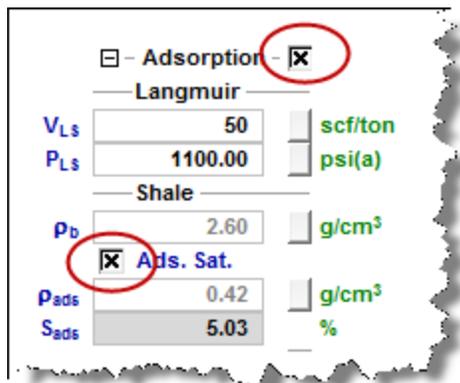


Langmuir		
<input checked="" type="checkbox"/> Adsorption		
V_{Ls}	50	scf/ton
P_{Ls}	1100.00	psi(a)
Shale		
P_b	2.60	g/cm^3
<input checked="" type="checkbox"/> Ads. Sat.		
P_{ads}	0.42	g/cm^3
S_{ads}	5.03	%

Enabling the Ads. Sat. correction results in an adsorbed saturation (S_{ads}) being calculated, which in turn is subtracted from the original gas saturation (S_g). This corrected gas saturation is now used in the volumetric calculations to calculate a new free-gas OGIP.

Terminal / limiting decline rate


The terminal / limiting decline rate begins as a hyperbolic decline curve and transitions into an exponential decline curve at a specified limiting effective decline rate, d_{lim} . When the **Terminal / Limiting Decline Rate** option is selected in the **Calc Method** drop-down menu, a d_{lim} value is required.

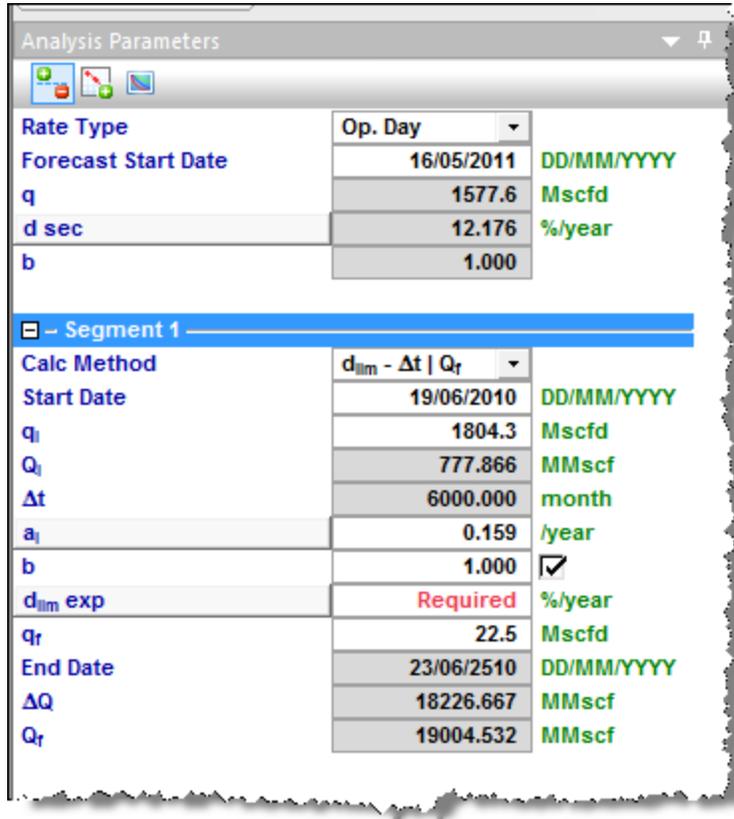

Analysis Parameters		
Rate Type	Op. Day	
Forecast Start Date	16/05/2011	DD/MM/YYYY
q	1577.6	Mscfd
d sec	12.176	%/year
b	1.000	
- Segment 1 -		
Calc Method	$d_{lim} - \Delta t Q_r$	
Start Date	19/06/2010	DD/MM/YYYY
q_i	1804.3	Mscfd
Q_i	777.866	MMscf
Δt	6000.000	month
a_i	0.159	/year
b	1.000	<input checked="" type="checkbox"/>
$d_{lim} \text{ exp}$	Required	%/year
Q_r	22.5	Mscfd
End Date	23/06/2510	DD/MM/YYYY
ΔQ	18226.667	MMscf
Q_r	19004.532	MMscf

There are two options for the d_{lim} value: “ d_{lim} exponential” and “ d_{lim} hyperbolic”. When you click , it toggles to ; clicking the option again selects “ d_{lim} exponential”.

When using the “ d_{lim} exponential” option, the decline transitions such that the exponential portion of the decline has an effective decline rate of the d_{lim} value specified. When using the “ d_{lim} hyperbolic” option, the decline transitions when the hyperbolic portion reaches the specified d_{lim} value. The exponential portion then has an effective decline rate that is different from the d_{lim} value.

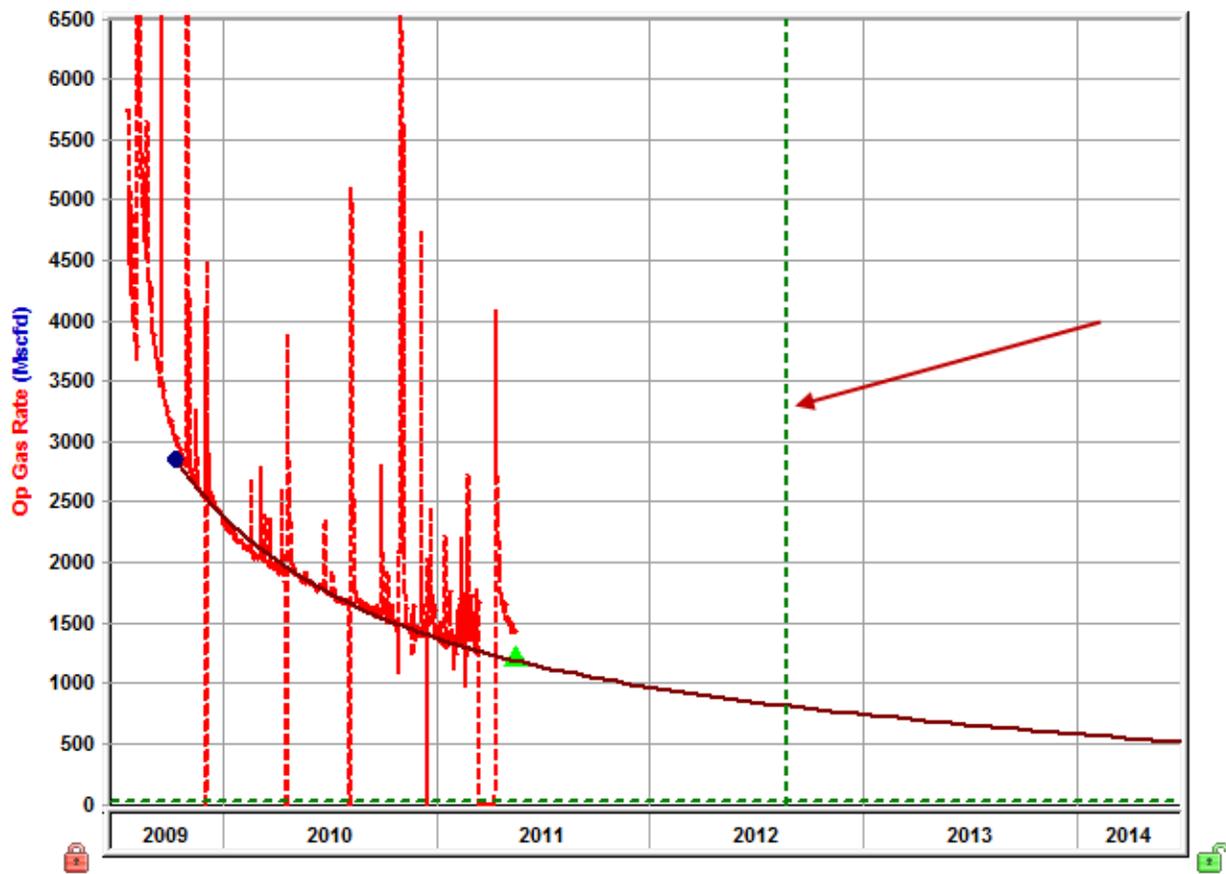

Note: The vertical dashed green line in the screenshot above indicates the transition from hyperbolic to exponential.


Terminal decline calculation methods

There are two ways to calculate the effective decline rate:


1. Secant
2. Tangent

All of the calculations go from your point of interest to a year ahead, but the difference is whether you are drawing a chord segment (secant line) or tangent line.


Note: The most common way to calculate the effective decline rate is by using the secant line, and because of this, references to the effective decline rate mean that the secant line is used.

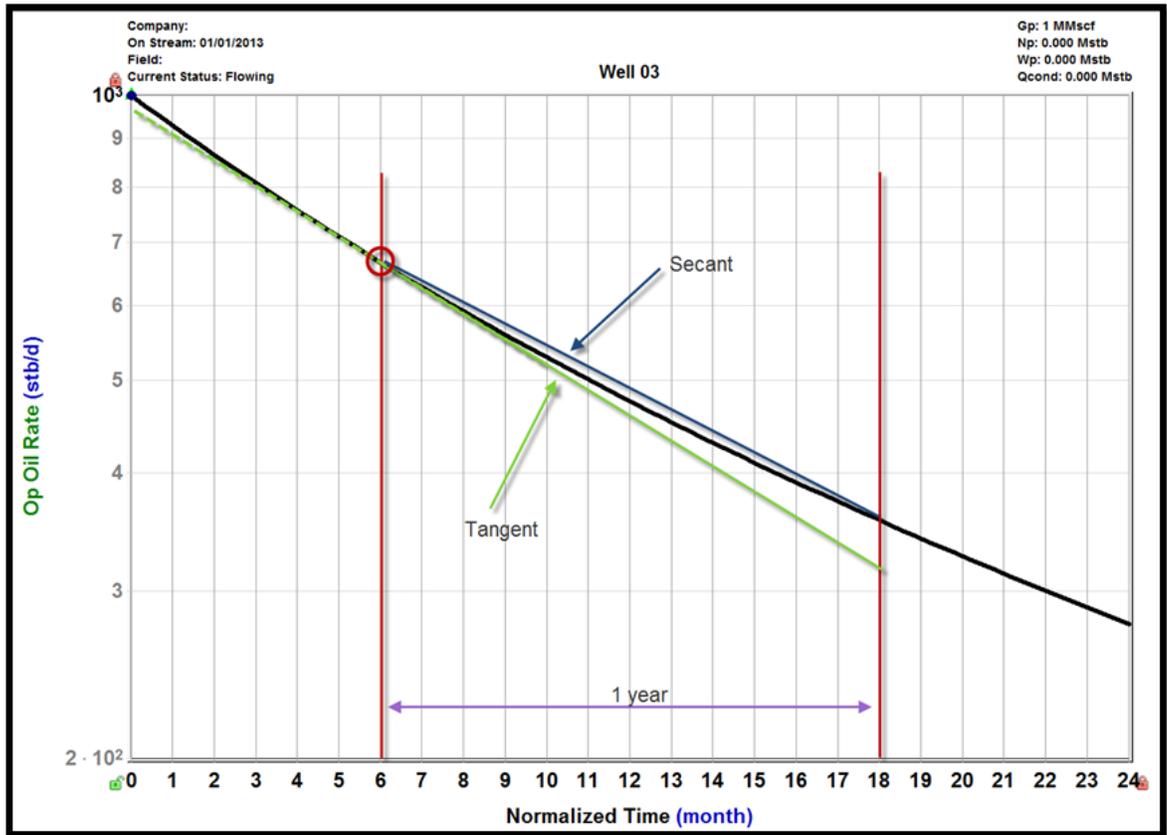


A d_{lim} hyperbolic uses the secant line to calculate the effective decline rate. If you want a d_{lim} hyperbolic of 10%, find where the 10% is calculated, and then switch from a hyperbolic decline to an exponential decline.

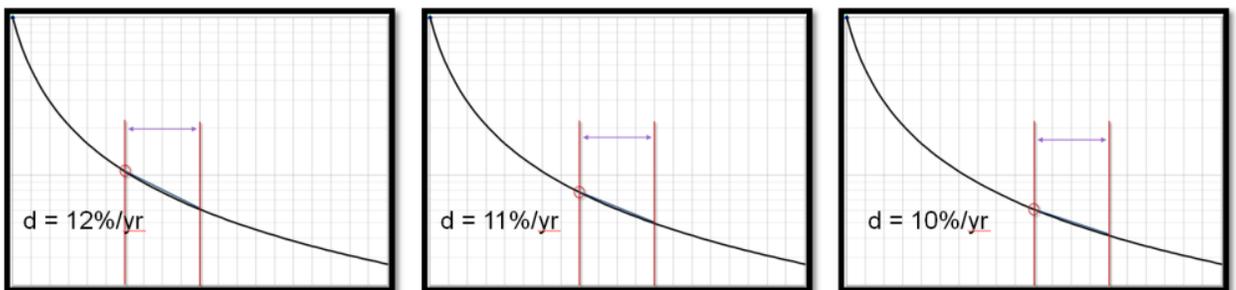


However, you cannot go from the hyperbolic to that chord segment line and expect a reasonable result. You need a smooth transition, so even though we used the chord segment to calculate the 10%, we need to use the tangent line to create the exponential section, which is not even 10%. This section is 10.4% for the remainder of the forecast.

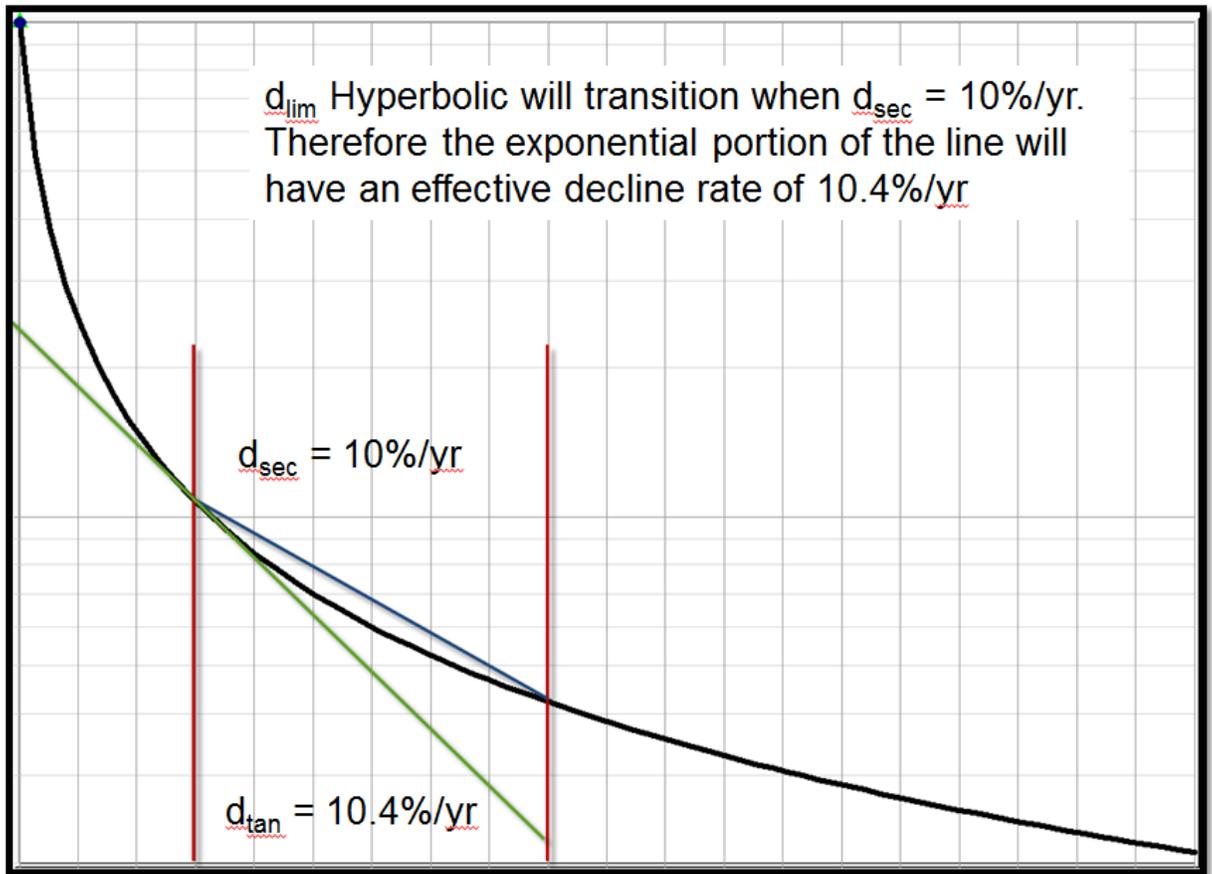

The method described above used to be the default way of calculating terminal decline. Even though the secant / chord segment is how the effective decline rate is almost always calculated, when doing a d_{lim} , we use the tangent line.

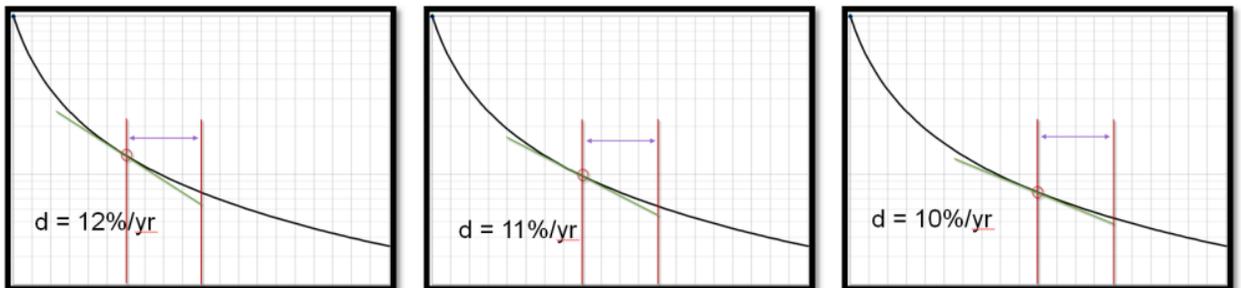

The transition from hyperbolic to exponential is smooth, with an exponential portion that is actually 10%. This is now the default way to calculate terminal decline.

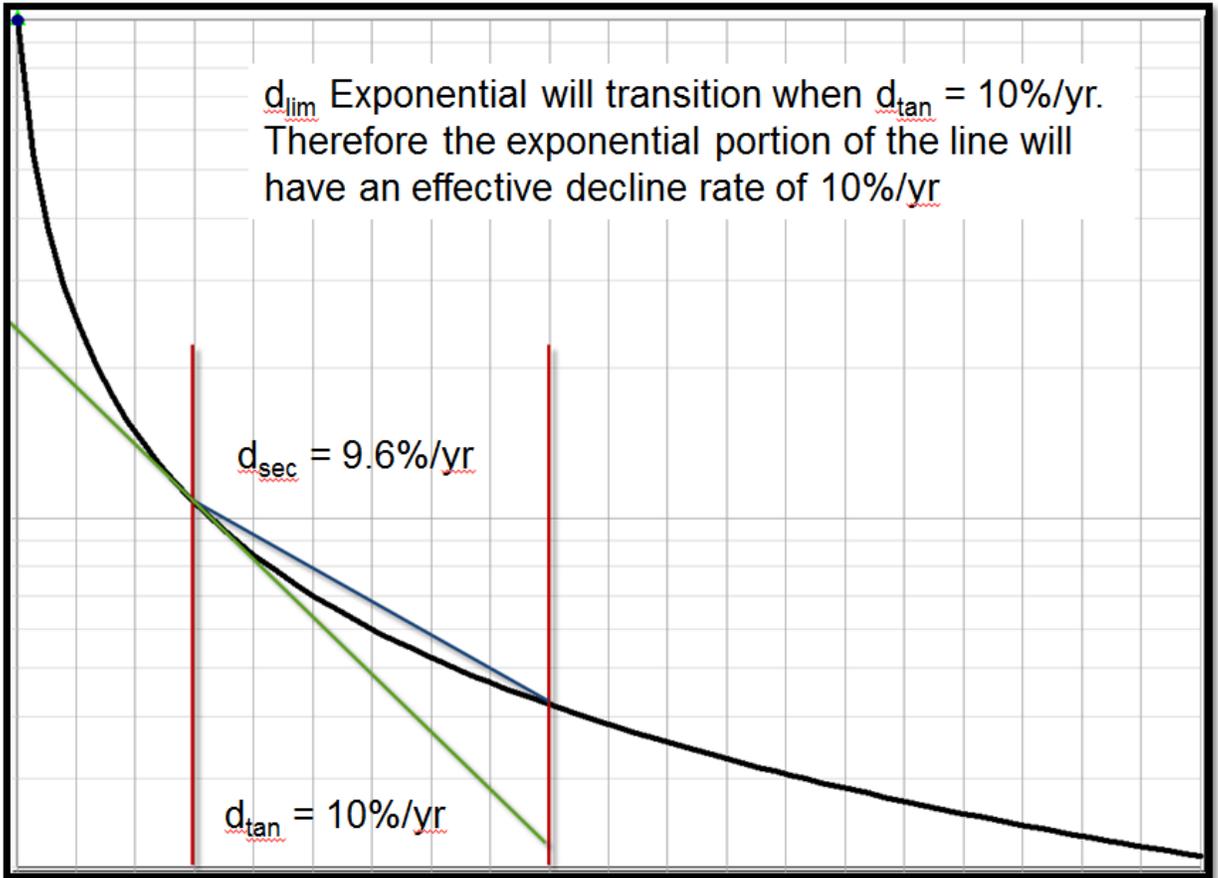

Time-dependent skin

Time-dependent skin accounts for wellbore skin changes with time, which can include a wide range of near-wellbore phenomena in production data, or pressure transient analysis. Some of these phenomena include:

- Pressure-dependent permeability (can also be handled explicitly using the modified pseudo-pressure method)
- Fracture closure over time
- Migration of fines through a fracture
- Condensate drop-out near the well
- Scale / wax deposition near perforations
- Well cleanup (decreasing skin damage)
- Gradual loss of formation integrity near the wellbore


The processes occurring during these phenomena may be very complex and difficult to model analytically. The changing skin model is a suitable approximation because it "lumps" all the contributors of pressure loss into a single term, occurring at a discrete point (and thus, it is independent of the geometrical or fluid-flow complexities).

Time-dependent skin should be thought of as a "tuning parameter" during the history-matching phase of numerical modeling. It is designed to be a catch-all for any changing fluid or reservoir property over time that is *not* accommodated by the analytical model. In order to obtain a unique result, a simultaneous match on flowing and shut-in pressures is almost always required. In other words, flowing data on its own rarely shows a clear trend of changing well productivity (especially, if it is a decreasing damage over time). This is because the effect is usually masked by depletion. However, if shut-in pressures are used in conjunction with flowing data, the changing productivity can be clearly identified, as no "static" reservoir model is able to honor both datasets.

The time-dependent skin has the following inputs:

- s or s_f (skin, or damage skin on fracture face) = the starting value of skin
- t_{sds} (skin damage start date) = the start date of changing skin
- t_{sde} (skin damage end date) = the end date of changing skin
- s_{lim} (skin damage limit) = the limit of changing skin (on and after the end date of changing skin)

For example, if the skin is initially 0.5, and the skin increases on $t_{sds} = 01/01/2015$ linearly to $s_{lim} = 2$ on 31/12/2016, and then the skin remains at 2, the numerical simulator takes into account such skin change as a function of time.

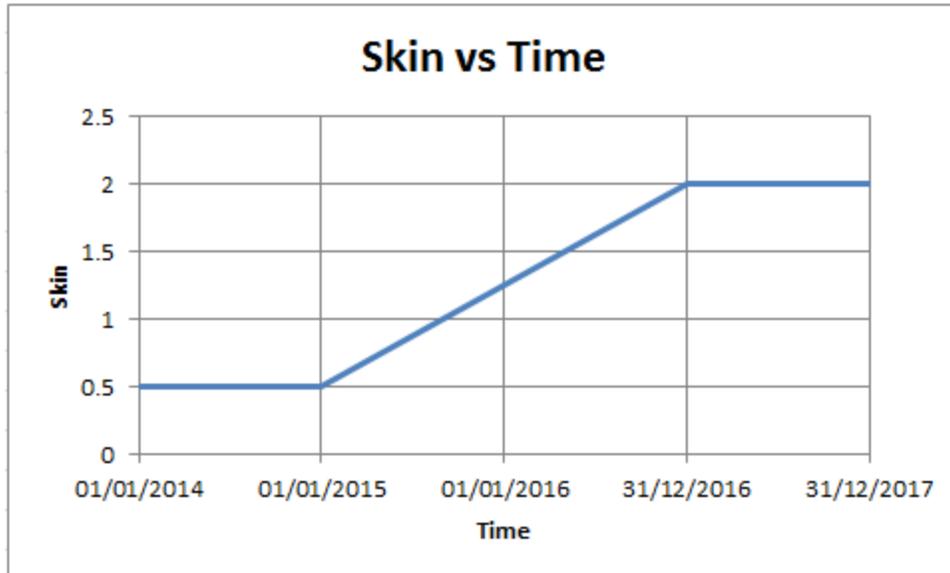

Time to stabilization


Time to stabilization (t_{stab}) is defined as the time it takes for the radius of investigation to reach all of the reservoir boundaries.

$$t_{stab} = \frac{(\text{distance to furthest boundary})^2 \cdot 948 \cdot \phi \mu c_t}{k}$$

Stabilization originated as a practical consideration and reflected the point at which pressure no longer changed significantly with time: that is, it had *stabilized*. With high-permeability reservoirs, this point was not difficult to observe. However, in tight formations, it takes a very long time for pressure to stabilize — often months, or even years. Moreover, except where there is a pressure maintenance mechanism acting on the pool, a true steady state is never achieved and pressure never becomes constant.

Water drive reservoir

Some gas reservoirs may be connected to aquifers that provide pressure support to the gas reservoir as it is depleted. In this case, the pressure decrease in the gas reservoir is balanced by water encroaching into the reservoir. As this happens, the pore volume of gas is decreasing and the average reservoir pressure is maintained. Often this reservoir will show a flat pressure trend after some depletion. An example of this behavior on a p/Z plot is shown below.

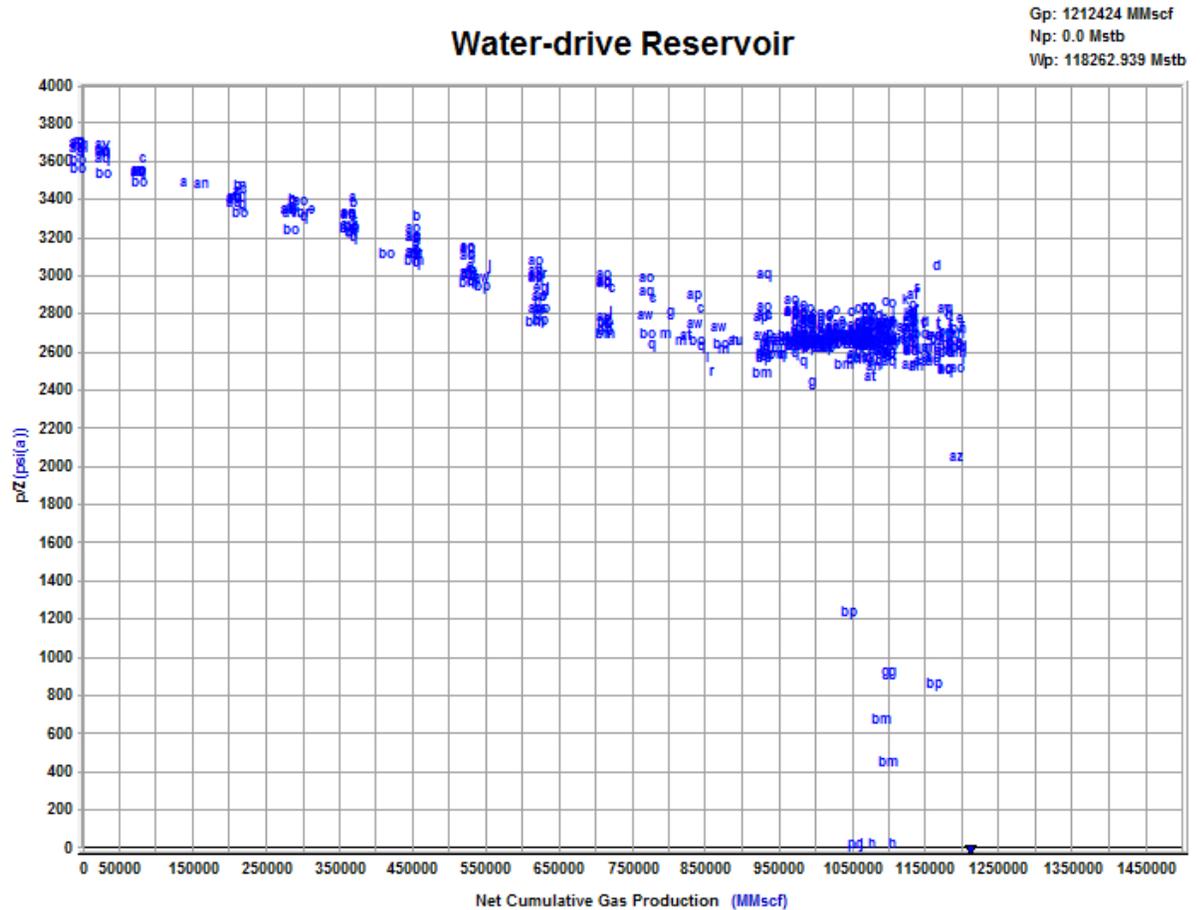

The change in reservoir volume due to net encroached water can be determined from the following equation:

$$\Delta V_{wip} = 5.615(W_e - W_p B_w)$$

To use this in the material balance, the change in pore volume is taken relative to the initial pore volume, shown below.

$$C_{wip} = \frac{5.615 (W_e - W_p B_w)}{B_{gi} G / S_{gi}}$$

When dealing with this equation, the major unknown value to be determined is water encroachment from the aquifer (W_e). Two aquifer models are provided to determine net encroached water: Schilthuis Steady-State Model and Fetkovich Model.

Schilthuis steady-state model

This is the simplest aquifer model and assumes that the rate of water influx is proportional to pressure drawdown. In this model, it is assumed that the aquifer volume is much larger than the gas reservoir and remains at the initial pressure.

$$W_e = K \int_0^t (p_i - p) dt = K \sum_{j=0}^n \left(p_i - \frac{p_j + p_{j-1}}{2} \right) (t_j - t_{j-1})$$

Using this model, the only parameter to solve for is the transfer coefficient (J).

Fetkovich

In the Fetkovich aquifer, the aquifer is assumed to be in pseudo-steady state and depleted according to the material balance equation. In this model, both the aquifer volume and transfer coefficient must be determined. The equations are shown below.

$$W_e = K \int_0^t (p_i - p) dt = K \sum_{j=0}^n \left(p_i - \frac{p_j + p_{j-1}}{2} \right) (t_j - t_{j-1})$$

$$W_{ei} = c_w p_{aqi} V_{aq}$$

$$J = \frac{k h}{141.2 \mu \left(\ln \frac{r_e}{r_o} - \frac{3}{4} \right)} \frac{\theta}{360}$$



While the transfer coefficient is defined, the required inputs to calculate the transfer coefficient are often not known. More commonly the transfer coefficient is determined as part of matching the p/Z plot.



Well linking logic

Well linking logic includes the following:


- General logic
- Harmony import logic
- Well Identifier special cases
- Enerdeq (split by Prod ID)
- Enerdeq special case
 - Enerdeq (do not split by Prod ID)



General well linking logic

Entity Header fields (excluding custom headers) in the Attributes tab are used to determine if incoming well data should be merged with existing wells in the Harmony Enterprise project, or added as new wells. The well linking / merging logic is described below. In this example, API, Prod ID, and Well Name are the Entity Header fields used for linking. However, any of the nine standardized Entity Header fields can be used. You can select between one and nine Entity Header fields using the well linking settings.

Note: In the following figure, null refers to the absence of data in the incoming well and not the existing well(s) in Harmony Enterprise.

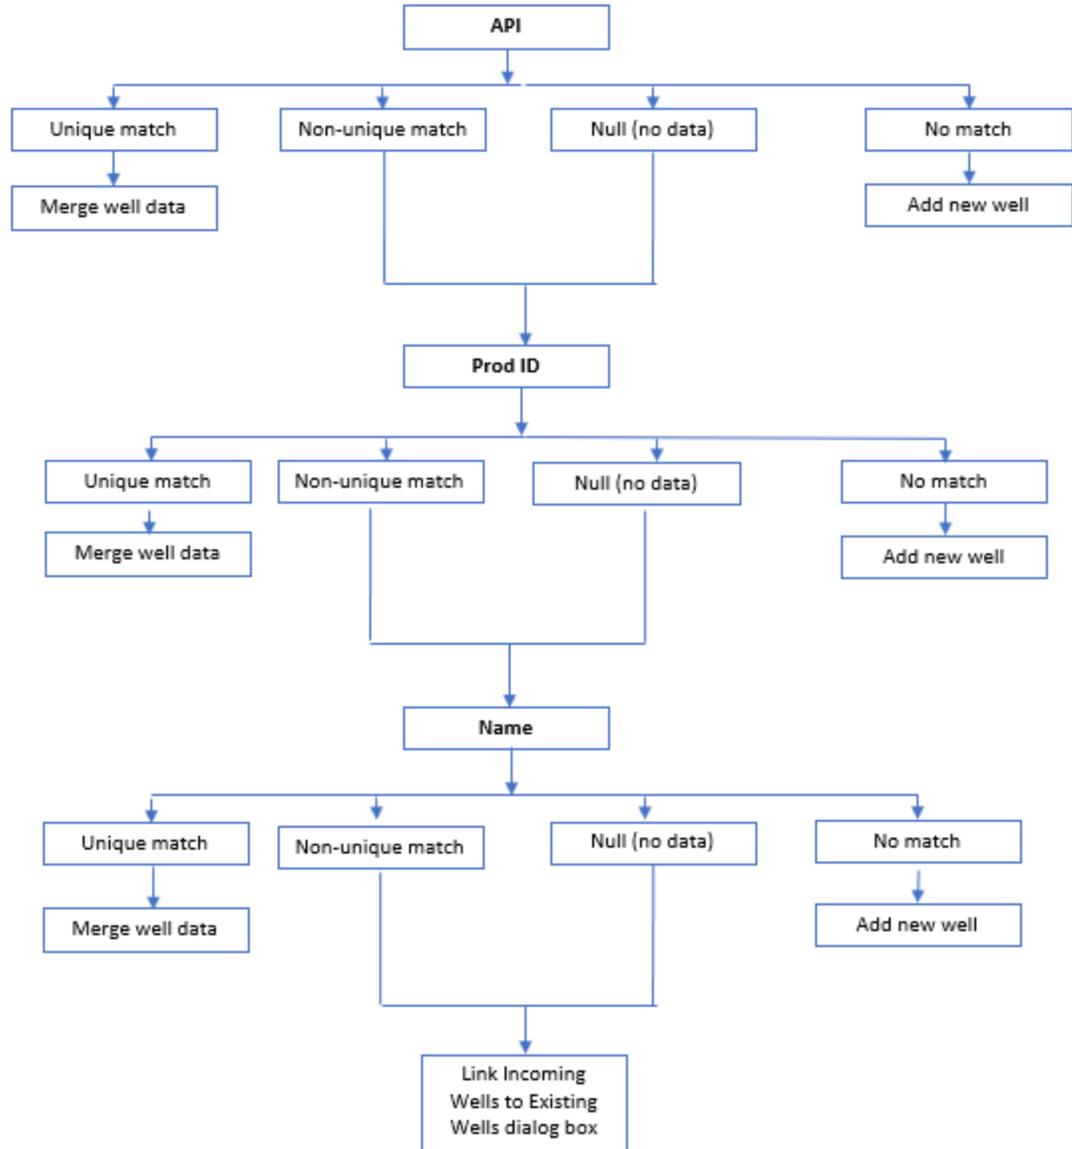

For more information, see the [Link Incoming Wells to Existing Wells dialog box](#).

Exceptions

These are exceptions to the general logic:


- The Entity ID is always compared first, and if there is a match, the well is linked to it
- Meter stations can only match to meter stations, even if all linking criteria indicates otherwise (except for the Entity ID, in which case, the well is linked).
- If the incoming well has an Entity ID (for example, an .hldb file import has it), but the well with the same Entity ID already in the database *has no access because of well-based security*, then an error is displayed (that is, well inaccessible) and the well is skipped.
- If any of the linking attributes have a character limit that is exceeded by an incoming well, the well is skipped.
 - All entity header attributes have finite character limits enforced by the Harmony database, *except* Prod ID, which has no limit.
- Linking attributes are determined as follows:
 - For Production, Static Pressure, and Attribute text imports, attributes are determined as described in Well Identifier special cases.
 - For other attributes, we use the Well Linking settings in the Options dialog box.

Note: Enerdeq follows slightly different logic. For more information, see Enerdeq special case.

Harmony import logic

Import logic from .harmony and .hldb files is as follows:

Note: In the following figure, null refers to the absence of data in the incoming well and not the existing well(s) in Harmony Enterprise.

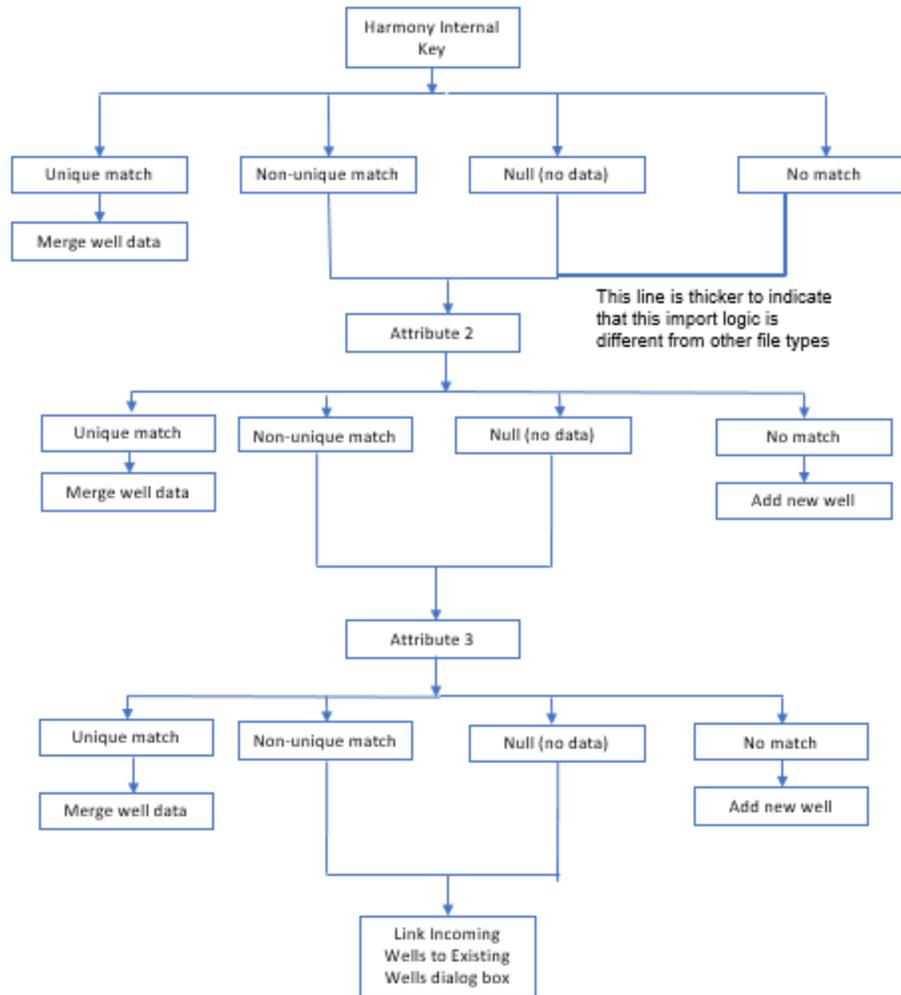

Well Identifier special cases

There are special rules for the Well Identifier with respect to production, static pressure, or attribute text imports.

Production text imports

You can specify Entity Header attributes for well linking. These attributes are also updated in the well, regardless of whether they were used for linking.

Import rules are as follows:

- If no well identifier is specified, the Link Incoming Wells to Existing Wells dialog box is always displayed.
- If a well identifier is specified, we use a combination of the Well Identifier and whichever entity header elements are specified. The Well Identifier gets compared first, then the rest of the available attributes are compared in the order specified in the options dialog box.

Static pressure text imports

These imports only use the Well Identifier.


Attribute text imports

Entity Header attributes are not used for matching. These imports must uniquely match using the Well Identifier.

Enerdeq: split by Prod ID

The logic for Enerdeq that splits by Prod ID is as follows:

Note: In the following figure, null refers to the absence of data in the incoming well and not the existing well(s) in Harmony Enterprise.

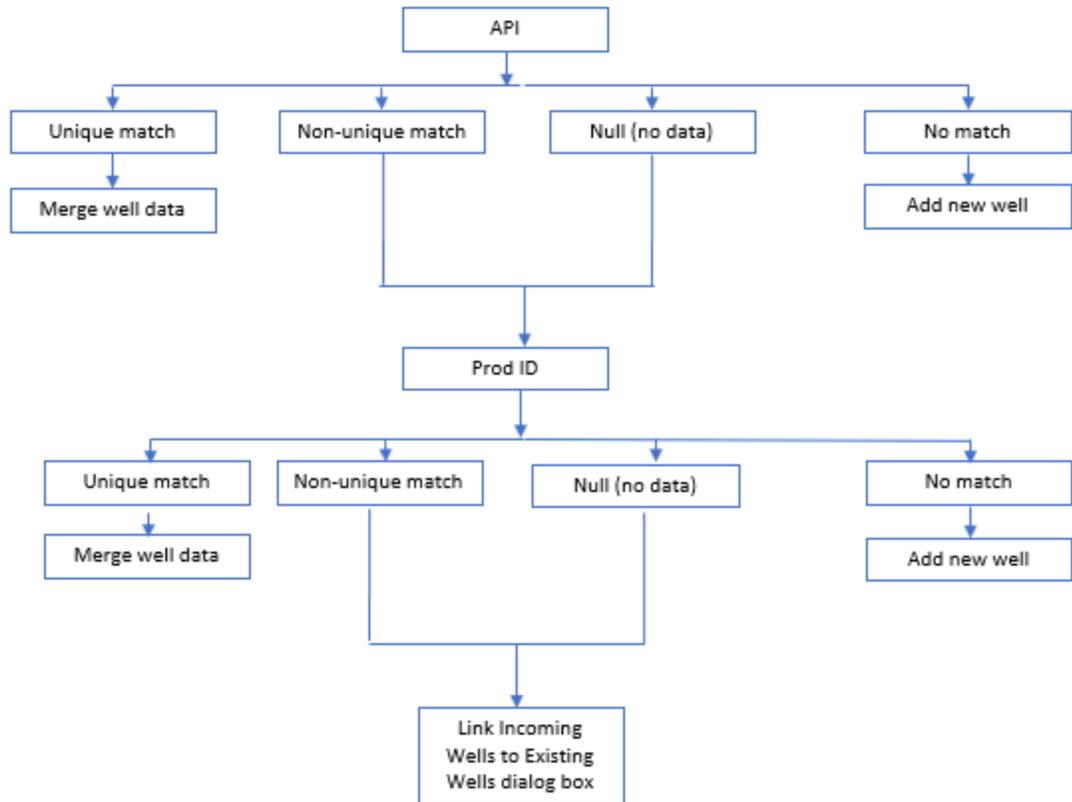

Enerdeq special case


Enerdeq's default attributes for importing are API Number and Prod ID, which cannot be edited.

However, there is a special case when the user decides to *not* split by Prod ID using Enerdeq's options. In this case, the Link Incoming Wells to Existing Wells dialog box opens, even if there are no matches on the Prod ID. For more information, see Enerdeq (do not split by Prod ID).

Enerdeq: not split by Prod ID

If the user decides to not split by Prod ID, the logic for Enerdeq is as follows:

Note: In the following figure, null refers to the absence of data in the incoming well and not the existing well(s) in Harmony Enterprise.

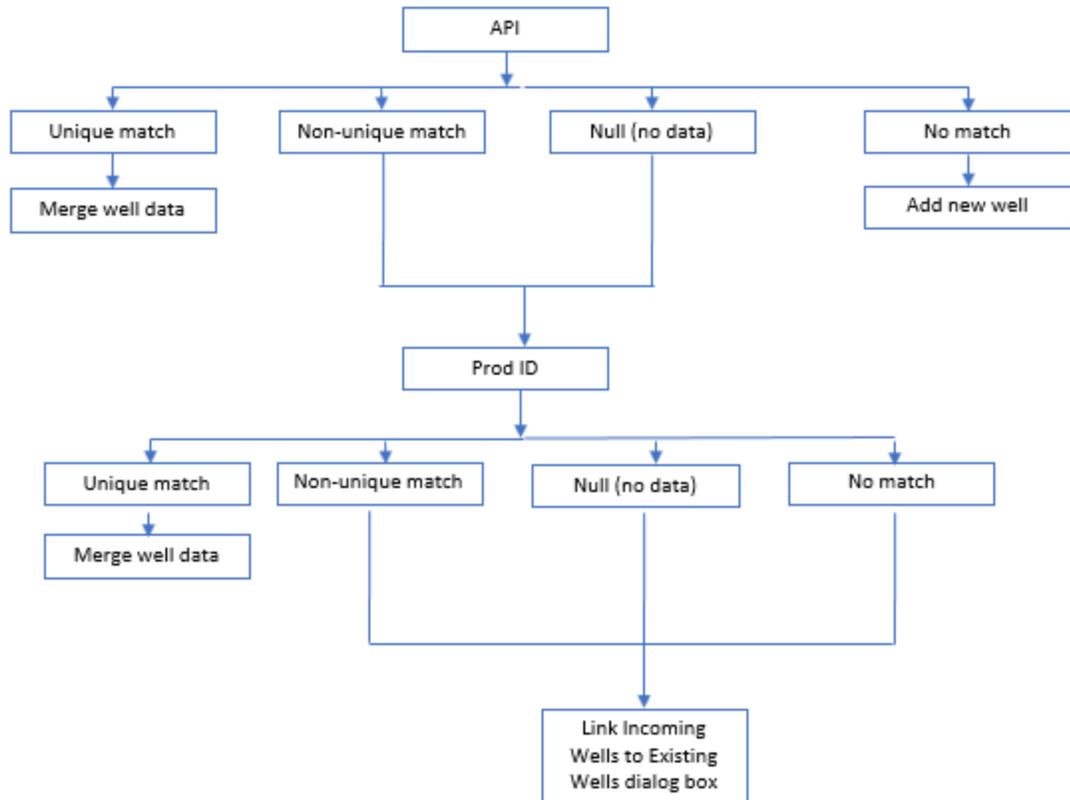

Nomenclature

The table below outlines key nomenclature in Harmony Enterprise.

Variable	Description
a	Nominal (instantaneous) decline rate
a_{elf}	Decline rate at end of linear flow
a_f	Final nominal (instantaneous) decline rate
a_i	Initial nominal (instantaneous) decline rate
a_{lim}	Limiting nominal (instantaneous) decline rate
A	Area
A_c	Cross-sectional area to flow
A_D	Areal extent of reservoir
A_o	Gas-oil pore size distribution index
A_{SRV}	Area of stimulated reservoir volume
A_w	Oil-water pore size distribution index
AOF	Absolute open flow potential
APE	Automatic parameter estimation
API	American Petroleum Institute number
API	Application programming interface
b	Decline exponent
$b_{a,pss}$	Pseudo-steady state constant in the flow equation using material balance pseudo-time (gas)
b_{Dpss}	Dimensionless pseudo-steady state constant
b_{pss}	Pseudo-steady state constant in the flow equation using material balance time (oil)
B	Formation volume factor
B_g	Formation volume factor for gas
B_{gd}	Dry gas formation volume factor, ft ³ /scf, m ³ /m ³
B_{gi}	Formation volume factor for gas at initial reservoir pressure and temperature

Variable	Description
B_{ginj}	Formation volume factor for injected gas
B_o	Formation volume factor for oil, bbl/stb, m ³ /m ³
B_{ob}	Formation volume factor for oil at bubble point
B_{oi}	Formation volume factor for oil at initial reservoir pressure and temperature
B_w	Formation volume factor for water
B_{wi}	Formation volume factor for water at initial reservoir pressure and temperature
B_{winj}	Formation volume factor for injected water
BOE	Barrel of oil equivalent
c	Compressibility
c_d	Relative change in pore volume due to desorption of gas
c_e	Effective compressibility. For oil systems, includes oil, water, and formation compressibilities. For gas systems, includes gas, water, and formation compressibilities.
c_{ep}	Relative change in pore volume due to formation and residual fluid expansion
c_f	Formation / pore compressibility
$c_{f,max}$	Formation compressibility at zero net overburden pressure
c_{fi}	Initial formation compressibility
c_g	Gas compressibility
\bar{c}_g	Average gas compressibility
c_i	Initial compressibility
c_{ma}	Matrix compressibility
c_o	Oil compressibility
c_t	Total compressibility
c_{te}	Total compressibility at average reservoir pressure including net gas compressibility due to water influx
c_{ti}	Total initial compressibility
c_T	Isothermal compressibility
$c_{T,w}$	Isothermal compressibility of water
$c_{T,wf}$	Isothermal compressibility of gas-free water

Variable	Description
$c_{T,wg}$	Isothermal compressibility of gas-saturated water
c_{ti}	Total system compressibility at original reservoir pressure
c_w	Water compressibility
c_{wip}	Relative change in pore volume due to water influx and production
C	Transfer coefficient related to flow capacity of the formation
CCA	Custom calculated attributes
CD	Storage coefficient
CDF	Cumulative distribution function
CDI	Formation and connate water compressibility drive index
CF	Casing flange (reference point for depth measurements)
CGR	Condensate gas ratio, bbl/MMscf, m ³ /103m ³
Ca	Ash content (<u>Langmuir isotherm</u>)
CA	Reservoir shape factor
CaD	Dimensionless apparent wellbore storage
CAh	Shape factor for horizontal wells
CD	Dimensionless wellbore storage
Cg	Gas content
$C_{g,abdn/CO_2}$	Gas content at abandonment pressure or CO ₂ concentration
C_{gi}	Initial gas content
C_G	Input gas volume fraction
C_L	Liquid input volume fraction
C_m	Matrix swelling coefficient
C_o	Gas-oil entry capillary pressure
C_p	Mechanical compliance coefficient
C_{pD}	Dimensionless storage pressure parameter
C_w	Oil-water entry capillary pressure. Moisture content. (<u>Langmuir isotherm</u>)

Variable	Description
Cal rate	Calendar rate — does not account for time on production.
d	Effective decline rate
d _i	Initial effective decline rate
d _{lim}	limiting effective decline rate
D	Turbulence factor
DD %	Drawdown percentage
DDI	Depletion drive index
DLS	Dominion land survey
DSN	Data source name
E	Young's modulus of elasticity
ENERDEQ®	IHS's Energy Information Access & Integration Platform is an information access and integration platform that directly connects you to global energy data
Entity	A well or scenario. Groups can include various entities (that is, wells and scenarios).
EUR	Expected ultimate recovery
E _{avg}	Average error
E _{fw}	Formation expansion factor
E _g	Gas expansion factor
E _{gi}	Gas expansion factor at initial conditions
E _L	In-situ liquid volume fraction (liquid holdup)
E _{L0}	Horizontal liquid holdup
E _{Lθ}	Inclined liquid holdup
E _o	Oil expansion factor
E _t	Total expansion factor
f	Decimal fraction
f _c	Compressibility modifier
F	Reservoir voidage from production

Variable	Description
FDBC	Fekete database connection tool
FMB	Flowing material balance
Forecast	Used to predict future production
FP	Flowing pressure
FSD	Forecast start date
F_{CD}	Dimensionless fracture conductivity
g_g	Geothermal gradient
G	Original gas-in-place
G	Separator gas specific gravity (for fluid properties)
GHV	Gross heating value
GMB	Gas material balance
GOR	Producing gas-oil ratio
GWR	Gas water ratio
G_f	Free gas-in-place
G_{inj}	Cumulative gas injected
G_p	Cumulative gas production
G_{pa}	Additional gas production
$G_{p,n}$	Ultimate recoverable gas
G_{pn}	Cumulative gas production at time 'n'
G_r	Remaining gas
G_T	Cumulative transferred gas volume in a connected reservoir
h	Net pay
h_p	Perforated interval
HCPV	Hydrocarbon pore volume
History matching	History matching is the process of evaluating your model against known production data (rate and pressure vs. time). For example, in an Analytical model, the inputs are measured sandface pressures and rates, along with a set of fixed parameters like permeability, initial reservoir pressure, saturations, etc. Since a model is just a complex equation that relates pressure to rate, then the

Variable	Description
	measured rates can be applied to a given model in order to synthesize a set of sandface pressures (or vice versa). The history-matching process then consists of changing the model parameters until the synthesized data overlaps the measured data to a reasonable degree.
I	Incline rate
ID	Inner diameter
IHDC	Information hub direct connect — the Canadian-specific portion of IHS web services
IPR	Inflow performance relationship
IWIP	Initial water-in-place
j	Time interval / timestep
J	Transfer coefficient
k	Permeability
k_{abs}	Absolute permeability
k_{aq}	Aquifer permeability
k_e	Effective roughness of pipe
k_f	Fracture permeability
k_g	Effective permeability of gas
k_h	Horizontal permeability
k_i	Initial permeability
k_{matrix}	Matrix (outer zone) permeability
k_o	Effective permeability of oil
k_r	Pressure-dependent permeability ratio: $k_r = k / k_i$
k_{res}	Reservoir permeability
k_{rg}	Gas-relative permeability
k_{rgc}	Gas-relative permeability at residual oil saturation
k_{rgcw}	Gas-relative permeability at connate water saturation
k_{rgro}	Gas-relative permeability at residual oil saturation
k_{ro}	Oil-relative permeability

Variable	Description
k_{rocw}	Oil-relative permeability at connate water saturation
k_{rog}	Oil-relative permeability with respect to gas
k_{rogc}	Oil-relative permeability at critical gas saturation
k_{row}	Oil-relative permeability with respect to water
k_{rw}	Water-relative permeability
k_{rwcg}	Water-relative permeability at critical gas saturation
k_{rwro}	Water-relative permeability at residual oil saturation
k_{srv}	<u>SRV</u> (inner zone) permeability
k_v	Vertical permeability
k_w	Effective permeability of water
k_x	Permeability in the x-direction
k_y	Permeability in the y-direction
k_z	Permeability in the z-direction
KB	Kelly bushing (reference point for depth measurements)
L	Horizontal wellbore length
L_D	Dimensionless horizontal wellbore length
L_e	Effective horizontal wellbore length
LRG	Liquid rich gas
m	Slope from the flow equation using material balance time (oil)
m_a	Slope from the flow equation using material balance pseudo-time (gas)
M	Mobility ratio (analytical models) (water-drive typecurves)
MD	Measured depth (CF or KB)
MPP	Mid-point of perforations
M_{aq}	Aquifer mobility
M_o	Molecular weight of stock tank liquid
M_{res}	Reservoir mobility
n	Moles of gas (<u>ideal gas law equation</u>)

Variable	Description
n_f	Number of fractures
n_g	Gas exponent
n_{og}	Oil-gas system exponent
n_{ow}	Oil-water system exponent
n_w	Water exponent
N	Original oil-in-place
NAD 27	North American Datum, created in 1927
NAD 83	North American Datum, modified in 1983
NGL	Natural gas liquids
NTS	National topographic (map numbering) system
N_p	Cumulative oil production
$N_{p,n}$	Ultimate recoverable oil
N_{VL}	Liquid velocity number
ODBC	Open database connectivity
OCIP	Original condensate-in-place, Mstb, 103m ³
OCIP _{SRV}	Original condensate-in-place in a stimulated region, Mstb, 103m ³
OD	Outer diameter
ODBC	Open database compliant
OFIP	Original fluid-in-place
OGIP	Original gas-in-place, MMscf, 106m ³
OGIP _A	Original adsorbed gas-in-place, MMscf, 106m ³
OGIPF	Original free gas-in-place, MMscf, 106m ³
OGIP _{SRV}	Original gas-in-place in a stimulated region, MMscf, 106m ³
OMB	Oil material balance
OOIP	Original oil-in-place, Mstb, 103m ³
OOIP _{SRV}	Original oil-in-place in a stimulated region, Mstb, 103m ³
OWIP	Original water-in-place, Mstb, 103m ³

Variable	Description
$OWIP_{SRV}$	Original water-in-place in a stimulated region, Mstb, 103m ³
Op Rate	Operated rate — accounts for time on production.
p	Pressure
\bar{p}	Average reservoir pressure
P_{ab}	Abandonment pressure
p_{air}	Air pressure
P_{aq}	Aquifer pressure
P_{aqi}	Initial aquifer pressure
P_{bp}	Bubble point pressure, psi(a), kPa(a)
p_c	Critical pressure
$(pce)_{go}$	Gas-oil pore entry capillary pressure, psi(a), kPa(a)
$(pce)_{ow}$	Oil-water pore entry capillary pressure, psi(a), kPa(a)
P_{cgo}	Gas-oil system capillary pressure, psi(a), kPa(a)
P_{cow}	Oil-water system capillary pressure, psi(a), kPa(a)
P_d	Desorption pressure
P_{dew}	Dew point pressure, psi(a), kPa(a)
P_D	Dimensionless pressure
P_{Di}	Dimensionless pressure integral
P_{Did}	Dimensionless pressure integral derivative
P_e	Bulk overburden pressure
P_{flow}	Specified flowing pressure
P_{grd}	Overburden pressure gradient
p_i	Initial reservoir pressure
p_j	Pressure at time "j"
P_L	Langmuir pressure
P_{max}	Maximum pressure
P_{min}	Minimum pressure

Variable	Description
p_n	Net overburden pressure
p_{ni}	Initial net overburden pressure
p_o	Oil pressure
p_p	Pseudo-pressure
\bar{p}_p	Average pseudo-pressure
p_{pab}	Abandonment pseudo-pressure
\bar{p}_{pab}	Average abandonment pseudo-pressure
p_{pi}	Initial pseudo-pressure
p_{pwf}	Wellbore flowing pseudo-pressure
p_r	Reduced pressure
\bar{p}_R	Current reservoir pressure
p_{sp}	Separator pressure
p_{sc}	Pressure at standard conditions (14.65 psia, 101.0 kPa(a))
p_w	Water pressure
p_{wf}	Sandface flowing pressure
p_{wff}	Sandface forecast pressure
p_{wh}	Wellhead flowing pressure
p_ϵ	Reservoir pressure at 50% matrix strain
P10	For each time interval, the P10 point is determined as the value for which 10% of the data points are higher. The production volume for each period is based on the calculated rate, and the cumulative production track is calculated by summing the calculated volumes. The P10 curve can be considered a highly optimistic prediction.
P50	For each time interval, the P50 point is determined as the value for which 50% of the data points are higher. The production volume for each period is based on the calculated rate, and the cumulative production track is calculated by summing the calculated volumes.
P90	For each time interval, the P90 point is determined as the value for which 90% of the data points are higher. The production volume for each period is based on the calculated rate, and the cumulative production track is calculated by summing the calculated volumes. A line is drawn through each P90 point to obtain the curve. The P90 curve is often considered as a conservative estim-

Variable	Description
	ate of reserves.
PI	Productivity index
PVT	Pressure volume temperature
P_c	Capillary pressure SPE recommends P_c (P being the secondary symbol for pressure) to denote capillary pressure, whereas p_c is used to denote critical pressure.
P_{OP}	Operating pressure
P_{RES}	Reservoir pressure
P_{SF}	Sandface pressure
q	Rate
\bar{q}	Average rate
q_{ab}	Abandonment rate
q_{CRIT}	Critical flow rate
q_D	Dimensionless rate
q_{Dd}	Dimensionless decline rate
q_{Dde}	Dimensionless decline rate accounting for total pool production
$q_{Dd, integral}$	Dimensionless rate integral
q_{elf}	Rate at end of linear flow
q_f	Final rate (abandonment rate) $q_f = (\text{number of wells}) * (q_{Gas} / 6 + q_{Oil})$;
q_g	Instantaneous gas rate
$(q_g)_f$	For <u>FMB</u> , <u>URM</u> , and <u>Typecurve</u> : The final abandonment rate for gas
q_{ginj}	Injected gas rate
q_i	Initial rate
$q_{integral}$	Rate integral
q_j	Rate at time "j"
q_{MAX}	Maximum oil rate
q_o	Instantaneous oil rate

Variable	Description
$(q_o)_f$	For <u>FMB</u> , <u>URM</u> , and <u>Typecurve</u> : The final abandonment rate for oil
q_{OIL}	Oil rate
q_{OR}	Operating rate
q_s	Gas flow rate from separator
q_{tot}	Pool total production rate
q_w	Instantaneous water rate
q_{we}	Rate of water influx
q_{winj}	Rate of water injection
Q	Cumulative production
Q_D	Dimensionless cumulative production
Q_{DA}	Area-based dimensionless cumulative production
Q_{Dd}	Dimensionless cumulative decline production
Q_f	Final cumulative production
$Q_{g,dry}$	Cumulative surface gas production
$Q_{g,wet}$	Cumulative well stream gas produced at the sandface
Q_i	Initial cumulative production
Q_m	Modified cumulative production
Q_n	Normalized cumulative production
Q_{tot}	Pool cumulative production
r	Radius
r_{aq}	Aquifer exterior radius
r_e	Reservoir effective radius
r_{eD}	Dimensionless effective radius
r_o	Reservoir outer boundary radius (Water-drive Typecurves and Models) Distance to observation well from active well, for cylindrical reservoirs
r_w	Wellbore radius
r_{wa}	Apparent wellbore radius

Variable	Description
r_{wD}	Dimensionless wellbore radius
r_{we}	Effective wellbore radius
R	Ideal gas law constant
RC	Rate vs cumulative production
RF	Recovery factor
RR	Remaining recoverable
RT	Rate vs time
R_p	Solution gas-oil ratio based on cumulative oil and gas production
R_s	Solution gas-oil ratio, scf/bbl, m3/m3
R_{sb}	Solution gas-oil ratio at bubble point
R_{si}	Initial solution gas-oil ratio
R_{sr}	Reduced solution gas-oil ratio
R_{sw}	Gas solubility in water
R_v	Vaporized oil ratio, bbl/MMscf, m3/103m3
s	Skin
s_d	Near-wellbore skin damage
s_{dp}	Interporosity skin
s_f	Fracture face skin
S	Salinity of water
Sandface C	Sandface deliverability coefficient
Sandface/Wellhead n	Turbulence factor
SDI	Segregation (gas cap) Drive Index
SI	International system of units. For more information, see http://-dictionary.reference.com/browse/si+units?s=t
SL	Surface losses
SPE	Society of petroleum engineers
SRV	Stimulated reservoir volume

Variable	Description
S_g	Gas saturation
S_{gc}	Critical gas saturation
S_{gi}	Initial gas saturation
S_{gn}	Normalized gas saturation
S_{iw}	Irreducible water saturation (Relative Permeability Correlations)
S_o	Oil saturation
S_{oi}	Initial oil saturation
S_{on}	Normalized oil saturation
S_{or}	Residual oil saturation
S_{org}	Residual oil saturation to gas
S_{orw}	Residual oil saturation to water
S_w	Water saturation
S_{wc}	Critical water saturation (<u>capillary pressure</u>)
S_{wc}	Connate water saturation (<u>relative permeability</u>)
S_{wi}	Initial water saturation
S_{wirr}	Irreducible water saturation (<u>capillary correlations</u>)
S_{wn}	Normalized water saturation
\bar{S}_w	Average water saturation
t	Time
t_a	Pseudo-time
t_c	Material balance time
t_{ca}	Material balance pseudo-time
t_{cae}	Total material balance pseudo-time for gas
t_{ce}	Total material balance pseudo-time for oil
t_{co}	Length of the first time period in material balance time
t_D	Dimensionless time
t_{DA}	Area-based dimensionless time

Variable	Description
t_{Dd}	Dimensionless decline time
t_{Dde}	Dimensionless decline time accounting for total pool production
t_{Dxf}	Dimensionless time based on fracture half-length (xf)
t_{Dye}	Dimensionless time based on reservoir width (Ye)
t_{elf}	Time at end of linear flow
t_f	Time at start of forecast date
t_{flow}	Specified flow time
t_j	Time at the "jth" time period / timestep
t_{lim}	Limiting time
$t_{shut-in}$	Specified shut-in time
t_{stab}	Time to stabilization
T	Temperature
TVD	True vertical depth (CF or KB)
TPC	Tubing performance curve
T_c	Critical temperature
T_f	Formation temperature
T_i	Initial temperature
T_{pp}	Pour point temperature
T_r	Reduced temperature
T_{sp}	Separator temperature
T_{sc}	Temperature at standard conditions (60oF/15oC)
T_{sp}	Separator temperature
v_g	Gas velocity
v_L	In-situ liquid velocity
v_m	Mixture velocity
v_{sg}	Superficial gas velocity
v_{sl}	Superficial liquid velocity

Variable	Description
V	Volume
VR	Voidage replacement
VRR	Voidage replacement ratio
V _{ACT}	Actual velocity
V _{aq}	Aquifer volume
V _{CRIT}	Critical velocity
V _{ERO}	Erosional velocity
V _{HCP}	Hydrocarbon pore volume
V _i	Initial volume
V _L	Langmuir volume
V _{Li}	Initial Langmuir volume
V _p	Pore volume
V _R	Volatile oil ratio Rock volume
V _{sc}	Volume at standard conditions
V _T	Total volume
V _w	Wellbore volume
w _f	Fracture width
WDI	Water drive index
WGR	Water gas ratio
WGS 84	World Geodetic System, modified in 1984
WOR	Water-oil ratio
W _e	Water encroachment from aquifer
W _{ei}	Initial water encroachment from aquifer
W _{inj}	Cumulative water injection
W _p	Cumulative water production
x _e	Reservoir length
x _{eD}	Dimensionless reservoir length

Variable	Description
x_f	Fracture half-length
x_i	Half <u>SRV</u> width, or the distance from the fracture to the permeability boundary
x_w	Active well location in the x-direction
y	Distance of investigation at time t
y_e	Reservoir width
y_w	Active well location in the y-direction
y_e/y_w	Ratio of reservoir width to well location in the y-direction
Z	Gas compressibility factor
Z^{**}	Modified gas compressibility factor
\bar{Z}	Average gas compressibility factor
Z_{ab}	Compressibility factor at reservoir abandonment pressure
Z_i	Compressibility factor at initial pressure and temperature
Z_i^{**}	Modified compressibility factor at initial pressure and temperature
z_o	Location of observation well from top of zone (z-direction) for rectangular reservoirs
Z_{sc}	Compressibility factor at standard conditions
z_w	Well location in the z-direction (only applicable to horizontal wells)
α	Biot's coefficient (<u>Geomechanical Reservoir Models - Dobrynin Correlation</u>) Separation factor / selectivity ratio (<u>Langmuir Isotherm</u>)
β	Square root of the anisotropic ratio kh/kv
β_D	Ratio of total pool production to individual well production
γ	Permeability modulus (<u>Geomechanical Reservoir Models - Yilmaz & Nur Pressure-Dependent Permeability Correlation</u>) Dimensionless correlation factor (<u>Geomechanical Reservoir Models - Dobrynin Pressure-Dependent Permeability Correlation</u>) Euler's constant = 0.57721
γ_{API}	Specific gravity of liquid hydrocarbons / condensate in oAPI
γ_g	Specific gravity of gas
$\gamma_{g(psp)}$	Specific gravity of gas at separator pressure conditions
γ_o	Specific gravity of liquid hydrocarbons / condensate

Variable	Description
γ_t	Recombined gas gravity
γ_w	Specific gravity of water
Δk	Change in permeability
Δp_f	Change in pressure due to friction
Δp_{HH}	Change in pressure due to hydrostatic head
ΔQ	The difference between $Q_{\text{PRODUCTION}} - Q_{\text{FORECAST}}$ (applies to the <u>Monitor tab</u>)
Δt	Forecast duration
ΔV_d	Change in reservoir volume due to desorption of gas
ΔV_{ep}	Change in reservoir volume due to formation and residual fluid expansion
ΔV_p	Reduction in hydrocarbon pore volume
ΔV_w	Expansion of initial water volume
ΔV_{wip}	Change in reservoir volume due to water influx and production
ΔX_o	Location of observation well from active well in the x-direction, for rectangular reservoirs
ΔY_o	Location of observation well from active well in the y-direction, for rectangular reservoirs
ΔZ	Change in elevation
ϵ	Tensile strain
ϵ_{exp}	Net strain between overburden stress effect and matrix shrinkage as measured experimentally
ϵ_L	Langmuir strain
θ	Angle of inclination
θ_r	$[(T + 459.67) / 459.67] =$ relative temperature
λ	Interporosity flow coefficient Pore size distribution index (<u>Capillary Correlations - Brooks / Corey</u>)
λ_{go}	Gas-oil pore size distribution index
λ_{ow}	Oil-water pore size distribution index
μ	Viscosity of primary fluid (gas / oil / water)

Variable	Description
$\bar{\mu}$	Average viscosity
μ_{aq}	Aquifer viscosity
μ_g	Gas viscosity, cP, mPa.s
$\bar{\mu}_g$	Viscosity of gas at average pressure
μ_i	Viscosity at initial reservoir pressure
μ_L	Liquid viscosity
μ_m	Mixture viscosity
μ_{NS}	No-slip viscosity
μ_o	Oil viscosity, cP, mPa.s
μ_{ob}	Oil viscosity at bubble point
μ_{od}	Viscosity of dead oil
μ_{os}	Viscosity of saturated oil
μ_{res}	Reservoir viscosity
μ_w	Water viscosity, cP, mPa.s
ν	Poisson's ratio
ξ	Reduced inverse viscosity
ρ	Density
ρ_a	Apparent density of surface gas
ρ_{air}	Air density
ρ_{bs}	Pseudo-liquid density at reservoir pressure and standard temperature
ρ_B	Bulk density
ρ_G	Gas density
ρ_L	Liquid density
ρ_m	Mixture density
ρ_{mol}	Molar density
ρ_{NS}	No-slip density
ρ_o	Oil density

Variable	Description
ρ_{ob}	Oil density at bubble point
ρ_{oR}	Oil density at reservoir conditions
ρ_{po}	Pseudo-liquid density at standard conditions
ρ_{st}	Stock tank oil density
ρ_w	Water density
σ	Interfacial tension (<u>capillary pressure</u>)
σ_i	Effective horizontal stress at initial reservoir pressure
ϕ	Porosity
ϕ_i	Initial porosity
ϕ_t	Total porosity
Ψ	Pseudo-pressure
$\bar{\Psi}$	Pseudo-pressure at average pressure
Ψ_i	Pseudo-pressure at initial reservoir pressure
Ψ_{wf}	Pseudo-pressure at sandface flowing pressure
ω	Storativity ratio

References

Adewumi, Michael. "Module 19: Properties of Natural Gas and Condensates (II)." PNG 520: Phase Relations in Reservoir Engineering. The Pennsylvania State University, 26 Aug 2008. Web. 30 Dec 2010. <https://www.e-education.psu.edu/png520/resources/l1.html>

Agarwal, Binayak, Jai Nath Ram, and R.N. Bhattacharya. "Determining Waterflood Effectiveness." World Oil Online November 2006 (Vol. 227 No. 11): Web. 24 Feb 2011. <http://www.worldoil.com/Article.aspx?id=37148>

Agarwal, Ram G., David C. Gardner, Stanley W. Kleinsteiber, and Del D. Fussell. "Analyzing Well Production Data Using Combined Type-Curve and Decline-Curve Analysis Concepts." SPE Paper 57916 Revised for Publication from SPE Paper 49222 and Prepared for Presentation at the 1998 SPE Annual Technical Conference and Exhibition. New Orleans, LA. 27-30 September, 1998.

Al-Hussainy, R., and H.J. Ramey. "Application of Real Gas Flow Theory to Well Testing and Deliverability Forecasting." Journal of Petroleum Technology. 18.5 (1966): pp. 637-42.

Al-Hussainy, R., H.J. Ramey, Jr., and P.B. Crawford, "The Flow of Real Gases through Porous Media." Journal of Petroleum Technology. pp. 625 - 636, May 1966.

Al-Marhoun, Muhammed Ali. "Pressure-Volume-Temperature Correlations for Saudi Crude Oils" SPE Paper 13718. Prepared for presentation at the 1985 SPE Middle East Oil Technical Conference and Exhibition. Bahrain, March 11-14, 1985.

American Petroleum Institute. "Subsurface Controlled Subsurface Safety Valve Sizing Computer Program." API Manual 14B. 2nd Ed. API, 1978.

Amini, S., D. Ilk, and T.A. Blasingame. "Evaluation of the Elliptical Flow Period for Hydraulically-Fractured Wells in Tight Gas Sands - Theoretical Aspects and Practical Considerations." SPE Paper 106308 Prepared for Presentation at the 2007 SPE Hydraulic Fracturing Technology Conference. College Station, TX. 29-31 January, 2007.

Anderson, D.M. and Mattar, L. "An Improved Pseudo-Time for Gas Reservoirs with Significant Transient Flow." Paper 2005-114 presented at the Canadian International Petroleum Conference, Calgary, Alberta, 7-9 June, 2005.

Anderson, D.M., G.W.J. Stotts, L. Mattar, D. Ilk, and T.A. Blasingame. "Production Data Analysis - Challenges, Pitfalls, Diagnostics." SPE Paper 102048 Prepared for Presentation at the 2006 SPE Annual Technical Conference and Exhibition. San Antonio, TX. 24-27 September, 2006.

Arnold, Ken, and Maurice Stewart. *Surface Production Operations: Design of Oil-Handling Systems and Facilities*. 2nd Ed. Vol. 1. Gulf Professional Publishing, 1998.

Arps, J.J. "Analysis of Decline Curves." *AIME Transactions*. 160. (1945): p. 228.

Arps, J.J. "Estimation of Primary Oil Reserves." *AIME Transactions*. 207. (1956): pp. 182-91.

Aziz, K., and L. Durlofsky. "Notes on Reservoir Simulation." Stanford University. August 2004.

Aziz, Khalid, and Antonin Settari. *Petroleum Reservoir Simulation*. London: Applied Science Publishers Ltd., 1979. pp. 33-38.

Babu, D.K. and Odeh, A.S. "Productivity of a Horizontal Well." *SPE Res Eng* 4 (4) (1989): 417-421. SPE paper 18298.

Bailey, William. "Optimized Hyperbolic Decline Curve Analysis of Gas Wells." *Oil & Gas Journal*. Feb 15 (1982): pp. 116-18.

Baker, L.E. "Three-Phase Relative Permeability Correlations." SPE Paper 17369 Prepared for Presentation at the SPE/DOE Enhanced Oil Recovery Symposium. Tulsa, OK. 17-20 April, 1988.

Beggs, H.D. "J. Flow in Annuli" *Production Optimization Using Nodal™ Analysis* (2nd edition). pp 90. May 2003.

Beggs, H.D. and J.P. Brill. "A Study of Two-Phase Flow in Inclined Pipes." *Journal of Petroleum Technology*. 25.5 (1973): pp. 607-17.

Beggs, H.D. and J.R. Robinson. "Estimating the Viscosity of Crude Oil Systems," *JPT* 1140-41, September 1975.

Behmanesh, H., Hamdi, H. and Clarkson, C. R. 2015. Production Data Analysis of Liquid Rich Shale Gas Condensate Reservoirs. *Journal of Natural Gas Science and Engineering* 22: 22–34. 10.1016/j.jngse.2014.11.005.

Behmanesh, H., 2016, Rate-Transient Analysis of Tight Gas Condensate and Black Oil Wells Exhibiting Two-phase Flow, Ph.D. thesis, University of Calgary.

Behmanesh, H., Hamdi, H., Clarkson, C.R. 2017. Production data analysis of gas condensate reservoirs using two-phase viscosity and two-phase compressibility, *Journal of Natural Gas Science & Engineering*, doi: 10.1016/j.jngse.2017.07.035.

Behmanesh, H., Hamdi, H. and Clarkson, C.R. "Analysis of Transient Linear Flow Associated with Hydraulically-Fractured Tight Oil Wells Exhibiting Multi-Phase Flow." SPE Paper 172928 Prepared for Presentation at the 2015 SPE Middle East Unconventional Resources Conference and Exhibition, Muscat, Oman. 26-28 January, 2015.

Behmanesh, H., Mattar, L., Thompson, J. M., Anderson D. M., Nakaska, D. W. and Clarkson, C. R. 2018. Treatment of Rate-Transient Analysis During Boundary-Dominated Flow. SPE Journal, SPE 189967-PA doi:10.2118/189967-PA

Blasingame, T.A., A.D. Perego, and J.A. Rushing. "Estimating Reserves Using the Arps Hyperbolic Rate-Time Relation: Theory, Practice and Pitfalls." CIM Paper 2008-109 Presented at the Canadian International Petroleum Conference/SPE Gas Technology Symposium 2008 Joint Conference (the Petroleum Society's 59th Annual Technical Meeting). Calgary, AB. 17-19 June, 2008.

Blasingame, T.A., and W.J. Lee. "Variable-Rate Reservoir Limits Testing." SPE Paper 15028 Prepared for Presentation at the Permian Basin Oil and Gas Recovery Conference. Midland, TX. 13-15 March, 1986.

Blasingame, T.A., J.L. Johnston, and W.J. Lee. "Type-Curve Analysis Using the Pressure Integral Method." SPE Paper 18799 Prepared for Presentation at the SPE California Regional Meeting. Bakersfield, CA. 5-7 April, 1989.

Blasingame, T.A., T.L. McCray, and W.J. Lee. "Decline Curve Analysis for Variable Pressure Drop/Variable Flowrate Systems." SPE Paper 21513 Prepared for Presentation at the SPE Gas Technology Symposium. Houston, TX. 23-24 January, 1991.

Bondy, Frederick; Mesagno, Jack; Schwartz, Monte, "Steam Tracing." Encyclopedia of Chemical Processing and Design. Ed. John J. McKetta. CRC Press, 1995.

Brown, M., Ozkan, E., Raghavan, R. and Kazemi, H. "Practical Solutions for Pressure Transient Responses of Fractured Horizontal Wells in Unconventional Reservoirs." SPE Paper 125043 prepared for Presentation at the 2009 SPE Annual Technical Conference and Exhibition, New Orleans, Louisiana. October 2009.

Coleman, Steve B., Hartley B. Clay, David G. McCurdy, and Lee H. Norris III. "A New Look at Predicting Gas-Well Load-Up." Journal of Petroleum Technology. 43.3 (1991): pp. 329-33.

Camacho-v, R. G., and Raghavan R. 1989. Performance of wells in solution-gas-drive reservoirs. SPE Form Eval 4.(4) 611-620. SPE-16745-PA. DOI: 10.2118/16745-PA.

Dake, L.P. Fundamentals of Reservoir Engineering. 2009 Reprint. Oxford, UK: Elsevier, 1978. pp. 303-41.

De Ghetto, Giambattista, Francesco Paone, and Marco Villa. "Pressure-Volume-Temperature Correlations for Heavy and Extra Heavy Oils." SPE Paper 30316-MS Prepared for Presentation at the International Heavy Oil Symposium. Calgary, AB. 19-21 June, 1995.

Dean, Lisa. "Reservoir Engineering for Geologists: Part 3 - Volumetric Estimation." Reservoir. 11 (2007): pp. 20-23.

Dobrynin, Valery M. "Effect of Overburden Pressure on Some Properties of Sandstones." SPE Journal. 2.4 (1962): pp. 360-66.

Doublet, L.E., P.K. Pande, T.J. McCollum, and T.A. Blasingame. "Decline Curve Analysis Using Type Curves - Analysis of Oil Well Production Data Using Material Balance Time: Application to Field Cases." SPE Paper 28688 Prepared for Presentation at the 1994 Petroleum Conference and Exhibition of Mexico. Veracruz, Mexico. 10-13 October, 1994.

Duong, A.N. "A New Approach for Decline-Curve Analysis." SPE Paper 18859 Prepared for Presentation at the SPE Production Operations Symposium. Oklahoma City, OK. 13-14 March, 1989.

Economides, Michael J., A. Daniel Hill, and Christine Ehlig-Economides. Petroleum Production Systems. Prentice Hall, 1994.

Edwardson, M.J., H.M. Girner, H.R. Parkinson, C.D. Williams, and C.S. Matthews. "Calculation of Formation Temperature Disturbances Caused by Mud Circulation." SPE Paper 124 Prepared for Presentation at the 36th Annual Fall Meeting of SPE. Dallas, TX. 8-11 October, 1961.

Energy Resources Conservation Board (ERCB). Directive 034: Gas Well Testing, Theory and Practice. 3rd Ed, 1975. Web. 24 Feb 2011.

<http://www.ercb.ca/directives/Directive034-1975.pdf>

Energy Resources Conservation Board (ERCB). Directive 059: Well Drilling and Completion Data Filing Requirements. 2007. Web. 24 Feb 2011. http://www.ercb.ca/directives/Directive059_2012.pdf

Fair, Jr., Walter B. "Pressure Buildup Analysis With wellbore Phase Redistribution." SPE Journal. 21.2 (1981): pp. 259-70.

Fayers, F.J., and J.D. Matthews. "Evaluation of Normalized Stone's Methods for Estimating Three-Phase Relative Permeabilities." SPE Journal. 24.2 (1984): pp. 224-32.

Fetkovich, M.J. "Decline Curve Analysis Using Type Curves." Journal of Petroleum Technology. 32.6 (1980): p. 1065.

Fetkovich, M.J., E.J. Fetkovich, and M.D. Fetkovich. "Useful Concepts for Decline Curve Forecasting, Reserve Estimation, and Analysis." SPE Reservoir Engineering. 11.1 (1996): p. 13.

Fetkovich, M.J., M.E. Vienot, M.D. Bradley, and U.G. Kiesow. "Decline Curve Analysis Using Type Curves: Case Histories." SPE Formation Evaluation. 2.4 (1987): p. 637.

Fraim, M.L., and R.A. Wattenbarger. "Gas Reservoir Decline-Curve Analysis Using Type Curves With Real Gas Pseudopressure and Normalized Time." SPE Formation Evaluation. 2.4 (1987): p. 671.

Fraim, M.L., and W.J. Lee. "Determination of Formation Properties From Long-Term Gas Well Production Affected by Non-Darcy Flow." SPE Paper 16934 Prepared for Presentation at the SPE Annual Technical Conference and Exhibition. Dallas, TX. 27-30 September, 1987.

Gentry, R.W., and A.W. McCray. "The Effect of Reservoir and Fluid Properties on Production Decline Curves." Journal of Petroleum Technology. 30.9 (1978): pp. 1327-41.

Glaso, Oistein. "Generalized Pressure-Volume-Temperature Correlations." Journal of Petroleum Technology. 32.5 (May 1980): pp 785-95.

Gringarten, A. C. "Interpretation of Tests in Fissured and Multilayered Reservoirs with Double-Porosity Behaviour: Theory and Practice." SPE paper 10044. Journal of Petroleum Technology 36(4): pp. 549-564, April 1984.

Gringarten, A. C. and Ramey, H. J. Jr. "The Use of Source and Green's Functions in Solving Unsteady-Flow Problems in Reservoirs." SPE Paper 3818. SPE Journal 13(5): pp. 285-296, October 1973.

Guo, Boyun, William C. Lyons, and Ali Ghalambor. Petroleum Production Engineering: A Computer-Assisted Approach. Gulf Professional Publishing, 2007. p 2/23.

Hagedorn, Alton R., and Kermit E. Brown. "Experimental study of Pressure Gradients Occurring During Continuous Two-Phase Flow in Small-Diameter Vertical Conduits." Journal of Petroleum Technology. 17.4 (1965): p. 475.

Hall, Howard N. "Compressibility of Reservoir Rocks." AIME Transactions. 198. (1953): pp 309-11.

Hanafy, H.H., S.M. Macary, Y.M. El Nady, A.A. Bayomi, and M.H. El Batanony. "A New Approach for Predicting the Crude Oil Properties." SPE Paper 37439-MS Prepared for Presentation at the SPE Production Operations Symposium. Oklahoma City, OK. 9-11 March, 1997.

Hegeman, P.S., D.L. Halford, and J.A. Joseph. "Well Test Analysis With Changing Wellbore Storage." SPE Formation Evaluation. 8.3 (1993): pp. 201-07.

Heidari, M., Behmanesh, H., and Clarkson, C. R. 2013. Multi-Well Gas Reservoirs Production Data Analysis. Presented at the SPE Unconventional Resources Conference Canada, Calgary, 5-7 November. SPE-167159-MS. <https://doi.org/10.2118/167159-MS>.

Heidari, M., Behmanesh, H. and Clarkson, C. R. 2014. New Semi-Analytical Method for Analyzing Production Data from Constant Flowing Pressure Wells in Gas Condensate Reservoirs during Bound-

ary-Dominated Flow. Paper SPE 169515 presented at the SPE Western North American and Rocky Mountain Joint Regional Meeting, Denver, Colorado, 16-18 April. DOI: 10.2118/169515-MS.

Honarpour, Mehdi, L.F. Koederitz, and A. Herbert Harvey. "Empirical Equations for Estimating Two-Phase Relative Permeability in Consolidated Rock." *Journal of Petroleum Technology*. 34.12 (1982): pp. 2905-08.

Ilk, D., J.A. Rushing, A.D. Perego, and T.A. Blasingame. "Exponential vs. Hyperbolic Decline in Tight Gas Sands - Understanding the Origin and Implications for Reserve Estimates Using Arps' Decline Curves." SPE Paper 116731 Prepared for Presentation at the 2008 SPE Annual Technical Conference and Exhibition. Denver, CO. 21-24 September, 2008.

Iman, R. L., & Conover, W. J. (1982). A Distribution-Free Approach to Inducing Rank Correlation Among Input Variables. *Commun Statist-Simula Computa* , 11 (3), 311-334.

Jeje, Oluyemisi, and Louis Mattar. "Comparison of Correlations for Viscosity of Sour Natural Gas." *Petroleum Society Paper 2004-214* Presented at the Canadian International Petroleum Conference. Calgary, AB. 8-11 June, 2004.

Johnson, Jr., Carl E. "Graphical Determination of the Constants in the Corey Equation for Gas-Oil Relative Permeability Ratio." *Journal of Petroleum Technology*. (October 1968): pp 1111-13.

Johnson, Roswell H., and A.L. Bollens. "The Loss Ratio Method of Extrapolating Oil Well Decline Curves." *AIME Transactions*. 77. (1927): p. 771.

Jones, J. R., & Raghavan, R. (1988, September 1). Interpretation of Flowing Well Response in Gas-Condensate Wells (includes associated papers 19014 and 19216). *Society of Petroleum Engineers*. doi:10.2118/14204-PA

Khan, S.A., M.A. Al-Marhoun, S.O. Duffuaa, and S.A. Abu-Khamsin. "Viscosity Correlations for Saudi Arabian Crude Oils." SPE Paper 15720-MS Presented at the Middle East Oil Show. Bahrain. 7-10 March, 1987.

King, G.R. "Material-Balance Techniques for Coal-Seam and Devonian Shale Gas Reservoirs With Limited Water Influx." *SPE Reservoir Engineering*. 8.1 (1993): pp. 67-72.

Kupchenko, C.L., B.W. Gault, and L. Mattar. "Tight Gas Production Performance Using Decline Curves." SPE Paper 114991 Prepared for Presentation at the CIPC/SPE Gas Technology Symposium 2008 Joint Conference. Calgary, AB. 16-19 June, 2008.

Laurent, Jerome, Maurice J. Bouteica, Jean-Paul Sarda, and Daniel Bary. "Pore-Pressure Influence in the Poroelastic Behavior of Rocks: Experimental Studies and Results." *SPE Formation Evaluation*. 8.2 (1993): pp. 117-122.

Lee, W. John, and Robert A. Wattenbarger. "Gas Reservoir Engineering." Society of Petroleum Engineers Inc. (1996) Volume 5, 73 - 74, 173 - 181.

Li, Kewen, and Roland N. Horne. "Experimental Verification of Methods to Calculate Relative Permeability Using Capillary Pressure Data." SPE Paper 76757-MS Prepared for Presentation at the SPE Western Regional/AAPG Pacific Section Joint Meeting. Anchorage, AK. 20-22 May, 2002.

Liang, P., Mattar L., Thompson J. M. "Importance of the Transition Period to Compound Linear Flow in Unconventional Reservoirs" SPE Paper 162646. 2012

Londono, F.E., R.A. Archer, and T.A. Blasingame. "Correlations for Hydrocarbon-Gas Viscosity and Gas Density - Validation and Correlation of Behavior Using a Large-Scale Database." SPE Reservoir Evaluation & Engineering. 8.6 (December 2005): pp 561-72.

Mattar, L., and D. Anderson. "Dynamic Material Balance (Oil or Gas-in-Place Without Shut-ins)." Petroleum Society Paper 2005-113 Presented at the Petroleum Society's 6th Canadian International Petroleum Conference (56th Annual Technical Meeting). Calgary, AB. 7-9 June, 2005.

Mattar, L., and K. Zaoral. "The Primary Pressure Derivative (PPD) - A New Diagnostic Tool in Well Test Interpretation." Journal of Canadian Petroleum Technology. 31.4 (1992): pp. 63-70.

Mattar, L., and M. Santo. "How Wellbore Dynamics Affect Pressure Transient Analysis." Journal of Canadian Petroleum Technology. 31.2 (1992): 32-40

Mattar, L., and R. McNeil. "The "Flowing" Gas Material Balance." Journal of Canadian Petroleum Technology. 37.2 (1998).

Mattar, L., B. Gault, K. Morad, C.R. Clarkson, C.M. Freeman, D. Ilk, and T.A. Blasingame. "Production Analysis and Forecasting of Shale Gas Reservoirs: Case History-Based Approach." SPE Paper 119897 Prepared for Presentation at the 2008 SPE Shale Gas Production Conference. Fort Worth, TX. 16-18 November, 2008.

McCain, Jr., William D. The Properties of Petroleum Fluids. 2nd Ed. PennWell Publishing, 1990.

Miller, Richard W. Flow Measurement Engineering Handbook. 3rd Ed. McGraw-Hill Professional, 1996. pp 2.29-35.

Moghadam, S., O. Jeje, and L. Mattar. "Advanced Gas Material Balance, in Simplified Format." Paper 2009-149 Presented at the 10th Canadian International Petroleum Conference (the 60th Annual Technical Meeting of the Petroleum Society). Calgary, AB. 16-18 June, 2009.

Molina, Nelson N. "A Systematic Approach to the Relative Permeability Problem in Reservoir Simulation." SPE Paper 9234-MS Presented at the 55th Annual Fall Technical Conference and Exhibition of the Society of Petroleum Engineers of AIME. Dallas, TX. 21-24 September, 1980.

Ng, J.T., and E.O. Egbogah. "An Improved Temperature-Viscosity Correlation for Crude Oil Systems." CIM Paper 83-34-32 Presented at the Annual Technical Meeting of the Petroleum Society of CIM. Banff, AB. 10-13 May, 1983.

Palacio, J.C., and T.A. Blasingame. "Decline-Curve Analysis Using Type Curves - Analysis of Gas Well Production Data." SPE Paper 25909 (Pre-Print) Prepared for Presentation at the 1993 SPE Joint Rocky Mountain Regional and Low Permeability Reservoirs Symposium. Denver, CO. 25-28 April, 1993.

Parker, Dr. Robert O., and Dr. William H. Kapfer. "Facts About Methane and Its Behavior." Pipeline Rules of Thumb Handbook (6th Edition). Ed. E.W. McAllister. Elsevier Inc., 2005.

Petalas, N., and K. Aziz. "A Mechanistic Model for Multiphase Flow in Pipes." Journal of Petroleum Technology. (June 2000): pp 43-55.

Petalas, N., and K. Aziz. "Development and Testing of a New Mechanistic Model for Multiphase Flow in Pipes." ASME 1996 Fluids Engineering Division Conference (1996). FED-Vol 236, 153-159.

Petroleum Resources Management System. Comp. Society of Petroleum Engineers (SPE), American Association of Petroleum Geologists (AAPG), World Petroleum Council (WPC), Society of Petroleum Evaluation Engineers (SPEE). 2007.

Petrosky Jr., G.E., and F.F. Farshad. "Pressure-Volume-Temperature Correlations for Gulf of Mexico Crude Oils." SPE Paper 26644-MS Prepared for Presentation at the 68th Annual Technical Conference and Exhibition of the Society of Petroleum Engineers. Houston, TX. 3-6 October, 1993.

Purvis, R.A. "Analysis of Production-Performance Graphs." Journal of Canadian Petroleum Technology. 24.4 (1985): p. 44.

Purvis, R.A. "Further Analysis of Production-Performance Graphs." Journal of Canadian Petroleum Technology. 26.4 (1987).

Raghavan, R., "Well Test Analysis: Wells Producing by Solution Gas Drive"; SPE Journal, Vol. 16, No. 4, pp. 196-208, August 1976.

Rahman, N.M.A., L. Mattar, and K. Zaoral. "A New Method for Computing Pseudo-Time for Real Gas Flow Using the Material Balance Equation." Journal of Canadian Petroleum Technology. 45.10 (2006): pp. 36-44.

Ramsay Jr., H.J., and E.T. Guerrero. "The Ability of Rate-Time Decline Curves to Predict Production Rates." Journal of Petroleum Technology. 21.2 (1969): p. 139.

Robertson, S. "Generalized Hyperbolic Equation." Unsolicited SPE Paper 18731. (1988).

Rokosh, C.D., J.G. Pawlowicz, H. Berhane, S.D.A. Anderson, and A.P. Beaton. "What is Shale Gas? An Introduction to Shale-Gas Geology in Alberta." Alberta Geological Society Open File Report 2008-08. Retrieved web 13 Jan 2011. http://www.ags.gov.ab.ca/publications/abstracts/OFR_2008_08.html

Shahamat, M. S., & Clarkson, C. R. 2017. Multi-Well, Multi-Phase Flowing Material Balance. SPE Reservoir Evaluation & Engineering – Formation Evaluation, SPE 185052-PA doi:10.2118/185052-PA.

Spivey, J.P., J.M. Gatens, M.E. Semmelbeck, and W.J. Lee. "Integral Type Curves for Advanced Decline Curve Analysis." SPE Paper 24301 Prepared for Presentation at the SPE Mid-Continent Gas Symposium. Amarillo, TX. 13-14 April, 1992.

Stalgorova, E. and Mattar, L. "Analytical Model for History Matching and Forecasting Production in Multifrac Composite Systems." SPE Paper 162516 prepared for Presentation at the 2012 SPE Canadian Unconventional Resources Conference, Calgary, Alberta. October 2012.

Stalgorova, E. and Mattar, L. "Analytical Methods for Single-phase Oil Flow: Accounting for Changing Liquid and Rock Properties." SPE Paper 180139 prepared for Presentation at the 2016 SPE Europec featured at 78th EAGE Conference and Exhibition, Vienna, Austria. June 2016.

Stalgorova, E. and Mattar, L. "Practical Analytical Model to Simulate Production of Horizontal Wells with Branch Fractures." SPE Paper 162515 prepared for Presentation at the 2012 SPE Canadian Unconventional Resources Conference, Calgary, Alberta. October 2012.

Standing, M.B. "A Pressure-Volume-Temperature Correlation for Mixtures of California Oils and Gases." API Paper 47-275 Published in Drilling and Production Practice. (1947).

Stone, H.L. "Estimation of Three-Phase Relative Permeability and Residual Oil Data." Journal of Canadian Petroleum Technology. 12.4 (1973): pp. 53-61.

Stone, H.L. "Probability Model for Estimating Three-Phase Relative Permeability." Journal of Petroleum Technology. 22.2 (1970): pp. 214-18.

"Theory and Practice of the Testing of Gas Wells, Third Edition", Energy Resources Conservation Board (ERCB), pp. 2 -16 to 2 -30, 1975.

Thompson, L.G., Manrique, J.L., U. and Jelmert, T.A. "Efficient Algorithms for Computing the Bounded Reservoir Horizontal Well Pressure Response." SPE Paper 21827 prepared for Presentation at the Low Permeability Reservoirs Symposium, Denver, Colorado. April 1991.

Towler, Brian F. Fundamental Principles of Reservoir Engineering. Vol. 8. SPE Textbook Series, 2002.

Turner, R.G., M.G. Hubbard, and A.E. Dukler. "Analysis and Prediction of Minimum Flow Rate for the Continuous Removal of Liquids from Gas Wells." *Journal of Petroleum Technology*. 21.11 (1969): pp. 1475-82.

University of Northern British Columbia GIS/Remote Sensing Lab. Web. 24 Feb 2011. <http://www.gis.unbc.ca/index.php>

Van Everdingen, A.F., and W. Hurst. "The Application of the Laplace Transformation to Flow Problems in Reservoirs." *AIME Transactions*. 186. (1949): pp. 305-24.

Vasquez, M.E., and H.D. Beggs. "Correlations for Fluid Physical Property Prediction." *Journal of Petroleum Technology*. (1980).

Velarde, J. and T. A. Blasingame. "Correlation of Black Oil Properties at Pressures Below Bubble Point Pressure - A New Approach." *Petroleum Society Paper 97-93 Presented at the 48th Annual Technical Meeting of The Petroleum Society*. Calgary, AB. 8-11 June, 1997.

Viswanath, Dabir S. *Viscosity of Liquids: Theory, Estimation, Experiment, and Data*. Springer Publishing, 2006. p 112.

Warren, J.E. and P.J. Root. "The Behavior of Naturally Fractured Reservoirs." *Society of Petroleum Engineers Inc.* (1963) SPEJ 426.

Wattenbarger, Robert A., Ahmed H. El-Banbi, Mauricio E. Villegas, and J. Brian Maggard. "Production Analysis of Linear Flow Into Fractured Tight Gas Wells." *SPE Paper 39931 Prepared for Presentation at the 1998 SPE Rocky Mountain Regional / Low-Permeability Reservoirs Symposium and Exhibition*. Denver, CO. 5-8 April, 1998.

Whitson, C. H. and Brulé, M.R. "Phase Behavior". *Monograph Volume 20 SPE, Henry L. Doherty Series*, Richardson, Texas (2000), Chapter 7.

Whitson, C. H. and Sunjerga, S. "PVT in Liquid-Rich Shale Reservoirs". *SPE Paper 155499 prepared for Presentation at the 2012 SPE Annual Technical Conference and Exhibition*, San Antonio, Texas, USA. October 2012.



Contact us

If you need help using Harmony Enterprise™, please use the Customer Care web form:

ihsmarkit.com/supportform (opens in a new window)

Support for our products is available Monday to Friday, 8:00 a.m. – 4:30 p.m. mountain time. Limited support is available on North American holidays. We will respond to all inquiries within 24 hours, or by the next business day.

Training

We offer various types of training including: getting-started tutorials, instructor-led courses, and customized training. All of our classes are designed to show practical solutions to common engineering problems, so you get the most out of our engineering software, and enhance your decision-making process.

For Harmony Enterprise-specific information, see [Harmony Enterprise Software Training](#). For general information on all of our offerings, see [Global Upstream Energy Education & Training](#).

Resources

We have technical videos, published papers, and unconventional energy maps for your use. To view these resources, see [Engineering Technical Resources](#).

Customized training

In addition to our regularly scheduled courses, we offer private training for our software to groups. Allow us to customize your training by using your data to create workflows to suit your specific assets.

For more information, contact our training coordinator at energy.training@ihsmarkit.com.

Index

A

- accounting for
 - adsorbed GIP 246
 - changing oil properties 248
 - fluid changes during reservoir depletion 283
- activating licenses 88
- active directory 73
- adding
 - analysis 404
 - anchor point 286
 - bubble map 517
 - bubble map layer 504
 - category 411, 481
 - dataset 411, 481
 - distribution cards 316
 - flag 504
 - general annotation 504
 - image layer 504
 - reference date 588
 - shapefile layer 504
- adjusting gridding 314
- advanced
 - analytical options 282
 - hybrid model options 306
- analysis manager 404
- analysis method theory 627
 - Agarwal-Gardner 751



- analytical 628
- Blasingame 764
- compound linear 789
- Duong 680
- Fetkovich 804
- FMB 648
- hybrid 726
- material balance 686
- multiphase FMB 666
- NPI 830
- stretched exponential decline 749
- traditional decline 634
- transient 837
- typecurve 750
- typewell 854
- unconventional theory 856
- volumetrics 879
- Wattenbarger 847
- analysis tab 408
- analysis types 155
- analytical analysis 267
- analytics 544
- analyzing
 - entities 125
 - wells 125
- anchoring 286
- annular diameters 887
- APE
 - theory 977



- using (analytical) 292
- applying a workflow 146
- artificial lift 970
 - gas lift 972
 - pumping 970
- assign mapping
 - dialog box 434
 - errors 436
 - min requirements 436
- attributes 409
- auto update 529
- autocalc sandface pressure 529
- automatic parameter estimation theory 977
- average reservoir pressure calculations 889

B

- b value 1141
 - changing 425
- batch export 129
- Blasingame (log-log) 1025
- bubble maps 517
- bulk editor 429
- bulk export 129
- bulk modify declines 600

C

- calculations 886
 - average reservoir pressure 889
 - flow rate 894
 - liquid lift 896

- methods 886
 - pressure loss 921
- capillary correlations 890
- capillary pressure 979
- CCA 1143
- CF 1143
- CGR 1143
- changing
 - abandonment rate 426
 - b value 425
 - b value & final cumulative prod 426
 - final cumulative prod & decline rate 426
 - forecast start date 424
 - historical match 423
 - initial cumulative prod & final cumulative prod 425
 - initial rate 423
 - slope of decline curve 423
- clipboard 382
- column sorting 409
- command line 531
- commuter 93
- compare plots 573
- comparison plot 593
- components 403
- connect to
 - data source 99
- consolidation 209
- constant-pressure boundaries 288
- contact us 1171

continuous time track 982

correlations

capillary 890

gas 897

geomechanical 895

oil 900

relative permeability 961

water 967

creating

bubble map 517

workflow 144

curves

deliverability

sandface 717

wellhead 717

custom groups 496

D

data diagnostics

flowchart 1005

theory 984

database connection 431

database connection wizard 110

DB deployment 75

add groups or users 80

configuring 83

enable RBS 79

import well data 82

prerequisites 76

troubleshooting 85

decline analysis

Arps' 156

Duong 175

multi-segment 167

stretched exponential 171

decline worksheet 612

deleting

reference date 588

diagnostic line 578

Diagnostics tab

Hall plot 448

Hall plot theory 681

overview 445

dialog box

analyses selection 567

assign mapping 434

create custom attribute 419

create custom dataset 488

create workflow 148

data reduction 539

equation editor 420

export type 566

facility annotation editor 516

filter a column 440

IHS Markit online activation 97

import data 532

import options 442

license info 94

licensing 91

- licensing settings 95
- link incoming wells to existing wells 534
- options 554
- query wells 585
- reference dates 588
- select wells to import 441
- set up connection settings 432
- set up filters 439
- well-analysis pairing conflicts 568

DLS 1144

docking 388

drainage area 524

drawdown % 1022

E

economics 450

editors 456

- production 480

- properties 457

- static pressure 493

- wellbore 473

effective decline rate 1122

ENERDEQ 1144

- queries 114

entities

- on the GIS map 503

- selecting 390

- work status 500

Entity 1144

entity viewer

 custom 496

 hierarchy 499

equivalence

 constant rate/pressure 1033

EUR 1144

example files 53

exponential decline equation 637

exporting data 129

 .hldb file 139

 decline parameters 134

 forecasts 132

 Harmony Analytics 142

 Mosaic 134

 Piper 136

 production data 130

 WellTest 138

F

Fetkovich time reinitialization 229

flags 525

floating 388

floating, tabbed window 396

flow rate calculations 894

flowing material balance

 analysis 236

 theory 648

FMB

 accounting for changing oil properties 248

 analysis 236

analyzing reservoirs with aquifer support 241

data filter dialog box 249

including pressure-dependent permeability & formation compressibility 245

pressure (Cartesian) 1031

rate (Cartesian) 1029

theory 648

 model 675

 multiphase 666

forecast

 consolidation 209

 custom 207

 ratio 199

 WOR / oil cut 197

 worksheet 624

forecasting

 gas condensate systems 275

 using wellhead pressure 277

fracture properties 1035

FST 157

G

gas correlations 897

gas lift

 conventional 974

 poor boy 975

general concepts 969

generating

 Agarwal-Gardner gas analysis 654

geomechanical correlations 895

geomechanical reservoir models 1037

get wells into Harmony Enterprise 105

GHV 1145

GIS 503

layers 513

map 510

tab, flag properties 525

tab, legend 506

theory 1043

glossary 1141

GMB 180

advanced 186

plots and parameters 184

GOR 1145

grids 607

H

harmonic decline equation 640

Harmony Enterprise example files 105

history matching 1145

using E avg 977

hybrid 295

adsorption 307

changing skin 311

geomechanical 308

hyperbolic decline equation 638

I

icons

checkmark 497, 500

entity viewer 500

exclamation mark 497, 500

GIS map 506

question mark 497, 500

IHDC 113

importing

from Enerdeq 113

from multi-user Harmony 120

from Piper forecasts 115

from PowerTools 116

from single-user Harmony 118

from WellTest 117

functionality 528

import data dialog box 532

import options dialog box 442

well data from a database 110

well data from a file or group 107

injection 290

interpolation theory 1054

IWIP 1146

K

KB 1147

L

Langmuir isotherm 1055

latitude / longitude

theory 1048

LGR 364

licensing 87



linking

analyses 150

imported wells 534

liquid life calculations 896

liquid loading in the wellbore 986

local DB 383

locking 408

log gas rate 1017

logging directory 74

M

manipulating

multi-segment decline 428

multiple segments 427

map

GIS legend 506

imported wells 534

material balance

analysis 179

gas 180

oil 188

theory 686, 1058

menus 383

merging

custom-input attributes 413

modifying

geomechanical models (pseudo-pressure) 1074

geomechanical models (pseudo-time) 1078

linked wells 535

workflow 145

modules 403

Monitor tab 552

MPP 1147

multi-well analysis 330

 conventional 330

 unconventional 349

N

Navigation 381

network seat 92

nodal analysis 371

 custom table 378

 Forchheimer 377

 simplified C,n 375

nomenclature 1141

NPI (log-log) 1027

numerical 295

O

OFIP 1148

OGIP 1148

oil correlations 900

OOIP 1148

options 554

orange text 395

outlier removal 987

overview 54

P

panes 386

PDP 1086

- percentile forecasts 324
- permeability, relative 1079
- Piper export 565
 - logs 569
- plot
 - components 571
- plot selection pane 581
- plots 570
 - legend 571
 - locks 571
 - types 574
- point selection
 - best fitting 400
- PPDP 1086
- preview well data 122
- private groups 497
- probabilistic
 - analysis 316
 - general concepts 1072
 - percentile calculations 326
 - speeding up the analysis 328
 - theory 736
- production editor 480
 - create custom datasets 488
 - equation editor 489
- project filters 582
- promoting scenarios 501
- properties
 - GIS map 503

injected gas 975
of reservoir fluids 1091
of reservoirs 1109
of shale 1117
pseudo-pressure 1073
pseudo-time 1075

Q

query wells 585

R

rate & pressure vs. time 1011
ratio analysis 155
 oil cut 195
 WOR 192
ratio trend 200
recombination 960
red text 395
reference dates 588
reference materials 626
references 1161
refracturing 309
relative permeability 1079
 2-phase correlations 961
 3-phase correlations 965
 correlations 961
reporting 596
repositioning
 tabs 396



reserves evaluation 1084

 classifications 1085

reservoir

 flow 1088

 properties 1109

reservoir fluids

 properties 1091

 types 1103

results tab 589

role-based security 603

RR 1153

S

sandface

 sandface, C 715

 sandface, n 716

saturated filter 264

scenarios 606

scheduled update 529

scheduling well updates 529

SE 54

shale properties 1117

shapefiles 514

shared groups 497

sharing, custom group 497

skin

 correcting effects 223

 time dependent 1126

sparse data 312

SRV 1153

status window 394

symbol descriptions 506

T

tables 607

tabs 396

task scheduler 530

TDS 1101

templates

- applying to analyses 447

- auto 446

- deleting 447

- renaming 447

terminal decline calculations 1122

test design 279

time-dependent skin 1126

time to stabilization 1128

toolbar

- analysis manager 404

toolbars 397

TPC 1155

training 1172

Turner rate 1015

TVD 1155

typecurve

- analysis 211

- Argarwal-Gardner 215

- Blasingame 217

- compound linear 219

- data filter dialog box 234



Fetkovich 227

NPI 231

theory 750

Wattenbarger 233

U

unconventional reservoir 251

 data filter dialog box 265

 plots 256

 theory 856

unlinking analyses 153

updating

 existing wells 537

user

 interface 403

 permissions in local folders 74

V

videos 1172

viewing

 data field to be imported 434

 definitions (Excel file) 75

 results 127

volumetrics

 analysis 190

 theory 879

VR 1156

VRR 1156

W

water correlations 967

water drive reservoir 1129

WDI 1156

well linking logic 1132

 Enerdeq special cases 1139

 general 1133

 Well Identifier special case 1137

well security 83

WGR & water rate 1018

wizard

 analytics 544

 DB connection 110

WOR 1156

 forecasting theory 883

WOR analysis worksheet 623

workflows 143

 applying 146

 creating 144

 deleting 143

 modifying 145

 renaming 143

worksheets 610

 custom 625

 decline 612

 forecast 624

 material balance 622

 ratio 623

 typewell 614

 volumetrics 621